

# User Manual



Slide Kamera AF-16 adapter is designed for quick and reliable mounting of Slide Kamera cranes: HKR-1, HKR-4, HKR-6 on Slide Kamera HST series tripods.

## Slide Kamera AF-16 Adapter

for quick and reliable mounting of Slide Kamera cranes



Pdf version of the manual available for download: [www.slidekamera.eu](http://www.slidekamera.eu)



made in **POLAND**

Before you start your work with Slide Kamera AF-16 adapter we strongly recommend to read the manual carefully. Please note that using the device in a manner inconsistent with the instructions, unauthorized repair attempts or any kind of modification of the device can cause a damage the manufacturer is not responsible for.

In case of damage during transport you are required to submit:

- proof of purchase
- protective styrofoam inserts/ fillers included in the set in case of new product delivery

**If you fail to comply with the abovementioned conditions, the manufacturer reserves the right to refuse the complaint.**

**Photos of products may slightly differ from the actual product due to constant modifications and improvements introduced by the manufacturer.**

## Table of contents

1. Elements and construction of Slide Kamera AF-16 adapter.....	2
2. Description and operation.....	3
3. Specification .....	3
4. Mounting.....	3
4.1. Mounting Slide Kamera AF-16 adapter base to Slide Kamera HST series tripod.....	4
4.2. Mounting Slide Kamera HGO-2 rotational head to AF-16 adapter mounting socket.....	4
4.3. Mounting Slide Kamera HGO- 3 rotational fluid head to AF-16 adapter mounting socket.....	5
4.4. Mounting Slide Kamera AF-18 leveling adapter to AF-16 adapter mounting socket.....	5
4.5. Mounting adapter socket to its base.....	6
5. Maintenance.....	6
6. Transport.....	7
7. Terms of warranty.....	7
8. Table presenting possible configurations of devices mounted with Slide Kamera AF-16 adapter.....	8

## Slide Kamera ®

High Engineering Technology CNC s.c.

Sebastian Pawelec Karol Mikulski

Głina 45

82-522 Sadlinki

Vat Identification Number: 581-188-33-32

### Slide Kamera Office

80-175 Gdańsk (Poland)

Ul. Kartuska 386

tel./fax (+48) 58 710 41 04

e-mail: [biuro@slidekamera.pl](mailto:biuro@slidekamera.pl) / [office@slidekamera.eu](mailto:office@slidekamera.eu)

[www.slidekamera.pl](http://www.slidekamera.pl) / [www.slidekamera.eu](http://www.slidekamera.eu)

# 1. Elements and construction of Slide Kamera AF-16 adapter

Once the shipment is received please make sure that all the elements of Slide Kamera AF-16 adapter are inside.

## Set includes:

- ☑ adapter mounting socket with hardened insert
- ☑ adapter base with clamping screw
- ☑ six M6x20 screws
- ☑ three M5x30 screws
- ☑ 4mm Allen key L type
- ☑ 5mm Allen key Z type
- ☑ user manual

## Construction of Slide Kamera AF-16 adapter



AF-16 adapter mounting socket on which you mount HGO-2, HGO-3 heads and AF-18 leveling adapter [1]

Adapter base screwed from the underside of HST-2 tripod socket [2]

Clamping screw that connects the crane with the tripod [3]

Six M6 screws for mounting HGO-2 head and adapter base [4]

Three M5 screws for mounting HGO-3 head and AF-18 leveling adapter [5]

5mm Allen key Z type [6]

4mm Allen key L type [7]

Three mounting holes for heads/ AF-18 adapter [8]

Three holes for mounting adapter base to the tripod socket [9]

## 2. Description and operation

Slide Kamera AF-16 adapter is designed for quick and reliable mounting of Slide Kamera cranes: HKR-1, HKR-4, HKR-6 on Slide Kamera HST series tripods. AF-16 adapter consists of two elements: mounting socket and adapter base. Mounting socket is equipped with three holes for attaching accessories such as rotational heads HGO-2 or HGO-3 or AF-18 leveling adapter. Adapter base, intended to mount on HST-2 or HST-3 tripod is equipped with a clamping screw mounted to it permanently. Clamping screw allows to obtain strong and stable connection between Slide Kamera HKR crane and Slide Kamera HST series tripod.

## 3. Specification

**Application:** quick and reliable mounting of Slide Kamera cranes: HKR-1, HKR-4, HKR-6, on HST series tripods

**Tripod mounting:** three M6x20 screws

**Mounting accessories:** three M5x30 screws, three M6x20 screws

**Load capacity:** 80kg

**Material:** aluminium

**Height:** 134mm

**Diameter:** 115mm

**Weight:** 1,5 kg

**Color:** black

## 4. Mounting

Slide Kamera AF-16 adapter is equipped with a number of holes that allow to mount various accessories in a variety of combinations, thus providing great configuration possibilities and universality of our product. Table showing possible configurations of devices mounted with Slide Kamera AF-16 adapter is on page 8 of this user manual.

**Table showing configuration possibilities of Slide Kamera AF-16 Adapter**

	Mounting hole	Dedicated device	Screw
AF-16 adapter mounting socket	3 mounting holes	Slide Kamera HGO-2 rotational head	Three M6x20 screws
		Slide Kamera HGO-3 rotational fluid head	Three M5x30 screws
		Slide Kamera AF-18 leveling adapter	Three M5x30 screws
AF-16 adapter base	Three M6 holes	Slide Kamera HST series tripods	Three M6x20 screws

In case you you have a crane with already assembled head there is no need to disassemble the head. Follow the instructions mounting AF-16 adapter socket to the head (with camera crane already attached).

In case you do not have a head attached to the crane or you want to change the head on another model, simply follow the instructions.

## 4.1. Mounting Slide Kamera AF-16 adapter base to Slide Kamera HST series tripod

Slide Kamera AF-16 adapter is dedicated to Slide Kamera HST series tripods. Mounting the adapter on both HST-2 and HST-3 tripods is the same. Begin mounting the adapter by attaching adapter base to the tripod crown. Mount the base from the underside of the tripod using three M6x20 screws (with 5mm Allen key Z type attached).

- Slide Kamera HST-2 tripod [1]
- Tripod crown [2]
- AF-16 adapter base [3]
- Clamping screw [4]




## 4.2. Mounting Slide Kamera HGO-2 rotational head to AF-16 adapter mounting socket

Place Slide Kamera HGO-2 rotational head on adapter mounting socket in a way so that mounting holes overlap. Use three M6x20 screws to mount HGO-2 rotational head. **Remember to insert the screws from the top of HGO-2 rotational head.**

In case you have a crane with already assembled head there is no need to disassemble it, simply mount the set (crane with head) on AF-16 adapter socket.

- Three M6x20 screws mounting HGO-2 rotational head to adapter socket [1]
- Slide Kamera HGO-2 rotational head [2]
- AF-16 adapter mounting socket [3]

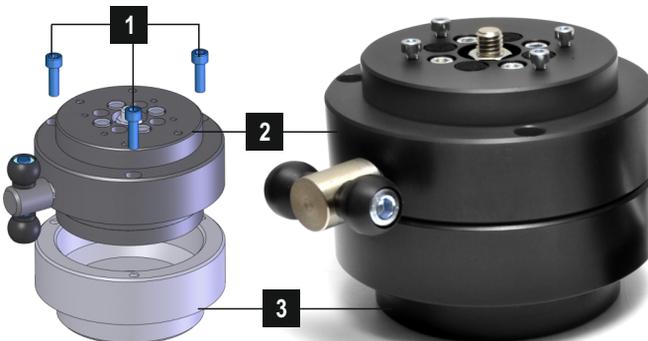

### 4.3. Mounting Slide Kamera HGO-3 rotational fluid head to AF-16 adapter mounting socket


Place Slide Kamera HGO-3 rotational fluid head on adapter mounting socket in a way so that mounting holes overlap. Use three M5x30 screws to mount HGO-3 rotational fluid head. **Remember to insert the screws from the underside of adapter mounting socket.**

In case you have a crane with already assembled head there is no need to disassemble it, simply mount the set (crane with head) on AF-16 adapter socket.

Slide Kamera HGO-3 rotational fluid head [1]

AF-16 adapter mounting socket [2]

Three M5x30 screws mounting HGO-3 rotational fluid head to adapter socket [3]

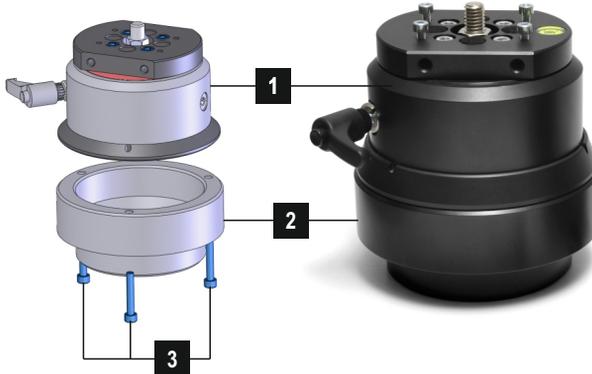

### 4.4. Mounting AF-18 leveling adapter to AF-16 adapter mounting socket


Place Slide Kamera AF-18 leveling adapter on AF-16 adapter mounting socket in a way so that mounting holes overlap. Use three M5x30 screws to mount AF-18 adapter. **Remember to insert the screws from the underside of adapter mounting socket.**

In case you have a crane with already assembled head there is no need to disassemble it, simply mount the set (crane with head) on AF-16 adapter socket.

AF-18 leveling adapter [1]

AF-16 adapter mounting socket [2]

Three M5x30 screws mounting AF-18 adapter to AF-16 adapter socket [3]

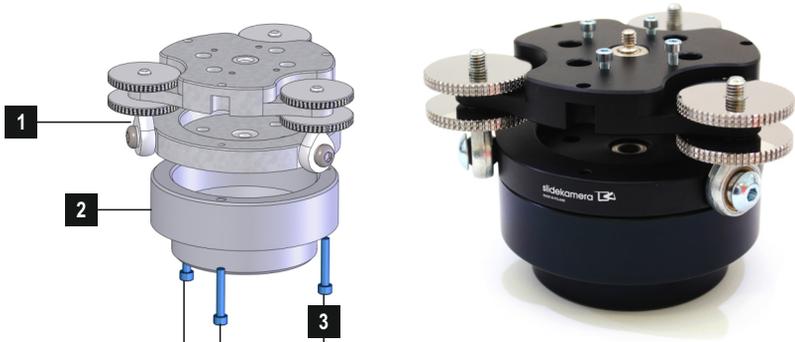

## 4.5. Mounting adapter socket to its base

After attaching the head to camera crane, mount AF-16 adapter socket on its base and thereby mount HKR crane on HST series tripod. Place the camera crane with the head and adapter socket attached on adapter base (previously mounted on tripod crown). Connect everything with a clamping screw. Clamping screw allows to obtain strong and stable connection between Slide Kamera HKR crane and Slide Kamera HST series tripod.

Slide Kamera HKR-4 crane [1]

Slide Kamera HGO-2 rotational head [2]


Slide kamera AF-18 leveling adapter [3]

Slide Kamera AF-16 mounting socket [4]

HST-2 tripod crown [5]

Slide Kamera AF-16 adapter base [6]

Clamping screw [7]

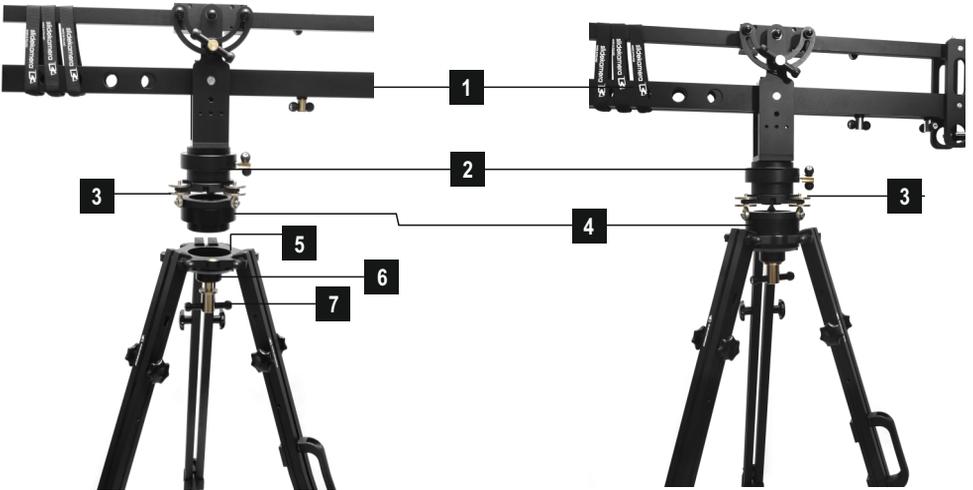

## 5. Maintenance and operation

- By maintenance we understand cleaning the device
- Use a soft cloth to clean. Never use abrasive or caustic products, which could cause the damage of protective coatings
- To remove any impurities, you can use compressed air
- To clean the device you can use ear stick with cotton bud

**Any changes in design and repairs are made only and exclusively by the manufacturer. Failure to comply with the recommended guidelines outlined in this manual will result in loss of warranty.**

## 6. Transport

During transport Slide Kamera AF-16 adapter is covered with air bubble film. Sets of screws with corresponding Allen keys are packed into small zipper bags.

## 7. Terms of warranty

All Slide Kamera products are covered manufacturer's warranty for a period of 12 months from the date of sale. Warranty covers any design faults or of the material of the product which resulted in the product malfunctioning. The warranty covers the repair, or, if the repair proves impossible, replacement of the product with a new one. However, the cost of repair of the product cannot overrun the catalogue value of the product. The warranty does not cover damage and / or product defects resulting from the improper usage, as well as not following product maintenance specifications.

### Warranty excludes:

- unauthorized attempts to repair or modify
- mechanical damage caused during transport and operation of such features, scratches, dents, pits, dirt, etc ...
- flooding, moisture

To obtain warranty service the purchaser should deliver the damaged product together with a proof of purchase and proof of payment (invoice, cash register receipt). The product will be accepted for warranty service on condition that it is delivered with correctly filled in complaint form and properly protected during transport. You can download the complaint form from: [www.slidekamera.pl](http://www.slidekamera.pl) / [www.slidekamera.eu](http://www.slidekamera.eu).

After the warranty period is exceeded any spare parts can be purchased directly from the manufacturer or in any selected points of sale.

The manufacturer runs also a post warranty service: HET-CNC s.c., 80-175 Gdańsk (Poland), Ul. Kartuska 386

Table presenting possible to achieve configurations of devices mounted with Slide Kamera AF-16 adapter.

Order of devices in the table is not a suggested order of assembly.

Adapters		Camera crane heads					Camera cranes				Slide Kamera S series	Slide Kamera SP series	Slide Kamera HSK series
AF-18	AKC-3	HGO-2	HGO-2/ HG-2	HGO-3	HGO-5	HKR-1	HKR-2	HKR-4	HKR-6	S-980 S-1500	SP-600 SP-1000	HSK-5	HSK-6
		•				•		•	•				
	•		•				•						
	•		•							•	•	•	•
•		•				•		•	•				
	•		•				•						
	•			•						•	•	•	•
	•												

