DCS 6000



User Manual

Digital Conference System



SW 6000 Conference Management Software Version 5.3

CDA Conference Display Application User Manual

List of Contents

List of Contents	3
Features CDA Application	4
Features	4
Introduction	4
CDA - Conference Display Application	5
Starting the CDA	5
Display - Automatic	5
Display – Mic Mimic	6
Display - Microphones	6
Font sizes, line numbers and colours	6
Display - Voting Graphics	7
Display – Voting List	8
Display – Voting Pie	9
Display – Voting Mimic	9
Display – Voting Indv	10
Display - Logged In	11
Display - Agenda	11
No Display	11

CUA - Conference User Application	12	
Display Control Display selection buttons		
CAA - Conference Administrator Application.13		
Setup/Equipment/Conference Displays (
Setup/Configurations/CDA Configuration	n14	
Default Configuration	14	
Display Language	14	
Colour and font on all displays	15	
Voting Graphic Display	15	
Voting Individual and Logged In Display	y16	
Microphone Display	17	
Use Mimics	18	
Date and Time	18	
Automatic Displaying	18	
Preview	18	
Conference/Options	19	
Display Application Configuration	19	

Features CDA Application

Features

- The main features of the CDA Conference Display Application are:
 - o Used for presentation of i.e.:
 - o Speakers and Request lists
 - Voting results (geographical or numerical)
 - o Logged in delegates
 - o Agenda
- The displays are shown by use of:
 - Large screen projectors
 - o VGA monitors (CRT or LCD)
 - o LED displays etc.

Introduction

The CDA Conference Display Application is a full screen application (resolution 1024x768) designed to show various displays for a large audience:

- Microphones (Speakers and speak request lists)
- Microphone mimic diagram (Speakers and speak request)
- Voting results (In list form, graphically, pie chart, mimic and individually)
- Agenda
- Logged in delegates

The presentation is normally done by feeding the VGA signal from the PC running the CDA application to a large screen projector placed inside the meeting room or hall.

The CDA application has no user interface. Setup of the displays on the CDA applications is done in the CAA application and the selection of the display to show is done in the CUA application.

This manual has a section, both for the CAA and the CUA Application with the screens, which are used to control/setup the CDA application.

CDA - Conference Display Application

The Conference Display Application (CDA) is the software used inside the conference room for displaying information on one or more large screens by projectors or other PC peripherals suited for the purpose.

The VGA outputs from the CDA PCs are used to feed projectors, large screens or other equipment. The requirement is that the projectors or other display equipment uses a resolution of 1024x768.

 
It is possible to control up to 8 CDAs displaying different information, however only one CDA can be installed on a PC.

Direct user interaction with the application is not possible and is normally not required since the CDA PCs are likely to be placed in a remote projection room maybe even without monitor or keyboard.

All setup and control is done in the CAA or CUA Applications.

Starting the CDA

After the CDA has been installed, the CDA shortcut is placed on the Desktop and in the c:\Programs\Startup folder.






Display - Automatic

An event-controlled display will take place when 'Automatic' is selected in the 'CUA -Display Control'. The configuration of the event-controlled display is done in the 'CAA/Setup/Configurations/CDA Configuration' under Automatic Displaying.

An event-controlled display can dynamically control what is being displayed at certain events in a conference. At the start of the conference the agenda can be displayed. When a voting session is started the display can then automatically change to show the voting mimic with the interim results and final results.

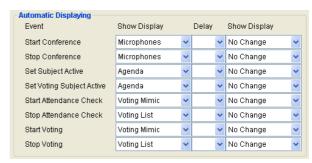

Display - Mic Mimic


The display is shown when 'Mic Mimic' is selected in the 'Display Control' of the CUA.

The users watching this mimic are usually placed in the hall.

The background is black if the mimic bitmap is smaller than 1024x768.

The coloured dots are updated exactly as they are on the CUA Mimic diagram for microphone management status.

Texts such as 'Conference name' or 'Subject' name are not shown on the 'Mic Mimic' display.

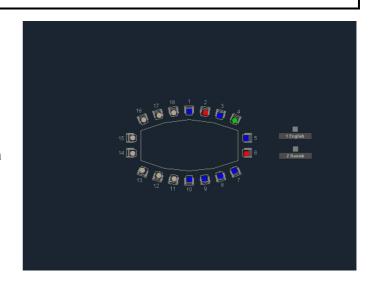


Display - Microphones

The Microphones display is shown when 'Microphones' is selected in the 'Display Control' of the CUA.

The two lists from the CUA Microphones screen are shown on this display.

The 'Conference name' and 'Subject name' are shown above the lists.

The 'Speakers list' and the 'Requests list' are shown in the same format as in the 'CUA - Microphones' using the widths from the delegate list configuration. But an extra column is added so that seat number and elapsed time are shown in separate columns.

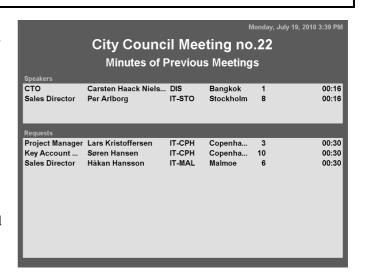

Font sizes, line numbers and colours

Number of lines, colours and font sizes are as specified in the 'CAA/Setup/Configurations/CDA Configuration'. If no conference is active then the default CDA setting is used.

Display - Voting Graphics

The displays below are shown when 'Voting Graphics' is selected in the 'CUA -Display Control'.

Colours and font sizes are as specified in the 'CAA/Setup/Configurations/CDA Configuration'. The 'Conference name' and 'Subject name' is shown above the graphics.

This display is presented during the voting session.


If the 'Delegate Interim Result' and 'Chairman Interim Result' options have been selected then the coloured columns are shown and adjusted during a voting session with the result below. The displays are updated every second. If interim has not been selected then no columns are shown.


If a preset voting time has been set for the session then the duration is shown and the elapsed or remaining time is shown counting up or down.

If 'Manual stop' has been selected then the duration label and time is not shown and the elapsed time will be shown regardless of the elapsed/remaining setting.

This display is shown, when the voting session is stopped.

The result is displayed as shown with the text 'Passed' or 'Not passed' shown in clear green or red colour respectively instead of the duration and elapsed/remaining time information.

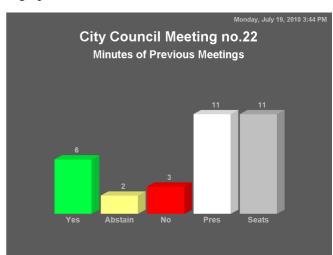

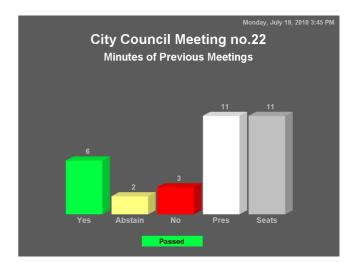

Display – Voting List

The displays below are shown when 'Voting List' is selected in the 'CUA -Display Control'.

The 'Conference name' and 'Subject name' are shown above the graphics. Colours and font sizes are as specified in the 'CAA/Setup/Configurations/CDA Configuration'.


If the 'Delegate Interim Result' and 'Chairman Interim Result' options have been selected in the 'CAA/Setup/Configurations/Voting Configuration' then the results are shown and adjusted during a voting session. The display will be updated every second.

If a preset voting time has been set for the session then the duration is shown and the elapsed or remaining time is shown counting up or down.

If 'Manual stop' has been selected then the duration label and time is not shown and the elapsed time will be shown regardless of the elapsed/remaining setting.

The result is displayed as shown with the text 'Passed' or 'Not passed' displayed in clear green or red colour respectively instead of the duration and elapsed/remaining time information.

If a result does not exist then a 0 (zero) is shown.

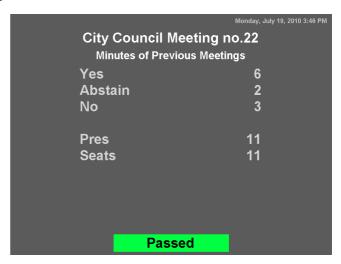



Display - Voting Pie

The display is shown when the 'Voting Pie' is selected in the CUA – Display Control'.

The information to be displayed is configured in the 'CAA/Setup/Configurations/Voting Configuration. The columns 'Vote display column formula' and 'Label' determine what voting results are being shown and their labels on the display.

Only those voting results that have a check mark in the 'Show in Voting Pie' column will be represented in the pie chart.

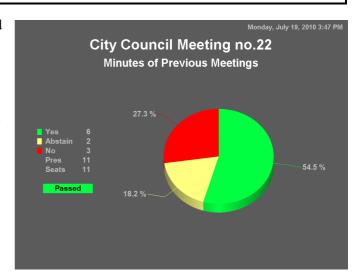

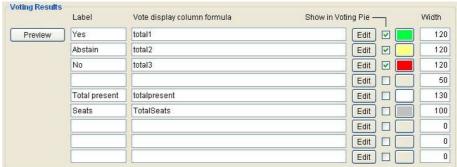

Display - Voting Mimic


The display is shown when 'Voting Mimic' is selected in the 'CUA -Display Control'.

The users watching this mimic are usually placed in the hall.

The background is black if the mimic bitmap is smaller than 1024x768.

The coloured dots are updated exactly as they are on the CUA Mimic diagram for microphone management status.


Texts such as 'Conference name' or 'Subject' name are not shown on the 'Voting mimic' display.

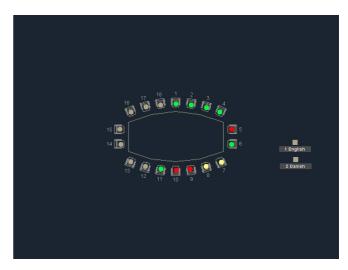

Display - Voting Indv.

The display below is shown when 'Voting Indv.' is selected in the 'CUA -Display Control'.

The display shows an example of displaying individual voting results. The colours showing individual voting results are using the colours specified in the 'CAA/Setup/Configurations/Voting Configuration':

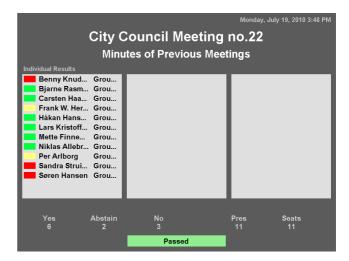


<u>TotalPresent</u> is the value supplied from the Attendance check. The coloured dot representing the TotalPresent value, is replaced by one of the other 5 colours if a voting is done.

If the Interim result display options are selected then the dot colours are updated when the vote is registered.

If Secret Voting option is selected then no results is shown.


Texts such as conference name or subject name are not shown on the 'Mimic display – Voting Indv.'.

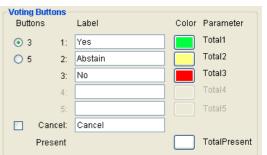

Display - Logged In

The display below is shown when 'Logged In' is selected in the 'CUA -Display Control'.

The picture shows an example of displaying a list of logged in delegates.

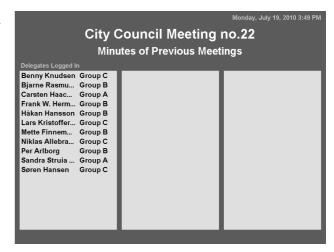

Display - Agenda


The display below is shown, when 'Agenda' is selected in the 'CUA -Display Control'.

The agenda display shows the 'Conference name', 'Current subject' and the 'Agenda' with the current subject highlighted in blue colour.

Colours and font sizes are as specified in the 'CAA/Setup/Configurations/Voting Configuration'.

A 'Red' or 'Green' square indicates the result of a voting on the subject (Green=approved, Red=not approved)

If there are more subjects on the agenda than it is possible to show on a single screen, then the list will be

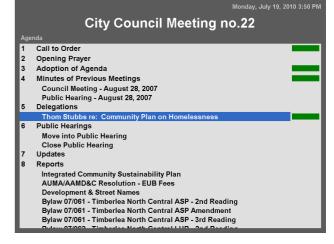

scrolled so that the highlighted subject is shown in the upper third of the text box. When the bottom of the agenda is reached, the highlighting of the current subject moves down into the lower part of the list.

No Display

A completely black display is shown when none of the displays are selected.

CUA - Conference User Application

The Conference User Application (CUA) is the software used by people inside the conference room who are attending or running the conference.

For selecting the display to show on the available CDA application a menu item called 'Display Control' is available in the sub-menu 'Control Menu'. The menu item is available if the user type is configured to show this menu. (See the later section CAA – Conference Administrator Application.)

Display Control

The system can support up to 8 CDA computers displaying different information. The user can by use of the 'Display Control' control which display is active on each of the CDAs.

From 0 up to maximum 8 sets of buttons will be shown matching the number of CDAs that are created in the 'Setup/Equipment/ Conference Displays (CDA)' screen in the CAA.

It is possible to select automatic change of display that will follow the display application setups which has been selected for each of the displays. It is also possible to select the displays directly for each of the CDAs.



The buttons for different displays have red indication when active. If the CDA is not turned on then the buttons remains neutral.

Display selection buttons

[Automatic] The 'Automatic' button works as a toggle button activating and deactivating automatic mode when pressed. The button's bitmap must changes between white and neutral when activated.

[Mic Mimic], [Microphones], [Voting Graphics], [Voting List], [Voting Pie], [Voting Mimic], [Voting Indv.], [Logged In] and [Agenda] Pressing the buttons changes display to the relevant display.

[No Display] Changes the display to show a blank screen.

Pressing one of the display buttons will not change the automatic display setting but only activate a specific display. If automatic mode is set then the display continues to change when an event occurs.

CAA - Conference Administrator Application

The Conference Administrator Application (CAA) is the software used by users mainly outside the conference room for creating and maintaining basic conference data such as conferences, delegates, delegate lists, messages etc. and who monitors the system status during conferences.


For setting up the SW 6000 to use the CDA application three screens are available:

For assigning PCs to run the CDAs	Setup/Equipment/Conference Displays (CDA)
For making CDA setups.	Setup/Configurations/CDA Configuration
For selecting the CDA setups to be used when running a conference	Conference/Options

Setup/Equipment/Conference Displays (CDA)

This screen is used to configure the Conference Display Applications (CDA).

Up to eight PCs with each a CDA application running, can be configured.

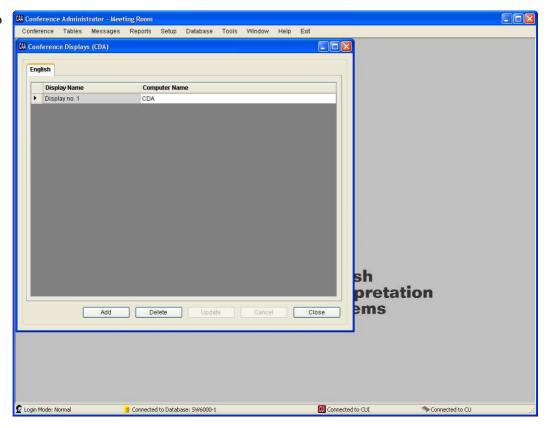

Display Name Numeric display number field. The numbers are automatically filled in when adding a new

display.

Computer Name The name of the PC running the CDA application must be entered.

Manual 01 19 60016 13


Setup/Configurations/CDA Configuration

This screen is used to make a number of setups defining the colour, font size etc. of the CDA displays.

Those setups can be assigned individually to each of the maximum 8 Conference Display Applications.

It is also possible to setup an automatic event driven change between the displays.

A number of setups can be created to assign a specific setup to a conference for each of the CDA PCs.

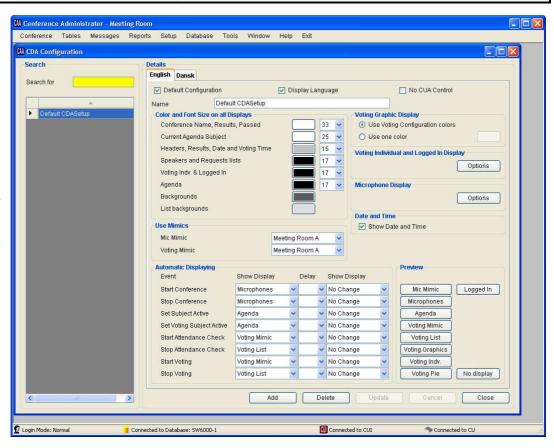

Default Configuration

One setup must be marked as the default configuration. It is possible to change the configuration by enabling another configuration as the default configuration. It is not be possible to delete a default configuration.

The default configuration is used

as proposal when creating conferences

as default for voting session when no conference is active.

Display Language

One display language must be marked. That language will be used by the CDA on its displays.

Colour and font on all displays

It is possible to specify text and background colours to be used on all CDA displays, by using the 'colour buttons' and 'font size' drop down buttons in the 'Color and Font Size on all Displays' option in the 'CAA/Setup/Configurations/CDA Configuration'.

The Colour and Font size are used as follows:

Description in 'CDA Configuration'	Use for following	Colour	Displays
Conference name	Conference name	As specified in the setup	All
	Passed /Not passed	Colour 'green/red' if "Use voting setting colours" else the colour as specified in "Use one colour")	Voting Graphic Display & Voting Display
	Results (labels and results in numbers)	"Use voting setting colours" else the colour as specified in "Use one colour"	Voting Display
Header 1	Current agenda	As specified in the setup	All except 'Agenda Display'
Header 2	Headers: Speakers & Request	As specified in the setup	Microphone Display
	Dates	As specified in the setup	All
	Results (labels and results in numbers)	As specified in the setup	Voting Graphic Display
	Duration and Remaining time	As specified in the setup	Voting Graphic Display & Voting Display
Speakers and Request list	Speakers and Request list	As specified in the setup	Microphone Display
Voting Indv. & Logged In	Voting individual	As specified in the setup	Voting Indv.
	Logged in	As specified in the setup	Logged In
Agenda	Agenda list	As specified in the setup	Agenda Display


Use 'Previews' to check settings.

Voting Graphic Display

It is possible to specify whether the voting graphics display and the voting result display will use colours for the columns and numbers as specified by the 'Voting Buttons Parameters' or just one colour as specified here.

Voting Individual and Logged In Display

It is possible to set the available options for the 'Voting Indv.' And 'Logged In' displays by pressing the Options button. This brings up an 'Options' popup with a number of available options that can be set.

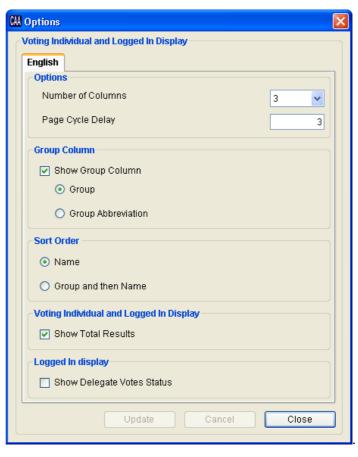

Options Number of Columns
Page Cycle Delay

Defines the number of columns to be shown (1 to 3).

A voting session may contain more individual voting results than can be displayed using a single page (screen) – if this is the case the voting results are formatted on several pages (screens). This parameter defines the delay (in seconds) to be used when cycling through the Voting Individual Display pages. Valid setting 1-99 seconds.

Group Show Group Column **Column**

When this option is selected the display will show the results for groups in columns.

Group Abbreviation

Selects Groups to be shown.

Sort Order Name

Selects Group Abbreviation to be shown.

Group and then Name

Defines if the list of individual votes shall be sorted by Name.

Defines if the list of individual votes shall be sorted by Group and then Name.

Voting Individual When this option is selected the 'Voting Indv.' Display will show the nine total results at the bottom of the page.


Logged In Show Delegate Votes Status display

When this option is selected the Delegate Votes Status is displayed in the Logged In Display.

Microphone Display

It is possible to specify how many lines are available for the 'Speaker list' and the 'Request list' on the microphone display by pressing the Options button. This brings up an 'Options' popup with a number of available options that can be set.

The size of the list box must be calculated from the font size and the number of lines specified.

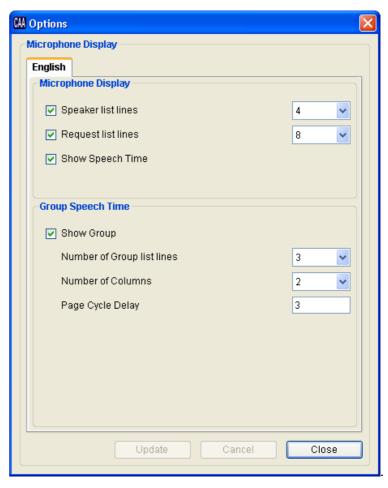

Microphone Display

Request list lines
Show Speech Time

Group
Speech Time

Number of Group Speech Time

Number of Group list lines

Defines the number of speakers to be shown.

Defines the number of requests to be shown. Enables delegate speech time to be displayed. Enables group speech time to be displayed.

Defines the number of groups to be displayed per page.

Number of Columns Defines the number of group columns to be displayed per

page.

Page Cycle Delay Defines the delay (in seconds) to be used when cycling

through the microphone pages showing group speech time.

Valid setting 1-99 seconds.

Use Mimics

The graphics for the 'Mic Mimic' and 'Voting Mimic' displays can be selected using a dropdown box. The available graphics are created in the 'CAA/Setup/Configurations/Mimic Configuration'.

Date and Time

Clicking this checkbox will show Time and Date on the CDA screens. The format of the Date/time follows the PC setting "Regional and Language setting" as implemented on all CUA screens.

Automatic Displaying

During a conference it is possible for the CUA user to select an automatic display operation for the CDAs. The setup allows deciding what display to show when a certain event occurs. The events are:

Event	When and where	
Start conference	When a conference is selected and started from the CUA Conference screen	
Stop conference	When the active conference is stopped from the CUA Conference screen	
Select subject active	When a subject is selected and activated on the CUA Agenda screen	
Set voting subject active	When a subject with a specified voting configuration is set current and activated on the CUA Agenda screen	
Start attendance check	When a attendance check voting session is started from the CUA	
Stop attendance check	When a attendance check voting session is stopped from the CUA	
Start voting	When a voting session for the active subject is started on the CUA	
Stop voting	When a voting session is stopped either automatically on timeout or manually by the user.	

If none of the displays are selected for an event then the 'No display' display is shown.

If the user wants different displays on two CDAs then two different setups can be created and assigned to the CDA PCs when creating a conference.

Preview

The buttons representing the available display are 'Preview' buttons, which can be use for previewing the 'colour' and 'font size' selections made.


Conference/Options

The 'Conference/Option' button brings the 'Option' popup, which is used to set operation settings of the system used when starting the

Only the 'Display Application Configuration' is explained in this manual.

Conference.

Please refer to the 'CAA – User Manual' for other items on this screen

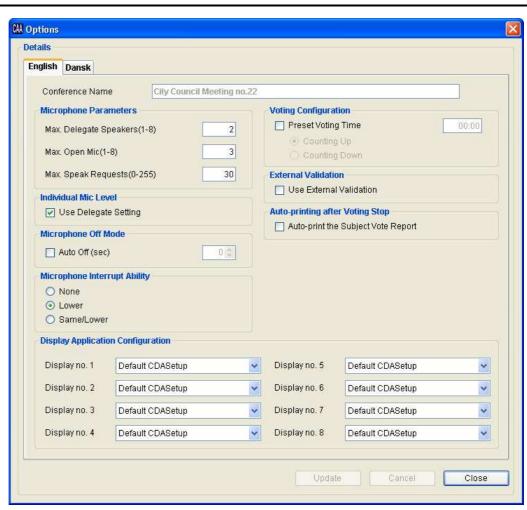

Display Application Configuration

Up to 8 CDA applications, each running on a PC, can be controlled by the system. It is possible to assign a setup to each of them, which will apply when the conference is started.

The default display application setup is assigned to the CDAs, when a conference is added. It is then possible to change the setup for a CDA using a drop down list showing the available setups created in 'Setup/Configurations/CDA Configuration'.

When starting a conference the 'Display setup' specified in the Conference setup is used. When stopping a conference, the 'default' Display setup will be used.

The 8 labels 'Display no. 1-8' can be changed in the 'CAA/Setup/Language/Labels' to give the individual CDAs meaningful names such as 'Left', 'Right', 'Centre' etc. The same 8 label are used on all screens to provide consistency between different screens showing their CDA names.