



**SC5060SCEW  
SC5060SCESS  
SC5060SCECW  
SC5060SCECSS  
SC6060SCEW  
SC6060SCESS  
SC6060SCECW  
SC6060SCECSS**

**ELECTRICAL FREESTANDING  
COOKER  
USER'S MANUAL**

**Thank you for choosing this Sovereign appliance. It has been designed to give years of trouble-free use, provided it is installed and maintained correctly. Please read these instructions carefully before installing or using your appliance. It is advisable to keep your purchase and installation receipts with these instructions in a safe place for future reference. Included is some important safety information in addition to guidelines and recommendations that will enable you to take full advantage of all the functions available. This quality appliance has been tested and certified to meet all applicable UK electrical and safety standards. This appliance must be installed and connected in accordance with current regulations by a qualified electrician. After unpacking the appliance ensure that there is no visible damage. If the appliance has been damaged during transit, do not use it.**

#### Before using the cooker

Remove any packing and protective film and keep this away from children. Wash the cooker thoroughly with clean warm soapy water.

#### The first time you use the cooker

Switch on the oven for approximately 15 minutes at a high temperature to burn off any residues from the manufacturing process. After you have carried out this operation to the oven, do the same to the hotplates and then the grill. Again, 15 minutes should be adequate.

#### Guarantee

This appliance is guaranteed for one year from date of purchase. Keep your purchase receipt with these instructions.

To fulfil the conditions of the guarantee this appliance must have been correctly installed by a qualified person and operated in accordance with these instructions. The appliance is intended for domestic uses only.

If the appliance fails to work properly during the first year period contact the Helpline.

The appliance will be repaired (at the manufacturer's discretion) at no cost to you. If the guarantee has elapsed, you will be given a quotation for any repairs or parts required.

The oven's data plate is accessible even when the appliance is installed. The data plate is visible by opening the door.

This data and model number together with details of your sales receipt must be quoted when contacting the Helpline.

**For Assistance or Service please contact the  
Sovereign Service Helpline on 0870-607-7270**

## **IMPORTANT SAFETY NOTICES**

### **PLEASE READ THIS MANUAL COMPLETELY BEFORE USING THE APPLIANCE**

- 🔊 This appliance has been designed for non-professional, domestic use only.
- 🔊 The producer is not responsible for any damage that might be caused by incorrect installation.
- 🔊 Ensure that the electrical supply complies with the type stated on the rating plate.
- 🔊 Do not attempt to modify the appliance in any way.
- 🔊 During use the appliance gets very hot. Take special when using the appliance and do not touch the heating elements.
- 🔊 Before changing the oven's lamp, please turn off the electric supply.
- 🔊 Do not keep flammable materials near the appliance whilst it is operating.
- 🔊 Do not allow electric cable of other appliances to touch the hot surfaces of this cooker.
- 🔊 Keep children away from the oven.
- 🔊 If you notice any damage to the oven you should switch off the unit and contact an approved repair agent.
- 🔊 If the electric cable becomes damaged, contact a qualified electrician and get it replaced.
- 🔊 Do not use steam cleaners for cleaning the cooking hob or oven cavity.

FOR EFFICIENCY AND SAFETY, WE RECOMMEND THAT YOU ALWAYS USE ORIGINAL SPARE PARTS AND ONLY AUTHORIZED SERVICE AGENTS.

**CONTENTS:**

**Section 1. COOKER COMPONENTS**

**Section 2. INSTALLATION**

**Section 3. USING THE HOTPLATE**

**Section 4. USING THE GRILL**

**Section 5. USING THE OVEN**


**Section 6. CLEANING AND MAINTENANCE**

**Section 7. SERVICE**

## **SECTION 1: COOKER COMPONENTS**

Part of List :

- 1- Hob
- 2- Control Panel
- 3- Oven Door Handle
- 4- Drawer Cover
- 5- Feet
- 6- Oven Door
- 7- Oven Tray
- 8- Wire Grid

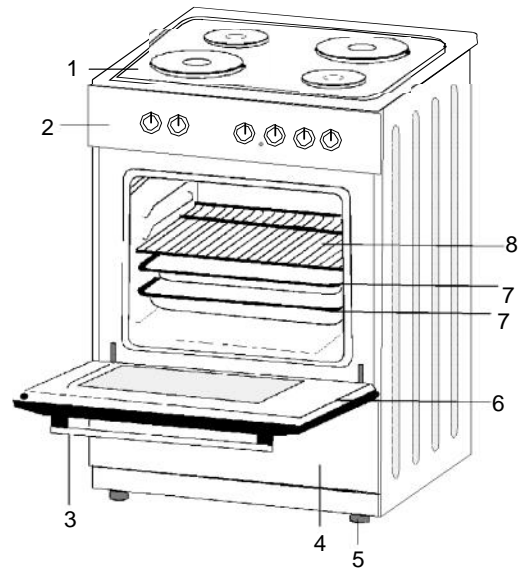

## **SECTION 2: INSTALLATION**

This appliance must be installed and connected in accordance with current regulations by a qualified electrician.

### **2.1. INSTALLATION OF OVEN**

This appliance can be placed next to or in between built-in kitchen furniture. However, the height of the built-in furniture must not exceed the height of the cooker hotplate.

Ensure that there is a minimum of 2cm clear space behind the cooker to allow for air circulation.


You must allow a minimum height of 650mm between the cooker hotplate and any object fitted above, i.e. wall cupboards or a cooker hood.

### **2.2. ADJUSTMENT OF FEET**

Your cooker is fitted with 4 adjustable feet. Please ensure that the appliance is level and secure before first use

### 2.3. ELECTRICAL CONNECTION

This appliance has been adjusted as appropriate for 220-240 Volts.  
 This appliance must be connected to a 45amp fused cooker circuit.  
 Do not connect via a 13amp socket.  
 Do not use with an extension lead.

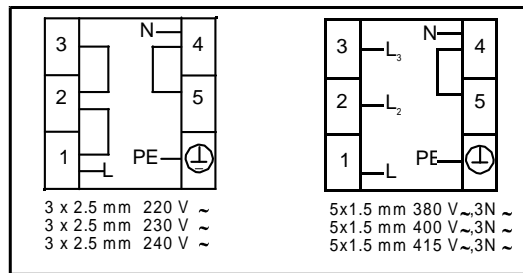


### SECTION 3: USING THE HOTPLATE

Four individual control knobs situated on the control/fascia panel control the four sealed hotplates. Clear graphics indicate the hotplate that each control knob operates.

Turn the relevant control knob to the required heat setting, setting 1 = Low, setting 6 = High.

Whilst the hotplate is on the red indicator will glow. When you have finished using the hotplate turn the control knob back off which is the '0' setting.

Before using your cooker for the first time, we recommend that you turn each hotplate on to setting 3. for approximately 15 minutes, this will burn off any residues from the manufacturing process.

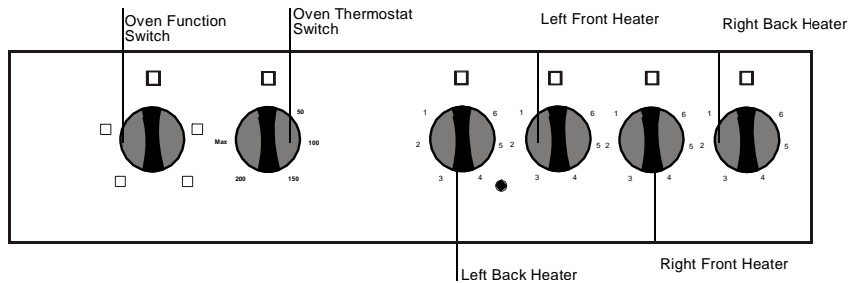

#### **SECTION 4: USING THE GRILL**

The grill is controlled by turning the oven function control knob (far left control) to the grill function setting and then turning the oven thermostat control knob to the desired temperature setting. When you have finished grilling, turn both control knobs back to the off setting ('0').

Before using the grill for the first time we recommend that you turn the grill on for approximately 15 minutes, this will burn off any residues from the manufacturing process.

#### **Please note:**

**We recommend that you carry out grilling with the oven door closed.**

**Set the thermostat control to: 190°C**

#### **SECTION 5: USING THE OVEN**

The oven is controlled by first turning the oven control knob clockwise to the desired setting: the first position provides heat from the top and bottom oven elements, the second position provides heat from the bottom heating element only, the third position provides heat from the top heating element only. You must then turn the oven thermostat control knob to the required heat setting. Whilst the oven is on the red indicator will glow.

When you have finished using the oven turn both control knobs off to the '0' setting.

Before using your cooker for the first time, we recommend that you turn the oven on (top & bottom elements) for approximately 15 minutes, this will burn off any residues from the manufacturing process.

## **SECTION 6: CLEANING AND MAINTENANCE**

Always ensure that your cooker is completely cool and switched off at the electricity supply before carrying out cleaning.

Always clean away food and liquid spills from the hotplate as soon as possible – do not allow spills to harden off.

Exterior and interior areas of the cooker should be washed with warm soapy water and/or mild cream detergents.

Use glass cleaner to clean the interior/exterior of the glass door.

**NEVER USE ABRASIVE DETERGENTS OR WIRE WOOL TO CLEAN AREA OF YOUR COOKER.**

Please note that it is quite normal to get a slight burning smell from the cooker during the first few operations. This is simply the protective oil film that is used during production to protect the cooker parts.

## **SECTION 7: SERVICE**

If the hotplate, grill or oven does not operate, check that the electricity supply switch to the appliance has not been turned off, or that the circuit fuse has blown or circuit breaker has been tripped.

If the grill or oven does not operate, check that the oven temperature control knob has been set to the desired temperature setting.

**If you require further advice or assistance, please phone  
our Service Helpline on 0870-607-7270**





The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.