

HS4600

Holmes

HeatSafe

Ceramic HEATER



OWNER'S GUIDE

PLEASE READ AND SAVE THESE INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be taken to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
3. The heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 ft (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
5. This heater is not intended for use in bathrooms, laundry areas and similar indoor location. NEVER locate heater where it may fall into a bathtub or other water container.
6. Extreme caution is necessary when any heater is used by, or near children or invalids, and whenever the heater is left operating and unattended.
7. Always unplug the heater when not in use.
8. When unplugging, be sure to pull by the plug and not the cord.
9. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
10. DO NOT operate heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
11. A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
12. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by The Holmes Group may cause hazards.
13. DO NOT use outdoors.
14. To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet.
16. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
17. If the heater will not operate, see specific instructions on Auto Safety Shut-off.
18. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.

Thank you for choosing a Holmes heater. To ensure the best performance from your heater, please read and save the following instructions.

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

AUTO SAFETY SHUT-OFF WITH CERAMIC CONTROL:

This heater is equipped with a patented, technologically-advanced, ceramic controlled safety system that requires the user to reset the heater if there is a potential overheat situation. When a potential overheat temperature is reached, the system will automatically shut the heater off. It can only resume operation when the user resets the unit.

To Reset the Heater:

1. Turn the Control Setting to the OFF position.
2. Unplug the heater and wait 10 minutes for the unit to cool down.
3. After the 10 minutes, plug the unit in again and operate normally.

PRE-OPERATING INSTRUCTIONS:

1. Carefully remove your heater from the box (please save the carton for off-season storage). You will find the unit is packed in two pieces with the metal Base Tubing needing to be attached to the heater housing (along with the Tilt Adjustment Knob).
2. To install the base tubing, simply take the silver colored end of the Base Tube and insert into the open ended tube on the bottom of the heater's front housing. Lastly, line up the screw hole on the Base Tube with the opening on the tubing attached to the heater's housing and insert the Tilt Adjustment Knob. Make sure the heater is in an upright position and tighten the Tilt Adjustment Knob.
3. Make sure the unit is in the OFF position before plugging the heater into the outlet.
4. Place heater on firm level surface.

NOTE: Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 Watts, this unit draws 12.5 Amps.

OPERATING INSTRUCTIONS:

1. For heater operation, please set the Thermostat all the way to HI. (See fig. #1 and #2)
2. Turn the Selector Control to desired heat setting (LOW for 1000W or HI for 1500W).
3. For fan-only operation, without any heat output, turn the Selector Control to the FAN setting.

NOTE: The Power Light will remain lit as long as the unit is plugged in .

THERMOSTAT INSTRUCTIONS:

Setting the Thermostat:

1. Before setting the thermostat, allow heater to operate and warm up the room. You need to set thermostat on HI to start heater (See fig. #1 and #2).

- When the desired temperature/ comfort level is reached, lower the thermostat setting until the fan/heater stops operating.
- The control will now automatically maintain the pre-set temperature level by turning the heater ON and OFF.


NOTE: It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to raise the thermostat setting.

ADJUSTABLE-TILT INSTRUCTIONS:

- Carefully adjust the unit to direct the heat flow.
- To adjust the tilt angle of your heater, first loosen the Tilt Adjustment Knob.
- Then simply adjust the heater to the desired angle and re-tighten the Tilt Adjustment Knob.


CAUTION: FRONT GRILL IS HOT WHEN UNIT IS IN OPERATION

Figure 1

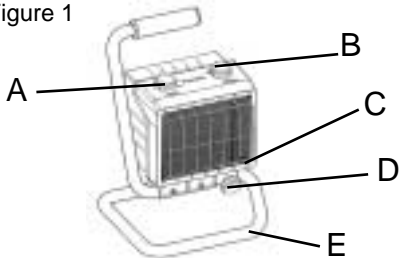


- A. THERMOSTAT CONTROL KNOB
- B. (TEMP) SELECTOR CONTROL KNOB
- C. POWER LIGHT
- D. TILT ADJUSTMENT KNOB
- E. HEATER BASE TUBE


Figure 2 CONTROL PANEL VIEW

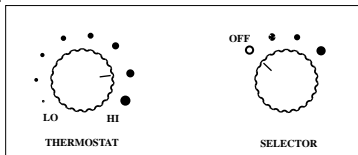

 THIS PRODUCT IS EQUIPPED WITH A 3-PRONG PLUG

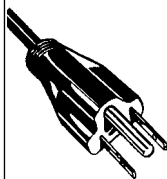

Make sure the electrical receptacle is of the configuration and capacity appropriate for the heater (see below). An adapter as shown in (fig.C) is available in most hardware stores for connecting three bladed grounding type plugs to two slot receptacles. The green grounding lug must be connected to a permanent ground such as a properly grounded outlet box, as shown in (fig.B). The adapter should not be used if a three slot grounded receptacle is available.

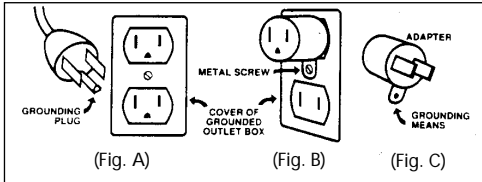 

CLEANING/MAINTENANCE INSTRUCTIONS:

During Season Care:

- Before cleaning, be sure to turn off and unplug the heater.
- Carefully wipe the unit with a soft, damp cloth. Please be very cautious near the motor and heating elements.
- After cleaning, be sure to completely dry the unit with a cloth or towel.

After Season Care:

- Store heater in a cool, dry location.
- Holmes® recommends that you store the unit in its original carton.

SERVICE INSTRUCTIONS:

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
2. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
3. If you have any other questions or comments, feel free to write us:

Consumer Service Department

P.O. Box 769

Milford, MA 01757-0769

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchased below.

STORE NAME _____

LOCATION: _____

DATE PURCHASED: _____

(STAPLE RECEIPT HERE)

FIVE (5) YEAR LIMITED WARRANTY:

SAVE THIS WARRANTY INFORMATION

- A. The quality controls used in the manufacture of this Holmes® product are to ensure your satisfaction.
- B. This Warranty applies only to the original purchaser of this product.
- C. This Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product that, upon inspection by Holmes authorized personnel, proves to have failed in normal use due to defects in material or workmanship. Holmes will determine whether to repair or replace the unit. This Warranty does not apply to installation expenses.
- D. Operating this unit under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or attempting to service or modify the unit, will render this WARRANTY VOID.
- E. Unless otherwise proscribed by law, Holmes shall not be liable for any personal injury, property or any incidental or consequential damages of any kind. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.
- F. All parts of this Holmes product are guaranteed for a period of 5 years as follows:
 - a. Within the first 30 days from date of purchase, the store from which you purchased your Holmes product should replace this product if it is defective in material or workmanship (provided the store has in-stock replacement.)
 - b. Within the first sixty months from date of purchase, subject to the conditions in paragraph H, Holmes will repair or replace the product if it is defective in material or workmanship providing it is returned to Holmes, freight prepaid, with PROOF OF PURCHASE date, together with \$7.00 for return shipping & handling charges.
- G. If you have any problem with this product, please write our Consumer Service Dept.
- H. IMPORTANT Return INSTRUCTIONS Your warranty depends on your following these instructions if you are returning the unit more than 30 days after the date of purchase:
 1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.

2. Before packing your unit for return; be sure to enclose:
 - a) Your name, full address with zip code and telephone number,
 - b) A dated sales receipt or PROOF OF PURCHASE,
 - c) Your \$7.00 check for return Shipping and Handling
 - d) The model number of the unit and the problem you are having. in an envelope and tape directly to the unit before the box is sealed.)
3. Holmes recommends sending the package UPS Ground for tracking purposes.
4. All shipping charges must be prepaid by you (as noted in paragraph F).
5. Mark the outside of your package :

CONSUMER RETURNS
THE HOLMES GROUP, INC.
2 PULLMAN ST.
WORCESTER, MA 01606

SHIPPING AND HANDLING CHARGES: \$7.00

This warranty gives you specific legal rights, and you may have other rights which vary from state to state. The provisions of this warranty are in addition to, and not a modification of, or subtraction from, the statutory warranties and other rights and remedies contained in any applicable legislation. To the extent that any provision of this warranty is inconsistent with any applicable law, such provision shall be deemed voided or amended, as necessary, to comply with such law.