



Pre-filter Replacement DSD EDGE™



Verify both stations are idle before performing this procedure.

1

CLOSE
Incoming Water Line

2

OPEN Internal Water Supply Valve

- Press the SETUP button. Press 43 on the keypad, then press ENTER. This will open the incoming water supply solenoid valve providing a water supply to the on-board 0.2 micron filter housing.

Note: A counter on the LCD display will begin to count down from 250 to 0 in one second increments. After 250 seconds, the incoming water supply solenoid valve will automatically close if not manually closed sooner.



3

DRAIN Purge Line

- Direct the purge line from the top of the on-board 0.2 micron water filter housing into a container that holds a minimum of 1 liter of liquid.
- Slowly open the shut-off valve located on the purge line from the on-board 0.2 micron filter housing until the air is purged from the filter housing and a steady stream of water flows from the purge line.
- After closing the air bleed valve, tap the purge line to promote the draining of the residual water within the purge line into the container.
- Remove the container and empty.
- Press the STOP button to close the incoming water supply solenoid valve and then press the STOP button again to exit the SETUP menu.



4

REPLACE Pre-filters

- Use the filter wrench, if necessary, to remove the pre-filter housings.
- Wearing gloves, remove and discard the filters.
- Clean housings using soap and water and then rinse thoroughly.
- Replace the corresponding filter(s).
- Replace the filter housings. You may need to moisten the O-ring located at the top of the filter housings with a water-based lubricant. Make sure that the O-ring is at the top and in place in the top of the housing.
- Hand tighten the filter housings; DO NOT use the filter wrench.

5

OPEN Incoming Water Line Slowly

6

OPEN Internal Water Supply Valve

- Follow the instructions in Step 2.

7

DRAIN Purge Line

- Follow the instructions in Step 3.

8

CHECK For Leaks

- If a leak is found, close the incoming water supply line and hand-tightened the housings again.
- Open the water line again and check for leaks.

This Quick Start Guide supplements, but does not replace the information provided in the DSD EDGE™ Endoscope Reprocessor User Manual, which came with your reprocessor.

Endoscope reprocessing the way it should be

MEDIVATORS®