

crypto

ReDi 210 MP  
HD DVB-T MPEG4 Receiver



User Manual

## Table of Contents

1. INTRODUCTION .....	5
2. SYSTEM CONNECTION .....	8
3. GETTING STARTED .....	9
4. OPERATION .....	11
5. EDIT CHANNEL .....	12
6. SYSTEM SETUP .....	13
7. TOOLS .....	17
8. GAME .....	20
9. REC .....	21
10. TIMESHIFT/ RECORD .....	23
11. TROUBLESHOOTING .....	26
12. TECHNICALSPECIFICATIONS .....	27

## SAFETY INFORMATION

This sheet lists important safety information that will help to assure proper use of the product. Please read them carefully before operation of your product.

**TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**

1. To prevent electric shock do not attempt opening or removing the covers of the device. The device uses AC220~240V and you may be expose to dangerous voltage.
2. To clean the device always unplug the product from the wall outlet. Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
3. You will notice that the product has slots and openings. These are used for ventilation to ensure reliable operation and to protect it from overheating. The openings should never be blocked by other devices. This product should not be placed in an installation, unless proper ventilation is provided. Do not put anything above the product because you will block the ventilation openings causing the device to overheat.
4. The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

### Service

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

This Receiver has been manufactured to satisfy international safety standards. Please read the following recommended safety precautions carefully.


MAINS SUPPLY:	AC100-240V ~ 50/60Hz
OVERLOADING:	Do not overload wall outlets, extension cords or adapters as this can result in fire or electrical shock.
LIQUIDS:	Keep liquids away from the Receiver.
CLEANING:	Before cleaning, disconnect the Receiver from the wall socket. Use a cloth lightly dampened with water(no solvents) to clean the exterior.
VENTILATION:	Do not block the Receiver ventilation holes. Ensure that free airflow is maintained around the Receiver. Never store the Receiver where it is exposed to direct sunlight or near heating equipment e.g. a radiator. Never stack other electronic equipment on top of the Receiver. Place the Receiver at least 30mm from the wall.
ATTACHMENTS:	Do not use any attachment that is not recommended by the manufacturer; it may cause a hazard or damage the equipment.
CONNECTION TO THE CABLE TV SIGNAL AND TV:	Connect all components before plugging any power cords into the wall outlet. Always turn off the Receiver, TV and other components before you connect or disconnect any cables.
SERVICING:	Do not attempt to service this product yourself. Any attempt to do so will make the warranty invalid. Refer all servicing to a qualified service agent.
LIGHTNING:	If the Receiver is installed in an area subject to intense lightning activity, protection devices for the Receiver mains connector and modem telephone line are essential. The individual manufacturer's instruction for safeguarding other equipment, such as TV set, Hi-Fi, etc., connected to the Receiver must also be followed during lightning storms.
GROUNDING:	CATV cable MUST BE EARTHED. The grounding system must comply with SABS 061.

**NOTE:**

Dispose the used batteries at designated place for environment protection


# 1. INTRODUCTION

## 1.1 Main Unit

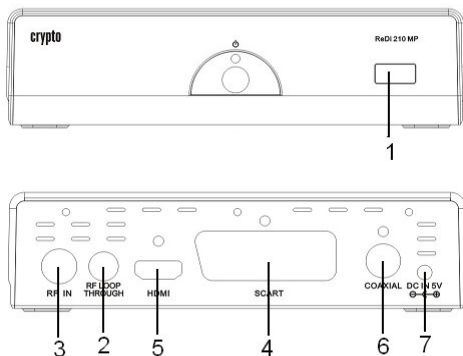

1. USB port
2. RF OUT
3. RF IN
4. Scart
5. HDMI
6. Coaxial
7. Power Input

## 1.2 Remote control

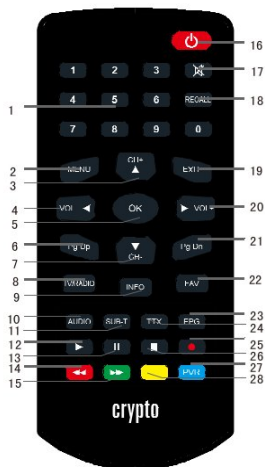

- |                     |                     |
|---------------------|---------------------|
| 1. NUMERIC ENTRY    | 17. MUTE            |
| 2. MENU             | 18. RECALL          |
| 3. CH+              | 19. EXIT            |
| 4. VOL - /LEFT      | 20. VOL +/RIGHT     |
| 5. OK               | 21. PAGE DN         |
| 6. PAGE UP          | 22. FAV             |
| 7. CH-              | 23. EPG             |
| 8. TV/RADIO         | 24. TTX             |
| 9. INFO             | 25. RECORD          |
| 10. AUDIO           | 26. STOP            |
| 11. SUB-T           | 27. BLUE BUTTON/PVR |
| 12. PLAY            | 28. YELLOW BUTTON   |
| 13. PAUSE           |                     |
| 14. RED BUTTON/FB   |                     |
| 15. GREEN BUTTON/FF |                     |
| 16. POWER           |                     |

### 1.3 Loading batteries to the remote control

1. Pull the battery compartment stock.
2. Load one button battery into the battery compartment.
3. Make sure that the battery have been inserted in the correct polarities matching to the symbols +, - marked in the battery compartment. Close the battery compartment cover.
4. Remove the batteries if the unit will not be used for a prolonged period of time.



**BE ENVIRONMENTALLY FRIENDLY**

*Do not dispose batteries as normal rubbish. Be environmentally friendly, dispose batteries following the Government's regulation.*



**CAUTION**

**LITHIUM BATTERY**

*Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.*

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the infrared sensor of the unit during operation.


If the sensor has been covered or there is a large object between the remote control and the sensor, the sensor will not respond.

The sensor may not able to receive the remote signal when it is exposed to direct sunlight or a strong artificial light (fluorescent or strobe light). In this case, change the direction of the light or reposition the unit to avoid direct lighting.



1. Remote sensor
2. Within approximately 6 meter (20 feet)

## 2. SYSTEM CONNECTION

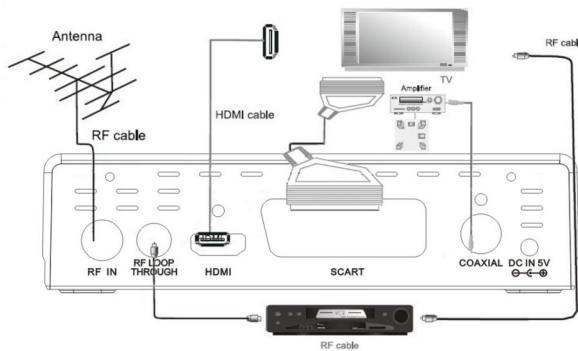




## 3. GETTING STARTED


### 3.1 Welcome Screen

 If you use ReDi 210 MP for the first time, the "Welcome" menu appears. Press cursor button to setup the Region, Language, Display Mode and Aspect Mode. Highlight "OK" and press the "OK" button to start channel search.




### 3.2 Installation

1. Press the "MENU" button to enter main menu.
2. Press "UP" or "DOWN" button to highlight "Installation", press "RIGHT" button to enter to the Installation menu.
3. Press "UP" or "DOWN" cursor button to highlight the desired item and press "OK" button to enter the sub-menu .
4. Press "EXIT" button to exit.

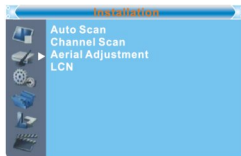

#### 3.2.1 Channel Auto Scan

1. Select the "Auto Scan", press "OK" button to enter the Auto Scan menu.
2. Press the cursor button to set "FTA Only", select NO for free to air and pay per view channels and YES for free to air channels only), then press "Search" and press the "OK" button to start auto scan.

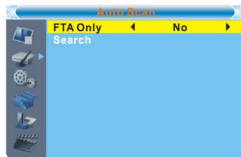


### 3.2.2 Channel Scan

1. Select "Channel Scan", press the "OK" button to enter the Channel Scan menu.
2. Press cursor button to set Scan mode, Scan Band, Channel No., Frequency and Bandwidth, then highlight "Search", press "OK" button to start channel scan .


#### Channel Scan mode:

- By channel
- By frequency

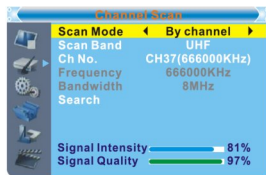

### 3.2.3 Aerial Adjustment

1. Select the "Tuner Power", press "OK" to enter the Aerial Adjustment.
2. Press the cursor button to set the desired setting. When "Tuner Power" is selected "On", the STB will provide 5V power to the antenna. It will not provide anything when "Off" is selected.

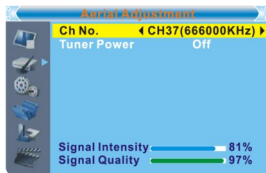

### 3.2.4 LCN

If LCN(Logical Channel Number) Select function is activated, you can't change the original number of TV channels by scanning .

You can activate/deactivate the LCN function by setting the "LCN Mode" to on/off.

## 4. OPERATION

### 4.1 Changing Channels

There are three ways of channel selection - stepping through the channel list, selection by number and from the on-screen channel list.

#### 1. Stepping through the channel list:

To move through the channel list, press the upward arrow or downward arrow key on the remote control.

#### 2. Selected by number:

Enter the channel number directly by pressing numeric buttons, and press the "OK" button to select desired channel.

#### 3. Selected by on-screen channels list:

You can also select the required channel directly from on-screen channel list. This is displayed using the device main menu. See "Edit Channel" in this manual for operation details.

### 4.2 Accessing the Electronic Program Guide (EPG)

With the DVB-T you can have access to program information any time you want. This feature is displayed on-screen with functions allowing a viewer to navigate, select, and see content by time, title, channel etc. Also you can have access to TV guide of any digital channel. To use this function simply follow the following:


1. Press "EPG" button to enter EPG menu.
2. Press cursor button to switch between channel list, events schedule of the selected channel.
3. Press "Green" button to start Timer settings.

With this option you can set the device to open or close whenever you want, set a channel as wake up channel and schedule to record any future broadcast.

4. Press "Red" button to enter the "Step time" menu.

With this option you can find information about a program of each channel, based on hours or days. Eg you can see the program guide of a channel for 2 or 3 days later, etc.

5. If you want to go back on viewing the channel press the "EPG" button again.

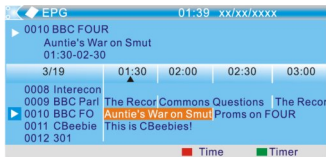

## 5. EDIT CHANNEL

### 5.1 Edit Channel menu

1. Press the "MENU" button to enter main menu.
2. Press "UP" or "DOWN" button to highlight "Edit Channel", press "RIGHT" button to enter the Edit Channel menu.
3. Press "UP" or "DOWN" cursor button to highlight the desired item and press "OK" button to enter the sub-menu.
4. Press "EXIT" button to exit.



### 5.2 TV Channel list

1. In the Edit Channel menu, select "TV Channel List", press "OK" button to enter TV channel list menu.
  2. Press "UP" or "DOWN" button to highlight a channel, press the "OK" button to preview the desired TV channel.
- Use this menu to favor, lock, skip, move, sort, delete and rename a channel.
- (1) Press "FAV" button, then press "OK" button to edit the FAV function.
  - (2) Press "color" button, then press "OK" button to edit the corresponding function.



 
### 5.3 Radio Channel list

1. In the Edit Channel menu, select "Radio Channel List", press "OK" button to enter the Radio Channel list menu.
2. Press "UP" or "DOWN" button to highlight channel press the "OK" button to listen the desired TV channel.

**NOTE:** Basically, the operation of "Radio Channel List" is the same as "TV Channel List", but there is one point different: In "Radio Channel List" mode, there is no video information, so it will always display Radio's logo in the right side preview window.

## 5.4 Delete All

1. In the Edit Channel menu, select "Delete All", press "OK" button.
2. A warning window appears.  
Select "Yes", press "OK" button to delete all channels.  
Select "No", Press "OK" button to cancel deleting.



## 6. SYSTEM SETUP

### 6.1 System setup menu

System setup menu allows us to set Language, TV System, Local Time Setting, Timer Setting, Parental Lock, OSD Setting, Favorite and Auto Standby.

1. Press the "MENU" button to enter main menu.
2. Press "UP" or "DOWN" button to highlight "System Setup", press "RIGHT" button to enter the System Setup menu.
3. Press "UP" or "DOWN" cursor button to highlight the desired item and press "OK" button to enter the sub-menu.
4. Press "EXIT" button to exit



## 6.2 Language

This menu allows you to set Language.



## 6.3 TV System


This menu allows us to set Display Mode, Aspect Mode, Video Output and Digital Audio Output.

Display Mode: 480i/480p/576i/576p/720p/1080i/1080p

Aspect Mode: Auto/4:3PS/4:3LB/16:9

Video Output: CVBS/RGB

Audio Output: LPCM OUT / BS OUT

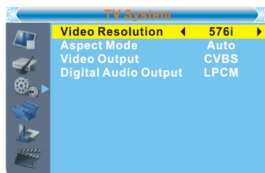

## 6.4 Local Time Setting

This menu allows you to set the region and time.

Region: This menu is used for changing the region setting.

GMT Usage: This menu is used for opening the usage of GMT. The options are: Off / On

GMT Offset: This menu is valid only when selected "User Define" in GMT Usage menu.

The GMT offset range is "-11:30 ~ +12:00", increasing half hour progressively.

Date: "Date" and "Time" menus are valid only when selected "Off" in GMT Usage menu.

Time: Press "OK" then numeric button to input the time.



## 6.5 Timer Setting

1. Program Timer: This menu allows us to set the program timer for a scheduled recording or channel setting.

Timer Mode: Off/Once/Daily


Timer Service: Channel/Record (schedule a video recording)

Wakeup Channel: You can select a desired channel as the wakeup channel.

Wakeup Date: Press "OK" then numeric button to input date.

Wakeup Time: Press "OK" then numeric button to input the time.

Duration: Press "OK" then press numeric button to input the duration time.

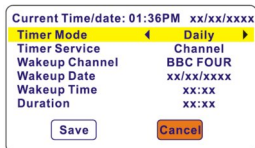

## 6.6 Parental Lock

This menu allows you to protect the installation menu and channel, and change the Password.

1. In "System Setup" menu, select "Parental Lock" and press "OK" button, you are asked to input a password (the default password is "0000").


2. After the input of the correct password by pressing numeric buttons, the parental lock menu appears.

Menu Lock: To lock the installation menu and Edit menu. When you want to enter Auto Scan/Channel Scan menu, you must input the password. You can set menu lock to on/off.

Channel Lock: Off/ AGE 10/AGE 12/AGE 16/AGE 18

New Password: To change the password.

Confirm Password: To confirm the new password.

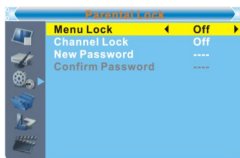


## 6.7 OSD Setting

This menu allows you to set OSD Timeout, OSD Transparency and load default OSD setting.

OSD Timeout: 1-10

OSD Transparency: To set the OSD transparency to Off/10%/20%/30%/40%.

Load Default OSD Setting: To clear all OSD setting and reset parameters as default value.

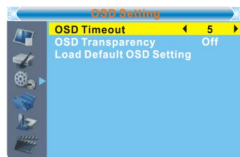

## 6.8 Favorite

This menu allows you to rename the favorite group.

1. In Channel menu, select "Favorite", press "OK" button to enter Favorite menu.
2. Select desired group, press "OK" button to open the screen keypad. Input a letter and a number one by one by pressing the cursor button and press "OK" button to confirm. After finishing, highlight "OK" on screen keypad to confirm, then you have you change Favorite group name successfully.
3. Press "EXIT" button to quit the group rename menu.





## 6.9 Auto Standby

No command to receiver on front panel or Remoter in 3 hours and no timer event, the receiver will enter standby mode automatically.



## 7. TOOLS

### 7.1 Tools main menu


1. Press the "MENU" button to enter main menu.
2. Press "UP" or "DOWN" button to highlight "Tools", press "RIGHT" button to enter the Tools menu.
3. Press "UP" or "DOWN" cursor button to highlight the desired item and press "OK" button to enter the sub-menu.
4. Press "EXIT" button to exit.



### 7.2 Receiver Information

This menu can display some parameters of bootloader, maincode, radioback, countryband and userdb information.


1. In "Tools" menu, select "Receiver Information", press "OK" button to open receiver information window.
2. Press "EXIT" button to exit.

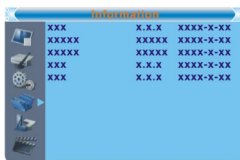

### 7.3 Load Factory Default

This menu allows you to re-set the device back to factory settings and clear all existed channels.


1. In the "Tools" menu, select "Load Factory Default" and press "OK" button.
2. A confirmation window will be displayed. Select "Yes" to activate a reset back to the factory settings and clear all channels.
3. Select "No" to cancel. Press "EXIT" button to exit.

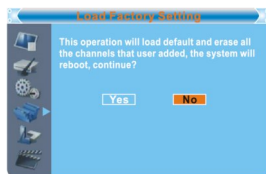

### 7.4 Software Upgrade

We offer the functions for user to upgrade software version by OTA or by USB.

1. Enter "Tools" menu, select "S/W Upgrade by OTA" or "Upgrade by USB", press "OK" button and the Software Upgrade menu will be shown.
2. Press cursor button to select the desired item, then highlight "Start" and press "OK" button to start the upgrade.
3. Press "EXIT" button to exit.

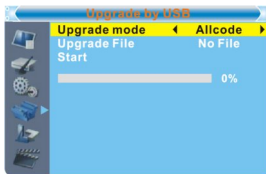

## 7.5 USB Device

This function allows you to play files from USB port.

1. In "Tools" menu, select "USB device", press "OK" button to enter Media Player menu.
2. Press "UP" or "DOWN" cursor button to select a desired item, and press "OK" button to play the desired files.
3. Press "EXIT" button to exit.

### Key operations:

- **FAV** : Put the selected file to play list .
- **0** : All the MP3 files in current directory will be added into MP3 play list .
- **1** : All the Image files in current directory will be added into Image play list.
- **2** : There are four kinds of sorting approaches.
  - Name (A-Z): Sorting in Alphabetical descending Order.
  - Name (Z-A): Sorting in Alphabetical ascending Order.
  - Lock: Collecting all locked channels and list in the bottom of TV Channel List.
  - Default: Return to original setting order.
- **Yellow Key**: The "Please select play list type" operation window will be shown by pressing Yellow key. After that, the user can play the image or music by choosing the files. If there is no file in the directory, an operation window "This type of play list doesnot exist" will be shown.
- **INFO**: Set up slide show of images.
- **Blue** : To rotate among the 3 repeat modes provided as below:




Repeat Folder



The entire Random Folder




Repeat Single

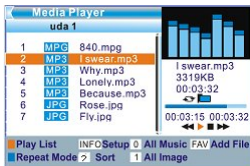

## 7.6 Remove USB device safely

In "Tools" menu, select "Remove USB device safely", Press "OK" button to confirm. Then a window is displayed. Press "OK" button again.

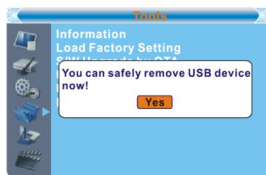


## 8. GAME

### 8.1 Game

This menu allows you to play games.

1. Press the "MENU" button to enter main menu.
2. Press "UP" or "DOWN" button to highlight "Game", press "RIGHT" button to enter the Game menu.
3. Press "UP" or "DOWN" cursor button to highlight the desired item and press "OK" button to enter the game.
4. Press "EXIT" button to exit.

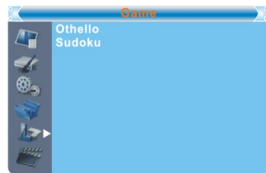

## 9. REC

### 9.1 REC

1. Press the "MENU" button to enter main menu.
2. Press "UP" or "DOWN" button to highlight "REC", press "RIGHT" button to enter the REC & Media menu.
3. Press "UP" or "DOWN" cursor button to highlight the desired item and press "OK" button to enter the sub-menu.
4. Press "EXIT" button to exit.



### 9.2 Record Manager

This menu allows you to play the recorded files.

1. In "REC" menu, select "Record Manager" and press "OK" button to enter Record Manager menu.
2. Press "UP" or "DOWN" cursor button to select a desired item, and press "OK" button to play the desired files.
3. Press "EXIT" button to exit.



### 9.3 DVR HDD Information

This menu can display some parameters of the Removable Disk.

1. In "REC" menu, select "DVR HDD Information", press "OK" button to open DVR HDD information window.
2. Press "EXIT" button to exit.

### 9.4 HDD Format

This menu allows you to format the disk.

1. In "REC" menu, select "HDD Format", press "OK" button to open HDD Format menu.
2. Highlight "Storage Partition", press "LEFT" or "RIGHT" cursor button to change Partition.
3. Highlight "Format", press "OK" button, a window appears.

Select FAT/NTFS, press "OK" button to format.

Select "Cancel", Press "OK" button to cancel.

### 9.5 DVR Configuration

This menu allows us to set the DVR Configuration.

Press "UP" or "DOWN" cursor button to select desired item, press "LEFT" or "RIGHT" cursor button to change the setting.

TimeShift time(min): On/Off

TimeShift to record: On/Off

Record Type: TS/PS

TS: Transportation stream which includes information like teletext, subtitle, etc.  
PS: Program stream which will be packeted with the file format of \*.mpg and be also played back by PC or other devices.

Record Selection: You can press "LEFT" or "RIGHT" cursor button to change Selection.

Standby after record: On/Off



## 10. TIMESHIFT/ RECORD

### 10.1 Time shift

The digital receiver ReDi 210 MP gives you the ability to record and watch one program interfacing with the viewing time. All you have to do is to connect an external hard drive or a USB stick in the usb port of the device.

With this function you can:

Pause the program and continue to see if another time.

NOTE: For proper operation of TIME SHIFT it is recommend using a storage device that supports USB 2.0 and has high speed read /write. Also if it is possible it is recommended to use a USB stick or HDD with high storage space. The product can support up to 2TB disks

The TIME SHIFT is a feature where you can simultaneously track, pause or to go back and forth when you are watching a program. For example, while watching your favorite show someone rings the door bell. No problem. Just activate the function bt pressing "Pause" button to freeze the image. The device then start to record the program and when you return you can resume viewing from where you left.

#### • Enable TIME SHIFT

- To use TIME SHIFT press <PAUSE> and a bar with the time when the recording is started (right) will appear. From this moment and forth the channel program will be recorded.

Each time you wish to pause or rewind the program a new bar will appear.

Notice that now the bar has 2 times. The right is the normal time showing the on going time from the beginning and the left is the play backed time according to the time you choose to watch of the recorded program.



During TIME SHIFT, it is possible to do the following.

- Press "PAUSE" to pause the program and <PLAY> to continue watching later.
- Press "STEP FORWARD" or "FORWARD" to fast forward the recorded program at specified time steps at 2x, 4x, speed etc respectively.
- Press "STEP BACKWARD" or "BACKWARD" to quickly rewind the recording at specified time steps or at 2x, 4X, speed etc, respectively.

This choices affect only the recorded program, and not the function of TIME SHIFT.

To return to the normal playing time press the "STOP" and then the <EXIT>. The TIME SHIFT will continue to record but you will watch the normal time of the program

#### • Stop TIME SHIFT

The TIME SHIFT is switch off when you change the channel or if you enter the main menu

NOTE:

- The TIME SHIFT is disabled when you activate it for a specific channel and you have scheduled a recording (PVR) to another channel. When that recording starts the device will take you to that channel automatically and it will deactivate Time Shift to the other
- The TIME SHIFT can be activated while recording a program, but only for that channel you are recording.

## 10.2 Personal Video Recording (PVR)

- Instant Recording

With this feature, with a touch of a button you can write a program you are watching.

- Press <RECORD> button on your remote to immediately start recording the program you are watching
- Pressing the button again <RECORD>, you can adjust the duration of the recording.
- Press <STOP> button to stop recording. A window will appear.
- Select YES to stop recording. Select NO to resume recording.

- Scheduled Recording

Apart from the operation of direct recording, the device can be scheduled to write a program in the future.

- Press the <Menu> button and select <settings>, <Timer Settings>.

This menu lets you set the timer for a recording.

Time Mode: Off/Once/Daily

Time service: Record

Wakeup Channel: Set the channel you want to record.

Wakeup Date: Press OK and then the numbers to enter the date of recording.

Wakeup Time: Press OK and then the numbers to enter time you want the device to start writing.

Duration: Press OK and then the numbers to enter the duration of the recording

To see all the programs you have recorded press :

1. Menu <Rec> select "Record Manager" press OK.
2. Press the Up and Down arrow keys to select the desired entry and press the OK to play the file.
3. Press <EXIT> on the remote to exit the menu.



**Note :**

- When you write a program in a particular channel you can watch another of the same group of four digital channels, that belong in the same frequency, at the same time you make the record.
- When you have programmed a recording for a channel and you are watching another with the time shift activated when the recording will start the device automatically deactivate Time Shift and takes you to the channel that is programmed to be recorded.
- During the time that a recording takes place the Time Shift function can be activated in parallel with the recording only for that specific channel and not for anyone else.

## 11. TROUBLESHOOTING

In some region, the digital terrestrial signal may be weak. So you'd better use an antenna with builtin signal booster.

Problem	Possible cause	What to do
Standby light not lit	Mains lead unplugged. Mains fuse blown. Remote sensor not connected correctly	Check mains lead. Check fuse. Ensure remote sensor plug is fully inserted into the remote sensor socket on the main unit.
No signal found	Aerial is disconnected. Aerial is damaged. Out of digital signal area.	Check aerial lead. Check aerial. Check with signal provider
No picture or sound	Tuned to digital teletext channel	Change to another channel
Scrambled channel message	Channel is scrambled.	Select alternative channel
No response to remote control	Receiver off. Handset not aimed correctly. Remote sensor obstructed. Remote battery exhausted. Remote sensor not connected correctly.	Plug in and turn on plug. Aim handset at front panel. Check for obstructions/reposition remote sensor. Replace remote battery. Ensure remote sensor plug is fully inserted into the remote sensor socket on the main unit.
Forgotten channel lock code		Re-install channels to cancel channel lock.
Forgotten menu lock code		Contact help line.
After moving receiver to another room, it is no longer able to receive digital signal	The signal through the aerial may not be strong enough to receive digital reception due to distribution problems	Try a direct feed from the antenna.

## 12. TECHNICAL SPECIFICATIONS

Power Voltage	AC 220V / 240V 50-60Hz		
Power Consumption	< 8 W		
Video decoder	MPEG-2 MP@HL, AVC/H.264 HP @L4.1 MPEG-4 ASP SUPPORTED		
Audio decoder	MPEG-1 Layer 1,2/PCM/HE-AAC V1.0 ICE958 SPDIF/ AC3		
Video output ratio	Auto/4:3PS/4:3LB/16:9		
Video resolution	480i/480p/576i/576p/720p/1080i/1080p		
Recording Format	Video: ts, mpg		
Media Player Format	Audio	mp3	
	Image	jpg, bmp	
	Video	TS	<b>File type:</b> *.ts / *.tp / *.trp <b>Video Codec:</b> MPEG2 MP@HL H.264 MP/HP <b>Max Resolution:</b> 1920 x 1080p <b>Audio:</b> MPEG layer 1/2/ AC3/ AAC
		MPG	<b>File type:</b> *.mpg <b>Video Codec:</b> H.264 BP/MP/HP MPEG4 SP/ASP,Xvid <b>Max Resolution:</b> 1920 x 1080p <b>Audio:</b> MPEG layer 1/2/ AC3
		MP4	<b>File type:</b> *.mp4 <b>Video Codec:</b> MPEG2 MP@HL, H.264 MP/HP MPEG4 SP/ASP,H.263/Xvid <b>Max Resolution:</b> 1920 x 1080p <b>Audio:</b> MPEG layer 1/2/ AC3/ AAC
		AVI	<b>File type:</b> *.avi <b>Video Codec:</b> MPEG2 MP@HL, H.264 MP/HP MPEG4 SP/ASP,H.263/Xvid <b>Max Resolution:</b> 1920 x 1080p <b>Audio:</b> MPEG layer 1/2/ AC3/ AAC
		MKV	<b>File type:</b> *.mkv <b>Video Codec:</b> H.264 BP/MP/HP MPEG4 SP/ASP,Xvid, MPEG2 MP@HL, H.264 MP/HP, MPEG4 SP/ASP,H.263/Xvid <b>Max Resolution:</b> 1920 x 1080p <b>Audio:</b> MPEG layer 1/2/ AC3/ AAC
OSD Menu	Multilingual		
Teletext	Multilingual		
Tuner			
	RF Input Connector	IEC FEMALE	
	Loop Through	IEC Male	
	Receiving Channel Range	174-230MHz, 470-862MHz	

	Modulation	QPSK/16QAM/64QAM
	Band Width	6 / 7/ 8 MHz
Outputs		
	1 x HDMI	1 x Scart
	1 x USB 2.0 (Host)	1 x Coaxial
Dimensions		
	W x D x H	155 x 107 x 40 mm
Weight		221 gr

Technical specifications are subject to change without prior notice.

For technical information and support please contact us:

Web Site: [www.crypto.gr](http://www.crypto.gr)

E-mail: [support@crypto.gr](mailto:support@crypto.gr)



#### Disposal of old electrical and electronic equipment



If you see this symbol on the product or on its packaging, you should hand the product over to the applicable collection point for the recycling of electrical and electronic equipment. Do not throw it away with household wastes.

The improper disposal of these products may have negative consequences for the environment and human health.

For more information about the recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased it.