

TM
KORYO



USER'S MANUAL



KCH 100M
Easy Chop

ELECTRIC CHOPPER

HANDY & EFFICIENT



Dear Customer,

 
Congratulations! Thank you for buying this KORYO appliance. Your new Chopper has been designed for your convenience. We are sure you will get many years of trouble free service from this appliance.

Before commissioning this device please read this user manual carefully. Please retain this user manual, warranty certificate, sales receipt and if possible carton with the inner packaging.

CONTENTS

Parts identification	3
Important safeguards	3
Read all instructions before use	3
Special instructions	4
To assemble	5
Before first use	5
To use.....	5
Care and maintenance	6
E-waste disposal.....	6
Warranty.....	7

PARTS IDENTIFICATION

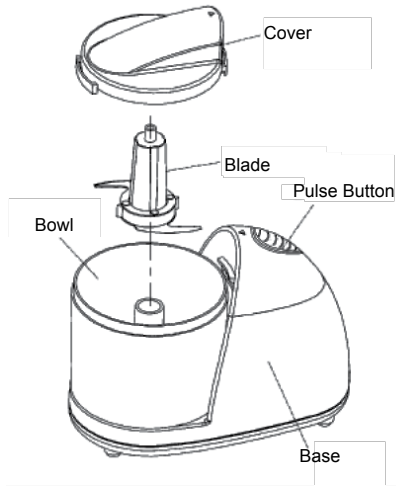

IMPORTANT SAFEGUARDS

Definitions

Whenever used, the following terms identify safety and property damage messages and designate a level of hazard seriousness.



This is the safety alert symbol. It alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER - Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.

WARNING - Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION - Indicates a potentially hazardous situation, which, if not avoided, may result in minor/moderate injury.

NOTICE - Addresses practices not related to personal injury, such as product and/or property damage.

When using this or any other electrical appliance, always follow these basic safety precautions

READ ALL INSTRUCTIONS BEFORE USE



WARNING: To reduce the risk of fire, electrical shock, or serious personal injury:

- Keep the product out of the reach of children and pets. This product is not intended for use by children. Extra caution is necessary when using this appliance near children.
- Always ensure the product is unplugged from the electrical outlet and the all parts stopped before assembling, disassembling, relocating, or cleaning it.

- Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when not in use.
- Do not place the base, power cord, or plug of this product in or expose the parts to water or other liquids.
- Avoid contact with moving parts. Keep hair, hands, fingers, or any other body part from coming into contact with the moving parts while the product is operating.
- Keep hands and utensils away from moving Blades while operating the product. A scraper may be used but only when the product is not operating.
- Keep the power cord and product away from heated surfaces.
- Blades are sharp. Handle carefully.
- Do not use attachments not recommended or sold by the product manufacturer.
- Never place cutting blades on the base without first putting the bowl properly in place.
- Always ensure the cover is securely locked in place before operating the product.
- Do not attempt to defeat the cover interlock mechanism.
- Do not plug or unplug the product into/from the electrical outlet with a wet hand.
- To disconnect from an electrical outlet, ensure the product is off and then pull directly on the plug; do not pull on the Power Cord.
- Do not put any stress on the Power Cord where it connects to the product, as the Power Cord could fray and break.
- Always assemble the product completely before plugging it into an electrical outlet.
- Do not operate the product if it has a damaged or cut Power Cord or plug, if wires are exposed, if it malfunctions, if it is dropped or damaged, or if the Motor Housing is dropped in or exposed to water. This product has no user-serviceable parts. Do not attempt to examine or repair this product yourself. Only qualified service personnel should perform any servicing; take the product to the appliance repair shop of your choice for inspection and repair.

⚠ CAUTION: To reduce the risk of personal injury or product / property damage:

- This product is intended for use in indoor, non-commercial, non-industrial chopping of foods for human consumption. Do not use the product outdoors or for any other purpose.
- Always place the product on a flat, level, stable surface.
- Do not allow the power cord to hang (e.g., over the edge of a table or counter) where it may be tripped over or pulled.

SPECIAL INSTRUCTIONS

- A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. An extension cord is not recommended for use with this product, but if one must be used:
 - The marked electrical rating must be at least equal that of the product;
 - If the product is of a 3-prong grounding type, the extension cord must be a grounding-type 3-wire cord.
 - Arrange the extension cord so that it will not drape over the counter top or tabletop where it can be tripped over or pulled.

 
WARNING: This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electrical shock. This is a safety feature. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug.

TO ASSEMBLE

WARNING: Ensure the product is unplugged from the electrical outlet before assembling it. Handle the Blades with care as they are extremely sharp. Use caution when attaching, detaching, cleaning, or storing the Blades.

1. Ensure the product is unplugged from the electrical outlet.
2. Place the Base on a flat, level, stable surface.

3. Insert the Container Bowl over the Metal Shaft and turn the Container Bowl clockwise until the Safety Latches of the Container Bowl lock to the Base (preventing the Container Bowl from detaching).




Unlocked Safety Latch



Locked Safety Latch

4. Attach the Blades by holding the plastic shaft end (end opposite of the Blades) and inserting the Blade shaft over the center column of the Container Bowl until secure.
5. Attach the Cover after inserting the food into the Container Bowl.

 IMPORTANT NOTE: The Cover must be securely locked into its position before the chopper will operate. When properly locked, the arrow inscribed on the Cover handle must align with the arrow inscribed on the Base (near the On/Pulse Button).

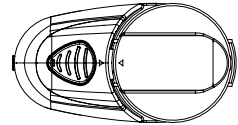

BEFORE FIRST USE

1. Remove product parts from packaging and disassemble. To remove the Container Bowl from the Base, turn Container Bowl counter clockwise.

NOTE: Container Bowl may be slightly difficult to remove when product is new. To aid removal, place the Base onto its side on a soft surface and then turn Container Bowl firmly to remove.

2. Do not operate the product in the following conditions: if the product is damaged, the power cord or plug is damaged, wires of the power cord are exposed, if the motor housing is damaged or exposed to water. This product has no user serviceable parts. Do not attempt of examine or repair the product by yourself.

TO USE

NOTICE: Do not process raw meat, cheese, coffee beans, or whole squares of chocolate in this product.

1. Cut the food into small pieces, as needed.

NOTE: Hard vegetables, such as raw carrots, may require splitting and/or quartering in order to allow smooth operation and movement of the Blades.

2. Place the food into the Container Bowl. Do not fill past the maximum capacity of 1½ cups.
3. Attach and gently secure the Cover onto the Container Bowl (reference the “To Assemble” section).
4. Plug the product into a standard 220~240 volt AC electrical outlet.
5. Press the On/Pulse Button to begin processing the food.
6. To stop processing, release the On/Pulse Button.

7. Wait until the Blades and Metal Shaft have completely stopped before removing the cover or any contents.
8. Unplug the product from the electrical outlet when it is not in use or is left unattended.

WARNING: Overfilling the Container Bowl could cause spillage, resulting in serious burns and/or property/product damage.

Tips:

- For liquid ingredients, place a maximum volume of $\frac{3}{4}$ cup when filling the Container Bowl.
- To make bread crumbs, break the bread into pieces before placing them into the food processor.
- To use cracker or cookie crumbs as recipe ingredients or in pie crusts, break them into pieces before placing them into the food processor.
- To chop vegetables (e.g., carrots, celery, mushrooms, green peppers, onions): cut the vegetables into 1" (approx. 2½ cm) chunks before processing them in the Container Bowl. This will allow more consistent chopping of the vegetables.
- Use the mini chopper to mince parsley, basil, chives, or garlic.
- Use the mini chopper to puree small amounts of cooked fruits or vegetables for baby food or as bases for sauces or soups.

CARE AND MAINTENANCE

WARNING: To avoid the risk of electric shock, always ensure the product is unplugged from the electrical outlet before assembling, disassembling, relocating, servicing, or cleaning it.

WARNING: Handle the Blades with care as they are extremely sharp. Use caution when attaching, detaching, cleaning, or storing the Blades.

- Always clean the product immediately after each use.
- Wash the Cover, Container Bowl, and the Blades in warm, soapy water; rinse and let dry.
- Clean the Base by wiping it with a damp cloth. To avoid product damage, do not immerse the Base into water or other liquids.
- To avoid damage to the product, do not use abrasive cleaners or scouring pads to clean the product parts.
- Reassemble the product before placing it into storage. (Reference the "To Assemble" section.)
- Store the product in a cool, dry place.

E-WASTE DISPOSAL



This symbol on the product or on the container indicates that this product cannot be eliminated with the general waste. The user is responsible for eliminating this kind of waste by throwing them away at a "recycling point" specifically for electrical and electronic waste. Selective collection and electrical equipment recycling contribute to preserve natural resources and warrant waste recycling to protect environment and health. In order to receive further information about electrical and electronic waste collecting and recycling, contact your Local Council, the service of household waste or the establishment where the product was acquired.

WARRANTY

This product comes with a warranty of 12 months from the date of purchase as specified on the warranty card. This is against all defective material or workmanship. In the event of a defect, Future Retail Limited or KORYO Authorized Service Centre undertakes to repair the set, free of charge, during the warranty period.

In the event of a defect developing in the product, contact KORYO Customer Care or KORYO Authorized Service Centre and provide information about the defect, the model number and serial number of the product.

THIS WARRANTY IS VOID IF

1. The completely filled warranty card is not presented to the authorised personnel at the time of servicing of the product.
2. The product is not operated according to the instructions given in the user manual.
3. Defects are caused by improper or reckless use.
4. Modifications or alterations have been made to the product or if the product has been tampered with, in any manner whatsoever.
5. Repairs to the product are carried out by anyone other than an authorised company representative.
6. For defects other than faulty parts or workmanship such as damage due to lightning, abnormal voltage, spillages, dust, accidental damage, etc.
7. The serial number is deleted or altered.
8. Used for any non-domestic purpose.

OTHER TERMS AND CONDITIONS

1. Repairs or replacement will be carried out either by a Future Retail Limited authorised customer care centre or by a representative.
2. All expenses incurred in collecting the unit(s) or part(s) thereof from the Customer Service Centre, as well as any other expenses and incidentals will be borne by the customer.
3. Whilst the company will make every effort to carry out repairs at the earliest, it is made expressly clear that the company is under no obligation to do so in a specified period of time.
4. The company or its authorised customer centre reserves the right to retain any part(s) or component(s) replaced at its discretion, in the event of a defect being noticed in the equipment during the warranty

WARRANTY CARD

THIS CARD IS VALID ONLY IF IT IS FILLED IN COMPLETELY,
SIGNED AND STAMPED BY THE DEALER ON DATE OF PURCHASE

MODEL NO : _____ SERIAL NO : _____

CUSTOMER NAME : _____

ADDRESS : _____

PHONE NO : RESIDENCE : _____ OFFICE : _____

INVOICE/CASH BILL NO : _____

DATE OF PURCHASE : _____

CUSTOMER SIGNATURE : _____

DEALER'S STAMP

* For service request kindly contact Customer Care Centre at : 1800-425-7722, 080-26577722

* Please mail in queries to feedback@koryoworld.com



Also Available

Convection MW Ovens	Slow Juicer	Split Air Conditioner
Grill MW Ovens	Juicer Mixer Grinder	Window Air Conditioner
Oven Toaster Grill	Mixer Grinder	Storage Water Heater
Pop up Toasters	Juice Extractor	Instant Water Heater
Sandwich Maker	Food Steamer	Immersion Heater
Induction cooker	Chopper	Room Heaters
Electric cooker	Steam Iron	Vaccum Cleaner
Electric Kettle	Dry Iron	Washing Machine
Coffee/Tea Makers	Ceiling Fans	Emergency Light
Hand Blender	Hair Dryer	Stabilizer



Imported by:

Future Retail Limited

Tower C, 9th Floor, 247 Park, L.B.S. Marg, Vikhroli (West),
Mumbai - 400 083, Maharashtra, India.