



## EN NX-7002 HomeText user manual

### HomeText

HomeText is a new way for you to send SMS messages from your mobile phone to control your security system.

#### Sending SMS messages to your security system

1. Create the message.
2. Enter the telephone number given to you by the installer.
3. Send the message

#### Message format

Messages can consist of a password, **commands** and *[values]*.

- Your system can be set up to use a password. If so enter a password before the command.
- Commands are instructions you send to the security system. They are shown in **bold** below.
- *[Values]* are information you want to send or receive from the system. They are shown *italicised* between brackets [ ] below.
- If you need to enter more than one value in a list, they need to be separated by spaces. For example, to bypass zones 2, 4 and 6, send the command **bypass 2 4 6**.
- All these elements are not case-sensitive. No national characters are allowed and should not be used - neither in commands nor in values - for example, you should type **espanol** instead of **Español**.

To Do This	Send This	Explanation	Example
Get your system status	<b>status</b>	Sends the system status to your phone.	<b>status</b>
Arm your system	<b>arm</b> <i>[partition list]</i>	Arms the system remotely. Instead of the partition numbers you can use a keyword ALL for all partitions.	<b>arm 1</b> to arm partition 1 <b>arm 1 3</b> to arm partitions 1 and 3 <b>arm all</b> to arm all partitions
Disarm your system	<b>disarm</b> <i>[partition list]</i>	Disarms the system remotely.	<b>disarm 1</b> to disarm partition 1 <b>disarm 1 3</b> to disarm partitions 1 and 3 <b>disarm all</b> to disarm all partitions
Partarm your system	<b>partarm</b> <i>[partition list]</i>	Partarms the system remotely.	<b>partarm 1</b> to arm partition 1 <b>partarm 1 3</b> to arm partitions 1 and 3 <b>partarm all</b> to arm all partitions
Get the status of the specified zones	<b>zone status</b> <i>[partition list]</i>	Sends the status of the zone (s) to your phone. Sending a command without a partition list returns information for all partitions.	<b>zone status 1</b> to receive the message with zone status from zones assigned to partition 1 <b>zone status all</b> to receive the message with zone status for all zones
Get a list of zones with problems	<b>zone faults</b> <i>[partition list]</i>	Sends a list of zones with problems to your phone. Sending a command without a partition list returns information for all partitions.	<b>zone faults 1</b> to receive fault information from zones assigned to partition 1 <b>zone faults all</b> to receive the message with zone faults for all zones
Bypass zones	<b>bypass</b> <i>[zone list]</i>	Bypasses the specified zones.	<b>bypass 1 3</b> to bypass zones 1 and 3
Read events from the event log	<b>events</b> <i>[number]</i> <b>events</b> <i>[range]</i>	Sends the specified event or events from the event log to the phone.	<b>events 1</b> to read the last (newest) event from the panel log <b>events 1 3</b> to read the last 3 events from the panel log <b>events</b> returns the 10 most recent events
Set a connection to a home automation device	<b>output</b> <i>[output_number X10_house_code X10_unit]</i>	Connects a specified home automation device.	<b>output 2 A 1</b> to set output two to control X-10 device with house code A and unit number 1
Switch on X-10 outputs	<b>on</b> <i>[output list]</i>	Switches on an X-10 output.	<b>on 1 4 7</b> to switch on X-10 outputs 1, 4 and 7 <b>on all</b> to switch on all X-10 outputs

To Do This	Send This	Explanation	Example
Switch off X-10 outputs	<b>off</b> <i>[output list]</i>	Switches off an X-10 output.	<b>off 1 4 7</b> to switch off X-10 outputs 1, 4 and 7 <b>off all</b> to switch off all X-10 outputs
Activate an auxiliary function	<b>switch aux</b> <i>[output list]</i>	Changes the auxiliary function that occurs when it is activated, for example by a button on a keyfob.	<b>switch aux 1</b> to activate aux output 1 on the panel
Change your user code	<b>user code</b> <i>[new user code]</i>	Changes your user code.	<b>user code 0101</b> to change your own user code to 0101
Change another user code	<b>user code</b> <i>[user number new user code]</i>	Changes another persons' user code.	<b>user code 2 0101</b> to change the user code to 0101 for the user 2
Delete a user code	<b>delete user code</b> <i>[user number]</i>	Deletes a user code.	<b>delete user code 2</b> to delete the user code for the user 2
Start reporting	<b>start reporting</b>	Sends reports from the NX7002.	<b>start reporting</b>
Stop reporting until system re-arm	<b>stop reporting</b>	Stops reports being sent from the NX7002 until the system is rearmed.	<b>stop reporting</b>
Stop reporting until you start it again	<b>stop reporting permanent</b>	Stops reports being sent from the NX7002 until the start reporting command is sent.	<b>stop reporting permanent</b>
Register your phone	<b>register</b> <i>[phone number user number]</i>	The phone is registered with your alarm system.	<b>register 32444123456 2</b> to register the number 32444123456 to user 2
Register your phone with a new password	<b>register</b> <i>[phone number user number Password]</i>	The phone is registered with your alarm system with a new password.	<b>register 32444123456 1 444444</b> to register the number 32444123456 to user 1 with a password 444444
To change language	<b>language</b> <i>[language]</i>	The language the SMS texts use is changed. The available arguments (languages) are: English, Dutch, Espanol, Suomi, Italiano, Polska, Portugues, Svenska, Francais, Dansk, Deutsch and Norsk. <b>Note: No national characters are to be used in typed arguments.</b>	<b>language deutsch</b> to change the interface to German
To get a list of SMS commands	<b>help</b>	Sends a list of valid SMS commands to your phone.	<b>help</b>
To get a users details	<b>user details</b> <i>[user number]</i>	Sends the users details to your phone.	<b>user details 2</b> to receive a message with information about user 2
To get the current configuration of outputs	<b>list outputs</b>	Sends a list of how the outputs are currently programmed to your phone.	<b>list outputs</b>
To get a list of users	<b>list users</b>	Sends a list of all currently registered users and their phone numbers.	<b>list users</b>
To disable access from the specified phone	<b>disable phone</b> <i>[phone number]</i>	Disables the SMS system control from the particular phone.	<b>disable phone 32444123456</b> to disable HomeText control from this phone number
To enable access from the specified phone	<b>enable phone</b> <i>[phone number]</i>	Enables a previously disabled SMS system control from the particular phone.	<b>enable phone 32444123456</b> to enable HomeText control from this phone number

To Do This	Send This	Explanation	Example
To change your password	<b>password</b> <i>[new password]</i>	Changes your password.	<b>password 444444</b> to change a password assigned to your phone to 444444
To change another persons SMS password	<b>password phone</b> <i>[phone number new password]</i>	Changes another person's password.	<b>password phone 32444123456 444444</b> to change a password assigned to the number 32444123456 to 444444

#### Receiving SMS messages from your security system

HomeText can be set up to send two types of text messages to your mobile phone.

- Confirmation messages are sent after you send a message. They let you know the message has been received and the command has been carried out.
- Report messages are sent after events. These are similar to the reports in the event log viewed on the keypad.

Message	Meaning
Alarm <b>partition list</b>	There is an alarm in the partitions listed.
Armed <b>partition list</b>	The partitions listed have been armed.
Partarmed <b>partition list</b>	The partitions listed have been part armed.
Disarmed <b>partition list</b>	The partitions listed have been disarmed.
Not ready <b>partition list</b>	The partitions listed cannot be armed.
Partition <b>n</b> Open <b>zone list</b>	The zones listed in this partition are open.
Partition <b>n</b> Bypassed <b>zone list</b>	The zones listed in this partition are bypassed.