

KAMBROOK

THE SMARTER CHOICE



Ceramic
Tower Heater

KCE640

Instruction Booklet

Important

Please retain your instruction book for future use.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on our website at www.kambrook.com.au

Contents

Kambrook Recommends Safety First	p4
Your Ceramic Tower Heater	p6
Quick Start Guide	p7
Using Your Ceramic Tower Heater	p8
Care and Cleaning	p10
Warranty Details	p12

Kambrook Recommends Safety First

IMPORTANT: Please retain your instruction book for future use.

At Kambrook, we believe that safe performance is the first priority in any consumer product, so that you, our valued customer can confidently use and trust our products. We ask that any electrical appliance that you use be operated in a sensible fashion with due care and attention placed on the following important operating instructions.

Important Safeguards For Your Kambrook Ceramic Tower Heater

- Avoid touching heater body while it is on, some parts of the heater are hot. When moving the unit switch off and hold the heater by the handles where provided.
- Keep combustible materials such as drapes and other furnishings at least 1.7 metres from the front, sides and rear of the heater. Do not use heater to dry your laundry.



WARNING: In order to avoid overheating do not cover the heater.

- Extreme caution and supervision is necessary when this heater is used by or near children, invalids or animals.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Important - this heater is intended for floor use only.
- Do not mount on ceiling or walls.
- Do not leave heater unattended. Always switch off the heater at the controls and at the power outlet then unplug heater from the power outlet when not in use.
- Do not operate heater whilst asleep.
- Do not operate any heater with a damaged cord or plug, or if heater has been dropped or damaged in any manner. Return heater to your nearest service centre for examination, electrical or mechanical adjustment or repair.
- Do not use outdoors. This heater is not intended for commercial use, such as construction sites.
- Do not locate the heater immediately below a socket outlet when in use.
- Do not use this heater with a programmer, timer or any other device that switches the heater on automatically. Since a fire risk may exist if the heater is covered or positioned incorrectly.
- This heater is not intended for use in wet or moist locations. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool. Do not immerse or allow liquids to be spilled on heater.
- This heater has hot and arcing or sparking parts inside. Do not use in areas where petrol, paints, aerosols, or other inflammable substances are used or stored.
- Do not operate the heater with the power cord damaged, frayed or split, wound around any part of the heater, or in contact with heated surfaces of the heater.

- Do not allow materials that have been in contact with oil, petroleum based products or drying fluids to come in contact with the heater.
- Do not run the cord under carpeting or cover the cord with rugs, runners or the like. Arrange cord away from traffic areas and where it will not be tripped over.
- To disconnect heater turn the power to OFF, then turn the control switch to off. Turn off at the power outlet then remove the plug from its outlet.
- Do not insert or allow foreign objects to pass through the inlet or outlet openings. This may cause an electric shock, fire or damage the heater.
- To prevent a possible fire or heat damage, allow ample space around the heater (1.7m at front and 0.5m at the rear, top and sides) and do not totally or partially block the air inlet or outlets in any manner. Check the openings from time to time for accumulated dust. Ensure long shag carpet does not obstruct airflow under the unit.
- Do not touch hot surfaces.
- Switch off at the control switch and power outlet, then unplug and allow heater to cool down before cleaning or storing.
- Always move the heater with the handle provided.
- Use this heater only as described in this instruction manual. Any other use not recommended by the manufacturer may cause fire electric shock or injury and voids all warranties.
- Regularly inspect the supply cord, plug, control settings, air inlets and outlets and main housing for any damage. If found damaged in any way, immediately cease use of the heater and return to Kambrook or an authorised service agent for inspection or repair.

NOTE: This Kambrook Ceramic Tower Heater is electronically controlled and will not operate until the heater is plugged into a 230V or 240V power point and switched on.

Important Safeguards For All Electrical Appliances

- Fully unwind the power cord before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Kambrook Service Centre for examination and/or repair, or contact Customer Service on 1300 139 798.
- Any maintenance other than cleaning should be performed at an authorised Kambrook Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

Your Ceramic Tower Heater

1. 2000 watt ceramic heating element
2. LED screen
3. ThermoGuard protection for peace of mind
4. Full featured remote control
5. Ceramic heating elements for efficient heating

Control Panel

6. Convenient 7.5 hr auto-off timer
7. 2 heat settings
8. 75° degree oscillation for warmth throughout the room
9. Power on/off








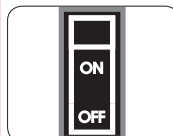
Not Shown

- Convenient carry handle
- Safety tip-over cut-out switch
- Power switch

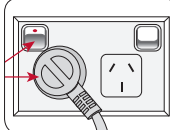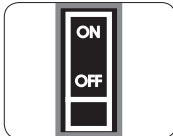

THERMO GUARD
PROTECTED

Quick Start Guide

<p>Turning the heater on</p>			<p>Setting the heating mode</p>	
				
<p>Plug the cord into a 230V or 240V power point and switch on.</p>	<p>Press the Power switch to 'ON' position to switch on.</p>	<p>Press the ON/OFF button to activate.</p>	<p>The heater will start operating at the LOW heat setting.</p>	<p>Press the MODE button to select the HIGH heat setting, and retain a comfortable temperature for your room.</p>
<p>Setting the oscillation</p>	<p>Turning the heater off</p>			
				
<p>Press the SWING button to activate. Press again to stop the oscillation.</p>	<p>Press the ON/OFF button again to place the heater in standby mode and the heater will turn off.</p>	<p>Press the Power switch to 'OFF' position to switch off.</p>		

Hints/Tips to Retain Heat in Your Home

- Don't overheat your home. The temperature of a heated room in winter should be 18-21°C
- Your heater will work more efficiently if you stick to Kambrook's recommended clearance spaces
- Choose the right size heater for the room type you want to heat
- Zone off unoccupied rooms by closing doors and only heat the main living areas
- Fit window coverings like curtains to halve winter heat loss
- Put draft stoppers, such as a rolled up towel, at the bottom of outside doorways to keep out cold air
- Keep the heat in and the cold out by installing wall and ceiling insulation.
- Avoid placing items too close to the heater (both at the front and back) for optimal air flow

Using Your Ceramic Tower Heater

Before First Use

Remove any promotional material or packaging from the heater.


Unwind the cord to its full length and place the heater on a firm, level surface in a stable upright position. Visually inspect the air inlet and outlets to ensure there are no blockages.

When unpacking the heater, check to see you have received the remote control, before discarding the packaging.

Turning Your Heater On

Plug the cord into a 230V or 240V power point and switch on.

NOTE: To avoid an electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your heater, when it is in use.

Turn the heater on by switching the Power ON/OFF  switch located on the back panel of the heater, to the 'ON' position. An audible beep will sound. The heater is now in standby mode.

Using The Remote Control

Your heater may be operated using either the control panel or the remote control.

 
The remote control uses 2 x AAA batteries. To access the battery compartment, simply remove the cover at the rear of the remote control.

To operate, ensure that you point

the remote control at the heater. An audible beep will sound with the press of each button.

Setting the Heating Mode


To activate the heater, press the ON/OFF button. The heater will start operating on the LOW heat setting (1200 watts) and the LOW LED will illuminate. The ON/OFF LED will also illuminate.

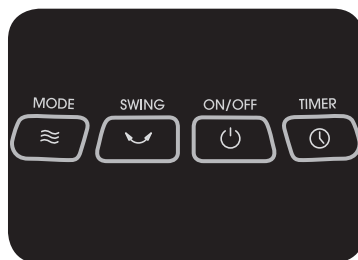

Use the MODE button to select the desired heat setting. The MODE button allows you to select from two heat settings.

HIGH – High heat setting (2000 watts)

LOW – Low heat setting (1200 watts)

Turn the heater off by switching the Power ON/OFF  switch located at the back panel of the heater, to the 'OFF' position.

NOTE: This heater features a tip-over switch. If the heater tips over, it will automatically switch off. Once placed back into the upright position, the heater will be in standby mode, and the settings will need to be selected again.

Setting the Oscillation

The oscillation function works at both operating temperatures.

 
Press the SWING button once to activate. The heater will begin to oscillate from side to side.

Press the SWING button again to stop the heater from oscillating.

Setting the Auto-Off Timer

The timer function works at both operating temperatures, and switches the unit off after a preset number of hours.

Press the TIMER button to activate the timer settings. The 30 minute LED will illuminate.

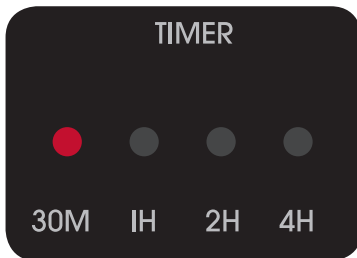

Press the TIMER  button to cycle through the 30 minute and one hour increments, up to 7.5 hours. The heater will then switch itself to standby mode after the selected number of hours has passed.

ThermoGuard Overheating Safety Device

THERMO  GUARD
PROTECTED

Your heater is fitted with a safety device that switches off the heater in the event of overheating. Should this heater stop working, turn off the heater and inspect the air inlet and outlet for blockages. Wait for at least five minutes for the protection system to reset before attempting to restart the heater. If the heater fails to operate or the safety device switches off again, return the heater to your nearest service centre for examination or repair.

Care and Cleaning

Ensure that the heater is switched off and disconnected from the power point before cleaning.

Use a clean, dry cloth to clean the external surfaces of the heater. If the heater has collected dust or dirt inside the unit or around the elements, have the unit cleaned by a qualified service agent. Do not operate the heater in this condition.

Do not attempt to open the case of the heater at any time as there are no customer serviceable parts inside.

When not in use, store the heater (preferably in its original box) in a cool, clean and dry location.

The air filter at the rear of the heater can be easily cleaned by removing the filter casing panel and removing the mesh filter. A basic clean in warm water to remove any build up is adequate and allow time to completely dry before replacing the filter and the filter casing panel.

Notes

Kambrook 12 Month Replacement Warranty

In Australia, this Kambrook Replacement Warranty does not affect the mandatory statutory rights implied under the Trade Practices Act 1974 and other similar State and Territory legislation relating to the appliance. It applies in addition to the conditions and warranties implied by that legislation.

In New Zealand, this Kambrook Replacement Warranty does not affect your mandatory statutory rights implied under the Consumer Guarantees Act 1993 in relation to the appliance. It applies in addition to the conditions and guarantees implied by that legislation.

This Kambrook Replacement Warranty is valid only in the country of purchase, but other statutory warranties may still apply.

This Warranty card and the purchase receipt for this product are to be retained as proof of purchase and must be presented if making a claim under the Kambrook Replacement Warranty. Please note that under any applicable statutory warranty you are not required to produce these documents, but may be required to provide a proof of purchase.

Kambrook warrants the purchaser against defects in workmanship and material for a period of 12 months domestic use from the date of purchase (or 3 months commercial use).

The Kambrook Replacement Warranty does not apply to any defect, deterioration, loss, injury or damage occasioned by, or as a result of, misuse or abuse, negligent handling or if the product has been used other than in accordance with the instructions. The Kambrook Replacement Warranty excludes breakables such as glass and ceramic items, consumable items and normal wear and tear.

This Kambrook Replacement Warranty is void if there is evidence of the product being tampered with by unauthorised persons.

If the product includes one or a number of accessories only the defective accessory or product will be replaced. Subject to your statutory rights, in the event of Kambrook choosing to replace the appliance, the Kambrook Replacement Warranty will expire at the original date, i.e. 12 months from the original date of purchase.

In the event that you need some assistance with your Kambrook appliance, please contact our Customer Service Department on 1300 139 798 (Australia) or 09 271 3980 (New Zealand). Alternatively, visit us on the website at www.kambrook.com.au

Kambrook 12 Month Replacement Warranty

Your Purchase Record (Please Complete)

Attach a copy of the purchase receipt here.

Date Of Purchase _____

Model Number _____

Serial Number _____

(Please don't return purchase record until you are making a claim)

Purchased From _____

Register your warranty at www.kambrook.com.au/service.asp

Kambrook - Australia
 Building 2, Port Air Industrial Estate
 1A Hale Street
 Botany NSW 2019
 Australia
 Customer Service Line 1300 139 798
 Customer Service Fax 1800 621 337

Kambrook - New Zealand
 Private Bag 94411
 Botany, Manukau
 Auckland 2141
 New Zealand
 Customer Service Line/Spare Parts
 0800 273 845 or 09 271 3980
 Customer Service Fax 0800 288 513



Due to continual improvement in design or otherwise, the product you purchase may differ slightly from the illustration in this book. Issue 1/10