



USER MANUAL

ISDB-T/SBTVD DIGITAL TV CONVERTER BOX



ENXTV-DIT

© 2011 Encore Electronics, Inc.





TABLE OF CONTENTS

CHAPTER 1: INTRODUCTION	2
1.1 FEATURES	3
1.2 SYSTEM REQUIREMENTS	3
1.3 SPECIFICATIONS	4
1.4 PACKAGE CONTENTS	4
CHAPTER 2: GETTING STARTED	5
2.1 FRONT REAR PANEL CONNECTOR	5
2.2 REAR PANEL CONNECTORS	5
2.3 FIRST LAUNCH	8
CHAPTER 3: REMOTE CONTROL	9
3.1 INSTALLING BATTERIES	9
3.2 REMOTE CONTROLLER FUNCTIONS	9
CHAPTER 4: USING THE ENXTV-DIT	10
4.1 HOW TO USE THE MAIN MENU	10
4.2 SETTINGS	10
4.3 WATCHING FREE-TO-AIR DIGITAL TV	20
4.4 RUNNING THE RADIO	22
4.5 PLAYING MULTIMEDIA FROM USB STORAGE DEVICES	23
CHAPTER 5: TECHNICAL SUPPORT	25
APPENDIX A: USER'S NOTICE	25

*Product specifications, size, and shape are subject to change without notice,
and actual product appearance may differ from that depicted herein.*

*All trademarks and brand names
are the properties of their respective holders.
© 2010 Encore Electronics, Inc. All rights reserved.*



Chapter 1: Introduction

Enjoy the quality of digital TV without the price of digitizing all your multimedia devices! The truth is, by 2014, analog TV network will be switched off in most countries and old analogue TVs won't work without a signal converter. Encore's ISDB-T/SBTVD Digital TV Converter Box is the solution – just connect the Converter Box between the TV signal source and your TV set, you can now enjoy free-to-air digital TV!

All this means -- clear images and sound quality free from ghosting (double image), fuzziness or snow. You get to keep your old TV set along with all the new features of digital TV, including EPG (electronic program guide), PVR (personal video recorder), and more. You can browse the up-to-date TV guide on your screen or schedule auto program recording at just a push of a button**.

Encore's ISDB-T/SBTVD Digital TV Converter Box also features HDMI and Component outputs (YPbPr) that will satisfy your digital entertainment needs with high definition (HD) image and sound quality*. Enjoy clear videos with resolution of up to 1920x1080.

** HD TV screen is required to display HD signal.*

*** EPG features may vary by region.*



1.1 Features

- ISDB-T / SBTVD full segment TV standard
- The simplest and cost-effective way to experience the benefits of digital TV – keep your old analog TV and receive free-to-air digital TV broadcast
- All things digital – clear pictures free from ghosting, fuzziness and snow; more channels to choose from than analog TV broadcast
- EPG (Electronic Program Guide): always get the up-to-date TV guide on your TV screen or schedule program recordings at the push of a button
- PVR (Personal Video Recorder): save TV shows or movies on external storage device for direct playback
- Parental control: protect your children from inappropriate media contents
- Connectors: AV, component (YPbPr) and HDMI outputs, resolution of up to 1080P
- Selectable output for 1080P, 720P HD format
- Easy firmware upgrade via USB 2.0 Port
- Full function remote control
- Multiple on-screen-display languages: English, Spanish, and Portuguese
- No software / driver required when using USB storage devices as direct input

1.2 System Requirements

- ISDB-T/SBTVD TV signal: over-the-air (RF) signal (a TV antenna is required)
- TV display unit: CRT, LCD TV, Plasma or DLP
- USB external hard drive partition format: FAT32



1.3 Specifications

USB Port	1 x USB 2.0 ports to connect to external USB hard drives, flash drives, or card readers (backward compatible with USB 1.x)
Video Format	1080p, 1080i, 720p, 576p/480p, 576i/480i
Video Output	HDMI, YPbPr, CVBS, S-Video
Audio Output	Stereo sound
Video Format	MPEG4 (*.pvr)
Music Format	MP3
Picture Format	BMP, JPEG
Convenience	Remote control included
Dimensions	260 x 155 x 38 mm (W x D x H)

1.4 Package Contents


- ENXTV-DIT
- Digital TV Antenna
- Full Function Remote control
- Audio / Video cable
- YPbPr cable
- User manual



Chapter 2: Getting Started

ENXTV-DIT cable connection is easy. The most typical cable connections are shown in this chapter.

2.1 Front Rear panel connector

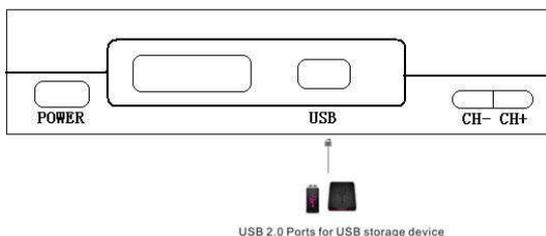

Item	Connector	Function
1.	USB Port	USB Host to connect storage


2.2 Rear panel connectors

Item	Connector	Function
1.	RF input	RF input
2.	RF output	RF output
3.	HDMI	HDMI host
4.	S-Video	4Pin S-video output
5.	CVBS output	RCA jack
	Audio-R output	RCA jack
	Audio-L output	RCA jack
6.	Y	Y carries output
	Pb	Pb carries output
	Pr	Pr carries output
7	AC IN	100~240V Power connector




There are 4 kinds of connections:

(1) HDMI connector:

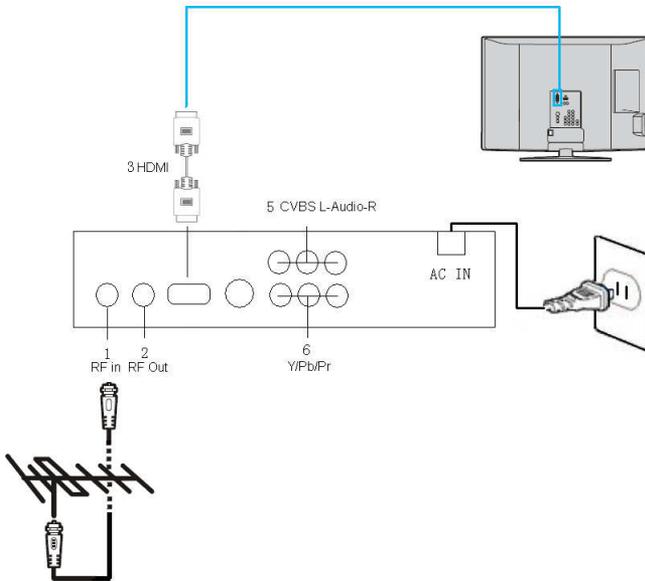


(2) CVBS connector:

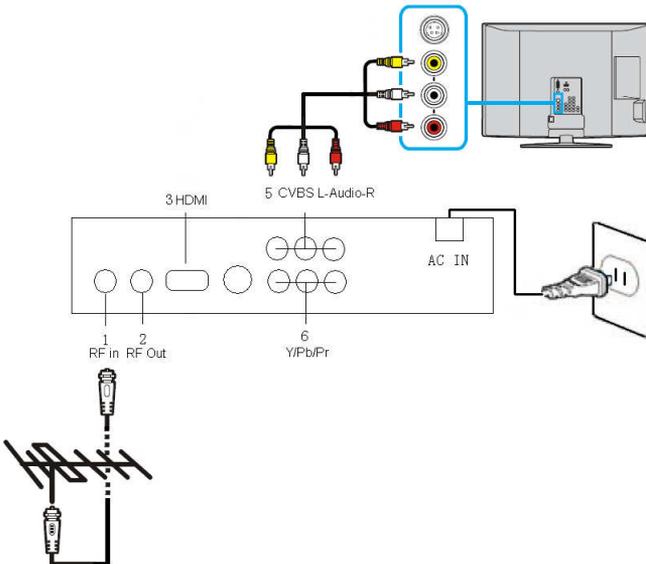




(3) S-video connector:

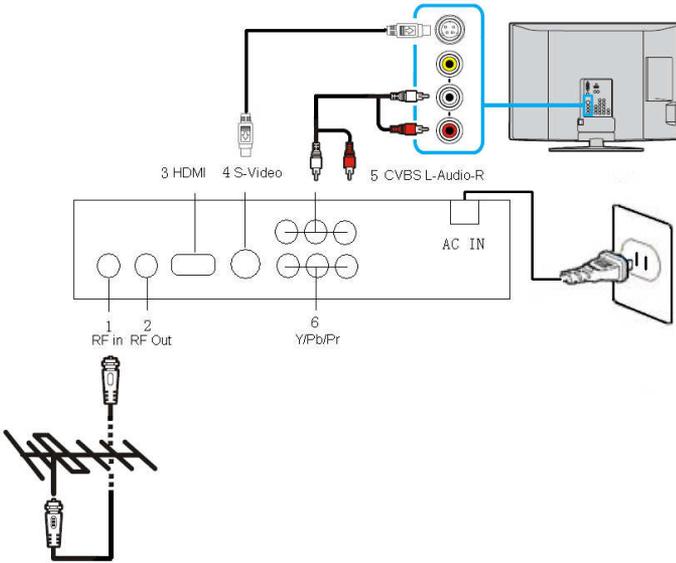

(4) YPbPr connector:

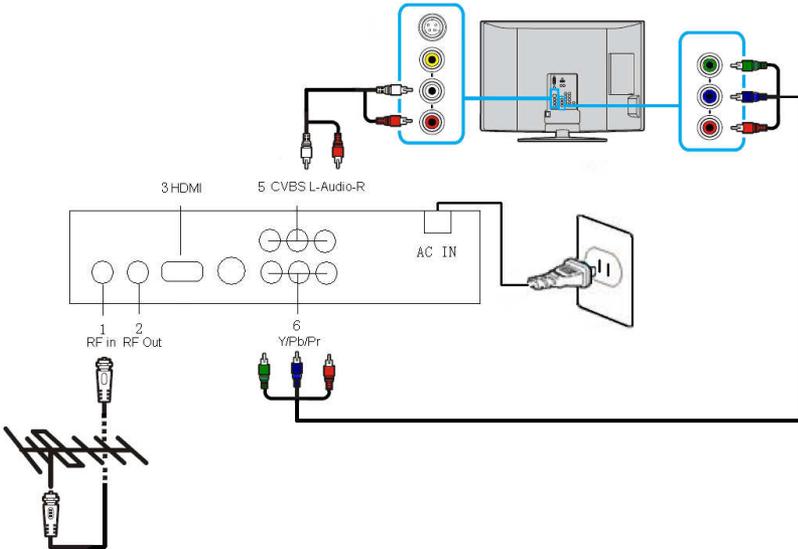



Notes:

We highly recommend you use the outdoor antenna for better signal reception.

2. 3 First Launch

The first time you connect ENXTV-DIT to TV, the setup screen should automatically appear below.



- **OSD Language:**
Please select the system language from the list.
- **LCN: On/Off**
You can choose to use the local channel name (LCN) or not.
- **Start:**
Choose **“Start”** to scanning all TV programs. It will auto scan all channels. After scanning is complete, the first TV program of the Channel list appears.






Chapter 3: Remote Control

The Remote Control allows you to operate ENXTV-DIT remotely. Aim the front of the Remote Control at the Remote Control Receiver window and press the control buttons as you would.

3.1 Installing Batteries

Open the back cover of the remote control and put in two AAA batteries (alkaline battery recommended).

3.2 Remote controller functions

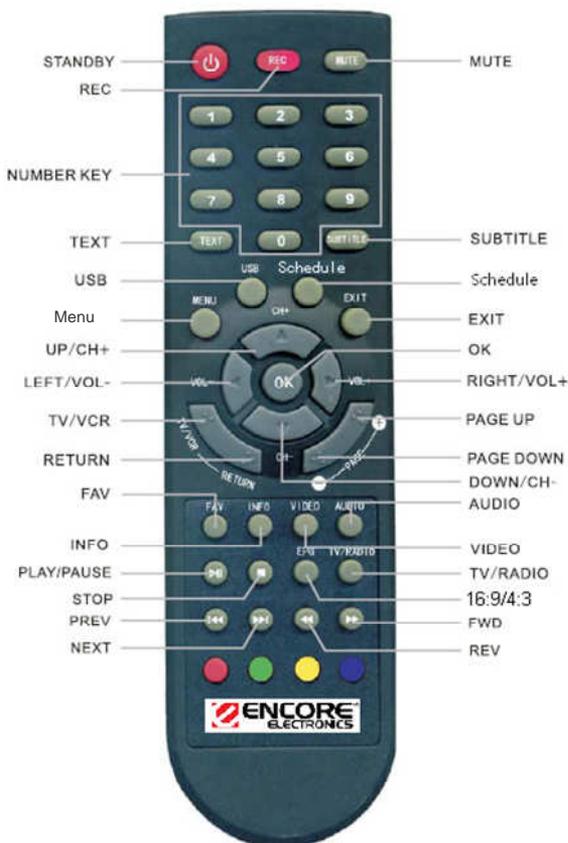




Chapter 4: Using the ENXTV-DIT

In this section the ENXTV-DIT Main Menu and its operations will be discussed here.

4.1 How to use the Main Menu

Press the MENU button on the remote control to get to this screen.

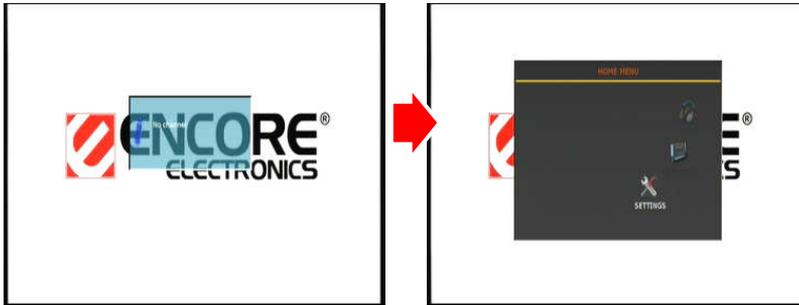

- Use direction buttons on remote control to move the cursor to the desired item.
- Click “OK” button on the remote control to confirm the setting.
- Use the **EXIT** button to return to the page or exit from the main menu.

4.2 Settings

Press the MENU button on the remote control to get to this screen. Then select “**Settings**” to set up the following: System Setup, Video Settings, Audio Settings, Installation, Channel Edit.





System Setup

By selecting “System setup”, you can change the settings of:




- **OSD Language**

There are three on-screen display languages to choose from: English, Spanish, and Portuguese. (Default: English)



- **Country**

You can select your country from the list. (Default: Brazil)

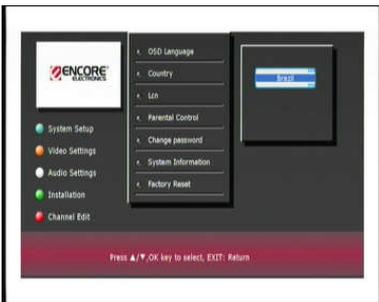



- **LCN (Local Channel Name):** On/Off

It will give you an option to scan for local channel names. (Default: Off)




- **Parental Control:** On/Off

You can protect your children from certain TV channels by setting a password:



- **Change password:**


You can change password any time.

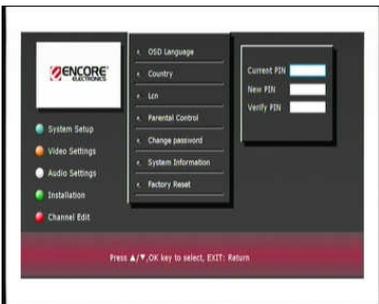



- **System Information:**

Display system information.

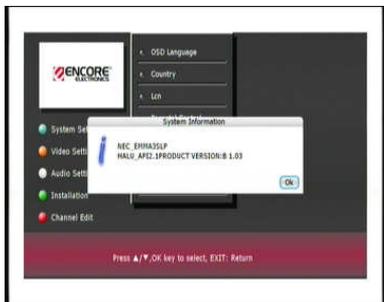


- **Factory Reset: Yes/No**

Reset to default settings if you would like to eliminate all the above changes you have made.



Video Settings

By selecting “Video Settings”, you can change the settings of:

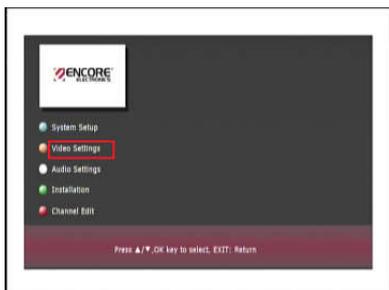



- **TV System:** PAL or NTSC

Select the TV system, according to AV output of your TV. (Default: NTSC)



- **HD Output :** 1080p, 1080i, 720p, 576p/480p, 576i/480i

Select HD Output according to your HDMI or YPbPr output. (Default: 1080i)



- **Screen Ratio:** 4:3/16:9

Select the screen ratio based on your TV screen ratio. (Default: 16:9)






- **Aspect Conversion:** Letter BOX, Pascan or FULL
Select a screen display mode according to signal mode. (Default: Letter BOX)




Audio Settings

By selecting “Audio Settings”, you can change the settings of:

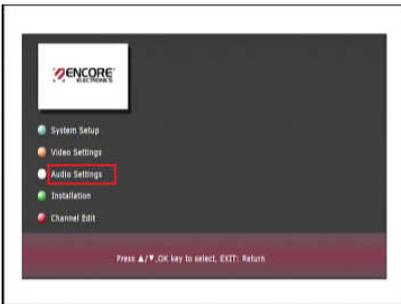

- **LR Mode**
Set the audio mode to Stereo, Left or Right. (Default: Stereo)

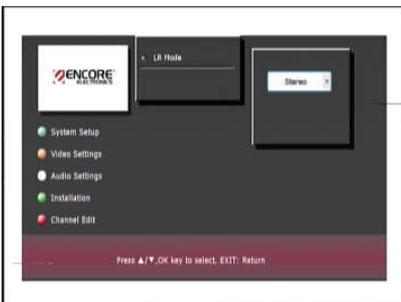




Installation

By selecting “Installation”, you can do the following:





- **Manual Search:**

If you want to add new channels in list, you can search for channels manually by channel numbers and frequency.

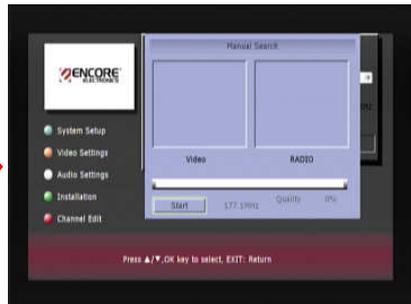

- **Auto Search:**


Or you can set it to auto search for new channels.

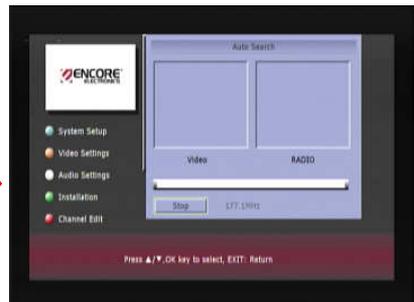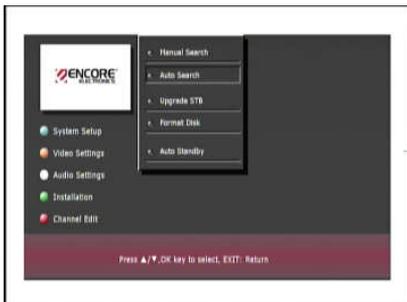



- **Upgrade STB:**

You can also upgrade the firmware by the following steps:

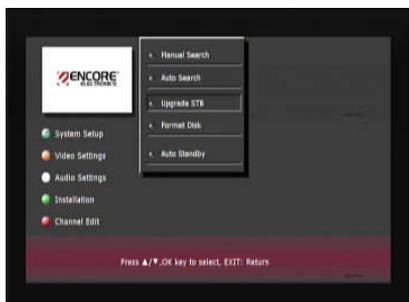

1. Please download the last firmware from our website (www.encore-usa.com).
2. Unzip this file to a USB storage device or memory card and plug it to the USB port on the front of the TV converter box.


Note:


The file name may sure is “NEC_EMMA3SLP.UPG”

3. Press “**MENU**” on the remote control and then select “**Settings**”.
4. Select “**Installation**” and then select “**Upgrade STB**”.
5. Press “**OK**”. The system will upgrade automatically after showing “**Read Upgrade File**”
6. Once it is finished, the system will reboot automatically.

- **Format Disk:**

You can format your USB storage devices in order to use it with the TV converter box.

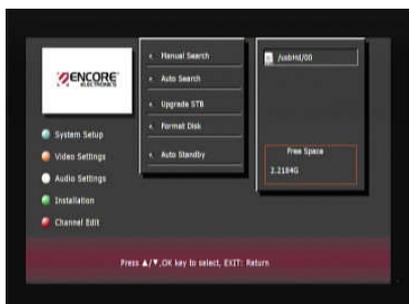

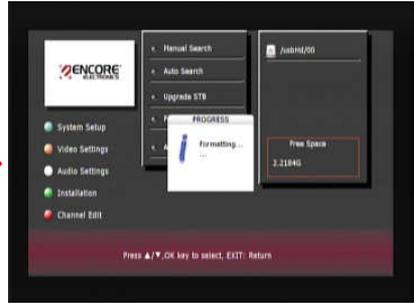

- **Auto standby:** On/Off (Default: On)
If you choose auto standby, it will auto power off after 3 hours.




Channel Edit

By selecting “Channel Edit”, you can edit your favorite TV channels/ Radio channels.





or

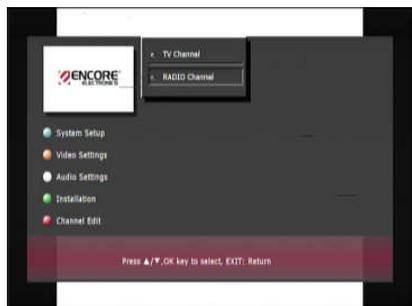



Use the color buttons to make selection:

- **Favorite:**
Use red color button on remote control to add your favorite channels in favorite groups list.

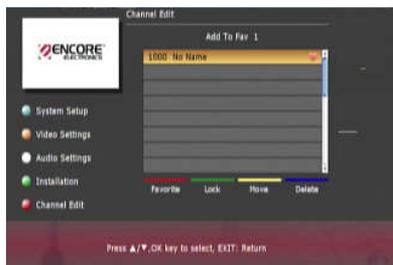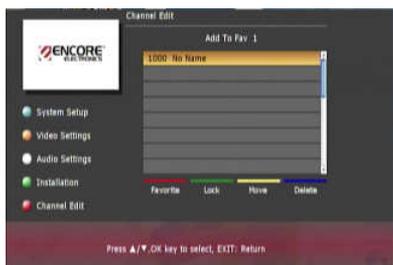

- **Lock:**

Use green color button on remote control to set certain TV channels only watched by password.

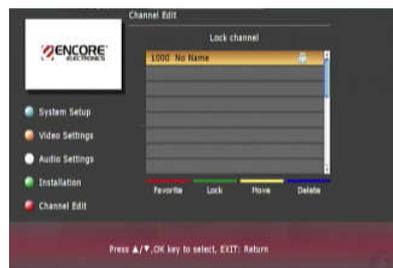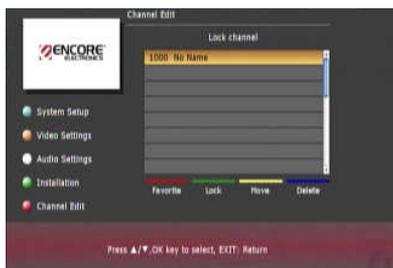

And then system will ask you input the password. (Prompt: 1234)



- **Move:**

Use yellow color button on remote control to arrange the order in channels list.

- **Delete:**

Use blue color button on remote control to delete the channel from the list.



4.3 Watching Free-to-air Digital TV

Aim the front of remote control at the remote control receiver and press the control buttons as you would on the IR receiver.

(1) You can press the **“TV/Radio”** button or press the **“menu”** button and then select **“Television”** to start watch TV program.



(2) Use **Up/Down** direction buttons on remote control to move the cursor to the desired TV channel around the menu screen and click **“OK”** button on the remote control to confirm.



You can press **REC** button on remote control to record TV programs.

Note:

Please connect your USB storage device to ENXTV-DIT USB port before starting the record. The mpeg4 record file name with **“*.pvr”** will store on record Path. (Default: `//hdd0/pvr`)



You can press **Subtitle** button on remote control:

Subtitle feature depends on television broadcast used in different regions. There are 3 types can select: Standard/Teletext/Off (Default: Off)



You can press **EPG** button on remote control:

EPG feature depends on television broadcast used in different regions. You can see the TV broadcast schedules and detail descriptions on TV EPG window. You also can schedule recording and then you will never miss your favorite shows.






4.4 Running the Radio

(1) You can press the **“TV/Radio”** button or press the **“menu”** button and then select **“Radio”**




(2) Use **“Up/Down”** direction buttons on remote control to move the cursor to the desired Radio channel around the menu screen and click **“OK”** button on the remote control to confirm.

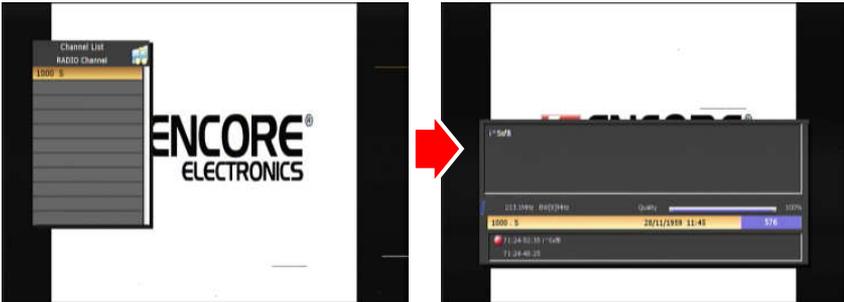






4.5 Playing Multimedia from USB storage devices

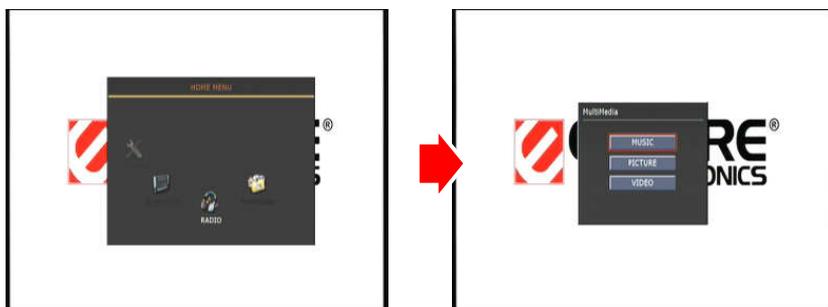

You can play recorded movies, pictures and music files directly from USB storage devices, including USB hard drives, flash drives or memory card readers.

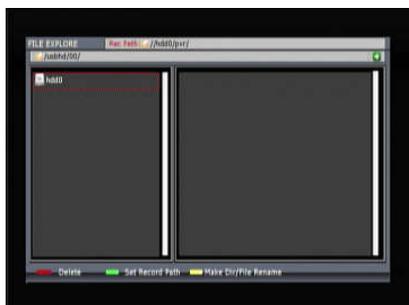

- **Delete:**
Press red color button on remote control. You can delete the directory or file on USB storage devices.
- **Set Record Path**
Press green color button on remote control. You can change the path which to save the record files on USB storage devices. (Default: //hdd0/pvr)

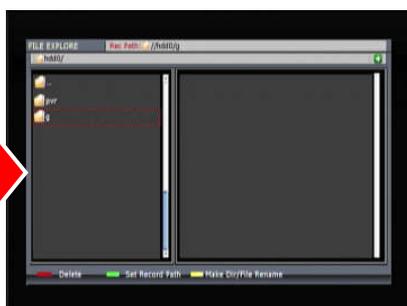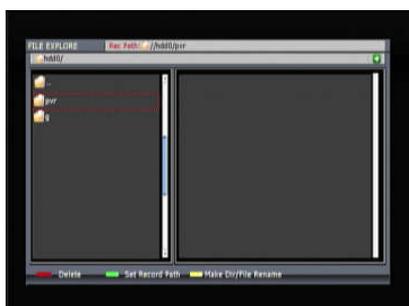




- Make Dir/File Rename

Press yellow color button on remote control. You can make directory on USB storage devices.



Or select the file to rename it.

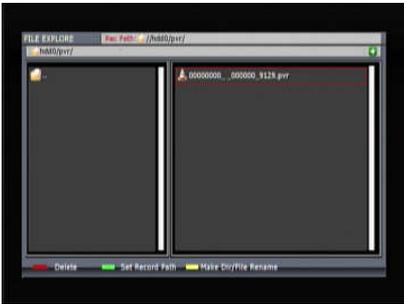



Chapter 5: Technical Support

Please visit www.encore-usa.com for the latest product information and downloads.

International tech support hotlines are listed on the back cover

Appendix A: User's Notice

This manual is provided “as is” without warranty of any kind, either express or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose. In no event shall we, its directors, officers, employees or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of use or data, interruption of business), even if we have been advised of the possibility of such damages arising from any defect or error in this manual or product.

Specifications and information contained in this manual are furnished for information use only, and are subject to change at any time without notice, and should not be construed as a commitment by us. We assume no responsibility or liability for any errors or inaccuracies that may appear in this manual, including the products and software described in it.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of us.

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by us; or (2) the serial number of the product is defaced or missing.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

- Windows, MS-DOS, and DirectX are registered trademarks of Microsoft Corporation.
- Adobe and Acrobat are registered trademarks of Adobe Systems Incorporated.

The product name and revision number are both printed on the product itself. Manual revisions are released for each product design represented by the digit before and after the period of the manual revision number. Manual updates are represented by the third digit in the manual revision number.



Our local tech support specialists are ready to help you.



LIVE*
SUPPORT

Argentina

Buenos Aires
+54 11-6632-2120
Córdoba
+54 35-1568-1873
soporte.argentina@encore-usa.com

Brazil

+55 11-3958-3829
soporte.brasil@encore-usa.com

Chile

+56 2-581-4903
soporte.chile@encore-usa.com

Colombia

+57 1-381-9274
soporte.colombia@encore-usa.com

México

+52 55-2789-5414
soporte.mexico@encore-usa.com

Perú

+51 1-708-5421
soporte.peru@encore-usa.com

Philippines

+63-2-444-9054
support.philippines@encore-usa.com

USA

+1 626-606-3108
support@encore-usa.com

Spain

+34 912-919-405
soporte.espana@encore-usa.com

Venezuela

+58 212-335-7530
soporte.venezuela@encore-usa.com

Rest of Latin America

soporte.latinamerica@encore-usa.com

* Local technical support numbers are provided in selected countries. Service availability and hours may change without prior notice. Please visit www.encore-usa.com for more details.



www.encore-usa.com

