



SGH-E890 User's Guide





Important safety precautions



Failure to comply with the following precautions may be dangerous or illegal.

Drive safely at all times

Do not use a hand-held phone while driving. Park the vehicle first.

Switch off the phone when refuelling

Do not use the phone at a refuelling point (service station) or near fuels or chemicals.

Switch off in an aircraft

Wireless phones can cause interference. Using them in an aircraft is both illegal and dangerous.

Switch off the phone near all medical equipment

Hospitals or health care facilities may be using equipment that could be sensitive to external radio frequency energy. Follow any regulations or rules in force.

Interference

All wireless phones may be subject to interference, which could affect their performance.



Be aware of special regulations

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.


Water resistance

Your phone is not water-resistant. Keep it dry.

Sensible use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

Emergency calls

Key in the emergency number for your present location, then press .

Keep your phone away from small children

Keep the phone and all its parts, including accessories, out of the reach of small children.

Accessories and batteries

Use only Samsung-approved batteries and accessories, such as headsets and PC data cables. Use of any unauthorized accessories could damage you and your phone and may be dangerous.

- The phone could explode if the battery is replaced with an incorrect type.
- Dispose of used batteries according to the manufacturer's instructions.



At very high volumes, prolonged listening to a headset can damage your hearing.

Qualified service

Only qualified service personnel may repair your phone.

For more detailed safety information, see "Health and safety information" on page 131.

About this Guide

This User's Guide provides you with condensed information about how to use your phone. To quickly learn the basics for your phone, please refer to "Get started" and "Step outside the phone."

In this guide, the following instruction icons appear:



Indicates that you need to pay careful attention to the subsequent information regarding safety or phone features.




Indicates that you can get more information on the referenced page.



Indicates that you need to press the Navigation keys to scroll to the specified option and then select it.



Indicates a key on the phone.
For example, []



Indicates a soft key, whose function is displayed on the phone screen. For example, <**Menu**>



- **Camera and camcorder**
Use the camera module on your phone to take a photo or record a video.

Special features of your phone



- **Music player**
Play music files using your phone as a music player.



- **Bluetooth**
Transfer media files and personal data and connect to other devices using free, wireless Bluetooth technology.



- **Phone to TV**

View photos and video clips captured with the phone on your TV screen.



- **Digital data printing**

Print images, messages, and other personal data directly from your phone.



- **Multimedia Message Service (MMS)**

Send and receive MMS messages with a combination of text, images, video, and audio.



- **Offline mode**

Switch your phone to use its none-wireless function in an airplane.



- **E-mail**

Send and receive e-mails with image, video, and audio attachments.



- **Java**

Enjoy Java™-based embedded games and download new games.



- **Alarm**

Use your phone as an alarm clock to wake you up in the morning or notify you of an impending event.

Contents

Unpack	6
<hr/>	
<i>Make sure you have each item</i>	
Your phone	6
<hr/>	
<i>Keys, features, and locations</i>	
Get started	7
<hr/>	
<i>First steps to operating your phone</i>	
Install and charge the phone	7
Power on or off.....	8
Keys and display.....	9
Access menu functions	12
Use the stylus pen	13
Customise your phone.....	14
Make/Answer calls	17
Step outside the phone	18
<hr/>	
<i>Begin with your camera, the web, and other special features</i>	
Use the camera	18
4 Play music files.....	19

Browse the web	20
Use Phonebook.....	21
Send messages	23
View messages.....	25
Send an SOS message.....	26
Use Bluetooth wireless.....	27
Watch the phone display on a TV	28
Use a memory card	30
Enter text	32
<hr/>	
<i>Handwriting, Keypad, and Keyboard modes</i>	
Call functions	38
<hr/>	
<i>Advanced calling features</i>	
Menu functions	43
<hr/>	
<i>All menu options listed</i>	
Solve problems	129
<hr/>	
<i>Help and personal needs</i>	
Health and safety information	131
<hr/>	
Index	140
<hr/>	

Overview of menu functions

To access Menu mode, select **<Menu>** in Idle mode.

1 Call log	p. 43	3 Applications (continued)		5 Messages (continued)		8 Camera	p. 108
1 Recent contacts	p. 43	3 Image editor	p. 57	5 Settings	p. 83	1 Take a photo	p. 108
2 Missed calls	p. 44	4 Bluetooth	p. 59	6 SOS message	p. 90	2 Record video	p. 112
3 Dialed calls	p. 44	5 Java world	p. 62	7 Broadcast messages	p. 91	3 Go to My photos	p. 114
4 Received calls	p. 44	6 Games	p. 63	8 Memory status	p. 92	4 Go to My video clips	p. 115
5 Delete all	p. 44	7 Dictionary	p. 63				
6 Call time	p. 45	8 PenMemo	p. 65	6 My files	p. 92	9 Settings	p. 115
7 Call costs ¹	p. 45	9 SIM-AT ¹	p. 67	1 Images	p. 93	1 Time and date	p. 115
2 Phonebook	p. 46	4 Browser	p. 67	2 Videos	p. 94	2 Phone settings	p. 115
1 Contact list	p. 46	1 Home	p. 67	3 Music	p. 96	3 Display settings	p. 118
2 FDN contacts ¹	p. 47	2 Bookmarks	p. 69	4 Sounds	p. 96	4 Sound settings	p. 119
3 Create contact	p. 47	3 Enter URL	p. 69	5 Other files	p. 97	5 Touch settings	p. 121
4 Group	p. 49	4 Clear cache	p. 69	6 Memory card ²	p. 98	6 Light settings	p. 121
5 Speed dial	p. 49	5 Profile settings	p. 70	7 Memory status	p. 99	7 Network services	p. 122
6 My namecard	p. 50	6 Current profile	p. 71	7 Planner	p. 99	8 Security	p. 125
7 Own number	p. 51	5 Messages	p. 71	1 Alarm	p. 99	9 Memory status	p. 127
8 Management	p. 51	1 Create new message	p. 71	2 Calendar	p. 100	10 Reset settings	p. 127
9 Service number ¹	p. 51	2 My messages	p. 76	3 Memo	p. 104	11 Key management	p. 128
3 Applications	p. 52	3 Templates	p. 82	4 World clock	p. 105		
1 Music player	p. 52	4 Delete all	p. 83	5 Calculator	p. 106		
2 Voice recorder	p. 55			6 Convertor	p. 106		
				7 Timer	p. 107		
				8 Stopwatch	p. 107		

1. Shows only if supported by your SIM card.
2. Shows only if a memory card is inserted into the phone.

Unpack

Make sure you have each item

- Phone
- Travel adapter
- Battery
- User's Guide

 
You can obtain various accessories from your local Samsung dealer.



The items supplied with your phone and the accessories available at your Samsung dealer may vary, depending on your country or service provider.

Your phone

Keys, features, and locations

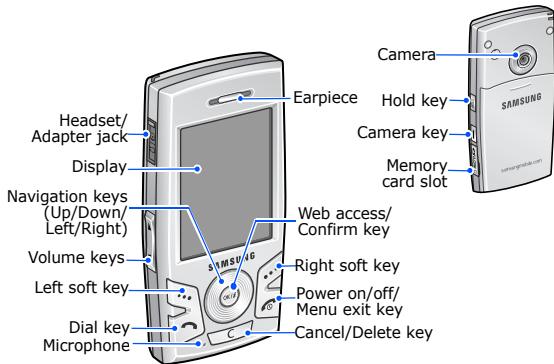

Get started

First steps to operating your phone


SIM card information

When you subscribe to a cellular network, you receive a plug-in SIM (Subscriber Identity Module) card loaded with your subscription details, such as your PIN, and available optional services.

Install and charge the phone

- 1 Remove the battery cover.



 
If the phone is already on, first turn it off by pressing and holding [].




- 2 Insert the SIM card.



Make sure that the gold-coloured contacts are face down.

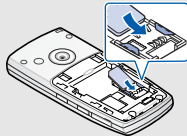


- 3 Install the battery.

 

- 4 Reattach the battery cover.



 
- 5 Plug the travel adapter into the phone.



- 6 Plug the adapter into a standard AC power outlet.


- 7 When the phone is completely charged (the battery icon becomes still), unplug the adapter from the power outlet.

 - 8 Remove the adapter from the phone.



Low battery indicator

When the battery is low:

- a warning tone sounds,
- the low battery message displays, and
- the empty battery icon  blinks.

If the battery level becomes too low, the phone automatically turns off. Recharge your battery.

Power on or off


Switch on

1. Press and hold [].

Do not turn on the phone when mobile phone use is prohibited.

2. If necessary, enter the PIN and select **<OK>**.

Switch off

Press and hold [].

Key Lock mode

When you press and hold [**HOLD**], the key lock feature locks the exposed keys to prevent accidental key presses from affecting phone operations.

To unlock the keypad, press and hold [**HOLD**].

Offline mode

You can switch the phone to Offline mode, in which the phone functions requiring network connection are deactivated. This mode is helpful when you want to use your phone in a place where you are not allowed to use mobile devices, such as in an airplane and at a hospital.

To switch to Offline mode, select <**Menu**> → **Settings** → **Phone settings** → **Offline mode** → **On**.

In Offline mode, you can use non-wireless functions, such as games, calendar, camera, and music player.

Keys and display

Keys



Perform the function indicated on the bottom line of the display.



In Idle mode, access your favourite menus directly. ► p. 116
In Menu mode, scroll through menu options.



In Idle mode, launch the web browser.
In Menu mode, select the highlighted menu option or confirm input.



Send or answer a call.
In Idle mode, retrieve numbers recently dialed, missed, or received.



Delete characters from the display or items in an application.



Press and hold to switch the phone on and off.

End a call.

In Menu mode, cancel input and return the phone to Idle mode.



Adjust the phone volume.

In Idle mode, adjust the key tone volume.

In Menu mode, scroll through the menu options.



In Idle mode, access the **Camera** menu. Press and hold to turn on the camera.

 
In Camera mode, take a photo or record a video.



In Idle mode, lock the exposed keys when held down.

Display

Layout

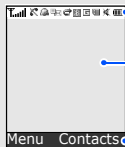

Icons

display various icons.

Text and graphics

display messages, instructions, and information you enter.

Soft key function indicators

show the current functions assigned to the soft keys.

Icons¹



Received signal strength
















Call in progress
















Out of your service area; you cannot make or receive calls



SOS message feature active ▶ p. 90

-  Alarm set ▶ p. 99
-  New text message
-  New multimedia message
-  New e-mail
-  New voicemail
-  One of the message Inboxes is full
-  Call diverting feature active
▶ p. 122
-  Bluetooth active ▶ p. 59
-  Synchronised with a PC
-  GPRS network
-  EDGE network
-  Home zone, if registered for the appropriate service
-  Office zone, if registered for the appropriate service

-  Roaming network
-  Music playback in progress
-  Music playback paused
-  Memory card inserted
▶ p. 31
-  Silent mode (Vibration)
-  Silent mode (Mute)
-  Ringer type ▶ p. 119
 -  : Melody
 -  : Vibration
 -  : Melody and vibration
 -  : Vibration then melody
 -  : Melody then vibration
-  Battery power level

1. You can select some icons by tapping. Tap an icon to open a message or change settings.

Access menu functions

Use the soft keys

The roles of the soft keys vary depending on the function you are using. The bottom line of the display indicates their current role.



Press the left soft key to select the highlighted option.

Press the right soft key to return to the previous menu level.

Select an option

By tapping on the touch screen:

Your phone's display is a touch screen which can recognise when you touch items displayed on it.

1. Tap a desired soft key indicator.
2. To scroll up or down or side to side:
 - Tap the left or right arrow to scroll left or right.
 - Tap and drag the scroll bar to scroll up or down.
3. Tap a desired option or function.

 
By pressing the soft keys and Navigation keys:

1. Press a desired soft key.
 2. Press the Navigation keys to move to the next or previous option.
 3. Choose **<Select>** or press [OK/↵] to confirm the function displayed or option highlighted.
 4. To exit, choose either of the following methods.
 - Select **<Back>** to move up one level.
 - Press [⏪] to return to Idle mode.
- From the screen supporting **<Options>**, you can open an option list by tapping and holding an item.

Use the stylus pen

A stylus pen is supplied with your phone to let you tap and write on the touch screen.

1. Remove the stylus pen cover.

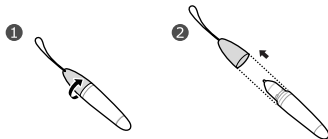

2. Expand the stylus pen.



3. Use the stylus pen, holding it as you would with a pen or pencil.



- Always use a Samsung authorised stylus pen for tapping or for making strokes on the phone screen. Never use an actual pen, pencil, or other sharp object to write on the phone screen as this will scratch the screen.
- Do not push or tap the screen strongly with the stylus pen.

Customise your phone

Display language

1. In Idle mode, select **<Menu>** → **Settings** → **Phone settings** → **Language**.
2. Select a language.

Call ringer melody

1. In Idle mode, select **<Menu>** → **Settings** → **Sound settings** → **Incoming call** → **Ring tone**.
2. Select a ringtone category.
3. Select a ringtone.
4. Select **<Save>**.

Idle mode wallpaper

You can set wallpaper for the idle screen on the display.

1. In Idle mode, select **<Menu>** → **Settings** → **Display settings** → **Wallpaper** → **Wallpaper**.
2. Select an image category.
3. Select an image.
4. Select **<Save>**.

Menu mode skin colour

You can change the colour for the display components, such as title bars and highlight bars.

1. In Idle mode, select **<Menu>** → **Settings** → **Display settings** → **Skin**.
2. Select a colour pattern.

Menu shortcuts

You can set the Navigation keys to function as shortcuts to access your favourite menus.

1. In Idle mode, select **<Menu>** → **Settings** → **Phone settings** → **Shortcuts**.
2. Select a key.
3. Select a menu to be assigned to the key.

Shortcut icons

You can set up a menu for your own favourite menu items.

To set a shortcut item:


1. In Idle mode, select **<Menu>** → **Settings** → **Phone settings** → **Idle shortcuts**.
2. Select an item.
3. Select **<Save>**.

To access a shortcut item:

In Idle mode, select the desired item.

Silent mode

You can switch the phone to Silent mode to avoid disturbing other people.

In Idle mode, select  and tap and hold #.

Phone lock

You can protect the phone against unauthorised use with a phone password. The phone will require the password on power-up.

1. In Idle mode, select **<Menu>** → **Settings** → **Security** → **Change password**.
2. Enter the default password, **0000000**, and select **<OK>**.
3. Enter a new 4-digit to 8-digit password and select **<OK>**.
4. Enter the new password again and select **<OK>**.





-
5. Select **Phone Lock**.
 6. Select **Enable**.
 7. Enter the password and select **<OK>**.

Adjust the volume during a call



Press [▲ / ▼].

Make/Answer calls

Make a call

1. In Idle mode, select .
2. Enter an area code and phone number.
3. Tap  or press [].
4. To end the call, press [].

Answer a call


1. When the phone rings, press [].
2. To end the call, press [].

Step outside the phone

Begin with your camera, the web, and other special features

Use the camera



Take a photo

1. In Idle mode, press and hold [Camera] to turn on the camera.
2. Aim the lens at the subject and make any desired adjustments.
3. Select  on the bottom of the display or press [OK/ⓘ] or [Camera] to take a photo. The photo is saved automatically.
4. Select <Back> to take another photo.

View a photo

1. In Idle mode, select <Menu> → **My files** → **Images** → **My photos**.
2. Select the photo you want.

Record a video

1. In Idle mode, press and hold [Camera] to turn on the camera.
2. Select  on the top line of the display to switch to Record mode.
3. Select  at the bottom of the display, or press [OK/ⓘ] or [Camera] to start recording.
4. Select <⏏> or press [Camera] to stop recording. The video is saved automatically.
5. Select <⏪> to record another video.

Play a video

1. In Idle mode, select **<Menu>** → **My files** → **Videos** → **My video clips**.
2. Select the video clip you want.

Play music files**Copy music files to the phone**




Use these methods:

- Download from the wireless web ▶ p. 67
- Download from a computer using Samsung PC studio ▶ Samsung PC studio User's guide
- Receive via Bluetooth ▶ p. 62
- Copy to a memory card and insert the card into the phone ▶ p. 31

Create a play list

1. In Idle mode, select **<Menu>** → **Applications** → **Music player**.
2. Select **<Options>** → **Add music from** → **Phone** or **Memory card**.
3. Select the files you want → **<Add>**.

Play music files

1. From the music player screen, select  or press [OK/Menu].
2. During playback, use the following keys and icons:
 - OK/Menu/ : pauses playback.
 - OK/Menu/ : resumes playback.
 - Up: opens the current album list.

Play music files (continued)

- Left: returns to the previous file. Moves backward in a file when held down.
 - Right: skips to the next file. Skips forward in a file when held down.
 - ▲ / ▼ : adjusts the volume.
3. Press [Down] to stop playback.


Browse the web

Using the built-in web browser, you can easily access the wireless web to get a variety of up-to-date services and information and to download web content.

Launch the web browser

In Idle mode, press [OK/⌂].


Navigate the web

- To scroll through browser items, press [Up] or [Down].
- To select an item, select <✓> or press [OK/⌂].
- To return to the previous page, select <Back> or press [C].
- To return to the homepage, press and hold [C].
- To access browser options, select .


Use Phonebook

Add a contact

To the phone's memory:

1. In Idle mode, select .
2. Enter a phone number and press [OK/↵].
3. Select **Phone** → **New** → a number type.
4. Specify the contact information: First name, Last name, Mobile, Home, Office, Fax, Other, Email, Graphic ID, Ringtone, Group, Anniversary, and Notes.
5. Select <**Options**> → **Save** to save the contact.

To the SIM card:

1. In Idle mode, select .
2. Enter a phone number and press [OK/↵].
3. Select **SIM** → **New**.
4. Tap the text input field.
5. Enter a name and press [OK/↵].
6. Select <**Save**> to save the contact.

Find a contact

1. In Idle mode, select **<Contacts>**.
2. Select **<Change>**.
3. Enter the first few letters of the name you want and press [OK/⏏].
4. Select a contact.
5. Scroll to a number and press [↶] to dial, or [OK/⏏] to edit the contact information.

Create and send a name card

1. In Idle mode, select **<Menu>** → **Phonebook** → **My namecard**.
2. Specify your contact information.
3. Select **<Options>** → **Save** to save the name card.
4. To send the name card, select **<Options>** → **Send via** → a sending method.

Send messages

Send a text message (SMS)

1. In Idle mode, select **<Menu>** → **Messages** → **Create new message** → **Text message**.
2. Enter the message text and press [OK/ⓘ].
3. Select a destination field.
4. Enter a destination number and press [OK/ⓘ].
5. Select **<Options>** → **Send** to send the message.

Send a multimedia message (MMS)

1. In Idle mode, select **<Menu>** → **Messages** → **Create new message** → **Multimedia message**.
2. Select **Subject**.
3. Enter the message subject and press [OK/ⓘ].
4. Select **Image or video** or **Music or sound**.
5. For **Image or video**, select **Add image** or **Add video** and add an image or a video clip.
For **Music or sound**, select **Add music** or **Add sound** and add a music file or a sound clip.

Send a multimedia message (MMS)
(continued)

6. Select **Text**.
7. Enter the message text and press [OK/↵].
8. Select <**Options**> → **Send**.
9. Select a destination field.
10. Enter a destination number or an e-mail address and press [OK/↵].
11. Select <**Options**> → **Send** to send the message.

Send an e-mail

1. In Idle mode, select <**Menu**> → **Messages** → **Create new message** → **Email**.
2. Select **Subject**.
3. Enter the e-mail subject and press [OK/↵].
4. Select **Message**.
5. Enter the e-mail text and press [OK/↵].
6. Select **File attach**.
7. Add image, video, sound, music files, or document files.
8. Select <**Options**> → **Send**.
9. Select a destination field.

-
10. Enter an e-mail address and press [OK/↵].
 11. Select <Options> → **Send** to send the e-mail.

View messages

View a text message

When a notification appears:

1. Select <View>.
2. Select the message from the Inbox.

From the Inbox:

1. In Idle mode, select <Menu> → **Messages** → **My messages** → **Inbox**.
2. Select the text message (✉).

View a multimedia message

When a notification appears:

1. Select <View>.
2. Select the message from the Inbox.

From the Inbox:

1. In Idle mode, select <Menu> → **Messages** → **My messages** → **Inbox**.
2. Select the MMS message (✉).

View an e-mail

1. In Idle mode, select **<Menu>** → **Messages** → **My messages** → **Email inbox**.
2. Select **Check new mail**.
3. Select an e-mail or header.
4. If you selected a header, select **<Options>** → **Retrieve** to view the body of the e-mail.

Send an SOS message

You can send an SOS message to your family or friends for help in an emergency.

Set up SOS message options

1. In Idle mode, select **<Menu>** → **Messages** → **SOS message**.
2. Select **Yes** on the **Message sending** field.
3. Select **Recipients**.
4. Select a destination field.
5. Enter the phone number to which you want to send the SOS message and select **<Save>**.
6. Select **<Options>** → **Save** to save your settings.

Send the SOS message

In Idle mode, press [▲ / ▼] 4 times when the keypad is locked.

The phone sends the SOS message.

Use Bluetooth wireless

Your phone is equipped with Bluetooth technology, enabling you to connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone by remote control.

Turn on Bluetooth

In Idle mode, select **<Menu>** → **Applications** → **Bluetooth** → **Activation** → **On**.

Search for and pair with a Bluetooth device

1. In Idle mode, select **<Menu>** → **Applications** → **Bluetooth** → **My devices** → **Search new device**.
2. Select a device.
3. Enter a Bluetooth PIN or the other device's Bluetooth PIN, if it has one, and select **<OK>**.
When the owner of the other device enters the same code, pairing is complete.

Send data

1. Access an application, **Phonebook**, **My files**, **Calendar**, or **Memo**.
2. Select the item you want to send.
3. Select **<Options>** → **Send via** → **Bluetooth**.
4. For **Phonebook**, select which data you want to send.
5. Select a device.
6. If necessary, enter the Bluetooth PIN and select **<OK>**.

Receive data

1. When a device attempts to access your phone, select **<Yes>** to permit the connection.
2. If necessary, select **<Yes>** to confirm that you are willing to receive.

Watch the phone display on a TV

 
You can view the display of your phone on a TV screen by connecting the phone and TV with a TV out cable. This enables you to enjoy the photos, videos and music stored in the phone's memory with your family or friends on a larger screen.

**Important
TV
information**

- Depending on your particular TV model, the location and shape of the video input and audio output ports may vary. Match cable connector and TV port colours.
- Depending on the video system, the image may vibrate or in some other way be less than optimal.
- Depending on the video quality, some video clips may not display.
- You cannot use a Bluetooth stereo headset or the zooming feature in TV Out mode.
- You cannot use the touch feature in TV Out mode.

**Transfer
phone
display to
a TV**

1. With the TV switched on, connect your phone to the TV with a TV out cable, as shown.

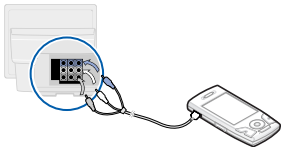

2. Switch the TV to External Input mode. The display switches to TV Out mode and you can view the phone's display on the TV screen.
3. If necessary, set the video system for your TV in the **TV-out**. ► p. 119

-
4. Access the application you want and open files.

Use a memory card

You can use a memory card to increase your phone's memory capacity.

 
Important memory card information

- Frequent erasing and writing will shorten a memory card's lifespan.
- Do not remove a memory card from the phone or turn off the phone while data is being accessed or transferred. This could result in loss of data and/or damage to the card or phone.

-
- Do not subject memory cards to strong shocks.
 - Do not touch memory card terminals with your fingers or metal objects. If dirty, wipe the card with a soft cloth.
 - Keep memory cards away from small children or pets.
 - Do not expose cards in a place subject to electrostatic discharge and/or electromagnetic interference.
 - Some memory cards may not be compatible with your phone, depending on the size of the memory card.

Insert a memory card

1. Insert a memory card into the memory card slot, with the label side face down.

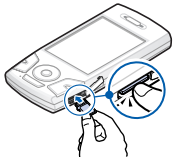

2. Press the card until it locks into place.

Remove the memory card

1. Press the memory card so that it is disengaged from the phone.
2. Remove the card from the slot.

Use a card adapter

Using a card adapter and a USB card reader/writer, you can read the card on a PC.

1. Insert a memory card into a card adapter, and then the adapter into a card reader/writer.
2. Plug the USB connector of the card reader/writer into the USB port on your PC.
3. Access the appropriate memory disk and copy to and from the card.


Enter text

Handwriting, Keypad, and Keyboard modes

You can enter text in some features, such as Messages, Phonebook, or Calendar, using English mode, T9 mode, Number mode, and Symbol mode.

Changing the text input mode

Example: Entering a message

1. In the text entry screen, select .
2. Select the mode you want to use from the list.

Using Handwriting mode

 
Your phone is equipped with powerful character recognition software that allows you to convert your handwriting into typed characters accurately and efficiently

Tips for using Handwriting mode

- Because of the touch screens sensitivity, choices displayed may differ each time you write a character.
- If you cannot find the symbolic characters you want with Handwriting mode, use the Symbol mode to enter them.
- Write at a normal speed. If you write letters too slowly or too quickly, the phone may not recognise your writing.
- Tap, drag, and lift the stylus pen, as precisely as possible.

Entering a word

1. Select an input mode from the screen.

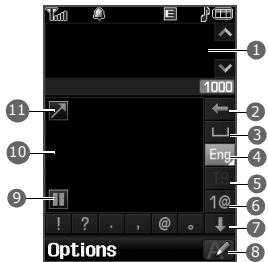

Location	Function
1	Text input field
2	Clear the last input.
3	Enter a space.
4/5	Enter an English letter.
6	Enter a number or symbol.
7	Expand the text input field.
8	Change the text input mode.
9	Changes the number of the text input fields.
10	Pen stroke field
11	Combine the text input field and pen stroke field.

- Write a character at a time on the Pen stroke field.
- Tap one of the choices to enter it into text.

Other Handwriting mode operations

- Draw the space stroke as shown to enter a space.
- Draw the backspace stroke as shown to delete a character.



Sequences of pen strokes

When you use the English alphabet, numbers, and symbols, refer to the following tables to enter strokes in the correct order.

English

Aa	A A a a	Nn	N N n
Bb	B B b	Oo	O O o o
Cc	C c	Pp	P p p
Dd	D d d	Qq	Q Q q q
Ee	E E e	Rr	R R r
Ff	F F F f f	Ss	S S
Gg	G g g	Tt	T t t t
Hh	H h h	Uu	U u
Ii	I i i i	Vv	V v
Jj	J J j j	Ww	W w
Kk	K K k k	Xx	X X x x x x
Ll	L l	Yy	Y y y
Mm	M M m	Zz	Z z z z

Numbers

0	0 0	5	5
1	1	6	6
2	2 2	7	7 7
3	3	8	8
4	4	9	9

Symbols

~	~	/	/))
!	!	\	\	<	<
?	?	+	+ +	>	>
#	# #	-	-	:	:
\$	\$	=	=	;	;
%	% %	{	{	'	'
^	^	}	}	,	,
&	&	[['	'
*	* * *]]	"	"
@	@	((.	.

Using Keypad mode

You can enter text by pressing the alphanumeric keys on the phone, labelled with the Chinese strokes and alphabet.

Using English mode

1. Select **Ab** from the screen to switch to English mode.



Change the letter case.

2. Tap the appropriate key until the character you want appears on the screen.

Using T9 mode

This mode allows you to enter English by using T9 technology. T9 is a predictive text input mode that allows you to key in any character using single keystrokes.

Entering a word

1. Select **T9** from the screen to switch to English word mode.
2. Tap **2** to **9** to start entering a word. Tap each key once for each letter.


For example, tap **4**, **3**, **5**, **5**, and **6** to enter *Hello* in T9 mode.

T9 predicts the word that you are typing, and it may change with each key that you press.

3. Enter the whole word before editing or deleting characters.

4. When the word displays correctly, go to step 5. Otherwise, tap **0** to display alternative word choices for the keys that you have taped.

For example, *Of* and *Me* use **6** and **3**.

5. Select  to insert a space and enter the next word.

Adding a word to the T9 dictionary

This feature may not be available for some languages.

1. Enter the word that you want to add.
2. Tap **0** to display alternative words for your key presses. When there are no more alternative words, **Spell** appears on the bottom line.
3. Select **<Spell>**.
4. Enter the word you want using English mode and select **<Save>**.

Using Number or Symbol mode

You can enter numbers and symbols by selecting **1@** from the screen.



Display more symbols.

Using Keyboard mode

You can select either the alphabetic, numeric, or symbolic keyboard. To enter characters using the onscreen keyboard, just tap the one you want on the keyboard.

1. Select an input mode from the screen.




Location	Function
1	Text input field
2	Clear the last input.
3	Enter a space.
4/5	Enter an English letter.
6	Enter a number or symbol.
7	Expand the text input field.
8	Change the text input mode.
9	Assign a tone for the selected pinyin.

2. Enter the word you want.
3. Select one of the choices to enter it into text.


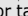


Call functions



Advanced calling features

Making a call




1. In Idle mode, select .
2. Enter an area code and phone number.





- Select  or press [C] to clear the last digit or tap and hold  or press and hold [C] to clear the whole display. You can move the cursor to edit an incorrect digit.
- Tap and hold  to enter a pause between numbers.
- Tap  to switch to the Speed dial screen.
▶ p. 49

3. Select  or press [↩].
4. When you want to end the call, press [].

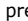Making an international call

1. In Idle mode, select .
2. Tap and hold **0**. The + character appears.
3. Enter the country code, area code, and phone number, then tap  or press [].



Redialling recent numbers

1. In Idle mode, press [] to display the list of recent numbers.
2. Scroll to the number you want and press [].

Making a call from Phonebook


Once you have stored a number in Phonebook, you can dial the number by selecting it from Phonebook. ▶ p. 46

You can quickly dial a number from the SIM card using the location number assigned when stored.


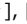

1. In Idle mode, select .
2. Enter the location number for the phone number you want and select #.
3. Scroll through other numbers, if necessary.
4. Select <**Dial**> or press [] to dial the number you want.

Answering a call

When you receive a call, the phone rings and displays the incoming call image.

Select <**Accept**> or press [] to answer the call.

Tips for answering a call

- When **Anykey answer** is active, you can press any key to answer a call, except for [], [] and <**Reject**>. ▶ p. 117
- Select <**Reject**> or press [] to reject a call.

Call functions

- Press and hold [▲ / ▼] to reject a call or mute the ringer, depending on the **Volume key** setting. ▶ p. 117

Viewing missed calls

If you have any missed calls, the screen displays how many calls you have missed.

1. Select <**View**>.
2. If necessary, scroll through the missed calls.
3. Press [⤴] to dial the number you want.

Using the headset

Use the headset to make or answer calls without holding the phone.

Connect the headset to the jack on the left side of the phone. The button on the headset works as follows:

To	Press
redial the last call	the button and then press and hold it again.
answer a call	the button and hold.
end a call	the button and hold.

Options during a call

You can access a number of functions during a call.

Adjusting the volume during a call

Use [▲ / ▼] to adjust the earpiece volume during a call.


Press [▲] to increase the volume level and [▼] to decrease the volume level.

Placing a call on hold/Retrieving

Select <**Hold**> to place the call on hold, or select <**Retrieve**> to retrieve the call.


Making a second call

You can make another call if your network supports this function.

1. Select <**Hold**> to put the call on hold.
2. Make the second call in the normal way.
3. Select <**Swap**> to switch between the calls.
4. Select <**Options**> → **End held call** to end the call on hold.
5. To end the current call, press [].


Answering a second call

You can answer an incoming call while already on the phone, if your network supports this function and you have activated the call waiting feature. ▶ p. 123

1. Press [] to answer the call. The first call is automatically put on hold.
2. Select <**Swap**> to switch between the calls.

Using the speakerphone feature

Use the speakerphone feature to talk and listen with the phone a short distance away.

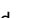Press [] to activate the speakerphone feature. Press the key again to switch back to the earpiece.

Using In-call options

Select <**Options**> to access the following options during a call:

- **Switch to headset/Switch to phone:** switch the call to a Bluetooth headset or hands-free car kit or back to the phone. To use this feature, you first need to connect your headset or car kit to the phone.
▶ p. 60

- **Voice clarity on/Voice clarity off:** remove extraneous noise and increase call quality so that the person with whom you are speaking can hear you clearly even if you are in a noisy place.
- **Mute/Unmute:** switch off the phone's microphone so that the other person on the phone cannot hear you, or switch it back on.
- **Dialer:** open the dialling screen.
- **Mute keys/Send keys:** switch the key tones off or on.



To communicate with answering machines or computerised telephone systems, **Send keys** must be selected.

- **Phonebook:** access the contact list.
- **Send DTMF:** send the DTMF (Dual tone multi-frequency) tones as a group. The DTMF tones are the tones used in phones for tone dialling, sounding when you select the number keys from the dialling screen.

This option is helpful for entering a password or an account number when you call an automated system, like a banking service.

- **Message:** read an incoming message and send a new message. ▶ p. 71
- **Join:** set up a multi-party call by adding a caller on hold to a currently active call. You can include up to five people on a multi-party call.
- **Split:** have a private conversation with the selected participant. The other participants can converse with each other. After the private conversation, select **Join** to return both private participants to the multi-party call.
- **Transfer:** transfer the currently active call to a caller on hold. The two callers can talk to each other, but you are disconnected from the call.
- **Remove:** disconnect the selected participant.

- **End held call:** disconnect the call currently on hold.
- **Conv. record:** record your conversation.
- **SIM service:** access special services, such as news, weather forecasts, entertainment, and location services, provided by your SIM card. This option is available when you use a SIM card supporting SIM AT menus.

Menu functions

All menu options listed

Call log *(Menu 1)*

Use this menu to view the calls you have dialled, received, or missed, and the length of the calls. You can also check the cost of your calls, if the SIM card supports this function.


To access this menu, select **<Menu>** in Idle mode → **Call log**.

Recent contacts *(Menu 1.1)*

This menu displays the most recent calls dialled, received, or missed.

Accessing a call record

1. Select a call type.

2. Scroll through the call list.
3. Press [] to dial a number, or [**OK/i**] to view the details of a call.

Using call record options

While viewing call details, select **<Options>** to access the following options:

- **Call:** make a call to the number.
- **Add to Phonebook:** save the number in Phonebook.
- **View contact details:** access contact information, if the caller is saved in Phonebook.
- **Send message:** send an SMS or MMS message to the selected number.
- **Delete:** delete the selected call record or all records.
- **Add to reject list:** add the number to the Reject list.

Missed calls (Menu 1.2)

This menu displays the most recent received calls that you did not answer.

Dialled calls (Menu 1.3)

This menu displays the most recent calls you have dialled.

Received calls (Menu 1.4)

This menu displays the most recent calls you have received.

Delete all (Menu 1.5)

Use this menu to delete all of the records in each call type.

1. Select the call types to clear.
2. Select **<Delete>**.
3. Select **<Yes>** to confirm the deletion.

Call time (Menu 1.6)

This menu displays the time log for calls made and received. The actual time invoiced by your service provider will vary.

- **Last call time:** check the length of your last call.
- **Total sent:** check the total length of all the calls you have dialled.
- **Total received:** check the total length of all the calls you have received.
- **Reset timers:** reset the call timers. You need to enter the phone password.



The password is preset to **00000000**. You can change this password. ▶ p. 125

Call costs (Menu 1.7)

This network feature displays the cost of calls. This menu is available only if supported by your SIM card. Note that this is not intended to be used for billing purposes.

- **Last call cost:** check the cost of your last call.
- **Total cost:** check the total cost of all your calls. If the total cost exceeds the maximum cost set in **Set max cost**, you must reset the counter before you can make another call.
- **Max cost:** check the maximum cost limit set in **Set max cost**.
- **Reset counters:** reset the cost counters.
- **Set max cost:** set the maximum cost authorised for your calls.
- **Price/Unit:** set the price per unit that is applied when the cost of your calls is calculated.

Phonebook *(Menu 2)*

You can store phone numbers on your SIM card and in your phone's memory. The SIM card and phone's memory are physically separate, but they are used as a single entity called Phonebook.

To access this menu, select <Menu> in Idle mode → **Phonebook**.

Contact list *(Menu 2.1)*

Use this menu to search for contact information stored in Phonebook.

Finding a contact

1. Select <Change>.
2. Enter the first few letters of the name that you want to find and press [OK/↵].
3. Select the name you want from the list.

4. Scroll to a number and press [↵] to dial, or press [OK/↵] to edit the contact information.

Using Phonebook options

While viewing contact details, select <Options> to access the following options:

- **Edit:** edit contact information.
- **Send message:** send an SMS or MMS message to the selected number, or send an MMS message or e-mail to the selected e-mail address.
- **Copy:** copy the number to the phone's memory, to the SIM card, or to the FDN list.
- **Send via:** send the contact via SMS, MMS, e-mail, or Bluetooth.
- **Delete:** delete the selected contact.
- **Mark as default number:** set the selected number as the default for the contact.

- **Print via Bluetooth:** print contact information by connecting the phone to a printer via Bluetooth.



Some printers may not be compatible with the phone.

FDN contacts (Menu 2.2)

Use this menu to create a list of contacts to be used in FDN (Fixed Dialling Number) mode, in which the phone allows outgoing calls only to the specified phone numbers, if your SIM card supports this feature. You can activate FDN mode in the **FDN mode** menu. ▶ p. 126

Adding a contact

1. From the FDN list, select **<Options>** → **Add**.
2. Enter your PIN2 supplied with the SIM card and select **<OK>**.
3. Enter information about the contact:

- **Name:** assign a name.
- **Phone number:** add a number.
- **Location:** assign a location number.

4. Select **<Save>** to save the contact.

Using contact options

You can access contact options by selecting **<Options>** in the contact list. ▶ p. 46

Create contact (Menu 2.3)

Use this menu to add a new contact to Phonebook.

Storing a number in the phone's memory

1. Select **Phone**.
2. Change the settings or enter information about the contact:
 - **First name/Last name:** assign a name.

- **Mobile/Home/Office/Fax/Other:** add a number in any category.

You can change the number type, or set the number as the default for the contact by selecting **<Options>** → **Change type** or **Mark as default number**.

- **Email:** assign an e-mail address.

You can set domain name extensions and retrieve one by selecting **<Options>** → **Common address**.

- **Graphic ID:** assign a caller ID image or a video clip to alert you to a call from the person.
- **Ringtone:** assign a ringtone to alert you to a call from the person.

The settings specified in **Graphic ID** and **Ringtone** are given priority over group settings.

- **Group:** assign the number to a caller group.
- **Anniversary:** enter the person's birthday.
- **Notes:** add a memo about the person.

3. Select **<Save>** to save the contact.

Storing a number on the SIM card

1. Select **SIM** → **New**.

2. Enter information about the contact:

- **Name:** assign a name.
- **Phone number:** add a number.
- **Location:** assign a location number.

To assign a caller ID image, ringtone, or group, the contact must be saved to the phone's memory.

3. Select **<Save>** to save the contact.

Group (Menu 2.4)

Use this menu to organise your contacts in caller groups.

Adding members to a caller group

1. Select a group.
2. Select **<Add>**.
3. Select the contacts you want.
4. Select **<Options>** → **Add**.

Managing caller groups

While viewing the group list, select **<Options>** to access the following options:

- **View**: display the members of the selected group.
- **Add**: add a new group.
- **Edit**: change the properties of the selected group.

- **Send message**: send an SMS, MMS, or e-mail to the members you want.
- **Delete**: delete the selected group. Group members, however, will not be deleted from Phonebook.

Speed dial (Menu 2.5)

Use this menu to assign speed dial numbers (2 to 9) for 8 of your most frequently dialled numbers.

Assigning speed dial entries



1. Scroll to a key location from **2** to **9**. Key **1** is reserved for your voicemail server.
2. Select **<Options>** → **Add** → **Contact list** or **FDN contacts**.
3. Select a contact from the contact list.
4. Select a number, if the contact has more than one number.

Managing speed dial entries

From the Speed dial screen, select **<Options>** to access the following options:

- **Add:** assign a number to an unassigned key. You can select a contact from Phonebook or the FDN list.
- **View:** check the name and number assigned to the key.
- **Change:** assign a different number to a key.
- **Remove:** clear the speed dial setting for a key.

Dialling speed dial numbers

1. In Idle mode, select .
2. Tap .
3. Tap the appropriate number key.

My namecard *(Menu 2.6)*

Use this menu to create a name card and send it to other people.

Saving your name card

The procedure for creating your name card is the same as the one for saving a number in the phone's memory. ▶ p. 47

Using name card options

After saving your name card, select **<Options>** to access the following options:

- **Edit:** edit the name card.
- **Send via:** send the name card via SMS, MMS, e-mail, or Bluetooth.
- **Exchange namecard:** exchange name cards with another person's name card via Bluetooth.
- **Remove:** delete the name card.

- **Print via Bluetooth:** print your contact information by connecting the phone to a printer via Bluetooth.

Some printers may not be compatible with the phone.

Own number *(Menu 2.7)*

Use this feature to check your phone numbers, or to assign a name to each of the numbers. Changes made here do not affect the actual subscriber numbers on your SIM card.

Management *(Menu 2.8)*

Use this menu to manage contacts in Phonebook.

- **Save new contacts to:** select a default memory location for saving contacts. If you select **Always ask**, the phone will ask you to select a memory location each time you save a number.

- **Copy all:** copy all of the contacts stored on the SIM card to the phone's memory, or vice versa.
- **List by:** sort your contacts by the first name or last name.
- **Delete all:** delete all of the contacts from your phone's memory, your SIM card, or the FDN list.
- **Search by initials:** search for a contact with the initial letters of the first name and last name in the contact list.
- **Memory status:** display the number of contacts you have stored in Phonebook.

Service number *(Menu 2.9)*

Use this menu to view the list of Service Dialling Numbers (SDN) assigned by your service provider, including emergency numbers and numbers for directory enquiries. This menu is available if your SIM card supports SDN.

Menu functions

1. Scroll to the number you want and select **<View>**.
2. Select **<Dial>** or [↩].

Applications *(Menu 3)*

Use this menu to play music files, edit photos, or play Java applications. You can also use the Bluetooth feature.

To access this menu, select **<Menu>** in Idle mode → **Applications**.

Music player *(Menu 3.1)*

Use this menu to enjoy music. First, you need to save music files in your phone's memory or on a memory card. To enjoy high quality music, you can use an optional Bluetooth stereo headset.



Normal headsets and Bluetooth mono headsets are not compatible with the music player.

Downloading or receiving music files

You can play *.mp3, *.aac, and *.m4a files.

Use the following methods to save music files to your phone:

- Download from the wireless web ▶ p. 67
- Download from a computer using the Samsung PC Studio programme ▶ Samsung PC Studio User's Guide
- Receive via an active Bluetooth connection ▶ p. 62
- Copy to a memory card and insert the card into the phone ▶ p. 30

Downloaded or received files are stored in the **Music** folder. ▶ p. 96

Creating a play list





Add the music files to the play list so you can play them.








1. From the music player screen, select **<Options>** → **Add music from** → **Phone** or **Memory card**.
2. Select the files you want → **<Add>**.

Playing music files

1. From the music player screen, select **<Options>** → **Play via**.
2. Select **Phone** to use the phone speaker.
Select **Bluetooth stereo headset** to use a Bluetooth stereo headset and then search for and connect the phone to the headset.

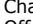During playback, use the following keys and icons:

Key/Icon	Function
OK/  / 	Pauses playback.
OK/  / 	Resumes playback.

Key/Icon	Function
	Sets the music player to play tracks in random order.
	Changes the repeat mode. ( : Off,  : Repeat one,  : Repeat all)
Up	Opens the current play list.
Left	Returns to the previous file. Moves backward in a file when held down.
Right	Skips to the next file. Skips forward in a file when held down.
 / 	Adjusts the volume.
Down	Stops playback.

Using music player options

From the music player screen, select <**Options**> to access the following options:

- **Play/Pause:** begin or pause playback.
- **Stop:** stop playback.
- **Play via:** play the selected file via the phone speaker or a Bluetooth stereo headset.
- **Transfer to Bluetooth stereo headset/ Transfer to phone:** switch the sound output to a Bluetooth headset or the phone speaker.
- **Open playlist:** access the current play list or album list.
- **Remove from playlist:** remove the selected file from the play list.
- **Send via:** send the current file via MMS, e-mail, or Bluetooth.
- **Set as:** set the file as your ringtone, as a ringtone for a Phonebook entry, or as an alarm tone.

- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Settings:** change the default settings for playing music files:
 - Repeat mode:** select a repeat mode.
 - Shuffle:** set the music player to play tracks in random order.
 - Equaliser:** change the equaliser setting.
 - 3D sound:** turn 3D sound on or off.
 - Visualization:** change the playback animation.
 - Volume:** select a volume level.
 - Music overrides other sounds:** set the Music player to continue playback even if you exit it.
- **Details:** access the file properties.

- **Key management:** manage the licence keys you have acquired.

Accessing the play list

From the music player screen, press [Up].

Select <**Options**> to access the following options:




- **Play via:** play the selected file via the phone speaker or a Bluetooth stereo headset.
- **Add music from:** add files to the play list.
- **Move track in playlist:** move the selected file to the position you want within the play list.
- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Go to all playlists:** access the album list.
- **Move to:** move the selected file to another music album.




- **Copy to:** copy the selected file to another music album.
- **Remove:** remove the selected file or all files from the play list.
- **Details:** access the file properties.
- **Key management:** manage the licence keys you have acquired.

Voice recorder (Menu 3.2)

Use this menu to record voice memos. A voice memo can be up to one hour long.



Recording a voice memo


1. Select  or press [ok/i] to start recording.
2. Speak into the microphone.
 - Select  or press [ok/i] to pause the recording.
 - Select  or press [ok/i] to resume the recording.

- When you have finished, select  or **<Save>**, or press [Down]. The voice memo is automatically saved.
Select  to save the voice memo and review the memo immediately.
- Select  or press [OK/Enter] to review the voice memo, or press [Up] to record a new memo.

Playing a voice memo

- From the voice recorder screen, select **<Options>** → **Go to My voice clips**.
- Select a voice memo. The memo plays.
During playback, use the following keys and icons:

Key/Icon	Function
OK/Enter / 	Pauses playback.
OK/Enter / 	Resumes playback

Key/Icon	Function
	Switch to Record mode.
Left	Moves backward in a file.
Right	Skips forward in a file.
▲/▼	Adjusts the volume.
Down	Stops playback.

Using voice recorder options

From the voice recorder screen, select **<Options>** to access the following options:

- Play:** play the selected voice memo in Review mode.
- Record:** record a new voice memo.
- Go to My voice clips:** access the voice memo list.
- Send via:** send the file via MMS, e-mail, or Bluetooth.

- **Set as:** set the file as your ringtone, as a ringtone for a Phonebook entry, or as a ringtone for alarms.
- **Move to:** move the file to another folder or a memory card, if inserted.
- **Copy to card:** copy the file to a memory card, if inserted.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Bluetooth visibility:** share the selected file with other Bluetooth devices.
- **Lock/Unlock:** lock the file to prevent it from being deleted, or unlock the file.
- **Details:** access the file properties.

Image editor (Menu 3.3)

Use this menu to edit your photos using various editing tools.

Applying an effect


1. Select <**Options**> → **New image** → **Open** or **Take a photo**.
2. Select a photo or take a new photo.
3. Select <**Load**>, or select <**Options**> → **Load**.
4. Select <**Options**> → **Effects** → an effect option.
5. Select <**Done**>.
6. Select <**Options**> → **Save as**.
7. Select <**Yes**>.
8. Enter a new file name and press [**OK/***i*].

Fine-tuning

1. Select a photo or take a new photo.
2. Select <**Load**>, or select <**Options**> → **Load**.
3. Select <**Options**> → **Adjust** → an option.
 - **Brightness**: adjust the image brightness.
 - **Contrast**: adjust the image contrast.
 - **Colour**: adjust the image balance.
4. Adjust the image brightness, contrast, or colour balance.
5. Select <**Done**>.
6. Select <**Options**> → **Save as**.
7. Select <**Yes**>.
8. Enter a new file name and press [OK/i].

Reorienting


1. Select a photo or take a new photo.

2. Select <**Load**>, or select <**Options**> → **Load**.
3. Select <**Options**> → **Transform** → an option.
 - **Rotate**: rotate the photo 90 degrees clockwise or counterclockwise.
 - **Flip**: flip the photo.
 - **Crop**: crop a desired portion of the photo. After selecting a diagram for cropping, you can change the size of the diagram by dragging the resize icon () or its position by dragging the frame. Select <**Done**>.
4. Select <**Options**> → **Save as**.
5. Select <**Yes**>.
6. Enter a new file name and press [OK/i].

Adding visual features

You can decorate photos by adding a frame or an image.

1. Select a photo or take a new photo.
2. Select <**Load**>, or select <**Options**> → **Load**.
3. Select <**Options**> → **Insert** → a feature type.
 - **Frame**: add a decorative frame.
 - **Clip Art**: add an image.
 - **Emoticon**: add an emoticon.
4. Select an item.
5. If you select an image, adjust the position or size of the inserted item and select <**Done**>.

You can change the size of an inserted clip art or emoticon by dragging the resize icon () , or its position by dragging the frame.
6. Select <**Options**> → **Save as**.
7. Select <**Yes**>.
8. Enter a new file name and press [OK/⌘].

Bluetooth *(Menu 3.4)*

Using Bluetooth wireless, you can connect the phone wirelessly to other Bluetooth devices and exchange data with them, talk hands-free, or control the phone remotely.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within a range of 10 metres. Since the devices communicate using radio waves, they do not need to be in line of sight to each other.

- If there are obstacles between the devices, the maximum operating distance may be reduced.
- It is recommended that you do not use the Bluetooth feature while using multimedia features such as voice recorder, camera, and music player, or vice versa for better performance.
- Some devices, especially those that are not tested or approved by Bluetooth SIG may be incompatible with your phone.

Setting up the Bluetooth feature








The **Bluetooth** menu provides the following options:

- **Activation:** activate or deactivate the Bluetooth feature.
- **My devices:** search for connectable Bluetooth devices.
- **My phone's visibility:** allow other Bluetooth devices to connect to your phone.
- **My phone's name:** assign a Bluetooth device name to your phone, which is then displayed on other devices.
- **Secure mode:** determine if the phone asks for your confirmation when other devices access your data.
- **Bluetooth services:** display available Bluetooth services.

Searching for and pairing with a Bluetooth device

1. From the **Bluetooth** menu, select **My devices**.
2. Select **Search new device**.

After searching, a list of devices to which you can connect displays. The following icons indicate the kind of device:

-  Stereo headset
-  Mobile phone
-  Computer
-  PDA
-  Unknown device
-  Printer
-  Mono headset/Hands-free car kit

The colour of the icon indicates the status of the device:

- Grey for unpaired devices
- Blue for paired devices

- Orange for devices that are currently connected to your phone
3. Select a device.
 4. Enter a Bluetooth PIN and select **<OK>**. This code is used just once and you do not need to memorise it.
When the owner of the other device enters the same code, pairing is complete.



Some devices, especially headsets or hands-free car kits, may have a fixed Bluetooth PIN, such as **0000**. If the other device has one, you must enter the code.

Using device options

From the device list, select **<Options>** to access the following options:

- **Connect:** connect to a headset or hands-free car kit.
- **Disconnect:** end the connection with the connected device.
- **Browse files:** search for data from the device and import data directly to your phone.
- **Service list:** access the Bluetooth service list of the device.
- **Rename:** rename the paired device.
- **Authorise device/Unauthorise device:** determine whether or not the phone asks you to permit connection when other devices try to connect to your phone.
- **Delete:** remove the selected device or all devices.

Sending data via Bluetooth

1. Activate the Bluetooth feature.
2. Select the application in which the item you want to send is stored.
3. Scroll to the item you want and select **<Options>**.

4. Select **Send via** → **Bluetooth**.

The phone searches for devices within range and displays a list of available devices.

5. Select a device.

6. If necessary, enter the Bluetooth PIN needed for pairing and select **<OK>**.

Receiving data via Bluetooth

To receive data via Bluetooth, your phone's Bluetooth feature must be active and its visibility must be enabled.

1. If an unauthorised Bluetooth device sends data to your phone, select **<Yes>** to allow the device to access your phone.
2. Select **<Yes>** to receive data.

Java world *(Menu 3.5)*

Use this menu to access the embedded Java games and downloaded Java applications.

Playing a game

Select a game from the game list and follow the onscreen instructions. The procedure may differ from game to game.

Using Java application options

From the application list, select **<Options>** to access the following options:

- **Start:** launch the selected application.
- **Delete:** delete the selected application.
- **Details:** access the application properties.
- **Permission:** set permission settings for services charging you additional costs, such as network access and SMS.
- **Lock/Unlock:** lock the application to prevent it from being deleted, or unlock the application.
- **Upgrade:** upgrade the application to the latest version, except for embedded games.

- **Send information via text message:** send the URL address containing the application via SMS, except for embedded games.
- **Memory status:** access memory information for applications.
- **Network settings:** customise a connection profile to be used for applications requiring network access. The following options are available:

APN: enter the access point name of the network gateway.

Login ID: enter the user ID.

Password: enter the password.

Proxy: activate or deactivate the proxy server.

Proxy settings: customise the following proxy settings:

*When the proxy is set to **Enable**:*

- **IP address:** enter the gateway address.

- **Port:** enter the port number.

*When the proxy is set to **Disable**:*

- **DNS1:** enter the primary address.
- **DNS2:** enter the secondary address.

Games *(Menu 3.6)*

Use this menu to access the embedded touch games.

Select a game from the game list and follow the onscreen instructions. The procedure may differ from game to game.

Dictionary *(Menu 3.7)*

Use this menu to search for words.

Looking up a word

1. Select **<Change>**.
2. Enter the word you want and press [OK/ⓘ].
3. Select the word you want.

The display shows the pronunciation of the word you entered and the corresponding words.

4. To look up another word, select <**Back**> and repeat from step 1.
To save the word in the Wordbook, select <**Options**> → **Save**.

Using dictionary options

From the dictionary screen, select <**Options**> to access the following options:

- **History**: view the list of words you have searched for.
- **Word book**: view the list of the words you have saved.
- **Review**: test whether or not you memorise words you have saved in **Word book**.
▶ next section
- **Set colour**: change the font colour to be displayed on the screen.
- **Cancel**: exit the Dictionary screen.

Testing

1. From the Dictionary screen, select <**Options**> → **Review**.
2. Select **English**, **Chinese Simplified**, or **Chinese Traditional**.
3. Select <**Change**>.
4. Enter the word for the meaning displayed on the screen and press [OK/✓].
5. Select <**Options**> → **Answer**.

While testing, select <**Options**> to access the following options:




- **Answer**: check the correct answer.
- **Show answer**: show the correct answer.
- **Next**: skip to the next question.
- **Cancel**: exit the test.






PenMemo (Menu 3.8)


You can create memos by drawing a sketch using the stylus pen on the touch screen yourself.

Creating a new PenMemo

1. Draw a sketch using the stylus pen on the screen.
2. Use the following icons at the bottom line of the screen:

Icons	Function
	Creates a new sketch memo.
 	Switches to the paint brush.

Icons	Function
	<ul style="list-style-type: none"> • Erases the drawing as you move the pen when held down. • Opens the line picker screen so that you can change the line thickness.
	Opens the line picker screen of the paint brush so that you can change the line thickness. This option is not available when you select the paint brush tool.
	Changes the pen colour.
	Cancels your last action. Deletes the last 10 strokes of the sketch memo when held down.
	Opens the memo list.


3. When you have finished, select .

Using PenMemo options

While creating a memo, select **<Options>** to the following options:

- **Save:** save the memo.
- **New:** create a new memo.
- **Paint/Pen:** switch between paint brush and pen.
- **Erase:** erase the drawing as you move the pen.
- **Undo:** cancel your last action.
- **Tool diameter:** open the line picker screen so that you can change the line thickness.
- **Tool colour:** change the pen colour.
- **PenMemo List:** go to the memo list.
- **Cancel:** exit the PenMemo screen.

Viewing a PenMemo

1. From the PenMemo screen, select .
2. Select the memo you want.
3. Use the following icons at the bottom line of the screen:

Icons	Function
	Edits the selected memo.
	Creates a new memo.
	Deletes the selected memo.
	Changes the memo name.



While viewing a memo, select **<Options>** to access the following options:

- **View:** return to the view screen.
- **Edit:** edit the memo.
- **Create:** create a new memo.

- **Delete:** delete the selected memo or all memos.
- **Rename:** change the file name.
- **View by:** change the view mode of the memo list.

SIM-AT (Menu 3.9)

This menu is available if you use a SIM-AT card that supports SIM Application Toolkit menus and provides additional services, such as news, weather, sports, entertainment, and location services. Available services may vary, depending on your service provider's plans. For details, see your SIM card instructions or contact your service provider.

Browser (Menu 4)

The Wireless Application Protocol (WAP) on your phone allows you to access the wireless web. Using the web browser, you can access up-to-date information and a wide variety of media content, such as wallpapers, ringtones, and music files.

To access this menu, select <**Menu**> in Idle mode → **Browser**.

Home (Menu 4.1)

Use this menu to connect your phone to the network and load the homepage of the wireless web service provider.




The touch screen is deactivated in this menu.

Navigating the web browser

To	Press
scroll through browser items	[Up] or [Down].
select a browser item	[OK/✓] or select <✓>.
return to the previous page	[C] or select <Back>.
return to the homepage	and hold [C].

Using browser options

1. Select .
2. Select one of the following browser options:
 - **Browser Menu:** access other phone menus:

Enter URL: enter a URL address manually.


Bookmarks: switch to the **Bookmarks** menu.

Messages: check the messages stored in the **My messages** folder. You can also create and send a new SMS message.

My files: switch to the **My files** menu.

- **Home:** return to the homepage.
- **Back:** return to the previous page.
- **Reload:** reload the current page.
- **Show URL:** display the URL address of the current web page.
- **About ...:** access version and copyright information about the browser.

Exiting the browser

Press [] to end the network connection and exit the browser.

Bookmarks *(Menu 4.2)*

Use this menu to save URL addresses to quickly access a website.

Adding a bookmark

1. Select an empty location.
2. Select the **Name** line.
3. Enter a name for the bookmark and press [OK/↵].
4. Select the **URL** line.
5. Enter the URL address and press [OK/↵].
6. Select <**Save**> to save the bookmark.

Accessing a bookmarked page

Selecting a bookmark item launches the web browser and access the associated web page.

Using bookmark options

After saving an item, select <**Options**> to access the following options:

- **Open**: access the website.
- **Edit**: edit the address and name of the bookmark.
- **Delete**: delete the selected bookmark or all bookmarks.

Enter URL *(Menu 4.3)*

Use this menu to manually enter the URL address of a website and access the website.

Clear cache *(Menu 4.4)*

Use this menu to clear the cache, which is the temporary memory that stores the web pages you have recently accessed.

Profile settings (Menu 4.5)

Use this menu to set up servers for the web browser. Contact your service provider for details about your setting options.

For each server, the following options are available:

- **Profile name:** assign a name to the server profile.
- **Home URL:** enter the address of your homepage.
- **Bearer:** select a bearer for each type of network address accessed.
- **Proxy:** activate or deactivate the proxy server.
- **GPRS settings:** customise the GPRS network settings:
*When the proxy is set to **Enable**:*
Proxy IP: enter the web gateway address.

Proxy port: enter the port number.

APN: enter the access point name of the GPRS network gateway.

Login ID: enter the user ID.

Password: enter the password.

*When the proxy is set to **Disable**:*

DNS1: enter the primary address.

DNS2: enter the secondary address.

APN: enter the access point name of the GPRS network gateway.

Login ID: enter the user ID.

Password: enter the password.

- **GSM settings:** customise the following GSM network settings:

*When the proxy is set to **Enable**:*

Proxy IP: enter the web gateway address.

Proxy port: enter the port number.

Dial number: enter the PPP server phone number.

Login ID: enter the user ID.

Password: enter the password.

Data call type: select a data call type.

*When the proxy is set to **Disable**:*

DNS1: enter the primary address.

DNS2: enter the secondary address.

Dial number: enter the PPP server phone number.

Login ID: enter the user ID.

Password: enter the password.

Data call type: select a data call type.

Current profile (Menu 4.6)

Use this menu to activate one of the proxy servers you have set up.

Messages (Menu 5)

Use the **Messages** menu to send and receive short messages, multimedia messages, and e-mails. You can also access push messages and broadcast message, and use the SOS message feature.

To access this menu, select <**Menu**> in Idle mode → **Messages**.

Create new message (Menu 5.1)

Use this menu to create and send text messages, multimedia messages, or e-mails.

Text message (Menu 5.1.1)

Short Message Service (SMS) allows you to send text messages including pictures, audio clips, and animated images.

Creating and sending an SMS message

1. Enter your message and press [OK/↵].



- The maximum number of characters allowed in a message varies by service provider. If your message exceeds the maximum number of characters, the phone will split the message.
- You can use various options by selecting <Options>. ▶ next section

2. Select a destination field.

3. Enter a destination number and press [OK/↵].

To send the message to more than one recipient, fill in additional destination fields.

4. Select <Options> → **Send** to send the message.

Using options while composing an SMS message

While composing a message, select <Options> to access the following options:

- **Send only:** just send the message.
- **Save and send:** send the message and then save it in the **Sentbox** folder.
- **Preview as vivid message:** view the message in 3D view mode. The phone converts message text to 3D vivid graphics. This option is available only when the message consists of a single page.
- **Insert:** add a template, Phonebook entry, or bookmarked URL address.
- **Add picture/Add animation/Add melody:** attach a simple image, animated image, or a melody.
- **Attach:** add name cards or calendar data as data format attachments.

- **Save in:** save the message in another message folder.
- **Text style:** change the text attributes.
- **Cancel:** cancel composing the message.

Multimedia message *(Menu 5.1.2)*

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, video, and audio, from phone to phone or from phone to e-mail.

Creating and sending an MMS message

1. Select the **Subject** line.

You can use various options by selecting **<Options>**. ▶ next section

2. Enter the message subject and press [OK/ⓘ].
3. Select the **Image or video** line.

4. Select **Add image** or **Add video** and add an image or a video clip.



- The maximum size allowed for a message can differ, depending on your service provider.
- Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.

5. Select the **Music or sound** line.
6. Select **Add music** or **Add sound** and add a music file or a sound clip.
7. Select the **Text** line.
8. Enter the message text and press [OK/ⓘ].
9. When you have finished, select **<Options>** → **Send**.
10. Select a destination filed.
11. Enter a phone number or an e-mail address and press [OK/ⓘ].
To send the message to more than one recipient, fill in additional destination fields.

12. Select <**Options**> → **Send** to send the message.

Using options while composing an MMS message

While composing a message, select <**Options**> to access the following options:

- **Add**: add the message subject or message text.
- **Add image/Add video/Add music/Add sound**: add an image, video clip, or sound clip.



When you add a video clip, you are unable to add a sound file to the current page. To insert a sound file, add a new page.

- **Edit**: edit the subject or text.
- **Change image/Change video/Change music/Change sound**: replace an added item.

- **Preview**: view the message as it will be shown on the recipient's phone.
- **View**: open the selected attachment.
- **Send**: send the message.
- **Save in**: save the message in another message folder.
- **Add page**: add pages. Move to each page by pressing [Left] or [Right].
- **Delete page**: delete the added page.
- **Edit page**: change the duration of page display or move the page forward or backward among the other pages.
- **Attach**: attach name cards or calendar data as data format attachments, memos, or document files stored in the **Other files** folder.
- **Remove subject/Remove text/Remove media/Remove**: remove an added item.

Email (Menu 5.1.3)

You can create and send e-mails that include text, audio, and images. To use this feature, you need to subscribe to an e-mail service and set up your e-mail account and profile.

▶ p. 88, p. 90

Creating and sending an e-mail

1. Select the **Subject** line.



You can use various options by selecting **<Options>**. ▶ next section

2. Enter the subject of your e-mail and press [OK/⌂].
3. Select the **Message** line.
4. Enter the e-mail text and press [OK/⌂].
5. Select the **File attach** line.
6. Add media files, document files stored in the **Other files** folder, Phonebook entries as name cards, or calendar data as data format attachments.



Depending on the file type or DRM (Digital Rights Management) system, some files may not be able to be forwarded.

7. When you have finished, select **<Options>** → **Send**.
8. Select a destination field.
9. Enter an e-mail address and press [OK/⌂].
To send the e-mail to more than one recipient, fill in additional destination fields.
10. Select **<Options>** → **Send** to send the e-mail.

Using options while composing an e-mail

While composing an e-mail, select **<Options>** to access the following options:

- **Add**: add the subject of your e-mail or e-mail text.
- **Edit**: edit the subject or text.
- **Add image/Add videos/Add sounds/Add music**: add media files stored in the phone's memory.

Menu functions

- **Add other file:** add document files stored in the **Other files** folder.
- **Add from memory card:** add files stored on a memory card.
- **View/Play:** open the selected attachment.



Attached files from the **Other files** folder cannot be opened in your phone.

- **Send:** send the e-mail.
- **Save in:** save the e-mail in another message folder.
- **Attach:** attach Phonebook entries as name cards or calendar data as data format attachments.
- **Remove subject/Remove message/Remove:** clear the subject or text, or attachment.
- **Remove all attachments:** delete all attachments.

My messages (Menu 5.2)





Use this menu to access messages you have received, sent, or have failed in sending.

Inbox (Menu 5.2.1)

This folder stores all of the messages you have received, except for e-mails.

Viewing a message

The following icons may appear on the message list to show the message type:

-  SMS
-  MMS
-  MMS notifications
-  Push messages



A ! icon next to a message means that the message is of high priority. A grey-coloured message icon indicates low priority.

Using message options

While viewing a message, select <**Options**> to access the following options:

SMS messages

- **Reply via:** reply to the sender via SMS or MMS.
- **Forward:** forward the message to other people.
- **View as vivid message/View as text message:** view the message in 3D view mode or switch back to normal view mode. This option is available only when the message consists of a single page.
- **Delete:** delete the message.
- **Move to phone/Move to SIM:** move the message between the SIM card and the phone's memory.
- **Add to block list:** add the sender's number to the Block list.

- **Cut address:** extract URL addresses, e-mail addresses, or phone numbers from the message.
- **Attached items:** save media content from the message into your phone's memory.
- **Print via Bluetooth:** print the message by connecting the phone to a printer via Bluetooth.



Some printers may not be compatible with the phone.

- **Lock/Unlock:** lock the message to prevent it from being deleted, or unlock the message.

MMS messages

- **Retrieve:** retrieve the MMS message from the server.
- **Reply via text message:** send a reply message via SMS.

- **Reply via multimedia message to:** send a reply message via MMS to the sender or all recipients.
- **Forward:** forward the message to other people.
- **Delete:** delete the message.
- **Add to block list:** add the sender's number to the Block list.
- **Cut address:** extract URL addresses, e-mail addresses, or phone numbers from the message.
- **Attached items:** save media content from the message into your phone's memory.
- **Lock/Unlock:** lock the message to prevent it from being deleted, or unlock the message.
- **Details:** access the message properties.

Push messages

- **Open URL:** connect to the URL address specified in the message.
- **Delete:** delete the message.
- **Cut address:** extract URL addresses, e-mail addresses, or phone numbers from the message.

Delivery reports

- **Delete:** delete the report.

Configuration messages

- **Install:** apply the configuration value in the message to the phone.
- **Delete:** delete the message.
- **Cut address:** extract URL addresses, e-mail addresses, or phone numbers from the message.
- **Lock/Unlock:** lock the message to prevent it from being deleted, or unlock the message.

Draft (Menu 5.2.2)

This folder stores messages you have saved to send at a later time.

When you select an SMS or e-mail message, it opens in Edit mode so that you can edit and/or send the message.

When you select an MMS message, it opens in Preview mode as in the Inbox. To edit the MMS message, select <**Options**> → **Edit**.

Outbox (Menu 5.2.3)

This folder stores messages that the phone is attempting to send or has failed to send.

While viewing a message, select <**Options**> to access the following options:

- **View/Play:** open the selected file.
 - Attached files from the **Other files** folder cannot be opened in your phone.
- **Save to My files:** save the selected file.

- **Save:** save the attached name cards and calendar items to the phone.
- **Send again:** retry sending the message.
- **Forward:** forward the message to other people.
- **Delete:** delete the message.
- **Move to phone/Move to SIM:** move the message between the SIM card and the phone's memory.
- **Print via Bluetooth:** print the message by connecting the phone to a printer via Bluetooth.
 - Some printers may not be compatible with the phone.
- **Lock/Unlock:** lock the message to prevent it from being deleted, or unlock the message.
- **Details:** access the MMS message properties.

Sentbox (Menu 5.2.4)

This folder stores messages that you have sent successfully.

While viewing a message, select <**Options**> to access the following options:

- **View/Play:** open the selected file.

Attached files from the **Other files** folder cannot be opened in your phone.

- **Forward:** forward the message to other people.
- **Cut address:** extract URL addresses, e-mail addresses, and phone numbers.
- **Delete:** delete the selected message.
- **Move to phone/Move to SIM:** move the message between the SIM card and the phone's memory.

- **Print via Bluetooth:** print the message by connecting the phone to a printer via Bluetooth.

Some printers may not be compatible with the phone.

- **Lock/Unlock:** lock the message to prevent it from being deleted, or unlock the message.
- **Details:** access the MMS message properties.




Email inbox (Menu 5.2.5)

This folder stores e-mails that you have received.

Viewing an e-mail

1. Choose <**Select**> when **Check new mail** displays to get new e-mails from the server. The phone checks the e-mail server and downloads new e-mails.

The following icons may appear on the list to show the e-mail status:

-  Retrieved from the server
-  Being retrieved
-  Failed to be retrieved

- A ! icon next to a message means that the e-mail is of high priority. A grey-coloured e-mail icon indicates low priority.

2. Select an e-mail or header.
3. Press [▲ / ▼] to view other pages in the e-mail.
Press and hold [▲ / ▼] to move to the first or last page in the e-mail.

Using e-mail options

While viewing the e-mail or header, select <**Options**> to access the following options:

- **Retrieve:** retrieve the body of the e-mail from the e-mail server.

- **View/Play:** open the selected file.

- Attached files from the **Other files** folder cannot be opened in your phone.

- **Save to My files:** save the selected file.
- **Reply:** send a reply to the sender via e-mail or MMS.
- **Reply to all:** send a reply to the sender and all of the other recipients.
- **Forward:** forward the e-mail to other people.
- **Delete:** delete the e-mail from the phone's memory or from both the phone's memory and the e-mail server.
- **Add to block list:** add the sender's e-mail address or subjects to the Block list.
- **Cut address:** extract URL addresses, e-mail addresses, and phone numbers.

- **Attached items:** save the selected attachment or all attachments from the e-mail to your phone's memory.
- **Print via Bluetooth:** print the e-mail by connecting the phone to a printer via Bluetooth.



Some printers may not be compatible with the phone.

- **Lock/Unlock:** lock the e-mail to prevent it from being deleted, or unlock the e-mail.
- **Details:** access the e-mail properties.

My folder (Menu 5.2.6)

Use this menu to view the messages you have moved to this folder using the **Move to my folder** option while viewing a message list.

Templates (Menu 5.3)

Use this menu to make and use templates of frequently used messages.

Text template (Menu 5.3.1)

You can create SMS templates with the sentences you use frequently so that you can retrieve and insert them when composing an SMS message.

Creating a template

1. Select an empty location.
2. Enter a message and press [OK/↵].

Using template options

From the template list, select <**Options**> to access the following options:

- **Edit:** edit the template.
- **Send:** create and send a new message using the selected template.

- **Delete:** delete the selected template or all templates.

Multimedia message template

(Menu 5.3.2)

You can access embedded MMS templates or ones you have saved so that you can use them in composing an MMS message.

Creating a template

1. Select **<Options>** → **Add new**.
2. Create a template as you would when creating an MMS message.
3. Select **<Options>** → **Save in** → **Templates**.

Using template options

From the template list, select **<Options>** to access the following options:

- **View:** open the selected template.
- **Send:** send the template via MMS.

- **Edit:** edit the selected template.
- **Add new:** add a new template.
- **Delete:** delete the selected template or all templates. You cannot delete the embedded templates.

Delete all (Menu 5.4)

Use this menu to delete all messages in each message type at once.

1. Select the message folders you want.
2. Select **<Delete>**.
3. Select **<Yes>** to confirm the deletion.

Settings (Menu 5.5)

Use this menu to set up various options for using the messaging services.

Text messages (Menu 5.5.1)

You can configure SMS settings.

- **Sending options:** set up the options for sending SMS messages:
 - Reply path:** allow recipients to reply to you through your SMS server.
 - Request delivery receipt:** set the network to inform you when messages have been delivered.
 - Validity period:** set the length of time your messages are stored in the SMS server.
 - Message type:** set the default message type. The network can convert messages into the selected format.
 - Service centre:** store or change the number of SMS server.
- **Receiving options:** activate 3D view mode for displaying received messages. The phone will convert message text to 3D vivid graphics. This option is available only when the message consists of a single page.

- **Block number:** specify phone numbers from which you want to reject.

Multimedia messages (Menu 5.5.2)

You can configure MMS settings.

- **Sending options:** set up the options for sending MMS messages:
 - Request delivery receipt:** set the network to inform you when your messages have been delivered.
 - Address hiding:** set your address to be hidden from the recipient's phone.
 - Request read receipt:** send a read-reply request along with your messages.
 - Priority:** set the priority level of your messages.
 - Expiry:** set the length of time your messages are stored in the MMS server.
 - Delivery time:** set a time delay before messages are sent.

- **Receiving options:** set up the options for receiving MMS messages:
 - Anonymous reject:** reject messages from unknown senders.
 - Advert allowed:** accept advertisements.
 - Report allowed:** set the network to inform the sender when a message has been delivered to you.
 - Home network:** determine if your phone retrieves new messages automatically when you are in your home service area.
 - Network when abroad:** determine if your phone retrieves new messages automatically when you are roaming on another network. Reception within home network or abroad has the following options:
 - **Automatic:** the phone automatically retrieves messages from the server.
 - **Reject:** the phone rejects all messages.
 - **Manual:** the phone displays notifications. Use the **Retrieve** option to manually download new messages.
 - **Multimedia message profile:** set up an MMS profile and select a profile to be used.
 - Current profile:** select a profile.
 - Profile settings:** configure MMS profiles using different MMS servers:
 - **Profile name:** assign a name to the MMS profile.
 - **Server URL:** enter the address of your MMS server.
 - **Proxy:** connect to the GPRS network using the proxy server.
 - **GPRS settings:** customise the settings required for connecting to the GPRS network.
 - When the proxy is set to **Enable**:*
 - IP address:** enter the gateway address.

Port: enter the port number.

APN: enter the access point name used for the address of the GPRS network.

Login ID: enter the user ID.

Password: enter the password.

*When the proxy is set to **Disable**:*

DNS1: enter the primary address.

DNS2: enter the secondary address.

APN: enter the access point name used for the address of the GPRS network.

Login ID: enter the user ID.

Password: enter the password.

- **Version:** select an available OMA version and maximum size limit for sending or receiving messages.

Depending on your service provider, it may not be possible to support the maximum limit 300KB. In this case, try again after changing the setting to 100KB.

- **Block number:** set the Block number list to reject MMS messages from specific phone numbers. Numbers specified here are also included in the SMS Block number list.
- **Message class:** select the type of message content you will add or the message size.
 - Text only:** you can add only text of up to 30 KB.
 - Small imaging:** you can add any type of item, except for video, of up to 30 KB.
 - Moderate imaging:** you can add any type of item, except for video, of up to 100 KB.
 - Small video:** you can add any type of item of up to 100 KB.
 - Moderate video:** you can add any type of items of up to 300 KB.
- **Creation mode:** select an MMS creation mode.

Warning: you can create a message with any type of content and of any size, but the phone will inform you when the content and size have exceeded the maximum.

Free: you can create a message with any type of contents and of any size.

Restricted: you can create a message with the type of content and size specified in

Message class.

Emails (Menu 5.5.3)

You can configure e-mails settings.

- You cannot change e-mail profile and account settings while an e-mail is being sent or retrieved.

- **Sending options:** set up the options for sending e-mails:

Send copy to self: send a copy of your e-mail to your e-mail account.

Request delivery receipt: set the network to inform you when e-mails have been delivered.

Request read receipt: send a read-reply request for a reply along with e-mails.

Priority: select the priority level of your e-mail.

Add signature: attach your name, phone number, or a simple memo to e-mails.

Edit name: edit the name in your signature.

Edit telephone number: edit the phone number in your signature.

Edit note: edit the tag line in your signature.

- **Receiving options:** set up the options for receiving e-mails:

Check interval: determine how often the phone checks the server for incoming e-mails.

If you select **Not used**, you can use the Check new mail feature to check your e-mail manually.

Send read receipt: determine whether or not the phone sends a read-reply for incoming e-mails. If you select **Announce**, the phone asks you to send a read-reply.

Retrieve option: set whether the phone downloads e-mail headers only or both e-mail headers and bodies.

Delete option: determine whether e-mails are deleted immediately or the next time you connect to the server.

Download limit: determine the maximum size for incoming e-mails. Your phone will reject e-mails that exceed the specified size.

Keep in server: leave the copies of e-mails in the server after retrieving.

- **Email accounts:** set up an e-mail account and select an account to be used:

Current account: select an account.

Account settings: configure e-mail accounts using different e-mail servers. Select **<Create>**, or select **<Options>** → **Create**, if one has already been saved.

- **In use:** select this option to use the account and to display the account in **Email inbox**.

- **Account name:** enter a name for the currently selected account.

To access the following options, select **<Options>** → **Next**.

- **User name:** enter a user name.

- **Email address:** enter your e-mail address.

- **Reply address:** enter your e-mail address to be used when the recipient sends a reply.

To access the following options, select **<Options>** → **Next**.

- **SMTP server:** enter the IP address or host name of the outgoing e-mail server.

- **SMTP port:** enter the SMTP port number.
- **SMTP user ID:** enter the SMTP user name.
- **SMTP password:** enter the SMTP password.
- **Secure connection (SMTP):** use a secure connection for the e-mail service.
- **Retrieve server type:** select the protocol for the incoming e-mail server. The remaining options depend on the protocol type setting.

*When the protocol type is **POP3**:*

- **POP3 server:** enter the IP address or host name of the server that receives your e-mail.
- **POP3 port:** enter the POP3 port number.
- **Same ID and password:** select if you want to have the same user ID and password with the outgoing e-mail server.
- **POP3 user ID:** enter the POP3 user name.

- **POP3 password:** enter the POP3 password.
- **APOP login:** connect to the server by using the APOP login scheme when this option is selected.
- **Secure connection (POP3):** use a secure connection for the e-mail service.

*When the protocol type is **IMAP4**:*

- **IMAP4 server:** enter the IP address or host name of the server that receives your e-mail.
- **IMAP4 port:** enter the IMAP4 port number.
- **Same ID and password:** select if you want to have the same user ID and password with the outgoing e-mail server.
- **IMAP4 user ID:** enter the IMAP4 user name.
- **IMAP4 password:** enter the IMAP4 password.

- **Secure connection (IMAP4):** use a secure connection for the e-mail service.
- **Include attachments:** select this option to receive attachments with e-mails.
- **Email retrieval limit:** set the number of headers you will retrieve from the server.
- **Email profiles:** set up an e-mail profile and select a profile to be used.

Current profile: select a profile.

Profile settings: configure e-mail profiles using different e-mail servers. Set the options for each profile:

- **Profile name:** enter a name for the e-mail profile.
- **APN:** enter the access point name used for the GPRS network address.
- **Login ID:** enter the user ID.
- **Password:** enter the password.
- **DNS1:** enter the primary address.
- **DNS2:** enter the secondary address.

- **Block list:** specify e-mail addresses or subjects you want to reject.

Push messages *(Menu 5.5.4)*



You can change the settings for receiving push messages from the wireless web server.

- **Receive:** set how your phone receives push messages.
- **Service centre:** enter the address of the server from which you want to receive push messages, when the **Receive** option is set to **Text message-C specific**.

SOS message *(Menu 5.6)*

In an emergency, you can send an SOS message to your family or friends for help. You can also receive an SOS message from other people who are in an emergency. Use this menu to specify options for sending and receiving an SOS message.

- **Message sending:** activate or deactivate the SOS message feature. To send an SOS message, press [▲/▼] 4 times when the keypad is locked.

While the phone is attempting to send an SOS message,  turns to red and you cannot access menu functions in this mode. To use the phone as normal, press [] when the icon turns to blue.

- **Recipients:** specify the phone numbers to which you want to send an SOS message.
- **Repeat sending:** set the number of times the phone resends the SOS message.
- **Incoming SOS alert:** set whether or not the phone uses the preset alert type (siren and alert message) for incoming SOS messages. If you select **No**, the phone uses the message ringer setting.

- **Text:** check the preset SOS message text.

You can view the onscreen help by selecting <Options> → **Help**.

Broadcast messages (Menu 5.7)

The broadcast service delivers short messages on various topics such as the weather or traffic. Use this menu to change the settings for the service and to access broadcast messages.

- **Read:** open received messages.
All broadcast messages are stored in the **Temporary** folder and will be deleted when you turn the phone off. If you do not want a message to be deleted, save it to the **Archive** folder. While viewing the message, select <Options> → **Save**.
- **Activation:** enable or disable the reception of broadcast messages.

- **Receiving channels:** specify the channels from which you receive broadcast messages.
- **Language:** select the languages in which broadcast messages display.

Please contact your service provider for details.

Memory status (Menu 5.8)

Use this menu to view the memory status for text, multimedia, e-mail, or push messages.

You can also access a message folder by selecting it from this menu.

My files (Menu 6)




The **My files** menu allows you to access images, videos, voice memos, music files, sounds, and other files stored in the phone's memory or on a memory card.


To access this menu, select <**Menu**> in Idle mode → **My files**.

Tips for Digital Rights Management

As a result of the Digital Rights Management (DRM) system, some of the media items you download from the Internet or receive by MMS may require a licence key to access them. You can acquire the key from the website which owns the rights to the content; use the Activate key option.

Note the following icons on the list:

-  : Forwardable item with a valid key.
-  : Forwardable item without a valid key.
-  : Unforwardable item with a valid key.

-  : Unforwardable item without a valid key.

Your service provider supports only count-based or unlimited-access DRM files.

Images (Menu 6.1)

This menu displays photos you have taken and images you have downloaded, received in messages, or imported from your computer.

Viewing an image

1. Select an image folder.
2. Select an image.

Viewing a slide show

You can view your images as a slide show.

1. Select an image folder.
2. While viewing an image, select **<Options>**
→ **Slide show**.

3. Select a time interval. The slide show begins.
4. Select **<Back>** to stop the slide show.

Using image options

While viewing an image, select **<Options>** to access the following options:

- **List:** return to the image list.
- **Full screen view/Normal view:** change the view mode.
- **Send via:** send the file via MMS, e-mail, or Bluetooth.
- **Set as:** set the file as your wallpaper or as a caller ID image for a Phonebook entry.
- **Edit:** edit the image using the Image editor if it is a photo taken by the camera on the phone. ▶ p. 57
- **Activate key:** get a new licence key when the key for the selected DRM file expires.

Menu functions

- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Move to:** move the file to another folder or a memory card, if inserted.
- **Copy to card:** copy the selected file or all files to a memory card, if inserted.
- **Delete:** delete the selected file.
- **Rename:** change the file name.
- **Slide show:** view all image as a slide show.
- **Bluetooth visibility:** share the file with other Bluetooth devices.
- **Print via:** print the image by connecting the phone to a printer via Bluetooth or USB.



- To print via USB, you first need to set the USB mode to **Pictbridge**. ▶ p. 117
- Some printers may not be compatible with the phone.

- **Lock/Unlock:** lock the file to prevent it from being deleted, or unlock the file.
- **Details:** access the file properties.
- **Key management:** manage the licence keys you have acquired.

Videos *(Menu 6.2)*

This menu displays video clips you have recorded, downloaded, or received in messages, or imported from your computer.













Video clips recorded on other devices, such as camcorders, may not play correctly.

Playing a video clip

1. Select a video folder.
2. Select a video clip.

During playback, use the following keys and icons:

Key/Icon	Function
OK/  / 	Pauses playback.
OK/  / 	Resumes playback.
	Switches to Full screen mode.
Up/ 	Opens the file list.
Left	Returns to the previous file. Moves backward in a file when held down.
Right	Skips to the next file. Skips forward in a file when held down.
 / 	Adjusts the volume.
 /right soft key	Returns to the previous screen.
Down	Stops playback.

After playback, select <  > to access the following options:

- **Play:** play the selected file.
- **Send via:** send the selected file via MMS, e-mail, or Bluetooth.
- **Set as caller image:** set the file as a caller ID image for a Phonebook entry.
- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Move to:** move the file to another folder or a memory card, if inserted.
- **Copy to card:** copy the file to a memory card, if inserted.
- **Delete:** delete the file.
- **Rename:** change the file name.

- **Bluetooth visibility:** share the selected file with other Bluetooth devices.
- **Lock/Unlock:** lock the file to prevent it from being deleted, or unlock the file.
- **Details:** access the file properties.
- **Key management:** manage the licence keys you have acquired.

Music (Menu 6.3)

Use this menu to access music files you have downloaded or imported from your computer.

Playing a music file

Select a file. The music player opens and the selected music file plays. ▶ p. 53



When you close the music player, background music will not continue unless the file is added to the play list.

Sounds (Menu 6.4)

This menu displays the voice memos you have recorded, and sound files you have downloaded, received in messages, or imported from your computer.

Playing a sound clip

1. Select a sound folder.
2. Select a sound clip. For a voice memo, see **Voice recorder.** ▶ p. 56

While playing a sound clip, select **<Options>** to access the following options:

- **List:** return to the sound list.
- **Send via:** send the selected file via MMS, e-mail, or Bluetooth.
- **Set as:** set the file as your ringtone, as a ringtone for a Phonebook entry, or as a ringtone for alarms.

- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Move to:** move the file to another folder or a memory card, if inserted.
- **Copy to card:** copy the file to a memory card, if inserted.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Bluetooth visibility:** share the selected file or the files you want with other Bluetooth devices.
- **Lock/Unlock:** lock the file to prevent it from being deleted, or unlock the file.
- **Details:** access the file properties.
- **Key management:** manage the licence keys you have acquired.

Other files *(Menu 6.5)*

Files that you have received but which are not supported by your phone are stored in this folder. You cannot open these files on the phone.

From the file list, select **<Options>** to access the following options:

- **Send via:** send the file via e-mail or Bluetooth.
- **Activate key:** get a new licence key when the key for the selected DRM file expires.
- **Reactivate key:** get another licence key even when the key for the selected DRM file has not expired.
- **Move to card:** move the selected file to a memory card, if inserted or the phone's memory.
- **Copy to card:** copy the selected file to a memory card, if inserted or the phone's memory.

- **Delete:** delete the selected file or all files.
- **Rename:** change the file name.
- **List by:** change the sort order of the file list.
- **Bluetooth visibility:** share the currently selected file or the files you want with other Bluetooth devices.
- **Print via:** print the image by connecting the phone to a printer via USB or Bluetooth.
 - To print via USB, you first need to set the USB mode to **Pictbridge**. ▶ p. 117
 - Some printers may not be compatible with the phone.
- **Lock/Unlock:** lock the file to prevent it from being deleted, or unlock the file.
- **Details:** access the file properties.
- **Key management:** manage the licence keys you have acquired.

Memory card (Menu 6.6)

Use this menu to access the files stored on a memory card. This menu is shown only when a memory card is inserted into the phone.



- Your phone is preset to use FAT16-formatted memory cards. If you insert a FAT32-formatted memory card, the phone will ask you to reformat the memory card. If you do not, you will not be able to access the card from the phone.
- If a folder on a memory card has subfolders which exceed the maximum folder depth supported by your phone's file system, you may not open or delete the maximum depth subfolders on the phone.

Memory status *(Menu 6.7)*

You can check the total amount of memory for media items and the amount of memory currently in use in each media box. You can also access a media box by selecting it from this menu.

Planner *(Menu 7)*

Use this menu to keep track of your schedule. You can also use convenient features, such as an alarm clock, calendar, memo pad, world clock, calculator, convertor, timer, and stopwatch.

To access this menu, select <**Menu**> in Idle mode → **Planner**.

Alarm *(Menu 7.1)*

Use this menu to set alarms. The alert type for a normal alarm corresponds to the call alert type settings. A wake up alarm is not affected by your sound settings.

Setting an alarm

1. Select the type of alarm.
2. Select an alarm option.
 - **Alarm**: activate the alarm.
 - **Alarm time**: enter the time for the alarm to ring.
 - **AM/PM**: set **AM** or **PM** in 12-hour time format.
 - **Alarm day**: select the days on which you want the alarm to sound. If you select **Once only**, the alarm sounds at the specified time and then is deactivated.
 - **Alarm tone**: select an alarm tone.

3. Select **<Save>**.

Stopping an alarm

- For an alarm, press any key.
- For a wake-up alarm, select **<Confirm>** or press [ok/⌂].
Press any key, except for **<Confirm>** and [ok/⌂], to cause it to sound again after 5 minutes.

Deactivating an alarm

1. Select the alarm you want to deactivate.
2. Select **Off** on the **Alarm** lines.
3. Select **<Save>**.

Setting alarms to sound when the phone is off

From the Alarm screen, select **Auto power** → **On**.

If the phone is off when it is time for the alarm to sound, the phone switches on and sounds the alarm.

Calendar *(Menu 7.2)*

Use this menu to keep track of your monthly schedule.

When you access the **Calendar** menu, the calendar in Month view appears with today's date indicated by a grey box.

Creating an item

You can store appointments, anniversaries, tasks, and miscellaneous items on the calendar. More than one item per day can be stored.

Entering an appointment or a miscellaneous item

1. Select a date on the calendar.

2. Select <**Options**> → **Create** → **Appointment** or **Miscellany**.
3. Enter information or change the settings:
 - **Subject:** enter a title for the item.
 - **Details:** enter item details.
 - **Start date** and **Start time:** enter the starting date and time for the item.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **End date** and **End time:** enter the ending date and time for the item.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **Location:** (for **Appointment**) enter information about the appointed location.
 - **Alarm:** select to set an alarm for the item.
 - **before:** set how long before the item the alarm is to alert you.
 - **Alarm tone:** select an alarm tone.

- **Repeat:** (for **Appointment**) select to set the item to recur.
- **until:** (for **Appointment**) select a repeat unit and set the date to end the repeating.

4. Select <**Save**> to save the item.

Entering an anniversary

1. Select a date on the calendar.
2. Select <**Options**> → **Create** → **Anniversary**.
3. Enter information or change the settings:
 - **Occasion:** enter information about the anniversary.
 - **Date:** enter the date.
 - **Alarm:** select to set an alarm for the anniversary.
 - **before:** set how long before the anniversary the alarm is to alert you.

- **Alarm time:** enter the time for the alarm to sound.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **Alarm tone:** select an alarm tone.
 - **Repeat every year:** set the phone to remind you of the anniversary every year.
4. Select <**Save**> to save the anniversary.


Entering a task

1. Select a date on the calendar.
2. Select <**Options**> → **Create** → **Task**.
3. Enter information or change the settings:
 - **Task:** enter information about the task.
 - **Start date:** enter the starting date.
 - **Due date:** enter the ending date.
 - **Priority:** select a priority level.
 - **Alarm:** select to set an alarm for the task.

- **before:** set how long before the task the alarm is to alert you.
 - **Alarm time:** enter the time for the alarm to sound.
 - **AM/PM:** select **AM** or **PM** in 12-hour time format.
 - **Alarm tone:** select an alarm tone.
4. Select <**Save**> to save the task.

Consulting the calendar

Once you have created items, the item icons and the number of items for a specific day appears at the bottom of the calendar.

-  Appointments
-  Anniversaries
-  Tasks
-  Miscellaneous items

Viewing an item

1. Select a date on the calendar to display the items for that day.
2. Select an item to view its details.
3. Press [Left] or [Right] to access the other items scheduled for the selected day.

While viewing an item, select <**Options**> to access the following options:

- **Edit:** edit the item.
- **Create:** add a new item.
- **Send via:** send the item via SMS, MMS, e-mail, or Bluetooth.
- **View by:** change the view mode of the calendar.
- **Done/Not done:** change the status of the task.
- **Delete:** delete the item.

- **Print via Bluetooth:** print the item details by connecting the phone to a printer via Bluetooth.

Some printers may not be compatible with the phone.

Using calendar options

On the calendar, select <**Options**> to access the following options:

- **View by:** change the view mode of the calendar.
- **Create:** add a new item.
- **Go to:** select today's date or enter a specific date.
- **Event list:** sort items by the type of item.
- **Delete:** delete items stored on the calendar by using various deleting options.
- **Settings:** change the default settings for the calendar:
 - **Starting day:** select which day of the week the calendar starts with.




- **Default view by:** select the default calendar view mode.
- **Missed alarm events:** access items whose alarms you have missed.
- **Memory status:** access the memory information for the items stored on the calendar.


Viewing items in a different mode

You can change the calendar display to Day view or Week view. Select <**Options**> → **View by** → a view mode.

Day view

You can view items for the selected date. The following icons will be displayed according to the items type and status:

-  Alarm set
-  Recurring item
-  Completed task

-  Task priority (Orange: high, Light blue: normal, and Grey: low)

Select an item to view its details.

Week view

You can view items for the selected week. A cell on the timetable indicates the presence of item information. Blue boxes indicate scheduled items, and green boxes indicate miscellaneous items.

Select the cell that contains the item you want.

Memo (Menu 7.3)

You can create a list of memos.

Creating a memo

1. Select <**Options**> → **Create**.
2. Enter the memo contents and press [**OK/**].

Viewing a memo

Select a memo from the list.

While viewing a memo, select **<Options>** to access the following options:

- **Edit:** edit the memo.
- **Send via:** send the memo via SMS, MMS, e-mail, or Bluetooth.
- **Delete:** delete the memo.
- **Print via Bluetooth:** print the memo by connecting the phone to a printer via Bluetooth.



Some printers may not be compatible with the phone.

- **Memory status:** check the number of memos stored in the phone's memory.

World clock *(Menu 7.4)*

Use this menu to find out the current time in another part of the world.

Viewing world time

1. From the world map, press [Left] or [Right] to scroll to the city you want on the upper or lower line. As the time line moves, the time and date of the given zone display.
2. Press [α/\mathcal{I}] to save the time zone.

Applying daylight saving time

1. From the world map, select **<Options>** → **Apply daylight saving time.**
2. Select the time zones you want.
3. Select **<Save>**.

Calculator (Menu 7.5)

Use this menu to perform arithmetic functions such as addition, subtraction, multiplication, and division.

1. Enter the first number.
You can use a decimal point or a bracket, use additional arithmetic functions, and switch to the Convertor screen by selecting **<Options>**.
2. Enter the operation for your calculation by selecting arithmetic functions on the display.
3. Enter the second number.
4. Press [OK/↵] or select = on the display to view the result.
5. If necessary, repeat from step 2 to continue the calculation.

Convertor (Menu 7.6)

Use this menu for common conversions, such as length and temperature.

Performing a conversion

1. Select a type of convertor.
2. Select the original unit and press [Down].
3. Press [OK/↵].
4. Enter the value to be converted and press [OK/↵].
5. Press [Down].
6. Select the unit to which you want to convert. The equivalent value for the amount you entered displays.

While entering the value, select \pm on the display to change the temperature to above zero (+) or below zero (-).

Using convertor options


Select <**Options**> to access the following options:

- **Clear:** clear the current values.
- **Reverse:** reverse the conversion.
- **Exchange rate:** access the currency rate list.


Timer *(Menu 7.7)*

Use this menu to set a period of time for the phone to count down. The phone sounds an alarm when the specified period of time expires.

Starting the timer



1. Select <**Set**>.
2. Enter the length of time you want to count down and select <**OK**>.
3. Select  or press [**OK/i**] to start counting down.

Stopping the timer

- Press any key to stop the timer when it sounds.
- Select  or press [**OK/i**] on the Timer screen to stop the timer before it sounds.

Stopwatch *(Menu 7.8)*

Use this menu to measure elapsed time. The maximum time is 10 hours.

1. Select  or press [**OK/i**] to start the stopwatch.
2. Select  or press [**OK/i**] to select an interval. You can repeat this step for a total of 4 intervals.
3. To reset the stopwatch, select <**Reset**>.

Camera (Menu 8)

You can use the camera module embedded in your phone to take photos and record videos. To access this menu, select <**Menu**> in Idle mode → **Camera**, or press [Camera].



- Do not take photos of people without their permission.
- Do not take photos in a place where cameras are not allowed.
- Do not take photos in a place where you may interfere with another person's privacy.



Take a photo (Menu 8.1)


The camera produces jpeg photos.




- When you take a photo in direct sunlight or in bright conditions, shadows may appear on the photo.

Taking a photo

1. Access the **Take a photo** menu to turn on the camera, and switch the display to Capture mode. You can also press and hold [Camera] in Idle mode.
2. Make any desired adjustments.
 - Press [Up] or [Down] to zoom in or out.
 - Press [Left] or [Right] to adjust the brightness.
 - Press [▲] to flip the image vertically.
 - Press [▼] to show the mirror image.
 - Select < > to use the camera options.
 - ▶ next section
 - Use the setting icons on the display to change the camera settings or switch to other modes. ▶ p. 110
3. Select  at the bottom of the display or press [OK/✔] or [Camera] to take a photo. The photo is saved in the **My photos** folder.

4. To	Select
use photo options	< Options >. ▶ p. 111
send the photo via MMS, e-mail, or Bluetooth	 or press [OK/ⓘ].
delete the photo	[C] → < Yes >.
return to Capture mode	< Back >.

Using camera options in Capture mode

In Capture mode, select <> to access the following options:

- **Record video:** switch to Record mode.
- **Shooting mode:** take a photo in the following modes:
Single shot: take a photo in Normal mode. You can select whether or not the camera automatically saves a photo.

Multi shot: take a series of action stills. You can select the number of photos the camera will take and the shooting speed.

Mosaic shot: take several stills and save them in one frame. You can select the layout.

- **Effects:** change the colour tone or apply a special effect.
- **Frames:** apply a decorative frame.
- **Timer:** set a time delay before the camera takes a photo.
- **Go to My photos:** access the **My photos** folder.
- **Camera settings:** change the default settings for taking a photo.
Photo settings: change the following image settings:
 - **Size:** select an image size.
 - **Quality:** select an image quality.
 - **Viewfinder mode:** select a preview mode.

- **Scene program:** set whether or not to use Night shot mode.
- **Exposure metering:** select a method to determine the exposure of an image, based on a specific area of the image.
- **White balance:** adjust the colour temperature of the camera, depending on the current lighting conditions. You can make the photo look warmer or cooler.
- **ISO:** change the ISO setting, which controls the sensitivity of your camera. For low light situations, select a higher ISO number. The higher the ISO number, the faster the camera shutter functions and the more sensitive the camera is to light. Higher ISO settings may distort an image.




Preferences: change the following camera settings:







- **Shutter sound:** select the sound that you hear when you press the shutter.

- **Zoom sound:** turn the sound effect for zooming on or off.
- **Brightness sound:** turn the sound effect for brightness adjustment on or off.
- **Default name:** change the default prefix of file names.

Using camera setting icons in Capture mode

You can use the setting icons on the display to customise your camera settings in Capture mode.

Icon	Function
	Switches to Record mode. ► p. 112
	Switches to Night shot mode.
	Selects a method to determine the exposure of an image, based on a specific area of the image.

Icon	Function
	Sets the timer
	Changes the shooting mode.
	Changes the image size.
	Changes the image quality setting.
	Changes the white balance.
	Changes the ISO setting.

Using photo options


After saving a photo, select **<Options>** to access the following options:



- **View:** access one of the multi-shot photos.
- **Send via:** send the file via MMS, e-mail, or Bluetooth.
- **Viewfinder:** return to Capture mode.
- **Set as:** set the photo as your wallpaper or as a caller ID image for a Phonebook entry.
- **Edit:** edit the image using the Image editor.
 - ▶ p. 57
- **Delete:** delete the file.
- **Multi shot delete all:** delete the multi-shot photos you want.
- **Rename:** change the file name.
- **Go to My photos:** access the **My photos** folder.
- **Bluetooth visibility:** share the selected file or the files you want with other Bluetooth devices.
- **Print via:** print the image by connecting the phone to a printer via Bluetooth or USB.
 - To print via USB, you first need to set the USB mode to **Pictbridge**. ▶ p. 117
 - Some printers may not be compatible with the phone.
- **Lock/Unlock:** lock the file to prevent it from being deleted, or unlock the file.
- **Details:** access the file properties.




Record video (Menu 8.2)

You can record a video of whatever is displayed on the camera screen.


Recording a video

1. Access the **Record video** menu to turn on the camera and switch the display to Record mode.
2. Make any desired adjustments.
 - Press [Up] or [Down] to zoom in or out.
 - Press [Left] or [Right] to adjust the brightness.
 - Press [▲] to flip the image vertically.
 - Press [▼] to show the mirror image.
 - Select <  > to use the camera options.
▶ next section
 - Use the setting icons on the display to change the camera settings or switch to other modes. ▶ p. 113

3. Select  at the bottom of the display or press [ok/i] or [Camera] to start recording.
4. Select <  > or press [Camera] to stop recording. The video is saved in the **My video clips** folder.

To	Select
play back the video clip	 or press [ok/i].
use video options	<  >. ▶ p. 114
delete the video	[C] → < Yes >.
return to Record mode	<  >.

Using camera options in Record mode

In Record mode, select <  > to access the following options:

- **Take a photo:** switch to Capture mode.
- **Effects:** change the colour tone or apply a special effect.

- **Timer:** set a time delay before the camera starts recording a video.
- **Go to My video clips:** access the **My video clips** folder.
- **Camcorder settings:** change the following settings for recording a video:
 - Recording mode:** select a video recording mode.
Select **Limit for multimedia messages** or **Limit for emails** to record a video suitable for an MMS message or e-mail. The video clip is saved in 3gp file format.
Select **Normal** to record a video within the limit of the currently available memory. The video clip is saved in mp4 file format.
 - Size:** select a frame size.
 - Quality:** select an image quality.
 - Viewfinder mode:** select a preview mode.
 - Record audio:** record a video with audio.

White balance: adjust the colour temperature of the camera, depending on the current lighting conditions. You can make the video look warmer or cooler.

Scene program: set whether or not to use Night shot mode.






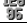
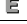

Zoom sound: turn the sound effect for zooming on or off.

Brightness sound: turn the sound effect for brightness adjustment on or off.


Default name: change the default prefix of file names.

Using camera setting icons in Record mode

You can use the setting icons on the display to customise your camera settings in Record mode.

Icon	Function
	Switches to Capture mode. ▶ p. 108
	Change the video recording mode.
	Mutes or unmutes audio.
	Sets the timer.
	Switches to Night shot mode.
	Changes the frame size.
	Changes the image quality setting.
	Changes the white balance.

Using video options

After saving a video clip, select <  > to access the following options:

- **Viewfinder:** return to Record mode.

- **Send via:** send the file via MMS, e-mail, Bluetooth.
- **Set as caller image:** set the file as a caller ID image for a Phonebook entry.
- **Delete:** delete the file.
- **Rename:** change the file name.
- **Go to My video clips:** access the **My video clips** folder.
- **Bluetooth visibility:** share the file with other Bluetooth devices.
- **Lock/Unlock:** lock the file to prevent it from being deleted, unlock the file.
- **Details:** access the file properties.

Go to My photos *(Menu 8.3)*

Use this menu to access a list of photos you have taken. ▶ p. 93

Go to My video clips (Menu 8.4)

Use this menu to access a list of videos you have recorded. ▶ p. 94

Settings (Menu 9)

The **Settings** menu provides you with various setting options to customise the phone to your preferences and needs. You can also reset the settings to their default values.

To access this menu, select <**Menu**> in Idle mode → **Settings**.

Time and date (Menu 9.1)

Use this menu to set the current time and date on your phone.

- **Home zone:** set your home time zone. Select the city that corresponds to your home zone. To set the daylight saving time, select **Set daylight saving time**.

- **Time:** enter the current time.
- **AM/PM:** select **AM** or **PM** in 12-hour time format.
- **Time format:** select a time format.
- **Date:** enter the current date.
- **Date format:** select a date format.
- **Auto update:** activate the auto time update feature. Your phone will read the MCC (Mobile Country Code) from the network and automatically update the current time for the country that you are in when you travel abroad.



Time information may not be updated when you move to one time zone to another within a country.

Phone settings (Menu 9.2)

Many different features of your phone's system can be customised to suit your preferences.

Language (Menu 9.2.1)

Use this menu to select a language for the display.

Greeting message (Menu 9.2.2)

Use this menu to enter the greeting that is displayed briefly when the phone is switched on.

Shortcuts (Menu 9.2.3)

You can use the Navigation keys as shortcut keys to access specific menus directly from Idle mode. Use this menu to assign a shortcut to a key.

Assigning a shortcut to a key


1. Select the key to be used as a shortcut key.
2. Select the menu that will be assigned to the key.

Using shortcut options

Select <**Options**> to access the following options:

- **Assign**: assign a shortcut menu.
- **Change**: change a shortcut menu.
- **Remove**: deactivate the shortcut assignment to the selected key.
- **Remove all**: deactivate all shortcut assignments.

Idle shortcuts (Menu 9.2.4)

Use this menu to change the shortcut icons on the idle screen. The  icon is fixed. You can set shortcut icons up to 2.

1. Remove the check mark from the list.
2. Select the menu you want.
3. Select <**Save**>.

Volume key (Menu 9.2.5)

Use this menu to change the volume key settings.

- **Volume key function:** set whether the phone mutes the call ringer or rejects a call if you press and hold [▲/▼] when a call comes in. You can also set whether the phone sends an SMS message to the caller when a call is rejected.
- **Text message:** enter a message to be sent to the caller when a call is rejected.

USB settings (Menu 9.2.6)

Use this menu to select a USB mode to be used when you connect your phone to a PC or printer via USB.

- **Modem:** select to use your phone as a modem.
- **Mass storage:** select to access a memory card, if a memory card is inserted.

- **Pictbridge:** select to connect your phone to a PictBridge-compatible printer.

Extra settings (Menu 9.2.7)

You can turn the automatic redialling or answering features on or off.

- **Auto redial:** set the phone to make up to ten attempts to redial a phone number after an unsuccessful call.
- **Anykey answer:** answer an incoming call by pressing any key, except for <Reject>, [▲/▼], [HOLD] and [📞].
- **Voice clarity:** remove extraneous noise and increase call quality so that the person with whom you are speaking can hear you clearly even if you are in a noisy place.
- **Auto keypad lock:** set the phone to lock the keypad automatically when the display turns off.

Offline mode (Menu 9.2.8)

Use this menu to switch the phone to Offline mode, or back to Online mode.

Display settings (Menu 9.3)

Use this menu to change settings for the display and light.

Wallpaper (Menu 9.3.1)

You can change the settings for the background image.

- **Wallpaper:** select a background image in Idle mode.
- **Menu background:** set whether to display the same background image in Menu mode.
- **Transparency:** adjust the transparency of the menu background image.

Text display (Menu 9.3.2)

You can change the display settings for the text displayed on the idle screen.

- **Text position:** select a position. If you do not want text to display in Idle mode, select **Off**.
- **Text style:** select a font style.
- **Text colour:** select a font colour.

Skin (Menu 9.3.3)

You can select a skin colour pattern for Menu mode.

Brightness (Menu 9.3.4)

You can adjust the brightness of the display for varying lighting conditions.

Dialling display (Menu 9.3.5)

Use this menu to customise the settings for numbers entered and the background colour of the display while dialling.

Show caller ID (Menu 9.3.6)

Use this menu to set the phone to display missed call notifications with the most recently missed caller's information.

TV-out (Menu 9.3.7)

Use this menu to select a video system of your TV.

Sound settings (Menu 9.4)

Use this menu to customise various sound settings.

Incoming call (Menu 9.4.1)

Use this menu to select a volume level and alert type for incoming calls.

- **Alert type:** specify how you are to be informed of incoming calls.
- **Ring tone:** select a ringtone for the call ringer.
- **Volume:** select a ringer volume.

Keypad tone (Menu 9.4.2)

Use this menu to select the tone that the phone sounds when you press a key.



You can adjust the key tone volume using [▲/▼] in Idle mode.

Message tone (Menu 9.4.3)

Use this menu to set up the ringtone for incoming messages.

- **Alert type:** specify how you are informed when a message comes in.
- **Tone:** select one of the several message tones.
- **Repetition:** specify how often the phone informs you of a new message.

Touch tone (Menu 9.4.4)

Use this menu to select the melody that the phone sounds when you touch the screen.

Power-on/off tone (Menu 9.4.5)

Use this menu to select the melody that the phone sounds when it is switched on or off.

Silent mode (Menu 9.4.6)

Use this menu to set how the phone acts to alert you to a specific event in Silent mode.

Extra tones (Menu 9.4.7)

Use this menu to customise additional tones for the phone.

- **Minute minder:** set the phone to beep every minute during an outgoing call to keep you informed of the length of your call.
- **Connection tone:** set the phone to beep when an outgoing call is connected to the system.
- **Alerts on call:** set the phone to beep when you receive a new message or when the time for an alarm comes during a call.
- **Indicative tone:** set the phone to beep when a pop-up window displays.

Touch settings (Menu 9.5)

Use this menu to change the setting for using the touch screen.


Calibration (Menu 9.5.1)

You can calibrate your phone's touch screen. When you turn on the phone for the first time or if the screen does not recognise your touches or reacts incorrectly to your touches, you need to recalibrate the phone. Tap the cross hair object firmly and precisely.

Handwriting (Menu 9.5.2)

You can change the settings for using Handwriting mode.

- **Style:** select a pen type. You can also select a line thickness of the pen, or a pen colour.

- **Recognition:** set the number of the text input fields so that you can enter characters, switching between text input fields. You can also select the time interval for entering a character by tapping .

Light settings (Menu 9.6)

Use this menu to change settings for the light.

Backlight time (Menu 9.6.1)

You can select the length of time the backlight or display stays on.

- **On:** select the length of time the backlight stays on.
- **Dim:** select the length of time the display stays on in Dim mode after the backlight turns off. After a specified time, the display turns off.
- **During charging:** set whether or not to activate Dim mode while charging your phone.

Keypad light (Menu 9.6.2)

You can set how the phone controls the use of the keypad light.

- **Any time:** the keypad light is always used.
- **Night time:** the keypad light is used only between 5:00 PM and 9:00 AM.
- **Custom time:** you can specify the time period that the keypad light is used.

Network services (Menu 9.7)

Use this menu to access network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

Call diverting (Menu 9.7.1)

This network service reroutes incoming calls to a phone number that you specify.

1. Select a call diverting option:
 - **Divert always:** divert calls.
 - **Busy:** divert calls when you are on another call.
 - **No reply:** divert calls when you do not answer the phone.
 - **Unreachable:** divert calls when you are not in your service area or when your phone is switched off.
 - **Cancel all:** cancel all call diverting options.
2. Select the type of calls to be diverted.
3. Select **Activate**. To deactivate call diverting, select **Deactivate**.
4. Move to the **Divert to** line.
5. Enter the number to which calls are to be diverted and choose **<Select>**.
6. If you selected **No reply**, move to the **Sec** line and select the length of time the network delays before diverting a call.

Call barring (Menu 9.7.2)

This network service allows you to restrict your calls.

1. Select a call barring option:
 - **All outgoing:** prohibit outgoing calls.
 - **International:** prohibit international calls.
 - **International except home:** only allow calls to numbers within the current country when you are abroad, and to your home country.
 - **All incoming:** prohibit incoming calls.
 - **Incoming while abroad:** prohibit incoming calls when you use your phone outside of your home service area.
 - **Cancel all:** cancel all call barring settings, allowing to be sent and received normally.

- **Change barring password:** change the call barring password obtained from your service provider.

2. Select the type of calls to be barred.
3. Select **Activate**. To deactivate call barring, select **Deactivate**.
4. Enter the call barring password supplied by your service provider and choose **<Select>**.

Call waiting (Menu 9.7.3)

This network service informs you when someone is trying to reach you while you are on another call.

1. Select the type of calls to which the call waiting option will apply.
2. Select **Activate**. To deactivate call waiting, select **Deactivate**.

Network selection (Menu 9.7.4)

This network service allows you to manually select the network to be used while roaming outside of your home area, or to let the network be chosen automatically. You can select a network other than your home network only if there is a valid roaming agreement between the two.

Caller ID (Menu 9.7.5)

This network service allows you to hide your phone number from the person you are calling. However, some networks do not allow the user to change this setting. If you select **Default**, the phone will use the default setting provided by the network.

Voice mail server (Menu 9.7.6)

Use this menu to store the number of the voicemail server and access your voicemails.



Your service provider can give you the voicemail server number.

- **Connect to voice server:** connect to the voicemail server to allow you to listen to your messages.
- **Voice server number:** enter the voicemail server number.

Band selection (Menu 9.7.7)

For the phone to make and receive phone calls, it must register with an available network.

Your phone can handle any of the following types of networks: Combined GSM 900/1800, GSM 1900, and Tri band (GSM 900/1800/1900).

The country where you purchased your phone determines the default band that it uses. When you travel abroad, you must remember to change to an appropriate band.

Security (Menu 9.8)

Use this menu to protect the phone against unauthorised use by managing the several access codes of your phone and SIM card.

- If you enter an incorrect PIN/PIN2 three times, the SIM card is blocked. To unblock it, you need to enter your PUK/PUK2 (Personal Unblocking Key). The codes are supplied by your network operator.

PIN check (Menu 9.8.1)

The 4- to 8-digit PIN (Personal Identification Number) protects your SIM card against unauthorised use. When this feature is enabled, the phone requires your PIN each time it is switched on.

Change PIN (Menu 9.8.2)

Use this menu to change your PIN. The PIN check feature must be enabled to use this feature.

Phone lock (Menu 9.8.3)

The Phone lock feature locks the phone from unauthorised use.

When this feature is enabled, you must enter a 4- to 8-digit phone password each time the phone is switched on.

The password is preset to **00000000**. To change the password, use the **Change password** menu.

Change password (Menu 9.8.4)

Use this menu to change your phone password.

Privacy (Menu 9.8.5)

Use this menu to lock access to call logs, Phonebook, or your media contents, including messages, media files, and document files.

1. Select the items to lock.
2. Select <**Save**> to lock the marked items.
3. Enter the phone password and select <**OK**>.

To access a locked item, you need to enter the phone password.

SIM lock (Menu 9.8.6)

The SIM lock feature allows your phone to work only with the current SIM by assigning a SIM lock code. You must enter the SIM lock code to use a different SIM card.

FDN mode (Menu 9.8.7)

If supported by your SIM card, Fixed Dialling Number (FDN) mode restricts your outgoing calls to a limited set of phone numbers. When this feature is enabled, you can make calls only to phone numbers stored on the SIM card.

Change PIN2 (Menu 9.8.8)

If supported by your SIM card, use this menu to change your current PIN2.

Mobile tracker (Menu 9.8.9)

When someone tries to use your phone with another SIM card, the phone will automatically send the preset tracking message to your family or friends. You can check the phone number from which the messages are sent and then track your phone. This feature is useful when the phone is stolen or lost.

- Sending of the tracking message will be billed to the user of the unauthorised SIM card. To use your phone with any other SIM card, you must first deactivate the mobile tracking feature.

1. Enter the phone password and select **<OK>**.
2. Specify the following options:
 - **Mobile tracker:** activate the Mobile tracker feature.
 - **Recipients:** specify phone numbers to which you want to send the tracking messages.
 - **Sender:** enter the sender's name.
 - **Message:** check the preset tracking message text.
3. When you have finished, press **<Save>**.
4. Press **<Accept>** if you agree to the terms and conditions of service listed on the screen.

Memory status *(Menu 9.9)*

Use this menu to check the amount of memory being used for storing data in Shared memory, Messages, My files, Calendar, Phonebook, JAVA world, and Memo.

Reset settings *(Menu 9.10)*

Use this menu to reset the phone settings, display settings, sound settings, and light settings individually.

1. Select the setting categories to be reset.
2. Select **<Reset>** to reset the marked items → **<Yes>**.
3. Enter the phone password and select **<OK>**.

- The password is preset to **00000000**. You can change this password. ▶ p. 125

Key management *(Menu 9.11)*

Use this menu to manage the licence keys you have acquired to activate media files locked by DRM systems.

Select **<Options>** to access the following options:

- **View:** open the corresponding item.
- **Delete:** delete the selected licence key.
- **Go to My Messages:** access the message that contains the media file.
- **Go to My Items:** access the corresponding file folder.
- **Go to Java:** access the corresponding game.
- **Details:** access the properties of the licence key.

Solve problems

Help and personal needs

To save the time and expense of an unnecessary service call, perform the simple checks in this section before contacting a service professional.

When you switch on your phone, the following messages may appear:

“Insert SIM”

- Be sure that the SIM card is correctly installed.

“Phone lock”

- The automatic locking function has been enabled. You must enter the phone’s password before you can use the phone.

“Enter PIN”

- You are using your phone for the first time. You must enter the PIN supplied with the SIM card.

- The PIN check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN check** menu.


“Enter PUK”

- The PIN code has been entered incorrectly three times, and the SIM card is now blocked. Enter the PUK supplied by your service provider.


“No Service,” “Network Failure,” or “Not Done” displays

- The network connection has been lost. You may be in a weak signal area. Move and try again.
- You are trying to access an option for which you have no subscription with your service provider. Contact the service provider for further details.

You have entered a number but it was not dialled

- Be sure that you have pressed [].
- Be sure that you have accessed the right cellular network.
- Be sure that you have not set an outgoing call barring option.

Your correspondent cannot reach you

- Be sure that your phone is switched on. ([] pressed for more than one second.)
- Be sure that you have accessed the right cellular network.
- Be sure that you have not set an incoming call barring option.

Your correspondent cannot hear you speaking


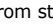

- Be sure that you have switched off the microphone.

- Be sure that you are holding the phone close enough to your mouth. The microphone is located at the bottom of the phone.

The phone starts beeping and "Battery low" flashes on the display

- Your battery is insufficiently charged. Recharge the battery.

The audio quality of the call is poor

- Check the signal strength indicator on the display (). The number of bars indicates the signal strength from strong () to weak ().
- Try moving the phone slightly or moving closer to a window if you are in a building.

No number is dialled when you re-call a Contacts entry

- Use the **Contact list** feature to ensure the number has been stored correctly.

- Re-store the number, if necessary.

The battery does not charge properly or the phone sometimes turns itself off

- Wipe the charging contacts both on the phone and on the battery with a clean soft cloth.

If the above guidelines do not help you to solve the problem, take note of:

- The model and serial numbers of your phone
- Your warranty details
- A clear description of the problem

Then contact your local dealer or Samsung after-sales service.

Health and safety information

SAR certification information

This phone meets European Union (EU) requirements concerning exposure to radio waves.

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured to not exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit recommended by the EU Council is 2.0 W/kg.¹ The highest SAR value for this model phone was 0.673 W/kg.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value.

This is because the phone is designed to

operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

Before a new model phone is available for sale to the public, compliance with the European R&TTE Directive must be shown. This directive includes as one of its essential requirements the protection of the health and safety of the user and any other person.

Precautions when using batteries

- Never use a charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power. Talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.

1. The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary, depending on national reporting requirements and the network band.

- Battery charging time depends on the remaining battery charge, the type of battery, and the charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries, and recharge your battery only with Samsung-approved chargers. Disconnect the charger from the power source when it is not in use. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places because the capacity and lifetime of the battery will be reduced. Try to keep the battery at room temperature. A phone with a hot or cold battery may not work temporarily, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0°C (32°F).
- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object like a coin, clip or pen causes a direct connection between the + and – terminals of the battery (metal strips on the battery). For example, do not carry a spare battery in a pocket or bag where the battery may contact metal objects. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

Road safety

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone while driving, follow local regulations in the country or region you are in.

Operating environment

Remember to follow any special regulations in force in the area you are in, and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for

detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

Electronic devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

Pacemakers

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research. If you have any reason to suspect that interference is taking place, switch off your phone immediately.

Hearing aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

Other medical devices

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Your physician may be able to assist you in obtaining this information.

Switch off your phone in health care facilities when regulations posted in these areas instruct you to do so.

Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

Posted facilities

Switch off your phone in any facility where posted notices require you to do so.

Potentially explosive environments

Switch off your phone when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants, or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include the areas below decks on boats,

chemical transfer or storage facilities, vehicles using liquefied petroleum gas, such as propane or butane, areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.


Emergency calls

This phone, like any wireless phone, operates using radio signals, wireless, and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications like medical emergencies.

To make or receive calls, the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when

certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call:

1. Switch on the phone.
2. Key in the emergency number for your present location. Emergency numbers vary by location.
3. Press [].

Certain features like Call Barring may need to be deactivated before you can make an emergency call. Consult this document and your local cellular service provider.

Other important safety information

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the phone, its parts, or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. Improperly installed wireless equipment could result in serious injury if the air bag inflates.
- Switch off your phone before boarding an aircraft. It is dangerous and illegal to use wireless phones in an aircraft because they can interfere with the operation of the aircraft.

- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

Care and maintenance

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children and pets. They accidentally damage these things or choke on small parts.
- Keep the phone dry. Precipitation, humidity, and liquids contain minerals that corrode electronic circuits.
- Do not use the phone with a wet hand. Doing so may cause an electric shock to you or damage to the phone.
- Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
- Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone. Wipe it with a soft cloth.

- Do not paint the phone. Paint can clog the device's moving parts and prevent proper operation.
- Do not put the phone in or on heating devices, such as a microwave oven, stove, or radiator. The phone may explode when overheated.
- When the phone or battery gets wet, the label indicating water damage inside the phone changes colour. In this case, phone repairs are no longer guaranteed by the manufacturer's warranty, even if the warranty for your phone has not expired.
- If your phone has a flash or light, do not use it too close to the eyes of people or animals. This may cause damage to their eyes.
- Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
- If the phone, battery, charger, or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

Index

A

- Alarm • 99
 - Answering
 - call • 39
 - second call • 41
 - Anykey answer • 117
 - Auto redial • 117
- ### **B**
- Background image • 118
 - Backlight time, set
 - display • 121
 - keypad • 122
 - Band selection • 124
 - Barring, calls • 123
 - Battery
 - charging • 7
 - low indicator • 8
 - precautions • 132
 - Bluetooth
 - receiving, data • 62

- sending, data • 61
- settings • 60
- Broadcast messages • 91
- Browser, web • 67

C

- Calculator • 106
- Calendar • 99
- Call costs • 45
- Call records
 - dialled • 44
 - missed • 44
 - received • 44
- Call time • 45
- Caller group • 49
- Caller ID • 124
- Calls
 - answering • 39
 - barring • 123
 - diverting • 122
 - holding • 41

- making • 38
 - redialling • 39
 - rejecting • 39
 - waiting • 123
- Camera
 - photos • 108
 - videos • 112
- CB (Cell Broadcast) messages • 91
- Characters, enter • 32
- Connection tone • 120
- Convertor • 106
- Creating messages
 - e-mail • 75
 - MMS • 73
 - SMS • 71

D

- Date, set • 115
- Deleting
 - calendar items • 103

- call logs • 44
- contacts • 46, 51
- e-mail • 81, 83
- MMS • 78, 80, 83
- SMS • 77, 80, 83
- Dialled calls • 44
- Dialling display, set • 119
- Display
 - backlight, set • 121
 - brightness • 118
 - icons • 10, 11
 - language • 116
 - layout • 10
 - settings • 118
- Diverting, calls • 122
- Document files • 97
- DRM (Digital Rights Management) • 92
- DTMF tones, send • 42
- E**
- E-mails
 - creating/sending • 75

- deleting • 81
- setting • 87
- viewing • 80
- Emergency calls • 136
- English mode, text input • 35

F

- FDN (Fixed Dialling Number) mode • 126
- File manager • 92

G

- Games • 62, 63
- Greeting message • 116

H

- Handwriting mode • 32
- Health and safety • 131
- Holding, call • 41

I

- Icons, description • 10
- Image editor • 57
- Images, downloaded • 93

- Inbox, messages
 - e-mail • 80
 - MMS/SMS • 76
- International calls • 39
- Internet • 67

K

- Key management • 128
- Key tones
 - selecting • 119
 - sending/muting • 42
 - volume • 119
- Keyboard mode • 37
- Keypad mode • 35

L

- Language, select • 116
- Last number, redial • 39
- Light settings • 121
- Locking
 - media contents • 126
 - phone • 125
 - SIM card • 126
- Low battery indicator • 8

M

Memory card

- accessing files • 98
- installing • 31

Memory status

- contacts • 51
- file manager • 99
- messages • 92
- phone • 127

Menu style • 118

Message tone • 120

Messages

- cell broadcast • 91
- configuration • 78
- e-mail • 75
- greeting • 116
- MMS • 73
- push • 78
- SMS • 72

Minute minder • 120

Missed calls • 44

MMS messages

- creating/sending • 73

- deleting • 78

- setting • 84

- viewing • 76

Mobile tracker • 126

Multiparty-call • 42

Music player • 52

Music, downloaded • 96

My files • 92

N

Name card • 50

Names

- entering • 32

- searching • 46

Network band, select • 124

Network selection • 124

Network services • 122

Numbers

- searching • 46

- storing • 47

O

Offline mode • 118

Outbox, messages • 79

P

Password

- call barring • 123
- phone • 125

Phone

- care and maintenance •
138

- display • 10

- icons • 10

- locking • 125

- password • 125

- resetting • 127

- switching on/off • 8

- unpacking • 6

Phonebook

- adding • 47

- deleting • 46, 51

- editing • 46

- managing • 51

- options • 46

- searching • 46

- speed dialling • 49
- Photos
 - editing • 57
 - taking • 108
 - viewing • 93
- PIN, change • 125
- PIN2, change • 126
- Power on/off tone • 120
- Privacy • 126
- Problems, solve • 129
- Push messages • 78, 90
- R**
- Received calls • 44
- Received messages
 - e-mail • 80
 - MMS/SMS • 76
- Recording
 - videos • 112
 - voice memos • 55
- Redialling
 - automatically • 117
 - manually • 39

- Resetting phone • 127
- Ringer
 - incoming calls • 119
 - messages • 120
- Road safety • 134
- Roaming • 124
- S**
- Safety
 - information • 131
 - precautions • 1
- Security, calls • 125
- Sentbox, messages • 80
- Shortcut • 116
- Silent mode
 - entering • 16
 - setting • 120
- SIM card
 - inserting • 7
 - locking • 126
- Skin colour • 118
- Slide settings • 116
- SMS messages

- creating/sending • 72
- deleting • 77
- setting • 84
- viewing • 76
- Sound settings • 119
- Sounds, downloaded • 96
- Speed dial • 49
- Stopwatch • 107
- Switching on/off
 - microphone • 42
 - phone • 8
- T**
- T9 mode, text input • 36
- Templates, message • 82
- Text, enter • 32
- Time, set • 115
- Timer • 107
- TV out • 20, 28
- U**
- USB settings • 117

V

Videos

- playing • 94
- recording • 112

Voice recorder

- playing • 56
- recording • 55

Voicemail server • 124

W

Waiting call • 123

Wallpaper • 118

Web browser

- access • 67
- bookmarks • 69

World time • 105

Declaration of Conformity (R&TTE)

For the following product :

GSM900/GSM1800/GSM1900 with Bluetooth

Portable Cellular Telephone

(Product description)

SGH-E890

(Model name)

Manufactured at :

- Samsung Electronics Co., Ltd, 94-1, Imsoo-Dong, Gumi City, Kyung-Buk, Korea,
730-350

(factory name, address)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

Safety : EN 60950-1:2001
EMC : EN 301 489-01 v1.4.1 (08-2002)
EN 301 489-07 v1.2.1 (08-2002)
EN 301 489-17 v1.2.1 (08-2002)
SAR : EN 50360:2001, EN 50361:2001
Network : EN 301 511 v9.0.2 (03-2003)
EN 300 328 v1.6.1 (11-2004)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex[IV] of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

BABT, Balfour House, Churchfield Road,
Walton-on-Thames, Surrey, KT12 2TD, UK
Identification mark: 0168


CE 0168

The technical documentation kept at :

Samsung Electronics QA Lab.

which will be made available upon request.
(Representative in the EU)

Samsung Electronics Euro QA Lab.
Blackbushe Business Park, Saxony Way,
Yateley, Hampshire, GU46 6GG, UK
2006.09.07

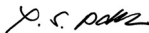

Yong-Sang Park / S. Manager

(place and date of issue)

(name and signature of authorized person)

* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

- * Depending on the software installed or your service provider or country, some of the descriptions in this guide may not match your phone exactly.
- * Depending on your country, your phone and accessories may appear different from the illustrations in this guide.

SAMSUNG ELECTRONICS



World Wide Web
<http://www.samsungmobile.com>

Printed in Korea
Code No.:GH68-12558A
English (SEA). 11/2006. Rev. 1.0