



# mCig<sup>®</sup> 4.0 USER MANUAL



# CONTENTS

<b>4</b>	PACKING CONTENTS:	<b>13</b>	CLEANING
<b>5</b>	<b>mCIG®</b> PEN OVERVIEW	<b>15</b>	TIPS
<b>7</b>	LOADING	<b>16</b>	WARNINGS
<b>8</b>	USING	<b>17</b>	WARRANTY
<b>10</b>	CHARGING	<b>13</b>	IMPORTANT SAFETY NOTICE AND DISCLAIMER

## **PACKING CONTENTS:**

1 **mCig®** 4.0 Pen Vaporizer

1 Cleaning Brush Tool

1 Packing Tool

1 USB Charging Cable

1 User Manual

## **mCIG® 4.0 PEN OVERVIEW**

1. Mouthpiece

2. Heating Chamber

3. Power Button


4. Rechargeable Battery

5. Indicator Light

6. Charging Indicator

7. Micro USB Interface

# mCIG® 4.0 PEN OVERVIEW

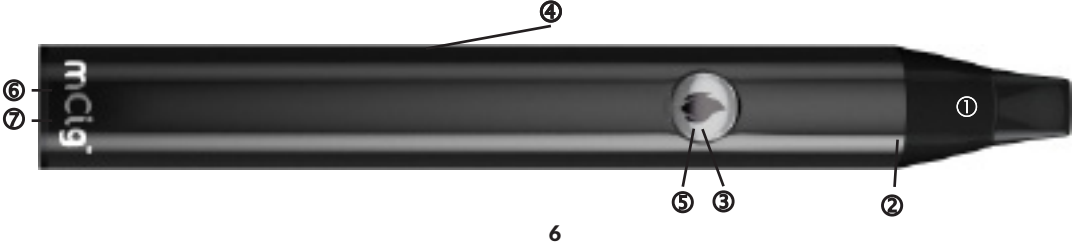

## **LOADING**

To load your mCig® 4.0 Pen Vaporizer follow these steps:

1. Remove mouthpiece by pulling it away from pen.
2. Fill the heating chamber with .15g-.2g ground dry herb.
3. Use the packing tool to evenly and gently pack the chamber.
4. Push the mouthpiece back onto the pen.

## USING

To unlock and power up the **mCig® 4.0** Vaporizer Pen, rapidly press the button 3 times. Indicator light will be solid red until temperature reaches 180°C (356°F). Once optimal temperature is reached, light will turn green. The **mCig® 4.0** heats up in 40-50 seconds. Gently inhale, exhale, welcome to the **mCig® 4.0**!

Feel free to hit the **mCig® 4.0** Vaporizer Pen as it heats up for some great flavors. Temperature will keep between 195°C and 225°C after the indicator light turns green. After 4 minutes the **mCig® 4.0** Vaporizer Pen will automatically shut off. Press the button 3 times rapidly to power up again.



**USING**



## **CHARGING: FIRST USE**

We recommend charging the mCig® 4.0 Vaporizer Pen battery for at least 6 hours on the first charge. This will condition the battery for optimal capacity.

The charging indicator stays red while the device is charging. The red indicator light will no longer be illuminated when the battery is full.

## **CHARGING: REGULAR USE**

When the battery voltage is lower than 3.3v, the indicator light will flash red 8 times. After the low voltage warning occurs three times, the drive will lock until the battery is charged and the voltage returns to normal.

The mCig® 4.0 Vaporizer Pen should be charged for 4-5 hours for full power. Use the included USB charging cable to charge your battery.

## CHARGING



## **CLEANING**

Clean the device for better performance after using the mCig 4.0 Vaporizer Pen. It is easiest to clean out vaporized material while the device is cooling vs cleaning while cold. Use the included cleaning tool to gently remove spent material from the chamber. Make sure the mouthpiece screen is also free from resin or dry material before replacing.

## **MOUTHPIECE**

To clean mouthpiece, unscrew it by twisting counterclockwise. Use an alcohol soaked cotton swab or alcohol swab to clean any residue buildup inside the mouthpiece or on either side of the filter.

## **HEATING CHAMBER**

Use alcohol sparingly on cotton to clean the inside of the chamber only when needed, never dump alcohol in the chamber

## TIPS

- Do not pack the heating chamber too tight with dry herbs. Airflow is essential for optimal vaporization.
- When device shuts off after 4 minutes of use automatically, wait 3 seconds before reactivating the device.
- If no vapor is pulling through mouthpiece, use the packing tool to gently rotate dry herb in the chamber.
- For best results, break up dry herb by hand or use a grinder. Remove all stems and/or seeds from dry herb.

## **WARNINGS**

- Do NOT fill heating chamber with any stems/seeds, this can damage the mCig® 4.0 Vaporizer Pen. This will void the warranty.
- Do NOT touch the heating chamber when either red or green power indicator is illuminated. WAIT 60 seconds from the device powering down before touching the chamber.
- Keep the mCig® 4.0 Vaporizer Pen away from water or any other liquids.
- Do NOT put any foreign objects into the opening of the mCig® 4.0 Vaporizer Pen.



## **WARRANTY**

mCig, Inc. warrants this device against defects in materials and workmanship under normal use for a period of one year from the date of retail purchase by the original end-user purchaser.

If a physical defect arises and a claim is received within the Warranty Period, mCig, Inc. will at its option and to the extent permitted by law, either:

- (1) Repair the product defect, or
- (2) Exchange the product with a product that is new or is at least functionally equivalent product.

## **IMPORTANT SAFETY NOTICE AND DISCLAIMER**

The mCig® 4.0 is for adult consumption only, except in states where youth can deploy this device under the strict supervision of an adult via a doctor's recommendation. The mCig® should be viewed as a recreational device in states or localities where adult use is permitted. In medical states or localities, the use of this device should be discussed with the medical professional that writes the recommendation for the individual's safety and intended efficacy. It should not be considered a safe alternative to cigarettes, tobacco, or other nicotine based products. The mCig® 4.0 is not intended for curing or mitigating any disease or condition. The mCig® 4.0 should not be employed to administer any illegal products in accordance with state and local law. Use of the device for illegal purposes voids the warranty. Do not use the mCig® device in public unless expressly permitted by the locality or state. Do not use the mCig® while operating a motor vehicle, motor craft, or heavy machinery. Do not use the mCig® under the influence of alcohol.





mCig.org