

Content

1.1 Outlook for your tablet PC	- 3 -
1.2 Attachment.....	- 4 -
1.3 Turning On/Off.....	- 4 -
Turning On	- 4 -
Turning Off	- 4 -
Standby	- 4 -
The main key	- 5 -
Status Bar	- 5 -
Shortcuts	- 5 -
Widgets	- 6 -
Wallpapers	- 6 -
Touch screen	- 6 -
2.2 Volumes.....	- 7 -
Set the volumes	- 7 -
2.3 People.....	- 7 -
New contact	- 8 -
Edit contacts/ Delete contacts.....	- 8 -
Backup contacts	- 9 -
Import contacts	- 9 -
Favorite contacts	- 9 -
3.1 Phone.....	- 10 -
Make a phone call	- 10 -
Receive calls	- 11 -
Handsfree	- 11 -
Mute	- 11 -
Telephone conference.....	- 11 -
Call history	- 11 -
Emergency call	- 11 -
3.2 Message.....	- 12 -
Write messages	- 12 -
Answer messages	- 12 -
Write MMS	- 13 -
4.1 Use the Google Account login.....	- 14 -
Regain your Google account's password.....	- 14 -
Set data synchronization.....	- 14 -

4.2 Gmail.....	- 15 -
Write a new Gmail	- 15 -
4.3 E-mail.....	- 15 -
E-mail account settings.....	- 16 -
Write and send messages.....	- 16 -
View and save e-mail.....	- 17 -
Reply e-mail	- 17 -
5.1 Mobile Networks.....	- 17 -
Check your network connection.....	- 17 -
5.2 WLAN.....	- 17 -
On / off the WLAN	- 18 -
Search and connect WLAN.....	- 18 -
5.3 Browser.....	- 18 -
View the links in the page.....	- 19 -
Zoom pages	- 19 -
Set your browser	- 19 -
6.1 Using Bluetooth.....	- 19 -
On / off the Bluetooth.....	- 19 -
Connect the equipment to the new equipment.....	- 20 -
Disconnect the Bluetooth and equipment.....	- 20 -
7.1 Music.....	- 20 -
Play music	- 20 -
7.2 Camera.....	- 21 -
Photo Options	- 22 -
View image	- 23 -
Share pictures	- 24 -
Edit photos	- 24 -
7.3 Camcorder.....	- 24 -
Video options	- 25 -
View the video	- 26 -
Manage video	- 26 -
7.4 Sound Recorder.....	- 27 -
8.1 USB connection.....	- 28 -
8.2 SD card.....	- 28 -

9.1 Alarm Clock.....	- 29 -
Add alarm	- 29 -
9.2 Calendar.....	- 29 -
New event	- 29 -
Edit the event	- 30 -
9.3 Maps.....	- 30 -
Use the maps	- 31 -
View Maps	- 32 -
Get Directions	- 32 -
10.1 Device Settings.....	- 33 -
10.2 Date & time.....	- 34 -
10.3 Language & input.....	- 35 -
10.4 Display.....	- 35 -
Set the screen brightness.....	- 35 -
Sleep	- 37 -
10.5 Factory data reset.....	- 37 -
10.6 Protect your device.....	- 38 -
Protect your SIM card by PIN.....	- 38 -
Screen security	- 38 -
11. Operation of Battery.....	-53-

Chapter 1 Quick Start

1.1 Outlook for your tablet PC




1.2 Attachment

Your packing box comprises the following attachments


- Tablet PC
- USB Cable & OTG cable
- Charger (5V, 2A)
- User Manual & Warranty card
- Headphones

1.3 Turning On/Off

Turning On

Press and hold power key  to turning on the product, it takes about 30 seconds to enter the main screen.

Turning Off






Press and hold power key , Pop-up "Device Options" menu, Click Shut Down. Select OK in the pop-up menu.

Standby


1. If you do not unlock within a long time (about 10 seconds) , device will automatic dark screen.
2. Light up the screen by pressing any side buttons.
3. Hold and slide up the green lock icon to the ceiling to unlock ; also press the menu key to unlock.

















Chapter 2 Basic Operation

The main key

- Menu :Open the application menu.
- Google Search  Use google search.
- The main screen key  Back to the main screen.
- Back key  Return to the previous operation screen.
- Daemon icon  Recently used applications, click the desired application can be opened.

Status Bar

Status bar will display various status information. You can click  to turn off the status bar.

Icon	Explain	Icon	Explain
	No Sim card		Signal strength
	3g signal		GSM signal
	EDGE		Airplane mode
	Charging		Low power
	Full power		Silent mode
	Vibration mode		Alarm
	GPS open		Wifi is connected
	USB is connected		Bluetooth

Note: The machine software is constantly upgraded, the status indicator may be different with your device, subject to the actual equipment.

Shortcuts


To customize different home screen, you can add apps shortcut; reposition the shortcut.

 
- Click  to open the application menu, long press and drag the icon to

be added to the main screen.

Widgets


You can add a clock, music player and calendar widgets on the main screen.

Click  to open the application menu, then click or sliding screen to the left into the widgets page, long press any widget drag it to the screen.

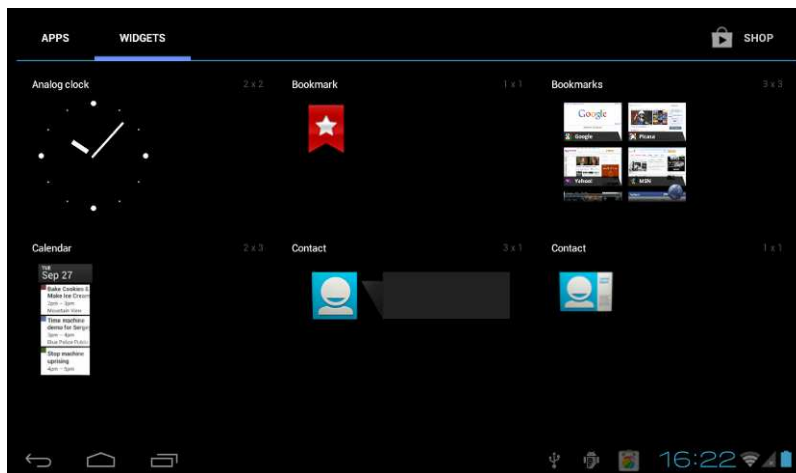

Wallpapers

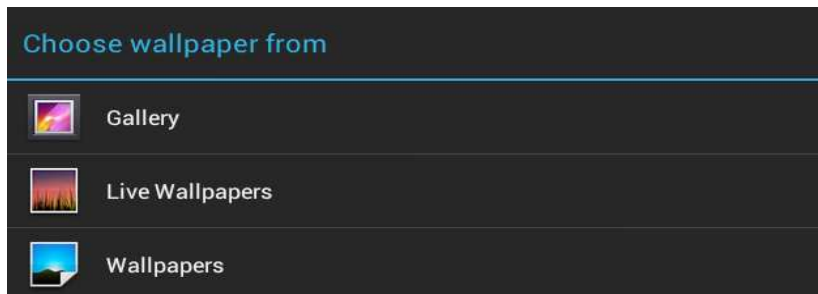 

1. Touch and hold on home screen, popup dialog box.



Click “Gallery” Can select the system your own pictures as wallpapers.

Click “Live Wallpapers” Can select the system live wallpapers as wallpapers.

Click “Wallpapers” Can select the system pictures as wallpapers.

2. Click  >  Settings > Display > Wallpaper

Touch screen


1. Short Press touch screen: Use the tip of your finger to press exactly on the touch key you want, being careful not to touch the keys for other functions.

 
2. Long press touch screen: Press for more than 1.5 seconds to get into the submenu.
3. Drag: Press and hold the scroll bar and drag up or down. On some screens such as web pages, you can also scroll side to side.
4. Zoom: when you view page, you can double-click the screen to zoom in or out the page.

2.2 Volumes



- Media volumes: Set the volumes of music, video, games and other media players.
- Ringtone volumes: Set the volumes of the ringtone and notifications.
- Alarms volumes: Set the alarm volumes.
- Call volumes: Set the volumes of calls.

Set the volumes

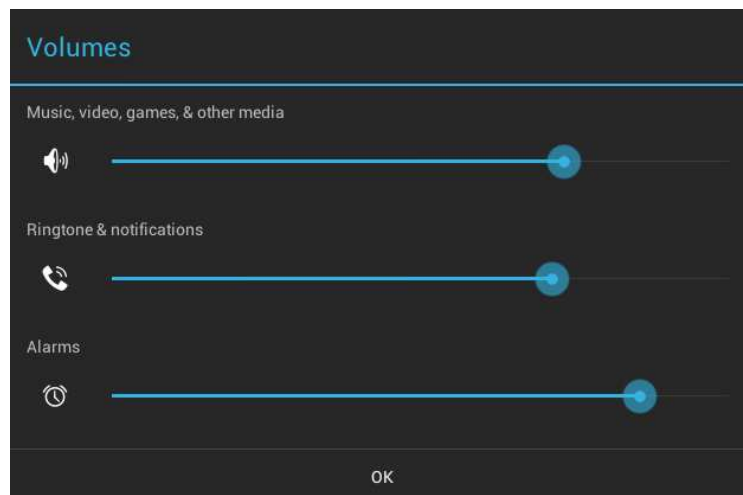 >  Settings > Sound > Volumes



- Set vibrate




 >  Settings > Sound > Volumes

Check “Vibrate on ring” to Turned on or off the equipment vibration.

 
2.3 People

You can save contacts, phone numbers and e-mail and other related content.

New contact



 >  People >  new contact

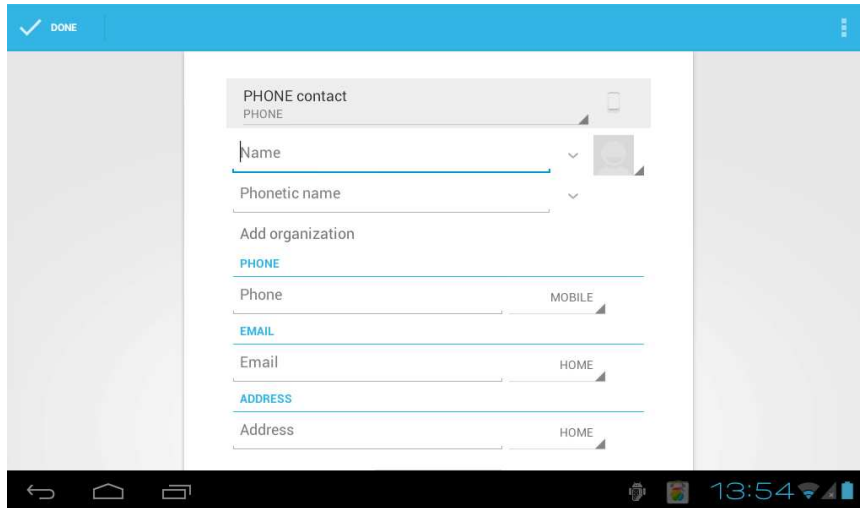1. Enter your contact's information.
2. Click "DONE" to save the contact.





 
Edit contacts/ Delete contacts

Edit contacts:

1. Click , open the contact list.
2. Choose the contact you want to edit, click . After editing, click "DONE" to save the contact.

Delete contacts:

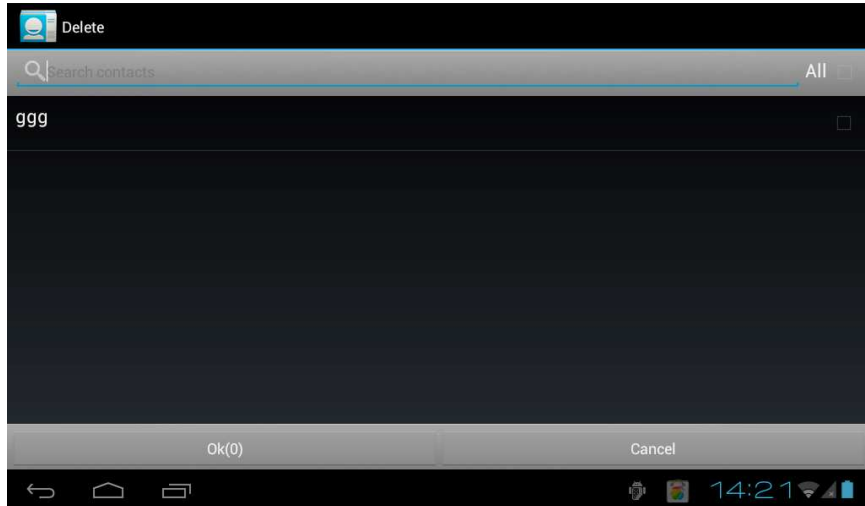

1. Click , open the contact list.
2. Click , in the pop-up menu, choose "Delete"
3. Check the contacts you want to delete, click "OK" to delete the checked contacts.

 


Backup contacts

You can export your contact data to the SD card.



Steps:

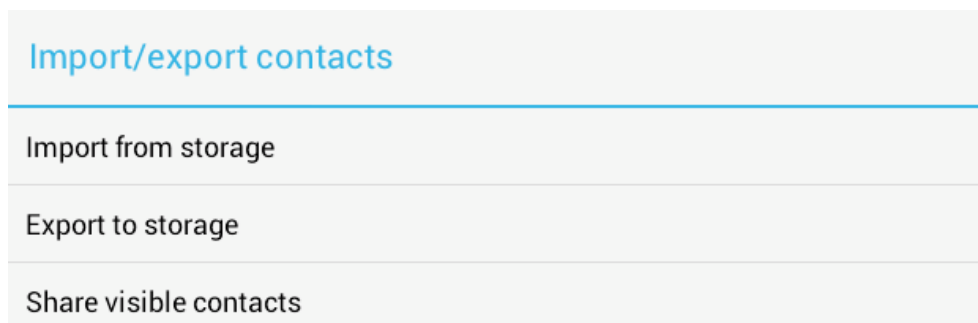1. Click , open the contact list.
2. Click  > Import/export.
3. Click “Export to storage”



Import contacts

- **Import from SD card**

 
1. Click , open the contact list.
2. Click  > Import/export.
3. Click “Import from storage”.

Favorite contacts

You can add commonly used contacts and special contacts to your collection, in order to find and use.

Select a contact in your contact list, then click the star icon to make it

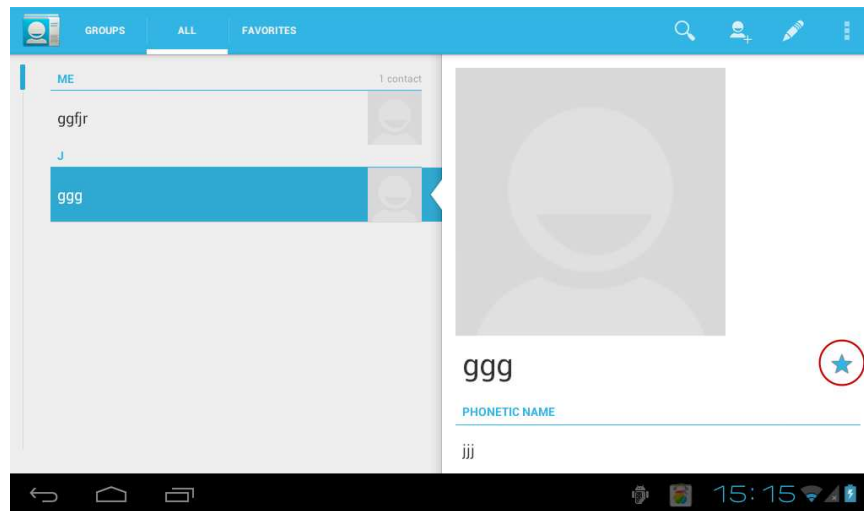


turn blue.




Chapter 3 Use the device

 
3.1 Phone

Make a phone call




1.  >  Phone
2. Press the number keys, enter the phone number.
3. Click , make a call.
4. When the call is completed, press the hang up to end the call.


Note: Click  can remove the number.

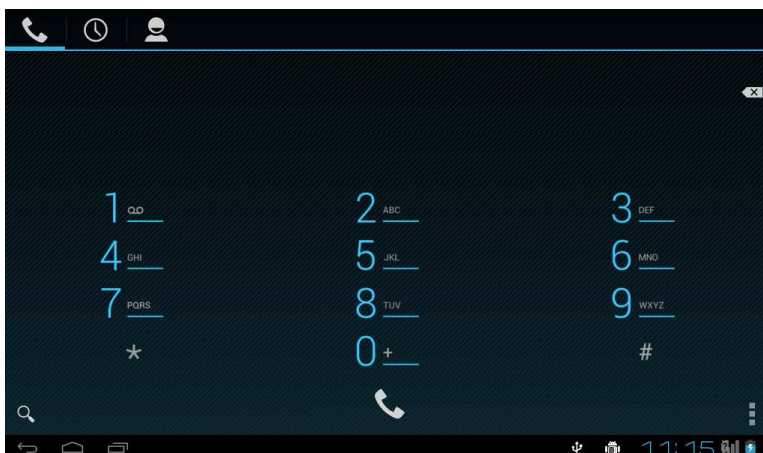1. You can also select a contact to call.
2. During a call, click  can open the dial pad to the digital input.



Receive calls

When the incoming call, the device will issue a prompt, you can hold down the , drag it to the  to receive calls; or drag it to the  to hang up.

Note: you can hold down the  and drag it to the message icon to hang up the phone and send a message.





Handsfree

You can use the handsfree to ensure traffic safety while driving. Use hands-free speaker / microphone device / Bluetooth headset to make and receive calls.

Mute

During a call, you can make the other side can not hear your voice. Press the mute, turn on or turn off mute.


Telephone conference

1.  >  Phone.
2. Press the number keys to input the number of the first person.
3. Outgoing calls.
4. The other party answers, click .
5. Press the number keys to enter the next party calls and outgoing calls.
6. Click  to connect the two sides call.



Call history

You can view the received calls, missed calls, dialed calls and other information in the call history.

 >  Phone.

Click  to view the call history.

Emergency call

1.  >  Phone (If the device is locked, click Emergency Call.)
2. Press the number keys to enter the emergency number.




Note: 1. Different countries have different emergency call numbers, so the emergency call number in your device is not effective in all regions. Sometimes


due to network, environmental, or interference with the impact of events, an emergency call may not call.

2. The phone features of the device must be turned on when you make an emergency call.

3.2 Message

 
Write messages

 >  Messaging >  new message.

1. Enter the message receiver, you can also press , Find a receiver from the contacts.

2. Enter the text you want to send.

3. Click , send the message.

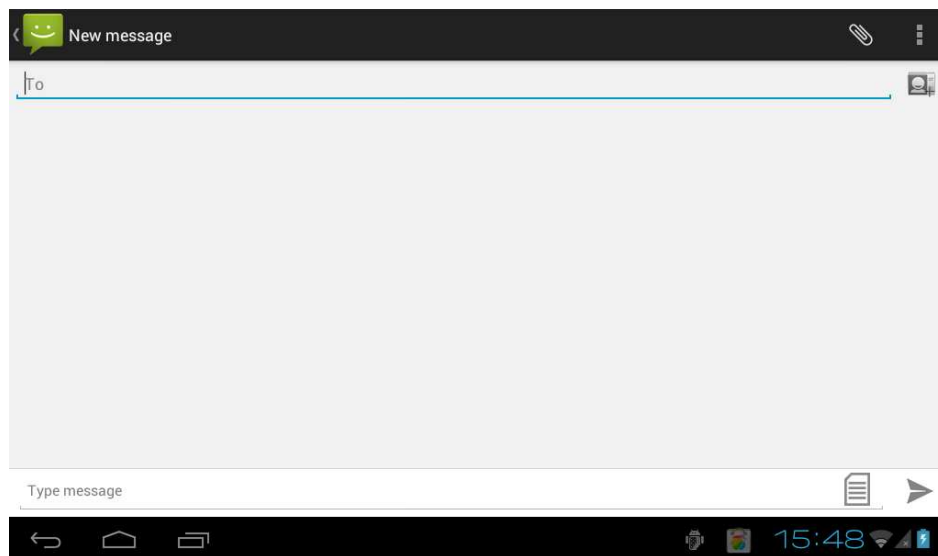

Answer messages

The top status bar will be prompted when you receive new information.




 >  Messaging


Select the message you want to reply:

1. Enter the text you want to send.

2. Click , send the message.

 
Write MMS


 >  Messaging >  new message.


Enter the message receiver, you can also press , Find a receiver

Next, in the following ways you can make a SMS converted into a MMS.

1. Click  > add subject.

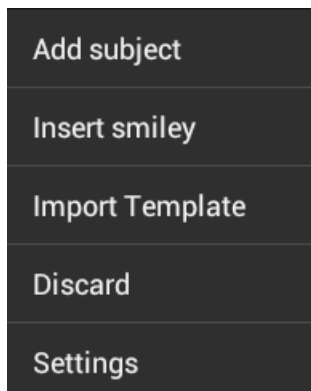

 2. Click  to add pictures, music or video files for MMS.

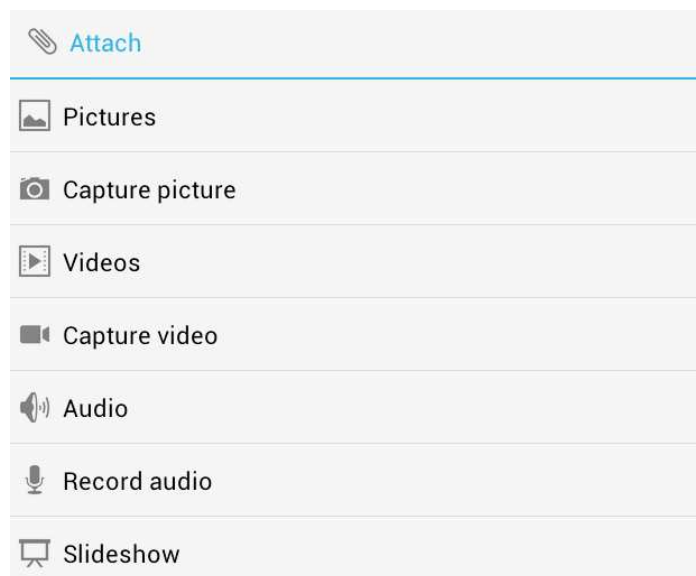

Chapter 4 E-mail

 
4.1 Use the Google Account login

Using the Google Account login can make your device synchronized with the server, and you must use a Google account to synchronize Google Apps, Google Talk, and Android Market.

Click  >  Setting > Accounts & sync > ADD ACCOUNT > Google

Click “Sign in”, enter your user name and password, then click “Sign in”. After logging in, all e-mail, contacts and calendar in your Google account will be synchronized to the device.

Note: If you do not have a Google account, click Create.

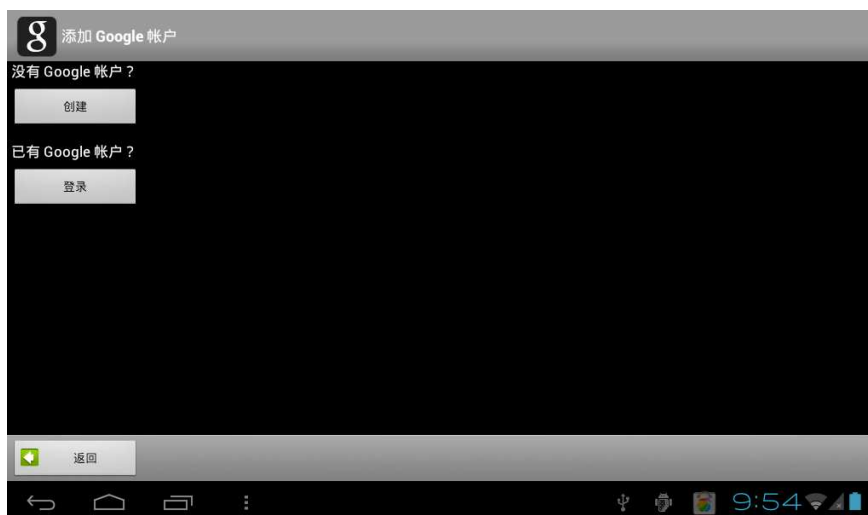

Regain your Google account's password

If you have forgotten your Google account's password, you can perform the following steps to obtain the password:

 
1. On the computer, open a browser and go to:
<http://google.com/accounts>
2. In the right side of the web page, click “Can't access your account?”.
3. Select “I don't know my password”.
4. Then follow the procedure to reset your password.

Set data synchronization

You can bind a Google account for synchronize the contacts in the device to the website. This will facilitate the continuous update of the Google application information.

1. Click  >  Setting > Accounts & sync.


2. Click the account you want to synchronize.

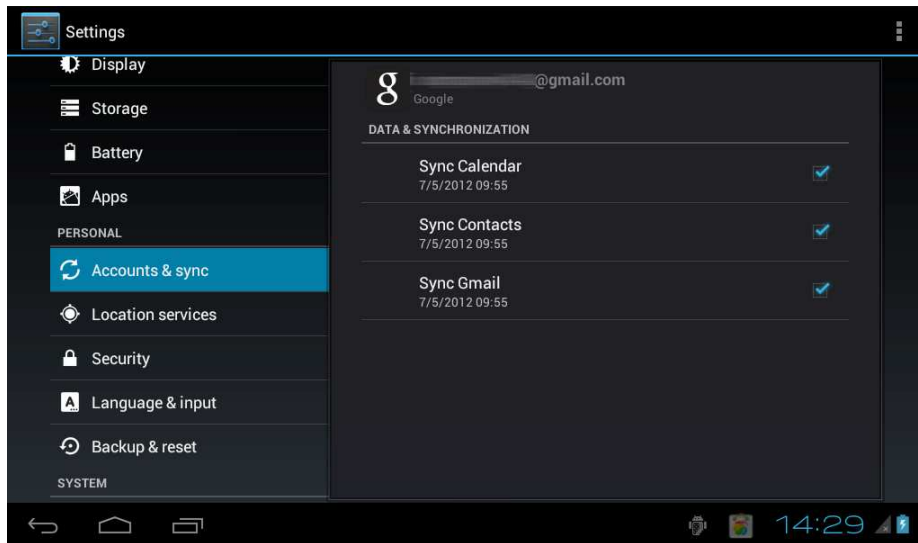


4.2 Gmail

Write a new Gmail

1. Click  >  Gmail.

2. Click , then select "Compose".



Enter the recipient's e-mail address and message content, and then press  to Send the mail.

4.3 E-mail

You can use email to send or receive e-mail messages.

Note: 1. You must set up your e-mail at first, and then send or receive e-mail.

 
2. E-mail must be sent by internet connection. You can consult your specific setup parameters with your network service provider.

E-mail account settings

Click  >  E-mail.


Account setup:

1. Enter the e-mail address and password, and then click “Next”.

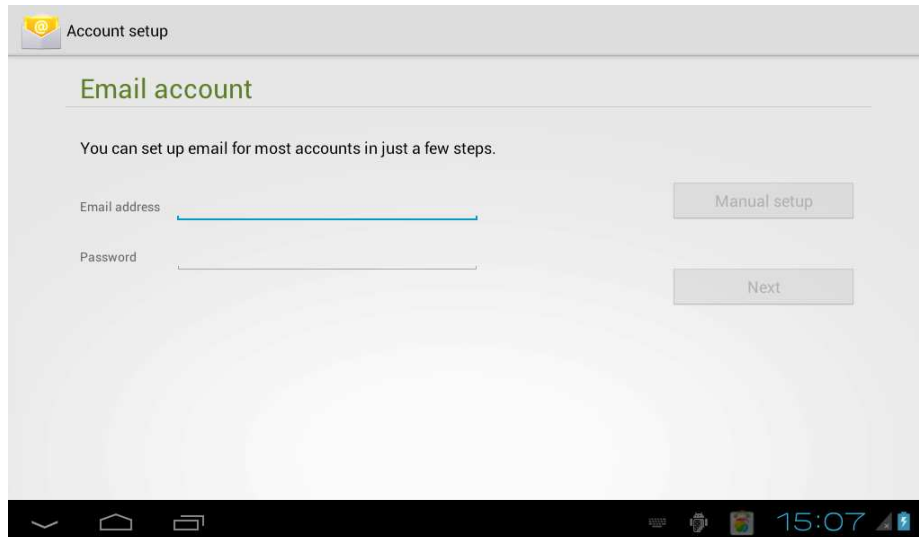



2. Select the type of the Email account: POP3/IMAP/Exchange. If you do not know the configuration parameters, you can consult the e-mail service provider.
3. You can set the frequency of mail checks. After setting, click Next.
4. Created name and signature, for your account.

You can also set multiple email addresses:

1. After Set the initial e-mail address, Click , select “Settings” option to enter the account settings page.
2. Click the “Add Account” to add other email accounts.

Write and send messages

1. Click  >  E-mail.


2. Click  to editor the e-mail message.
3. Enter the E-mail address of the recipient.
4. Enter a subject.
5. Write the message content.
6. Click  to send the E-mail.

View and save e-mail

Receiving e-mail messages stored in the network service provider's mail server before downloading to the device.

- Select the e-mail to read in the Inbox.
- Click the attachment icon can view e-mail attachments.
- Click Save to download attachments, attachments are usually stored in your SD card.

Reply e-mail



- In the Inbox, select the mail you want to reply, click  to reply.

 
Chapter 5 Network and Browser

5.1 Mobile Networks

When your device insert the SIM / UIM card, you can use your network operator's 2G/3G business.



Check your network connection

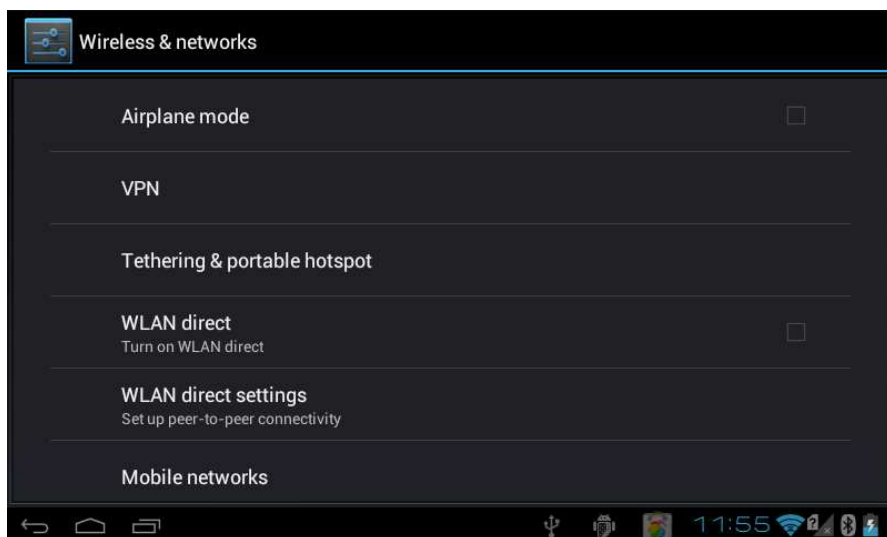
1. Click  >  Settings
2. WIRELESS & NETWORKS > More > Mobile networks.
3. Click "Access Point Names (APN)" to check your network connection.





5.2 WLAN

 
On / off the WLAN

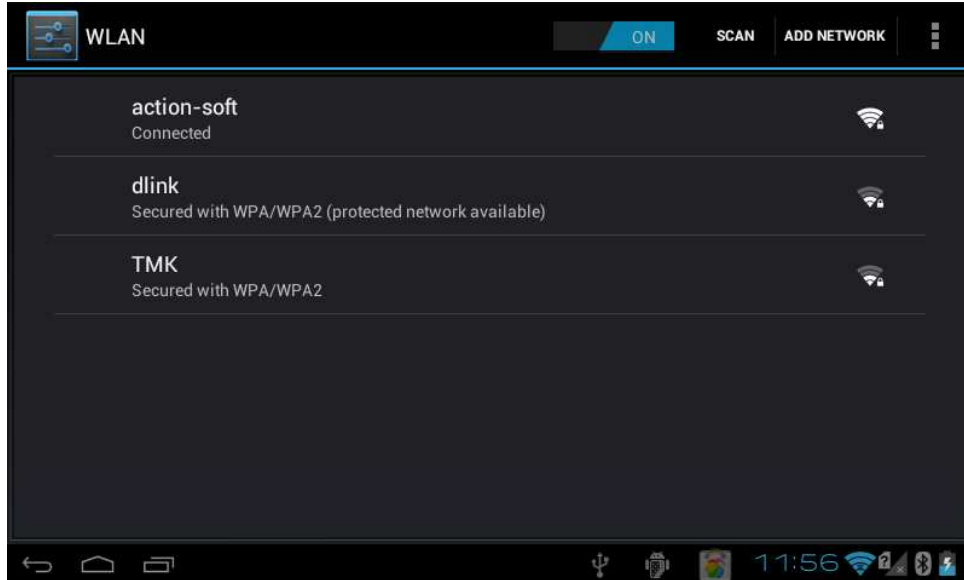1. Click  >  Settings > WIRELESS & NETWORKS
2. Click switch to turn on or off the WLAN.



Search and connect WLAN











1. Click  >  Settings > WIRELESS & NETWORKS
2. Open the WLAN, your device will automatically lists the networks.
 - If you select an open network, you can directly connect to the network.
 - If you select an encrypted network, you must enter a password to connect to the network.
 - Click on the "Add Network" can add a new WLAN.

When your device is connected to the network,  Will appear in the status bar.

Note: When you enter the network coverage, and your WLAN is turned on, your device will automatically reconnect to the network you have connected.

5.3 Browser

Use the browser allows your devices to access Web pages and Web-based applications..Consult with your network service provider for how to connect. Note: The network connection type depending on your network service provider. Use a different type of connection, your network connection costs are different. Specific tariff details, please consult your network service provider.

1. Click  >  Browser, you can click on the tab bar to open pages.
2. Click  you can close the page.
3. Click  you can create a new page.
4. Click  you can refresh the page.
5. Click  you can back or forward to view the page.
6. Click  you can add a bookmark of the current page.
7. Click  you can search or enter the URL.
8. Click  you can view all of your bookmarks, history, saved pages.
9. Click  you can do more actions.

View the links in the page

You can click the link in the page to open it.

Tap and hold the link in a Web page can choose to open the link in a new window or bookmark.it. You can also enter the URL you want to access directly in the address bar.

Zoom pages

Double-click the web page to zoom the page.

Drag up and down the page, you can quickly browse the Web.

Set your browser

 
Click  >  Browser >  > Settings.

Chapter 6 Bluetooth

6.1 Using Bluetooth


On / off the Bluetooth

1. Click  >  Settings > Bluetooth
2. Click switch to turn on or off the Bluetooth.

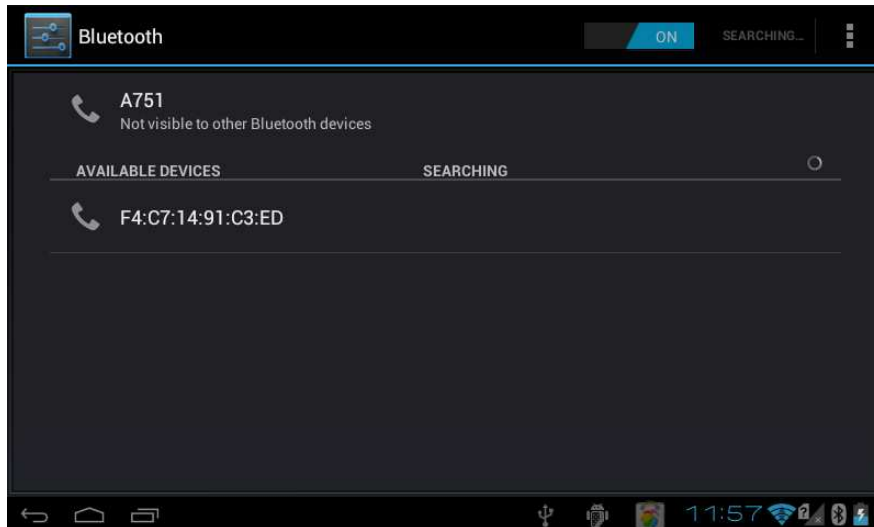

Connect the equipment to the new equipment

1. To confirm the device you want to pair with Bluetooth connectivity is turned on and visible.
3. After turn on Bluetooth,click “SEARCH FOR DEVICES” .
4. Select a device in the list to connect.
5. Enter the PIN (eg 0000),then press the “Pair” to connect the device.

When Bluetooth is turned on,  will be displayed in the status bar.

Note: Bluetooth device connection methods may be different,.This manual is for reference only.

Disconnect the Bluetooth and equipment

Click the device name,which you want to disconnect in the list,and then click “Unpair” to disconnect.

Chapter 7 Multimedia

7.1 Music


Play music


Click  >  Music.


Your device will automatically search your music on the SD card.
Select song title to play the music.


: Play/ Pause.

: Prev/Next.

: Open now playing list.

: Repeat play all songs or current song.


: Turn on or turn off shuffle.

Click , in the pop-up menu can do more action.



Note: 1. To store some music files in SD card.


2. Click  can use other applications, and the music continues to play.

3. Click  can stop the music.


7.2 Camera


1. Click  >  Camera

 
2. Screen display framing the landscape of the region.


3.  Can switch between camera and camcorder.

4.  Photo shoot button.

5.  Drag the ring to adjust the focal length of the camera.

6.  Can switch between front camera and rear camera.

 
7.  Set your camera options.

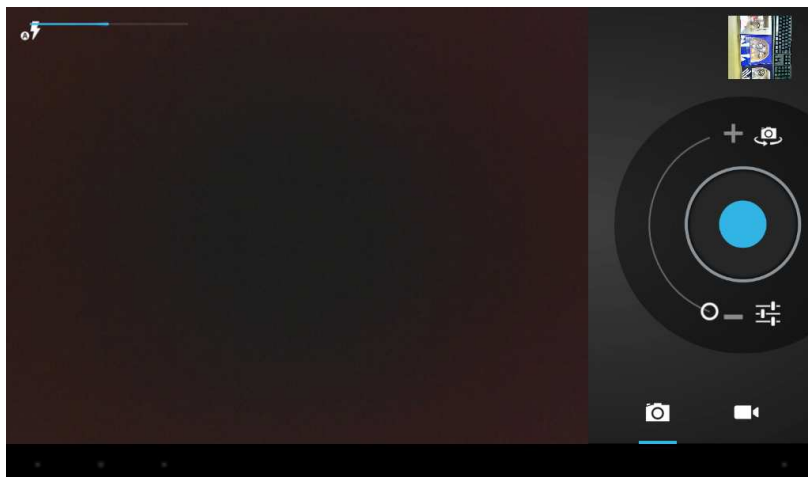


Note: Please install the SD card before you take a picture.

Touch the thumbnail of the photo, you can open the media library to view the pictures. Click Options on the screen, you can operate the pictures.


Photo Options

 Click  can enter the set interface.

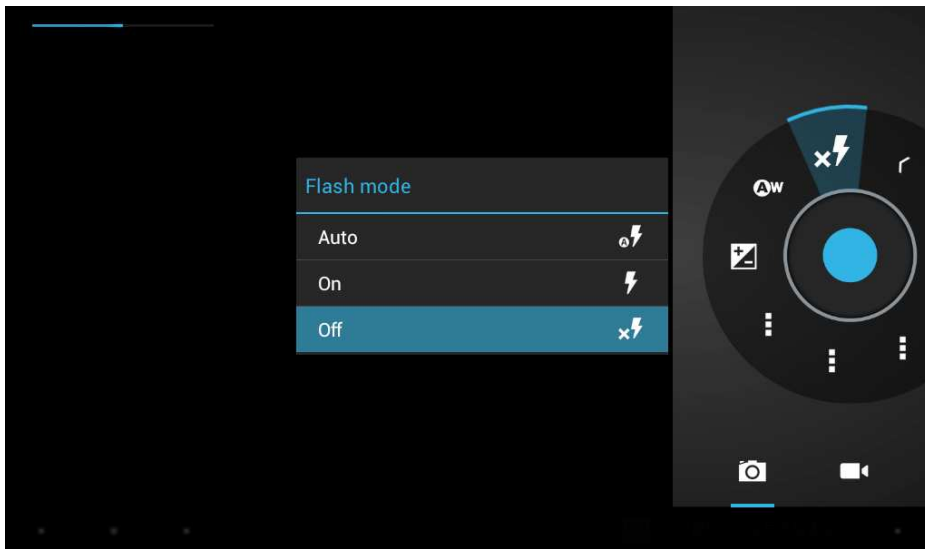


You can set the following:

   
-  Flash mode.

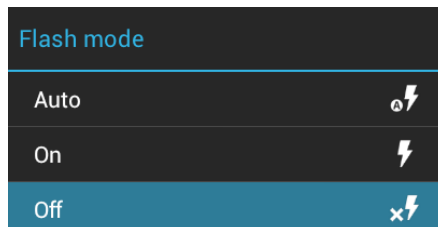


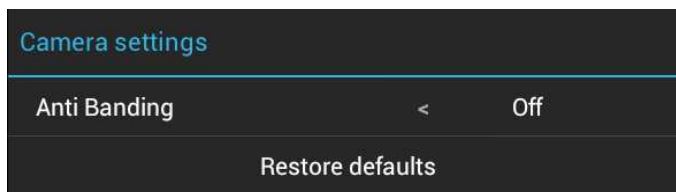 
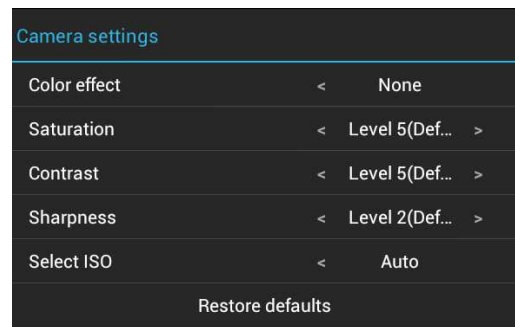 
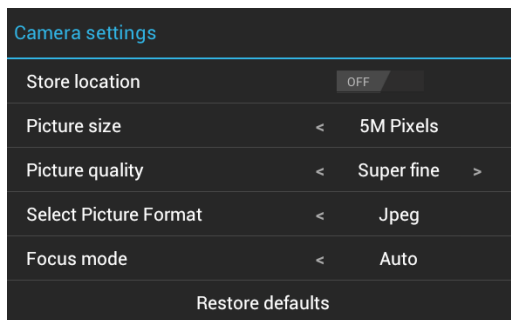 
-  White balance.

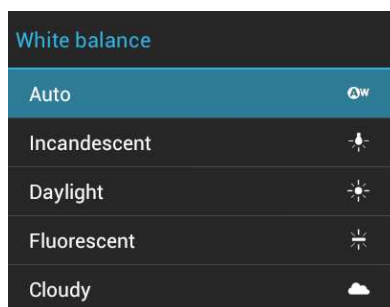

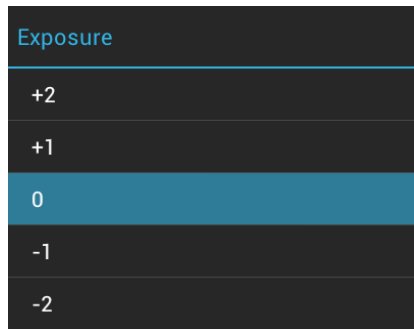

-  Exposure.



-  Camera settings.





 
View image

1. Click  >  Gallery.
2. Click the picture you want to see. You can also, drag the screen left or right to view the next or previous picture.


Slideshow

You can slide show in the following two methods.


1. Click , you can start slideshow.
2. Click the picture to enter the picture browsing interface, click , in the pop-up menu, select "slideshow".

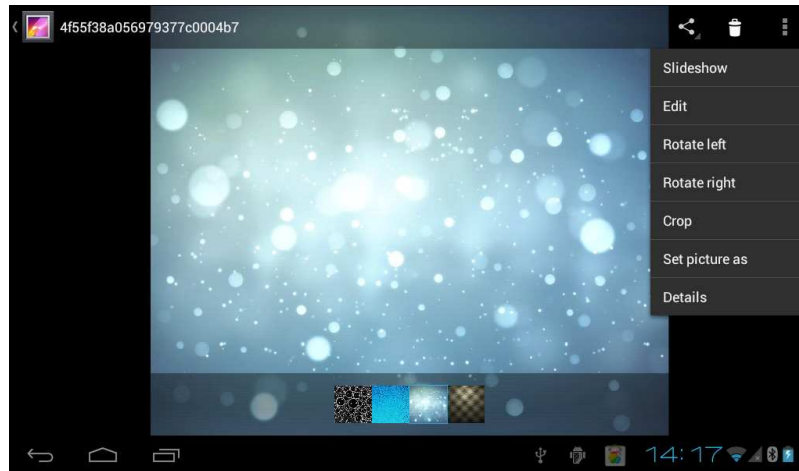








Share pictures

1. Click the picture you want to share, enter the picture browsing interface, then click .
2. Choose ways of sharing: SMS, Bluetooth, your Gmail, e-mail.

Edit photos

 
Enter the picture browsing interface, then click , select "Edit" to enter the photo editing interface.

7.3 Camcorder

1. Click  >  Camcorder.
2. Screen display framing the landscape of the region.
3.  Can switch between camera and camcorder.
4.  icon to record video.
5.  Drag the ring to adjust the focal length of the camera.
6.  Can switch between front camera and rear camera.
7.  Set your camera options.


Note: Please install the SD card before you record video.


Video options


Click  can enter the set interface.


You can set the following:

 
-  Flash mode.

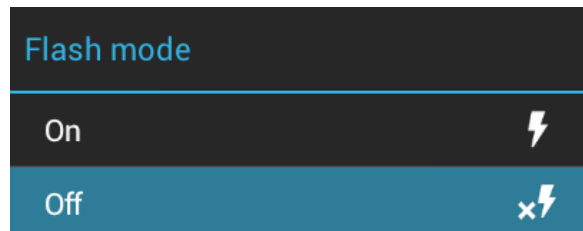

-  White balance.

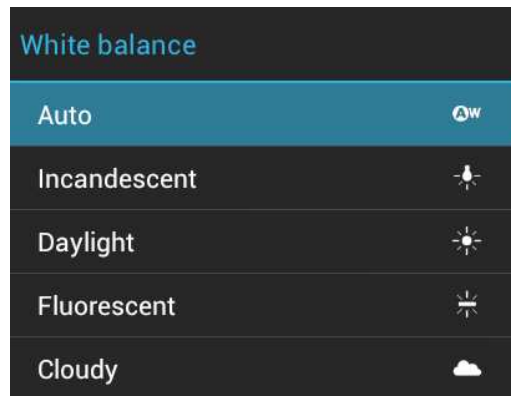 

-  Time lapse interval.

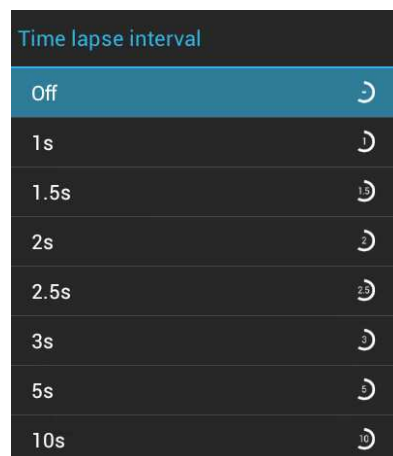 

-  Video quality.

Video quality	
D1	480p
FWVGA	✓
WVGA	✓
VGA	✓
WQVGA	✓
CIF	✓
QVGA	✓
QCIF	✓

-  Camera settings.



Camera settings	
Store location	OFF
Video Encoder	H264 >
Audio Encoder	AAC >
Video duration	< 10 minutes >
Color effect	< None >
Video High FrameRate	< Off >
Power Mode	Normal_Po. >
Restore defaults	

View the video

Touch has shot the video in the viewfinder screen upper right corner of the thumbnail, you can open the media library view to the video. Click the play button on the screen, you can view the video. You can also choose other buttons you want to do.

Manage video

- **Play video.**

1. Click  >  Videos.
2. Click the video you want to play in the list.


- **Share videos.**


1. When you view the video, click .
2. Choose ways of sharing: SMS, Bluetooth, your Gmail, e-mail.

7.4 Sound Recorder

Click  >  Sound recorder.

 Record button.

 stop recording.


 After the recording is completed, you can press the button to play the audio you just recorded.

 
Chapter 8 USB & SD card

8.1 USB connection


You can use the USB data cable to connect the device to the computer, in order to transfer pictures, videos, music and more between SD card and computer.

1. The SD card into the device. Using a USB data cable to connect the device to high-speed USB port on your computer.

2. The status bar will show the USB connection icon .

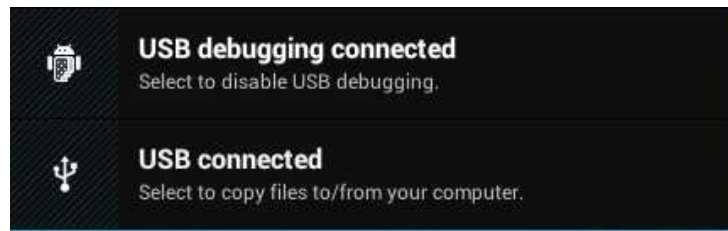

 3. Click the "USB connection" option, and transferred to the USB connection interface and select OK, connect the device to the computer.

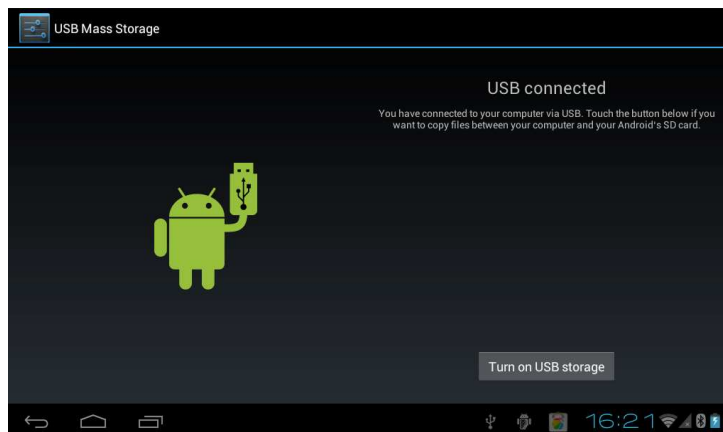

Note: In the meantime, you can not use the devices to access the memory card, so you can not use the application requires memory card (such as cameras, photo gallery, or music).

4. Find a "Removable Disk" icon in "My Computer".

5. On your computer, click "Removable Disk" icon to access the device memory card.

6. Drop the pictures, video, music and other files on your computer to the device memory card folder.

7. Click to turn off USB storage devices, to safely disconnect the device from the computer.

8.2 SD card

In the "Storage" function, you can view the memory card usage.

Note: Please install the memory card before use, otherwise it will affect the use of photography, camera and other functions.

Before removing the memory card, make sure the memory card with the device disconnected.

Click  >  Settings>Storage>Unmount SD card.

After unmount SD card., you can click “Erase SD card” to erases all data on the SD card.

Note: Before installing or removing memory card, turn off the equipment, or they may damage your memory card.

 
 
Chapter 9 Other applications

9.1 Alarm Clock

Add alarm

Click  >  Clock>alarm set.

Add alarm, set the alarm information, then click Done.

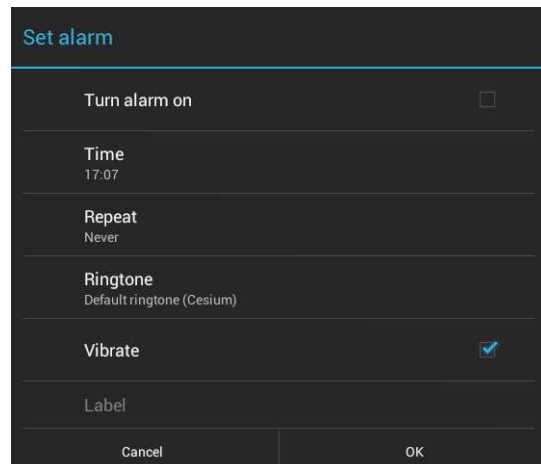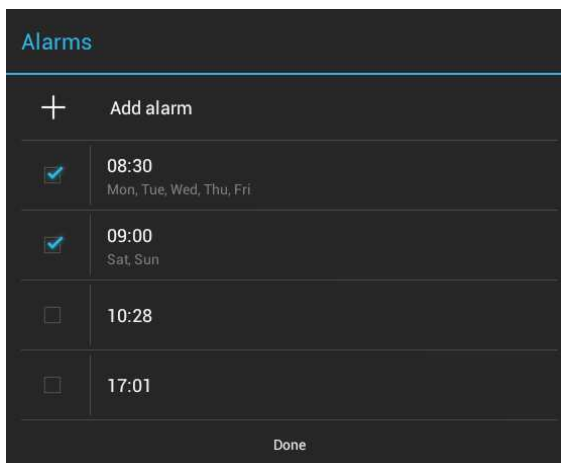

9.2 Calendar

 
Use the calendar, you can arrange and manage your schedule.

Note: To use the calendar, you must login to Google account first, and correctly set the time and date of the equipment.

Click  >  Calendar.


New event

Click  + to set new event, enter the event option, click Done to save the event.

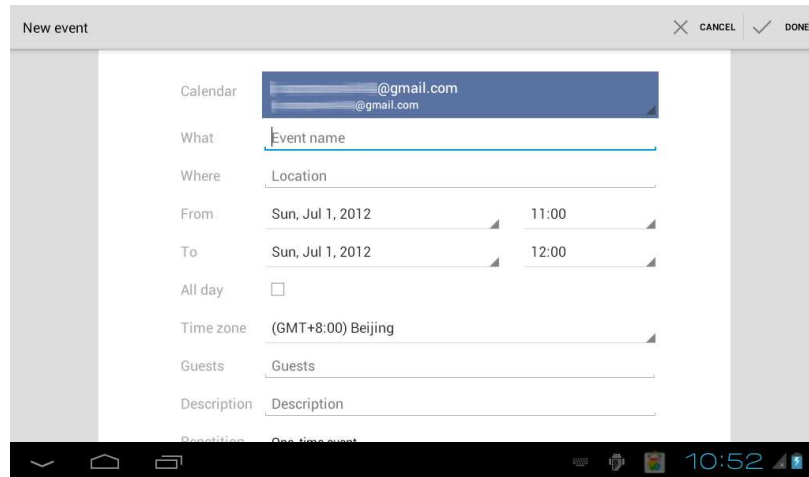


Edit the event

- **Edit.**

Select a Event and into the activities interface, click  to edit the event.

- **Delete.**

 Select a Event and into the activities interface, click  to delete the event.

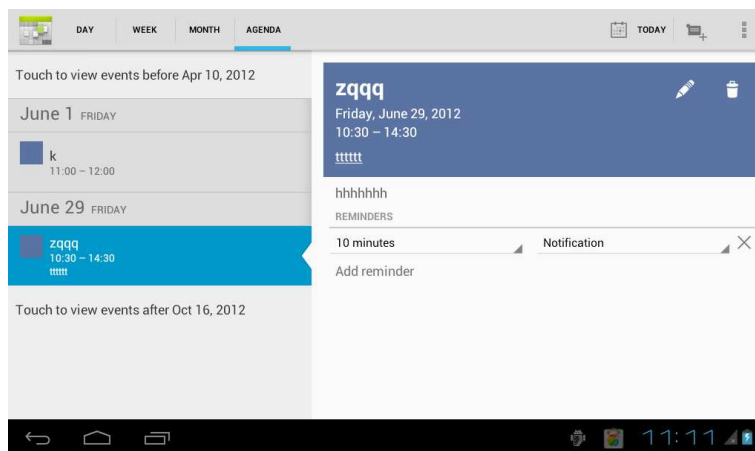

9.3 Maps

The map allows you to track your current location, view traffic conditions, as well as receive detailed direction of the destination. Provide a search tool that allows you to find a place to go or address of the vector.

- Note:**
- You must open 3G/GPRS or Wi-Fi to use the map.
 - Maps application does not cover all countries and cities.

 
- **Open the location service.**

you must open the location service first in order to open the map and search for your location or search a place to go.


1. Click  >  Settings > Location services.

2. Check Google's location services, GPS satellites, or both two.


Note: Check GPS satellites, can search the street map that you want to go, but, this must be in the sunny state of the atmosphere, and will consume more power.

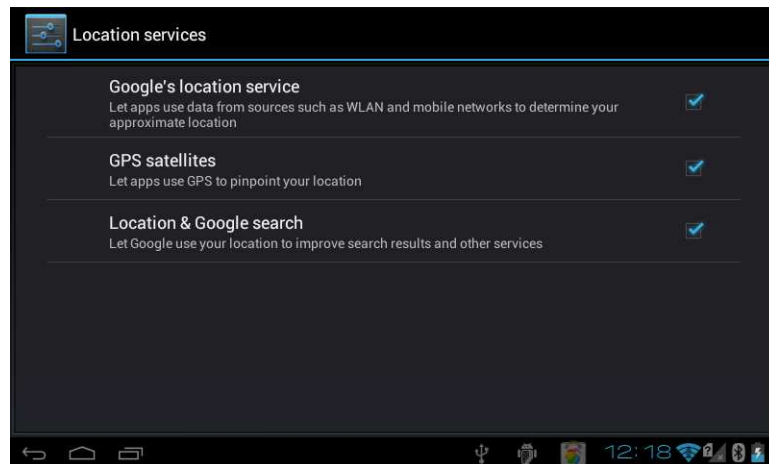


Use the maps

 Click  >  Maps.


- Search My position on the map.

 In the map interface, click , then your location on the map will display a flashing blue dot.

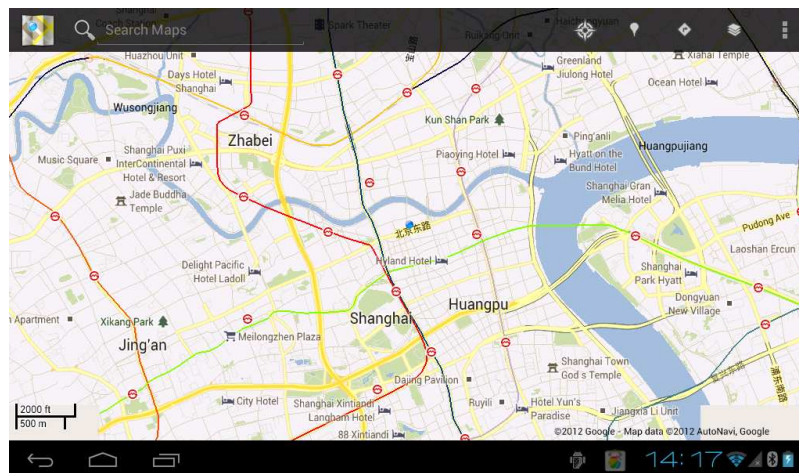


- Search the place you want to go.

 1. In the map interface, click “Search Maps” .
2. Enter the name of the place you want to search, you can choose to enter an address, city, or the building name (for example: The Oriental Pearl).



Note: When you enter the place, the map will prompt you the list of places have searched. Just click on the list address, then you can display its location

on the map.

3. Click , the search results will display on the map.

4. Click the text box to display the search details about the places and the operation.

View Maps

While viewing the map, you can use the following zoom and navigation skills.

Zoom the map.

Through the fingers outward or inward sliding the screen at the same time, can zoom in or out the map.

Change the map mode.

Click  to change the map mode.



- **Traffic** (only to the specific area): Real-time traffic updates will display a different color lines on the road, each color represents a different traffic movement speed.

 
- **Satellite**: Use the same satellite data as Google Earth. However, satellite imagery is not a real-time video. Google Earth will achieve the best quality images, but most of the images have a history of one to three years.


- **Terrain**: This mode is the default view, not only can display the name of the map will be added to the streets, rivers, lakes, mountains, parks and the border.

Get Directions

1. Click  to search routes.

2. In the first input box, enter the starting point, in the second input box, enter the destination.

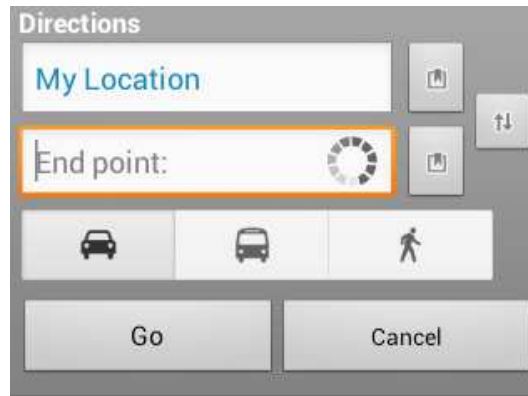

You can also click  to open the list of position, and then select the starting point and destination address.

3. Select the way you travel: By car, bus or on foot.



4. Click “Go”, wait a little longer, it will be a list showing the routes to go to your destination.. Click on the route guidance on a map showing the route.

 
5. Complete view or finished using the routes, press the Menu key, then click empty the results, you can reset the map. Your destination will be automatically saved in the map records.


Chapter 10 Settings


10.1 Device Settings

You can use the following methods to open the settings interface:

- Click  >  Settings.
- Click the status bar of the main screen, then you can see the pop-up menu.

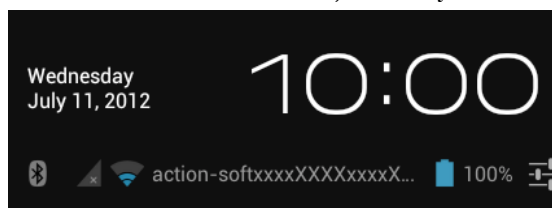

Click  to enter the setup menu.

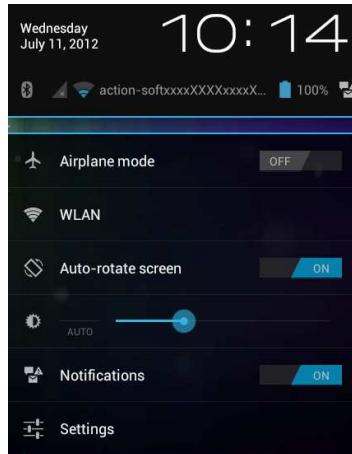 

Click "Settings" option to enter the main setup interface.


WIRELESS & NETWORKS	Set your device's wireless connection, such as: wifi and Bluetooth flight mode, or set up roaming, networks, and more options.
DEVICE	Set the theme style, sound, display, storage devices, etc.
PERSONAL	Set up accounts, equipment safety, language, and backup.
SYSTEM	Set the time and date,accessibility. You can also view the legal information of the software and the version of the device.

10.2 Date & time

Click  >  Settings > Date & time.

Note: When check the "Automatic date & time" and "Automatic time zone", the device will be based on the network automatically adjust the display time and date and time zone.

 If you want to set up your own time, do not check these two options.

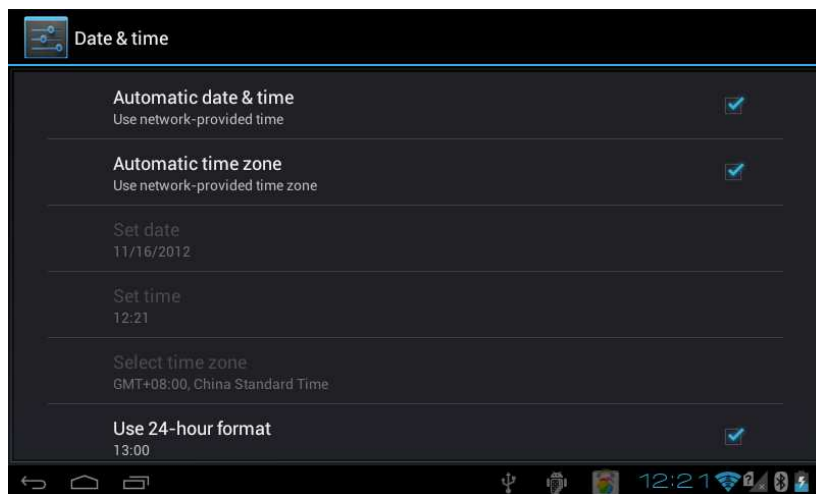


If you want set up time by yourself:

- Click “**Set date**”, adjust the date, month and year, and then touch the “Set” .
- Click “**Select time zone** ”, and then select your time zone in the list.
- Click “**Set time**”, adjust the hours and minutes.
- You can check or uncheck the “**Use 24-hour format**”, switch between 12 hours or 24 hours format.
- Click “**Select date format**”, and then select your desired date display format.

 10.3 Language & input

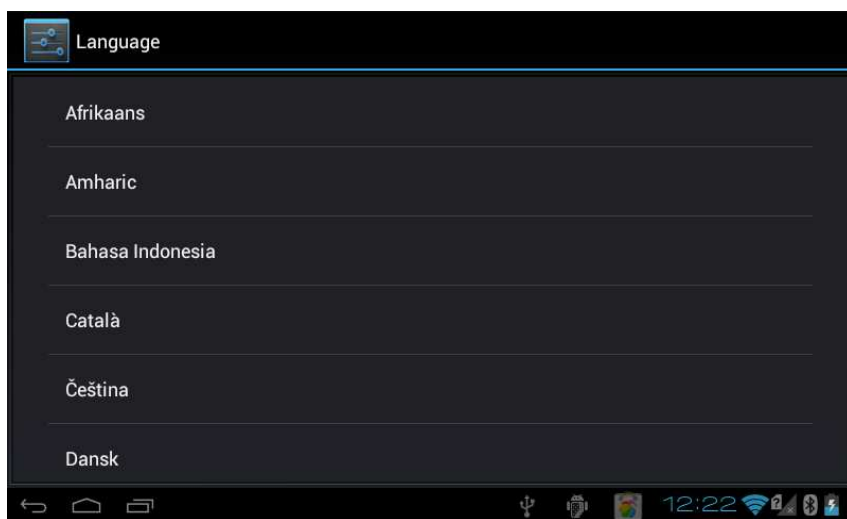

Click  >  Settings > Language & input > Language.

 


Select the language you want to use.

 
10.4 Display

Set the screen brightness


Click  >  Settings > Display > Brightness.

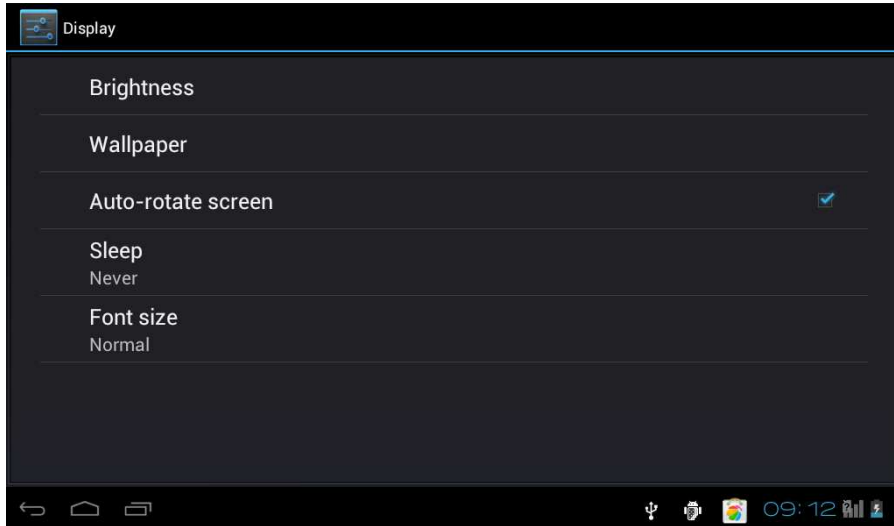

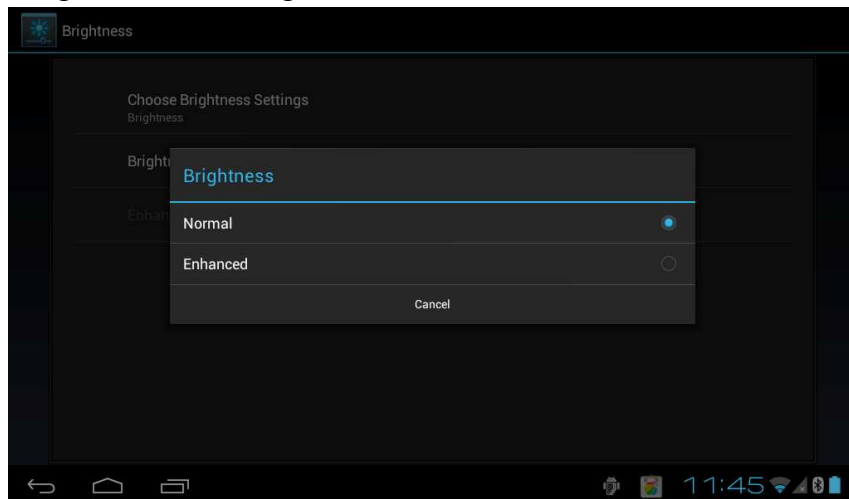

 Note: If you want to adjust the brightness by yourself, , please set the “Choose Brightness Settings” to “Normal” .

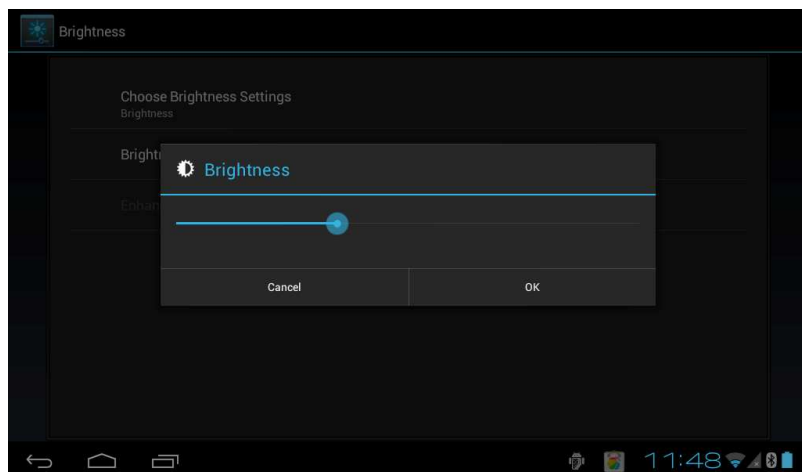


When the “Choose Brightness Settings” is “Normal” , click “Brightness” , adjust the brightness in the pop-up box.



Sleep

 Click  >  Settings > Display > Sleep
Set the screen auto-lock delay time.

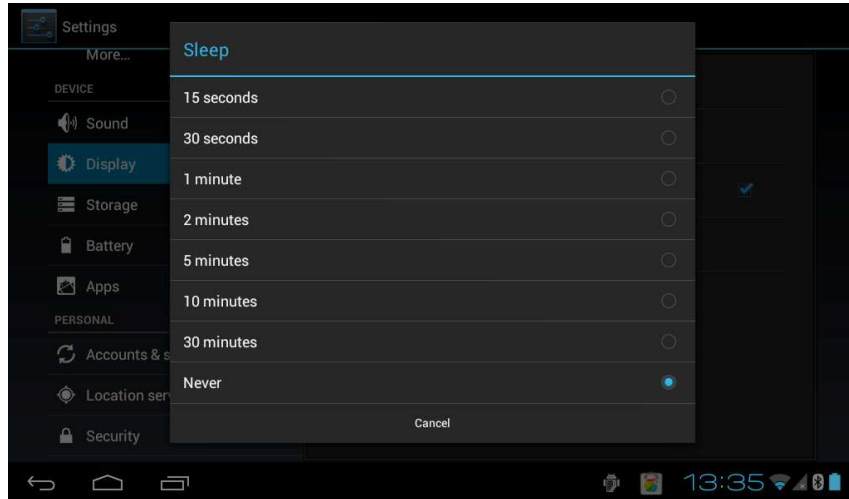

10.5 Factory data reset



You can use this feature to erases all data on phone:

 
Note: This operation will clear the following data in your device.

- Your account.
- System and application' s data and settings.
- Application.

Does not clear the following data:

- System software and bundled applications.
- The file in the SD card, such as music or photos.

Click  >  Settings > Backup & reset > Factory data reset.

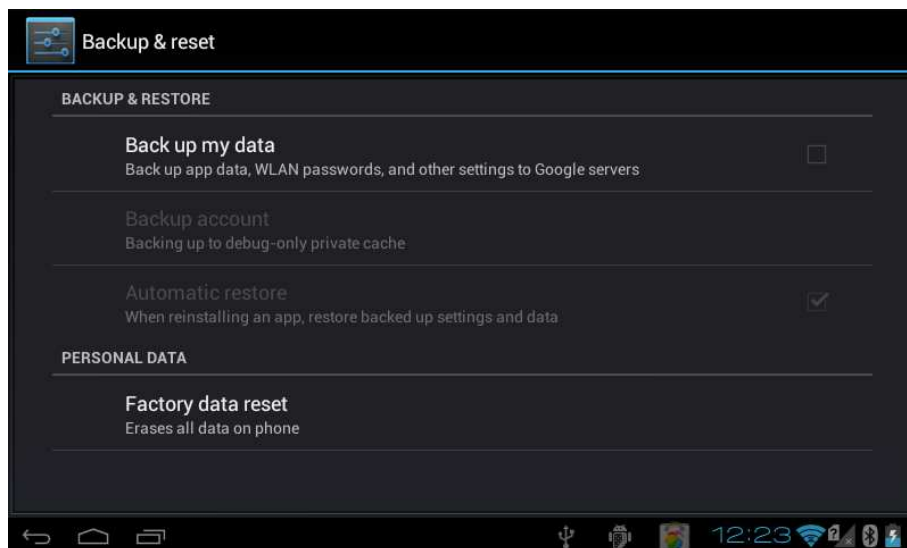


10.6 Protect your device

Protect your SIM card by PIN

 
You set a PIN (Personal Identification Number) to protect the SIM card.

- **Set a PIN.**

Click  >  Settings > Security > Set up SIM/RUIM card lock > Lock SIM/RUIM card.

Use the keyboard to enter the PIN code. If you want to change the PIN, please click “Change SIM PIN” .

Note: You do not need to enter the PIN at any time to make an emergency call.

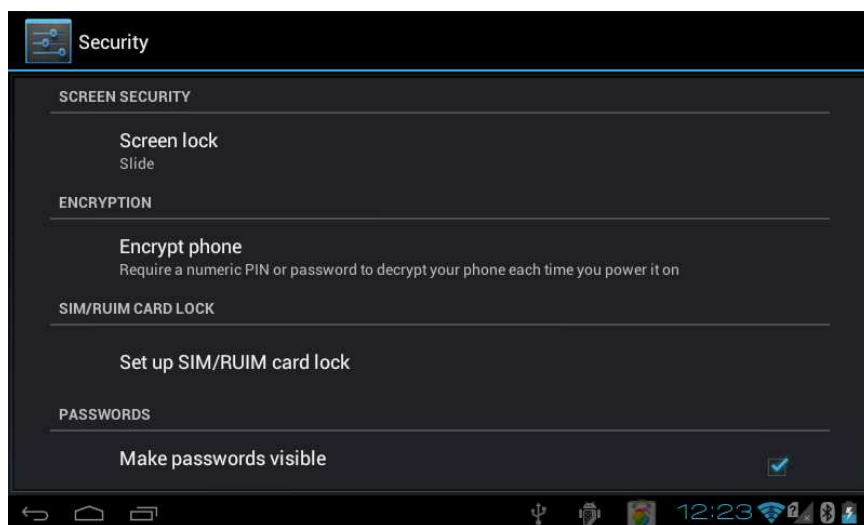

- **Unlock the SIM card**

If you enter the wrong PIN code more than the allowed times (3 times), your SIM card will become the “PUK locked.”, You must enter the PUK code in order to restore the device. This password will be provided with the service provider’s SIM card.

Click on an emergency call, and then enter the following sequence:

****05*[PUK]*[New PIN]*[New PIN]#**

For example: If your PUK is 888888, and you want the SIM card’s PIN be reseted to 7777, please call the emergency telephone:

****05*888888*7777*7777#**

 
Screen security

You can lock the screen or request to draw the screen unlock pattern every time you start the device.

- **Screen lock.**


It can protect the screen does not be touched when the device in a backpack, purse, pocke.

Will have the following screen Unlock mode:

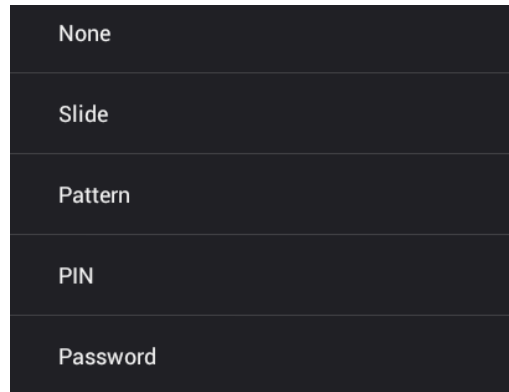



• **Slide**

 
Slide is the system default unlock method. It will into the lock screen after the device is turned on.

Press and hold  move to the unlock icon to unlock.

• **Create a screen unlock pattern.**

Create a personal screen unlock pattern can improve the security of the devices.

1. Click  >  Settings>Security>Screen lock>Pattern.
2. Read the instructions on the screen, and then click “Next” .
3. Draw at least four points connected to the vertical, horizontal or diagonal direction.

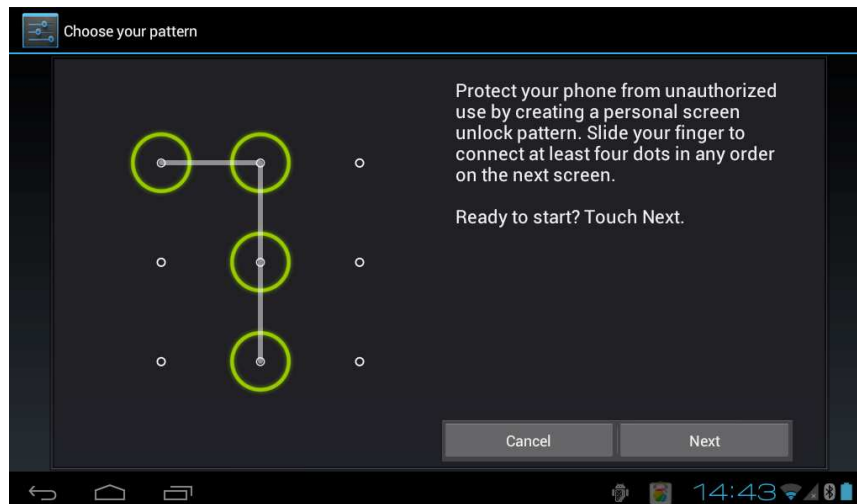

Note: You must use the finger slide on the screen to draw the unlock pattern, rather than click on the i point.

4. The device will record the unlock pattern, click “Continue” .
5. Draw the unlock pattern again, and then click “Confirm” .

Note: 1. If you do not want to unlock pattern appears on the screen, un-check

“Make the passwords visible” .

2. To change the screen unlock pattern, please enter the interface of the screen unlock pattern, confirmed once the original stored pattern, and then touch the “pattern” option to draw a new pattern.

3. If you fail to draw the correct unlock pattern of five on the screen, the screen will prompt you must wait 30 seconds later to try again. If you forgot your screen unlock pattern, please click “Forgot pattern” .The interface will prompt you to use your Google account name and password to create a new screen unlock pattern.

Chapter 11. Operation of Battery

11.1 The operation time of the battery depends on conditions such

as:

- Transmitting power level
- Signal (distance between the phone and the base station)
- Network parameters defined by the operator
- Phone use (WAP, games, SMS)
- Charging procedure used

Exclusions:

Subject to the exclusions contained below:

1. Damage due to the improper use.
2. User does not follow the manual.

Explanation:

The company has the final right of the explanation for this document.

Software upgrades will not be announced.

All pictures are for reference only in the instruction book; please refer to the actual phone.

Disclaimer

© Intex. All rights reserved.

Features and specifications are subject to change without prior notice. Certain tablet features may not be activated by your service provider, and / or their network setting may limit the feature’s functionality. Services and some features such as GPRS, email may be dependent on the network, SIM card, as well as on the compatibility of the devices used and content formats supported and may require network/service subscription/solutions. Data transfers speeds are network dependent. Always contact your service provider for details or help. Talk and standby time is quoted in digital mode and are approximate; battery performance and the signal reception depend on network configuration, signal strength, type of SIM card, operating temperature, features selected as well as voice, data and other application usage pattern. To determine the profiles supported by other Intex products, visit www.intexuae.com for other devices, contact their respective manufacturers. Always

demand for original Intex tablet to protect against buying tinkered and/or used, refurbished or tampered phones. The warranty is applicable only for Intex tablet; the company is not responsible for any loss or theft. Always use Intex original Enhancements (including batteries) for safety. The use of any other type may invalidate and approval or warranty applying to the tablet and may be dangerous. The tablet is designed to operate using Li-ion batteries approved by the phone manufactures. Using non approved batteries with the tablet may result in poor performance and damage to the tablet or its enhancements. The display and products visualization here are illustrative purposes only; Display / color of the tablet may differ from that shown on the manual. All features, functionality and other product specifications are based on the latest available information and are correct at the time of printing; however such product specifications are subject to change without notice. Copyrights are reserved. Intex is the trademark of INTEX TECHNOLOGIES LLC. Which is registered. The unauthorized copying of copyrighted material is not legalized is inimical to the provisions of the copyright laws of Dubai and other countries.

Do' s for disposal of product

Always drop your used electronic products, batteries, and packaging materials after the end of their life in nearest collection point or collection center

Separate the packaging material according to responsible waste disposal options and sorting for recycling.

The battery can easily be removed from the product for recycling.

Don' t of disposal of equipment

Never dump E-waste in garbage bins or municipal solid waste stream.

Do not dispose of your product as unsorted municipal waste.

Do not throw used batteries into household waste.

Do not dispose damaged or leaking Lithium Ion (Li-Ion) battery with normal household waste.



Information on the consequences of improper handling, accidental breakage damage and improper recycling of the end of life product.

If batteries are not properly disposed of, it can cause harm to human health or the environment.

Placing of batteries or devices on or in heating devices, such as microwave ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.

If the battery terminals are in contact with metal objects, it may cause a fire.

For devices with external power supplies, plug socket should be placed in short distance and easily accessible.

Using the wrong type battery replacement there is a danger of explosion, be sure to follow the instructions disposal of used batteries.