

\* Some of the contents in this manual may differ from your phone, depending on the software installed or your service provider.



# TRI BAND GPRS TELEPHONE SGH-P100



ELECTRONICS



Printed in Korea

World Wide Web

Code No.: GH68-04179A

<http://www.samsungmobile.com> English. 07/2003. Rev. 1.0

# Contents

<b>Important Safety Precautions .....</b>	<b>7</b>
<b>Unpacking .....</b>	<b>9</b>
<b>Your Phone .....</b>	<b>10</b>
Phone Layout .....	10
Display .....	13
Service Light .....	16
<b>Getting Started .....</b>	<b>17</b>
Installing the SIM Card .....	17
Charging a Battery .....	19
Switching the Phone On/Off .....	21
<b>Call Functions .....</b>	<b>22</b>
Making a Call .....	22
Adjusting the Volume .....	24
Answering a Call .....	25
Viewing Missed Calls .....	26
Quickly Switching to the Silent mode .....	28
<b>Selecting Functions and Options .....</b>	<b>29</b>
Example: Setting the Display Language .....	31
<b>Phonebook .....</b>	<b>33</b>
Storing a Number with a Name .....	33
Using Phonebook Entry Options .....	35
Searching for a Number in the Phonebook .....	37
Editing a Caller Group .....	39
Speed-Dialling .....	40
Checking the Memory Status .....	41
<b>Entering Text .....</b>	<b>42</b>
Changing the Text Input Mode .....	43
Using the T9 Mode .....	44
Using the Upper/Lower-Case Character Mode .....	45
Using the Symbol Mode .....	47
Using the Number Mode .....	47

**Options During a Call ..... 48**

Putting a Call on Hold.....	48
Switching the Microphone Off (Mute).....	49
Muting/Sending Key Tones.....	49
Sending DTMF Tones.....	50
Searching for a Number in the Phonebook.....	50
Using the SMS Service .....	51
Answering a Second Call.....	51
Making a Multiparty Call .....	52

**Using the Menus..... 54**

Accessing Menu Functions by Scrolling .....	54
Accessing Menu Functions by Using Shortcuts .....	55
List of Menu Functions.....	55

**Text Messages ..... 60**

Inbox ( <i>Menu 1.1</i> ).....	60
Outbox ( <i>Menu 1.2</i> ).....	61
Write New ( <i>Menu 1.3</i> ).....	63
Templates ( <i>Menu 1.4</i> ).....	65
Settings ( <i>Menu 1.5</i> ).....	66
My Objects ( <i>Menu 1.6</i> ).....	67
Memory Status ( <i>Menu 1.7</i> ).....	68
Voice Mail ( <i>Menu 1.8</i> ).....	68
Broadcast ( <i>Menu 1.9</i> ).....	69

**Picture Messages ..... 71**

Inbox ( <i>Menu 2.1</i> ).....	71
Outbox ( <i>Menu 2.2</i> ).....	73
Write New ( <i>Menu 2.3</i> ).....	74
Delete All ( <i>Menu 2.4</i> ).....	76
Setup ( <i>Menu 2.5</i> ).....	76
MMS Profile ( <i>Menu 2.6</i> ).....	77

**Call Records ..... 78**

Missed Calls ( <i>Menu 3.1</i> ).....	78
Received Calls ( <i>Menu 3.2</i> ).....	78
Dialled Calls ( <i>Menu 3.3</i> ).....	79
Delete All ( <i>Menu 3.4</i> ).....	79
Call Time ( <i>Menu 3.5</i> ).....	79
Call Cost ( <i>Menu 3.6</i> ).....	80

**Camera ..... 81**

Take and Send ( <i>Menu 4.1</i> ).....	81
New Photo ( <i>Menu 4.2</i> ).....	82
My Photos ( <i>Menu 4.3</i> ).....	82

**Sound Settings..... 84**

Ring Tone ( <i>Menu 5.1</i> ).....	84
Ring Volume ( <i>Menu 5.2</i> ).....	84
Alert Type ( <i>Menu 5.3</i> ).....	85
Keypad Tone ( <i>Menu 5.4</i> ).....	85
Message Tone ( <i>Menu 5.5</i> ).....	86
Folder Tone ( <i>Menu 5.6</i> ).....	87
Power On/Off ( <i>Menu 5.7</i> ).....	87
Extra Tones ( <i>Menu 5.8</i> ).....	87

**Phone Settings..... 89**

Infrared Activate ( <i>Menu 6.1</i> ).....	89
My Settings ( <i>Menu 6.2</i> ).....	90
Greeting Message ( <i>Menu 6.3</i> ).....	91
Own Number ( <i>Menu 6.4</i> ).....	91
Language ( <i>Menu 6.5</i> ).....	92
Security ( <i>Menu 6.6</i> ).....	92
Display Settings ( <i>Menu 6.7</i> ).....	95
Extra Settings ( <i>Menu 6.8</i> ).....	97
Short Cut ( <i>Menu 6.9</i> ).....	98
Reset Settings ( <i>Menu 6.10</i> ).....	98

**Organiser ..... 99**

Calendar ( <i>Menu 7.1</i> ).....	99
To Do List ( <i>Menu 7.2</i> ).....	101
Time & Date ( <i>Menu 7.3</i> ).....	104
Alarm ( <i>Menu 7.4</i> ).....	105
Calculator ( <i>Menu 7.5</i> ).....	106
Currency Exchange ( <i>Menu 7.6</i> ).....	107

**Network Services ..... 108**

Call Diverting ( <i>Menu 8.1</i> ).....	108
Call Barring ( <i>Menu 8.2</i> ).....	110
Call Waiting ( <i>Menu 8.3</i> ).....	112
Network Selection ( <i>Menu 8.4</i> ).....	113

## Contents

Caller ID (Menu 8.5).....	114
Closed User Group (CUG) (Menu 8.6) .....	114
Band Selection (Menu 8.7).....	116

### **Funbox..... 117**

Games (Menu 9.1) .....	117
WAP Browser (Menu 9.2).....	117
Downloads (Menu 9.3).....	117

### **Solving Problems ..... 119**

### **Access Codes ..... 122**

Phone Password .....	122
PIN .....	123
PUK .....	123
PIN2 .....	124
PUK2 .....	124

### **Health and Safety Information..... 125**

Exposure to Radio-Frequency Energy (SAR Information).....	125
Precautions When Using Batteries .....	130
Road Safety .....	131
Operating Environment .....	133
Electronic Devices.....	133
Potentially Explosive Atmospheres .....	135
Emergency Calls.....	136
Other Important Safety Information .....	137
Care and Maintenance .....	138

### **Glossary..... 140**

### **Index ..... 144**

### **Quick Reference Card..... 149**

# Important Safety Precautions

Read these guidelines before using your wireless phone. Failure to comply with them may be dangerous or illegal.

## **Road Safety at All Times**

Do not use a hand-held phone while driving; park the vehicle first.

## **Switching Off When Refueling**

Do not use the phone at a refueling point (service station) or near fuels or chemicals.

## **Switching Off in Aircraft**

Wireless phones can cause interference. Using them in aircraft is both illegal and dangerous.

## **Switching Off in Hospitals**

Switch off your phone near medical equipment. Follow any regulations or rules in force.

## **Interference**

All wireless phones may be subject to interference, which could affect their performance.

## **Special Regulations**

Meet any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger (in a hospital for example).

### Sensible Use

Use only in the normal position (held to the ear). Avoid unnecessary contact with the antenna when the phone is switched on.

### Emergency Call

Ensure the phone is switched on and in service.

Key in the emergency number for your present location, then press <SEND>. If certain feature are in use, deactivate those features before you can make an emergency call. Give all the necessary information as accurately as possible. Do not cut off the call until given permission to do so.

### Water Resistance

Your phone is not water-resistance. Keep it dry.

### Accessories and Batteries

Use only Samsung-approved accessories and batteries.

### Qualified Service

Only qualified service personnel may install or repair your phone.

**For more detailed safety information, see "Health and Safety Information" on page 125.**

## Unpacking

Your package contains the following items.



 
Handset



Travel Adapter



Batteries



User's Manuals



Wearable  
Ear-microphone



Hand Strap


In addition, you can obtain the following accessories for your phone from your local Samsung dealer:

- Earphone
- Simple hands-free kit
- Standard battery
- Cigarette lighter adapter
- Holster

# Your Phone

## Phone Layout

The following illustrations show the main elements of your phone.

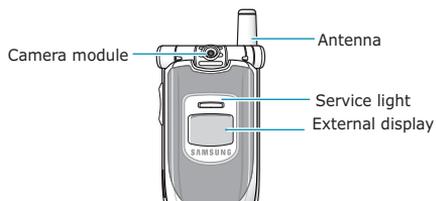

### Key Description



In the menu mode, scroll through the menu options and Phonebook memory.



In the idle mode, allow you to access your favourite menu options directly; for more information on shortcuts, see page 98.

In the idle mode, quickly accesses the **Camera** menu which allows you to use the camera on your phone.



In the menu mode, return to the previous menu level and select the current menu respectively.

When entering text, move the cursor left and right respectively.

In the idle mode, allow you to access your favourite menu options directly; for more information on shortcuts, see page 98.



(soft keys)

Perform the functions indicated by the text above them (on the bottom line of the display).



In the idle mode, quickly launches the WAP (Wireless Application Protocol) browser.



Deletes characters from the display. In the menu mode, returns to the previous menu level.

## Key Description (continued)



Makes or answers a call.

When held down in the idle mode, recalls the last number dialled or received.

In the menu mode, selects a menu function or stores information that you have entered (such as a name) in the phone or SIM memory.



Ends a call. Also switches the phone on and off when held down.

In the menu mode, cancels your input and returns to the idle mode.



When held down in the idle mode, quickly accesses your voice mail.



Enter numbers, letters and some special characters.



Enter special characters.



Perform various functions.



(on the side of the phone)  
During a call, adjust the earpiece volume.


In the idle mode, adjust the key volume.

In the menu mode, scroll through the menu options and Phonebook memory.

## Display

### Display Layout

The display has three areas.

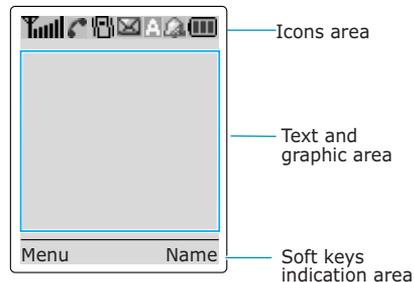

Area	Description
First line	Displays various icons (see page 14).
Middle lines	Display messages, instructions and any information that you enter (number to be dialled, for example).
Last line	Shows the functions currently assigned to the two soft keys.

## Icons

### Icon Description



Shows the received signal strength. The greater the number of bars, the better the signal.



Appears when a call is in progress.



Appears when the silent mode is active or you set the **Alert Type** menu option (**Menu 5.3**), so that the phone vibrates when you receive a call; for further details, see page 85.



Appears when a new text message is received.



Appears when a new voice mail message is received.



Appears to indicate the current text input mode when you are entering text.



Appears when you set an alarm.



Shows the level of your battery. The more bars you see, the more power you have left.



Appears when the IrDA port is active. For details, see page 89.

### Icon Description



Appears when the mute mode is active.



Appears when you are connected to the GPRS network.



Appears when you are out of your home area and have registered with a different network; for example, when travelling in other countries.

## Backlight

A backlight illuminates the display and the keypad. When you press any key or open the folder, the backlight turns on and lights for a given period of time, depending on the **Back Light** menu option. Then it dims and finally turns off after one minute.

To specify the length of time for which the backlight is active, set the **Back Light** menu option (**Menu 6.7.2**); see page 95 for further details.

You can also set the phone to use the backlight only during a specified period of time, in the **Auto Light** menu option (**Menu 6.7.3**); see page 95 for further details.


## External Display

Your phone has an external display on the cover. It indicates that you have an incoming call or a message, and notifies you when you set an alarm at the specified time.

## Service Light

The service light is above the external display on the folder cover. It flashes when services are available on the phone.

To activate or deactivate use of the service light, set the **Service Light** menu option (**Menu 6.7.4**); see page 96 for further details.

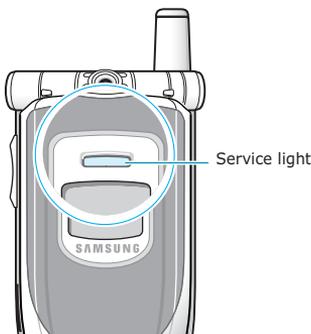

# Getting Started


## Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.


**Important!** The plug-in SIM card and its contacts can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card.

Keep all SIM cards out of the reach of small children.


1. If necessary, switch off the phone by holding down the  key until the power-off image is displayed.
2. Remove the battery. To do so:
  - ① Push the catch above the battery on the back of the phone and hold it in this position.
  - ② Lift the battery away, as shown.

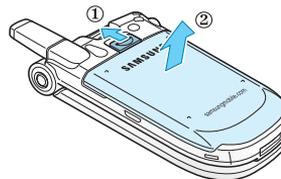


- Slide the SIM card into the SIM card holder so that the holder locks the card in position. Make sure that the notched corner is top left and the gold contacts of the card face into the phone.

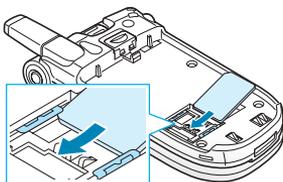


**Note:** When you need to remove the SIM card, slide it, as shown, and take it out of the holder.

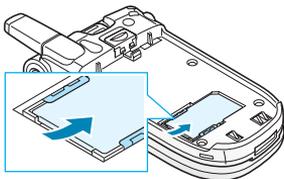

- Place the battery back on the phone, inserting the teeth on the bottom of the battery into the corresponding slots.

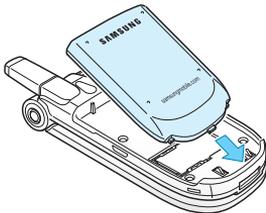

- Push the battery against the back of the phone until it clicks into place. Make sure that the battery is properly installed before switching the phone on.

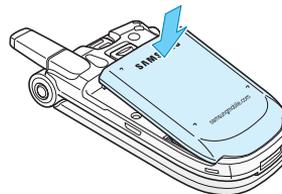


## Charging a Battery

Your phone is powered by a rechargeable Li-ion battery. A travel adapter is provided with your phone. Use only approved batteries and chargers. Ask your local Samsung dealer for further details.


The phone can be used while the battery is charging, but this will cause the phone to charge more slowly.

**Note:** You must fully charge the battery before using your phone for the first time. A discharged battery is fully recharged in approximately 2 hours and 40 minutes.

- With the battery in position on the phone, plug the connector of the travel adapter into the bottom of the phone.

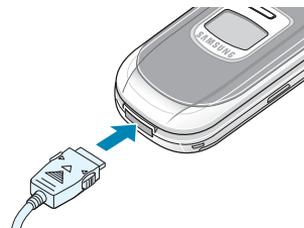


2. Plug the adapter into a standard AC wall outlet.
3. When charging is finished, unplug the adapter from the power outlet and from the phone by pressing the gray tabs on both sides of the connector and pulling the connector out.

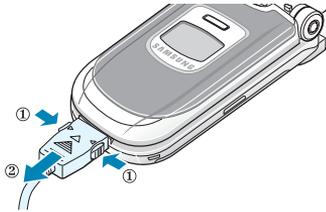

**Note:** Do not remove the battery from the phone without unplugging the adapter while it is charging. If you do this, the phone may be damaged.

### Low Battery Indicator

When the battery is weak and only a few minutes of talk time remain, you will hear a warning tone and a message will be repeated at regular intervals on the display:

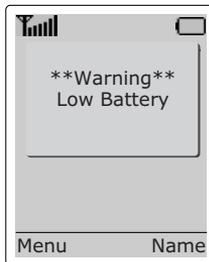

When the battery becomes too weak for the phone to operate, it switches off automatically.

## Switching the Phone On/Off

1. Open the folder.
2. Hold down the  key until the phone switches on.
3. If the phone asks for a password, enter the password and press the **OK** soft key. The phone password is factory set to "00000000." For further details, see page 122.
4. If the phone asks for a PIN, enter the PIN and press the **OK** soft key. For further details, see page 123.

The phone searches for your network and when it finds the network, the idle screen, illustrated below, appears on each display. Now, you can make or receive a call.



**Note:** The display language is preset to English at the factory. To change the language, use the **Language** menu option (**Menu 6.5**); for further details, refer to page 92.

5. When you wish to switch the phone off, hold down the  key until the power-off image is displayed.

# Call Functions

## Making a Call

When the idle screen displays, enter the area code and phone number, and press the  key.

**Note:** If you have checked the **Auto Redial** option in the **Extra Settings** menu (**Menu 6.8**), the number is redialled automatically up to ten times when the person does not answer the call or is already on the phone; see page 97 for further details.

## Making an International Call

1. Press and hold the  key.  
The + character appears.
2. Enter the country code, area code and phone number and press the  key.

## Correcting the Number

To clear	Press the
the last digit displayed	 key.
any other digit in the number	 or  key until the cursor is immediately to the right of the digit to be cleared. Press the  key. You can also insert a missing digit simply by pressing the appropriate key.
the whole display	 key for more than one second.

## Ending a Call

When you want to finish your call, briefly press the  key.

## Redialling the Last Number

The phone stores the numbers you dialled, received or missed if the callers are identified; see "Call Records" on page 78 for further details.

To recall any of these numbers:

1. If you have typed any characters on the display, clear the display by holding down the  key for more than one second.
2. Press the  key to display a list of the last numbers in the order in which the calls were made.
3. Use the  and  keys to scroll through the numbers until the required number highlights.

To	Press the
dial the number highlighted	 key.
edit the number highlighted	press the <b>Options</b> soft key, select the <b>Edit Number</b> option and change the number as required.
delete the number highlighted	press the <b>Options</b> soft key and select <b>Delete</b> .

## Making a Call from the Phonebook

You can store phone numbers that you use frequently in the SIM card or the phone's memory, which are collectively called the Phonebook. Simply select the required name to recall the associated number. For further details on the Phonebook features, refer to page 33.

## Adjusting the Volume

During a call, if you want to adjust the earpiece volume, use the volume keys on the left side of the phone.

Press the ▲ key to increase and the ▼ key to decrease the volume.



In the idle mode with the folder open, you can adjust the key volume using these keys.

## Answering a Call

When somebody calls you, the phone rings and the following screen appears on each display.



If the caller can be identified, the caller's phone number or name, if stored in your Phonebook, displays.

1. If necessary, open the folder. Press the ☎ key or the **Accept** soft key to answer the incoming call.

If the **Anykey Answer** option in the **Extra Settings** menu (**Menu 6.8**) is checked, you can press any key to answer a call except for the ☎ key and the **Reject** soft key (see page 97).

If the **Active Folder** option in the **Extra Settings** menu (**Menu 6.8**) is checked, you can answer the call simply by opening the folder (see page 97).

**Note:** To reject an incoming call, press and hold the volume keys on the left side of the phone before opening the folder.

2. End the call by closing the folder or pressing the ☎ key.

**Note:** You can answer a call while using the Phonebook or menu features.

## Viewing Missed Calls

If you are unable to answer a call for any reason, you can find out who called you, provided that this service is available, so that you can call the person back, if necessary.

The number of missed calls is displayed on the idle screen immediately after a call was missed.

To view the missed call immediately:

1. If the phone is closed, open the folder.
2. Press the **View** soft key.

The number corresponding to the most recent missed call displays, if available.

To	Press the
scroll through the missed calls	 or  key.
call the number displayed	 key.
edit or delete a missed call number	<b>Select</b> soft key (see below).

## Editing a Missed Call Number

**Note:** If the number corresponding to the missed call is not available, the **Edit Number** option is not displayed.

1. Press the **Options** soft key.
2. Press the  or  key to highlight the **Edit Number** option.
3. Press the **Select** soft key.

4. Change the number as required.

To	Press the
call the number	 key.
store the number	<b>Save</b> soft key and enter the name and location required (for further details, refer to page 33).

## Deleting a Missed Call

1. Press the **Options** soft key.
2. If necessary, press the  or  key to highlight the **Delete** option.
3. Press the **Select** soft key.

You can press the  key at any time to exit the Missed Call feature.

**Note:** You can access the Missed Call feature at any time by selecting the **Missed Calls** menu option (**Menu 3.1**); for further details, see page 78.

## Quickly Switching to the Silent mode

The silent mode is convenient when discretion is required and you wish to stop the phone from making any noise, in a theatre for example.

In the idle mode, to switch your phone quickly to the silent mode, simply press and hold the  key until the "Silent Mode" message and vibration icon () are displayed.

In the silent mode, your phone changes the sound settings as follows.

Option	New Setting
Alert Type ( <b>Menu 5.3</b> )	Vibration
Keypad Tone ( <b>Menu 5.4</b> )	OFF
SMS Tone ( <b>Menu 5.5.1</b> )	Light Only
Folder Tone ( <b>Menu 5.6</b> )	Off
Power On/Off ( <b>Menu 5.7</b> )	Off
Extra Tones ( <b>Menu 5.8</b> )	OFF

To exit the silent mode and reactivate the previous sound settings, press and hold the  key again until "Exit Silent Mode" appears. The vibration icon () is no longer displayed.

## Selecting Functions and Options

Your phone offers a set of functions that allow you to customise your phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu allows you to view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the display just above each key indicates its current role.

Example:



Press the left soft key to access the main menu mode.

Press the right soft key to access the Phonebook feature.

To view the various functions/options available and select the one required:

1. Press the appropriate soft key.

To	Press the
select the: <ul style="list-style-type: none"> <li>• function displayed</li> <li>or</li> <li>• option highlighted</li> </ul>	<b>Select</b> soft key or the <b>↓</b> key.
view the next function or highlight the next option in a list	<b>←</b> key or <b>▼</b> key on the left side of the phone.
move back to the previous function or option in a list	<b>→</b> key or <b>▲</b> key on the left side of the phone.
move back up one level in the structure	<b>↶</b> key, <b>↷</b> soft key or <b>⏪</b> key.
exit the structure without changing the settings	<b>☎</b> key.

In some functions, you may be asked for a password or PIN. Enter the required code and press the **OK** soft key.

## Example: Setting the Display Language

1. When the idle screen is displayed, press the **Menu** soft key to access the menus.



2. Scroll through the menus until you reach the **Phone Settings** menu, by pressing the **←** or **→** key.




3. To select the **Phone Settings** menu, press the **Select** soft key or the **↓** key.




If the menu name is too long for the display, it is scrolled when highlighted.

4. Scroll through the sub-menus until you reach the **Language** sub-menu, by pressing the **Left** or **Right** key.

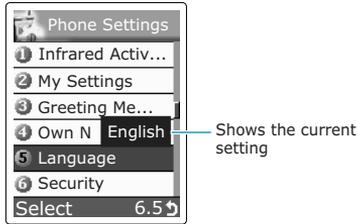

5. To view the languages available, press the **Select** soft key or the **Enter** key. The current setting highlights.

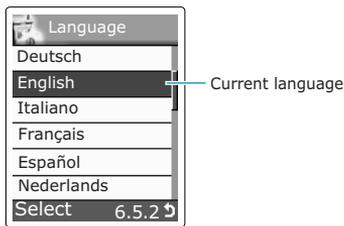

6. Scroll through the list of languages until the appropriate one highlights, by pressing the **Left** or **Right** key.
7. Press the **Select** soft key or the **Enter** key to confirm your selection.
8. Press the **Exit** or **Back** key twice to exit the menu structure.

## Phonebook

You can store phone numbers and their corresponding names in the memory of your SIM card. In addition, you can store up to 500 numbers in the phone memory. The SIM card and phone memories, although physically separate, are used as a single entity, called the Phonebook.

### Storing a Number with a Name

There are two ways to store a number:

- Using the **Save** soft key in the idle mode
- Using the **New Entry** option in the Phonebook menu

### Storing a Number in Idle mode

As soon as you start to enter a number, **Save** appears above the left soft key to allow you to store the number in the Phonebook.

1. Enter the number to be stored.

**Note:** If you make a mistake while entering a number, correct it using the **Clear** key. For further details, refer to page 22.

2. When you are sure that it is correct, press the **Save** soft key.
3. Select an icon to identify the category of number to be stored. Three categories are available;  (mobile phone number),  (office number) and  (home number). To select the category, press the **Left** or **Right** key, followed by the **Select** soft key.

- Enter a name and press the **OK** soft key.  
The maximum length of a name depends on your SIM card. For information on how to enter characters, see page 42.
- Press the right soft key, labelled **To Card** or **To Phone** to switch between the phone and card memories.

**Note:** If you change phones, any numbers stored in your SIM card memory will automatically be available with the new phone, whereas any numbers stored in the phone memory must be restored.

- If you do not want to save the number and name in the suggested location, press the  key to clear the location number and enter your preferred location by pressing the number keys.
- Press the **OK** soft key to store the name and number.

After storing, the phone displays the Phonebook entry or name just created.

To	Press the
use the entry options	<b>Options</b> soft key.
return to the idle screen	 key.

## Storing a Number Using the Phonebook Menu

- When the idle screen displays, press the **Name** soft key.

- Scroll to **New Entry** by pressing the  or  key and press the **Select** soft key.
- Select an icon to identify the category of the number to be stored.  
**Note:** The E-mail icon () is available in this step. It allows you to save an E-mail address instead of a phone number.
- Continue the procedure from Step 4 on page 34 to store the number.

## Using Phonebook Entry Options

While accessing any Phonebook entry, press the **Options** soft key to use the options for the entry.

To	Press the
select the highlighted option	<b>Select</b> soft key or the  key.
highlight a different option	 or  key until the required option highlights.

The following options are available:

**Paste:** allows you to paste the selected number into normal dialling mode.

Use this option to dial a number similar to one in the Phonebook, a different extension in the same office, for example.

Use the  key to change the number as required; refer to page 22 for further details. When you are ready to dial, press the  key.

**Edit:** allows you to edit the Phonebook entry.

Select **One Entry** to change one number in the selected name. If you change the name, the number is saved separately. Select **All Entry** to change the name of the entry.

**Erase:** allows you to erase the selected name and number from the Phonebook. You are asked to confirm that you wish to erase the name and number by pressing the **Yes** soft key.

**Copy:** allows you to copy the selected number to another location. Use this option to store a number similar to one already in the memory; once copied, edit the number and store it in the Phonebook.

**Caller Group:** allows you to assign the entry to a caller group so that the phone alerts you in a particular way when the corresponding person calls you. Select one of the ten groups available.

To remove an entry from a group, select the **No Group** option.

For more information on how to change caller group properties, see page 39.

**Add Entry:** allows you to add a new number in a different category (mobile, office, home or E-mail) to the currently selected name.

## Searching for a Number in the Phonebook

After storing numbers in the Phonebook, you can search for them in two ways; by name and by caller group.

### Searching for a Number by Name

1. When the idle screen displays, press the **Name** soft key.
2. Press the **Select** soft key when **Search** highlights. You are asked to enter a name.
3. Enter the first few letters of the name that you wish to find.

The Phonebook entries are listed, starting with the first entry matching your input. This entry is also highlighted.

To	Press the
view the highlighted entry	<b>View</b> soft key.
select a different entry	<b>←</b> or <b>→</b> key until the required entry highlights.
look for a name starting with a different letter	key labelled with the required letter.

5. Once you have found the required entry, press the **Call** key to dial the number, or press the **Options** soft key to access the Phonebook entry options; for further details, see page 35.

## Searching for a Number by Caller Group

1. When the idle screen displays, press the **Name** soft key.
2. Scroll to **Group Search** by pressing the **←** or **→** key and press the **Select** soft key. You are asked to enter a group name.
3. Enter the first few letters of the group name that you wish to find.

The caller groups are listed, starting with the first group matching your input. The group is also highlighted.

4. Scroll to the required group by pressing the **←** or **→** key and press the **View** soft key.

The Phonebook entries in the selected caller group are listed.

To...	Press the...
view the highlighted entry	<b>View</b> soft key.
select a different entry	<b>←</b> or <b>→</b> key until the required entry highlights.

6. Once you have found the required entry, press the **☎** key to dial the number, or press the **Options** soft key to access the Phonebook entry options; for further details, see page 35.

## Editing a Caller Group

1. When the idle screen displays, press the **Name** soft key.
2. Scroll to **Group Edit** by pressing the **←** or **→** key and press the **Select** soft key.
3. Scroll through the group list by pressing the **←** or **→** key.
4. When the group you want to edit highlights, press the **Options** soft key.
5. Select each option and change the settings, as required. The following options are available:
  - **Call ring tone:** allows you to select the ring tone to be used when you receive a voice call from a person in the group.
  - **SMS tone:** allows you to select the ring tone to be used when you receive a text message from a person in the group.
  - **Graphic:** allows you to select the graphic icon to be displayed when you receive a voice call from a person in the group.
  - **Group Name:** allows you to assign a name to the group; for further details on how to enter characters, see page 42.
6. When you finish changing the settings, press the **☎** or **☎** key.

## Speed-Dialling

---

Once you have stored phone numbers in the SIM card, you can set up to eight speed-dial entries and then dial them easily whenever you want, simply by pressing the associated number key.

### Setting Up Speed-Dial Entries

1. When the idle screen displays, press the **Name** soft key.
2. Scroll to **Speed Dial** by pressing the **←** or **→** key and press the **Select** soft key.
3. Select the key, **2<sup>ABC</sup>** to **9<sup>WXYZ</sup>**, to which you wish to assign the speed-dialling feature, and press the **OK** soft key.

**Note:** If you have already assigned a number to the key, the **Options** soft key replaces the **OK** soft key. Go to Step 6.

4. Select the required Phonebook entry from the list and press the **View** soft key.
5. Select the required number if the entry has more than one number, by pressing the **←** or **→** key and press the **Select** soft key.
6. Once you have assigned a number to the selected key, The following options are available:
  - **Change:** allows you to assign a different number to the key.
  - **Erase:** allows you to clear the setting so that no number is assigned to the key.

- **Erase All:** allows you to clear the settings for all keys so that no numbers are assigned to any of the keys.
- **Number:** allows you to view the number assigned to the key.

7. When you have finished setting the option, press the **☐** or **☎** key.

### Speed-Dialling from the Phonebook

To speed-dial the numbers assigned to keys **2<sup>ABC</sup>** to **9<sup>WXYZ</sup>**, press and hold the appropriate key.

**Note:** Memory location 1 is reserved for your Voice Mail server number.

## Checking the Memory Status

---

You can check how many names and numbers are stored in the Phonebook; SIM card and phone memories. You can also see the capacity of both memories.

1. When the idle screen displays, press the **Name** soft key.
2. Select the **Memory Status** option.
3. Press the **←** or **→** key to view the number of existing and remaining entries in the card and phone memories.

# Entering Text

When using your phone, you will often need to enter text. For example, when storing a name in the Phonebook, creating your personal greeting or scheduling events in your calendar. You can enter alphanumeric characters by using your phone's keypad.

Your phone has the following text input modes:

- **T9 mode**

This mode allows you to enter words with only one keystroke per letter. Each key on the keypad has more than one letter – when you press the  key once, J, K or L may be displayed. The T9 mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional upper/lower-case character modes.

- **Upper/lower-case character modes**

These modes allow you to enter letters by pressing the key labeled with the required letter once, twice, three or four times until the letter displays.

- **Symbol mode**

This mode allows you to enter symbols, such as punctuation marks.


- **Number mode**

This mode allows you to enter numbers.

## Changing the Text Input Mode

When you are in a field that allows characters to be entered, you will notice the text input mode indicator on the display.

*Example:* When you create a text message

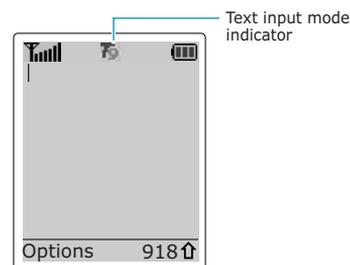

To select the...	Press the  soft key until...
T9 mode	 displays. See page 44.
Upper-case character mode	<b>A</b> displays. See page 45.
Lower-case character mode	<b>a</b> displays. See page 45.
Number mode	<b>1</b> displays. See page 47.
Symbol mode	 displays. See page 47.

## Using the T9 Mode

The T9 predictive text input mode allows you to key in any character using single keystrokes. This text input mode is based on a built-in dictionary.

1. When you are in T9 predictive text input mode, start entering a word by pressing keys to . Press each key only once for one letter.

Example: to enter *Hello* in T9 mode, press , , , and .

The word that you are typing appears on the display. It may change with each key that you press.

2. Enter the whole word before editing or deleting the keystrokes.
3. If the word is correct, start entering the next word.

 
Otherwise, press the , or key to display alternative word choices for the keys that you have pressed.

Example: both *Of* and *Me* have the sequence , . The phone displays the most commonly used choice first.

4. Put a space between each word by pressing the key.
- To type words not found in the T9 mode, change the text input mode to the upper/lower-case character input mode.

- To enter full stops, hyphens or apostrophes, press the key. The T9 mode applies grammar rules to ensure that the correct punctuation is used.

Example: is used twice to display two punctuation marks:



- To shift the case in T9 mode, use the key.
- You can move the cursor by using the and keys. To delete letters, press the key. Press and hold down the key to clear the display.

## Using the Upper/Lower-Case Character Mode

Use the to keys to enter your text.

1. Press the key labeled with the required letter:
  - Once for the first letter
  - Twice for the second letter
  - And so on
2. Select the other letters in the same way.

**Note:** The cursor moves to the right when you press a different key. When entering the same letter twice or a different letter on the same key, just wait for a few seconds for the cursor to move right automatically, and then select the next letter.


Refer to the table below for more information about the characters available.

Key	Characters in the Order Displayed	
	Upper Case	Lower Case
1	Space . 1 ! ? & i ÷ §	. % @ _ £ \$ ¥ ¤ §
2	A B C 2 Ä Å Æ Ç Γ	a b c 2 à ä å æ Γ
3	D E F 3 É Δ Φ	d e f 3 è é Φ
4	G H I 4 Θ Ψ	g h i 4 ì Ψ
5	J K L 5 Λ	j k l 5 λ
6	M N O 6 Ñ Ø Ö ö	m n o 6 ñ ø ò ö
7	P Q R S 7 Π Σ Ξ	p q r s 7 β Σ Ξ
8	T U V 8 Ü ü	t u v 8 ù ü
9	W X Y Z 9 Ω	w x y z 9 Ω
0	0 * # , ; ' " =	/ : - + ( ) < >

- To insert a space, press the  key.
- You can move the cursor by using the  and  keys. To delete letters, press the  key. Press and hold down the  key to clear the display.

## Using the Symbol Mode

The Symbol mode enables you to insert symbols in a text message.

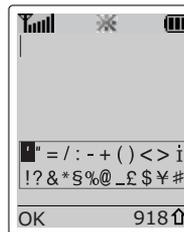

Use the navigation keys to scroll to the desired symbol and then press the **OK** soft key to insert the highlighted symbol into your message.

## Using the Number Mode

The Number mode enables you to enter numbers in a text message. Press the keys corresponding to the required digits, and manually switching back to the text input mode of choice.

# Options During a Call

Your phone provides a number of control functions that you can use during a call.

## Putting a Call on Hold

You can place the current call on hold whenever you want. You can make another call while you have a call in progress if this service is supported by the network. Of these two calls, one is active and the other is on hold and you can switch between the calls.

To place a call on hold, simply press the **Hold** soft key. You can reactivate the call whenever you want, by pressing the **Unhold** soft key.

To make a call while you have a call in progress:

1. Enter the phone number that you wish to dial or look it up in the Phonebook.
2. Press the  key to dial the second call. The first call is automatically put on hold.

Or alternatively:

1. Put the current call on hold by pressing the **Hold** soft key.
2. Make the second call in the normal way.

To switch between the two calls, simply press the **Swap** soft key.

The current call is placed on hold and the call on hold is reactivated so that you can continue conversing with the other party.

When you have finished, end each call normally by pressing the  key.

## Switching the Microphone Off (Mute)

You can temporarily switch your phone's microphone off, so that the other party cannot hear you.

Example: You wish to say something to another person in the room but do not want the other party to hear you.

To switch the microphone off temporarily:

1. Press the **Options** soft key.
2. If necessary, press the  key to highlight the **Mute** option.
3. Press the **OK** soft key.

The other party can no longer hear you.

To switch the microphone back on:

1. Press the **Options** soft key.
2. If necessary, press the  key to highlight the **Unmute** option.
3. Press the **OK** soft key.

The other party can hear you again.

## Muting/Sending Key Tones

These options allow you to turn the key tones off or on. If the **Mute keys** option is selected, your phone does not transmit the key tones. It allows you to press keys without hearing annoying key tones during a call.

**Note:** To communicate with answering machines or computerized telephony systems, the **Send tones** option must be selected.

## Sending DTMF Tones

---

You can send the DTMF (dual tone multi-frequency) tones corresponding to a number entered during a call.

This option is helpful when submitting a password or account number to an automated system, like a banking service.

To send DTMF tones, proceed as follows.

1. When you are connected to the teleservice system, press the **Options** soft key.
2. Press the **—** key to highlight the **Send DTMF** option.
3. Press the **OK** soft key.
4. Enter the number you wish to send and press the **OK** soft key.  
The tones corresponding to the number displayed are sent.

**Note:** You can also search for a number in the phonebook by pressing the **Name** soft key. For a more detailed description of the Phonebook feature, refer to page 33.

## Searching for a Number in the Phonebook

---

You can search for a number in the Phonebook during a call.

1. Press the **Options** soft key.
2. Press the **—** key to highlight the **Phonebook** option.
3. Press the **OK** soft key.

The Phonebook entries are listed.

4. Enter the name that you wish to find.

If you enter the first few letters of the name, the Phonebook entries are listed, starting with the first entry matching your input. The entry also highlights.

5. To view the highlighted entry, press the **View** soft key.

For further details on the Phonebook feature, refer to page 33.

## Using the SMS Service

---

If you receive an SMS (Short Message Service) message during a call, the message icon (✉) flashes on the display. The **Messages** option enables you to use this feature.

For further details on the SMS service, refer to page 60.

## Answering a Second Call

---

You can answer an incoming call while you have a call in progress, if this service is supported by the network and you have set the **Call Waiting** menu option (**Menu 8.3**) to **Activate** (see Page 112). You will be notified of an incoming call by a call waiting tone.

To answer a call while you have a call in progress:

1. Press the **☎** key to answer the incoming call. The first call is automatically put on hold.
2. To switch between the two calls, press the **Swap** soft key.

To end a call on hold, press the **Options** soft key and select the **End Held Call** option.

3. To end the current call, press the  key.

## Making a Multiparty Call

A multiparty call is a network service that allows up to six people to take part simultaneously in a multiparty or conference call. For more information, contact your service provider.

### Setting up the Multiparty Call

1. Call the first participant in the normal way.
2. Call the second participant in the normal way. The first call is automatically put on hold.
3. To join the first participant to the multiparty call, press the **Options** soft key and select the **Join** option.
4. To add a new person to the multiparty call, call the person in the normal way, then press the **Options** soft key and select the **Conference** option.

You can add incoming callers by answering the call and pressing **Options**, followed by **Conference**. Repeat as required.

### Having a Private Conversation With One Participant

1. Press the **Options** soft key and choose the **Select one** option.

The list of call participants appears.

2. Highlight the required person, by pressing the  or  key, followed by the **Select** soft key or the  key.
3. Select the **Private** option.

Now you can talk privately with that person. The other participants can continue to converse with each other.

4. To return to the multiparty call, press the **Options** soft key and select **Conference**.

All of the multiparty call participants can now hear each other.

### Dropping One Participant

1. Press the **Options** soft key and choose the **Select one** option.

The list of call participants appears.

2. Highlight the required person, by pressing the  or  key, followed by the **Select** soft key or the  key.
3. Select **Remove**.

The call is ended with that participant, but you can continue to talk with the other participants.

4. End the multiparty call by closing the folder or pressing the  key.

## Using the Menus

The phone offers a range of functions that allow you to tailor the phone to your needs. These functions are arranged in menus and sub-menus.

The menus and sub-menus can be accessed by scrolling with the navigation keys or by using the shortcuts.

### Accessing Menu Functions by Scrolling

1. In idle mode, press the **Menu** soft key to access menu mode.
2. Scroll with the **Up** and **Down** keys to reach the required main menu, **Phone Settings** for example. Press the **Select** soft key or the **Enter** key to enter the menu.
3. If the menu contains any sub-menus, **Language** for example, you can access them by scrolling with the **Up** and **Down** keys and pressing the **Select** soft key.

If the menu that you have selected contains further options, repeat the same procedure.

4. To	Press the
scroll through the menus	<b>Up</b> and <b>Down</b> keys or the <b>Up</b> and <b>Down</b> keys on the left side of the phone.
confirm the chosen setting	<b>Select</b> soft key or the <b>Enter</b> key.
return to the previous menu level	<b>Back</b> soft key or the <b>Left</b> key.
exit the menu without changing the settings	<b>End Call</b> key.

### Accessing Menu Functions by Using Shortcuts

The menu items (menu, sub-menu and options) are numbered and can be accessed quickly by using their shortcut number. The shortcut number is shown in the bottom right next to the **Soft** key on the display. Simply press the **Menu** soft key and key in the required number.

**Note:** The numbers assigned to each menu option are indicated in the list on the next page. They may not match the menu number on the phone. It depends on the services supported by the SIM card.

**Example:** Accessing the **Language** option.

1. Press the **Menu** soft key.
2. Press **6** for **Phone Settings**.
3. Press **5** for **Language**.

The languages available display directly.

### List of Menu Functions

The following illustration shows the menu structure available and indicates the:

- number assigned to each option
- page on which you can find a description of each feature

**Note:** If you use a SIM AT card that provides additional services, the **SIM AT** menu (**0**) is displayed first when you press the **Menu** soft key to enter menu mode. For further details, refer to your SIM card manual.

**1. Text Messages (see page 60)**

- 1.1 Inbox
- 1.2 Outbox
- 1.3 Write New
- 1.4 Templates
- 1.5 Settings
  - 1.5.1 Setting 1\*
  - 1.5.2 Setting 2\*
  - 1.5.3 Setting 3\*
  - 1.5.4 Common Setting
- 1.6 My Objects
  - 1.6.1 My EMS Melody
  - 1.6.2 My EMS Picture
  - 1.6.3 My EMS Animation
  - 1.6.4 Delete All
- 1.7 Memory Status
  - 1.7.1 SIM memory
  - 1.7.2 PHONE memory
  - 1.7.3 CB memory
  - 1.7.4 Delete all
- 1.8 Voice Mail
  - 1.8.1 Connect to Voice Server
  - 1.8.2 Voice Server Number
- 1.9 Broadcast
  - 1.9.1 Read
  - 1.9.2 Receive
  - 1.9.3 Channel List
  - 1.9.4 Language

**2. Picture Messages (see page 71)**

- 2.1 Inbox
- 2.2 Outbox
- 2.3 Write New
- 2.4 Delete All
- 2.5 Setup
- 2.6 MMS Profile

**3. Call Records (see page 78)**

- 3.1 Missed Calls
- 3.2 Received Calls
- 3.3 Dialed Calls
- 3.4 Delete All
  - 3.4.1 Missed Calls
  - 3.4.2 Received Calls
  - 3.4.3 Dialed Calls
- 3.5 Call Time
  - 3.5.1 Last Call Time
  - 3.5.2 Total Sent
  - 3.5.3 Total Received
  - 3.5.4 Reset Timers
- 3.6 Call Cost\*
  - 3.6.1 Last Call Cost
  - 3.6.2 Total Cost
  - 3.6.3 Max Cost
  - 3.6.4 Reset Counters
  - 3.6.5 Set Max Cost
  - 3.6.6 Price/Unit

**4. Camera (see page 81)**

- 4.1 Take and Send
- 4.2 New Photo
- 4.3 My Photos

**5. Sound Settings (see page 84)**

- 5.1 Ring Tone
- 5.2 Ring Volume
- 5.3 Alert Type
- 5.4 Keypad Tone
- 5.5 Message Tone
  - 5.5.1 SMS Tone
  - 5.5.2 SMS-CB Tone
- 5.6 Folder Tone
- 5.7 Power On/Off
- 5.8 Extra Tones
  - 5.8.1 Error Tone
  - 5.8.2 Minute Minder
  - 5.8.3 Connect Tone

\* Shown only if supported by your SIM card.

## 6. Phone Settings (see page 89)

- 6.1 Infrared Activate
- 6.2 My Settings
  - 6.2.1 Wallpaper
  - 6.2.2 Menu Style
- 6.3 Greeting Message
- 6.4 Own Number
- 6.5 Language
- 6.6 Security
  - 6.6.1 PIN Check
  - 6.6.2 Change PIN
  - 6.6.3 Phone Lock
  - 6.6.4 Change Password
  - 6.6.5 SIM Lock
  - 6.6.6 FDN Mode\*
  - 6.6.7 Change PIN2\*
- 6.7 Display Settings
  - 6.7.1 Brightness
  - 6.7.2 Back Light
  - 6.7.3 Auto Light
  - 6.7.4 Service Light
  - 6.7.5 Graphic Logo
- 6.8 Extra Settings
  - 6.8.1 Auto Redial
  - 6.8.2 Active Folder
  - 6.8.3 Anykey Answer
- 6.9 Short Cut
- 6.10 Reset Settings

## 7. Organiser (see page 99)

- 7.1 Calendar
- 7.2 To Do List
- 7.3 Time & Date
  - 7.3.1 Set Time
  - 7.3.2 Set Date
  - 7.3.3 World Time
  - 7.3.4 Time Format
- 7.4 Alarm
- 7.5 Calculator
- 7.6 Currency Exchange

## 8. Network Services (see page 108)

- 8.1 Call Diverting
  - 8.1.1 Divert Always
  - 8.1.2 Busy
  - 8.1.3 No Reply
  - 8.1.4 Unreachable
  - 8.1.5 Cancel All
- 8.2 Call Barring
  - 8.2.1 All Outgoing
  - 8.2.2 International
  - 8.2.3 International Except to Home
  - 8.2.4 All Incoming
  - 8.2.5 Incoming While Abroad
  - 8.2.6 Cancel All
  - 8.2.7 Change Barring Password
- 8.3 Call Waiting
  - 8.3.1 Voice Calls
  - 8.3.2 Data Calls
  - 8.3.3 Cancel All
- 8.4 Network Selection
  - 8.4.1 Automatic
  - 8.4.2 Manual
- 8.5 Caller ID
  - 8.5.1 Default
  - 8.5.2 Hide Number
  - 8.5.3 Send Number
- 8.6 Closed User Group
  - 8.6.1 Index List
  - 8.6.2 Outside Access
  - 8.6.3 Default Group
- 8.7 Band Selection

## 9. Funbox (see page 117)

- 9.1 Games
- 9.2 WAP Browser
- 9.3 Downloads
  - 9.3.1 Sounds
  - 9.3.2 Pictures

\* Shown only if supported by your SIM card.

# Text Messages

The SMS (Short Message Service) function is a network service and may not be supported by your network. Messages can be sent by text, fax, Email and paging messaging systems, provided that these services are supported by your network. To send text messages by phone, you must obtain the number of the SMS center from your service provider.

When the message icon (✉) appears, you have received new text messages. If the memory is full, an error message is displayed and you cannot receive any new messages. Use the **Delete** option in each message box to delete obsolete ones.

## Inbox *(Menu 1.1)*

---

This message box is used to store the messages that you have received.

When you enter this menu, the list of messages in the box displays with the senders' phone numbers or names, if available in your Phonebook.

1. Select a message from the list and press the **View** soft key to read the message contents.
2. To scroll through the contents, press the **←** or **→** key.
3. To scroll to the previous or next messages, press the **⌂** or **☰** key.

While reading a message, you can choose the following options by pressing the **Options** soft key.

**Delete:** allows you to delete the message.

**Send:** allows you to resend the message. For further information on how to send a message, see page 63.

**Reply:** allows you to reply to the sender by sending a text message. You can also change the SMS center number, if required.

**Call Back:** allows you to call the sender back.

**Cut Address:** allows you to extract URL, e-mail addresses or phone numbers from the message text, so that you can save them in your phone's memory.

**Move:** allows you to move the message to another memory location, from the SIM card memory to the phone memory or vice versa.

**Select Objects:** allows you to save the media items, such as sounds or images, from the message into your phone's memory. You can then use the items when writing a message; for details, see page 64.

## Outbox *(Menu 1.2)*

---

This message box is used to store the messages that you have already sent or will send.

When you enter this menu, the list of messages in the box displays with the recipients' phone numbers or names, if available in your Phonebook.

1. Select a message from the list and press the **View** soft key to read the message contents.
2. To scroll through the contents, press the **←** or **→** key.

3. To scroll to the previous or next messages, press the  or  key.

While reading a message, you can choose the following options by pressing the **Options** soft key.

**Delete:** allows you to delete the message.

**Send:** allows you to resend the message. For further information on how to send a message, see page 63.

**Cut Address:** allows you to extract URL, e-mail addresses or phone numbers from the message text, so that you can save them in your phone's memory.

**Move:** allows you to move the message to another memory location, from the SIM memory to the phone memory or vice versa.

**Select Objects:** allows you to save the media items, such as sounds or images, from the message into your phone's memory. You can then use the items when writing a message; for details, see page 64.

## Write New *(Menu 1.3)*

---

In this menu, you can write and send a text message.

**Note:** You can enter up to 918 alphanumeric characters for your message. If you add media items to the message, the number of characters you can enter will be decreased.

### Creating a Simple Text Message

1. Create your message.

**Note:** For more information about entering characters, refer to page 42.

2. When you finish entering your message, press the **Options** soft key. The following options are available:
  - **Send:** allows you to send the message. The message will be deleted after sending.
  - **Save and Send:** allows you to save a copy of the message into the specified memory and then send the message to the destination. You can read the message in your Outbox
  - **Save:** allows you to save the message into the specified memory so that it can be sent later. You can read the message in your Outbox.
  - For information about the **Text Formatting, Add Objects, Add Templates, Add Phonebook, Add Bookmark** and **Language** options, see "Creating a Message using the Options" on page 64.

3. Select **Send** or **Save and Send**, and press the **Select** soft key.

If you only want to save the message, select **Save**. After saving the message, the phone returns to the **Messages** menu.

4. Select the memory where the message is saved and press the **OK** soft key.
5. Enter a destination number and press the **OK** soft key. The message is sent.

### Creating a Message using the Options

1. Create your message.
2. Press the **Options** soft key.
3. Select one of the following options by using the **—** and **—** keys and pressing the **Select** soft key.

- **Text Formatting:** allows you to format the style of the text. For the **Size** attribute, the **Normal**, **Large** and **Small** sizes are available. For the **Underline** and **Strikethrough** attributes, select **On** or **Off**. The attributes can be combined.
- **Add Objects:** allows you to add a sound, melody, picture or animation to your message. Select the category of item to be added; **Sound**, **Melody**, **Picture** and **Animation** are available. In each category, you can select the various factory-set items or choose an item received from other sources, such as the Internet or other phones.

- **Add Templates:** allows you to apply one of the preset message templates to the text. Select one of the five messages predefined in the **Templates** menu option (**Menu 1.4**); for further details, see page 65.
  - **Add Phonebook:** allows you to add a Phonebook entry in your message. Select one from the list.
  - **Add Bookmark:** allows you to add a web page's address stored in your Favourite list (**Menu 9.2.2**). Select one from the list.
  - **Language:** allows you to change the language to be used in T9 input mode. Select the language to be used.
4. Complete the message, and send or save it by following the procedure from Step 2 on page 63.

### Templates *(Menu 1.4)*

Using this menu, you can preset messages that you use most frequently. Scroll through the template list using the **—** and **—** keys. When the message template you want to edit highlights, press the **Options** soft key.

**Edit:** allows you to write a new message or edit the selected message.

**Note:** For further information on how to enter characters, refer to page 42.

**Send Message:** allows you to recall the selected message. Once you have completed the message, you can send, save and send, or simply save it. For details on how to send a message, see page 63.

**Delete:** allows you to delete the selected message. You are asked to confirm the deletion by pressing the **Yes** soft key.

## Settings *(Menu 1.5)*

In this menu, you can set up default SMS information. A setting group is a collection of settings required to send messages. The number of setting groups available depends on the capacity of your SIM card.

**Setting x** (where **x** is the setting group number): each group has its own sub-menu.

Service Centre: allows you to store or change the number of your SMS centre required when sending messages. You must obtain this number from your service provider.

Default Destination: allows you to store the default destination number. The number will automatically display on the Destination screen when you create a message.

Default Type: allows you to set the default message type- Text, Fax, Email and Paging. The network can convert the messages into the selected format.

Default Validity: allows you to set the length of time for which your text messages will be stored at the message centre while attempts are made to deliver them.

Setting Name: allows you to give a name to the setting group currently being defined.

**Common Setting**: The following options are available:

Reply Path: allows the recipient of your SMS message to send you a reply message via your message centre, if your network supports with this service.

Delivery Reports: allows you to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.

Bearer Selection: allows you to choose between **GSM** and **GPRS**.

## My Objects *(Menu 1.6)*

After saving any objects received from messages into your phone memory, using the **Select Objects** option (see page 61), you can see the items in this menu.

Three categories of items are available:

- **My EMS Melody**
- **My EMS Picture**
- **My EMS Animation**

You can forward the items to other people by messages and/or use them for your ring tone or background image.

You can delete all of the items using the **Delete All** option (**Menu 1.6.4**).

To	Press the
select a message box to delete	<b>Mark</b> soft key.
cancel the selection	<b>Unmark</b> soft key.
delete the items in the selected message box	<b>Delete</b> soft key.

If you want to delete all of the media items, select **All Object**.

## Memory Status *(Menu 1.7)*

This menu shows how many messages are currently stored in the SIM, phone and CB memories.

You can delete all of the messages in each message box using the **Delete all** option (**Menu 1.7.4**).

To	Press the
select a message box to delete	<b>Mark</b> soft key.
cancel the selection	<b>Unmark</b> soft key.
delete the items in the selected message box	<b>Delete</b> soft key.

If you want to delete all of the messages, select **All Messages**.

## Voice Mail *(Menu 1.8)*

This menu provides you with a way of accessing your voice mailbox, if provided by your network.

The following options are available:

**Connect to Voice Server:** before using this feature, you must enter the voice server number obtained from your service provider (see menu option **1.8.2**). You can then select this option and simply press the **OK** soft key to listen to your messages.

To quickly connect to the voice server, press and hold the  key in the idle mode.

**Voice Server Number:** allows you to change the voice mail server number, if necessary.

To	Press the
enter the server number	corresponding numeric keys.
correct a digit	 key.
move the cursor to the left/right without clearing the digit	<b> </b> or <b> </b> key.

**Note:** Voice Mail is a network feature. Please contact your service provider for more information.

## Broadcast *(Menu 1.9)*

This network service allows you to receive text messages on various topics, such as the weather or traffic. Messages are displayed immediately as they are received, provided that:

- the phone is in the idle mode
- the **Receive** option is set to **Enable**
- the message channel is currently active in the channel list

The following options are available:

**Read:** lets you view the message. **Volatile** displays the messages from the network, but loses its contents as soon as the phone is switched off. Scroll through the message using the **←** and **→** keys. While reading a message, press the **Save** soft key to store the message in the **Archive** box for later retrieval.

**Receive:** allows you to enable or disable the reception of broadcast messages.

**Channel List:** allows you to indicate the channels from which you wish to receive broadcast messages. The following options are available:

**Select:** used to enable or disable channels in the list by marking or unmarking them respectively. A check mark displays in front of each selected channel.

**Add Channel:** used to enter the ID and title for a new channel.

**Delete:** used to remove a channel from the list.

**Edit:** used to change the ID and title of an existing channel.

**Language:** allows you to select your preferred language to be used when displaying cell broadcast messages.

Please contact your service provider for more information.

## Picture Messages

Multimedia Message Service (MMS) is a messaging service very similar to Short Message Service (SMS). It provides automatic and immediate delivery of personal multimedia messages from phone to phone or from phone to e-mail.

In addition to the familiar text content of text messages, multimedia messages can contain images, graphics, voice and audio clips. An MMS message is a multimedia presentation in a single entry. It is not a text file with attachments.

Using the MMS feature, your phone can receive multimedia messages. You can also send picture messages, which are short messages that contain images, such as your photos or graphics you downloaded from the Internet. This function is available only if it is supported by your service provider. Only phones that offer picture message features can receive and display picture message.

### Inbox *(Menu 2.1)*

---

#### Viewing a Message When You Receive it

When a new multimedia message comes in, the display shows the text notification along with the sender's number.

1. Press the **View** soft key to view the message.

The display shows brief information about the message, such as the sender's number, the message size and the subject.

If you want to view the message later in the Inbox, press the **Exit** soft key.

2. To scroll through the message, press the **←** or **→** key.

While viewing a message, press the **Options** soft key to use the following options:

**Retrieve:** shows you the message contents.

**Delete:** deletes the message.

**More Information:** shows you detailed information about the message.

## Viewing a Received Message in the Inbox

When you access the **Inbox** menu option (**Menu 2.1**), the list of multimedia messages you received displays with the senders' phone numbers, if they are available in your Phonebook, or subjects.

1. Select the message and press the **Select** soft key to view the message.
2. To scroll through the message, press the **←** or **→** key.

While viewing a message, you can choose the Message options by pressing the **Options** soft key.

If you are viewing a new message, the options are the same as when you view a message as soon as you receive it. See the previous section.

When you are reviewing a message, the following options are available:

**Delete:** deletes the message.

**Reply:** allows you to reply to the sender by sending a text or picture message.

**Call Back:** allows you to call the sender back.

**Cut Address:** allows you to extract a number from the message text, so that you can call the number or save it in the Phonebook.

**Forward:** allows you to forward the message to another person.

**Save Picture:** allows you to save an image from the message into your phone. Photos are stored in the **My Photos** folder (**Menu 4.3**) and other images are in the **Pictures** folder in the **Downloads** menu (**Menu 9.3**)

**Save Sound:** allows you to save a sound from the message into the **Sounds** folder in the **Downloads** menu (**Menu 9.3**).

## Outbox *(Menu 2.2)*

---

When you access this menu option, the list of the picture messages you sent displays.

1. Select the required message and press the **Select** soft key to view the message contents.
2. To scroll through the message, press the **←** or **→** key.

While viewing a message, you can choose the following options by pressing the **Options** soft key:

**Delete:** deletes the message.

**Cut Address:** allows you to extract a number from the message text, so that you can call the number or save it in the Phonebook.

**Send:** allows you to resend the message.

**Edit Message:** allows you to change the message contents, picture or text.

## Write New *(Menu 2.3)*

---

This menu allows you to create a new picture message and then send it to multiple destinations.

### Creating and Sending a Picture Message

1. Enter the subject of your message and press the **OK** soft key.

For further details about entering characters, see page 42.

2. Press the **Options** soft key and add the message contents using one of the following options:
  - **Add Text:** Enter the message text and press the **OK** soft key.
  - **Add My Photo:** allows you to add a photo you took using the camera on your phone. Select a photo and press the **View** soft key. Then, press the **Select** soft key to add. For further details about using the camera, see page 81.
  - **Add Picture:** allows you to add a picture stored in the **Pictures** folder in the **Downloads** menu (**Menu 9.3**). Choose a picture and press the **Select** soft key.
  - **Send:** allows you to send the message. Use this option when you finish creating the message.
  - **Save:** saves the message in the **Outbox (Menu 2.2)** for later use. Use this option when you finish creating the message.
3. When the added content displays, press the **—** key to highlight **Add Here**.

4. Repeat steps 2 and 3 until you finish creating your message.
5. If you want to change the added items, press the **—** or **—** key to highlight one and press the **Options** soft key. The following options are available:
  - **Edit:** allows you to change text or replace the image with another.
  - **Delete:** deletes the item from your message.
  - **Send:** allows you to send the message.
  - **Save:** saves the message in the **Outbox (Menu 2.2)** for later use.
6. When you finish creating the message, select **Send** from the options.
7. Choose one of the following options and press the **Select** soft key.
  - **Phone Number:** allows you to enter the desired phone number.
  - **E-mail:** allows you to enter the e-mail address of the recipient to send the message as an e-mail.
  - **Phone Book:** allows you to recall a phone number from your Phonebook.
8. Enter a number or an address, or select a number in the Phonebook. When the correct number or address is displayed, press the **OK** soft key.
9. If you want to send the message to multiple destinations, select **Add Destination** and press the **Select** soft key.

10. Repeat steps 7 to 9. You can enter up to 10 destinations.

If you want to edit the destinations, select one and press the **Select** soft key. You can change or delete it.

11. After entering the destinations, press the **Select** soft key when **Send Message** highlights.

Your phone sends the message.

## Delete All *(Menu 2.4)*

---

You can delete all of the messages in the Inbox or Outbox.

When a confirming message appears, press the **Yes** soft key to confirm.

## Setup *(Menu 2.5)*

---

You can change the default message settings.

To turn a given option on or off, press the **Select** soft key to place or remove a check mark on each option.

The following options are available:

**Hide ID:** When this option is checked, your phone number is not displayed on the recipient's phone.

**Delivery Report:** When this option is checked, the network informs you whether or not your message has been delivered.

**Read Reply:** When this option is checked, your phone sends a request for a reply along with your message to the recipient.

**Auto Download:** When this option is checked, your phone automatically downloads the received pictures or sounds.

## MMS Profile *(Menu 2.6)*

---

In this menu, you can configure various settings that are required when you send or receive multimedia messages.

The following options are available:

**Profile Name:** Name that you wish to assign to the MMS server.

**Connection URL:** Address of your MMS server.

**Security:** Data transmission mode. Choose **Secure** to protect your data against unauthorised access; otherwise, choose **Non-Secure**.

**IP address:** Gateway address required to connect to the MMS server.

**User Name:** User ID required to connect to the MMS server.

**Password:** Password required to connect to the MMS server.

**APN:** Access point name used for the address of the MMS server.

For further details, contact your service provider.

# Call Records

In this menu, you can view the:

- missed, incoming or outgoing calls
- length of the call you made or received
- cost of your calls

**Note:** You can access all of the numbers in the three types of call records by pressing the  key in idle mode.

## Missed Calls *(Menu 3.1)*

---

This option lets you view the last 20 unanswered calls.

The number and name, if available, are displayed, together with the date and time when the call was received. By pressing the **Options** soft key, you can:

- delete the call from the list
- edit the number, if available, and save it in the Phonebook
- make a call to the number

## Received Calls *(Menu 3.2)*

---

This option lets you view the last 20 phone calls answered.

The number and name, if available, are displayed, together with the date and time when the call was received. By pressing the **Options** soft key, you can:

- delete the call from the list

- edit the number, if available, and save it in the Phonebook
- make a call to the number

## Dialled Calls *(Menu 3.3)*

---

This option lets you view the last 20 numbers dialled.

The number and name are displayed, together with the date and time when the call was made. By pressing the **Options** soft key, you can:

- delete the number
- edit the number and save it in the Phonebook
- make a call to the number

## Delete All *(Menu 3.4)*

---

You can delete all of the numbers stored in each call record.

When a confirming message appears, press the **Yes** soft key to confirm.

## Call Time *(Menu 3.5)*

---

This option lets you view the timers for calls made and received.

**Note:** The actual time invoiced for calls by your service provider may vary, depending on network features, such as rounding-off for billing purposes.

The following timers are available:

**Last Call Time:** the length of the last call.

**Total Sent:** the total length of all calls made since the timer was last reset.

**Total Received:** the total length of all calls received since the timer was last reset.

**Reset Timers:** the option used to reset the call timers; you must first enter the phone password (see page 122) and then press the **OK** soft key.

### Call Cost *(Menu 3.6)*

This feature lets you view the cost of call. Depending on your SIM card, this menu option may not be shown.

The following options are available:

**Last Call Cost:** the cost of the last call made.

**Total Cost:** the total cost of all calls made since the cost counter was last reset. If the total cost exceeds the maximum cost set in the **Set Max Cost** option, you can no longer make any calls until you reset the counter.

**Max Cost:** the maximum cost set in the **Set Max Cost** option (see below).

**Reset Counters:** the option used to reset the cost counter; you must first enter your PIN2 (see page 124) and then press the **OK** soft key.

**Set Max Cost:** the option used to enter the maximum cost that you authorise for your calls.

**Price/Unit:** the option used to set the cost of one unit; this price per unit is applied when calculating the cost of your calls.

## Camera

Using the camera module built in your phone, you can take pictures of people or events while on the move. Additionally, you can send photos to other people in a picture message or as an e-mail attachment. The camera produces JPEG pictures.

### Take and Send *(Menu 4.1)*

This menu allows you to take a picture to send the photo as a picture message to other destinations.

**Note:** When you take a picture in direct sunlight or under too bright illumination, shading may occur on the picture.

### Taking a Picture to Send a Message

1. Accessing this menu turns on the camera at the top centre of the phone.

You can see the picture to be captured on the display.

2. Adjust the picture by rotating the camera module.



Use the **▲** and **▼** keys to adjust the brightness of the picture.

Use the **⏪** and **⏩** keys to adjust the size of the picture.

The **⏮** and **⏭** keys on the left side of the phone allow you to flip the picture up and down.

3. Press the **Take** soft key to take a picture.  
If you want to have the delay time of 10 seconds, press the **After 10s** soft key.
4. Press the **Save** soft key to save the photo.
5. Enter a name for your photo and press the **OK** soft key.  
For further details about entering characters, see page 42.
6. Follow the procedures on page 74 to send the photo as a picture message.

## **New Photo** *(Menu 4.2)*

---

In this menu, you can take a picture and save it.

Accessing this menu turns on the camera at the top centre of the phone.

Follow steps 2 to 5 in "Taking a Picture to Send a Message" on page 81.

## **My Photos** *(Menu 4.3)*

---

This menu allows you to review your photos.

When you access this menu, the latest photo is displayed. Press the **⏪** or **⏩** key to scroll through the photos.

Pressing the **Multi** soft key shows the photos as thumbnail images on one screen. In thumbnail view mode, use the navigation keys to scroll through the photos. To go back to normal view mode, press the **View** soft key.

Press the **Options** soft key to use the following options:

**Send:** allows you to send the photo as a picture message. For further details, see page 74.

**Wallpaper:** allows you to set the photo to be displayed on the idle screen as a background image.

**Delete:** deletes the photo.

**Delete All:** deletes all of the photos saved in your phone.

**Rename:** allows you to change the name of the photo.

# Sound Settings

You can use the Sound Settings feature to customise various settings, such as the:

- ring melody, volume and type
- sounds made when you press a key, make an error or receive a message

## Ring Tone *(Menu 5.1)*

---

This option allows you to select the required ring melody.

You can choose between many different melodies. Each time you select a melody, it is played for a few seconds. If you have downloaded any sounds from the Internet or EasyGPRS program or received any ring tone messages, you can view the list in this menu.

## Ring Volume *(Menu 5.2)*

---

This option allows you to adjust the ring volume to one of five levels.

Use the **←** and **→** keys or the **▲** and **▼** keys on the left side of the phone.

## Alert Type *(Menu 5.3)*

---

This option allows you to specify how you are to be informed of any incoming calls.

The following options are available:

**Light only:** only the backlight is switched on; the phone neither rings nor vibrates.

**Melody:** the phone rings using the ring melody selected via the **Ring Tone** menu option (**Menu 5.1**); see page 84.

**Vibration:** the phone vibrates but does not ring.

**Vibra+Melody:** the phone first vibrates three times and then starts ringing.

## Keypad Tone *(Menu 5.4)*

---

This option allows you to select the tone that the keypad generates when you press a key.

You can select an option from **OFF**, **Cool**, **Piano**, **Tone** and **Beep**.

To turn off the sound, select **OFF**.

## Message Tone *(Menu 5.5)*

---

This option allows you to select how the phone informs you that a new message has been received.

### SMS Tone

This option allows you to select how the phone informs you that a new SMS message has been received.

The following options are available:

**OFF:** the phone does not use the SMS tone.

**Light Only:** the service light on the folder cover flashes.

**Vibration:** the phone vibrates.

**Single Beep:** the phone beeps once.

**SMS Tone x:** the phone uses an SMS tone. You are provided with several SMS tones.

### SMS-CB Tone

This option allows you to select how the phone informs you that a new cell broadcast (CB) message has been received.

The following options are available:

**OFF:** the phone does not use the CB tone.

**Light Only:** the service light on the folder cover flashes.

**Vibration:** the phone vibrates.

**Single Beep:** the phone beeps once.

**SMS-CB Tone x:** the phone uses a CB tone. You are provided with several CB tones.

## Folder Tone *(Menu 5.6)*

---

This option allows you to turn on or off the sounds that the phone generates when you open or close the folder.

You can choose from **Off**, **Future** and **Crystal**. To turn off the sound, select **Off**.

## Power On/Off *(Menu 5.7)*

---

This option allows you to turn on or off the sounds that the phone generates when it is switched on and off.

You can choose from **Off**, **Classical** and **Cheerful**. To turn off the sound, select **Off**.

## Extra Tones *(Menu 5.8)*

---

You can customise various other tones used by the phone.

To turn a given tone	Press the
on	<b>ON</b> soft key. A check mark is displayed in front of the option.
off	<b>OFF</b> soft key. The check mark is no longer displayed.

The following options are available:

**Error Tone:** sets whether the phone informs you that you have made a mistake or not.

**Minute Minder:** sets whether the phone must beep every minute during an outgoing call to keep you informed of the length of your call.

**Connect Tone:** sets your phone to beep when the person you are calling answers the phone.


## Phone Settings

Many different features of your phone can be customised to suit your preferences. All of these features are accessed in the **Phone Settings** menu.

### Infrared Activate *(Menu 6.1)*

This feature allows you to send or receive data through the infrared port. To use an infrared connection, you must:

- configure and activate an IrDA-compliant infrared port on your PC
- activate the infrared feature on the phone; the IrDA icon (  ) appears on the top line of the display
- align the IrDA port on the phone with the IrDA port on your computer

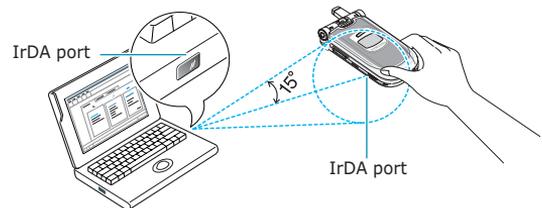

The connection is ready for data transmission.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activating the feature, it is automatically deactivated.

**Note:** For the best performance, use the optional data link cable. You can buy one from your local Samsung dealer.

## My Settings *(Menu 6.2)*

You can change the background image and the display style of the menu mode according to your preference.

### Wallpaper

This option allows you to change the background image (wallpaper) to be displayed in idle mode.

To change the background image:

1. Scroll through the list by pressing the **←** or **→** key.

You have various preset images available. If you set a photo as your wallpaper in the **My Photos** menu option (**Menu 4.3**), you can see it by the name of My Photo.icn.

2. Press the **Select** soft key when the desired image highlights.

The selected image is displayed.

3. After viewing the image, press the **Select** soft key to display it on the idle screen.  
The display asks you if you want to display text on the screen
4. Press the **Yes** soft key to display the current date and time on the wallpaper image. To display only the wallpaper, press the **No** soft key.

### Menu Style

This option allows you to select the menu display style. You can choose between **Film Style** and **Page Style**.

## Greeting Message *(Menu 6.3)*

This option allows you to set a greeting message to be displayed briefly when the phone is switched on. When you select this menu, the current message is displayed.

To	Press the
clear the existing message	 key and hold it until the message is cleared.
enter a new message	appropriate alphanumeric keys.
change the text input mode	 soft key.

For further details on how to enter characters, refer to page 42.

## Own Number *(Menu 6.4)*

This feature allows you to:

- Assign a name to your own phone number registered on your SIM card
- Edit the name and number

This function is a memory aid, which you can use to check your own phone number if you need to do.

Any changes made here do not in any way affect the actual subscriber number on your SIM card.

## Language *(Menu 6.5)*

---

You can select a display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used.

## Security *(Menu 6.6)*

---

The Security feature enables you to restrict the use of your phone to:

- the people of your choice
- the types of calls of your choice

Various codes and passwords are used to protect the features of your phone. They are described in the following sections (see also pages 122-124).

### PIN Check

When the PIN Check feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

**Note:** Before disabling the PIN Check feature, you must enter your PIN.

To change your PIN, refer to the **Change PIN** menu option (**Menu 6.6.2**).

The following options are available:

**Disable:** the phone connects directly to the network when you switch it on.

**Enable:** you must enter the PIN each time the phone is switched on.

### Change PIN

This feature allows you to change your current PIN to a new one, provided that the PIN Check feature is enabled. You must enter the current PIN before you can specify a new one.

Once you have entered a new PIN, you are asked to confirm it by entering it again.

### Phone Lock

When the Phone Lock feature is enabled, the phone is locked and you must enter the phone password each time the phone is switched on.

The password is factory set to "00000000." To change the phone password, refer to the **Change Password** menu option (**Menu 6.6.4**) below.

Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

**Disable:** you are not asked to enter the phone password when you switch the phone on.

**Enable:** you are required to enter the phone password when you switch the phone on.

### Change Password

The Change Password feature allows you to change your current phone password to a new one. You must enter the current password before you can specify a new one.

The password is preset to "00000000" at the factory. Once you have entered a new password, you are asked to confirm it by entering it again.

## SIM Lock

When the SIM Lock feature is enabled, your phone only works with the current SIM. You must enter the SIM lock code.

Once you have entered the lock code, you are asked to confirm it by entering it again.

To unlock the SIM, you must enter the SIM lock code.

## FDN Mode

The FDN (Fixed Dial Number) mode, if supported by your SIM card, allows you to restrict your outgoing calls to a limited set of phone numbers.

The following options are available:

**Disable:** you can phone any number.

**Enable:** you can only call phone numbers stored in the Phonebook. You must enter your PIN2.

**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

To change your PIN2, refer to the **Change PIN2** menu option (**Menu 6.6.7**) below.

## Change PIN2

The Change PIN2 feature allows you to change your current PIN2 to a new one. You must enter the current PIN2 before you can specify a new one.

Once you have entered a new PIN2, you are asked to confirm it by entering it again.

**Note:** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

## Display Settings *(Menu 6.7)*

---

### Brightness

This option allows you to adjust the contrast of the display and make it lighter or darker.

To adjust the display contrast:

1. Select the required display, **Main LCD** or **Front LCD**, and press the **Select** soft key.
2. Adjust the contrast using the **←** and **→** keys or the **▲** and **▼** keys on the left side of the phone.
3. When you are satisfied, press the **OK** soft key to save the selection.

### Back Light

You can select whether or not the phone uses the backlight. A marginal increase in standby/talk time can be achieved by turning the backlight off.

Select the length of time for which the backlight is on. The backlight comes on when you press a key or receive a call or message and lights up for the specified length of time. Then it dims and finally switches off after one minute.

### Auto Light

Using this feature, you can specify the time for which the backlight is to be used. This feature helps conserve your battery power.

The following options are available:

**Disable:** the backlight is used according to the setting in the **Back Light** menu option (**Menu 6.7.2**); see page 95.

**Enable:** the backlight is used only during the specified period of time. Set the time when the phone will turn on the light and turn it off, using the appropriate number keys.

## Service Light

This option allows you to select whether or not the service light on the folder cover is used or in which colour it flashes.

Select one from the seven colour settings available. When the phone is ready for use, the service light will flash in the appropriate colour.

If you do not want to use the service light, select **Off**.

## Graphic Logo

This option allows you to display your operator's logo instead of its name.

**On:** the operator logo stored in your phone is displayed in idle mode; if no logo has been stored, the operator name is displayed.

**Off:** the operator name is displayed in the idle mode.

## Extra Settings *(Menu 6.8)*

You can turn the automatic redialling or answering features on or off.

To turn a feature	Press the
on	<b>ON</b> soft key. A check mark is displayed in front of the option.
off	<b>OFF</b> soft key. The check mark is no longer displayed.

The following options are available:

**Auto Redial:** when this option is checked, the phone makes up to ten attempts to redial a phone number after an unsuccessful call.

**Note:** The interval between two call attempts varies.

**Active Folder:** when this option is checked, you can simply open the folder to answer a call.

When it is unchecked, you must open the folder and press a key, depending on the setting of the **Anykey Answer** option (see below).

**Anykey Answer:** when this option is checked, you can answer an incoming call by pressing any key, except the  key, the  key and the **Reject** soft key. To reject the call, press the  key or the **Reject** soft key.

When this option is unchecked, you can only press the  key or **Accept** soft key.

### Short Cut *(Menu 6.9)*

---

The navigation keys can be used as shortcut keys. When held down in idle mode, they allow you to access specific menu options directly.

To assign a shortcut to a key:

1. Select the key to be used as a shortcut key by pressing the **▲** or **▶** key, followed by the **Select** soft key.

- **Key up** (**▲**)
- **Key right** (**▶**)
- **Key left** (**◀**)

2. Select the menu option to be assigned to the key by pressing the **▲** or **▶** key.

**Note:** To deactivate a shortcut key, select the **None** option.

3. Press the **Select** soft key to save the selection.

### Reset Settings *(Menu 6.10)*

---

You can easily reset your phone to its default settings. To reset your phone:

1. Select the **Reset Settings** menu option.
2. Enter the phone password and press the **OK** soft key.

**Note:** The password is preset to "00000000." To change this password, refer to page 93.

# Organiser

The Organiser feature enables you to:

- view the calendar and organise your schedule
- define a list of things to do
- set the current date and time
- set the alarm so that the phone rings at a specific time (to remind you of an appointment for example)
- use the phone as a calculator for basic mathematical equations or currency exchange operations

## Calendar *(Menu 7.1)*

---

With the Calendar feature, you can:

- consult the calendar
- write memos to keep track of your schedule and trigger an alarm, if necessary

### Consulting the Calendar

When you select the **Calendar** menu option (**Menu 7.1**), the calendar displays. The following options are available when you press the **Options** soft key.

**Search all:** displays all memos set, regardless of the day and starting with the oldest. To scroll through the memos, press the **←** or **→** key.

**Delete all:** allows you to delete all memos. You are asked to confirm your action.

**Go to date:** allows you to jump to a specific date.

**Exit:** exits the Calendar feature and returns to the idle mode.

## Writing a Memo

To write or edit a memo on a specific date:

1. Select the required date in the calendar, using the navigation keys.

**Note:** To skip to the previous or next month, press the volume keys on the left side of the phone.

2. Press the **Select** soft key.

An empty memo screen is displayed to allow you to enter your memo.

3. Enter your memo and then press the **OK** soft key.

**Note:** For further details on how to enter characters, refer to page 42.

You are asked if you wish to set an alarm.

4. If you want the alarm to ring on the chosen day, press the **Yes** soft key. Otherwise, press the **No** soft key.
5. If you pressed the **Yes** soft key, set the time for the alarm and press the **OK** soft key.

The colour of the date is changed to green to indicate that a memo exists.

## Editing a Memo

If you select a day for which a memo already exists, you can press the **Edit** soft key to edit the memo displayed.

**Note:** For further details about how to enter characters, refer to page 42.

Once you have finished editing the memo, press the **OK** soft key. The following options are then available when you press the **Options** soft key.

**Alarm:** allows you to set the alarm to ring on the chosen day.

**Erase:** allows you to delete the memo.

**Copy to:** allows you to copy the memo to another date and/or time.

**Move to:** allows you to change the date and/or time of the memo.

## To Do List *(Menu 7.2)*

---

This feature allows you to:

- enter a list of tasks to be done
- assign a priority and deadline to each task
- sort the tasks by priority and status mark

## Creating the To Do List

1. Press the **New** soft key.
2. Enter the first task.

**Note:** You can enter up to 40 characters. For further details on how to enter characters, see page 42.

3. Press the **OK** soft key.
4. Select high, normal or low priority using the **—** or **—** key and press the **Select** soft key.
5. Enter your deadline.

If you do not want to set a deadline, press the **Skip** soft key.

6. Press the **OK** soft key.

## Editing the To Do List

If tasks are already defined in the To Do List when you select the **To Do List** menu option (**Menu 7.2**), the current contents are displayed with a status mark and priority (🕒 for high, 🕒 for normal and 🕒 for low).

The following options are available:

To...	Then...
view the details for a specific task	<ul style="list-style-type: none"> <li>highlight the task.</li> <li>press the <b>View</b> soft key.</li> </ul>
change the status of a specific task	<ul style="list-style-type: none"> <li>highlight the task.</li> <li>press the 🕒 key to mark the task as completed as of the current date and time.</li> </ul> <p>or</p> <ul style="list-style-type: none"> <li>highlight the task.</li> <li>press the <b>Options</b> soft key.</li> <li>select the <b>Mark</b> option.</li> <li>select the appropriate status (<b>Done</b> or <b>Undo</b>).</li> </ul>
create a new task	<ul style="list-style-type: none"> <li>press the <b>Options</b> soft key.</li> <li>select the <b>New</b> option.</li> <li>enter text, priority and deadline for the task.</li> </ul>
edit an existing task	<ul style="list-style-type: none"> <li>highlight the task.</li> <li>press the <b>Options</b> soft key.</li> <li>select the <b>Edit</b> option.</li> <li>change the text, priority and deadline for the task.</li> </ul>

To...	Then...
sort the existing tasks by priority or status	<ul style="list-style-type: none"> <li>press the <b>Options</b> soft key.</li> <li>select the <b>Sort</b> option.</li> <li>select the sort criterion (<b>High</b>, <b>Low</b>, <b>Done</b> or <b>Undo</b>).</li> </ul>
copy a task	<ul style="list-style-type: none"> <li>highlight the task.</li> <li>press the <b>Options</b> soft key.</li> <li>select the <b>Copy</b> option.</li> <li>change the text, priority and deadline for the task as required.</li> </ul>
copy a task to the calendar	<ul style="list-style-type: none"> <li>highlight the task.</li> <li>press the <b>Options</b> soft key.</li> <li>select the <b>Copy to calendar</b> option.</li> <li>change the text and deadline for the task and set the alarm as required.</li> </ul>
delete a task	<ul style="list-style-type: none"> <li>highlight the task.</li> <li>press the <b>Options</b> soft key.</li> <li>select the <b>Delete</b> option.</li> </ul>
delete all tasks	<ul style="list-style-type: none"> <li>press the <b>Options</b> soft key.</li> <li>select the <b>Delete all</b> option.</li> <li>confirm the deletion by pressing <b>OK</b>.</li> </ul>
exit the To Do list	<ul style="list-style-type: none"> <li>press the <b>Options</b> soft key.</li> <li>select the <b>Exit</b> option.</li> </ul>

## Time & Date *(Menu 7.3)*

---

This option allows you to change the current time and date displayed. You can also check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world.

The following options are available:

**Set Time:** allows you to enter the current time. You can choose the time format via the **Time Format** menu option (**Menu 7.3.4**).

**Note:** Before setting the time, you must specify your time zone, in the **World Time** menu option (**Menu 7.3.3**).

**Set Date:** allows you to enter the day, month and year.

**World Time:** allows you to check the current time for Greenwich Mean Time (GMT) and 21 major cities around the world, using the **\** and **/** keys.

The screen shows the:

- city name
- current date and time
- time difference between the selected city and your city if you have set the local time (see below for further details)

To select your time zone:

1. Select the city corresponding to your time zone by pressing the **\** or **/** key one or more times. The local date and time display.
2. Press the **Set** soft key.

**Time Format:** allows you to change the time format to **24 Hours** or **12 Hours**.

## Alarm *(Menu 7.4)*

---

This feature allows you to:

- set the alarm to ring at a specific time
- set the phone to switch on automatically and ring the alarm even if the phone is switched off (**Autopower** menu option is set to **Enable**)

The following options are available:

**Once Alarm:** the alarm rings only once and is then deactivated.

**Daily Alarm:** the alarm rings every day at the same time.

**Morning Call:** the alarm rings to wake you up in the morning.

To set the alarm:

1. Choose the type of alarm to be set.
2. Enter the required time and day of the week, if applicable.
3. Press the **OK** soft key.
4. If you select **Morning Call** in Step 1, select the repeat option; **Monday to friday** or **Monday to Saturday**.

**Remove Alarm:** deactivates all alarm settings.

**Autopower:** if this option is set to **Enable**, the alarm will ring at the specified time, even when the phone is switched off.

If the menu option is set to **Disable** and the phone is switched off at the specified time, the alarm will not ring.

To stop the alarm when it rings, open the folder and press the **Exit** soft key.

When setting or viewing an alarm, the following options are available when you press the **Options** soft key:

**Remove Alarm:** deactivates the current alarm.

**Alarm Sound Set:** allows you to select the alarm melody.

## Calculator *(Menu 7.5)*

With this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

### Using the Calculator

1. Enter the first number using the numeric keys.
2. Press the right soft key until the required arithmetic symbol appears: **+** (add), **-** (subtract), **\*** (multiply), **/** (divide).
3. Enter the second number.
4. Repeat Steps 1 to 3 as many times as required.

#### Notes:

- To erase any mistakes or clear the display, press the  key.
  - To include a decimal point or a bracket, press the left soft key until the required symbol is displayed.
5. To calculate the result, press the  key.

## Currency Exchange *(Menu 7.6)*

Using this menu option, you can make currency conversions.

1. Enter the current exchange rate of your source currency and press the **OK** soft key.

You can insert a decimal point by pressing the  key.

2. Enter the amount for which you wish to conduct the currency conversion and press the **OK** soft key.

The exchange rate and local currency amount you entered and the equivalent value in the foreign currency display.

3. Press the **Exit** soft key to exit the currency convertor.

# Network Services

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you wish.

## Call Diverting *(Menu 8.1)*

This network service enables incoming calls to be rerouted to the number that you specify.

Example: You may wish to divert your business calls to a colleague while you are on holiday.

Call diverting can be set up in the following ways:

**Divert Always**: all calls are diverted.

**Busy**: calls are diverted if you are already on another call.

**No Reply**: calls are diverted if you do not answer the phone.

**Unreachable**: calls are diverted if you are not in an area covered by your service provider.

**Cancel All**: all call diverting options are cancelled.

You can specify individual diverting options for each of the following call types:

- Voice calls only
- Data calls only

Example: You can divert voice calls to your colleague if you are already using the phone.

To set your call diverting options:

1. Select the type of call diverting required by pressing the **←** or **→** key until the appropriate option highlights, and then press the **Select** soft key.
2. Select the type of calls to be diverted by pressing the **←** or **→** key until the appropriate option highlights and then press the **Select** soft key.

The current status displays. If the option has already been set, the number to which the calls are diverted displays.

3. <b>To</b>	<b>Press the</b>
activate call diverting	<b>Activate</b> soft key. Go to Step 4.
change the call number	<b>Change</b> soft key. Go to Step 4.
deactivate call diverting	<b>Remove</b> soft key.

4. Enter the number to which the calls are to be diverted and press the **OK** soft key. To enter an international code, press the **0+** key until the **+** sign displays.
5. If you have selected the **No Reply** option, set the length of time for which your phone rings before the call is diverted and press the **Select** soft key.

The phone sends your settings to the network and the network's acknowledgement displays.

You can deactivate all call diverting settings by selecting the **Cancel All** option.

## Call Barring *(Menu 8.2)*

---

The call barring network service allows you to restrict your calls.

Call barring can be set up in the following ways:

**All Outgoing:** calls cannot be made.

**International:** international calls cannot be made.

**International Except to Home:** when abroad, calls can be made only to numbers within the current country and to your home country, which is the country where your home network provider is located.

**All Incoming:** calls cannot be received.

**Incoming While Abroad:** calls cannot be received when you are using your phone outside of your home service area.

**Cancel All:** all call barring settings are deactivated; calls can be made and received normally.

You can specify individual barring options for each of the following call types:

- Voice calls only
- Data calls only

To set your call barring options:

1. Select the type of call barring required by pressing the **⏏** or **⏏** key until the appropriate option highlights and then press the **Select** soft key.
2. Select the type of calls to be barred by pressing the **⏏** or **⏏** key until the appropriate option highlights and then press the **Select** soft key.

3. Press the **Activate** soft key to confirm your settings.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement displays.

To deactivate specific call barring settings:

1. Select the call barring option to be deactivated.
2. Select the type of call to which this option applies.
3. Press the **Deactivate** soft key.
4. Enter your call barring password supplied by your service provider.

The phone sends your settings to the network and the network's acknowledgement displays

You can also deactivate all call barring settings by selecting the **Cancel All** option.

**Change Barring Password:** you can set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one.

Once you have entered a new password, you are asked to confirm it by entering it again.

## Call Waiting *(Menu 8.3)*

---

This network service enables you to be informed when someone is trying to reach you during another call.

You can specify individual call waiting options for each of the following call types:

- Voice calls only
- Data calls only

To set your call waiting options:

1. Select the type of calls to which the call waiting option is to be applied by pressing the **←** or **→** key until the appropriate option highlights and then press the **Select** soft key.

The screen informs you whether call waiting is activated or deactivated.

2. You can activate or deactivate the call waiting feature as necessary by using the **Activate** or **Deactivate** soft key respectively.

To return to the previous screen, press the **Exit** soft key.

You can also deactivate all call waiting settings by selecting the **Cancel All** option.

## Network Selection *(Menu 8.4)*

---

The Network Selection feature enables you to automatically or manually select the network used when roaming outside of your home area.

**Note:** You can select a network other than your home network only if it has a valid roaming agreement with your home network.

To indicate automatically or manually select the network when roaming:

1. When **Network Selection** displays, press the **Select** soft key.
2. Press the **←** or **→** key until the appropriate option highlights and then press the **OK** soft key.

If you select **Automatic**, you are connected to the first available network when roaming.

If you select **Manual**, the phone scans for the available networks. Go to Step 3.

3. Press the **←** or **→** key until the preferred network highlights and then press the **OK** soft key.

You are connected to that network.

## Caller ID *(Menu 8.5)*

You can prevent your phone number from being displayed on the phone of the person being called.

**Note:** Some networks do not allow the user to change this setting.

The following options are available:

**Default:** the default setting provided by the network is used.

**Hide Number:** your number is not displayed on the other person's phone.

**Send Number:** your number is sent each time you make a call.

## Closed User Group (CUG) *(Menu 8.6)*

This network service allows incoming and outgoing calls to be restricted to a selected user group. You may be a member of up to ten user groups. For details on how to create, activate and use a closed user group, contact your service provider.

**Example:** A company lends SIM cards to its employees and wants to restrict outgoing calls to members of the same team.

### Activating a Closed User Group

If you select the **Closed User Group** menu, you can enter the CUG function. You can now access the following options after pressing the **Select** soft key.

**Index List:** lets you list, add or delete CUG index numbers. The list of current CUG indexes appears.

Add a new CUG index as advised by your service provider or delete a selected group.

To	Press the
scroll through the existing CUG indexes	<b>←</b> or <b>→</b> key.
add a new CUG index	<b>Options</b> soft key, select the <b>Add</b> option and enter the index.
delete a CUG index	<b>Options</b> soft key and select the <b>Delete</b> option.
activate a CUG index	<b>Options</b> soft key and select the <b>Activate</b> option.

**Outside Access:** lets you enable or disable calls to numbers other than those nominated for the Closed User Group. This feature depends on the nature of your CUG subscription. Please check with your service provider.

**Default Group:** you may set a default CUG with your service provider. If you have done so, you can enable the **Default Group** option on your phone. When making a call, you are given the option of using your default CUG, instead of selecting one from the list.

**Deactivate:** deactivates the CUG function. This menu appears only when the default group is enabled or a CUG index is selected.

## Band Selection *(Menu 8.7)*

---

For the phone to make and receive phone calls, it must register with one of the available networks. Your phone can handle any of the following types of network:

- GSM 900
- GSM 1800
- Combined GSM 900/1800
- GSM 1900

The country where you purchased your phone determines the default band that it uses. When you travel abroad, you must remember to change to an appropriate band.

1. When **Band Selection** displays, press the **Select** soft key.
2. Press the **←** or **→** key until the appropriate option (**GSM 900/1800** or **GSM 1900**) highlights and press the **OK** soft key.

When you select a new band, your phone displays a confirmation message and then automatically searches for all of the available networks. Your phone registers with a preferred network within the selected band.

## Funbox

The **Funbox** menu contains several fun options.

### Games *(Menu 9.1)*

---

You can enjoy three games with your phone.

Scroll to the required game, using the **←** and **→** keys and press the **Select** soft key. For further details on the game, refer to the on-screen help.

### WAP Browser *(Menu 9.2)*

---

Your phone is equipped with a WAP Browser to allow you to access and navigate the Wireless Web.

For further details on the **WAP Browser** menu, refer to the WAP Browser User's Manual supplied with your phone.

### Downloads *(Menu 9.3)*

---

#### Sounds

In this menu, you can view the list of sounds downloaded from the server. You can set the downloaded sounds as the current ring tone, but cannot send the sounds to other phones.

When the memory is full, a warning message is displayed and the phone rejects additional sounds until you erase obsolete ones.

## Pictures

In this menu, you can view the list of pictures downloaded from the server. You can set the downloaded pictures as the current background image, but cannot send them to other phones.

When the memory is full, a warning message is displayed and the phone rejects additional pictures until you erase obsolete ones.

# Solving Problems

Before contacting the after-sales service, perform the following simple checks. They may save you the time and expense of an unnecessary service call.

## When you switch your phone on, the following messages may appear

### Insert SIM Card

- Check that the SIM card is correctly installed.

### Phone Locked Enter Password

- The automatic locking function has been enabled. You must enter the phone's password before you can use the phone.

### Enter PIN

- You are using your phone for the first time. You must enter the Personal Identification Number supplied with the SIM card.
- The PIN Check feature is enabled. Every time the phone is switched on, the PIN has to be entered. To disable this feature, use the **PIN Check** menu option (**Menu 6.6.1**).

### Enter PUK

- The PIN code was entered incorrectly three times in succession and the phone is now blocked. Enter the PUK supplied by your network operator.

### **“No service,” “Network failure” or “Not done” is displayed**

- The network connection was lost. You may be in a weak signal area (in a tunnel or surrounded by buildings). Move and try again.
- You are trying to access an option for which you have not taken out a subscription with your service provider. Contact the service provider for further details.

### **You have entered a number but it was not dialed**

- Have you pressed the  key?
- Are you accessing the right cellular network?
- You may have set an outgoing call barring option.

### **Your correspondent cannot reach you**

- Is your phone switched on (the  key pressed for more than one second)?
- Are you accessing the right cellular network?
- You may have set an incoming call barring option.

### **Your correspondent cannot hear you speaking**

- Have you switched off the microphone?
- Are you holding the phone close enough to your mouth? The microphone is located at the bottom of the phone.

### **The phone starts beeping and “\*\*Warning\*\* Low Battery” flashes on the display**

- The battery is insufficiently charged. Replace the battery and recharge it.

### **The audio quality of the call is poor**

- Check the signal strength indicator on the display (); the number of bars indicates the signal strength from strong () to weak ().
- Try moving the phone slightly or moving closer to a window if you are in a building.

### **No number is dialed when you recall a Phonebook entry**

- Check that the number has been stored correctly, by using the Phonebook Search feature.
- Re-store the number, if necessary.

If the above guidelines do not help you to solve the problem, take a note of:

- the model and serial numbers of your phone
- your warranty details
- a clear description of the problem

Then contact your local dealer or Samsung after-sales service.

## Access Codes

There are several access codes that are used by your phone and its SIM card. These codes help you protect the phone against unauthorized use.

When requested for any of the codes explained below, key in the appropriate code (displayed as asterisks) and press the **OK** soft key. If you make a mistake, press the  key until the incorrect digit is cleared and then continue entering the correct code.

The access codes, except for the PUK and PUK2 codes can be changed using **Security** menu options (**Menu 6.6**). See page 92 for further details.

**Important!** Avoid using access codes resembling emergency numbers, such as 112, so that you do not dial an emergency number accidentally.

### Phone Password

The Phone Lock feature uses the phone password to protect your phone against unauthorized use. The phone password is supplied with the phone and is preset to "00000000" at the factory.

To	Refer to
activate/deactivate the Phone Lock feature	page 93 <b>(Menu 6.6.3)</b> .
change the phone password	page 93 <b>(Menu 6.6.4)</b> .

### PIN

The **P**ersonal **I**dentification **N**umber or PIN (4 to 8 digits) protects your SIM card against unauthorized use. It is usually supplied with the SIM card.

If you enter an incorrect PIN three times in succession, the code is disabled and cannot be used until you re-enable it by entering the PUK (see below).

To	Refer to
activate/deactivate the PIN Check feature	page 92 <b>(Menu 6.6.1)</b> .
change the PIN	page 93 <b>(Menu 6.6.2)</b> .

### PUK

The 8-digit PUK (**P**IN **U**nblocking **K**ey) is required to change a disabled PIN. The PUK may be supplied with the SIM card. If not, or you have lost it, contact your service provider.

To re-enable your PIN:

1. Key in the PUK and press the **OK** soft key.
2. Enter a new PIN of your choice and press the **OK** soft key.
3. When the **Confirm New PIN** message is displayed, key in the same code again and press the **OK** soft key.

If you enter an incorrect PUK ten times in succession, the SIM card becomes invalid. Contact your service provider for a new card.

## PIN2

---

The PIN2 (4 to 8 digits), supplied with some SIM cards, is required to access specific functions, such as setting the maximum cost of a call. These functions are available if supported by your SIM card.

If you enter an incorrect PIN2 three times in succession, the code is disabled and you cannot access the functions until you re-enable it by entering the PUK2.

To change the PIN2, refer to page 94 (**Menu 6.6.7**).

## PUK2

---

The 8-digit PUK2 (**PIN Unlocking Key 2**), supplied with some SIM cards, is required to change a disabled PIN2. If you lose the code, contact your service provider.

To re-enable your PIN2:

1. Key in the PUK2 and press the **OK** soft key.
2. Enter a new PIN2 of your choice and press the **OK** soft key.
3. When the **Confirm PIN2** message is displayed, key in the same code again and press the **OK** soft key.

If you enter an incorrect PUK2 ten times in succession, you will not be able to access the functions requiring the PIN2. Contact your service provider for a new card.

# Health and Safety Information

## Exposure to Radio-Frequency Energy (SAR Information)

---

### Meet EU requirements concerning exposure to radio waves

Your mobile phone is a radio transmitter and receiver. It is designed and manufactured, so as not to exceed the limits for exposure to radio-frequency (RF) energy, as recommended by the EU Council. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organisations through the periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for mobile phones employs a unit of measurement known as SAR (Specific Absorption Rate). The SAR limit recommended by the EU Council is 2.0W/kg.\*

---

\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/kg) averaged over ten grams of body tissue. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The SAR values may vary depending on national reporting requirements and the network band.

SAR tests are conducted using standard operating positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower the power output of the phone.

### **Meet FCC requirements concerning exposure to radio waves**

This phone is also designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on the safety standards that were developed by independent scientific organizations through periodic and through evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless phones employs a unit of measurement known as Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg\*.

SAR tests are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands.

---

\* In the U.S. and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the phone.

Before a new model phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID printed in the label on the phone.

FCC certification information for this model phone is attached separation paper.

For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with a Samsung-supplied or approved accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum from the body.

The minimum distance for this model phone is written in the FCC certification information from the body.

None compliance with the above conditions may violate FCC RF exposure guidelines.

For more Information concerning exposure to radio frequency signals, see the following websites:

Federal Communications Commission (FCC)

<http://www.fcc.gov/rfsafety>

Cellular Telecommunications Industry Association (CTIA): <http://www.wow-com.com>

U.S. Food and Drug Administration (FDA)

<http://www.fda.gov/cdrh/consumer>

World Health Organization (WHO)

<http://www.who.int/peh-emf/en>

## Precautions When Using Batteries

---

- Never use any charger or battery that is damaged in any way.
- Use the battery only for its intended purpose.
- If you use the phone near the network's base station, it uses less power; talk and standby time are greatly affected by the signal strength on the cellular network and the parameters set by the network operator.
- Battery charging time depends on the remaining battery charge and the type of battery and charger used. The battery can be charged and discharged hundreds of times, but it will gradually wear out. When the operation time (talk time and standby time) is noticeably shorter than normal, it is time to buy a new battery.
- If left unused, a fully charged battery will discharge itself over time.
- Use only Samsung-approved batteries and recharge your battery only with Samsung-approved chargers. When a charger is not in use, disconnect it from the power source. Do not leave the battery connected to a charger for more than a week, since overcharging may shorten its life.
- Extreme temperatures will affect the charging capacity of your battery: it may require cooling or warming first.
- Do not leave the battery in hot or cold places, such as in a car in summer or winter conditions, as you will reduce the capacity and lifetime of the battery. Always try to keep the battery at room temperature. A phone with a hot or cold battery may temporarily not work, even when the battery is fully charged. Li-ion batteries are particularly affected by temperatures below 0 °C (32 °F).

- Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object (coin, clip or pen) causes a direct connection between the + and - terminals of the battery (metal strips on the battery), for example when you carry a spare battery in a pocket or bag. Short-circuiting the terminals may damage the battery or the object causing the short-circuiting.
- Dispose of used batteries in accordance with local regulations. Always recycle. Do not dispose of batteries in a fire.

## Road Safety

---

Your wireless phone gives you the powerful ability to communicate by voice, almost anywhere, anytime. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.

When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense and remember the following tips.

1. Get to know your wireless phone and its features, such as speed dial and redial. If available, these features help you to place your call without taking your attention off the road.
2. When available, use a hands-free device. If possible, add an extra layer of convenience and safety to your wireless phone with one of the many hands-free accessories available today.
3. Position your wireless phone within easy reach. Be able to access your wireless phone without removing your eyes from the road. If you get an incoming call at an inconvenient time, let your voice mail answer it for you.

4. Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions. Rain, sleet, snow, ice and even heavy traffic can be hazardous.
5. Do not take notes or look up phone numbers while driving. Jotting down a To Do list or flipping through your phonebook takes your attention away from your primary responsibility, driving safely.
6. Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
7. Do not engage in stressful or emotional conversations that may be distracting. Make the people with whom you are talking aware that you are driving and suspend conversations that have the potential to divert your attention from the road.
8. Use your wireless phone to call for help. Dial the emergency number in the case of fire, traffic accident or medical emergencies. Remember, it is a free call on your wireless phone!
9. Use your wireless phone to help others in emergencies. If you see a car accident, crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.

10. Call roadside assistance or a special non-emergency wireless assistance number when necessary. If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or any other special non-emergency wireless number.

## Operating Environment

---

Remember to follow any special regulations in force in any area and always switch off your phone whenever it is forbidden to use it, or when it may cause interference or danger.

When connecting the phone or any accessory to another device, read its user's guide for detailed safety instructions. Do not connect incompatible products.

As with other mobile radio transmitting equipment, users are advised that for the satisfactory operation of the equipment and for the safety of personnel, it is recommended that the equipment should only be used in the normal operating position (held to your ear with the antenna pointing over your shoulder).

## Electronic Devices

---

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Consult the manufacturer to discuss alternatives.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum distance of 15 cm (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research and recommendations of Wireless Technology Research.

Persons with pacemakers:

- Should always keep the phone more than 15 cm (6 inches) from their pacemaker when the phone is switched on
- Should not carry the phone in a breast pocket
- Should use the ear opposite the pacemaker to minimise potential interference

If you have any reason to suspect that interference is taking place, switch off your phone immediately.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may wish to consult your hearing aid manufacturer to discuss alternatives.

### **Other Medical Devices**

If you use any other personal medical devices, consult the manufacturer of your device to determine if it is adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Switch off your phone in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

### **Vehicles**

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle.

You should also consult the manufacturer of any equipment that has been added to your vehicle.

### **Posted Facilities**

Switch off your phone in any facility where posted notices require you to do so.

### **Potentially Explosive Atmospheres**

Switch off your phone when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Users are advised to switch off the phone while at a refuelling point (service station). Users are reminded of the need to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

## Emergency Calls

---

This phone, like any wireless phone, operates using radio signals, wireless and landline networks as well as user-programmed functions, which cannot guarantee connection in all conditions. Therefore, you should never rely solely on any wireless phone for essential communications (medical emergencies, for example).

Remember, to make or receive any calls the phone must be switched on and in a service area with adequate signal strength. Emergency calls may not be possible on all wireless phone networks or when certain network services and/or phone features are in use. Check with local service providers.

To make an emergency call, proceed as follows.

1. If the phone is not on, switch it on.
2. Key in the emergency number for your present location (for example, 112 or any other official emergency number). Emergency numbers vary by location.
3. Press <SEND>.

If certain features are in use (call barring, for example), you may first need to deactivate those features before you can make an emergency call. Consult this document and your local cellular service provider.

When making an emergency call, remember to give all the necessary information as accurately as possible. Remember that your phone may be the only means of communication at the scene of an accident; do not cut off the call until given permission to do so.

## Other Important Safety Information

---

- Only qualified personnel should service the phone or install the phone in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty applicable to the device.
- Check regularly that all wireless phone equipment in your vehicle is mounted and operating properly.
- Do not store or carry flammable liquids, gases or explosive materials in the same compartment as the phone, its parts or accessories.
- For vehicles equipped with an air bag, remember that an air bag inflates with great force. Do not place objects, including both installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If wireless equipment is improperly installed and the air bag inflates, serious injury could result.
- Switch off your phone before boarding an aircraft. The use of wireless phones in aircraft may be dangerous to the operation of the aircraft, and is illegal.
- Failure to observe these instructions may lead to the suspension or denial of telephone services to the offender, or legal action, or both.

## Care and Maintenance

---

Your phone is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- Keep the phone and all its parts and accessories out of the reach of small children's.
  - Keep the phone dry. Precipitation, humidity and liquids contain minerals that will corrode electronic circuits.
  - Do not touch the phone with a wet hand while it is charging. Doing so may cause an electric shock to you or damage to the phone.
  - Do not use or store the phone in dusty, dirty areas, as its moving parts may be damaged.
  - Do not store the phone in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
  - Do not store the phone in cold areas. When the phone warms up to its normal operating temperature, moisture can form inside the phone, which may damage the phone's electronic circuit boards.
  - Do not drop, knock or shake the phone. Rough handling can break internal circuit boards.
  - Do not use harsh chemicals, cleaning solvents or strong detergents to clean the phone. Wipe it with a soft cloth slightly dampened in a mild soap-and-water solution.
- Do not paint it. Paint can clog the device's moving parts and prevent proper operation.
  - Do not put the phone in or on heating devices, such as a microwave oven, a stove or a radiator. The phone may explode when overheated.
  - Use only the supplied or an approved replacement antenna. Unauthorised antennas or modified accessories may damage the phone and violate regulations governing radio devices.
  - If the phone, battery, charger or any accessory is not working properly, take it to your nearest qualified service facility. The personnel there will assist you, and if necessary, arrange for service.

# Glossary

To help you understand the main technical terms and abbreviations used in this booklet and take full advantage of the features on your mobile phone, here are a few definitions.

## **Active Folder**

Ability to answer a call simply by opening the phone.

## **Call Forwarding**

Ability to reroute calls to another number.

## **Call Holding**

Ability to put one call on standby while answering or making another call; you can then switch between the two calls, as required.

## **Call Waiting**

Ability to inform users that they have an incoming call when engaged on another call.

## **GSM (Global System for Mobile Communication)**

International standard for cellular communication, guaranteeing compatibility between the various network operators. GSM covers most European countries and many other parts of the world.

## **Line Identification Services (Caller ID)**

Services allowing subscribers to view or block the telephone numbers of callers.

## **MMS (Multimedia Message Service)**

A message service for the mobile environment, standardized by the WAP Forum and the 3rd Generation Partnership Program (3GPP). For phone users, MMS is similar to Short Message Service (SMS)-it provides automatic, immediate delivery of user-created content from phone to phone. The message addressing used is primarily phone numbers, thus the traffic goes from phone to phone. MMS also provides support for e-mail addressing, so that messages can also be sent by e-mail. In addition to the text content of SMS, MMS messages can contain still images, voice or audio clips, and later also video clips and presentation information.

## **Multiparty Calling**

Ability to establish a conference call involving up to five additional parties.

## **Phone Password**

Security code used to unlock the phone when you have selected the option to lock it automatically each time it switches on.

## **PIN (Personal Identification Number)**

Security code that protects the phone/SIM against unauthorized use. The PIN is supplied by the service provider with the SIM card. It may be a four to eight-digit number and can be changed, as required.

**PUK (PIN Unblocking Key)**

Security code used to unlock the phone when an incorrect PIN has been entered three times in succession. The eight-digit number is supplied by the service provider with the SIM card.

**Roaming**

Use of your phone when you are outside your home area (when traveling for example).

**SDN (Service Dialling Numbers)**

Telephone numbers supplied by your network provider and giving access to special services, such as voice mail, directory inquiries, customer support and emergency services.

**SIM (Subscriber Identification Module)**

Card containing a chip with all the information required to operate the phone (network and memory information, as well as the subscriber's personal data). The SIM card fits into a small slot on the back of the phone and is protected by the battery.

**SMS (Short Message Service)**

Network service sending and receiving messages to and from another subscriber without having to speak to the correspondent. The message created or received can be displayed, received, edited or sent.

**Soft Keys**

Two keys marked  and  on the phone, the purpose of which:

- varies according to the function that you are currently using
- is indicated on the bottom line of the display just above the corresponding key

**Tri Band**

Ability to handle any of the following types of network; GSM 900, GSM 1800, combined GSM 900/1800 and GSM 1900 MHz bands, for greater call success and wider roaming.

Your phone automatically searches for the last network used. If, for any reason, this network is unavailable, your phone will attempt to register with a different network.

**Voice Mail**

Computerized answering service that automatically answers your calls when you are not available, plays a greeting (optionally in your own voice) and records a message.

# Index

## A

Access codes • 122  
 Accessories • 9  
 Active folder • 97  
 Alarm, set (7.4) • 105  
 Alert type (5.3) • 85  
 Answering  
   a call • 25  
   a second call • 51  
 Anykey answer • 97  
 Auto light • 95  
 Auto power, alarm • 105  
 Auto redial • 97

## B

Background image • 90  
 Backlight • 15, 95  
 Barring  
   password • 111  
 Battery  
   charging • 19  
   low battery indicator • 20  
 Broadcast (1.9) • 69

## C

Calculator (7.5) • 106  
 Calendar (7.1) • 99  
 Caller ID (6.5) 114  
 Calls  
   answering  
     a call • 25  
     a second call • 51  
   cost (3.6) • 80  
   dialled (3.3) • 79  
   diverting (6.1) • 108  
   emergency • 136  
   ending • 23  
   holding • 48  
   international • 22  
   making • 22  
   missed • 26, 78  
   multiparty • 52  
   received (3.2) • 78

records (3) • 78  
 redialling automatically  
   97  
   time (3.5) • 79  
   via phonebook • 37  
   waiting 112  
   waiting (8.2) • 51  
 Camera (4) • 81  
 Card  
   installing the SIM • 17  
 Care • 138  
 Changing  
   barring password • 111  
   password (6.6.4) • 93  
   PIN (6.6.2) • 93  
   PIN2 (6.6.7) • 94  
 Characters  
   changing mode • 43  
   entering • 42  
 Charging battery • 19  
 Closed User Group (6.6) • 114  
 Conference call • 52  
 Connect tone • 88  
 Contrast (6.7.1) • 95  
 Copying  
   memos • 101  
   phonebook number • 36  
   task • 103  
 Correcting numbers • 22  
 Cost of calls (3.6) • 80  
 CUG • 114  
 Currency Exchange (7.6) • 107

## D

Date setting (7.3.2) • 104  
 Deleting  
   memos • 101  
   messages • 61, 62  
   missed calls • 27, 78  
   phonebook number • 36  
   tasks • 103  
 Display  
   contrast • 95  
   icons • 14

layout • 13  
 setting language • 92  
 Diverting calls (6.1) • 108  
 Downloads (9.3) • 117

## E

Earpiece volume • 24  
 Editing  
   memos • 100  
   missed calls • 26, 78  
   phonebook number • 36  
   tasks • 102  
   to do list • 102  
 Emergency calls • 134  
 Error tone • 88

## F

FDN mode (6.6.5) • 94  
 Fixed Dial Number mode • 94  
 Funbox (9) • 117  
 Functions, select • 29

## G

Game (9.1) • 117  
 Greeting message (6.3) • 91  
 Groups  
   user • 114

## H

Holding calls • 48

## I

Icons, description • 14  
 Identifying a caller • 25  
 Incoming calls (3.2) • 78  
 Incoming messages  
   picture (2.1) • 71  
   text (1.1) • 60  
 Infrared activate (6.1) • 89  
 IrDA port • 89

## K

Key tones  
   adjusting volume • 24  
   muting • 50  
   selecting (5.4) • 85  
   sending • 50  
 Keys  
   description • 11  
   location • 10  
   shortcut • 98

## L

Language (6.5) • 92  
 Last number, redial • 23  
 Length of calls • 79, 88  
 Letters  
   changing mode • 43  
   entering • 42  
 Light  
   backlight • 15, 95  
   service • 16, 96  
 Locking phone (6.6.3) • 93  
 Low battery indicator • 20  
 Lower-case characters  
   entering • 45

## M

Maintenance • 138  
 Memory status  
   message (1.7) • 68  
   phonebook • 41  
 Memos  
   copying • 101  
   deleting • 101  
   editing • 100  
   writing • 100  
 Menus  
   accessing by scroll • 54  
   accessing by shortcuts • 55  
   list • 55  
 Message tone (5.5) • 86  
 Microphone, mute • 49

Minute minder • 88  
 Missed calls • 26, 78  
 Morning Call • 105  
 Multimedia message, view • 71  
 Multiparty calls  
   dropping • 53  
   making • 52  
   private conversation • 52  
 Muting  
   key tones • 50  
   microphone • 49  
 My objects (1.6) • 67

## N

Names  
   entering • 42  
   searching/dialling • 37  
   storing • 33  
 Network selection (6.4) • 113  
 Network services (6) • 108  
 Numbers  
   copying phonebook • 36  
   correcting • 22  
   erasing • 36  
   fixed dial • 94  
   own • 91  
   pasting phonebook • 35  
   searching/dialling • 37  
   storing • 33

## O

Options, select • 29  
 Organiser (7) • 99  
 Outgoing calls (3.3) • 79  
 Outgoing messages  
   picture (2.2) • 73  
   text (1.2) • 61  
 Own number (6.4) • 91

## P

Password  
   barring  
     changing • 111

Password, phone  
   changing • 93  
   code • 122  
 Phone  
   lock (6.6.3) • 93  
   password • 122  
   settings (6) • 89  
 Phonebook  
   copying • 36  
   editing • 36  
   erasing • 36  
   options • 35  
   pasting • 35  
   searching/dialling • 37  
   speed-dialling • 40  
   storing numbers/names • 33

Photos, take • 81  
 Picture message  
   inbox (2.1) • 71  
   outbox (2.2) • 73  
   setup (2.5) • 76  
   write new (2.3) • 74

## PIN

changing • 93  
 checking • 92  
 code • 123

## PIN2

changing • 94  
 code • 124

## Problem solving • 119

PUK • 123  
 PUK2 • 124

## R

Read messages  
   multimedia (2.1) • 71  
   text (1.1) • 60  
 Redialling  
   automatically • 97  
   last number • 23  
 Reset setting (6.10) • 98  
 Ring  
   tone (5.1) • 84  
   type (5.3) • 85  
   volume (5.2) • 84  
 Roaming • 113

## S

Safety  
   information • 125  
   precautions • 7  
 Schedule • 99  
 Searching in phonebook • 37  
 Security (6.6) • 92  
 Selecting functions/options • 29  
 Sending  
   key tones • 50  
   messages • 63  
 Service light • 16, 96  
 Setting  
   alarm (7.4) • 105  
   date (7.3.2) • 104  
   language (6.5) • 92  
   time (7.3.1) • 104  
 Shortcut (6.9) • 98  
 SIM card  
   installing • 17  
   locking 94  
 SIM Lock (6.6.5) • 94  
 SMS  
   message icon • 60  
   setup • 66  
   using • 51, 60  
 Soft keys • 29  
 Solving problems • 119  
 Sound settings (5) • 84  
 Speed-dialling • 40  
 Switching on/off  
   microphone • 49  
   phone • 21

## T

T9 mode • 44  
 Tasks  
   defining • 101  
   editing • 102  
 Templates (1.4) • 65  
 Text  
   changing mode • 43  
   entering • 42  
 Text messages  
   broadcast (1.9) • 69  
   inbox (1.1) • 60

outbox (1.2) • 61  
 setting (1.5) • 66  
 templates (1.4) • 65  
 write new (1.3) • 63

## Time

call • 79  
 format (7.3.4) • 104  
 setting (7.3.1) • 104  
 world (7.3.3) • 104

## To do list (7.2) • 101

## Tone

connect • 88  
 error • 88  
 keypad • 85  
 message • 86  
 ring • 84

## Travel adapter • 19

## U

Unpacking • 9  
 Upper-case characters  
   entering • 45  
 User group • 114

## V

Vibration • 85  
 Voice mail (1.8) • 68  
 Voice server • 69  
 Volume  
   adjusting • 24  
   selecting the ring • 84

## W

Waiting call • 51, 112  
 World time (7.3.3) • 104  
 Writing memos • 100  
 Writing messages  
   picture (2.3) • 74  
   text (1.3) • 63



## Tri Band SGH-P100 GPRS Telephone Quick Reference Card

### Access the Menu Functions

- ① Press the **Menu** soft key.
- ② Scroll with the **▲** and **▼** keys through the list of the menus until you reach the required menu.
- ③ Press the **Select** soft key.
- ④ Scroll with the **▲** and **▼** keys through the list of the options until the required one is selected.
- ⑤ Press the **Select** soft key.

- Each of the two soft keys (**▶** and **◀**) perform the function indicated by the text above it (on the bottom line of the display).

### Switch On/Off

Press and hold the **☎** key.

### Make a Call

- ① Key in the number.
- ② Press the **☎** key.

### End a Call

Briefly press the **☎** key.

### View Missed

Calls  
Immediately  
After Missing  
Them

- ① Open the phone and press the **View** soft key.
- ② Scroll with the **▲** and **▼** keys through the missed calls.
- ③ To return the call, press the **☎** key.



## Declaration of Conformity (R&TTE)

For the following product :

TRI BAND GSM TELEPHONE

(Product name)

SGH-P100

(Model Number)

Manufactured at :

- Samsung Electronics 94-1 Insu-Dong, Gumi City, Kyung Buk, Korea, 730-350

(factory name, address)

to which this declaration relates, is in conformity with the following standards and/or other normative documents.

**Safety** : EN 60950:2000  
**EMC** : EN 301 489-01 (07-2000)  
 EN 301 489-07 (09-2000)  
**SAR** : EN 50360:2001  
**Network** : EN 301 511 V7.0.1 (12-2000)

We hereby declare that [all essential radio test suites have been carried out and that] the above named product is in conformity to all the essential requirements of Directive 1999/5/EC.

The conformity assessment procedure referred to in Article 10 and detailed in Annex<sup>[IV]</sup> of Directive 1999/5/EC has been followed with the involvement of the following Notified Body(ies):

**BABT, Claremont House, 34 Molesey Road, Walton-on-Thames, KT12 4RQ, UK**  
 Identification mark: 168

 
The technical documentation kept at :

Samsung Electronics Euro QA Lab.

which will be made available upon request.

(Representative in the EU)

Samsung Electronics Euro QA Lab.  
 Blackbushe Business Park, Saxony Way,  
 Yateley, Hampshire, GU46 8GG, UK  
 2003.05.06



**In-Seop Lee / S. Manager**

(place and date of issue)

(name and signature of authorized person)

\* It is not the address of Samsung Service Centre. For the address or the phone number of Samsung Service Centre, see the warranty card or contact the retailer where you purchased your phone.

Answer a Call	Open the phone or Press the  key.	Store Numbers in the Phonebook	<ol style="list-style-type: none"> <li>① Key in the number.</li> <li>② Press the <b>Save</b> soft key.</li> <li>③ Select an icon for label.</li> <li>④ Press the <b>Select</b> soft key.</li> <li>⑤ Enter the name.</li> <li>⑥ Press the <b>OK</b> soft key.</li> <li>⑦ If necessary, change the memory.</li> <li>⑧ Press the <b>OK</b> soft key.</li> <li>⑨ Press  to return to idle mode.</li> </ol>
Adjust the Volume	Press the <b>▲</b> or <b>▼</b> key on the left side of the phone.	Search for a Number in the Phonebook	<ol style="list-style-type: none"> <li>① Press the <b>Name</b> soft key.</li> <li>② Select the <b>Search</b> option.</li> <li>③ Enter the first few letters of the name.</li> <li>④ To scroll through the names, press the  or  key.</li> <li>⑤ Press the <b>View</b> soft key.</li> <li>⑥ To scroll through the numbers, press the  or  key.</li> <li>⑦ Press the  key to dial.</li> </ol>
Choose the Alert Type	<ol style="list-style-type: none"> <li>① Select the <b>Alert Type</b> menu option (<b>5.3</b>).</li> <li>② Select an option:           <ul style="list-style-type: none"> <li>● <b>Light only</b></li> <li>● <b>Melody</b></li> <li>● <b>Vibration</b></li> <li>● <b>Vibra+Melody</b></li> </ul> </li> <li>③ Press the <b>Select</b> soft key.</li> </ol>		