

# **User Manual**

## **AC300**

Version: 1.0

## Contents

1 Introduction.....	5
1.1 Compiling intention .....	5
2 Start-up .....	5
3 The initial interface.....	5
4 Structure and module of Application .....	6
4.1 user management.....	11
4.1.1 User Registration.....	11
Fingerprint registration.....	14
ID (Mifare) card registration .....	14
Original sound REC .....	15
Photographing .....	16
4.1.2 Deletion of registration recording .....	18
4.2 Settings.....	19
4.2.1 Basic settings.....	19
Clock settings .....	19
Language settings.....	20
Voice prompts .....	20
Volume mediation.....	20
Keypad tone .....	20
4.2.2 Expert settings.....	20
4.2.2.1 Checking interface settings .....	21
Whether to real-time photographing .....	21
Whether to display photos.....	21
Real-time fingerprint display settings .....	21
4.2.2.2 Delete all records.....	21
4.2.2.3 Delete all registered data .....	21
4.2.2.4 Restore the factory settings .....	21
4.2.2.5 Firmware upgrade .....	21
4.2.2.6 Daylight saving time settings: .....	21
4.2.2.7 Keypad tone settings .....	22
4.2.3 Power supply management .....	22
Time starting up .....	22
Time power off.....	22
Time dormancy .....	22
Belling settings.....	22
Free time settings .....	23
Locking off key .....	23
Time state transition.....	23
4.2.4 Communication settings.....	23
Machine number .....	23
RS232.....	23
RS485.....	23

Baud rate .....	24
Ethernet network .....	24
IP address .....	24
Subnet mask .....	24
Gateway address .....	24
Connection password .....	24
Dynamic IP allocation.....	24
Back-stage address .....	24
4.2.5 Recording settings.....	25
Management recording alarm (alarm).....	25
Checking recording alarm (alarm) .....	25
Repeat affirmed time .....	25
4.2.6 Automatic detection .....	25
4.3 Access control function settings.....	25
4.3.1 Time sect settings .....	26
4.3.2 Grouping function settings .....	27
4.3.3 User door contact settings .....	27
4.3.4 Unlocking combination settings.....	28
Basic settings of unlocking combination.....	28
Unlocking combination settings.....	29
4.3.5 Lock drive time .....	30
4.3.6 Time delay of door contact .....	30
4.3.7 Door contact switch settings .....	30
4.3.8 Duress alarm settings .....	30
Duress fingerprint management .....	30
Password inspection alarm .....	31
Press-key help .....	31
Alarm delay .....	31
4.3.9 Wrong press of alarm .....	31
4.3.10 Back function settings .....	31
4.3.11 Binding ID.....	31
4.4 U disk management.....	32
4.5 Alarm reset.....	32
4.6 system information.....	32
4.6.1 User registered number .....	32
4.6.2 Fingerprint registered number .....	32
4.6.3 Checking record number .....	32
4.6.4 Management record number .....	32
4.6.5 Used memory .....	32
4.6.6 Residual capacity .....	32
4.6.7 Device Information .....	33
4.7 Query and pivot.....	33
Checking recording Query .....	33
Management recording query .....	33

User registration inquiries .....	33
5 Connection mode of external port .....	34
5.1 description of external port .....	34
5.2 Connection mode of lock and electric bell.....	34
6 Networking mode .....	36
6.1 Split networking mode.....	36
6.2 Networking mode of unity machine.....	37
6.3 Networking mode of fingerprint read head.....	37
7 Transferring line mode illumination of terminal units network .....	38
7.1Connection mode chart of split transferring line.....	38
7.2 Connection mode chart of transferring line of unity machine.....	39
8 Instruction of controller .....	40
9 Basic concepts and explanation.....	40
No trouble found .....	40
Refuse to found .....	41
Permission rank.....	41
Mode key .....	41
Message notification .....	41
Host computer and slave .....	42
Daylight saving time (time zone settings) .....	42


# 1 Introduction

## 1.1 Compiling intention

Instruction for users

## 2 Start-up

When to start up, display firm LOGO and progress bar, collocate LOGO freely, enter original interface after start up, such as:

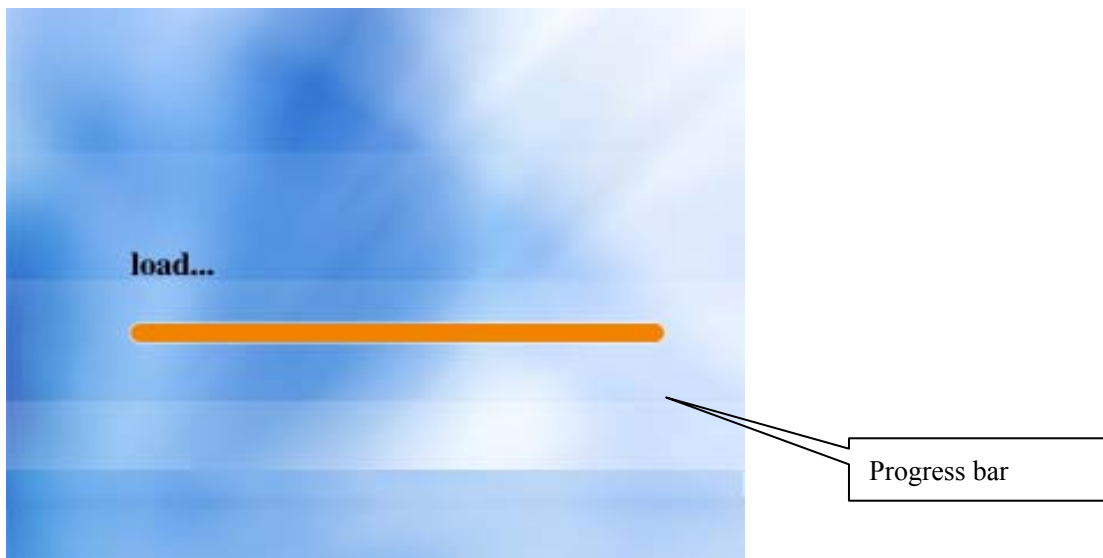

## 3 The initial interface

After device links with power supply, the screen shows the first interface we call the initial interface, see figure, the basic information is as follows:

Explanation: 1 Use larger font to display time.

2 Use other smaller font to display date, week, and other information.

3 The current status display: such as: sign in, sign off...

4 Or message information, how to display amount of rolling information.

5 Play colorful propaganda (advertising) page circularly.

Below the initial interface:



The Icon shows the main hardware configuration, including whether or not have camera, ID (MIFARE) Card, fingerprint, SD card, network with power supply mode, serial port and so on

Help tips column, shows the current status or message notification

1. Administrator enter into management mode,
  - 1) Press MENU key, Equipment prompts " administrator, Please verify..."
  - 2) Manager loggings in, administrators can use password, fingerprint or cards to log on
2. User checking
 

Allow user verify only in authentication mode (verification model is carried out in the access control settings), such as:

Press the number keys + OK is the serial number,

If the authentication mode is ID + password, it prompts "enter a password",

If the authentication mode is ID + fingerprint, it prompts "press finger",
3. Pressing finger or swiping card is generally direct verification
 

Please refer to the specific verification process for the verification process

## 4 Structure and module of Application

AC300 menu list

The first level menu	The second level menu	The third level menu	The fourth level menu
User management	User registration	Fingerprint registration	
		RF card registration	Includes ID or Mifare card
		Original sound REC Photographing	
	deletion of registration recording		
Device settings	System settings	Basic settings	clock settings Language settings Voice prompts Volume mediation

		Keypad tone
		Checking interface settings
		Delete all records
		Delete all registered data
		Restore the factory settings
	Expert settings	Firmware upgrade
		Daylight saving time settings
		Function key settings
		Total numbers of managers
		Password of super manager
		Sensitivity adjustment
		Beginning and end of belling time
	Belling settings	bellling time
		Belling music
		power off
		dormancy
Power supply management	Free time settings	Play colorful propaganda
		Time power off
		Time dormancy
		Time starting up
		locking off key
		timing state transition
		machine number
		RS232
		RS485
		Baud rate
		Ethernet network
		IP address
Communication settings		Subnet mask
		Gateway address
		Connection
		password
		Dynamic IP
		allocation
		Back-stage address

Access Control settings	Recording settings	Management recording alarm (alarm) Checking recording alarm (alarm) repeat affirmed time Run all testing Memory testing LCD function testing
	Automatic detection	Sound testing Fingerprint Collector testing Keyboard testing Real-time clock
	Time sect settings	
	Grouping function settings	Combination mode of groups Validation mode of groups Time group
	User access control settings	Validation mode of time group Other validation modes
	basic settings of unlocking combination lock drive time	
	Time delay of door contact	
	Door contact switch settings	
	duress alarm settings	duress fingerprint management Password inspection alarm Key-press help Alarm delay settings
	Wrong press of alarm back function settings	



	Binding ID	
	Download checking records	
	Download management records	
U disk management	Download user information	
	Upload user message	
	Upload message notification	
	Upload mp3	
Alarm reset		
	registered user number	
	registered fingerprint number	
	Checking record number	
	Management record number	
	Used memory	
		User registered number
		Fingerprint registered number
	Residual capacity	Checking record number
System information		Management record number
		Residual memory
		Fingerprint capacity
		Recording capacity
		Management recording capacity
		Memory capacity
	Device Information	Standby time
		Serial number
		Manufacturer
		Device name
		Device model
		Arithmetic version
		Firmware version
Query and pivot	Checking recording	

query  
Management  
recording query  
User registration  
Inquiries


Press MENU key, the following “help column” prompts" administrator, Please verify..."

At this time, administrator can be passed through pressing fingerprints, inputting ID and password or swiping card to enter the menu, such as authentication, only proved to be successful can enter the main menu.

See “8 validation process ”for verification process


1. Default the first as focus after entering the menu, display borders on the focus icon with.
2. The direction keys moves the focus to the appropriate icon, OK button can enter the corresponding submenu
3. Each icon has a number, press the corresponding number keys can directly enter this sub-menu
4. ESC can return to previous menu, ESC of the main menu key can return to the initial interface
5. Order shows the current menu and the full name of the selected sub-menu, it can show two levels of full name
6. Icon shows 4 Chinese characters at best, use the first three Chinese characters + “...” substitute Chinese characters more than four
7. Press MENU key states can back to the main interface in any menu states, enter the main menu interface at other main interface states,

Start Input Method Editor in other states.

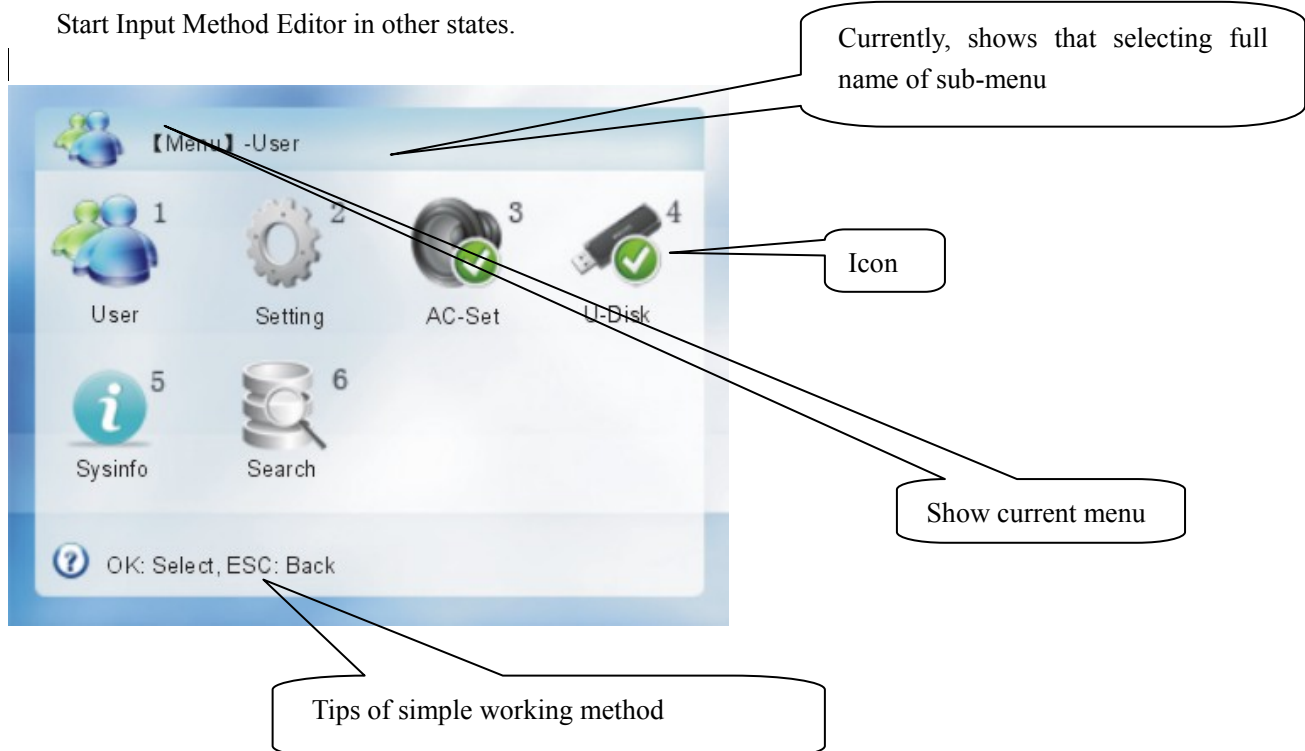

## 4.1 user management

### 4.1.1 User Registration

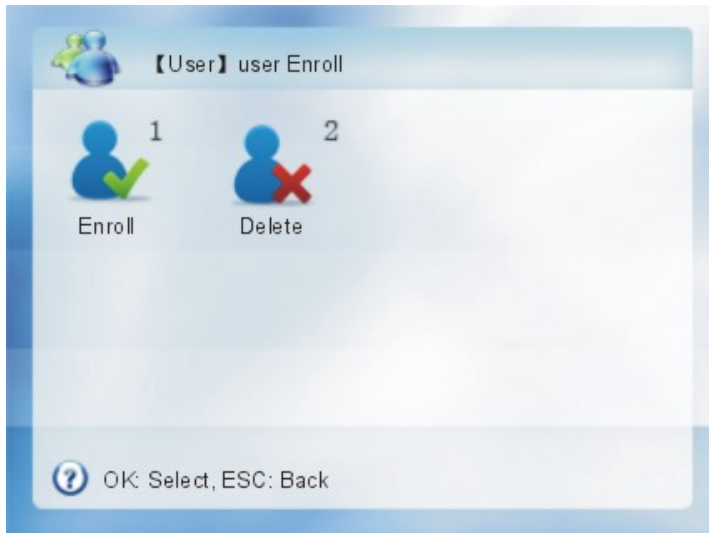

**Explanation:**

- 1、 The intermediate user: Refer to the general user, namely person who needs to verify identity because of some purpose, such as person who opens the door through the device, or only those who check on work attendance.
- 2、 The administrator: Operates all other work in addition to carry out advanced settings, registration or delete operation of administrators at the same level, can maintain their own data
- 3、 Super-administrator: can carry out all other operations including the deletion of his own and all other administrators except super-0 administrator. After leaving factory, Equipment default with a super administrator (code as "00000", password is "888888") can enter the menu for all operations. Password can be modified, but not to be deleted.
- 4、 The equipment only register the intermediate user, the general manager may exercise any authority of the super administrator
- 5、 The same ID number can register up to 10 different fingerprints, fingerprint ID from 0 to start, followed by increments, it can also be entered manually
- 6、 After entering the registration menu and the real pre-registration, indicating the default ID (the last No. automatically add 1), at this point, can enter a custom ID. (1-65535 5-bit)
- 7、 Register fingerprint three times is success. In accordance with the message (voice and text), press the same finger (enter the password twice) three times continuously. If it fails, indicating a failure, and prompts re-registration.
- 8、 Choose ID card or Mifare card in accordance with the device configuration,
- 9、 When register fingerprint or RF card, as there have such fingerprint or card number in the system, the system will refuse to register, suggesting that "repeat fingerprint" or "duplicate cards"

**Basic Information dialog box:**

Once choose the user registration, can enter the following dialog box

[User] Enroll

ID  Name

PWD  Confirm

Privilege  Section

OK ESC

? OK: Sel ESC: Back F2: Save F3: Next

Callouts:

- Default empty (points to Name field)
- Password must be six figures, default 888888 (points to PWD field)
- Default empty, only the option (subject to sector configuration files) (points to Section field)
- Default ordinary user, choose by the down direction keys (points to Privilege field)
- Intermediate user
- Administrator
- Super administrator

1. The default code at this point: the last No. automatically add 1, the name is empty, there must be six figures, default 888888 password, the user-level is general
2. Number may input by users, if enter a password, the password and confirmed password must be the same,
3. If it is non-new registration, may targeted by this user ID, and then modify the name, password, user-level, department, cards, photographs, original sound or fingerprint backup.
4. In any input state, F4 is a removal key (only removal of one character or Chinese character, that is, Backspace key (Backspace)), it may delete all after a long press.
5. In any state of non-menu, F1 key is help key, it can display the help explanation of this state. Any key may return.

### Input Method Editor

Press MENU key to start Input Method Editor in relation to input, then press MENU key to switch input methods including Pinyin, lowercase letters, uppercase letters, digital, clock input format.

F4 may back at this time. It may delete all after a long press.


**T9 Bopomofo**

mu nv nu ou

1 2 3 4 5 6 7 8 9

目 母 木 幕 穆 姆 亩 慕 姆 ▼


Appear this chart after pressing figure key 6 and 8  
Here select Bopomofo combinations by pressing left and right direction keys  
Example: use ► to select ou

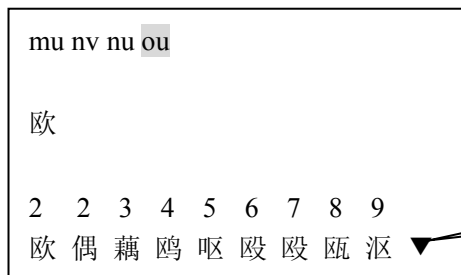

Use Up and down arrow keys to flip Chinese characters, directly select the appropriate Chinese characters by giving long-press of figure keys, example: give long-press of key 1 to choose ou




Bopomofo combinations disappear, start up Lianxiang

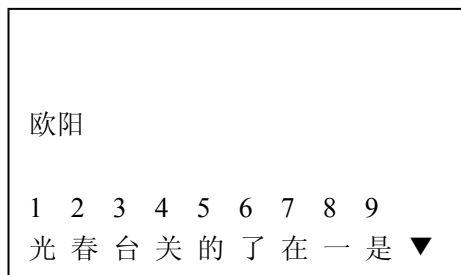

Give long-press of key 2 to select “Yang”, and have a short-press of figure key again to input Pinyin. Cycle by cycle until satisfied with it  
If satisfied, press OK, back to original interface, input content to focus of original interface, ESC-back to original interface and cancel the input content

### Register dialog box:

Once identified, enter into the following interface

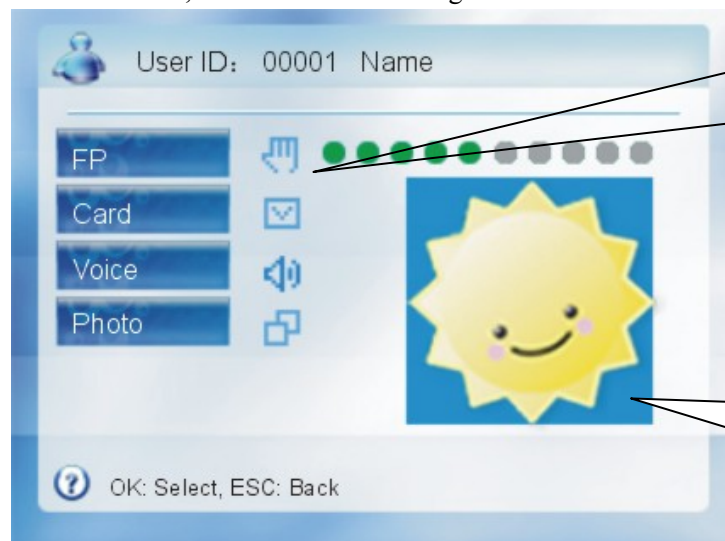

If Register several fingerprint, it shall display these ones in green, RF card register, original sound REC, having photographing setting is green, otherwise it is white. Display according to registered order. no more than ten

Photo, if user exists, it shall display the photo, otherwise default cartoon, after photographing, show photos immediately

## Fingerprint registration

### Fingerprint registration dialog box

Choose **1 Fingerprint registration**, then enter into the following dialog box

The screenshot shows a dialog box for fingerprint registration. At the top, it displays 'User ID: 00001' and 'Name'. Below this is a large circular area showing a real-time fingerprint scan. To the right of the scan area, there are three hand icons with arrows pointing to them, and a label 'FP Num:'. Below the hand icons are two buttons: 'OK' and 'ESC'. At the bottom left, there are two buttons: '▲Retry' and '▼Next'. A question mark icon is also present at the bottom left.

Number 0-9. Increase automatically, may modify when input 0...9

Have voice tips at the same time:  
“Please press finger...” after succeed, it prompts: “please leave”  
Please press finger in the second time ...after succeed, it prompts: “please leave”  
Please press finger in the third time...after succeed, it prompts: “please leave”  
No successful, it prompts: “please press finger again...”  
After three times of success, do not prompt “successful fingerprint registration” again. If repeat tips “repeated fingerprint”. The three ellipse box is empty.  
Repeat tips “please press finger...” cycle by cycle until succeed or cancel

Before succeed, this button is gray, OK key is not effective. When succeed, it is effective. The following registration dialog box is the same as this button

Show real-time fingerprint

Turn green after each success, all 3 times together

After succeed, press up arrow, no save current fingerprint, re-register again. No change of the fingerprint No.


After succeed, press down arrow, save current fingerprint, then register the next fingerprint, this fingerprint number + 1  
Example:00001--1

## ID (Mifare) card registration


### RF card registration dialog box

Choose **2 RF card to register**, then may enter into the following dialog box

1, If the RF card has been registered and prompts, "RF card is in existence, whether or not to re-register?" Dialog box is shown as below:

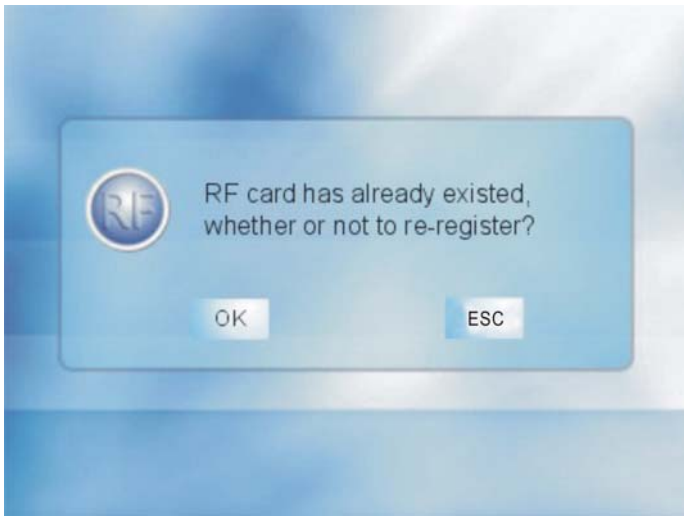

After confirm, enter into such dialog box:

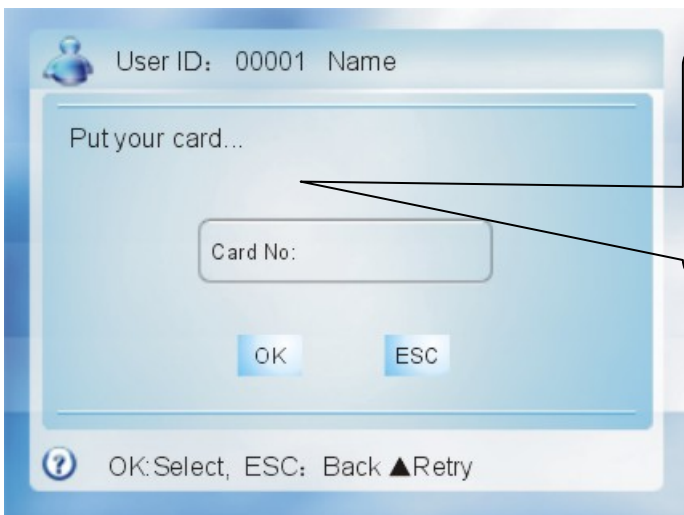

**Voice tips:**

"Please show card..." after succeed, judge whether or not repeat, if not, prompts "successful registration of RF card", if repeat, prompts "repeat card number, please show card again...", cycle by cycle until reach success or cancel


## Original sound REC

Through recording real voice of the person (usually my name), as voice prompts when verify, so that current staff can further confirm the miscarriage of justice, thereby reducing the rate of miscarriage of justice. It is certainly faster and more accurate than demonstrate their photos.


### Original sound REC dialog box

Choose **3 original Sound REC**, then may enter into the following dialog box

1, if the original sound has been recorded and prompts, "the voice had been recorded, whether or not to re-record?" Dialog box is shown as below:

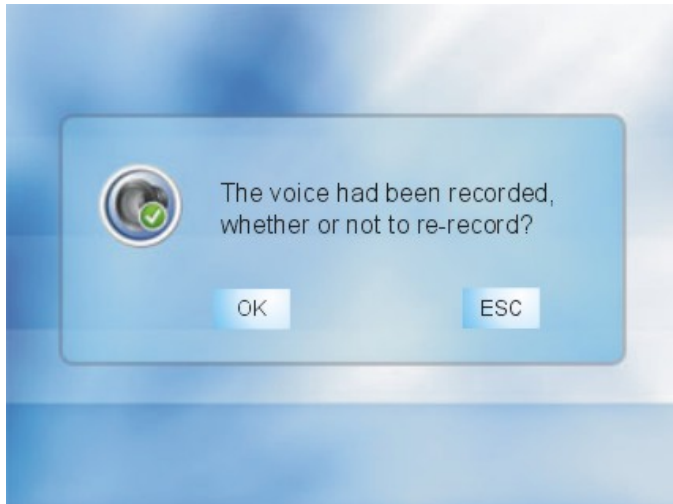

After confirm, enter into such dialog box:

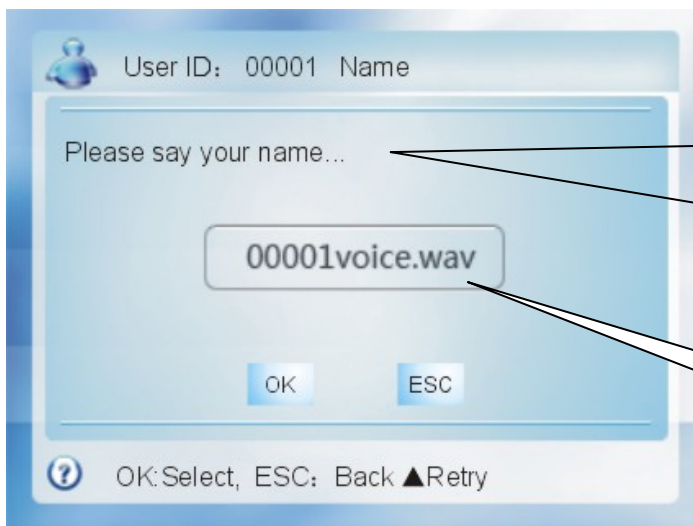

Voice tips:

“Please say your name...” after succeed, prompts “successful record”, if not successful, prompts “ Please re-record”, cycle by cycle until reach success or cancel

Display file name, number + voice.wav/mp3

## Photographing


The photo is 320\*240\*24b, size control within 16k,\* .jpg form

### Photographing dialog box


Choose **4 photographing**, then enter into the following dialog box

1, If the user’s photo exists and prompts, "the photo had been recorded, whether or not to re-record?" Dialog box is shown as below:



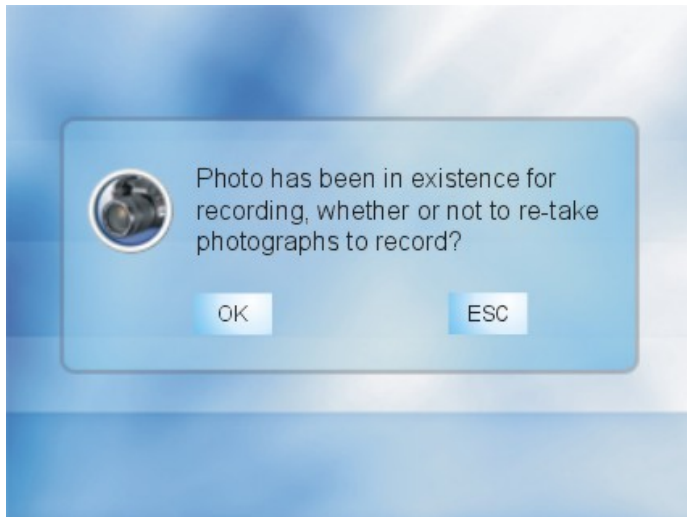


After confirm, enter into such dialog box:

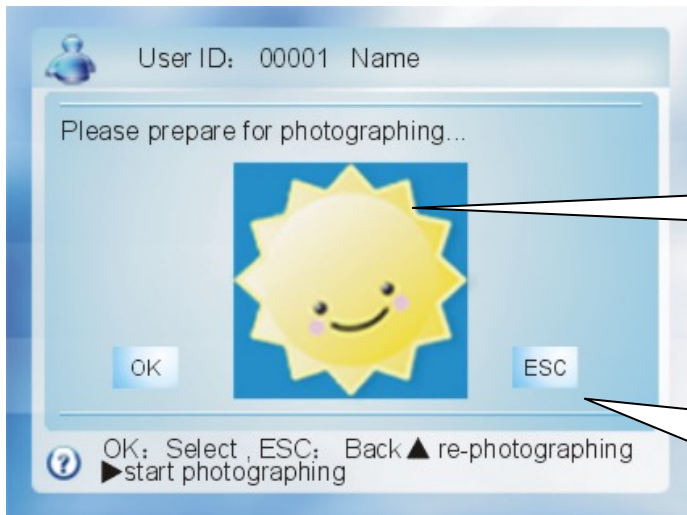

Real-time camera before taking pictures, show photos after taking pictures

If not satisfied, press the UP arrow ▲, may take pictures again, at this time, re-voice and re-text prompts.

## Registration flow

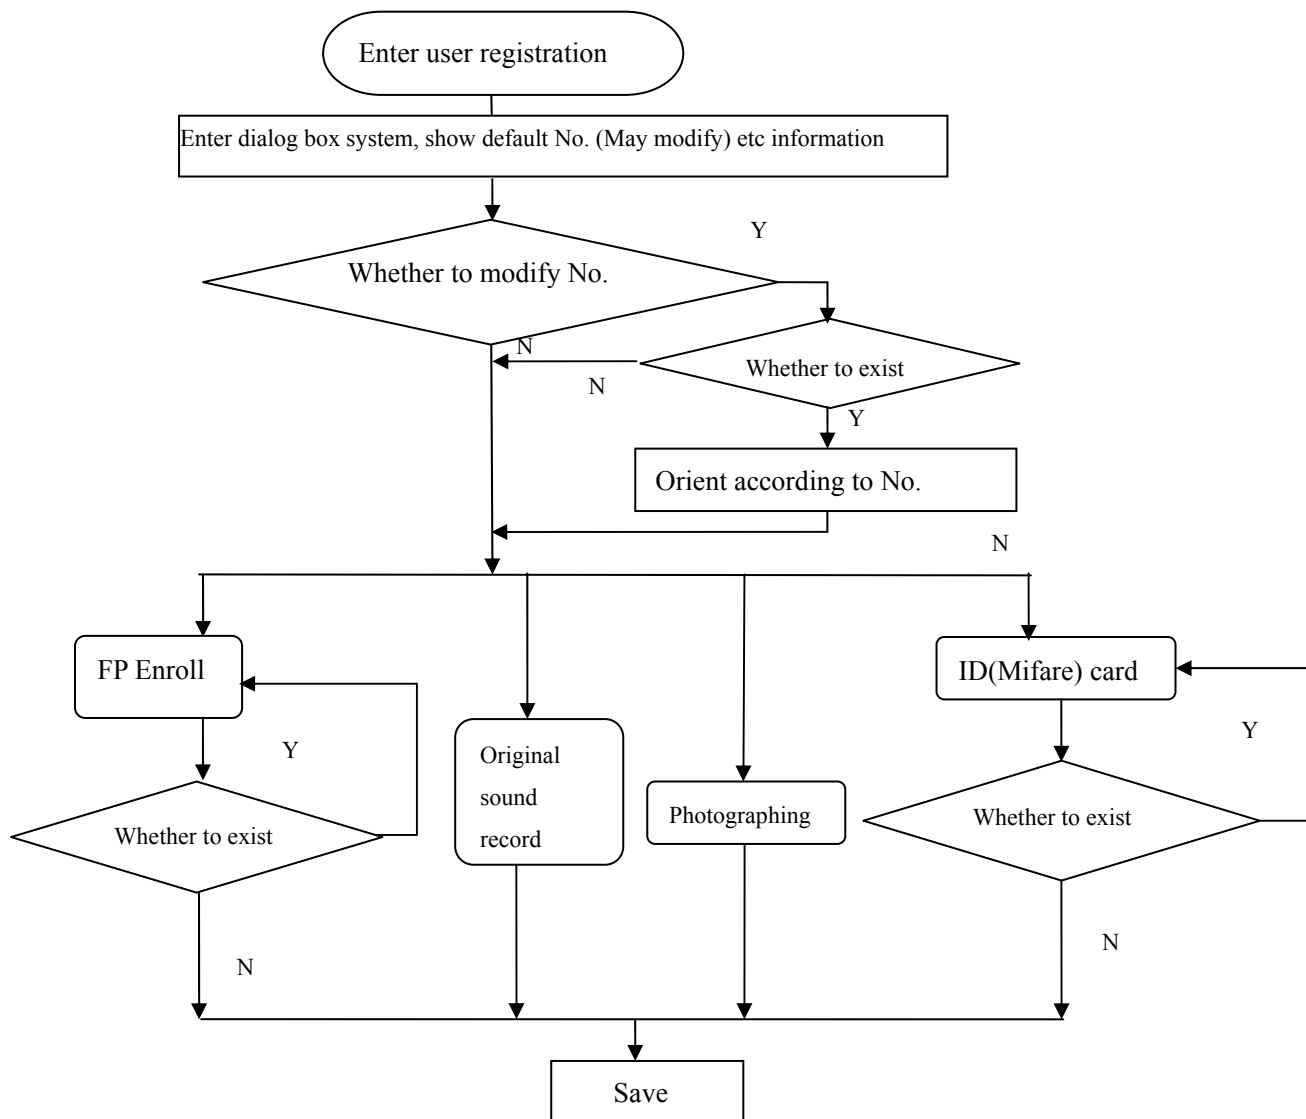


### 4.1.2 Deletion of registration recording

Explanation:

1. After entering this menu, firstly prompts to input deleting a user ID



After confirm, enter into the following interface

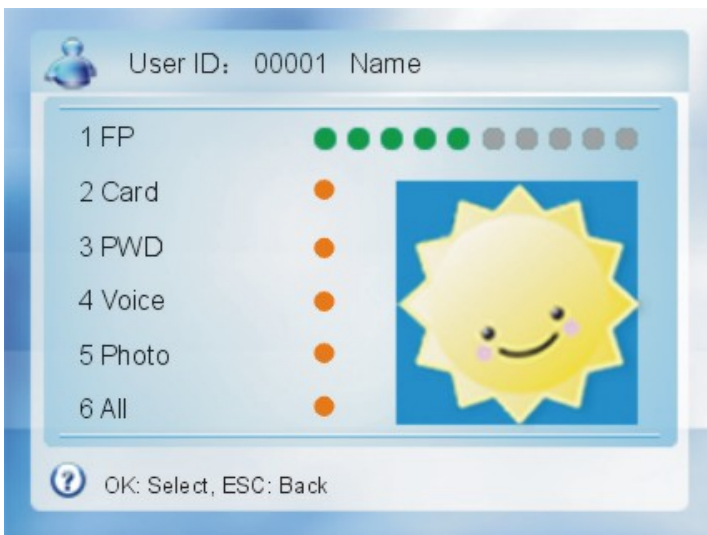

Note:

1. No. 00000 super-administrator can not be deleted
2. The administrator may not delete other administrator, only can delete their own.
3. Super Administrators can delete all users' information except No. 00000 super-administrator
4. May delete some information of user registration, select " delete all" ,then remove the user completely from the system

## 4.2 Settings

### 4.2.1Basic settings

#### Clock settings

Explanation:

1. Including date and it's form and time settings, default form is YY-MM-DD24H
2. Offer date forms which support at least 10 types,  
YYYY MM DD YYYY-MM-DD、YYYY/MM/DD、  
MM-DD-YYYY、 MM/DD/YYYY、  
DD-MM-YYYY 、 DD/MM/YYYY、  
YYYYMMDD,

## Language settings

Explanation: language that is displayed on the screen menu of setting fingerprint machine (voice also should be amended accordingly, but currently do not support).Default simplified Chinese

## Voice prompts

If choose “yes”, there has corresponding voice hint on the device. If choose “no”, only have “DD” buzzer.  
The voice document is mp3 or wav format, approximately have:

1. Successful verification:

May play if having recorded voice of the user, otherwise play user number hint such as “0001”, the voice of the number must be speech synthesis of real people, prior input 0-9 numerical voice.

2. Failing verification:

“Number absence”, “please press finger again”, “please replay card”, “please input password again”.

## Volume mediation

Namely regulation of sound volume

## Keypad tone

If choose “yes”, press key has sound, otherwise not.

### 4.2.2 Expert settings

Display this menu only when the super-administrator access to.

### **4.2.2.1 Checking interface settings**

#### **Whether to real-time photographing**

If choose "Yes", you have to set up to preserve the ratio of real-time photographing which are as follows:

- 1.0: no save
- 2.30%
- 3.60%
- 4.100% save all

#### **Whether to display photos**

#### **Real-time fingerprint display settings**

When choose "yes" in the registration of fingerprints and fingerprint mode authentication, it shows corresponding true fingerprint image. Choose "No", it does not show.

### **4.2.2.2Delete all records**

Delete all validation records.

### **4.2.2.3 Delete all registered data**

Delete all registration records (delete all users, only leave 00,000 user which the system default)

### **4.2.2.4 Restore the factory settings**

Restore all settings message to the state of leaving factory (default state).

### **4.2.2.5 Firmware upgrade**

This option can upgraded the terminal unit, select upgrade file of U disk, Click OK to upgrade.

### **4.2.2.6 Daylight saving time settings:**

In order to meet the needs of daylight saving time of some countries, regulate an hour faster on XX minute XX hour XX day XX month, when on XX minute XX hour XX day XX month, regulate one hour slower. The beginning of daylight saving time – the beginning time for implementing the daylight saving time

The end of daylight saving time - the end time for implementing the daylight saving time

Correction time - different with the current time

Example: The current time is 16:07 , April 9

The beginning of daylight saving time: Set for April 1

The end of daylight saving time: Set for May 1

Correction time: set to 1 hour

Back to the checking work attendance interface, display the time :2009-4-8 16:07

#### **4.2.2.7 Keypad tone settings**

Function keys can be set as features include: overtime registration, off duty registration, work registration, view system information, alarm, bell, query records, go-off, entering, return, out, overtime work leaving.

Default definition state transition of the system F1: work attendance, F2: check back from work, F3: overtime attendance, F4: signed back to overtime work.

Here the function key is shortcut, you can switch directly to the needed state through these function keys without the need to do those tedious operation.

### **4.2.3 Power supply management**

#### **Time starting up**

The equipment automatically opens within specified time. (Run the function only in power off and time dormancy state)

#### **Time power off**

The equipment automatically closes within specified time. (All other modules are closed except the CPU core), press the power button or to the boot time, it start up. (In sleep mode)

#### **Time dormancy**

The equipment automatically enters sleep mode within specified time. (All other modules are closed except the CPU core and key board), press any key to wake-up equipment in working condition.

#### **Belling settings**

Belling Settings include beginning and ending time, duration, music.

Belling can be set 8 kinds of times, you can set up time of timing belling in accordance with the needs, when arrive at the set time, the fingerprint machine will automatically ring, then to reach the length of ringing, it automatically cut-off. If ringing time is 0, the ring is closed. Otherwise, ring according to setting time and length.

Two ringing ways:

- 1) from the loudspeaker of machine itself.
- 2) Connect electric bell with a fingerprint machine, when arrive at the set time, the machine shall send out a relay signal to trigger bells ring.

## **Free time settings**

1. Free means that users do not use terminal equipment
2. Including transit state choice and free time settings, the two options are interrelated, when the free time to 0, the free setting function is turned off; when the free time is non-0 value (in minutes ), such as 1, then if there is no any operation within 1 minute, the system will enter free state of the specified settings
3. Free transition state include: sleep and shutdown

## **Locking off key**

Failure to power button: “yes”- failure to shutdown button

“No”-effective to shutdown button

## **Time state transition**

State transitions: when use roll machine, it require to keep a record of roll status in different time, after this setting, when arrive time that user set, the machine will automatically convert to the status of rolling. Display the current rolling state in the current rolling interface.

At least include: sign in, sign off, overtime sign in, overtime sign off etc four states and at least six time sects

## **4.2.4 Communication settings**

### **Machine number**

Number that the machine in the LAN, range from 1 to 255

### **RS232**

Whether or not to use RS232 for communication

### **RS485**

Whether or not to use RS485 for communication

## **Baud rate**

Default 9600, set up five options: 9600,19200,38400,57600,115200.

## **Ethernet network**

Whether or not to open Ethernet communication, if choose "Yes", you should also set the following parameters:

### **IP address**

Default IP is 192.168.1.201, adjust in accordance with demands

### **Subnet mask**

Default subnet mask is 255.255.255.0, adjust in accordance with demands

### **Gateway address**

Default gateway address is 192.168.1.1, adjust in accordance with demands

As the default communication mode: whether or not to use TCP / IP protocols for communications.

### **Connection password**

The system default password is 0, that is no password, you can set, if set password, when connect you have to offer a password. The number of connection password up to eight digits at most.

### **Dynamic IP allocation**

### **Back-stage address**

PC back-stage address is the address of upper computer, it can control the host computer of terminal unit, there is need to enter the IP address of this host device



## 4.2.5 Recording settings

### Management recording alarm (alarm)

When the value of remaining management record capacity arrives at setting standard, the equipment will automatically prompt a warning message of remaining record;

### Checking recording alarm (alarm)

When the value of remaining record capacity arrives at setting standard, the equipment will automatically prompt a warning message of remaining record;


### Repeat affirmed time

In the set time range (unit: minutes), such as there has existed one person's attendance records, then the second passed checking in result will not be saved.

## 4.2.6 Automatic detection

Test system components. When equipment fails, it has advantage to analyze failure reason, thus maintain the equipment quickly and easily.

Including testing memory, LCD screen, voice, fingerprint collector, keyboard and the clock, in the testing process, should ensure the stability of power supply, or else they might damage the system hardware, especially during the storage testing process.

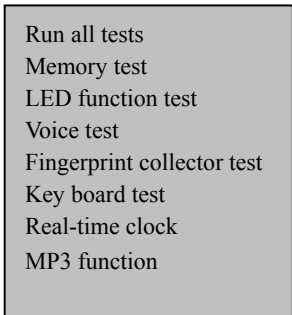

- Run all tests
- Memory test
- LED function test
- Voice test
- Fingerprint collector test
- Key board test
- Real-time clock
- MP3 function

## 4.3 Access control function settings

**Introduction:**

Settings for each user is compose of one sub-group, group time sect and user time sect.

Grouping means assign a group of users to some group, for example, Group 1, Group 2, etc.;

choose three set time sect at most in group time sect, there is "or" relationship among these three time segment(that is, to meet any of the three is ok);

choose three set time sect at most in user time sect, there is "or" relationship among these three time segment; see "User Access Control settings" for relationship between the using group time sect and user time sect.

In short, the conditions for registered users to open the lock:

**1:** The group that user located must be in the unlocking combination (if you implement unlocking combination settings, it demands verify with personnel of other groups in the same unlocking portfolio, then you can open the lock);

**2:** the current unlocking time should be in any effective time zone of the user time sect;

System default the new registered user as the first group, and default grouping for the first group, the time sect of default group is "1". In the case of leaving factory state of the Group 1 and time 1, default new registered user is to unlocking state (If users modify the settings related to access control, the system shall change with the diversification by users). If there is no grouping of users in the unlocking combination settings, the user can only check on work and can not unlock.

### 4.3.1 Time sect settings

Defines unlocking time each day in one week, it is the minimum time unit of access control settings. The whole system can define up to 50 time sects one day. Each time sect defines 7 time sects, they are from Monday through Sunday, each interval has effective period of time of 24 hours per day. Each user can set a maximum of three time sects, three sects are "or" relationship, time is effective as long as the verification time is able to meet one of three. The format of each time interval: **HH: MM-HH: MM**, namely accurate to minutes in accordance with the 24-hour system.

The ending time is smaller than the beginning time (23:57 - 23:56) that means the prohibition of the whole day, The ending time is bigger than the beginning time (00:00 - 23:59) that means this sect is effective.

The effective unlocking time for users: open all day (00:00-23:59) or the ending time is bigger than the beginning time in this time sect.

Example 1: the system default time sect 1 for an opening day that means default leaving factory state (that is, new registered users need to unlock).

Time sect 1 definition Sunday 00:00-23:59 Monday 00:00-23:59 Tuesday 00:00-23:59 Wednesday 00:00-23:59 Thursday 00:00-23:59 Friday 00:00-23:59 Saturday 00:00-23:59
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Example 2:

Not allowed to enter on Saturdays and Sundays, these two days have a rest;  
enter from Monday to Friday at working hours  
Working hours: 08:30-18: 00;  
Settings are as follows:

Time sect 2 definition ▲
Sunday 23:57-23:56
Monday 08:30-18:00
Tuesday 08:30-18:00
Wednesday 08:30-18:00
Thursday 08:30-18:00
Friday 08:30-18:00
Saturday 23:57-23:56

### 4.3.2 Grouping function settings

Grouping function settings can divide users into several parts, and different groups can be combined into different unlocking combinations in order to facilitate the grouping management of access control. Such groups can be combined as lots of unlocking combinations. System defines 5 groups: group 1, group 2, group 3, group 4, group 5. New registered users belong to group 1 by default, but these users also can be re-assigned to all other groups.

**Group time sect settings:** Set group unlocking time, choose the completed setting number in **group time sect**.

Default to use time sect of group 1 for new registered user, but when user resets affiliated group, the user uses corresponding group time sect, so firstly it needs to define the default time sect of each group.

**Note:** 1System default group 1

Time sect choose to define number “1”. (default unlocking for new registered user)

The default time sect of group 2 has 1 time sect, may set three time sects at most, the relationship among them is “or”.

Example group 2 settings of default time sect

group2 efficient in time sect :1、 8、 40 and the group validation mode is fingerprint, it also may choose other defined time sect.

Group2 default time sect 01:08:40-fingerprint

#### Group validation mode settings

Set default validation mode of the device. Namely choose any kinds of combination mode of ID number, fingerprint, password, ID (Mifare) card, default single fingerprint, there are 6 types to select. Only can choose one type. See [authentication mode](#) for details

### 4.3.3 User door contact settings

Set affiliated user group, time sect of the using group, user time sect, validation mode of the using group,

personal authentication mode in accordance with needs of the user.

- ☐ grouping: divide registered users into several parts (according to roles) in order to facilitate management,
- ☐ time sect of the using group: whether or not to use default time sect of affiliated group by the user,
- ☐ time sect of users: set time of unlocking, namely choose the set time number,
- ☐ authentication mode of the using group: Whether or not to use validation mode of affiliated group by the user.
- ☐ Personal authentication mode: Choose an authentication mode, no other than using group validation mode, the personal validation mode shall effective.

**Note:** 1、 the relationship between the time sect of using group and the user time sect

whether or not be effective only on the following **user time sect** in “ **time sect of the using group**” :

- 1) If the **time sect of the using group** is “yes”, the user time sect shall evaluate as the time sect number of affiliated group automatically( the group time sect should be set firstly). ”
- 2) if modify **the time sect of users**, the time sect of using group is ‘No’ automatically;

2、 the relationship between using **group validation mode** and **personal validation mode**

- 1) If the **group validation mode** is “yes”, the group validation mode is effective, the personal validation mode is invalid
- 2) If the **group validation mode** is “no”, the user use personal validation mode.

Example: set user 00001 into one group.

User 00001	
Group	1
Time sect of using group	yes
Time sect 1	1
Time sect 2	8
Time sect 3	40
Validation mode of using group	yes
Validation mode	FP

Use the time sect of group 1 (here the time number of user shall change into group time number automatically) , User uses group validation mode, in spite of personal authentication mode is which one, it depend on the group validation mode

#### 4.3.4 Unlocking combination settings

The following two are mutually exclusive, you can choose one only, none but the basic settings of unlocking combination is “No”, the unlocking combination settings shall effective.

**Basic settings of unlocking combination**

Set the person number of unlocking the fingerprint machine, no matter in which group, the default setting is 1, indicate that only one user pass the validation, it shall emit lock control signal, such as the setting is 3, it indicates three users need to pass, then the fingerprint machine shall emit lock control signals, and intervals of each one is no more than 30 seconds. The maximum setting is no more than 5.

## Unlocking combination settings

Set different unlocking group combinations, each combination is composed of the different group. The unlocking combination use group number directly, without regard to validation order of every group. Such as “123” means 1 group, 2 groups, 3 groups, it demands at least one user in each group to validate together that can open the lock, “4” means one user of the single 4 groups passes the validation, then to open the lock.. at one time, the system may define 10 kinds of combinations at most, only one of them can pass is ok.

**note:** The unlocking combination of initial system default is “1” ( Namely, any person in group 1 can open, default the new registered user can open).

Example 1: No setting (leaving factory state), the system default group 1 is unlocking combination 1, others are empty,

Definition of Unlocking combination	
Combination1	1
Combination 2	
Combination 3	
Combination 4	
Combination 5	
Combination 6	
Combination 7	
Combination 8	
Combination 9	
Combination 10	

Example 2: If use certain groups to release lock, set these groups in unlocking combination definition,

Definition of Unlocking combination	
Combination 1	123
Combination 2	4
Combination 3	24
Combination 4	45
Combination 5	15
Combination 6	
Combination 7	
Combination 8	
Combination 9	
Combination 10	

From above scheme setting we can see that all set 5 unlocking combinations,

combination 1: When person of each group (group 1, 2, 3) pass time sect of the user authentication to be effective, the door will open,

combination 2: Only 1 person (person belongs to group 4) be on the scene, the door will open,

combination 3: When person of each group (group 2, 4) pass time sect of the user authentication to be effective, the door will open,

combination 4: When person of each group (group 4, 5) pass time sect of the user authentication to be effective, the door will open,

combination 5: When person of each group (group 1, 5) pass time sect of the user authentication to be effective, the door will open,

To sum up, in unlocking combinations, firstly, staff of each group in portfolio should have the same effective period of time, the door will open.

**Explanation:** No passing time zone of validation

- ☐ unselected time zone number of user,
- ☐ unselected time zone number of group default time zone (when using group time zone) ,
- ☐ the validation time for user does not exist in any setting time zone;
- ☐ define time zone as forbiddance;

**Note:** if the time zone set by user is not passed:

- ☐ answer for above combination 2, it appears prompt that user of “Illegal sub-portfolio ” can not open lock, but may check on work attendance. (in group 4, there are other users meet unlocking qualification, the combination 2 may open the lock)
- ☐ Answer for above combination 1,3,4,5, it appears prompt that user of “Illegal sub-portfolio” can not open lock, but may check on work attendance.

**Note:** 1. when set combination 245, no permission for setting combination 24、 combination 25、 combination 45.

2. If you want to make all registered users can not unlock, set the whole 10 combinations to empty.

### 4.3.5 Lock drive time

The lock drive time length means time difference between validated time and starting electric lock that after machine validates fingerprint. Take 0.5 seconds for the smallest accurate unit. The Largest set is 5s  
set to "0" means to close lock control function.

### 4.3.6 Time delay of door contact

Indicates delay time for inspecting door contact after open the door, namely after delay time to inspect door state (open or close), if there is difference between the door contact state and the set state, it gives an alarm. This time is the time delay of door contact, the unit is “s”

### 4.3.7 Door contact switch settings

Include three kinds: No, normally opened type, normally closed type;

No: no use of door contact switch;

**Normally opened type:** if the door is open, the lock should be open, otherwise it shall appear door contact alarm after passing the delay time;

**Normally closed type:** if the door is closed, the lock should be same, otherwise it shall appear door contact alarm after passing the delay time.

### 4.3.8 Duress alarm settings

If register duress fingerprint, it shall alarm automatically after passes this fingerprint in order to prevent somebody from compelling to open the door.

### Duress fingerprint management

**Register duress fingerprint:** Register new fingerprint as duress fingerprint

**Appointment of duress fingerprint:** Change registered fingerprint into duress fingerprint

**Cancel duress fingerprint:** Cancel single duress fingerprint

**Cancel all:** Cancel all duress fingerprints

User specially registers a new fingerprint or appoints a registered one existed in fingerprint machine as duress fingerprint. In any cases, after compare with these fingerprints, it may appear duress alarm.

## Password inspection alarm

Open or close such alarm function

## Press-key help

If choose “yes” to press-key help, give a long press on “▼” key( more than 3 seconds )to produce SOS; after press “▼” key( no more than 3 seconds ) , then fingerprinting or press ID number, if succeed in identity, it shall appear duress alarm at one time;

If choose “no” to press-key help, give a long press on “▼” key is out of operation.

## Alarm delay

Defines automatic alarm time: after appears duress alarm signal, input alarm signal indirectly, it can be defined, and appear alarm signal automatically in a minute (0-255 seconds).

### 4.3.9 Wrong press of alarm

Set times of wrong press of alarm: when validation is not passed and the wrong times reach the set value, it shall alarm. 0 is wrong press and have no alarm (infinite and many times), otherwise you may set 1-9 times, default 3 times.

### 4.3.10 Back function settings

Judge whether or not to back in accordance with the latest in and out records, in and out must be matched. It demands support of host computer and slave (see host computer and slave).

Example: Somebody wants to go out,

(1) if his latest record is not go in, the machine shall prompt “refuse back” and refuse to open the door.


(2) if his latest record is go in, he can open the door after authenticate the fingerprint.

“Back in” and “back in and out” have similar logic.

### 4.3.11 Binding ID

Use on the connection of extensions, communicate with extension in the case of the binding number is right.

## 4.4 U disk management

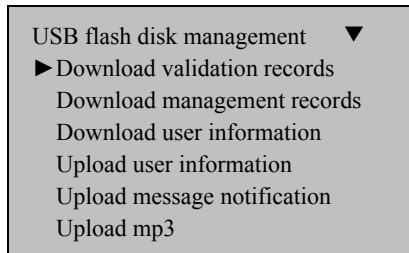

## 4.5 Alarm reset

When the machine is not alarm, the menu has no option of alarming, only the machine begin to alarm, option “alarm reset” shall appears in the menu, select the option to lift the current alarm status.

## 4.6 system information

### 4.6.1 User registered number

### 4.6.2 Fingerprint registered number

### 4.6.3 Checking record number

### 4.6.4 Management record number

### 4.6.5 Used memory

### 4.6.6 Residual capacity

Registered user number

Registered fingerprint number

Checking record number

Management record number

Residual memory



## 4.6.7 Device Information

**Fingerprint capacity**

**Note capacity**

**Management record capacity**

**Memory capacity**

**Leave factory date**

**Serial number**

**Manufacturer**

**Device name**

**Device model**

**Arithmetic version**

**Firmware version**

## 4.7 Query and pivot

### Checking recording Query

Support query according to date, number, name. Display in report forms

### Management recording query



Support query according to date, number, name. Display in report forms

### User registration inquiries

Support number, fingerprint, ID (Mifare) card query. Display in report forms

## 5 Connection mode of external port

### 5.1 description of external port

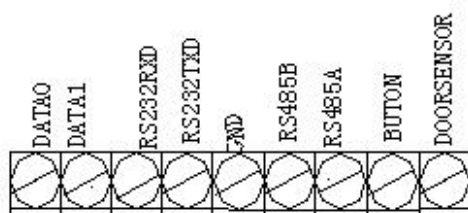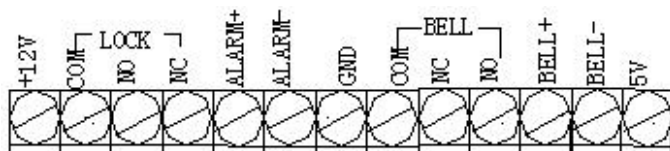


Combination mode of links:


- 1、RS232 connection method—RS232R、RS232T、GND
- 2、RS485 connection method—RS485A、RS485B
- 3、connection mode of Wiegand—GND、DATA0、DATA1
- 4、connection mode of the bell—BELL-、BELL+
- 5、connection mode of OUT switch—BUTON、GND
- 6、connection mode of door contact—DOORSENSOR、GND
- 7、alarm connection mode—ALARM+、ALARM-
- 8、connection line of the lock—LK-COM、LK-NO、LK-NC
- 9、connection line of the bell—BL-COM、BL-NC、BL-NO

### 5.2 Connection mode of lock and electric bell


- 1、connection mode of normally electrified closed lock

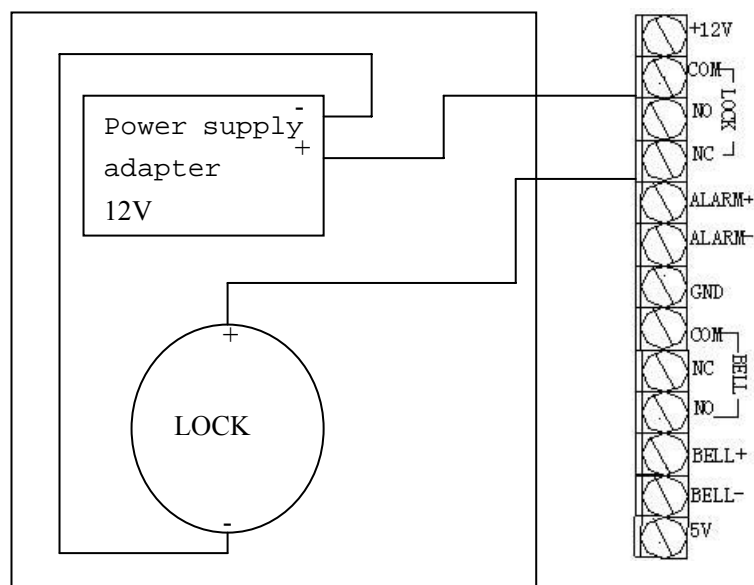


## 2、connection mode of normally electrified opened lock

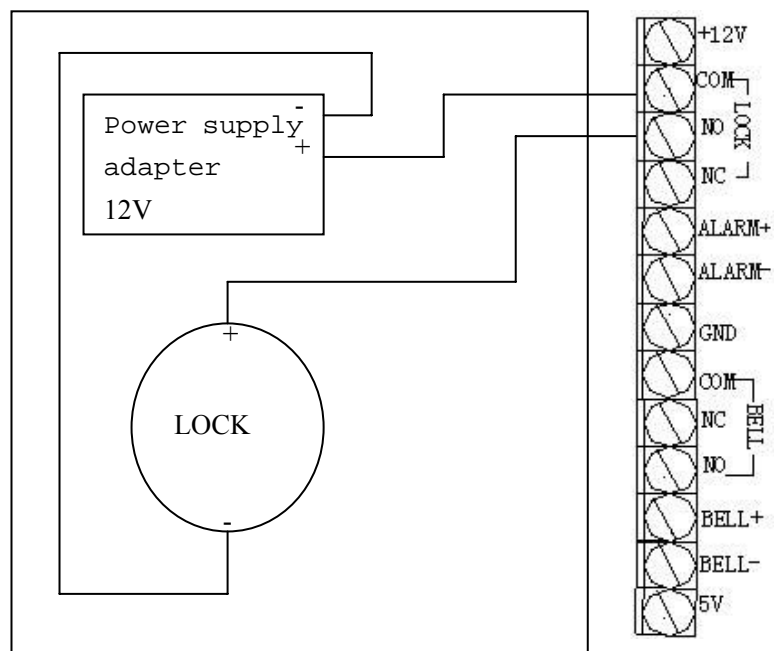

## 3、connection mode of normally electrified closed electric bell

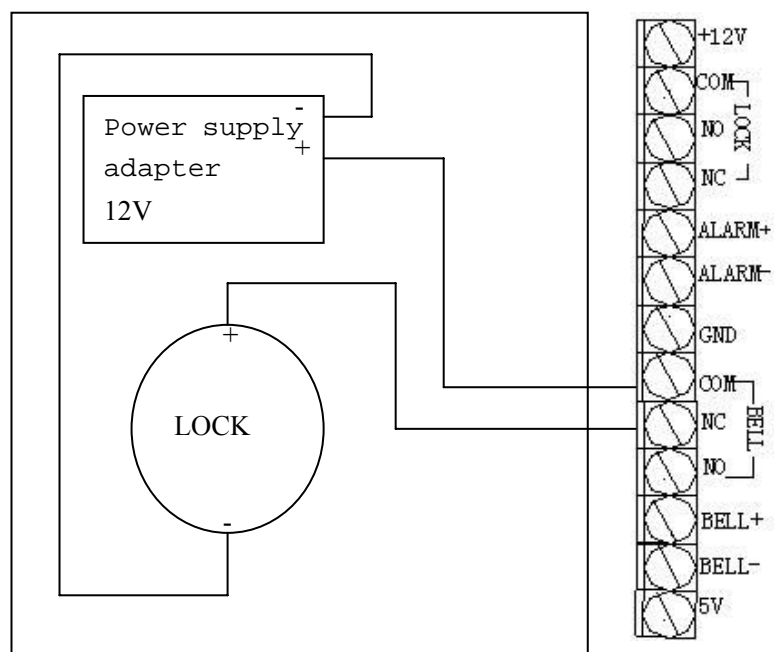


#### 4、connection mode of normally electrified opened electric bell

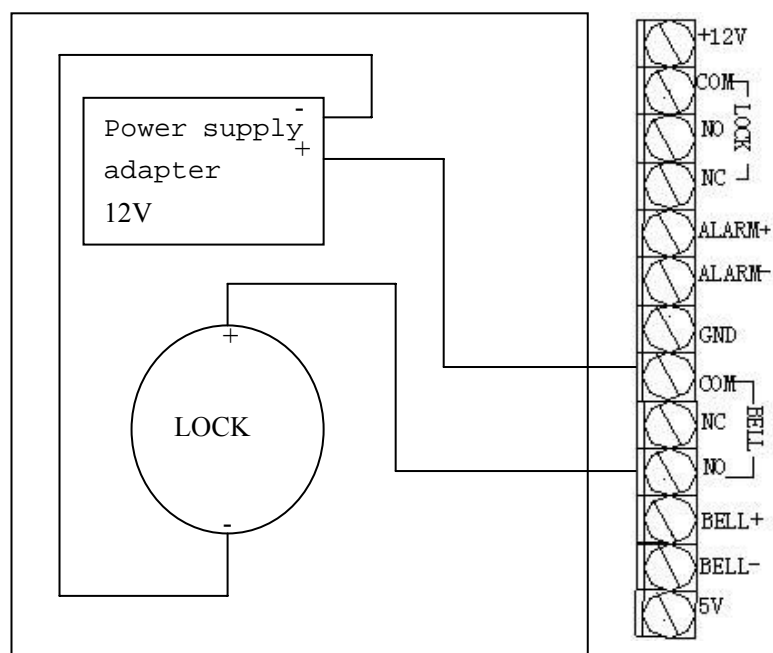

## 6 Networking mode


### 6.1 Split networking mode

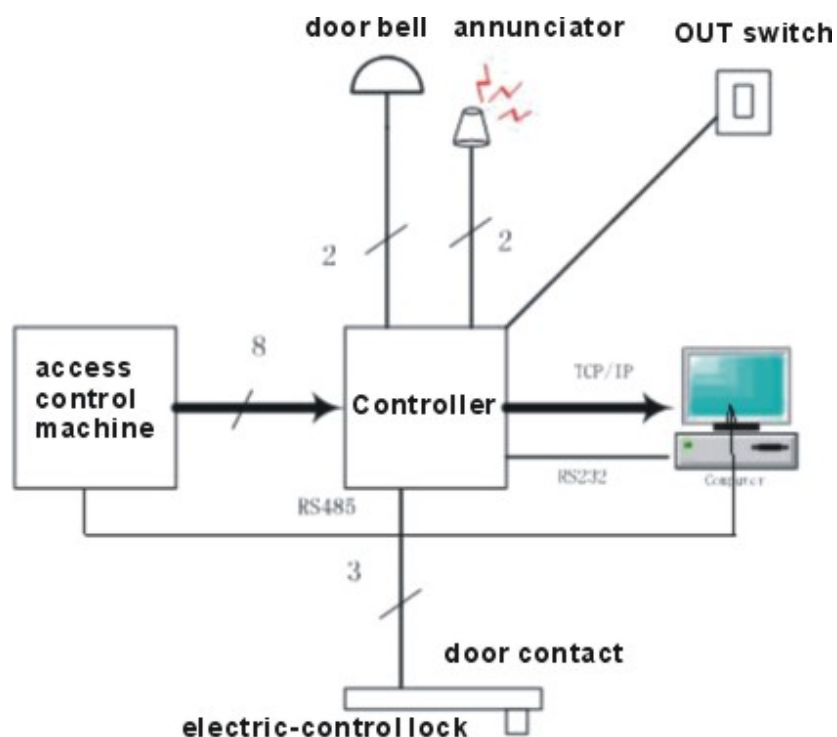


Explanation: Connection mode of extensions, network cable provides with the power supply of terminal unit, the terminal

unit need no Power cell

## 6.2 Networking mode of unity machine

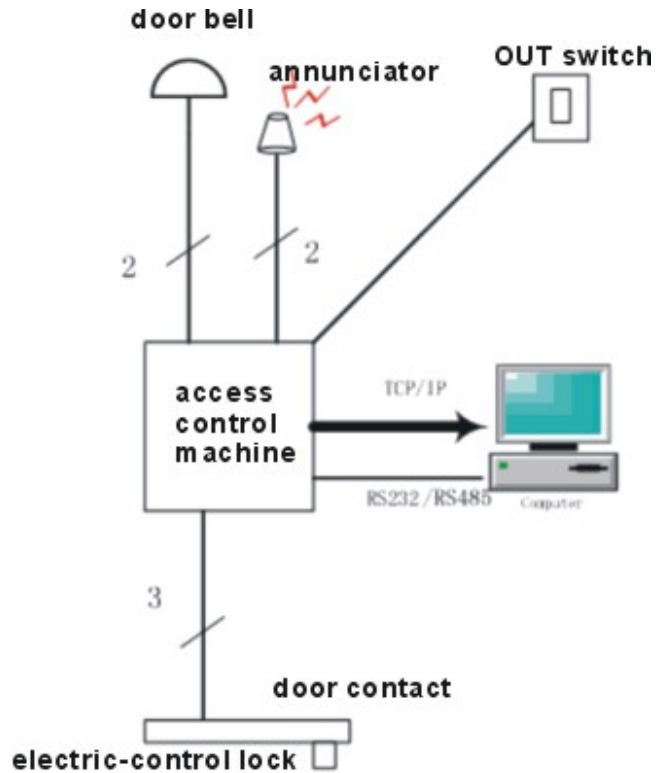


## 6.3 Networking mode of fingerprint read head

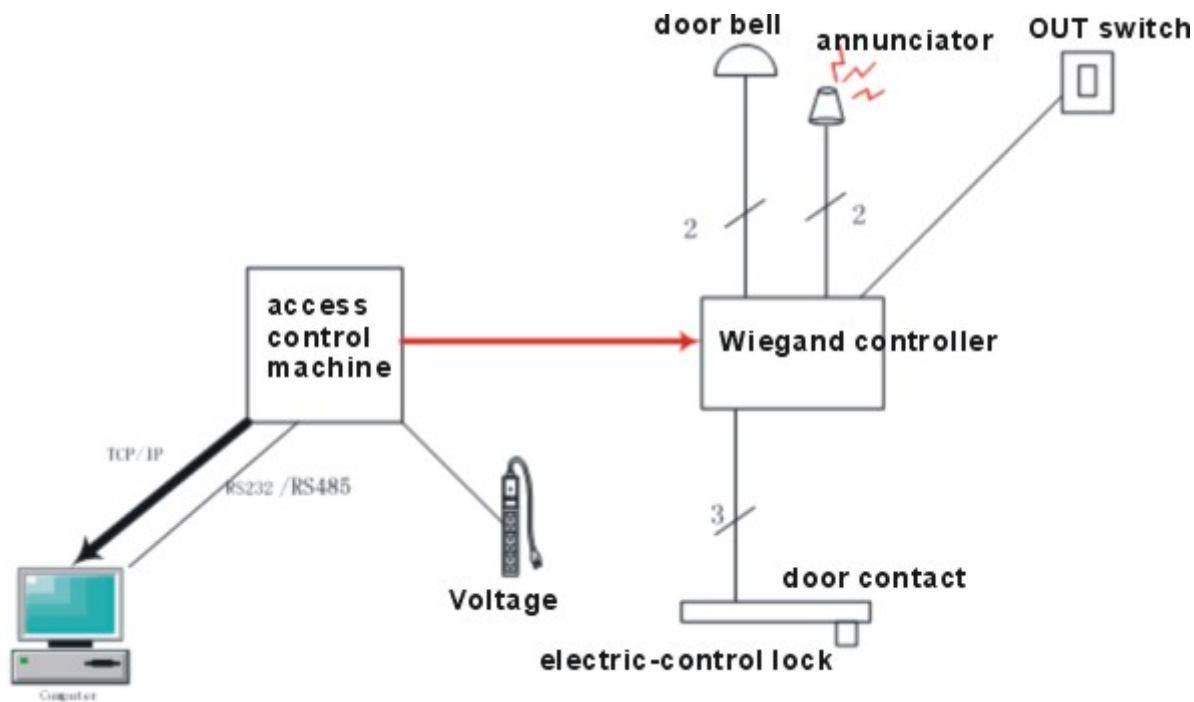


## 7 Transferring line mode illumination of terminal units network

- 1, Terminal equipment has two transferring line methods, one is split transferring line mode, the other is transferring line mode of unity machine.
- 2, In split transferring line mode, communicating with upper computer only has two modes, one is TCP / IP, the other is the RS485. Split transfer mode for networking mode of the split. The network connection process in split mode is network input <math>\phi</math>controller <math>\phi</math>terminal unit. RS485 communicates directly with upper computer by terminal unit.
- 3、the transfer mode of unity machine is used in networking mode of unity machine and Wiegand. In the mode of unity machine, it can communicate with upper computer by TCP/IP、RS485、RS232. When RS485 and RS232 communicate with upper computer, RS485 and RS232 can not be used at the same time
- 4、RS485 can communicate with upper computer, at the same time, it can be used on back function. When user uses RS485 on back function, it can not be connected with upper computer.


### 7.1 Connection mode chart of split transferring line

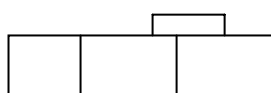


485A/TX+

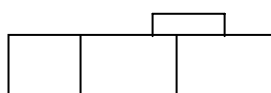


485B/TX-

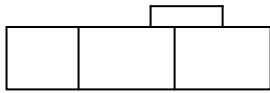

232R/RX+

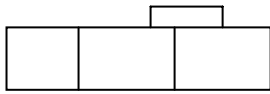

232T/RX-

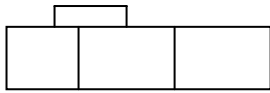


232T/WG1




232T/WG0


## 7.2 Connection mode chart of transferring line of unity machine

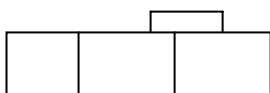


485A/TX+

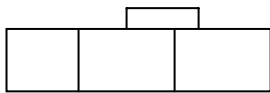


485B/TX-

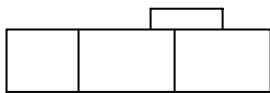


232R/RX+

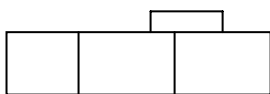

232T/RX-

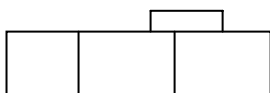


232T/WG1

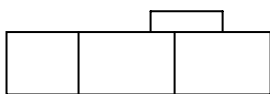

232T/WG0

## 8 Instruction of controller

### 8.1 explanation of controller external port chart

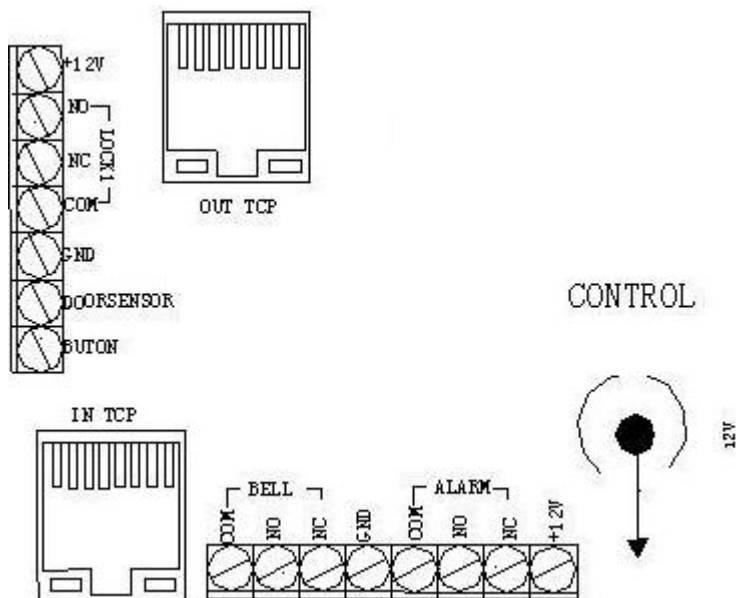

Method combinations of ports

- 1、 OUT TCP output network cable, this port connects with terminal directly
- 2、 IN TCP input network cable, this port connects with Router directly
- 3、 Connection mode of out switch—BUTON、 GND
- 4、 connection mode of door contact—DOORSENSOR、 GND
- 5、 connecting line of alarm—ALARM+、 ALARM-
- 6、 connecting line of electric lock—LK-COM、 LK-NO、 LK-NC
- 7、 connecting line of electric bell—BL-COM、 BL-NC、 BL-NO

note: NO—normally opened connection

NC—normally closed connection

Please refer to 5.2 for the connection mode of electric lock and electric bell

## 9 Basic concepts and explanation

### No trouble found

Fingerprint device identifies the fingerprint of user **A** to user **B**,



## Refuse to found

Fingerprint device refuses the registered fingerprint.

## Permission rank

Serial fingerprint machine has 3 permission levels:

- ☐ User: indicates those who need to establish identity because of some purpose, such as open the door through the device, or record their in and out records
- ☐ Administrator: Implements all other operation except carrying through advanced settings and register users that they have power more than administrator (include administrator).
- ☐ Super administrator: User that can visit all system functions and alter all settings of the system.

**Explanation:** registrar can register administrator and super administrator if having no registration of super administrator, at the same time, if there is no super administrator, the administrator may register super administrator; if have super administrator, the junior administrator can not register senior administrator.

## Mode key

When using fingerprint, different event corresponds to different state, such as work sign in, off sign in, overtime sign in, out, back etc states according to clock in conditions. It also can be divided into go-in, go-off states according to in and out condition of door contact machine.

Some key board has 4 function key (F) or direction key, they all can be as state key to set current status. But these modes are manual, when you need to use some status, you should press corresponding button. In order to reduce manual operation, you may set transferring function (timing status), when arrive at some set time, the machine shall transfer into current state and display in initial interface.

## Message notification

It is divided into public and private message. Set on back-stage of System, and then upload to the fingerprint machine, when start rolling machine, you can see the short message to the public about attendance, it is all along exist. After user input validation fingerprint, there will prompt short message for private people so as to reduce the workload of staff and greatly improve work efficiency.


Send message by aiming at somebody, If an employee's birthday is on October 20, you can set up software in the background on October 20 which issues to him a short message "Happy birthday to you", then upload to the machine, after the staff validates the fingerprint authentication on that day, this message will be displayed on screen.

Send message by aiming at many people, such as hold company meeting on June 19, you can set up in the background, then upload to the machine, and the screen shall display "about XX Conference, Room XX, please participate at XX (time) on that day.

There are two ways for transmitting information, first, one is direct transmission by connecting back-stage system with fingerprint machine, and the other is transmitted from the U disk.

# Host computer and slave

## 1、introduction of host computer and slave

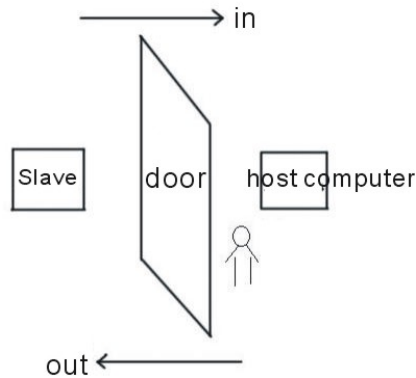

Two machines control one lock, install one machine in the door (hereinafter referred to as the "host"), install the other one out the door(hereinafter referred to as "slave"), at the same time, 2 machines may control the lock only the host connect with the lock. Consequently, solve trivial connection problem of using 2 traditional machines on controlling one lock.

Fingerprint identification, complete to verify user permissions in the host computer, the computer also keep records, slave is fingerprint head or reading module only, carry through fingerprint collection, card reading, and shall need to verify the information, then sent it to the host. Consequently, solve chaos problem of software on managing user information and in and out records of 2 relative machines.

The host and slave machine also has back capabilities, in and out records must be matched, otherwise, it can not open the door, so prevent people who followed by others from entering the door, and prevent the security risks.

## 2、work principle of host computer and slave

Host computer: Carry through fingerprint registration, fingerprint authentication, user permission settings, user permission verification, receive fingerprints or card information collected from extension, and then validate and bring the results back to the slave.

Slave: Only as a fingerprint read head, carry through fingerprint collection, read card, and send message which need to be verified to the host computer, the host can choose whether to display the test results of slave.

## Daylight saving time (time zone settings)

Daylight Saving Time, also known as "Daylight Saving Time", it is a system which regulate local time artificially in order to save energy, during the implementation of this system, the adopted time known as the "daylight saving time." Generally, in summer day comes early, so people regulate one hour ahead of time, then you can get up and sleep early to reduce amount of lighting and make full use of light resources, thereby saving lighting electricity. In autumn, move clock back. Different countries adopt specific regulation about daylight saving time. At present, nearly 110 countries implement daylight saving time each year.