# Honeywell

## **ADEMCO 5869**

# **Holdup Switch/Transmitter**

## INSTALLATION AND SETUP GUIDE

#### **GENERAL INFORMATION**

The ADEMCO 5869 Holdup Switch/Transmitter is a finger-operated RF transmitting device used for activating a holdup signal at the security system control, and/or any other security application. The 5869 is typically mounted under a counter or money draw for inconspicuous operation. When the transmitter is activated, it sends an RF signal to the control panel, which then sends a burglary alarm to the central station.

Once the 5869 trigger (Figure 1) is activated, the supplied reset key K4563 must be used to reset the device. The 5869 also contains tamper switches that are activated either when the cover is removed, or when the unit is forcibly removed from its installation location.

The 5869 has a permanent serial number assigned during manufacture used for enrolling the 5869 with the security system control panel. To enroll the 5869, refer to the respective Security System Control Panel Installation and Setup Guide.

For certified UL installations, the 5869 must be used with the 5881ENHC tamper-protected wireless receiver, mounted inside its plastic enclosure and outside the alarm panel enclosure.

#### **PROGRAMMING**

The 5869 Holdup Switch/Transmitter should be programmed as a 24-hour silent zone type. Refer to the Security System Control Panel Installation and Setup Guide for programming instructions.

#### NOTES:

- During programming of the control panel, the 5869 Holdup Switch/Transmitter should be treated as "RF" (i.e., supervised RF) Type.
- The 5869 is one closed input loop zone (loop 1).

#### MOUNTING

Mount the 5869 under a counter or money drawer for easy access by the cashier. Refer to the figure and steps that follow for typical mounting installation.

Before mounting the 5869 permanently, perform Go/No Go tests to verify adequate transmitter signal strength at desired mounting location (refer to the Security System Control Panel Installation and Setup Guide).

- **1.** Install the battery into the battery holder observing correct polarity as shown in Figure 2.
- 2. Position the case to the desired location and install one No. 6 x ¾ screw (supplied) at the breakaway tamper release hole as shown in Figure 3.
- **3.** Secure the cover to the case with the two screws (No 6 x 1/2) as shown in Figure 3.
  - **IMPORTANT:** To prevent damage to the case, do not over tighten the cover screws.
- 4. Secure the case with the cover to its mounting location using the two screws (No.  $6 \times 2$ ) supplied as shown in Figure 3.


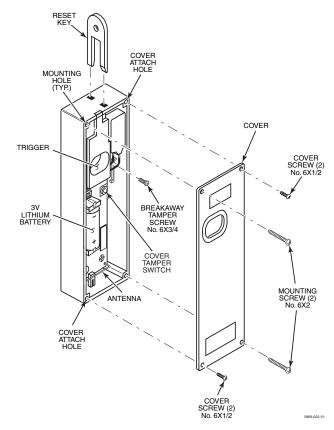


Figure 1. 5869 Holdup Switch/Transmitter Details

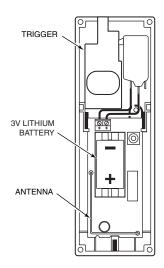

# NOTE: THE NEGATIVE ( – ) SIDE OF THE BATTERY MUST FACE THE TRIGGER

Figure 2. 5869 Battery Installation

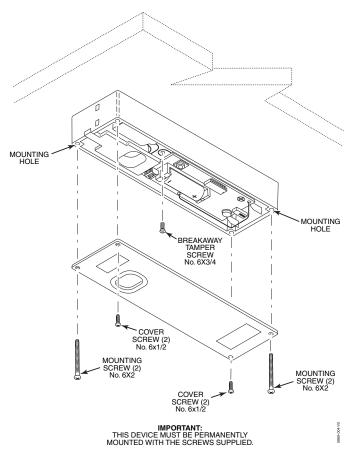


Figure 3. Typical Holdup Switch Installation

#### **BATTERY REPLACEMENT**

#### **BATTERY CAUTION:**

Risk of fire, explosion, and burns. Do not recharge, disassemble, heat above 100°C, or incinerate. Dispose of used batteries promptly and properly. Keep away from children.

**IMPORTANT:** When servicing the device for battery replacement, note that with the mounting screws removed the case is held in place by the tamper release tab. Exercise caution not to jar the case while replacing the battery, possibly breaking the Tamper breakaway tab.

Remove the two screws securing the cover and two mounting screws as shown in figure 1.

Use care not to bend the antenna while attempting to remove or install the battery.

- Remove faulty battery and dispose of properly.
- Observing correct polarity (negative side of the battery facing the trigger), insert the battery into the battery holder as shown in Figure 1.
- Reinstall two cover screws and two mounting screws as shown in Figure 1.

#### **SPECIFICATIONS**

1-15/16"W x 5-15/16"H x 1-3/16"D **Physical** 

(50mm x 150mm x 30mm)

Battery 3-volt Lithium. ADEMCO 466, Duracell

DL123A, Panasonic CR123A, Varta CR123A.

Frequency 345MHz

Supplied, Part Number K4563 to order Reset Key:

separately

Agency: UL 636 – Holdup alarm units and systems



#### TO THE INSTALLER

Regular maintenance and inspection (at least annually) by the installer and frequent testing by the user are vital to continuous satisfactory operation of any alarm system.

The installer should assume the responsibility of developing and offering a regular maintenance program to the user, as well as acquainting the user with the proper operation and limitations of the alarm system and its component parts. Recommendations must be included for a specific program of frequent testing (at least weekly) to insure the system's operation at all times.

#### **FCC STATEMENT**

This device complies with Part 15 of the FCC Rules and RSS210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### FEDERAL COMMUNICATIONS COMMISSION (FCC) PART 15 STATEMENTS

The user shall not make any changes or modifications to the equipment unless authorized by the Installation Instructions or User's Manual. Unauthorized changes or modifications could void the user's authority to operate the equipment.

#### **CLASS B DIGITAL DEVICE STATEMENT**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **INDUSTRY CANADA (IC) STATEMENTS**

This device complies with RSS210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

### **WARRANTY INFORMATION**

For the latest warranty information, please go to: www.honeywell.com/security/hsc/resources/wa

# Honeywell

2 Corporate Center Drive, Suite 100 P.O. Box 9040, Melville, NY 11747 Copyright © 2009 Honeywell International Inc.

www.honeywell.com/security



K5299V4 2/10 Rev. A