

mellerware®

TRENDS FOR LIFE



sirion wall mount heater



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS

m
900 W


CE
2 YEAR
GUARANTEE

Model:
3 5 6 0 0

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year
guarantee

INSTRUCTIONS FOR USE:

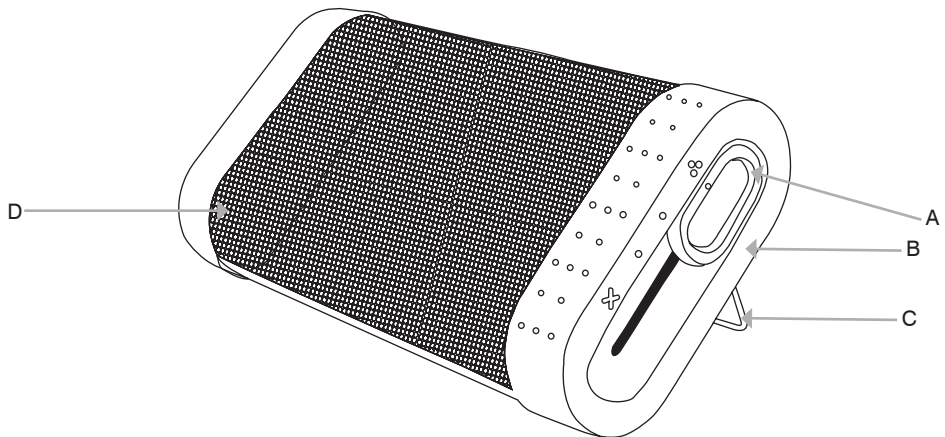

Sirion Wall Mount Heater 35600

Dear customer,
Many thanks for choosing to purchase a Mellerware brand product.
Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

Description

- A Sliding heat selector
- B Housing
- C Floor stand
- D Protective mesh grill

IMPORTANT SAFETYGUARDS

Please read and save these important safety instructions when using electrical appliances. Basic precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons. Including the following:

1. The packaging materials contain plastic, nails, etc. which may be hazardous and therefore should not be left within reach of children.
2. Do not use your heater in the presence of explosive or flammable substances.
3. Warning: In order to avoid overheating, do not cover the heater.
4. Do not place the heater near or below a wall socket.
5. Do not cover or obstruct protective mesh grill.
6. Do not insert foreign objects through the intake or discharge grills.
7. Ensure there is a secure and tight connection between the plug and the wall socket to avoid over heating or malfunctioning of the plug.
8. To unplug the heater, grasp the plug and pull it out from the wall socket. Never pull on the cord, because there is danger of damaging the cord and even electric shock (even if the heater is switched off).
9. Maintain a sufficient distance between the heater and objects. This will allow the hot air to be properly circulated, and avoid over heating of the heater and the surrounding environment. (1m distance is recommended)

10. Avoid installation behind a door.
11. Do not use any accessories not recommended by the manufacturer, as this could damage the heater and therefore void the guarantee.
12. As with all electrical appliances, this heater should never be used under conditions where it may be immersed, or come into contact with water. Do not install the heater in the immediate vicinity of bath tubs, showers, wash basins, swimming pools, etc.
13. Do not operate if this unit is damaged. Return the heater to the manufacturer or approved service agent for repairs. Do not repair yourself as this will void the guarantee.
14. Unplug before cleaning.
15. If the power supply cord is damaged, it must be replaced by the manufacturer or approved service agent.
16. When not in use, store your heater in a cool dry place.
17. The heater is intended for normal domestic use only.
18. This appliance is intended for adult use. Ensure that this product is not used by the disabled, children or people unused to its.
19. Do not allow the power cord to hang or to come into contact with the hot surfaces of the appliance
3. The housing may be wiped with a slightly damp, lint free cloth.
4. If necessary, dust particles accumulated in the air outlet openings may be removed with a vacuum cleaner.

SPECIFICATIONS

Voltage: 220-240V

Frequency: 50Hz

Total input power: 900W

FUNCTION/HEAT SELECTOR

0 OFF

I 300W

II 600W

III 900W

To select the desired heat setting, slide the function/heat selector to the level that you are most comfortable with, according to the functions above.

CLEANING AND CARE

1. Before cleaning the heater, ensure it is disconnected from the wall socket, and has cooled down completely.
2. To avoid the risk of electric shock, do not clean the heater with water and do not immerse it in liquid.

creative housewares

27 Nourse Avenue Epping 2 Cape Town
P.O. Box 975 Eppindust 7475 South Africa
Tel: +27 21 534 8114 Fax: +27 21 534 8086
Service Centre Share Call: 086 111 5006
web: www.creativehousewares.co.za