





# THREE Q



## JOEMEEK User Guide

visit us on the web at [joemeek.com](http://joemeek.com)



Place  
Stamp  
Here



DISTRIBUTED BY PMI AUDIO GROUP  
1845 W. 169th Street  
Gardena, CA 90247  
USA  
**JOEMEEK**



Joemeek is manufactured and marketed under the direction of:

#### **PMI AUDIO GROUP**

**USA:** 1845 W. 169th Street

Gardena, CA 90247

**toll free:** 877-563-6335

**fax:** 310-323-0950

**email:** info@joemeek.com

**UK:** P.O. Box 358  
Torquay, Devon TQ2 5XS  
**tel:** +44 (0) 180 3215111  
**email:** eusales@joemeek.com

Written by Allan Bradford, MSc

€

## Contents

<b>threeQ Controls at a Glance</b> .....	5
<b>Overview</b> .....	6
Preamplifier.....	6
Insert Point.....	7
Compressor.....	8
Meequalizer.....	10
Mix Input.....	11
Output Stage.....	11
<b>Using the threeQ</b> .....	12
Getting Connected.....	12
Using the Preamp.....	12
Using the Compressor.....	13
Using the Meequalizer.....	13
<b>Troubleshooting</b> .....	14
<b>Technical Specification</b> .....	15

## JOEMEEK reborn – the legend grows



The Next Generation of Joemeek studio processors represents a quantum leap in the history of the Joemeek legend. Long regarded for its "Big Sound", the original Joemeek gear was both revered and reviled for its somewhat "quirky" nature. Now we have taken the best of what made the Joemeek products sound great, refined it, distilled it, added to it and repackaged it.

Properly and robustly engineered for predictable, controllable performance, the new range retains the famous Joemeek sound, with its wide, flat frequency response extending from subsonic to ultrasonic. It also uses genuinely low noise circuitry, with lots of headroom (immunity to overload). Accurate calibration and metering, together with clear panel labelling, give you complete confidence in what's going on. While some equipment pays lip-service to quality and "professional rules" but fails to deliver, the Next Generation of Joemeek products are founded on good solid electronic and audio engineering, and withstand direct comparison with the very best names in mixers and outboard gear.

The Joemeek range provides everything you need to get your performance onto tape/disc.

## About the Designer

The Next Generation of Joemeek has been completely re-engineered by renowned audio electronics consultant Allan Bradford. With his background in physics and 30 years experience with the design of instruments, mixers, processors and amplifiers, Allan's unique range of expertise ensures that Joemeek remains at the forefront of music technology.

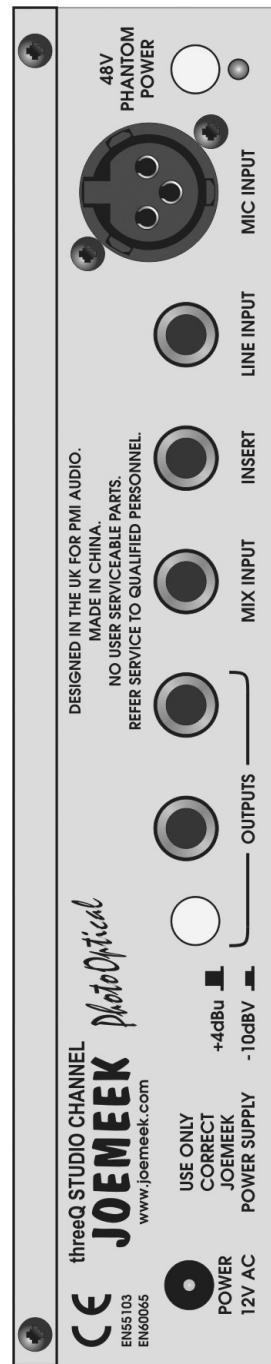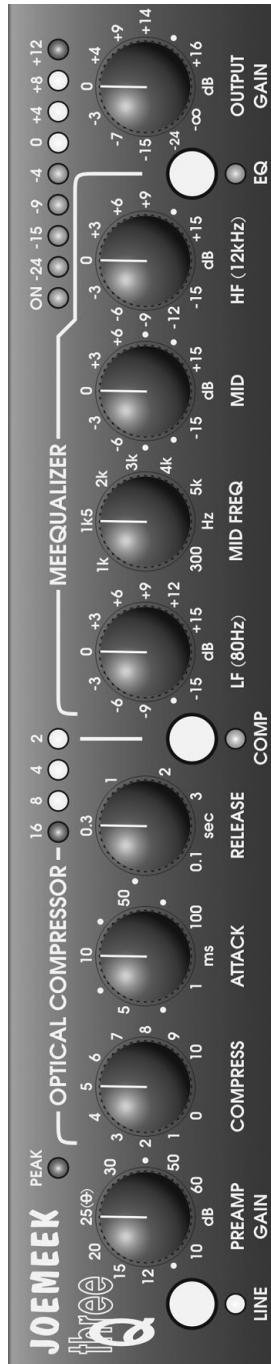

### threeQ Controls at a Glance

**PREAMP GAIN** - sets the amount of audio amplification. Too little gain and the sound will be too quiet; too much and the signal could become distorted.

**PEAK LED** - lights 6dB below clipping.

**LINE switch** - selects the Line (jack) input instead of the Mic (XLR) input. The LED lights when active.

**COMPRESS** - sets the level of signal (or "Threshold") above which the signal starts to be compressed.

**ATTACK** - sets how quickly the compressor responds to peaks above threshold.

**RELEASE** - sets the time during which the signal returns to its normal size after compression. In general, the longer the time, the less obvious the compression.

**COMPRESSION METER** - 4-Led bargraph indicates the amount of gain reduction in dB, which is taking place at any given moment.

**COMP switch** - turns the compressor on. The LED lights when active.

**LF** - controls the volume of Low Frequencies or "Bass" in the audio spectrum. 15dB of boost or cut is available around 80Hz.

**MID** - controls the middle frequencies in the audio spectrum. 15dB of boost or cut is available at the selected frequency.

**MID FREQ** - sets the frequency at which the MID control operates, anywhere from 300Hz to 5kHz.

**HF** - controls the volume of the High Frequencies or "Treble" in the audio spectrum. 15dB of boost or cut is available around 12KHz.

**EQ switch** - turns the equalizer on. The LED lights when active.

**OUTPUT GAIN** - is the volume control or "Fader" for the outputs of the threeQ.

**VU METER** - 8-Led bargraph shows the output signal level in dB at any given moment.

**48V PHANTOM POWER switch** - when pressed in, feeds 48V phantom power to the microphone XLR connector. Most condenser type microphones require phantom power to operate.

**+4dBu/-10dBv switch** - selects the output operating level of the threeQ, either to the professional +4dBu level, or to the -10dBv semi pro level.

The JOEMEEK threeQ is like having one channel of a professional recording studio in a small box. It takes a microphone or instrument, amplifies it, compresses and equalizes it ready to be recorded. Simple to use yet extremely powerful, the threeQ will bring out the best in any microphone or instrument and give the gloss of a professional studio production to all your performances. As well as recording it will also be found useful for live work.

#### *Think of the threeQ as four separate items of equipment:*

- The Preampifier
- The JOEMEEK Optical Compressor
- The Meequalizer
- The Fader

### Preampifier

This is the all-important front end to the threeQ. Its job is to accept any type of microphone, instrument or other source of audio signal, and make it loud enough; microphones often need rather a lot of amplification, while guitars, keyboards and CD players need less. Mics need to be connected to low impedance inputs, while instruments prefer high impedance inputs. To ensure correct impedance matching, the inputs are split into an XLR connector for Mics, and a jack "Line" connector for everything else. A switch on the front panel decides which input connector is active. The LED underneath the switch lights to show that the Line input (jack) is selected.

When using dynamic or ribbon mics, do not turn this on. It probably won't do any harm but it certainly won't do any good, so leave it off! Consult the microphone handbook if you are unsure what kind of mic you have.

There is just one other control, labelled "Input Gain", which covers a range of amplification from 10dB to 60dB. In many other preamps the action of the Gain control is rather uneven, with the 40dB to 60dB range being crammed into the last 1/6th of a turn. All Joemeek preamps use a specially designed control that ensures smooth operation over the whole range of rotation. The (θ) symbol next to the 25dB mark, means unity gain, or 0dB, for a signal in the Line input. Hence for Line inputs the range of gain adjustment either side of this mark, is +35dB, -15dB.

The PEAK LED lights 8dB below clipping, so occasional brief flashes are OK but if it's on all the time you need to back the Input Gain off!

### TECHNICAL STUFF

Very low noise - does it matter? Yes and no, it all depends what you are doing - what really matters is "signal-to-noise ratio". All electronics produce a certain amount of background noise - it's in the nature of things. Providing there is only a relatively small amount of noise, the signal will cover it up, or "mask" it. So providing the signal is much bigger than the noise, you won't be aware of the noise. So in other words the "signal-to-noise ratio" needs to be a big number, ideally such as 80dB or 90dB.

So how do you achieve that in practice? The trick is to keep the microphone as close to the sound source as possible without overloading it, so as to get as much signal out of it as possible. Then you set the Gain control to give only as much gain as is needed to get a decent level into the recorder.

Of course when there is no signal going on, you may hear the background noise of the electronics. In that case, given the amount of gain in the studio monitoring system, this noise "floor" should ideally be in the region of -80dBu or lower, in order for it not to be noticed.

In other words:

Switch out (LED off) = "Mic"  
Switch in (LED on) = "Line"

Both Mic and Line inputs are electronically balanced. Note: although the Line input is not normally used for microphones, it can be suitable for some high output unbalanced microphones, such as battery powered Electret types.

The Line Input (jack) is balanced and wired as follows:

Tip: + (hot)  
Ring: - (cold)  
Sleeve: ground

The Mic Input (XLR) is balanced and wired as follows:

Pin 2: + (hot)  
Pin 3: - (cold)  
Pin 1: ground

### PHANTOM POWER

Most high-quality studio mics are "Phantom powered", which is to say they have electronics inside them, which get their power from the preamp. Most mics require a supply of 48 Volts, so Phantom Power is often labelled "48V". There is a switch on the back of the threeQ (next to the XLR mic connector) to turn this power on or off. A red LED lights when this power is on. When switching the Phantom Power on, quite a loud thump may be produced, so it is a good idea to turn down the Output Gain (or to momentarily select the Line input), when pressing the switch.

The threeQ microphone preamplifier uses state-of-the-art electronics and has an equivalent input noise of around -128dBu (with 150ohm input load). Despite all the hyperbole and obfuscation, the theoretical best possible performance for silicon-based electronics is about -132dBu. So the preamplifier design used in the threeQ and all other NextGen Joemeek products approaches this limit. To improve significantly on this would require highly specialised electronics and probably a vat of liquid Nitrogen to cool it!

The maximum gain available from the preamp is 60dB, in which case the noise floor will be -68dBu. This is actually quite noisy - if you record that noise onto a digital recorder and play it back you can definitely hear it. In practice of course, you do not record and play back "silence" and the rest of the mix will probably be more than 70dB louder than this noise and will mask it completely. Even so it is generally a good idea not to use gains greater than 40dB or 50dB and indeed, it should rarely be necessary to do so.

### Insert Point

This is simply an unbalanced "Send and Return" jack on the rear panel. It allows you to patch any other pieces of equipment into the signal path, such as an effects processor or noise gate. To use it you will need a "Y" lead wired as follows:

Tip: send  
Ring: return  
Sleeve: ground

When no jack is inserted, the socket is internally linked, or "normalised", so that the signal flows uninterrupted. Note that the Insert Point is after the Preamp but before the Compressor and EQ.



The hardest device to understand, yet one of the most useful, the PhotoOptical Compressor is what gives Joemeek products their unique character. Its job is to make quiet sounds louder and loud sounds quieter, or in other words to reduce the dynamic range of the programme material. It's a bit like manually riding the volume control, except the compressor does it automatically, responding far quicker and more accurately than you ever could by hand. The compressor is applied in several ways:

### 1. Make Sounds Stand Out

Because compressors make loud sounds quieter, you can boost the volume of the quiet bits without the loud bits getting even louder. That means you can raise the average level of an instrument or vocal in the mix, which has the effect of lifting it and bringing it forwards. This can actually improve vocals for example, bringing them out in front of a mix, making them sound denser, more even, and more confident!

### 2. Crank Up The Volume

Raising the average volume of whole mixes means they can be heard in noisy environments, such as vehicles and factories. Boosting the average level is what makes radio stations sound LOUD and the same technique is used on TV commercials too, which is why they always seem annoyingly louder than the movie you were trying to watch!

### 3. Protection

Fast response times are generally used to control brief transients. In other words if an occasional peak sticks its head above a maximum permitted level, the compressor clobbers it; this is known as limiting and a compressor designed solely for this purpose is known as a Limiter. Limiters are primarily used to protect recorders and monitor systems from overload, radio transmitters from overmodulation, etc. The Joemeek compressor is not primarily intended for this purpose as the Attack is not really fast enough to satisfy

### Compression Ratio

What?? OK, it's simpler than it sounds. If the input gets 10dB louder but the output only increases by 5dB then the compression ratio is "2 to 1". If the input goes up 10dB but the output only goes up 1dB, then the compression ratio is "10 to 1". In a theoretically ideal compressor, this ratio is the same for any size of signal above the threshold but for that to be true, the gain cell and its control circuitry must be perfectly linear over a very wide range. In practice only compressors based on VCAs and digital potentiometers are likely to behave in this way.

Some compressors have a control to set the ratio anywhere between 1:1 (ie: no compression), and 20:1 (which would be regarded as a "brick wall limiter"). In the threeQ the "Slope" or "Compression Ratio" is fixed at 5:1. This is a good compromise between being gentle enough for vocals and hard enough for drums and guitars. However that's not all there is to it.

### Variable Ratio

In the Joemeek optical compressor the compression 'threshold' is not clearly defined and the compression ratio varies with the amount of compression applied. For signals only just exceeding threshold, the ratio is little more than 1:1. As the compressor is driven harder, the ratio rises to 5:1, at least up to a point. It is a feature of the Joemeek compressor that the compression ratio actually reduces again during large transients and, adjusted correctly, this helps to retain brightness that is often lost with other types of compressor. This is why vintage compressors often sound more lively than their modern counterparts.

### Controls

"COMPRESS" sets the level of signal (the "Threshold") above which the signal starts to be compressed. Turning the COMPRESS control clockwise lowers the compression threshold, and drives the compressor harder.

radio station requirements, although it is generally good enough to protect recorders and monitors, where the effect of transients is less critical. Normally you should not hear a limiter operating but if it is driven hard constantly, it can render a mix somewhat flat and lifeless.

### 4. Accommodation

The dynamic range of the human ear is phenomenal, extending from the threshold of hearing (eg: a pin dropping onto soft carpet) to threshold of pain (eg: standing next to a jet aircraft) - some 120dB in all. By contrast, vinyl, cassette tape and radio broadcasts all have a dynamic range of about half that. Since the advent of the CD, the dynamic range of the medium is far less of an issue and compressors are used more to give a certain "feel" to a production. AM and FM radio however, is still very much compressed to fit its restricted dynamic range.

### 5. Modification

A compressor can change the dynamics, or "envelope" of the track and it is here that the Joemeek Compressor excels!

### Types of Compressor

Most compressors work in essentially the same way: a volume-controlling element or "gain cell" is inserted into the audio signal path. The level of the signal at any given moment is measured and that information is used to control the gain cell. So if the signal gets bigger, the volume is turned down. Various types of gain cell in common use include FETs, valves (tubes), light-dependent-resistors (photoelectric), digital potentiometers and voltage-controlled-ampifiers, better known as VCAs.

The threeQ Compressor is a unique recreation of the sort of photoelectric compressor used by record producer Joe Meek in the 1960's. Using modern components for consistency and reliability, it nonetheless reproduces faithfully the same punchy sound that was so characteristic of the pop records of that time.

'ATTACK' sets how quickly the compressor reacts to peaks above threshold. Turn this control anti-clockwise for a quick response. Slower (clockwise) allows the fast leading edge of percussive sounds to pass uncompressed for a moment, before the compressor reacts to control the gain. This example of 'changing the envelope' of a sound exaggerates the percussive nature of drums and other instruments. Faster attack times (anti-clockwise) are used where the compression needs to be less obvious. For vocals the Attack needs to be around 10msec for a natural sounding result.

'RELEASE' sets how long the compressor goes on squashing the sound for, once the signal has dropped below threshold. If it stopped instantly there would be very noticeable modulation or "pumping" of the sound. So we want it to stop compressing less abruptly and that is what the Release control is for. Generally, the longer the Release time, the less obvious is the compression. Of course some "pumping" might actually be desirable, as a special effect and that is another way in which the envelope of a sound can be modified. The threeQ Release is variable from 100mS up to 3 seconds giving a wide variety of effects.

How the compressor behaves actually changes with programme content and volume. So experiment with the controls with different kinds of material to discover the range and depth of effects that can be achieved. The "COMP" in/out switch allows comparison between compressed and uncompressed sound (green LED lights when active).

The Compressor is after the Preamplifier and the Insert Point, and before the Mequalizer.

The threeQ "Meequalizer" is a highly effective and musically rewarding three-band equaliser, or tone control system. Each stage allows boost or cut of up to 15dB around the frequency in question. The "EQ" switch turns the equalizer on, and the green LED lights when active.

The LF or bass section is centred on 80Hz, the frequency most effective in bringing out bass lines and kick drums when boosted. Cutting can be used to reduce unwanted LF noise, such as hum or rumble.


The HF or treble section is centred at 12kHz and boosting this band gives a sense of "air" or "sparkle" to vocals, instruments and mixes, without boosting harsh upper-mid frequencies. Alternatively with bass instruments, cutting will reduce HF noise such as hiss and crackle.

The Mid band can be tuned or "swept" anywhere between 300Hz and 5kHz (at either end it will also have some effect on frequencies below 300Hz or above 5kHz). This effectively covers the whole of the important range of mid frequencies. It may help to think of it as like a graphic equalizer, only instead of lots of frequency bands, you have just one, but it can be moved to cover any given frequency band. Cutting the Mid can reduce sibilance, boominess or other annoying resonances. Boosting can bring out the body of a vocal, or the harmonics of a guitar or any other instrument. Increasing or reducing the "presence" of an instrument or vocal in this way, can appear to move the sound forwards or backwards in a mix.

The Meequalizer is after the Preamplifier, the Insert Point and the Compressor.

## Technical stuff

Each section of the Meequalizer has a peaking or "bell" shaped frequency response, which will be found to be musically more satisfying than conventional "shelving" equalisers. The use of bell curves at LF and HF also avoids boosting subsonics and ultrasonics which can have adverse effects on other studio equipment, such as recorders, monitor amplifiers and speakers. The 'Q' value of the peaking filters is 0.9 (or 1.6 octaves). Zero phase distortion ensures the best possible audio coherence.

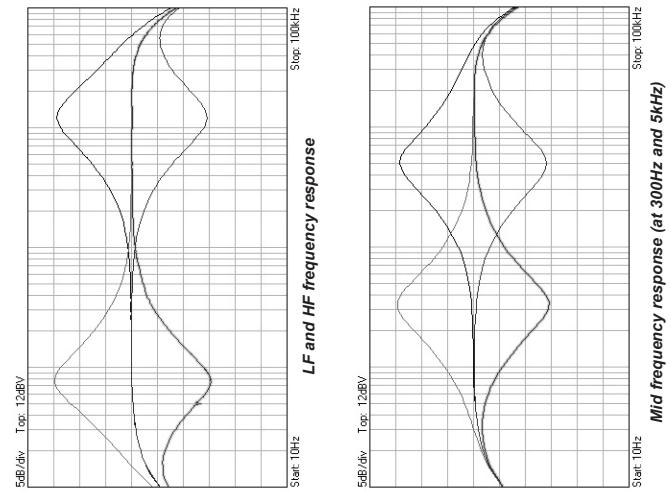

## Mix Input

This is a jack on the rear panel, which allows you to connect a second audio source (for example another Joemeek threeQ!). The Mix input comes after the threeQ's Preamp, Compressor and Meequalizer, but before the Output Gain control. So the second source is not affected by any of the threeQ's signal processing but is mixed with the material which has been processed by the threeQ. The usual application for this is in overdubbing in simple recording setups.

The Mix Input is balanced and wired as follows:

- Tip: + (hot)
- Ring: - (cold)
- Sleeve: ground

Another application is in a simple live performance setup. For example one threeQ could process a vocal while a second processed a guitar. The two signals would then be mixed before feeding a PA slave amplifier. Perhaps a drum machine would also be added in to the spare Mix input on the first threeQ. Voila! A complete performance mix without a mixer. In fact three or more threeQ's could be "daisy-chained" in this way, by connecting the output of the first to the Mix input of the second and so on. The Output Gain control on the last threeQ in the chain provides the overall volume for the PA.

## Output Stage

This output volume control provides up to 16dB of gain, which may be useful when a lot of compression is going on. It also goes right down to nothing and so acts as a fader to fade a sound out completely.

## VU METER

The LED VU Meter shows signal level at the outputs, after the Output Gain fader. It covers the range -24dB to +12dB in eight steps. Note that this is relative to the selected operating level of "+4dBu" or "-10dBv". In other words if you have selected "-4dBu" and the meter reads "0", then you have +4dBu coming out of the output sockets. If you have selected "-10dBv" and the meter reads "0", then you have -10dBv coming out of the output sockets.

## CONNECTORS

Two identical paralleled output jacks are provided, so you can simultaneously feed (say) a recorder and a monitor amplifier. The adjacent switch selects the output operating level to either +4dBu (suits most professional studio equipment) or -10dBv (suits semi-pro or hifi equipment). Check with the handbook for whatever you are feeding, to find out which level is required.

These outputs are balanced and wired as follows:


- Tip: + (hot)
- Ring: - (cold)
- Sleeve: ground

**Balanced or Unbalanced**  
Here's the clever part: to run unbalanced, just plug in a mono jack plug. This increases the gain of the "+" signal by 6dB, so there is no drop in level compared with balanced gear. Note that in the threeQ these two outputs are not isolated from each other, so unbalancing one will unbalance the other one as well.

**Technical Stuff**  
All outputs on all NextGen Joemeek products are properly balanced, which is to say there is a signal on both pins! In this way the maximum possible common-mode rejection of interference, can be achieved at the receiving end.

**GETTING CONNECTED**

The figure shows the threeQ being used instead of a mixing desk in a recording setup

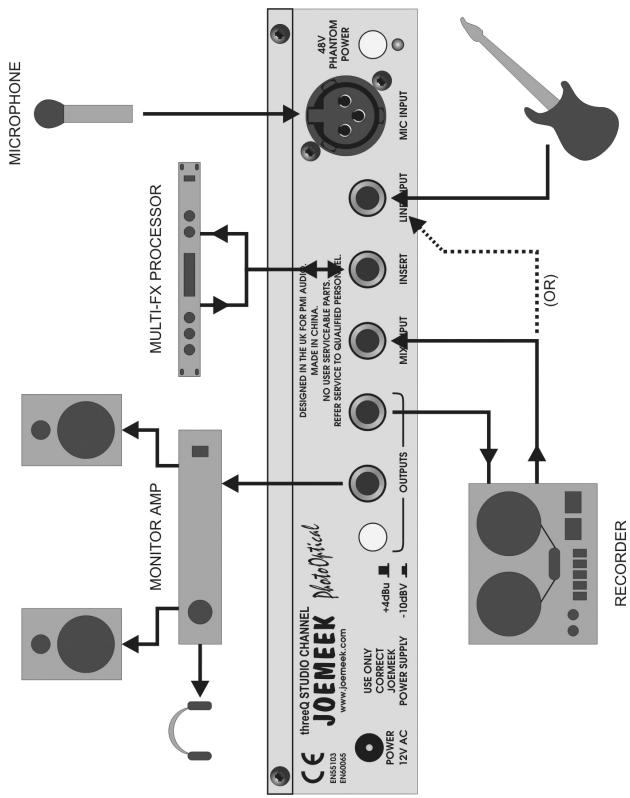**Using the Compressor**

Start with the Compressor and Meequalizer off and adjust the input and output gain so that the VU Meter reads around 0dB.

Set 'COMPRESSION' and 'ATTACK' fully anti-clockwise and 'RELEASE' at mid-position. Press the 'COMP' push-button and turn up the 'COMPRESSION' control until the compressor GR meter starts to read 2dB or 4dB on audio peaks. You should now be able to hear the compressor working as the volume diminishes. Use the Output Gain control to restore the signal to its previous (uncompressed) level. Try slowing the Attack and listen for percussive sounds getting louder. Reducing the Release time should emphasise this even more and the compressor should start to "pump" audibly.

The overall result of compression depends on the combined settings of the Input and Output Gain, Compress, Attack and Release controls. Experiment with different combinations to discover what best suits the material you wish to compress. Watch the GR meter and don't overdo things - it's possible to apply 20dB of gain reduction before you realise it!

Use the 'COMP' switch to make comparisons between compressed and uncompressed signals.

**Using the Meequalizer**

Always start with the Meequalizer boost/cut controls (LF, MID and HF) set to "0" (the control knobs set vertically, in their centre notches). This setting is also known as "flat".

**A microphone is connected to the Mic Input**

- An additional source is being fed into the Line Input
- The insert point is being used to divert the preamplified signal through an external effects processor
- The recorder output is connected to the Mix Input for monitoring and overdubbing
- Previously recorded tracks may also be replayed via the Line Input, to permit compression and equalization

**POWER SUPPLY**

Connect the threeQ Power Supply to the AC connector on the rear panel and switch on the mains supply. NB: Use only the 12V ac mains adaptor supplied. Use of any other power supply may damage the threeQ and will invalidate the warranty.

**Using the Preamp**

Turn the 'INPUT GAIN' control to minimum and connect the input source. If you are using a condenser microphone, remember to switch on the 48V Phantom Power. Set the 'OUTPUT GAIN' to '0dB'. Turn up the 'INPUT GAIN' until the microphone sound registers on the LED VU Meter, adjusting it so that the yellow "0" or "+4" LEDs light on sound peaks. When the red LED (labeled "+12") lights, the threeQ is within 4dB of clipping. This may therefore be regarded as a "Peak" or "overload" LED. Occasional flashes are OK but if it is on all the time, turn the Input Gain down!

You need to be careful about too much boost or "lift", since boosting takes the threeQ closer to overload. The threeQ has generous overload margins, but when a lot of boost is used, it may be necessary to compensate by reducing the Output Gain or the Input Gain (the latter will affect the Compressor setting though).

Keep an eye on the VU Meter when adjusting the EQ. When the red LED (labeled "+12") lights, the threeQ is within 4dB of clipping. This may therefore be regarded as a "Peak" or "Overload" LED. Occasional flashes are OK but if it is on all the time, turn something down!

The way to use the MID FREQ is to apply quite a lot of boost, then sweep the frequency until you "tune in" to the sound you are interested in. Once you find it, adjust the amount of boost or cut to give the desired effect.

Experiment with combinations of settings of EQ and try to picture how the audio signal is being affected. Use the "EQ" switch to make comparisons between EQ'd and non-EQ'd signals.

- 1) No Power (no lights work)**
- Is the power supply plugged in (both ends)?
  - Is the mains power on?

**2) The microphone doesn't work**

- Is it connected to the correct (XLR) input on the rear panel?
- If it is a condenser microphone, is the phantom power switched on?
- Is the 'Line' switch out (LED off)?
- Is the 'Input Gain' control turned up?
- Is the 'Output Gain' control turned up?

**3) The line input doesn't work**

- Is the source connected to the correct (jack) input on the back of the unit?
- Is the 'Line' switch in (LED on)?
- Is the 'Input Gain' control turned up?
- Is the 'Output Gain' control turned up?

**4) The compressor doesn't work**

- Is the 'Comp' switch in (LED on)?
- Is the 'Compress' control turned up enough?
- Is there enough signal, as set by the 'Input Gain' control, to drive the compressor?

**5) Too little or too much compression**

- Turn the 'Input Gain' control up or down respectively, to adjust the signal level to the compressor

**6) The Meequalizer doesn't work.**

- Is the 'EQ' switch in (LED on)?
- Is 'Input Gain' control turned up?
- Is 'Output Gain' control turned up?

**7) Too much noise**

- Is the 'Input Gain' control too high? Try moving the mic closer to the source
- Is the 'Output Gain' control too high (eg: when lots of compression is being used)?
- Is there too much EQ boost?
- Is the noise already present in the input signal? (Try removing the input)

**8) Sounds distorted**

- Is the 'Input Gain' control too high?
- Is the 'Output Gain' control too high?
- Is there too much EQ boost?
- When using the compressor, is the Release control set too low?

## Technical Specification

<b>Input impedances</b>	Mic: 1.2kohm; Line: 20kohm	<b>EQ Boost and Cut</b>	+/-15dB (zero phase-shift bell response)
<b>Pre-amp overall gain</b>	10dB to 60dB (variable)	<b>EQ "Q"</b>	0.9 (1.6 octaves)
<b>Common mode rejection</b>	70dB	<b>LF Frequency</b>	80Hz
<b>Equivalent input noise</b>	-128.5dBu (unweighted)	<b>MID Frequency</b>	300Hz to 5kHz variable
<b>Distortion</b>	0.001% (below Compressor threshold)	<b>HF Frequency</b>	12kHz
<b>Frequency response</b>	15Hz to 70kHz (-3dB)	<b>Nominal output levels</b>	+4dBu/-10dBv
<b>Maximum input before clipping</b>	Mic: +19.5dBu; Line: +44.5dBu	<b>Output impedance</b>	100 ohm
<b>Headroom before clipping</b>	+19.5dBu	<b>Output Level switch</b>	12dB attenuation
<b>Compressor threshold</b>	-6dBu to +20dBu (variable)	<b>Noise Floor</b>	-85dBu (typical, with ~40dB mic gain)
<b>Compressor ratio</b>	5:1 (typical)	<b>VU Meter</b>	8 segment bargraph
<b>Compressor attack time</b>	1 msec to 100 msec (adaptive)	<b>Power supply</b>	12V ac mains adaptor
<b>Compressor release time</b>	0.1 sec to 3 sec (adaptive)	<b>Power consumption</b>	12W
		<b>Mechanical</b>	220W x 44H x 180D (overall)
		<b>Weight</b>	1 kilo



## Notes

### Joeemeek Limited Warranty

**THIS PRODUCT IS FOR PROFESSIONAL USE ONLY**  
PMI Audio Group warrants that all products will be free from defects in material or workmanship:

A: For a period of (3) three years from the date of purchase (hereinafter the labor warranty period), PMI Audio Group will repair or replace this Product if determined to be defective. After the expiration of the labor warranty period, the Purchaser must pay labor charges.

B: In addition, PMI Audio Group will supply, at no charge, replacements for defective parts for a period of (three years) from the date of purchase. During the labor warranty period, to repair the Product, Purchaser must return the defective Product, freight prepaid, or deliver it to PMI Audio Group Service Center. The product to be repaired is to be returned in either its original carton or a similar package affording an equal degree of protection. PMI Audio Group will return the repaired Product freight prepaid to the Purchaser. PMI Audio Group is not obligated to provide Purchaser with a substitute unit during the warranty period or at any time.

### Conditions

1. **Notification of claims: Warranty Service:** If Purchaser discovers that the Product has proven defective in material or workmanship, then written notice with an explanation of the claim shall be given promptly by Purchaser to PMI but all claims for warranty service must be made within the warranty period. If after investigation PMI determines that the reported problem was not covered by the warranty, Purchaser shall pay PMI for the cost of investigating the problem at its then prevailing time-and-materials rate. No repair or
2. **Exclusive Remedy: Acceptance:** Purchaser's exclusive remedy and PMI's sole obligation is to supply (or pay for) all labor necessary to repair any product found to be defective within the warranty period and to supply, at no extra charge, new or rebuilt replacements for defective parts. If repair or replacement fails to remedy the defect, then and only in such an event, shall PMI exchange to Purchaser a new or reconditioned unit. Purchaser's failure to make a claim as provided in paragraph 1 above or continued use of the product shall constitute an unqualified acceptance of such Product and a waiver by Purchaser of all claims thereto.
3. **Exceptions to Limited warranty:** PMI shall have no liability or obligation to Purchaser with respect to any Product subjected to abuse, improper use, negligence, accident, modification, failure of the end user to follow the operating and maintenance procedures outlined in the users manual, attempted repair by non-qualified personnel, operation of the unit outside of the published environmental and electrical parameters, or if such products original identification (trademark, serial number) markings have been defaced, altered, or removed. PMI excludes from warranty coverage, Products sold AS IS and/or WITH ALL FAULTS and excludes used products which have not been sold by PMI to the Purchaser. PMI also excludes from warranty coverage consumables such as fuses and batteries, tubes, etc.
4. **Proof of purchase:** The dealer's dated bill of sale must be retained as evidence or the date of purchase and to establish warranty eligibility

replacement by Purchaser of any Product or part thereof shall extend the warranty period as to the entire Product. The specific warranty on the repaired part only shall be in effect for a period of ninety (90) days following the repair or replacement of that part or the remaining period of the Product warranty, whichever is greater.

2. **Exclusive Remedy: Acceptance:** Purchaser's exclusive remedy and PMI's sole obligation is to supply (or pay for) all labor necessary to repair any product found to be defective within the warranty period and to supply, at no extra charge, new or rebuilt replacements for defective parts. If repair or replacement fails to remedy the defect, then and only in such an event, shall PMI exchange to Purchaser a new or reconditioned unit. Purchaser's failure to make a claim as provided in paragraph 1 above or continued use of the product shall constitute an unqualified acceptance of such Product and a waiver by Purchaser of all claims thereto.

3. **Exceptions to Limited warranty:** PMI shall have no liability or obligation to Purchaser with respect to any Product subjected to abuse, improper use, negligence, accident, modification, failure of the end user to follow the operating and maintenance procedures outlined in the users manual, attempted repair by non-qualified personnel, operation of the unit outside of the published environmental and electrical parameters, or if such products original identification (trademark, serial number) markings have been defaced, altered, or removed. PMI excludes from warranty coverage, Products sold AS IS and/or WITH ALL FAULTS and excludes used products which have not been sold by PMI to the Purchaser. PMI also excludes from warranty coverage consumables such as fuses and batteries, tubes, etc.

4. **Proof of purchase:** The dealer's dated bill of sale must be retained as evidence or the date of purchase and to establish warranty eligibility

**Disclaimer of Warranty**

EXCEPT FOR THE FORGOING WARRANTIES, PMI HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR LIMITED, INCLUDING, BUT NOT LIMITED TO ANY OR ALL IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY WARRANTY WITH REGARD TO ANY CLAIM OF INFRINGEMENT THAT MAY BE PROVIDED IN SECTION 2-312(3) OF THE UNIFORM COMMERCIAL CODE AND/OR IN ANY COMPARABLE STATE STATUE. PMI HEREBY DISCLAIMS ANY REPRESENTATIONS OR WARRANTY THAT THE PRODUCT IS COMPATIBLE WITH ANY COMBINATION OF NON-PMI AUDIO PRODUCTS PURCHASER MAY CHOOSE TO CONNECT TO THE PRODUCT.

**Limitation of Liability**

THE LIABILITY OF PMI, IF ANY, AND PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR DAMAGES FOR ANY CLAIM OF ANY KIND WHATSOEVER, REGARDLESS OF THE LEGAL THEORY AND WHETHER ARISING IN TORT OR CONTRACT, SHALL NOT BE GREATER THAN THE ACTUAL PURCHASE PRICE OF THE PRODUCT WITH RESPECT TO WHICH SUCH CLAIM IS MADE. IN NO EVENT SHALL PMI BE LIABLE TO PURCHASER FOR ANY SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY KIND INCLUDING, BUT NOT LIMITED TO, COMPENSATION, REIMBURSEMENT OR DAMAGES ON ACCOUNT OF THE LOSS OF PRESENT OR PROSPECTIVE PROFITS OR ANY OTHER REASON WHATSOEVER.

Information in this User Guide is subject to change without notice. No part of this User Guide may be reproduced or transmitted in any form or by any means, electronic, mechanical or by any other means, for any purpose, without the express written permission of PMI Audio Group.

PMI Audio Group may have trademarks, copyrights or other intellectual property rights covering the subject matter of this User Guide. Except as expressly provided in any written agreement from PMI Audio Group, the furnishing of this User Guide is provided for the sole use of the authorized User (or Service Agent where applicable) and does not give the User any license to use any trademarks, copyrights or other intellectual property of PMI Audio Group.

PMI, PMI AUDIO, TED FLETCHER, MEQUALIZER, STUDIO PROJECTS, JOEMEEK, TOFT AUDIO DESIGNS, CURRENTSENSE, MEERPHONE, TRAKPAK, and (if it Sounds Right...It is Right) are either registered trademarks or trademarks of PMI Audio Group in the U.S.A. and/or other countries.

Copyright © 2005 PMI Audio Group. All rights reserved.

**Owners Registration Card**

TO BE COMPLETED AT TIME OF PURCHASE

Name \_\_\_\_\_

Date of Purchase \_\_\_\_\_

Serial Number \_\_\_\_\_

Dealer's Name \_\_\_\_\_

RETAIN FOR YOUR RECORDS  
PLEASE DISPATCH AND RETURN  
YOUR REGISTRATION  
TO JOEMEEK WITHIN 14 DAYS  
OF PURCHASE

**Product Registration Information**  
**Please Fill in the Below Sections and Return**

Name: \_\_\_\_\_  
Address: \_\_\_\_\_  
City: \_\_\_\_\_ State: \_\_\_\_\_ Zip Code: \_\_\_\_\_  
Telephone Number: \_\_\_\_\_ email Address: \_\_\_\_\_  
Model Purchased: \_\_\_\_\_ Date Purchased: \_\_\_\_\_  
Serial Number: \_\_\_\_\_ Dealer: \_\_\_\_\_  
Comments: \_\_\_\_\_

**What magazines do you read to influence your buying decision:** (please check all that apply)

Mix  Electronic Musician  EQ  Sound on Sound  Pro Audio Review  Recording  Audio News  Audio MIDI