

# EnVivo

## Manual Wireless Speaker Bug



### AFTER SALES SUPPORT



0844 800 5893



1890 917 060



[accessionx-uk@teknihall.com](mailto:accessionx-uk@teknihall.com)

MODEL: 1318

PRODUCT CODE: 61428

08/2014

# 3

YEARS  
WARRANTY

### CONTENTS

- Wireless Speaker Bug
- Audio Cable
- Micro USB Cable
- User Manual

## Content

Welcome .....	3
Contents .....	5
After sales support .....	5
Specifications .....	6
Overview .....	8
Getting Started.....	10
Speaker Charging.....	20
Compatibility .....	22
Safety precautions.....	22
Trouble shooting .....	24
Disclaimer .....	30
Disposal.....	31
Warranty .....	33
Warranty Card.....	35

## **Welcome**

You have made an excellent choice with the purchase of this quality EnVivo brand product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of EnVivo.

We want you to be completely satisfied with your purchase, so this

EnVivo product is backed by a comprehensive manufacturer's 3 year warranty and an out-standing after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come. Before installing and using the product, please read the instructions thoroughly, and retain them for future reference.

Hope you have a pleasant experience.

## **Contents**

- Wireless Speaker Bug
- USB cable
- Audio cable
- User manual with warranty card

## **After sales support**

Email:

accessionx-uk@teknihall.com

Tel.No. for the UK:

0844 800 5893

Tel. No. for Ireland:

 
1890 917 060

## Specifications


- Wireless Speaker Bug with built-in lithium battery
- Bluetooth V3.0
- Transmission distance up to 10 m
- USB charging voltage: DC 5V
- Output power: 3W
- Battery capacity: 3.7V/450mA
- Playing time up to 5 hours
- 3.5 mm audio input
- Handsfree function for call
- Model no: ENV-1318
- Bluetooth version: BLUETOOTH V3.0

- Transmission distance:  $\leq 10\text{M}$  (this may vary according to environment and connected Bluetooth device)
- USB charge voltage: DC 5V
- Lithium battery: 3.7V Lithium chargeable battery, 450mAh
- Output power: 3W
- Frequency: 20Hz-20KHz
- Sensitivity: 70db
- Signal to noise ratio:  $\geq 85\text{dB}$
- Unit size: 75×75×67 mm
- Unit weight: 220 g

## Overview

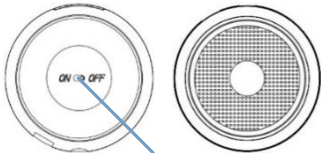

 
1) ON / OFF switch

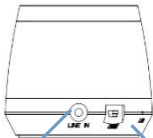


2) Line in hole

 3) Mini USB



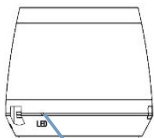

 
4) LED indicator

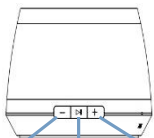

5) Vol. - / previous track

6) Play/Pause/Pick up/End call

 7) Vol. + / next track

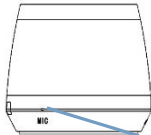


8) MIC

## Getting Started

### Key functions

1. ON/OFF: Slide power switch to 'ON' or 'OFF' to turn the speaker on and off.
2. 'Line in': Aux input slot, use the provided Aux-in cable to connect your Mobile, Tablet, iPad, MP3 Player etc. to play music
3. Mini USB: Use the provided USB cable for charging the unit through your computer.
4. LED indicator: Blue light indicates

working, red light indicates charging.

5. '-': Decrease volume/prev. track
6. : Play/Pause/Pick up/End call
7. '+': Increase volume/next track
8. MIC: Microphone

## **Operating the speaker**

### **A. Power On Status**

Slide the Power switch to the "ON" position at the bottom of the unit and you will hear a voice saying

“Bluetooth already opened” and you will see a blue light from the LED indicator.

### **B. Power Off**

Slide the Power Switch to the “OFF” position and the speaker shuts down.

### **C. Bluetooth Pairing**

If the speaker has never been paired with a bluetooth device before, you need to follow the instructions below to pair your speaker with your bluetooth device.

- 1) After hearing the voice prompt”

Waiting for bluetooth connection", the speaker is ready to pair with your bluetooth device and the Blue LED light will be blinking fast.

- 2) Activate bluetooth on your compatible device and set it to search for compatible devices.
- 3) Select the speaker "ENV-1318" from the list of found devices.

**Note:** If the speaker is already connected to another bluetooth device then the speaker will not

appear in search list and you need to disconnect the current paired bluetooth device from the speaker and search again.

- 4) If your device asks for a passkey, enter digits "0000" and press "OK" (varies depending on the bluetooth device manufacturer, model and software version).
- 5) If the pairing is successful, the speaker will have Voice Prompt "Bluetooth Connected successfully" and the Blue LED light

indicator will flash with an interval of two seconds, and your speaker is ready to play music and receive calls from mobiles.



**Note:** If the speaker has been paired to the bluetooth device before, you need to follow the pairing instructions below to connect the speaker to the bluetooth device:



Activate bluetooth on your compatible device, turn on the speaker and the speaker will connect automatically to the compatible

device and you will hear a Voice Prompt "Bluetooth connected successfully".

#### **D. Playing Music in Bluetooth Mode**

After the bluetooth device is connected successfully to the speaker, you will be able to play music from your Bluetooth device.


Short press  to pause music and short press  again to resume music.

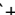
Short press  for next song and short press  for previous song.



Long press `+` to increase volume and long press `-` to decrease volume.



## **E. Using the Speaker as Hands-free Wireless Speaker Phone**

When your device is paired with the speaker and you get an incoming call or making an outgoing call, the speaker will shift from music mode to call mode automatically. If you get an incoming call, press  to pick up the call. After completing the call

press “  ” to hang up. The music will automatically resume after the call is disconnected.

## **F. Using the Speaker in AUX-In Mode**

Plug one end of the 3.5 mm Audio Cable into the headphone or line out of your MP3 Player, Mobile or computer and plug the other end of the cable into the Aux-In jack of the Speaker. You will hear Voice Prompt “Now is Aux in mode”, and you can play music from your device.

Short press  to Mute Music and short press  again to Unmute Music.

Long or short press `+` to Increase volume, and Long or short press `-` to Decrease Volume.

Note: In Aux-in mode, you cannot press `+` or `-`.

Choose next volume or last volume.

## **Speaker Charging**

The speaker comes with a built-in rechargeable battery. Connect the USB cable provided to a computer or into a DC 5V power adaptor (not included). When the speaker is set to `OFF` you will hear a voice saying `Charging` and the LED light will turn Red. If the speaker is on, you will not hear a voice saying `Charging` when you start charging it. The charging time is approximately 4 hours. Unplug

the Speaker from the power device once the speaker is fully charged.

The battery playing time will be different depending on volume when playing music. If the speaker isn't being used for a long time, then please charge the speaker once per month, as this can protect and extend the battery life.

## **Compatibility**

Wireless: With BLUETOOTH V3.0,  
Including A2DP/  
AVRCP/GAVDP/IOPT/HFP/SSP

## **Safety precautions**

- a. Do not use or store the unit in high temperature or hazardous location.
- b. Please do not expose the unit to rain.
- c. Please do not disassemble, repair or modify the unit.

- d. The unit comes with a rechargeable battery so please do not throw or put in fire to avoid explosion.
- e. Please do not listen to music in high volume for long time as it may cause damage to your ears.
- f. Low battery power may result in reduction in bluetooth transmission distance or disconnection

## **Trouble shooting**

Should you experience any difficulty while using the speaker, please refer to the following.

### **Not charging**

#### *Reason*

The USB power adaptor (not included) is not plugged into a wall outlet or the USB cable (included) is not plugged into the mini USB jack behind the speaker.



*Solution*

Plug the USB power adaptor (not included) into a wall outlet and plug the USB cable (included) into the mini USB jack of the speaker.

*Reason*

Wall outlet is not functioning.

*Solution*

Plug another device into the same outlet to confirm the outlet is working.

*Reason*

Computer USB port is not function.

### *Solution*

Make sure your computer power is turned on and try another USB port.

### **No Sound**

#### *Reason*

The speaker battery is dead.

#### *Solution*

Recharge the speaker

#### *Reason*

The speaker is not linked to the cell phone.

#### *Solution*

Go through “Speaker Operations” process to connect the speaker.

*Reason*

Volume is too low.

*Solution*

Increase the volume on your device.

Increase the volume on the speaker.

Increase the volume on the audio source.

## **No Audio Signal via Bluetooth connection**

*Reason*

Speaker is not paired to the audio source.

*Solution*

Check whether a connection exists. If necessary, pair the speaker to the audio source again.

### **Speaker cannot be connected**

*Reason*

Pairing does not work

*Solution*

Check whether the audio source supports the A2DP protocol

*Reason*

Audio source is switched off

*Solution*

Switch on the audio source

*Reason*

Bluetooth is switched off at the audio source.

*Solution*

Switch on the Bluetooth function in the audio source.

*Reason*

Bluetooth version is not supported.

*Solution*

Use a different playback unit.

## **Poor Sound quality from a Bluetooth device**

### *Reason*

Bluetooth device is almost out of range of the speaker.

### *Solution*

Move your Bluetooth device closer to the speaker.

### **Disclaimer**

This Speaker Bug is meant for using only in conjunction with the appropriate mobile entertainment device. Please consult your device

packaging to determine whether this Speaker Bug is compatible with your particular mobile entertainment device.

We, the manufacturer, are not responsible for any damages to any mobile entertainment device incurred through use of this product.

## **Disposal**

Batteries, electrical and electronic equipment (EEE) contain materials, parts and substances, which can be dangerous to the environment and

harmful to human health if waste of electrical and electronic equipment (WEEE) are not disposed of correctly. Batteries, electrical and electronic equipment, which are marked with the WEEE logo (as shown below), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.





## **Warranty**

We want you to be completely satisfied with your purchase so this EnVivo product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales service through our dedicated Helpline.

If you require technical support or in the unlikely event that the purchase you have made is faulty, please telephone our Helpline for immediate assistance.

Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your till receipt safe!). This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.

# EnVivo

## Warranty Card

Wireless Speaker Bug - 61428

Please keep your purchase receipt  
together with your warranty card

Name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

Tel.No. \_\_\_\_\_

Date of purchase \_\_\_\_\_

Location of purchase \_\_\_\_\_

**Please state detailed description of  
malfunction:**

Supplier: Accession ApS - Vandmanden 34  
DK-9200 Aalborg SV - [www.accessionx.com](http://www.accessionx.com)  
[accessionx-uk@teknihall.com](mailto:accessionx-uk@teknihall.com)