

Engbo thruster system

Installation and user manual

- Joystick- single
- Joystick - double
- Touch panel
- Wireless remote control



CE0470

According to NS-EN ISO 9001:2000
Art.nr. 117-00155

FCC ID: R78-RC-01
R78-ECU-01

Contents

	Side
1. Introduction.....	3
2. Installation.....	4
2.1 Installation- joystick	4
2.2 Installation - touch panel	4
3. Technical specifications – joystick and touch panel.....	5
4. User instructions	5
4.1 Operation.....	5
4.2 Intelligent electronic protection.....	5
5. How to operate the thruster	6
5.1 Optional panels	6
5.2 Operating instructions.	6
6. Upgrade to wireless remote control.....	7
6.1 Antenna installation	7
6.2 Coding the remote control (transmitter and receiver)	8
7. Technical specifications – wireless remote control	9
8. Battery replacement	9
9. Maintenance	9
10. Wiring diagram single and double joystick.....	10
11. Wiring diagram touch panel	10

1. Introduction

First of all, we would like to thank you for choosing the XF thruster. Engbo AS has for several years supplied Volvo Penta with thrusters, distributed as QL thrusters through Volvo Penta dealers and distributors. In late 2006, Engbo and Volvo Penta agreed that distributing through two channels and brand names would make our thrusters even more available. Together with Engbo anchoring and mooring systems, the thrusters constitute a complete system for manoeuvring and mooring your vessel. The control units on both thrusters and winches are based on the same moduls, which makes it possible to manoeuvre and anchor using one single wireless remote control.

To achieve maximum benefit from your XF thruster, please study this manual properly before installing and making use of the thruster panels. Keep this manual onboard. Do not hesitate to contact us if you have any questions.

Best regards,
Engbo AS



IMPORTANT:

- Please read the entire instruction carefully before starting on the installation work.
- The manufacturer does not assume any liability for the installation of the thruster panels. Qualified installers should be familiar with these installation instructions. The responsibility for the installation rests entirely on the installer. Compliance with regulations must be ensured by the installer.
- Faulty installation or connection of any components will render any warranty given by Engbo AS void.
- XF thruster(s) must only be operated by persons with knowledge of the system.
- Keep main engine(s) running when operating thruster(s) to ensure enough electrical power.
- Only operate the thruster(s) with the propellers fully submerged.

WARNING:




- Do not operate the thruster(s) without the belt cover installed.
- Make sure no one is within reach of the rotating propeller(s)
- The propeller(s) must come to a stop before engaging in opposite direction, otherwise the contactors will burn / fuse.

2. Installation

2.1 Installation- joystick

The joystick panel, (single or double), comes complete with;

- Joystick with gasket and connection plug(s)
 - Drill template
 - Self tapping screws
 - Manual
- Turn off the main switch to the electrical thruster.
 - Select the mounting position for the joystick panel. The desired position must be even and in a location that will prevent water from rain or sea spray to be able to access the back of the panel. Remove all grease, dust or dirt before affixing the drill template.
 - Mount the drill template sticker and use a hole saw and a file to remove all needed area for installation. Pre-drill the four fastening holes with $\text{Ø}2,4\text{mm}$, ($3/32''$).
 - Remove the drill template and remove the red cover film from the gasket.
 - Install the panel carefully and fix it in place with the four black stainless screws.

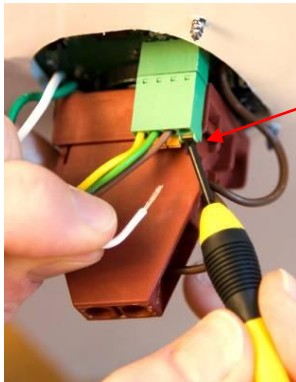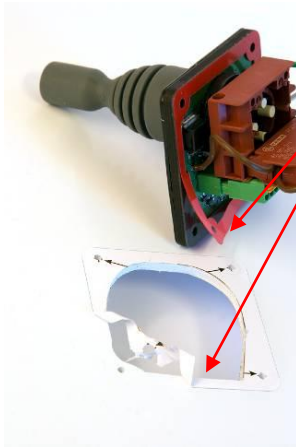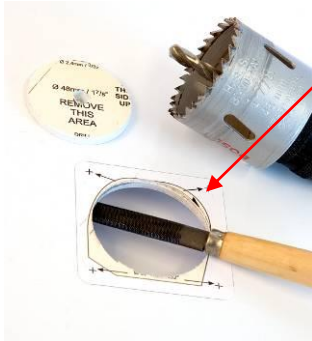

- Connect the wires to the panel as shown on the connection diagram(s).
- The wires are connected by pressing in the button placed under the hole while the wire is being pushed into the hole. Release the button when the wire is in place.
- Check for good connection by pulling gently in the wires.
- Correct connection is;
- 1: White
- 2: Brown
- 3: Green
- 4: Yellow

2.2 Installation - touch panel

- Decide where to place the panel.
- Drill a $\text{Ø} 15 \text{ mm}$ hole.
- Thread the panel cable trough the hole. Clean the surface.
- Remove the covering paper on the back of the panel and stick the panel onto the surface.
- The holes in the panel corners may be used to fasten the panel with screws if needed. Tighten with care.



NB: For best appearance, be accurate about lining up the panel before sticking it on.

3. Technical specifications – joystick and touch panel

	Joystick Single/double	Touch panel
Power supply	Direct connection to control unit.	
Operating temperature:	-20 to + 50 degrees Celsius, (-4 to + 122 Fahrenheit)	
Storage temperature	-40 to + 70 degrees Celsius, (-40 to + 158 Fahrenheit)	
Panel front material	Polyester	
Bellow material	UV and salt spray resistant Silicone rubber compound	
Mechanical endurance	Min. 500 000 cycles	
Dimensions (HxWxD):	127x53x22 mm	2x62x52
Environment protection: (Floating)**	IP 67 Front side exposure, with gasket installed	IP 68

4. User instructions

These panels are intended for use together with electrical thruster systems. Refer to thruster system operator instructions and follow all advice and warnings before operating the panels.

4.1 Operation



NB:

- XF Thruster(s) must only be operated by persons with knowledge of the system.
- Keep main engine(s) running when operating thruster(s) to ensure enough electrical power.
- Only operate the thruster(s) with the propellers fully submerged.

Test running:

WARNING:

- Do not operate the thruster(s) without the belt cover installed.
- Make sure no one is within reach of the rotating propeller(s)
- The propeller(s) must come to a stop before engaging in opposite direction, otherwise the contactors will burn / fuse.

NB: When the boat is launched check that it moves in the correct directions when operating the control panel. If not, shift the cables connected to no. 1 and no. 3 on the control unit, or change position on DIL switch 8 on S100 (Ref. XF thruster manual).

4.2 Intelligent electronic protection

WARNING: The system has intelligent monitoring to measure run and pause time. The XF Thruster is not permitted to start if the voltage on the thruster is below 10.0V on 12V system/ 20.0V on 24V system. If the voltage drops below 9.0/18.0V when thruster is running, warning will occur by showing orange light power light on the wireless control.

Of security reasons, the system permits continuous running of the thruster in 4 intervals of 30 sec. After each interval, the thruster will stop. Switching off / on the joystick or switch panel will make the thruster run again. If repeated 4 times, (total 2 minutes running), the thruster will cool down for 25 minutes before being ready to run again. This to protect the motor and control unit against overheating.

NB: In an emergency situation, to save the ship at the possible expense of the thruster, this protection can be override by turning the main switch off and on.



5. How to operate the thruster

- Move / pull the joystick / touch panel to right and the thruster will be activated to starboard.
- Move / pull the joystick / touch panel to left and the thruster will be activated to port.



5.1 Optional panels

There are 4 different XF Thruster panels available.

Touch panel (Part no.12-79001)

- Easy to install.
- Designed similar to Engbo winch panel.



Single Joystick (Part no.12-79002)

- ON/OFF switch,
- LEDs for indication of power and direction.

Double joystick (Part no.12-79003)

- Needed if both bow and stern thruster installed.
- ON/OFF switch.
- LEDs for indication of power and direction.



Wireless remote control (Part no.12-47014)

- Floating, splash-proof, hand-held remote control unit.
- The wireless remote control can be used to operate maximum two thrusters and two windlasses, bow and stern.
- Activates both bow and stern thruster simultaneously in opposite direction by pushing the centre buttons.
- Operation range of 30 m under normal conditions.
- High quality, narrow band unit with two-way communication with the electronic control unit.
- Each unit has a unique code.
- Equipped with anti-slip strips on the back.
- Hand/neck cord is included as standard (easily removed).
- The battery lifetime is more than 2 seasons based on normal leisure use.



IMPORTANT! Always install at least one fixed XF Thruster panel.

Operating instructions.

The remote control is battery-operated. To ensure longer life, it will automatically go into sleep mode five minutes after the last button was released. Deactivation is signalled with two short sound bursts and a blinking "POWER" indicator. The remote control is activated by holding down any button for 1.5 seconds. When the remote control has been activated, the selected thruster can immediately be operated by pressing the "arrow" button in the desired direction. The thruster will be running as long as the button is depressed (max. 4x30 sec.)



Green light

NB: Activation is indicated by a steady **green light** in the "POWER" indicator and a short sound. All subsequent use of buttons is shown on the associated indicator above the button, accompanied by a short sound.



- Push the left arrow button, and the thruster moves the boat to port.
- Push the right arrow button, and the thruster pushes the boat to starboard.
- Push the centre (twin arrow) buttons to activate both bow and stern thruster simultaneously in opposite directions. The boat will start to rotate about its own axis. (Requires both bow and stern thrusters installed.)



Orange light

Low voltage at the electronic unit is indicated by an **orange light** in the "POWER" indicator.



Red light

The indicator will **quickly blink red** in case of system faults and **slowly blink red** together with short sounds if the remote is unable to communicate with the electronic unit (out of range.)

If the thruster is overloaded and requires time to cool down, this will also be indicated by a **quickly blink red**.

These error messages are shown when buttons are pushed.

6. Upgrade to wireless remote control.

XF Thrusters can optionally be delivered with 3 different electronic control units (MCU).

1. Relay box
 2. Relay box with integrated radio receiver.
 3. Transistor-controlled power electronics with integrated radio receiver that replace the conventional power contactor. (Not yet available, developing process started.)
- The new electronic unit contains no open contacts and is very flexible as regards voltage. The control electronics are software based and feature an integrated radio receiver that communicates with the wireless remote control and built in system to protect the thruster motor and electronic components.



IMPORTANT! Turn off the thruster main switch when not in use. The radio receiver current consumption will be approx 3.5 W as long as it is turned on.



6.1 Antenna installation

If wireless remote control option is to be implemented after choosing option 2 or 3.

If not already installed, the MCU must be fitted with an antenna. The remote control and electronic unit must also be coded/taught electronically to communicate with each other.

Remove the left rubber cover. Then push the antenna through the cover (on one side).

While holding down the antenna connector handle, push the antenna all the way down into the bottom of the clamp. Release the handle and the antenna is fixed in place.



Replace the rubber cover.

Start by pushing the rubber cover in by the antenna and continue around the edge until the cover is fixed in place.

Make sure not to twist the cover with the antenna.

(The remote control will function over short distances even without the antenna.)



Picture A

6.2 Coding the remote control (transmitter and receiver)

This procedure is for all remote controls with serial number higher than 8600. **NB!** If you have a remote control with serial number lower than this, please follow the procedure in the manual that followed that remote control. If you code a new remote control to a receiver with older software, you will have to wait 10 seconds after programming the remote control to the receiver before you can use the remote control.


When programming the remote control, both the remote control (sender) and the receiver in the thruster control unit must be in programming mode.

Follow the procedure as described below



Picture B

1. Choose the pair of buttons on the remote control that is to be programmed
2. Press both buttons simultaneously for approx 12 seconds. When a small beep can be heard and the green "power" lamp starts blinking, the remote control is in programming mode. It will stay in this mode for 5 min, or until it is finished programmed (Picture A)

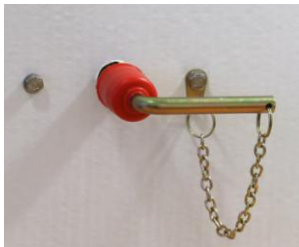

Picture C

Option 1: If you have a touch panel


3. Push and hold both buttons down on the mounted panel while turning on the anchor winch main switch. The receiver will now achieve contact with the remote control, and this one is ready for use. This is confirmed by a short beep signal and the green lamp goes from blinking till stable light. Please check that the remote control is working.



Picture D

Option 2: If you have joystick

Turn off the main switch. Disconnect cables on the mounted panel which are connected to 1, 2 and 3 on the green terminal plug on the control unit. Cut two small wires (5 cm), and strip approx. 10 mm from their ends. Connect these between 1 and 2, and also 2 and 3 on the green terminal plug (Picture E). Turn on the current, and proceed with the coding/programming as described in pt 3. Turn off the current. Disconnect the small wires, connect the cable to the joystick. Turn on the current and check that the joystick is functioning.

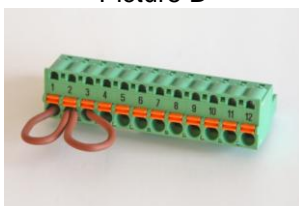

Picture E



IMPORTANT: When installed in boats approved or classified according to international or special national rules, the installer is responsible for following the demands in accordance with these regulations / classification rules. The instructions in this manual cannot be guaranteed to comply with all different regulations / classification rules. The remote control is approved for use in EU/EFTA countries (CE) or US/Canada (FCC). For other countries, please contact your local authorities.

7. Technical specifications – wireless remote control

	Wireless remote:	Motor Control Unit:
Model:	RC-01	ECU-01
Power supply:	3 x 1.5 V DC (3 x AAA/LR03 batteries)	From thruster (integrated)
Battery life:	2–3 years (normal leisure use)	Not applicable
Communication:	Two-way, narrowband, GFSK modulation	
Operating frequency:	868.075 – 869.125 MHz, CE (EU/EFTA)* 902.175 – 903.025 MHz, FCC (US/Canada)*	
Channels:	16 for communication	
Channel separation:	50 kHz	
Address range:	65.535 (16 bit), spread among the 16 channels	
Temperature range:	-20 to +60 degrees Celsius/-4 to +131 degrees Fahrenheit	
Relative humidity (without condensation):	20% – 90%	
Weight:	105 g	Model dependent
Dimensions (HxWxD):	127x53x22 mm	Model dependent
Environment protection: (Floating)**	IP 68	IP 41

*May apply to other countries. For information, please contact local authorities for the country concerned.

**Conditional upon correct installation and intact rubber gasket and O-rings.



8. Battery replacement

The remote control uses three regular AAA/LR03 alkaline batteries. The battery life is more than two seasons under normal leisure use. When replacing batteries, open the unit by unscrewing all five screws.

NB: The screws are of different lengths and have O-rings under the screw heads.


Replace the batteries and make sure all point the same way with the + up and the – downwards towards the edge as illustrated. Reassemble the back cover and carefully screw the parts together until the housing gasket is lightly compressed. The remote will remain waterproof as long as the O-rings and gasket are intact with correct compression.

NB: To ensure a long lifetime, this remote control has acid-proof machine screws and screw inserts in the housing. The screws may penetrate the housing if screwed carelessly or too much force is used. (Not covered by the warranty.)

9. Maintenance

Periodically before each season, or minimum once a year, check the electrical connections and correct function according to the thruster user instructions.

10. Wiring diagram single and double joystick

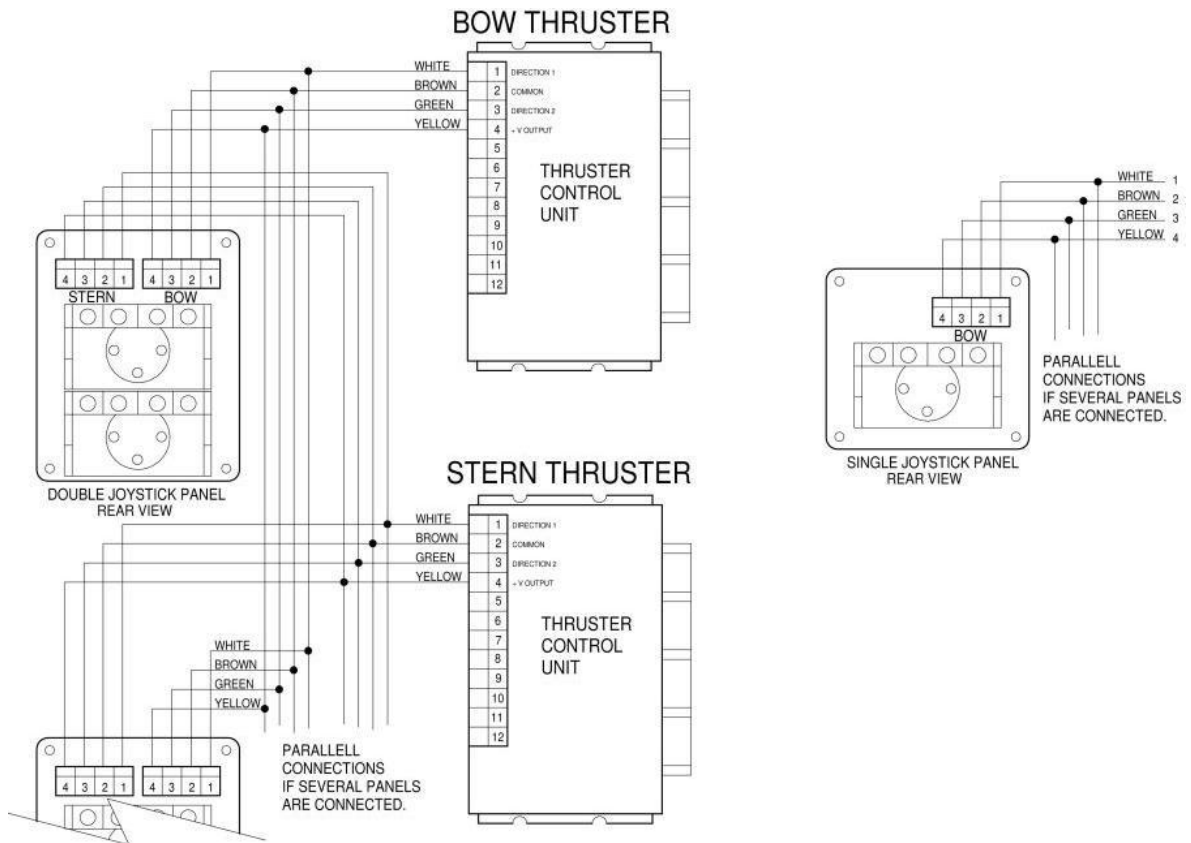

11. Wiring diagram touch panel

