

# Panascope



# Important Precautions

---



**Follow these precautions when installing your system.**

---

- Ensure the area around the DVR is clean and free of moisture.
- Avoid exposing the DVR to direct sunlight or any other heat source.
- Keep the DVR away from any magnetic materials, motors and transformers.
- Choose well ventilated area to position your DVR. Do not place hot or cold area. (Best temp 2° C ~ 40° C)
- Do not place any object or drop water into the DVR.
- Make sure the power is turned off before installing.
- NEVER REMOVE THE COVER. The DVR contains high-voltage parts. You may suffer serious injury if you touch these parts.
- Do not disassemble the DVR without any permission from our customer service department.
- Do not place heavy objects on the DVR, video cable, or power cord.
- This DVR is not included U.P.S (Uninterruptible Power Supply) .

# Package Contents

Make sure your DVR package contains below items.  
If any of the them is damaged or missing, contact your retailer.

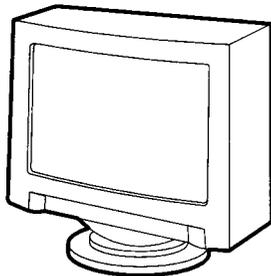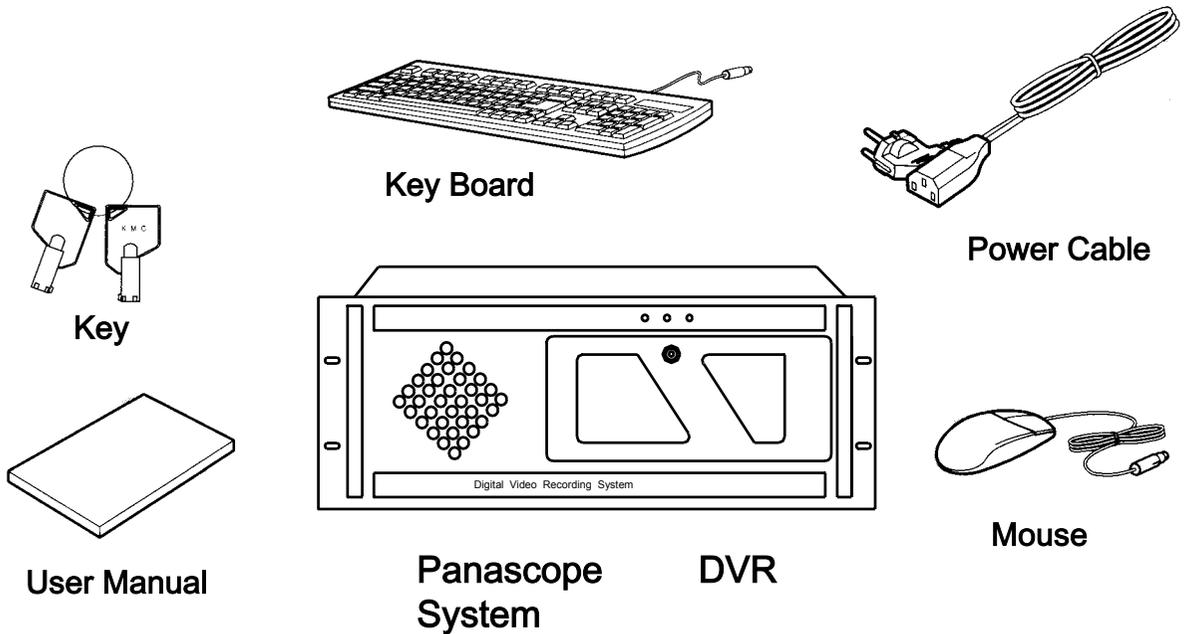

Monitor (Option)

**Caution : Must use monitor which can support resolution 1024 \* 768, 60Hz over**

\* The case of the system can be changed.

# Panascope DVR User Manual

## Contents

- Product information
- Panascope DVR installing & remove 5
- Panascope DVR screen view 7
- Panascope DVR start/finish 10
- Panascope DVR control window 12
- Panascope DVR status window 15
- Panascope DVR search window 17
- Panascope DVR system setting 21
- Panascope DVR network setting 38
- Panascope DVR web viewer service 39
- Troubleshooting 42

## Panascope DVR Install and remove



1. Information : Display time information and user mode.
2. Adjust : Control brightness, color, contrast and hue.
3. PAN/TILT/ZOOM : Control connected PTZ equipment.
4. Tab Mode : Transfer to another mode.
5. Camera : Select a camera to control
6. Screen partition menu : Partition mode of screen.
7. Power : Exit /log out
8. Hand Output control : Control output device connected to each of camera by hand.
9. E-MAP : Find and open map image
10. Volume control : Control speaker volume
11. Light control : Light on/off

## Panascope DVR Install and remove

### 2. Status window : Display system status.



1. Display : Display images received from connected cameras.
2. Information : Display time information and user mode.
3. Recording camera : Display status of cameras' recording.
4. Sensor Detect : Display status of sensors.
5. Motion detect : Display status of motion detection.
6. Alarm : Display system alarm status.
7. HDD capacity : Display remained capacity on hard disk drive.
8. Event : Display all information of event which happened in the system.
9. Event Log : Search and delete saved event files.
10. Tab Mode : Change to another mode.
11. Camera : Select a camera to control.
12. Screen partition menu : Partition mode of screen.
13. Power : Exit/Log out

### 3. Search window : Display search menu.



1. Display : Display video images received from connected cameras.
2. Information : Display present time and user mode.
3. Calendar : Display information of recorded date.
4. Control of image : Archived images edit/ save/ print
5. Zoom/Brightness/Contrast : Control zooming, brightness and contrast of recorded images.
6. Search : Control playback menu.
7. Tab Mode : Transfer to another mode.
8. Time Bar : Display time information of selected images.
9. Screen partition menu : Partition mode of screen.
10. Power : Exit/Log out
11. Speed Control : Control the playback speed.

- This menu can be seen by pressing play and reverse button in full single screen mode.




#### 4. Enlarged status window



1. Screen partition menu : Partition mode of screen.
2. Camera : Select camera to control.

## 5. Enlarged search window

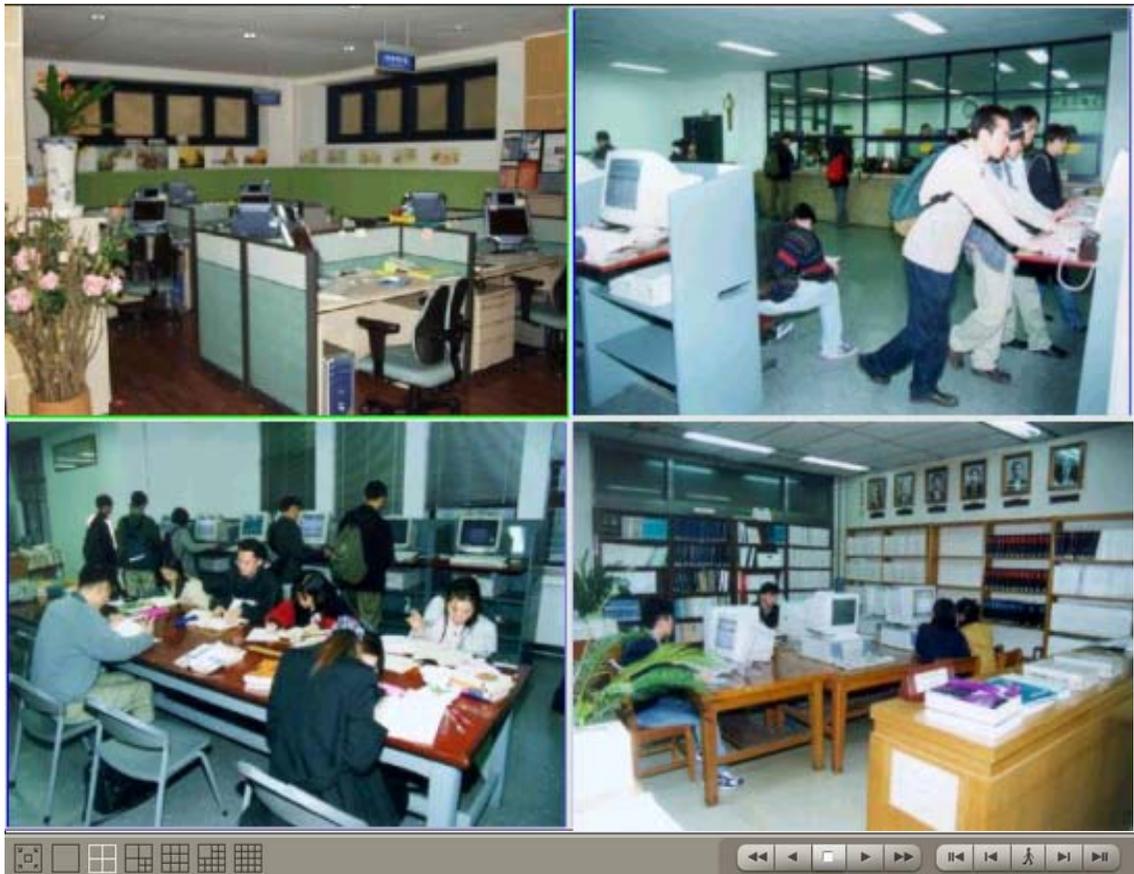

1

2

1. Screen partition menu : Select screen partition mode.
2. Camera : Select control camera.
3. Speed Control : Control playback speed.




- This menu can be seen by pressing play and reverse button in single screen mode.


# PanascopE DVR Start / Finish

## 1. To start the system

1-1. Video input signal : Choose video input signal.

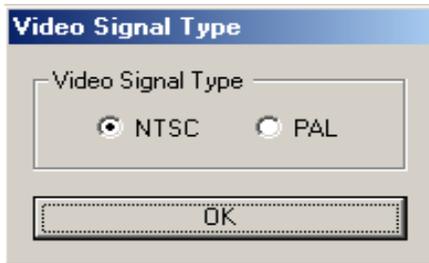

1-2. Assigning the path : Choose the path to save.

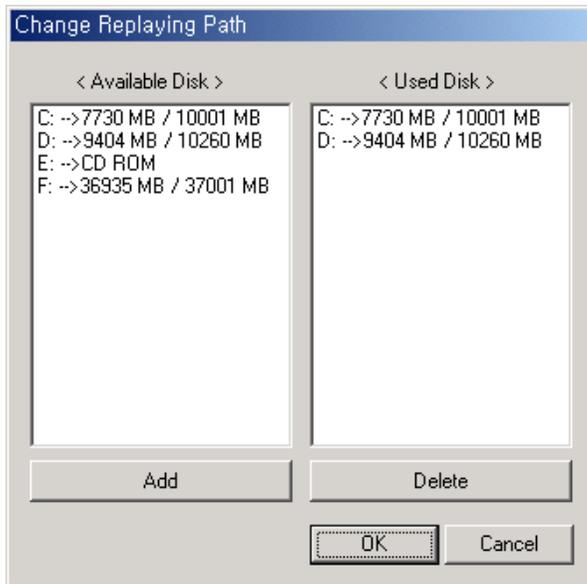

- Available disk : Display the list of all drives on HDD.
- Used disk : Display the list of drives on HDD which can be used for saving.
- Add : Add a drive to save.
- Delete : Delete a drive to save.

1-3. Message will be seen if sound card was not detected.



- Click "OK".


1-4. Log in : Choose user name and enter password.



1. Admin : System administrator.  
(Multi access impossible)
2. Anonymous : User or guest.

## 2. To finish the system


1-1. Log out : The message will be seen when clicking the power button.

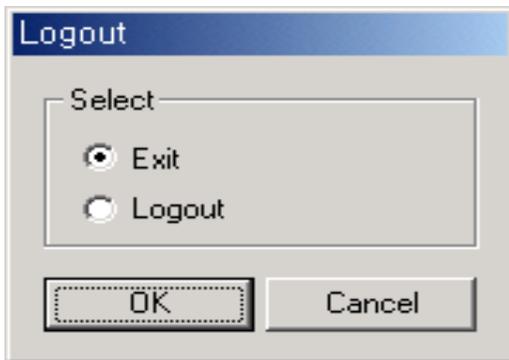

- 1.Exit : Shut down the program/ Windows.
- 2.Log out : Logout the program.

# Panascope DVR system control window

1. Information : Display information of present time and user mode

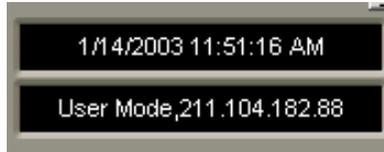

2. Adjust : Control color tone of display image.




3. PAN/TILT/ZOOM : Control PAN/TILT/ZOOM.



- 1. ZOOM :Zoom in/ Zoom out.
- 2. IRIS : Control iris.
- 3. Focus : Set camera focus.


4. Tab Mode : Transfer to another mode.

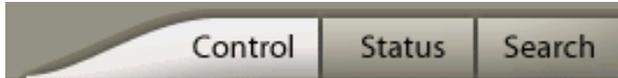

5. Camera : Select camera to control



6. Screen partition menu : Select screen partition mode

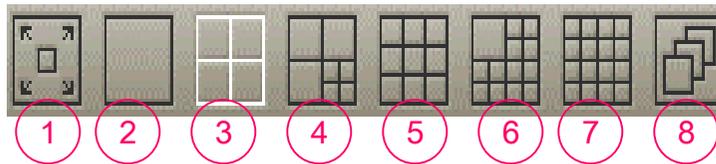


1. Full screen : Show full screen.
2. Single full screen : displays single full screen.
3. 4 partition screen : displays partition screen.
4. 7 partition screen : displays 7 partition screen.
5. 9 partition screen : displays 9 partition screen.
6. 13 partition screen : displays 13 partition screen.
7. 16 partition screen : displays 16 partition screen.
8. Auto channel : displays every channel automatically according to user's time set.

7. Power : Shut down the system.



\* Choose Exit or Log out


8. Log out

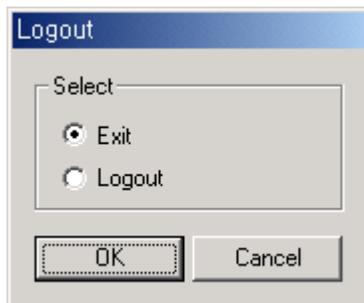

- 1.Exit : Shut down system.
- 2.Logout : Log out system.

## Panascope DVR System information window

1. Information : Display information of present time and user mode.

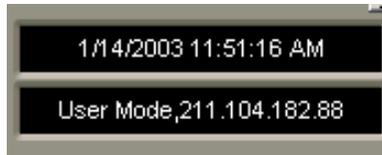


2. Recording camera : Display recording status of cameras

3. Sensor Detect : Display status of the sensors.

4. Motion Detect : Display status of motion detection.

5. Alarm : Display alarm status.

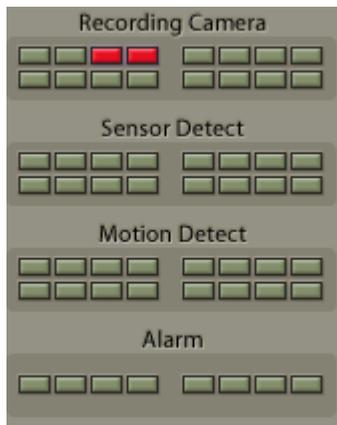

1. Gray color : indicates an inert camera/ sensor/motion sensor.
2. Green color : indicates an active camera/ sensor/ motion sensor.
3. Red color : indicates cameras are recording. indicates sensors are activated. indicates motion sensors are activated.

6. Hdd capacity : Display the remaining hard-disk capacity.



\* The colored part shows the amount of hard-disk used.

7. Event : Display all information of event which happened in the system.





\* Lists every event that happened during the chosen date.  
(eg : system start, end, recording start etc.)

8. Event Log : Search every event that has occurred in the system.




1. Date : select the date in which you want to search.
2. Event search list : Displays event log information of selected date.
3. Refresh : Renew the event list.
4. Print : Print out event list that has occurred for 1day.
5. Delete all : Delete every event saved in the system.
6. Delete : Delete every event saved for a specified date.

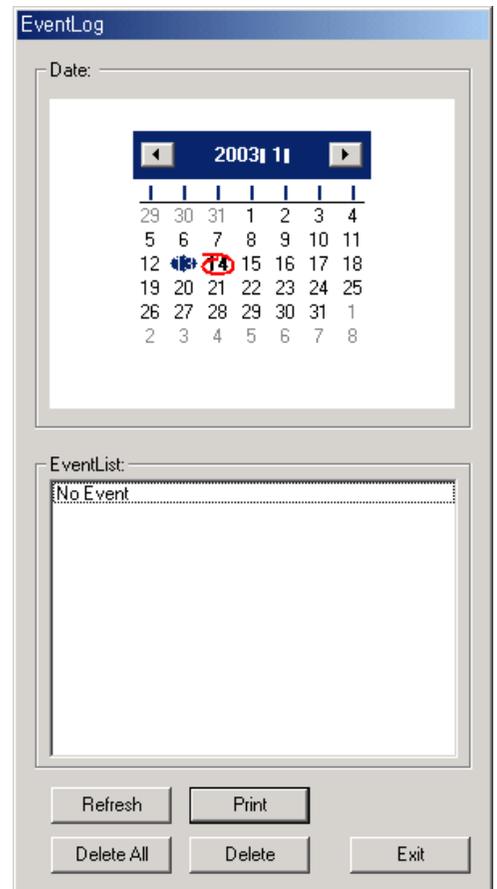

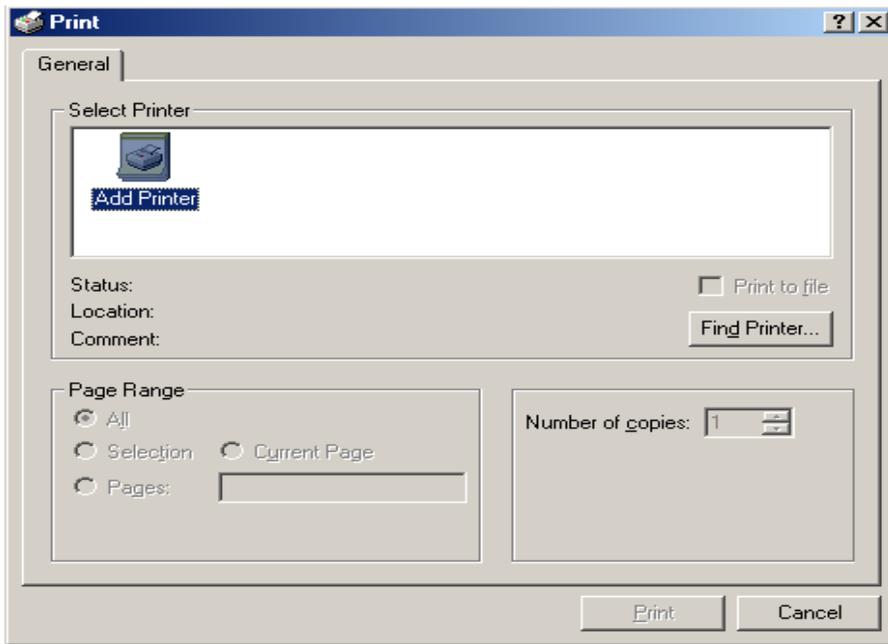


**9. Tab Mode : Transfer to another window.**

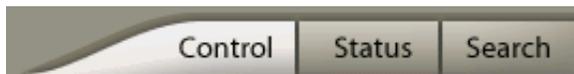

**10. Camera : Select camera you wish to control.**




**11. Screen partition menu : Partition mode of screen.**

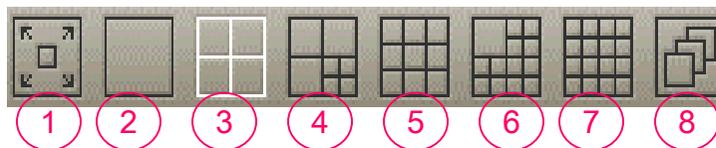


1. Full screen : Show full screen.
2. Single full screen : Show single full screen.
3. 4 partition screen : Show 4 partition screen.
4. 7 partition screen : Show 7 partition screen.
5. 9 partition screen : Show 9 partition screen.
6. 13 partition screen : Show 13 partition screen.
7. 16 partition screen : Show 16 partition screen.
8. Auto channel : Show every channel automatically according to user's time set.  
Auto channel time can be established in the set up menu on the control window.

# Panascop DVR system search window

1. Information : Displays information of present time and user mode.

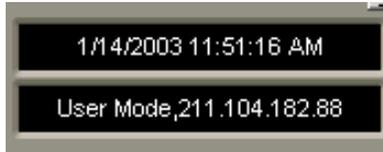

2. Calendar : Display information of recorded date.

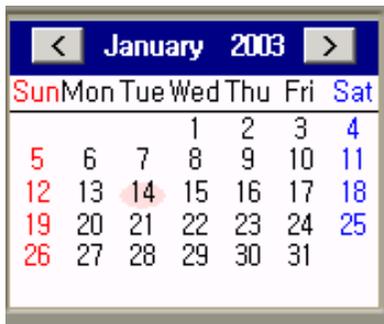

1. Recorded date will be shown in bold writing.
2. Pink colored circle means today's date.


3. Adjust : Archived images edit/save/print.



1. Blur : give soft edge to the image.
2. Sharp : give sharpness to the image.
3. Default : return to the original image.
4. Save : save images in 3 different forms.

4. Save


4-1. AVI format (motion picture)

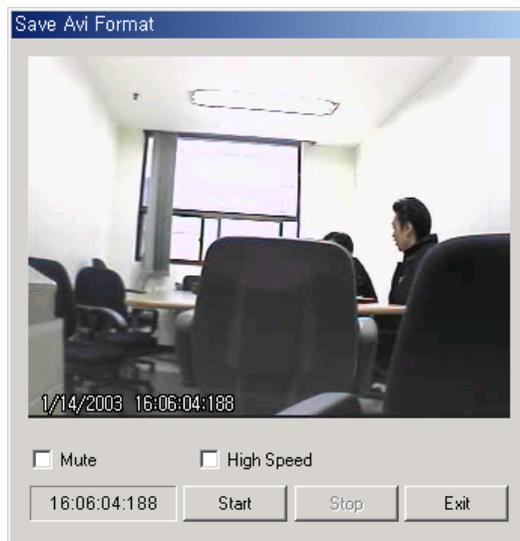


4-2. BMP format (watermark)




1. Save as BMP format file.
2. Save image with watermark included.

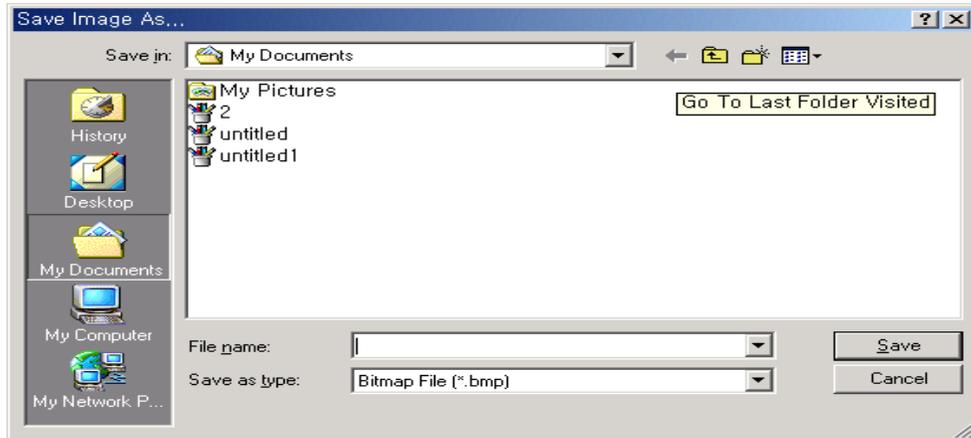


4-3. JPEG format (compressed file)

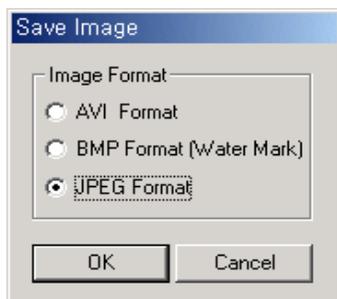

1. save as JPEG file format.
2. Image quality is not as good as BMP but less HDD capacity is required.

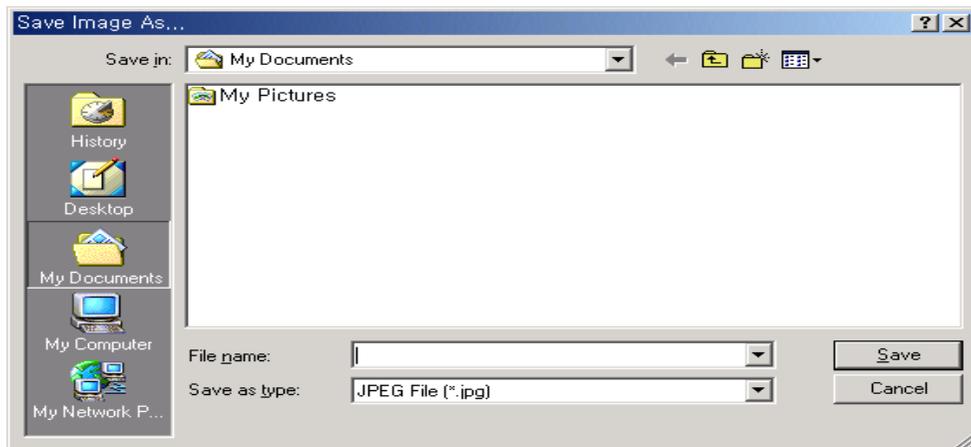

5. Print  
: Print image.

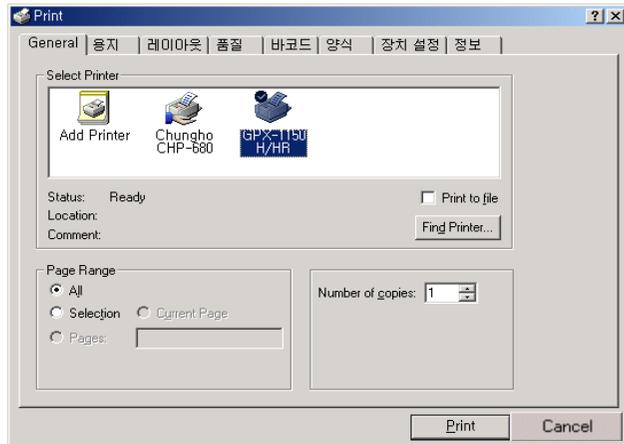

6. Backup  
: save the selected hour in the chosen drive.



4. ZOOM / Brightness  
: Adjust image size and brightness.




5. Search : Control of playback




- |                          |  |
|--------------------------|--|
| 1. Rewind                | 2. reverse play                        |
| 3. Stop.                 | 4. play.                               |
| 5. Fast forward .        | 6. back to start.                      |
| 7. Move 1 frame back.    | 8. move to the end of the event.       |
| 9. Move 1 frame forward. | 10. move to the end of the saved data. |

## 6. Tab Mode : Transfer to another mode.

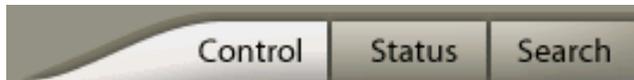


## 7. Time Bar : Display recording data of selected date.

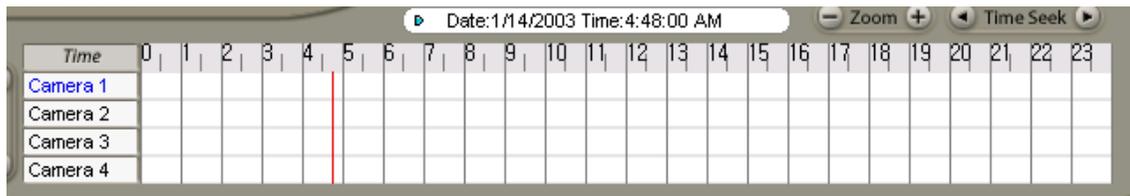

1. Select the camera groups.
2. Adjust timeline.
3. Adjust time space..
  - Blue:video image recorded only.
  - Green : video image and audio recorded together.
  - Yellow : audio recorded only.

## 8. Screen partition menu : Select screen partition mode.

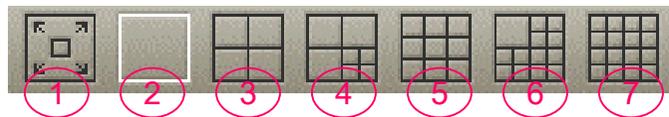

1. Full screen : Show full screen.
2. Single full screen : Views single full screen.
3. 4 partition screen : Views 4 partition screen.
4. 7 partition screen : Views 7 partition screen.
5. 9 partition screen : Views 9 partition screen.
6. 13 partition screen : Views 13 partition screen.
7. 16 partition screen : Views 16 partition screen.


## 9. Control of speed : Control playback speed



- This menu can be seen by pressing play and reverse button in single screen mode.


# Panasonic DVR system setup

## 1. System : main menu for system setup –applies to all programs

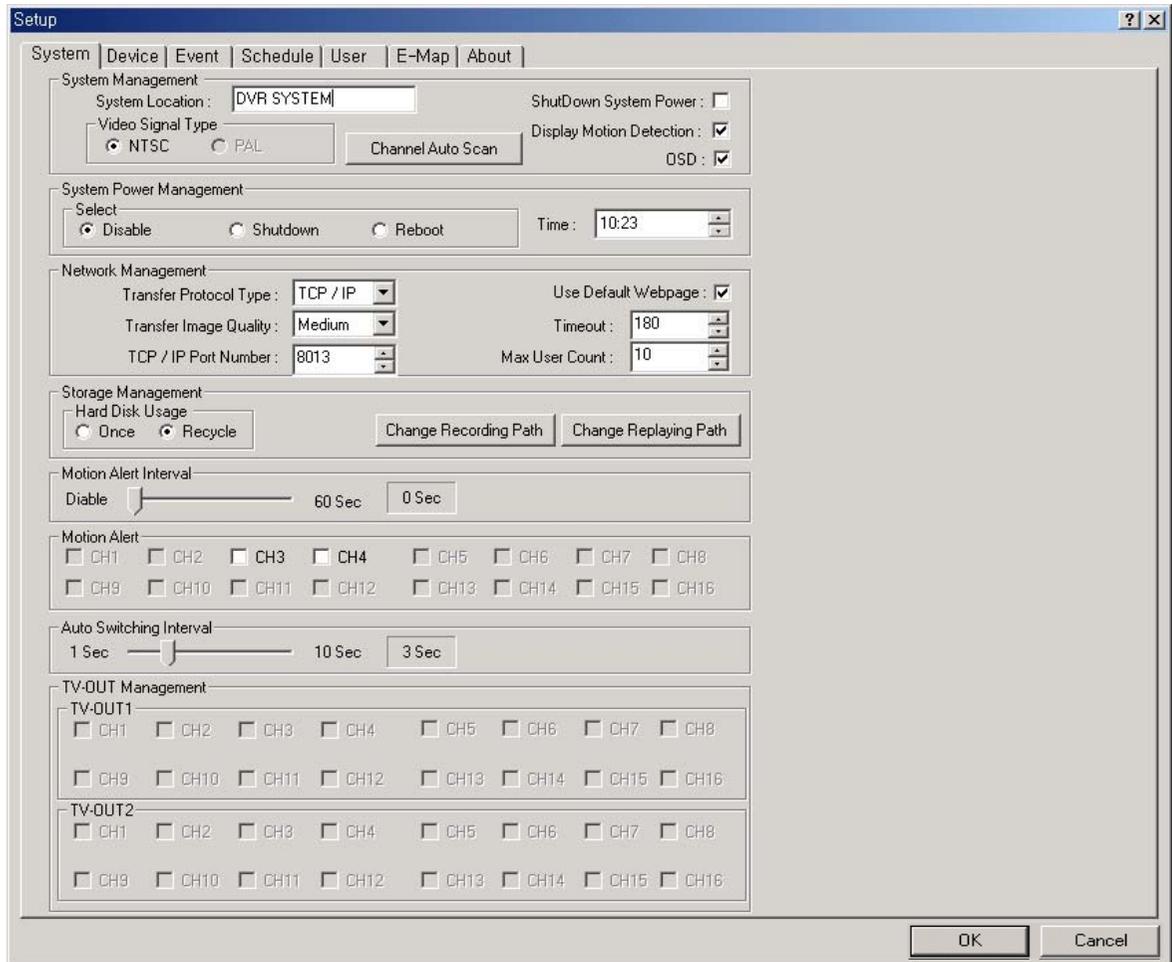


### 1-1. System management

1. System location : Identify the place DVR is installed.
2. System power management  
If you click it, Windows® shut down when the DVR program shuts down.  
(system power management is setup as default. )
3. Auto channel : Automatically search and install connected cameras.
4. Display motion detection : If you click it, status of the motion detection is visible on the screen .
5. OSD : displays information of each cameras.
6. Video signal type : Choose the type of video signal either NTST or PAL.

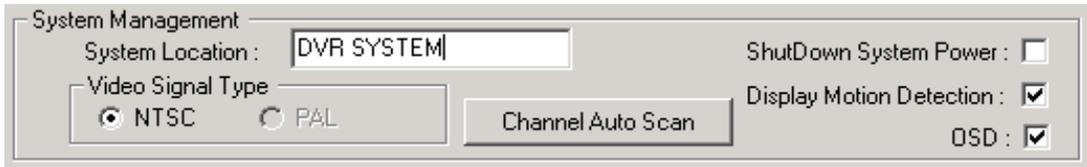

### 1-2. System power management : setup Panascope DVR system on/off time.

1. Disable : Not to use system power manager. (setup as default).
2. Shutdown : System will shut down on set time.
3. Reboot : System and Windows® restart on set time.
4. Time : Set time.

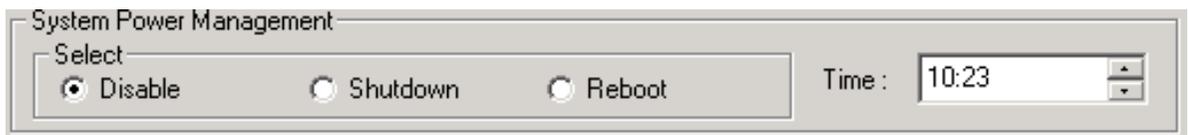


### 1-3. Network management

1. Transfer protocol type : choose protocol that will be used for network connection (TCP/IP, modem).
2. Transfer image quality : choose transfer image quality.
3. TCP/IP port number : specify TCP/IP port number.  
( Use port number that is not in use with other internet service)




### 1-4. Storage management

1. Hard disk usage
  - Once : Data will save only once (when HDD capacity reach full, then data will NOT save) (Suitable for device).
  - Recycle :It will overwrite on the oldest data.
2. Change the recording path :Locate the paths for recording and saving.
3. Change the replaying path : Locate the paths for the replaying equipment.

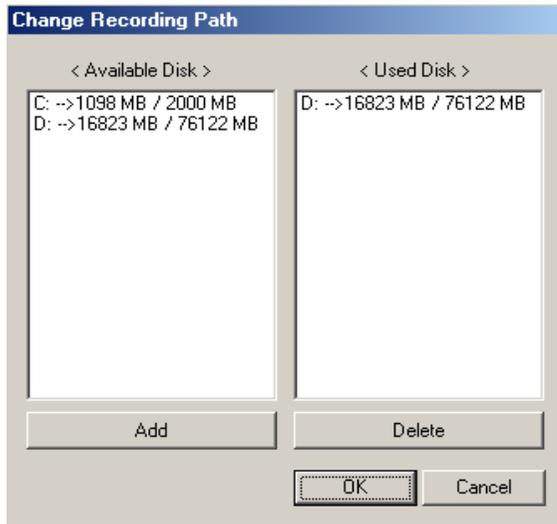

**1-5. Motion alert interval : Set the length of time that full single screen mode is displayed when motion is detected.**


- Motion alert : system will turn to the full single screen mode when motion is detected.

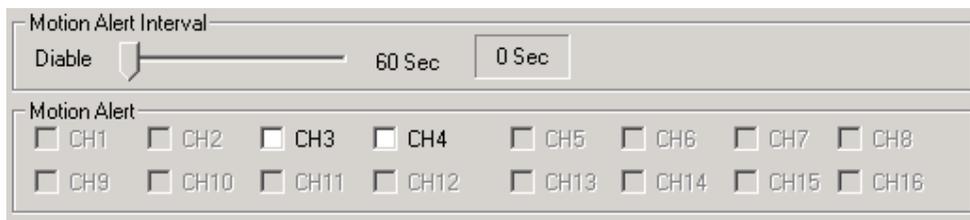

**1-6. Auto switching interval : Set the length of auto channel time. Auto channel will work according to the timing set here.**


- Available when more than 2 channels are used.

**1-7. TV OUT Management : Set TV output channels.**

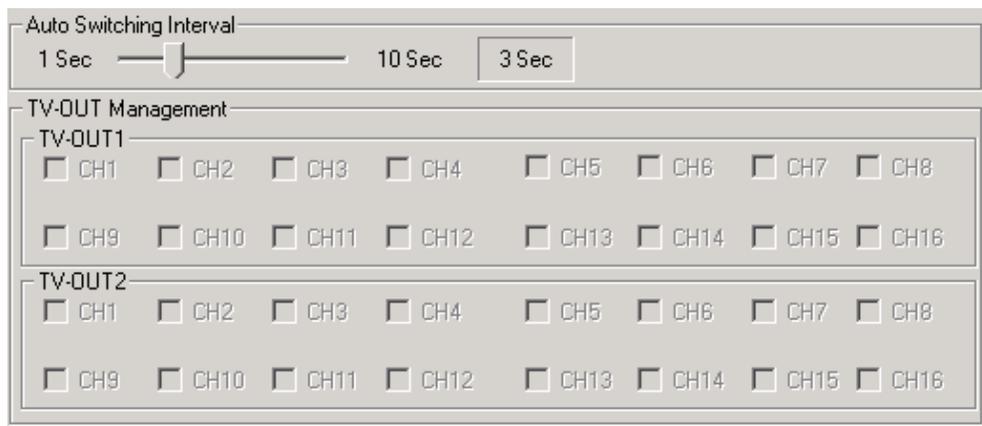


## 2. Equipment


### 2-1. Camera

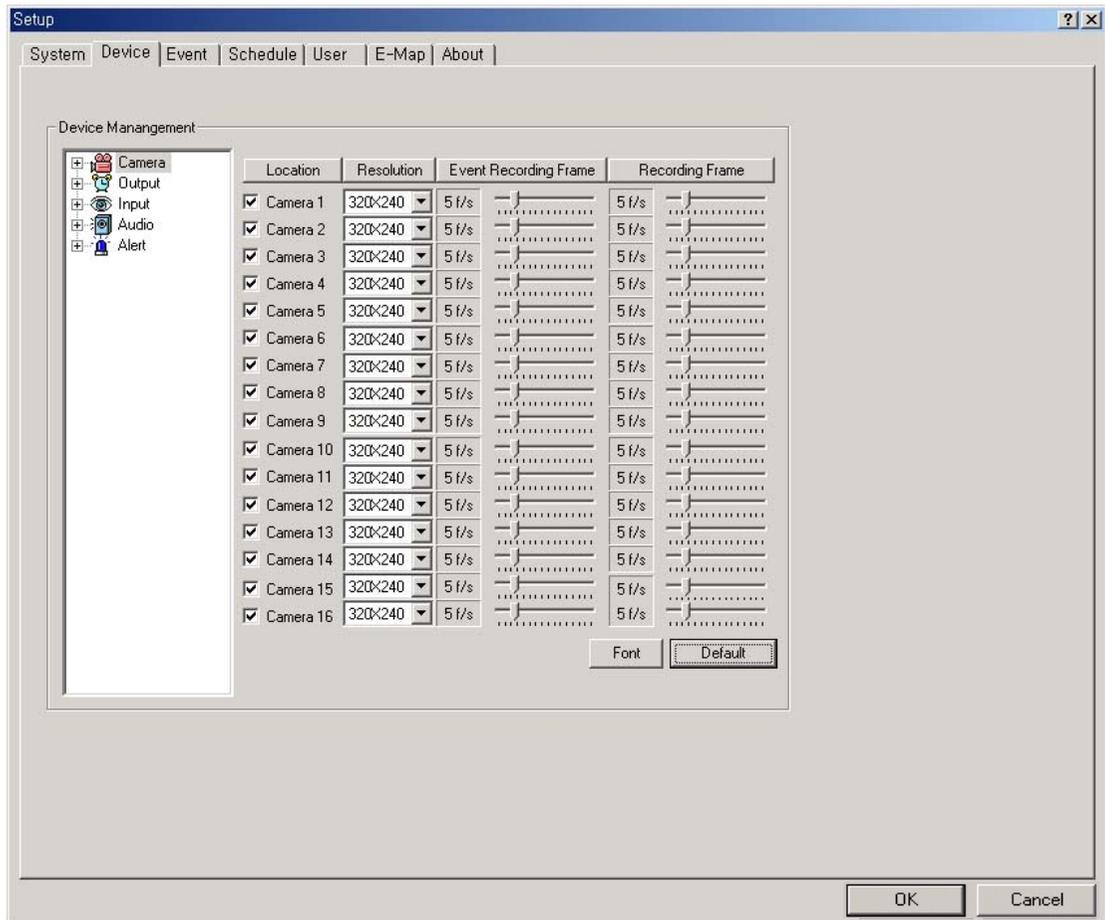

1. Location : mark each camera location.
2. Resolution : select the recording resolution. (320 \* 240, 640 \* 240, 640 \* 480)
3. Event recording frame : adjust the recording frame rate in case of an event.
4. Recording frame : adjust frame rate of recording.
5. Font : set the font display on the screen.
6. Default : Set default.

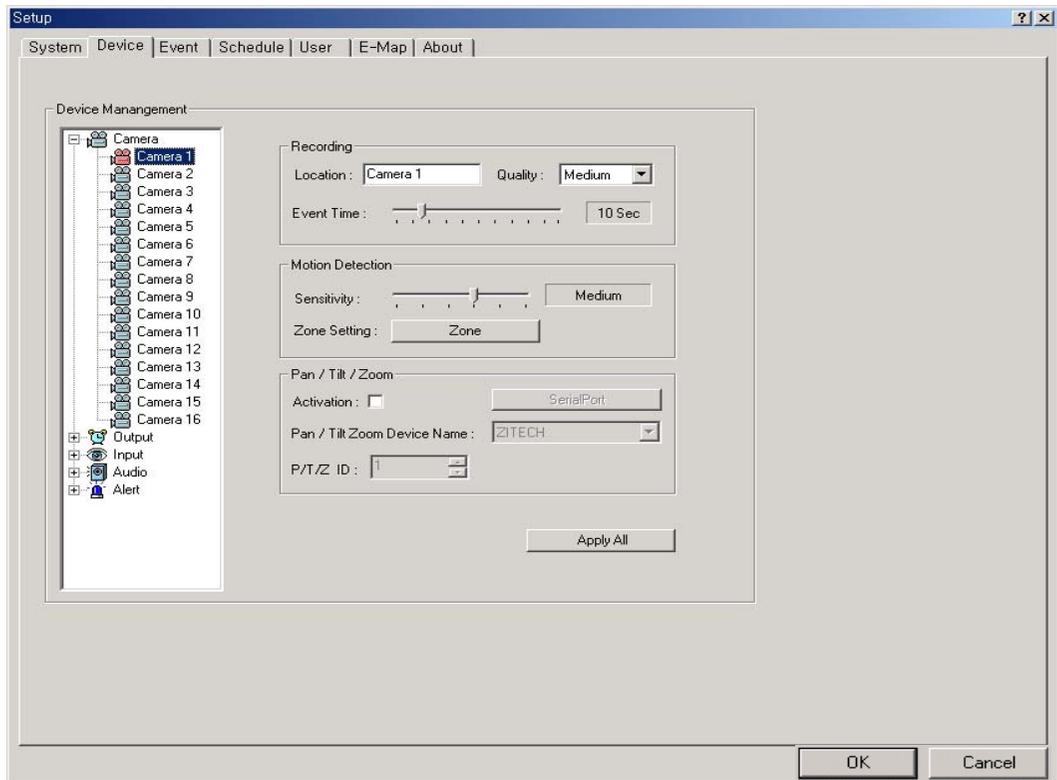


- Detailed setup menu for each camera.

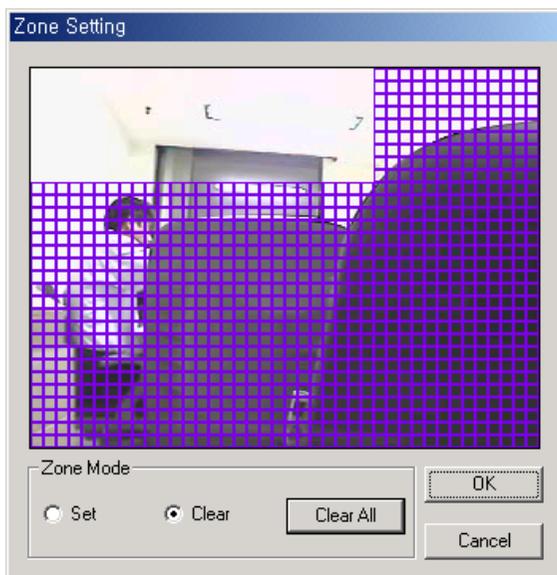



1. Zone setting : select the specific area for your camera to detect motion.
2. Setting the area : set the area to be detected by dragging the mouse.
3. Clear : delete the specific area that camera has been set up.
4. Clear all : delete all area that camera has been set up.

## Setup PAN/TILT/ZOOM.

- Apply all : Apply the same value to every channel of the DVR.

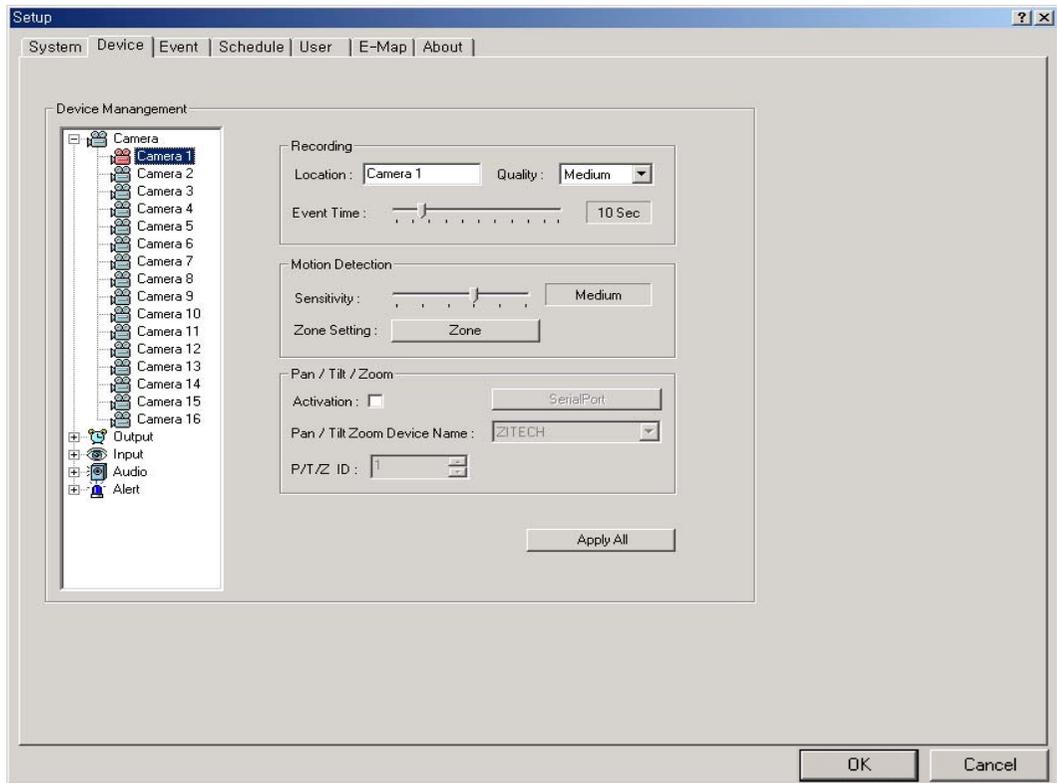



< Description about PAN/TILT/ZOOM >

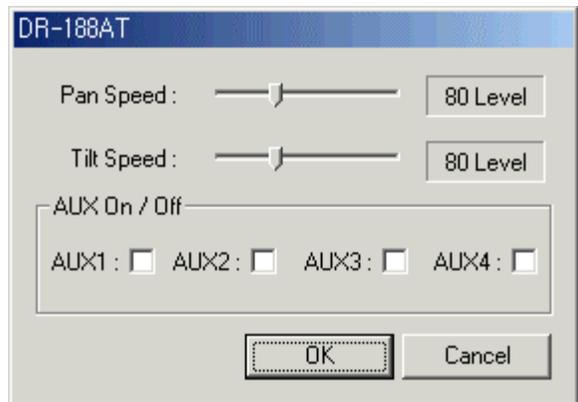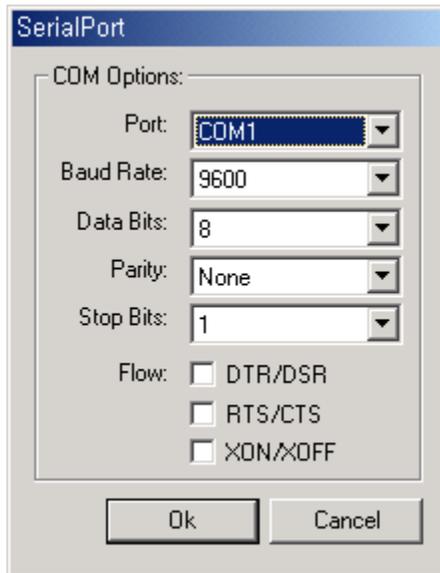

-Detail: Detail set up menu for PTZ camera



- Set up menu for serial port.

## 2-2. Output equipment

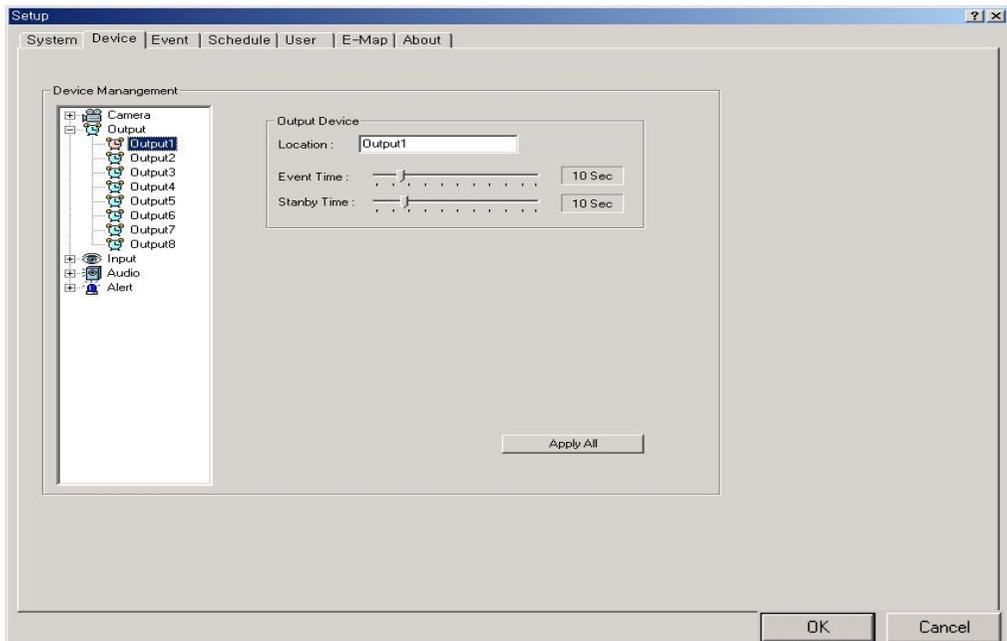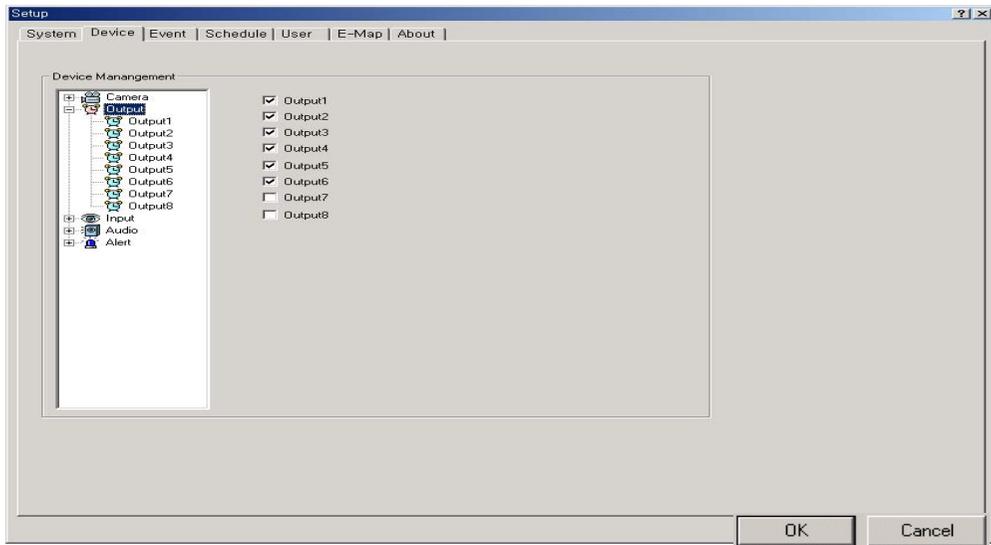



- Apply all : Apply the same value to all channels.
- Event time : Select the reaction time for each of the output devices when an event occurs.
- Standby time : Select the time length that output device is prepared to react when an event reoccurs.

### 2-3. Input devices menu

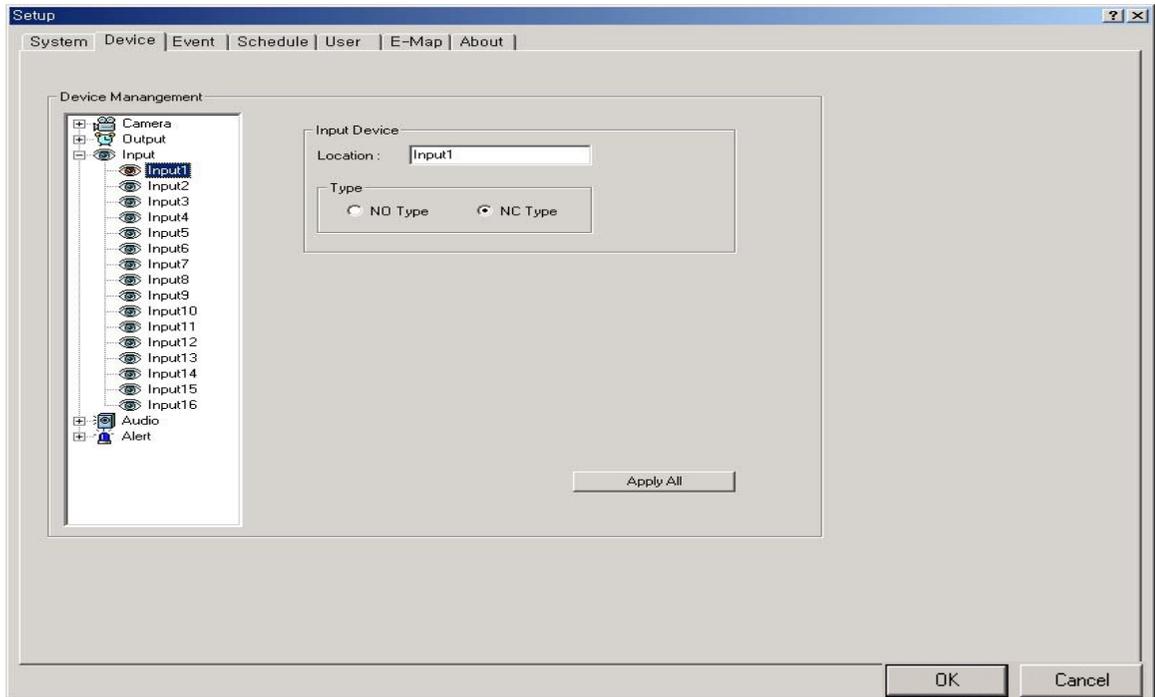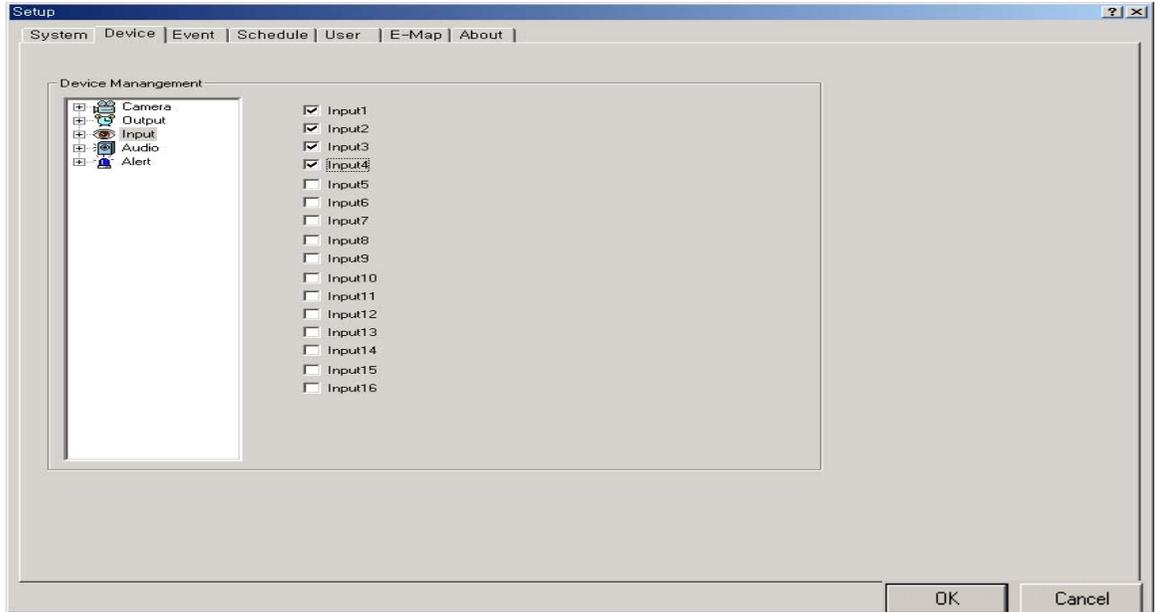



- Setup for each input device.
- Apply all : Apply same setup value to all available input devices.
- NC: Normal Close                      NO: Normal Open

## 2-4. Audio menu

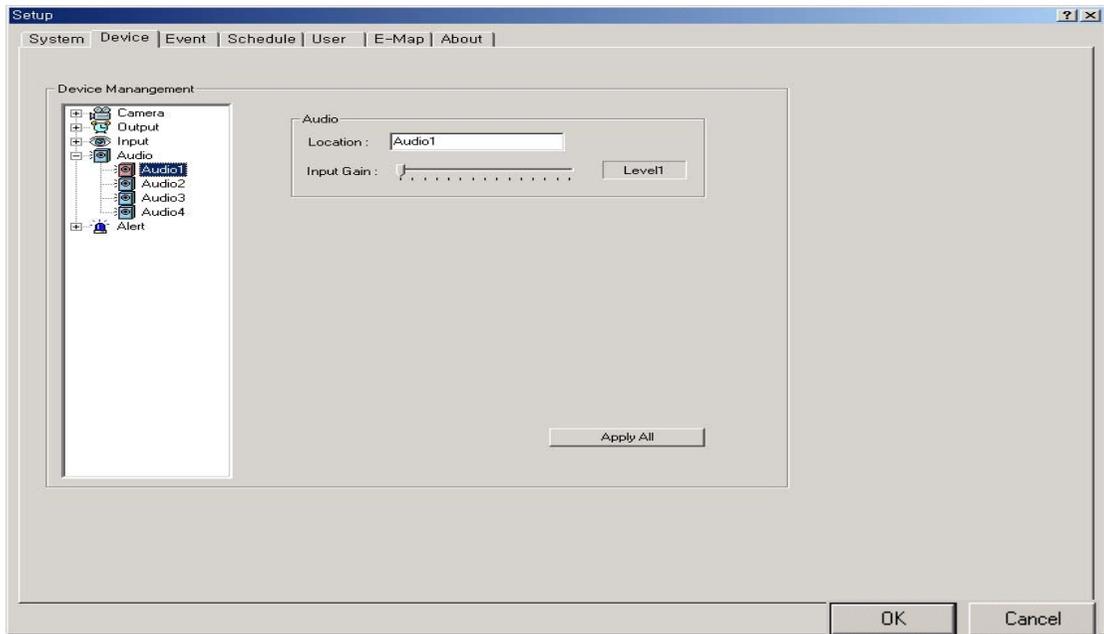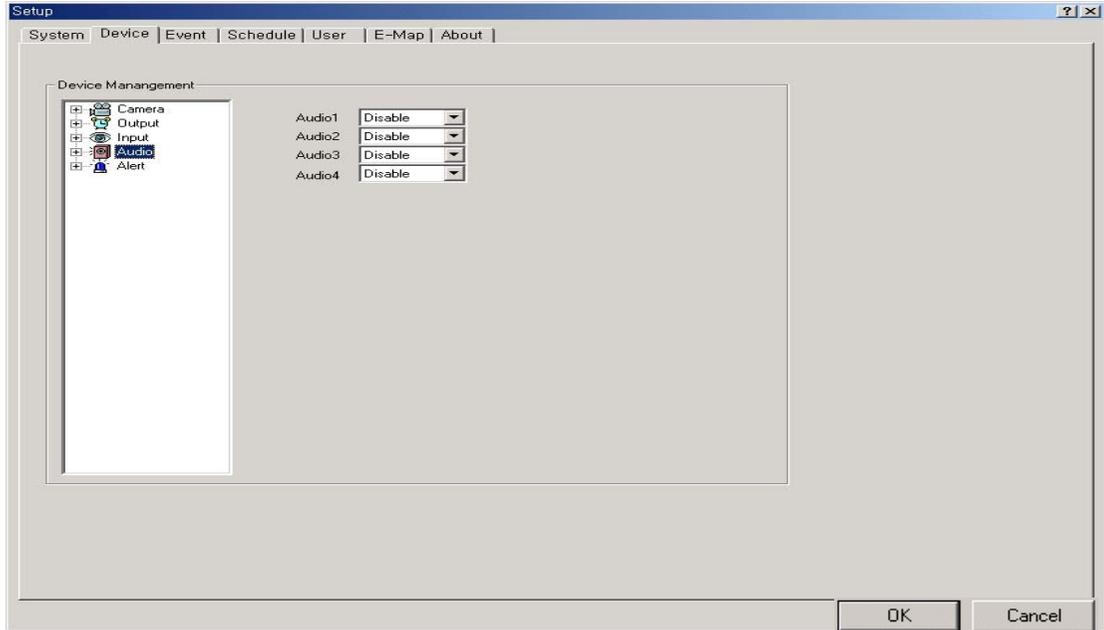

- Audio is recorded with the pictures through the camera connected to audio.
- Input volume : select input audio volume for when an event occurs.
- Apply all : Apply same setup value to all available audio devices.



## 2-5. Alarm menu (Alarm system)

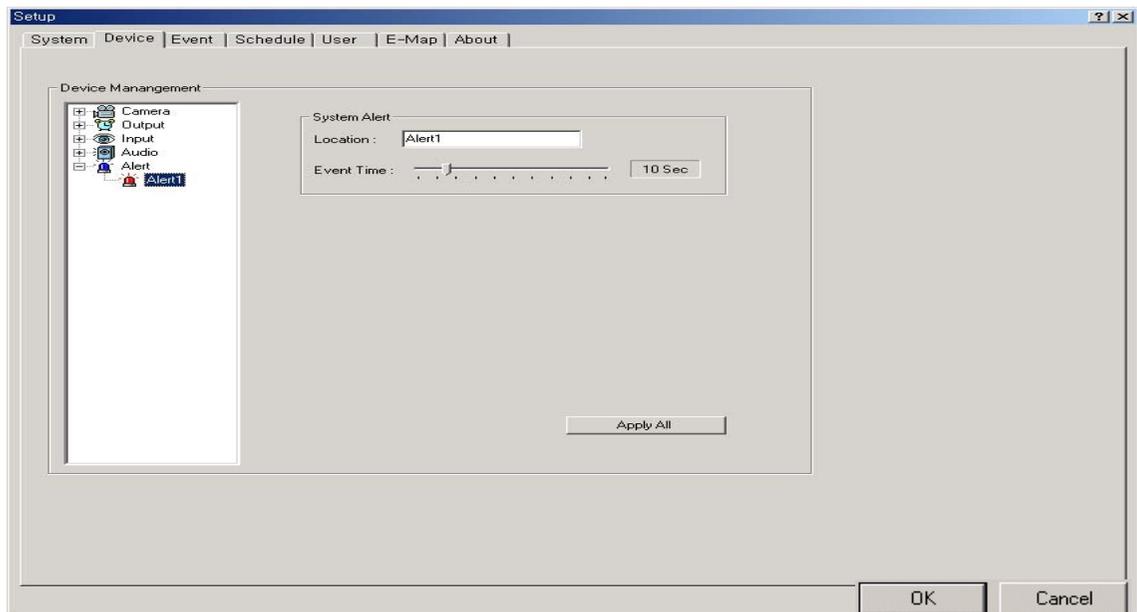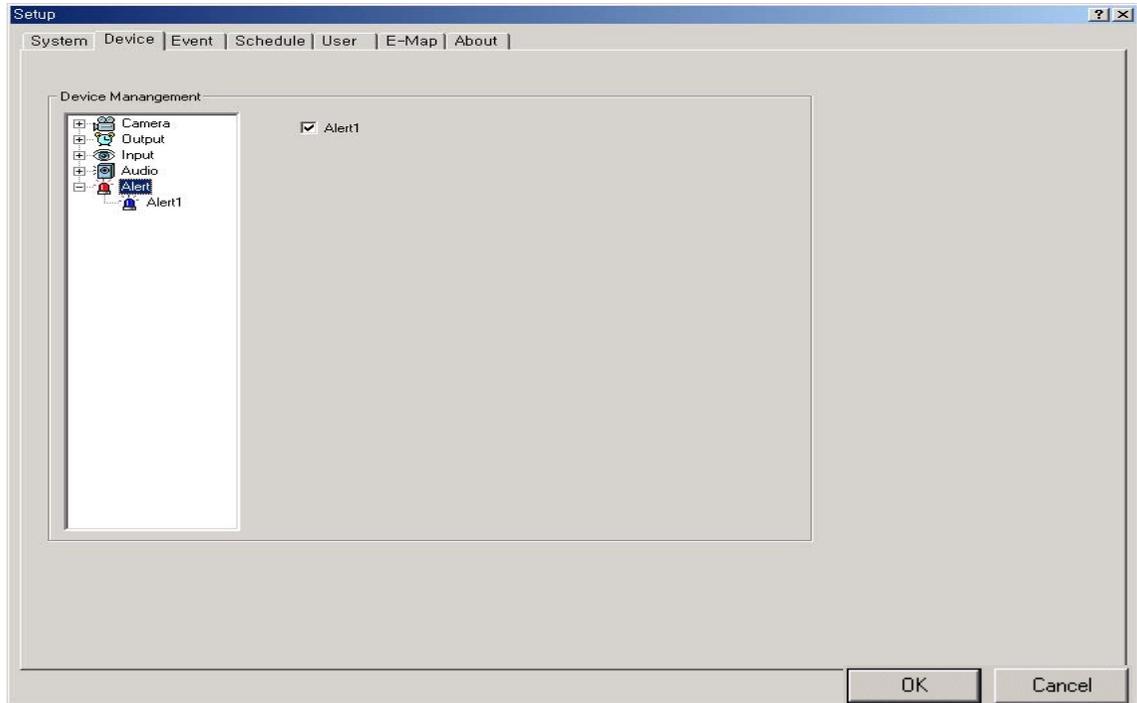



- When an event is detected, the alarm will react.
- Event time : Select the duration of alarm when an event occurs (in second).
- Apply all : Apply alarm setup to all channels.

### 3. Event

3-1. Input : set all equipment connected to the input device including cameras, output devices and alarm to react when input device operates.

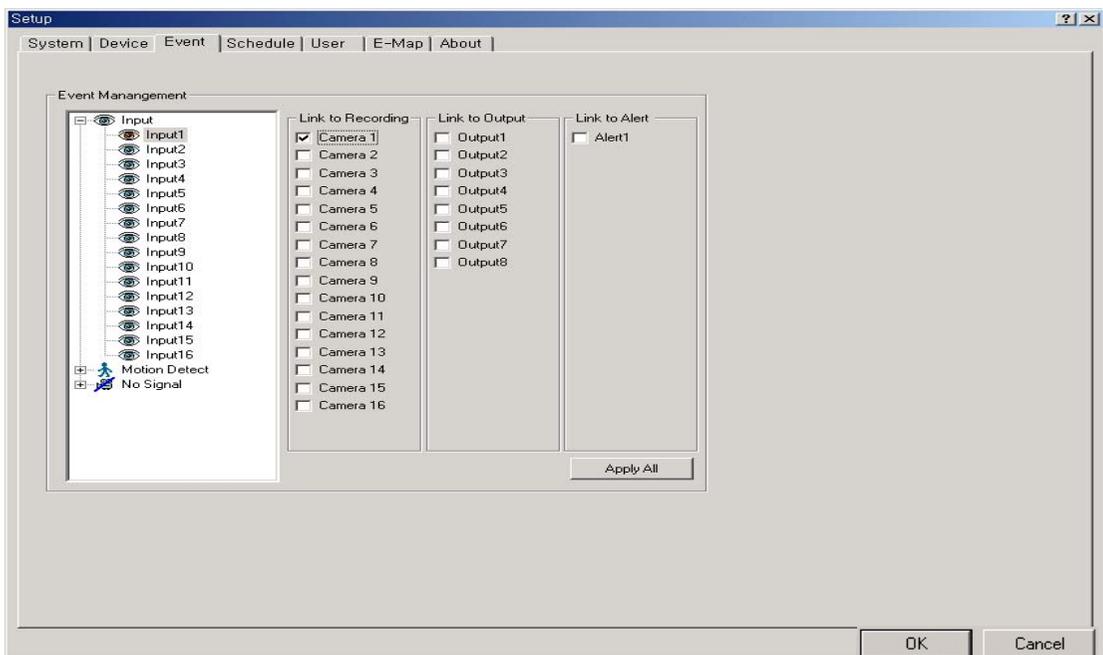
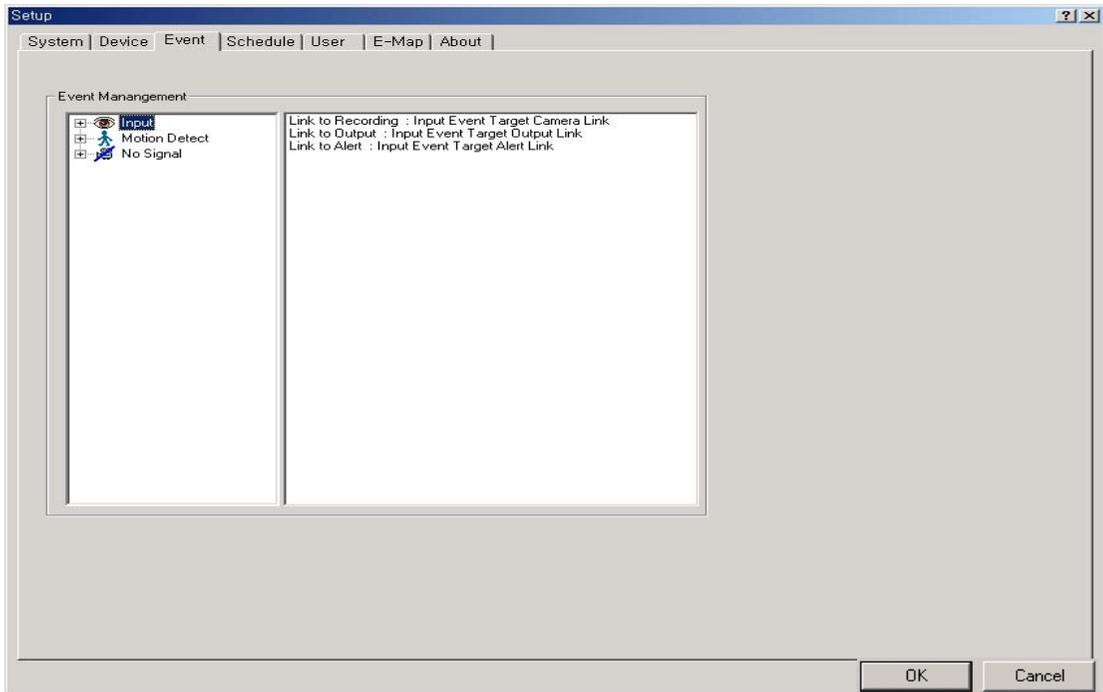


1. **3-2. Motion Detect :**  
 set all the equipment connected to motion detecting device including cameras, output device and alarm to react when motion is detected.

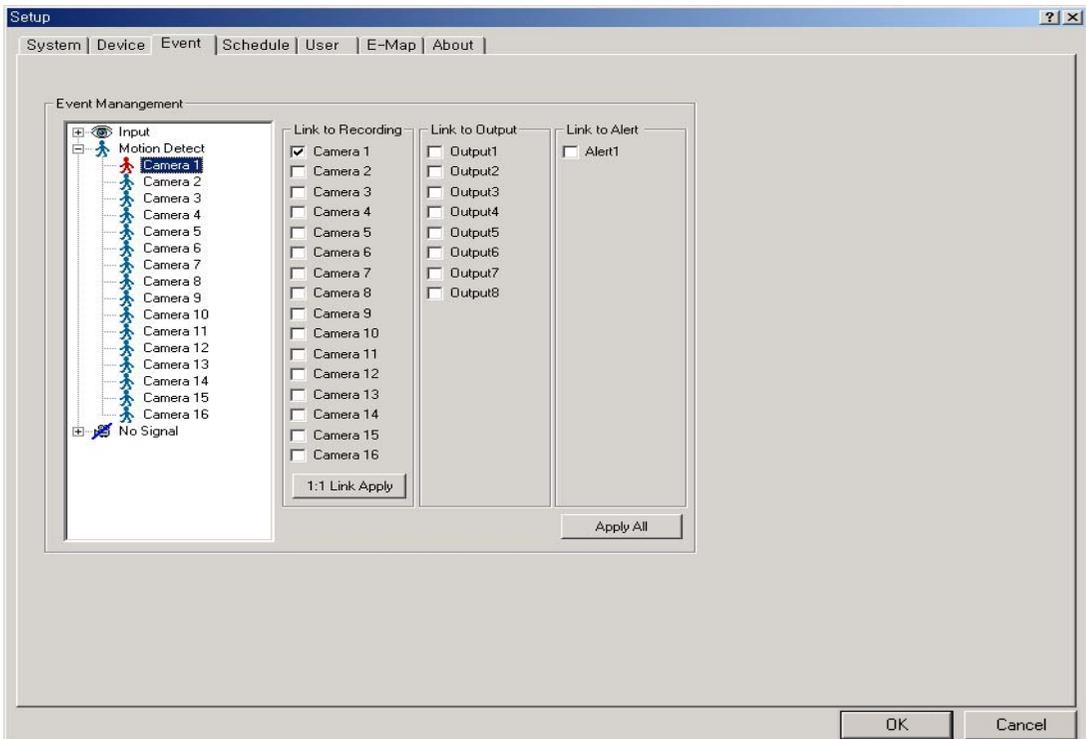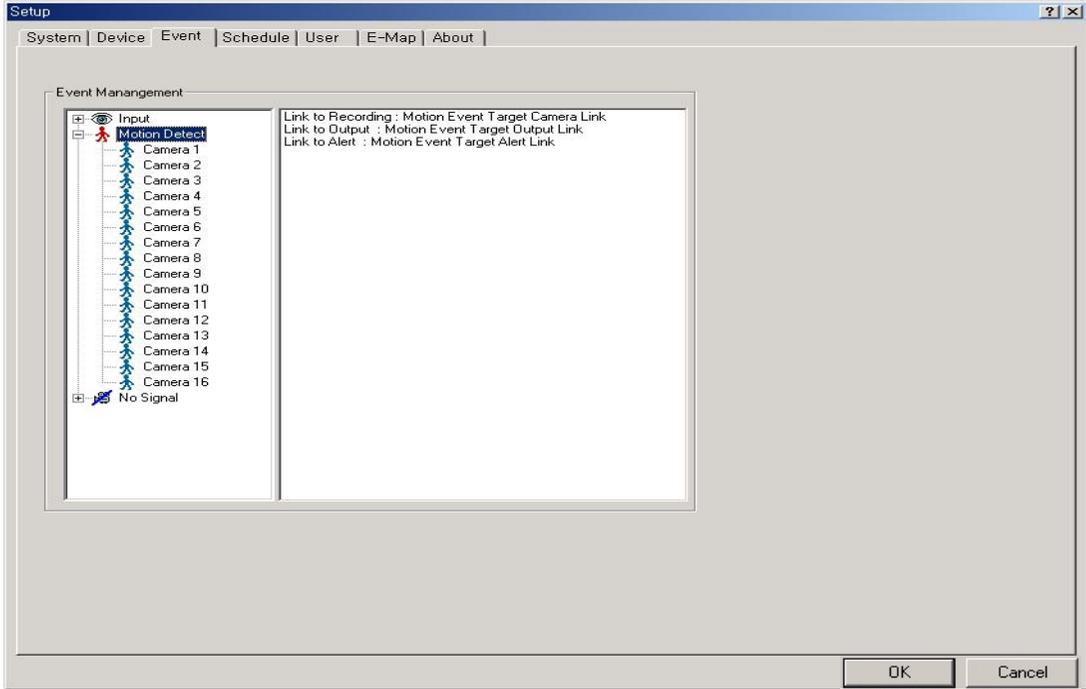


### 3-3. No signal :

- Set alarm to trigger when no signal is received from the camera.
  - Set another camera to record when no signals from the camera.
  - Set output device to operate when no signals from the camera.
- (e.g. : camera line cut by invader, camera malfunction etc.)

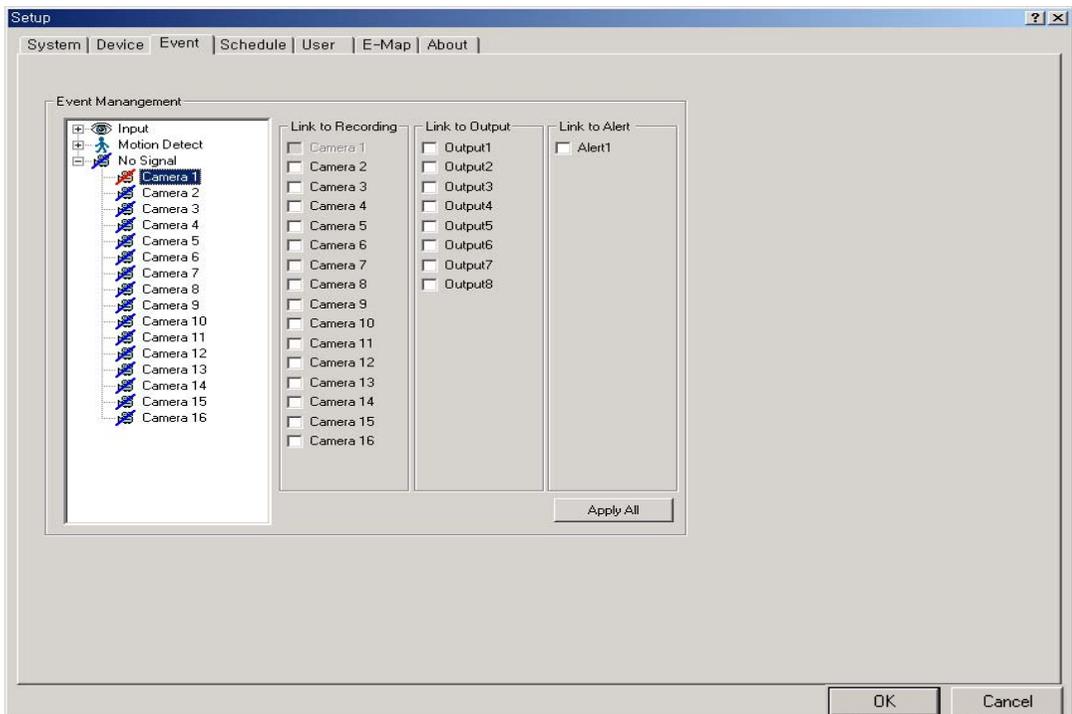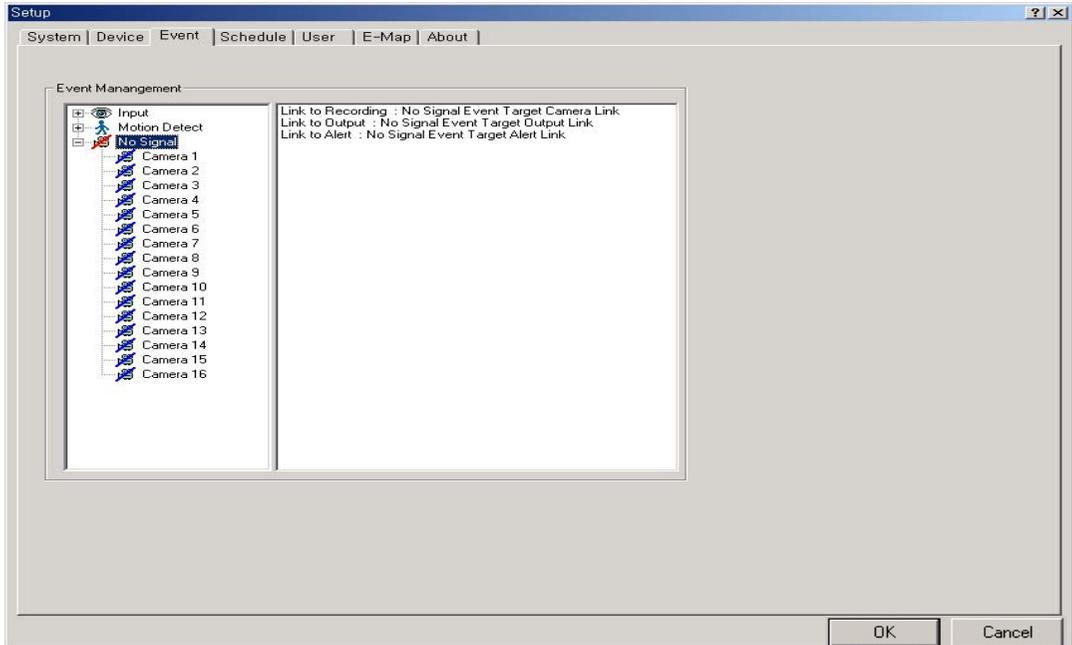

## 4. Schedule

### 4-1. Schedule : Manually set each camera schedule by the date and by the time.

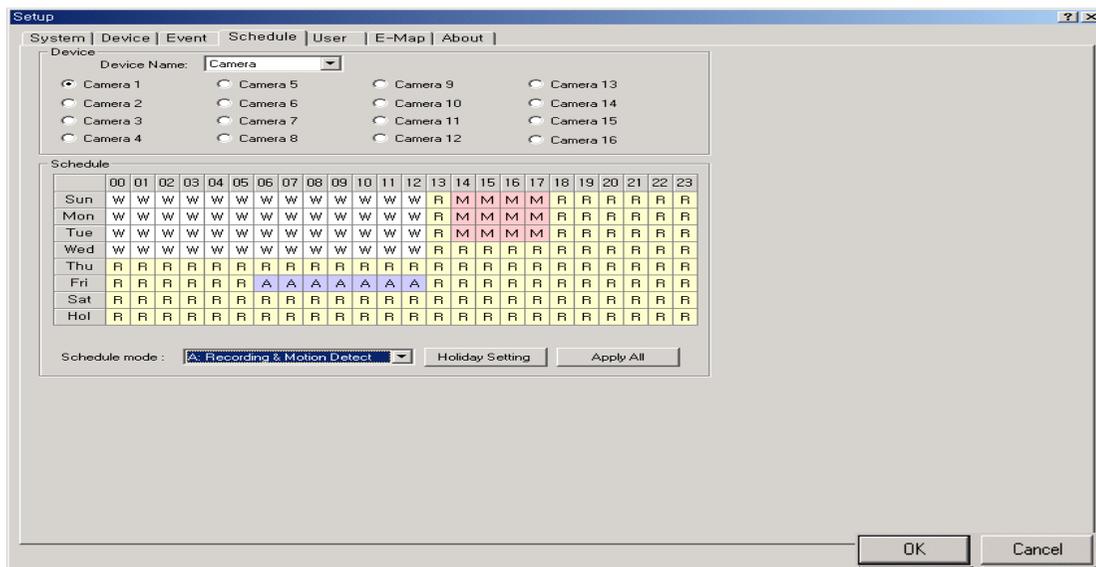

\*Schedule mode


W: Watch, monitor

R: Record

M: Record when motion is detected only

A: Record with motion detection, which means you can set different recording frames when motion is detected and when it is not.


\* Holiday setting : User can set the specific date as holiday.

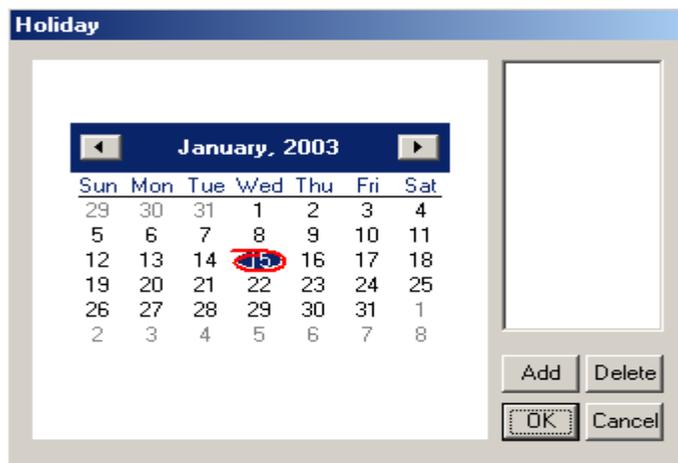



- Add : Add holiday.

- Delete : Delete holiday.


### 5. User : Add/delete/modify user list.

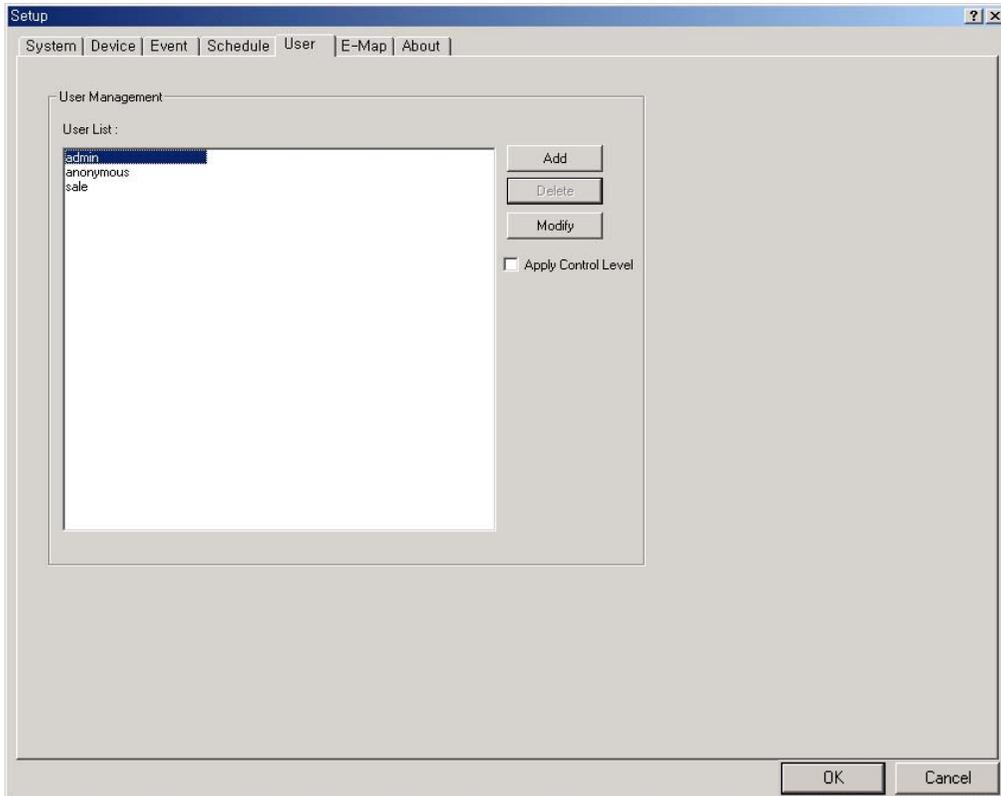


- Add : Add new user.
- Delete : Delete the user selected.
- Modify : Modify the information of each user.

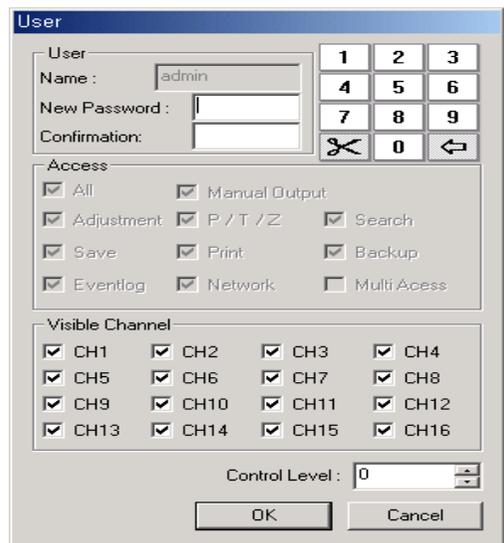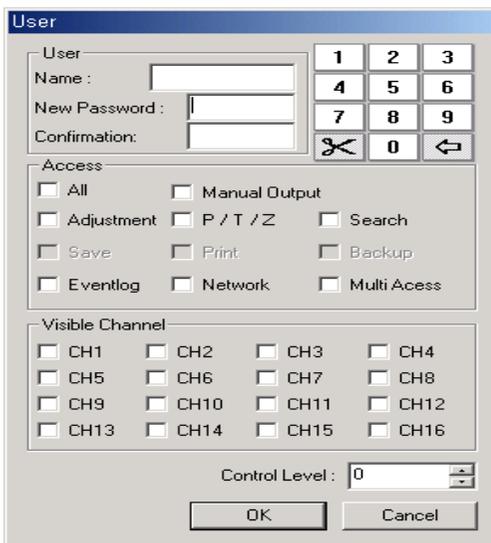

6. Electronic map : Through the map, you can check the location and the condition for each device.

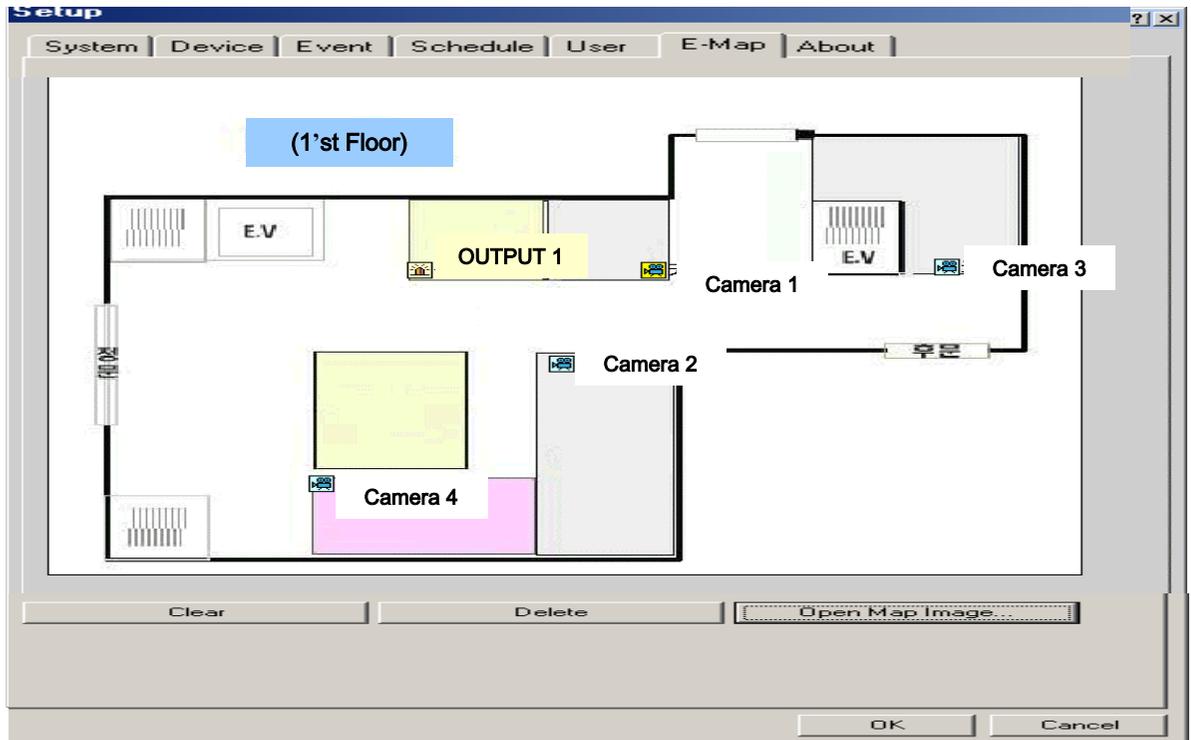


1. Clear : Default map.
2. Delete : Delete map.
3. Opening map image : Find saved map image.

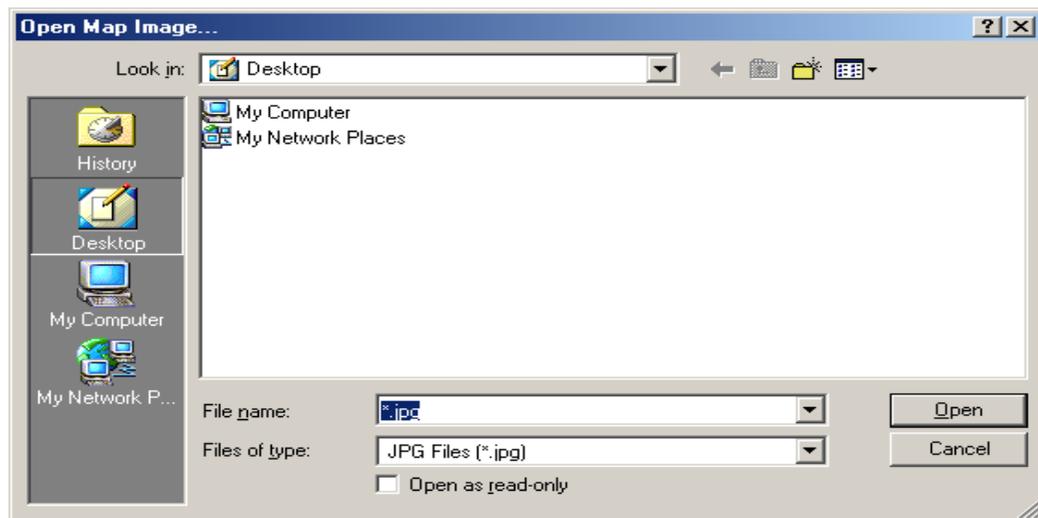


- Enables to open two types of files only :JPEG, 24bit BMP

## 7. Version information

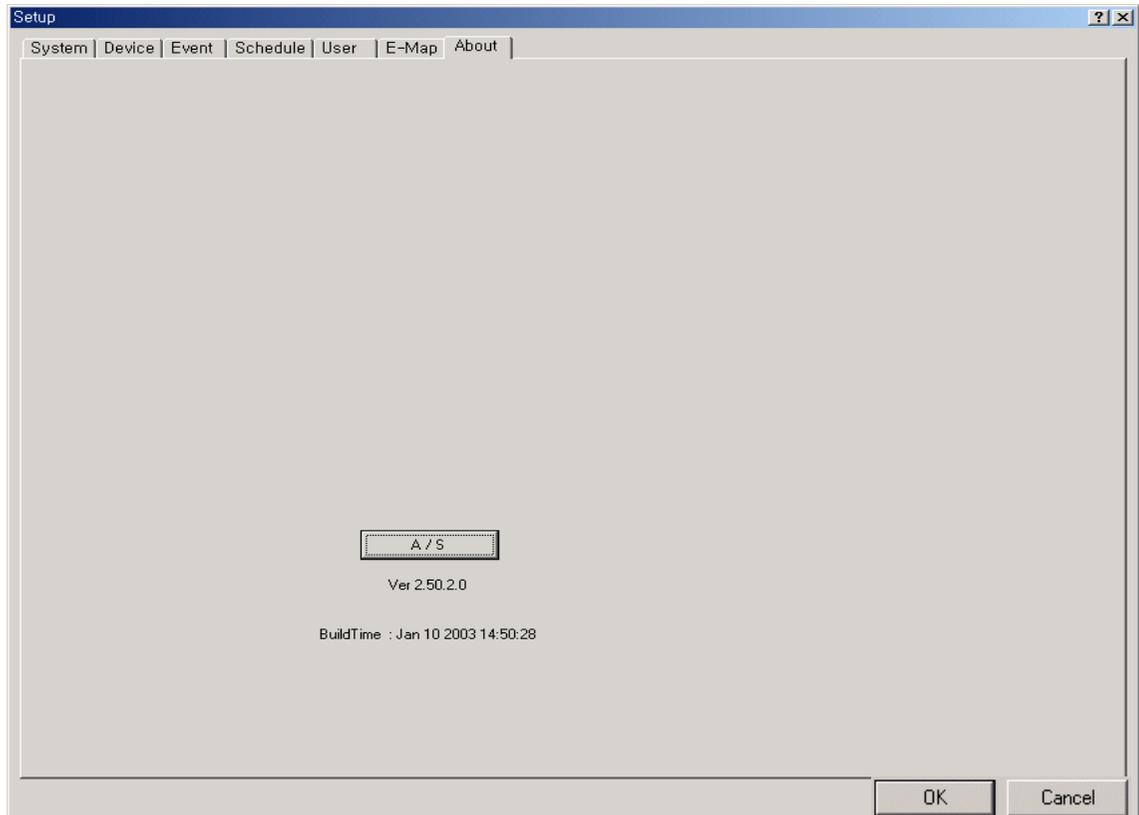

\* The above version can be changed without any pre-notice.

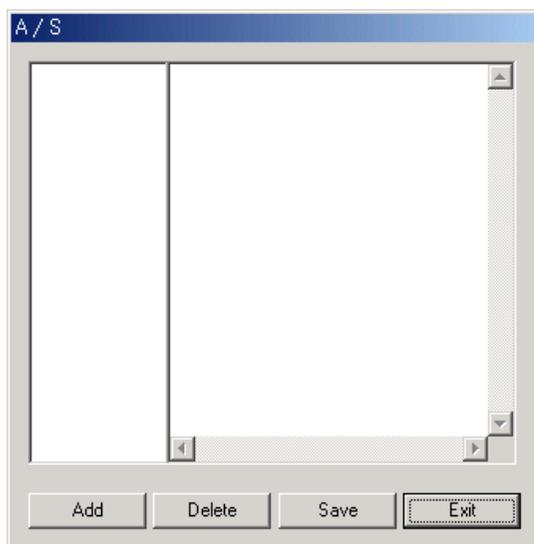

-A/S (Maintenance)  
This menu is used for the purpose of daily check ups.

## Panasonic DVR network setup

### 1. Network log in

The image displays two side-by-side screenshots of the 'Login' dialog box in a Panasonic DVR's network setup menu. Both windows have a title bar labeled 'Login' and two tabs: 'TCP / IP' and 'MODEM'.

**Left Screenshot (TCP / IP mode):**

- The 'TCP / IP' tab is selected.
- Under 'TCP / IP Connection', there is a 'Host IP Address' field with a dropdown arrow and a '>>' button, and a 'TCP / IP Port Number' field with the value '8013' and a dropdown arrow.
- Below are 'User' and 'Password' fields, each with a dropdown arrow.
- A 'Save Password' checkbox is present and unchecked.
- A numeric keypad is shown with buttons for digits 1-9, 0, a scissors icon (delete), and a left arrow icon (backspace).
- A 'Buffering.. 0 Sec' progress bar and '< Status >' label are at the bottom.
- A status box contains the text 'Network Login Ready!!'.
- 'OK' and 'Cancel' buttons are at the bottom.

**Right Screenshot (MODEM mode):**


- The 'MODEM' tab is selected.
- Under 'MODEM Connection', there is a 'Telephone Number' field with a dropdown arrow and a '>>' button, and a 'Country Code' field with the value '0' and a dropdown arrow.
- Below are 'User' and 'Password' fields, each with a dropdown arrow.
- A 'Save Password' checkbox is present and unchecked.
- A numeric keypad is shown with buttons for digits 1-9, 0, a scissors icon (delete), and a left arrow icon (backspace).
- A 'Buffering.. 0 Sec' progress bar and '< Status >' label are at the bottom.
- A status box contains the text 'Network Login Ready!!'.
- 'OK' and 'Cancel' buttons are at the bottom.

- 1-1. Connection type : Select type of network.
- 1-2. TCP/IP connection : Enter host IP address.
- 1-3. Modem connection : Use this menu for modem connection.
- 1-4. Password : Confirm your password.
- 1-5. User : Set the authority for each user.

## Panascope DVR web viewer service



1. **Web viewer :** You can monitor the scenes of cameras by entering IP address of your DVR in Internet explorer/Netscape.  
Download the DVR program, the client program will be installed automatically.


1-1. Write your IP address in the web browser.

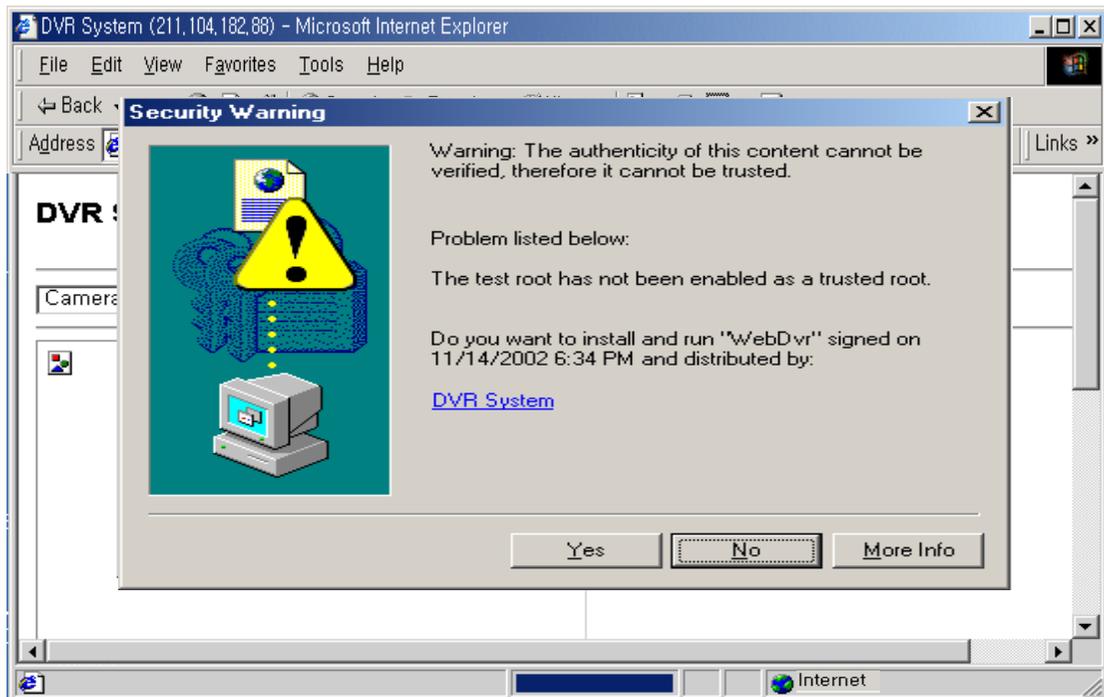

- Click "Yes", when the security message is shown.  
Client program will be installed automatically.

1-2. Select screen partition, resolution for each camera.

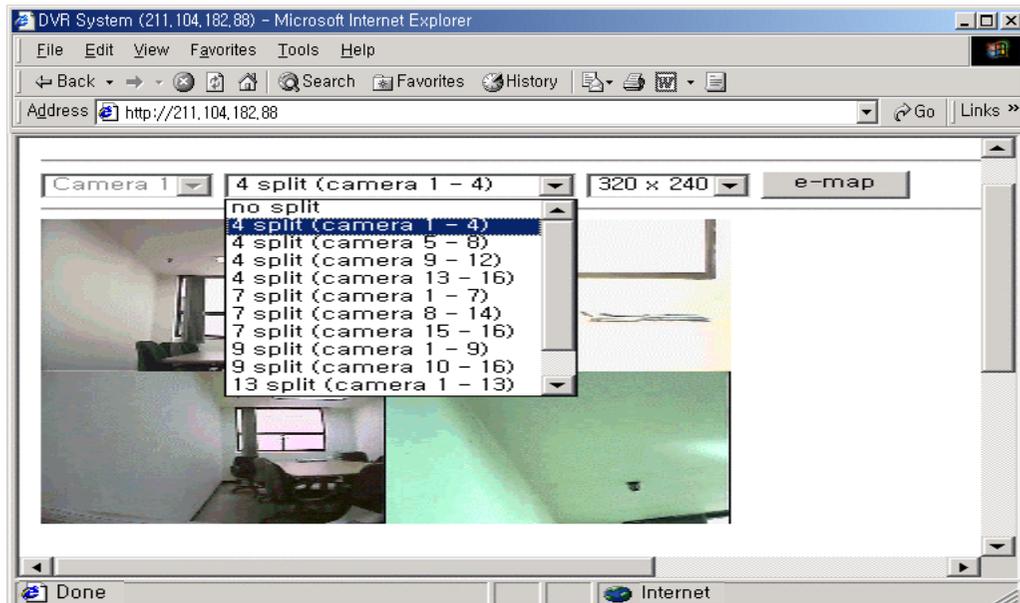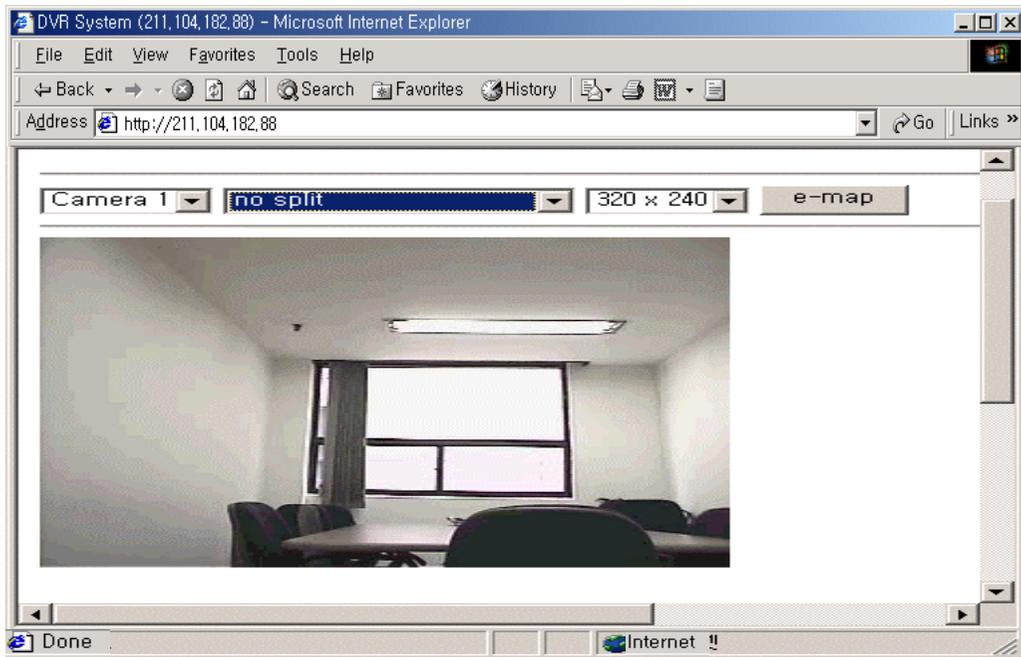

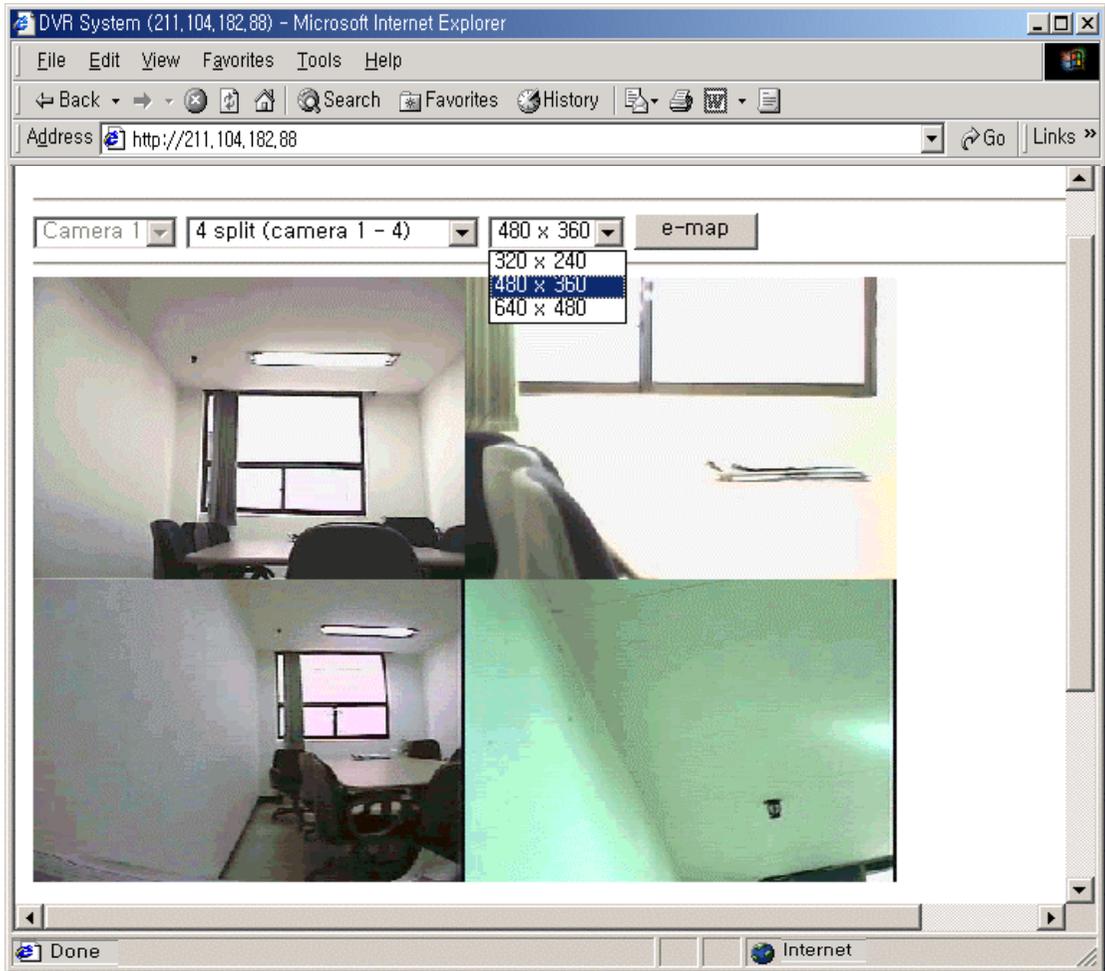

## Troubleshooting

### 1. When captured image is not displayed.

- 1-1. Check the cable connection (power cable, camera cable)
- 1-2. Check if the DVR driver was installed properly.
- 1-3. Check your direct X version (use version 8.0 over).

### 2. Recording trouble.

- 2-1. Check your recording setup menu.
- 2-2. Confirm that light is on to the recording button.
- 2-3. Check your remaining hard disk capacity.

### 3. Playback trouble

- 3-1. confirm whether the data exists for the selected date.
- 3-2. check the time bar (saved data shown as blue color).
- 3-3. Change to block mode.
- 3-4. Check your designated camera number.

### 4. PTZ (Pan/Tilt/Zoom) trouble

- 4-1. Check the connection to PTZ equipment.
- 4-2. Confirm if PTZ is set properly. (Check ID, baud rate, serial port Etc.)

### 5. Storage trouble.

- 5-1. Make sure that disk cleanup option on HDD is NOT chosen.
- 5-2. Confirm if "Continue" is chosen for Hard Disk Usage.
- 5-3. In case that "Once" is chosen for Hard Disk Usage, back up the data to other device and delete the data on HDD.

### 6. Audio trouble

- 6-1. Check whether the sound card is installed in your system.
- 6-2. Check the cable connection.
- 6-3. Check the audio setup.
- 6-4. Check whether the designated channel has set up for audio recording.

### 7. Other trouble

- 7-1. For more assistance, use the troubleshooting guide located in the Windows® help or contact your vendor.

# **Panascope**