





SkyGuardTWX Vision-Pro Plus “978 UAT/1090 ES” ADS-B Transceiver Setup

This Transceiver is a fully integrated 978mhz UAT and 1090mhz ES ADS-B radio transceiver along with a WAAS GPS and WiFi transmitter. The unit is powered on by plugging the provided DC power adapter into any aircraft power socket that provides either 12v or 24v DC with a minimum of 3 amps. There are 5 antennas (one - 9” Blue Blade on 4 ft. coax, two - 5” black, one - 1” black, and one - 4” black) and a GPS receiver that must be installed **prior to powering up the transceiver**. The GPS receiver “puck” is plugged into the ADS-B transceiver unit with the “arrow” on the GPS plug pointing up. The two 5” black ADS-B receiver antennas are attached to the outside coax connectors adjacent to and at same end as the GPS plug. The left side coax connection is the 978mhz UAT receiver port and the right side coax connection is the 1090mhz ES receiver port. The 4 ft. coax cable with 9” Blade antenna is attached to the center coax connector at the same end as the GPS plug. This is the 978mhz UAT transmitter port. The 4” black antenna is attached to the coax connector that is between the transmitter port and the 978mhz UAT receiver port. The 1” black WiFi antenna and the DC power adapter plug are connected to the opposite side of the receiver. See photos just below:

Antenna End Plate

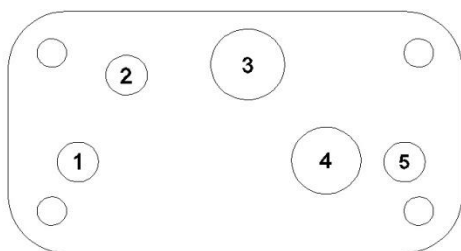

Power End Plate

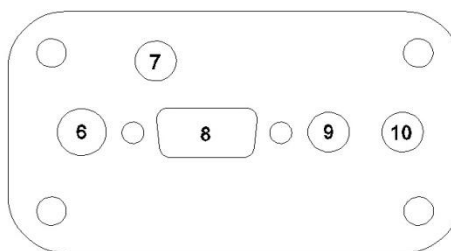

1. 978mhz receiver antenna (5” Black)
2. Transponder squawk detection antenna (4” Black)
3. 978mhz transmitter antenna (9” Blue on 4ft. coax cable)
4. GPS antenna
5. 1090mhz receiver antenna (5” Black)
6. Power plug receptacle
7. For future use
8. I/O connector (for future use)
9. Power LED
10. WiFi antenna (1” Black)



- After all antennas, GPS, and power adapter are connected to the main unit, power up the transceiver. Be sure that all receiver/transmitter antennas are as vertical as possible to maximize radio reception/transmission.

- The N-number and ICAO code as well as a default squawk code must be set prior to your first flight. You can find your aircraft ICAO code by doing an N-number search on www.faa.gov. This search will bring up a table with the details for your specific aircraft. The 6 character ICAO code is defined in this table as: “Mode S Code (base 16/hex)”.

- If using an iPad or iPhone as your primary flight display, there is an app. available on the Apple App. store under “SkyGuardTWX” that will allow initial preflight setup and in-flight control of the transceiver. This app. allows setting/changing of the specific aircraft parameters for which the transceiver is contained. Be sure to download/install this app. to your Apple device and configure the transceiver parameters prior to your first flight. The SkyGuardTWX app. also provides a visual and audio traffic alert display screen. For details on how this works, read the app. description on the Apple App. Store.
 - On your Apple device, go into “Settings” and turn ON Airplane mode.
 - While in “Settings”, turn on WiFi and after a brief search, a WiFi hot spot will appear showing “SkyGuardTWXxx” where “xx” is a numeric value specific to your ADS-B transceiver.
 - Select this hot spot by tapping on it’s name.
 - Wait for approximately 10 seconds for the Apple device to establish a connection to the ADS-B transceiver over WiFi. If a connection is not

established, turn off your WiFi on the Apple device and power cycle the transceiver. Then try again.

- Close “Settings” on the Apple device.
 - Use the SkyGuardTWX app. for iPad/iPhone to configure your transceiver at this time.
- If you are using an Adventure Pilot iFly 720 GPS Display Tablet or the iFly GPS app. for iPad/Android as your primary flight display device, refer to the iFly 720 user manual for instructions to connect to and configure the transceiver.
- The iFly 720 and iFly GPS app. have a “Transceiver Configuration Control Panel” that is built into the navigation software main menu. You can use this to perform the initial transceiver configuration as well as in-flight control of the transceiver.
- Once the transceiver has been initially configured with N-number, ICAO code, and default squawk code, you are ready to go fly.
- Select either WingX Pro 7, iFly GPS, SkyRadar Pro, Naviator, or any other Flight App. that supports the SkyGuardTWX Vision-Pro UAT/ES Transceiver on the Apple/Android device or the iFly 720 GPS Display Tablet.
- Configure the selected Flight App. to connect to the ADS-B transceiver over WiFi. Refer to the specific setup configuration as provide with the specific Flight App.
- You are now ready to transmit your GPS location and receive/display any UAT Weather/Traffic and additional 1090ES Traffic on your displays moving map.
- Each time the transceiver is powered up, it will read the transceiver configuration parameters from internal memory. Then while in flight, if it is necessary to change any parameters, just use the SkyGuardTWX app. or iFly GPS app. for iPad/Android or the iFly 720 Display Tablet to modify and save the new transceiver configuration.
- One new feature that has been added to the Vision-Pro Plus Transceiver is the ability to automatically detect your Mode A/C Transponder Squawk Code. This is accomplished using the 4” black “squawk detector” antenna. Insure this antenna is vertical and that your Transponder is ON and in Transmit Mode. You can verify proper operation by viewing the SkyGuardTWX Control Panel in either iFly GPS or Naviator (both of which display the current ADS-B Transmitting squawk code). While viewing the control panel, change your Transponder squawk code and after 3 or 4 seconds, insure this same squawk code is displayed in the SkyGuardTWX Transceiver control panel window. This feature has been tested and verified with the following Transponders:
KT76, Garmin 320, 327, and 330
Other transponders may work as well but have not been verified by SkyGuardTWX.
- Another feature incorporated into the Vision-Pro Plus Transceiver is an I/O port connector. This connector is for “future use” and will allow connection of the Transceiver to a fixed panel display for depicting traffic and weather information.

- In order to maximize reception, it is best to place the transceiver on the aircraft glare shield. If this is not possible, you can place the transceiver anywhere as long as the antennas have a clear view out the window and are not obstructed by any metal panels. The transmitter coax antenna has a suction cup for placement. It is recommended to place the transmit antenna at least 18 inches away from the transceiver unit. It is also recommended to place the GPS antenna puck at least 12 inches away from the transmitter antenna and with a clear view of the sky. This will insure no interference between the transmitter, GPS, and the receivers. Always place the transmit antenna at least 8 inches (20cm) away from any part of yourself or any passengers.
- There are additional “Blue Blade Antennas with 4ft. coax extension cable” that can be used to replace the two 5” black receiver antennas if you want to remote mount the unit in a location other than on the glare shield. These can be ordered from www.SkyGuardTWX.com .

Helpful Hints:

- In order for the transmitter to begin broadcasting your position, altitude, heading, speed, etc. to the ADS-B ground station towers which will trigger these towers to begin sending the full traffic messages (TIS-B) back to the transceiver, the transceiver must have a valid position fix from it’s internal GPS and you must have configured a valid N-Number and ICAO code into the transceiver. You can verify the GPS is locked by looking at the small red LED on the side of the GPS puck antenna. This light should be flashing red on and off at once per second. If it is solid red, then the GPS is not locked. Also ensure that the transmitter is enabled by using the SkyGuardTWX app. or the iFly 720/iFly GPS app. to show the status of the transmitter.
- If not receiving any FIS-B (weather) or TIS-B (traffic) messages from the ADS-B ground station tower and you are sure you are in range of a tower, check that FIS-B and TIS-B are enabled in the SkyGuardTWX app. Typically in order to receive any messages from the ground station tower, you need to be in-flight at an altitude of > 1000 ft. AGL with a clear line of site to your local ADS-B tower. The SkyGuardTWX Transceivers have a transmit/receive range of up to 60 miles.
- Always take care to position the receivers and transmitter antennas in the vertical position with a clear view out the windows of the aircraft. It is best to keep these antennas away from any metal panels or metal structural supports of the aircraft.
- Make sure you snug the transmitter coax cable connectors securely with a small wrench.

Important Pilot Advisory Note Regarding Safety of Radio Frequency Energy:

Safe use of this device requires care as to the placement of the long Blade antenna. Place this antenna at least 20 cm (8 inches) away from any part of your body or that of other cabin occupants. Only handle the antenna when power is disconnected. Advise your passenger(s) to avoid contact with the long antenna. Retain these instructions with your maintenance logs/files and for future reference.

FCC Compliance Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Modifications not expressly approved by the manufacturer could void the user's authority to operate this equipment under FCC rules.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC RF radiation exposure limits set forth for a public/uncontrolled environment.

WARNING: This Transceiver is to be used to improve pilot situational awareness only and as a navigational aid. It is not intended for primary navigation use in IFR or IMC flight conditions. SkyGuardTWX LLC is not responsible for the Transceiver's end use and will not be held liable for any events occurring from the use of the Transceiver.

Compatible with:

