



OK-NICP-AE
OK-NICP-AEP
OK-NICP-AEG – Wireless
OK-NICP-AEGP – Wireless
Pan Tilt MPEG4 IP Color Camera

Quick Installation Guide

This guide describes the basic functions of
Network Camera with Pan/Tilt.
All detailed information is described in the user's manual.



Warning Before Install

⊙ Power off the Network Camera as soon as it is found smoking or smelt unusual.




Contact your distributor when such cases happen.

⊙ Keep the Network Camera away from the water. If the Network Camera is wet, power off immediately.




Contact your distributor when such cases happen.


⊙ Do not place the Network Camera around the heat sources, such as television or oven.

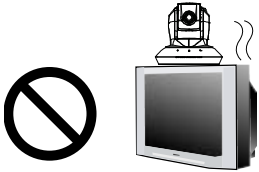

⊙ Refer to your user's manual for the operating temperature.

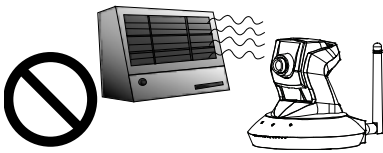


⊙ Keep the Network Camera away from the direct sunlight.

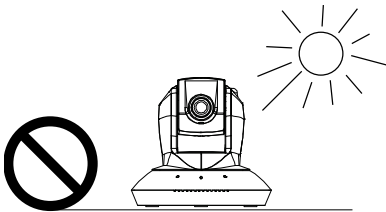


Do not place the Network Camera in high humid environments.




Do not place the Network Camera on unsteady surfaces.

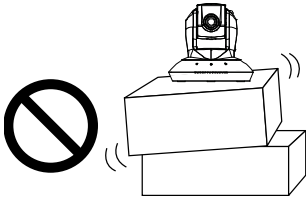


Ⓞ Do not touch the Network Camera when it's lightning.

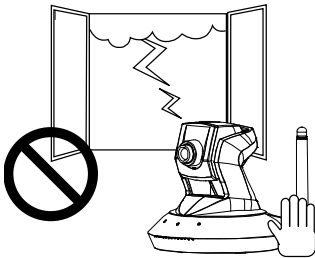


Ⓞ Do not disassemble the Network Camera.

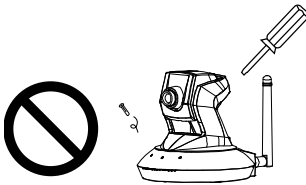


Ⓞ Do not drop the Network Camera.

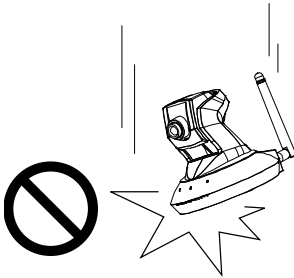

Ⓞ Do not manually pan and tilt the Network Camera when are power is on.

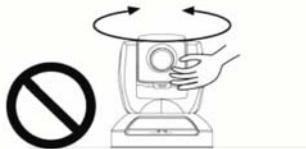

Ⓞ Do not insert any object into the Network Camera, such as needles.

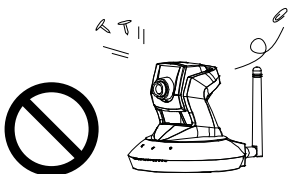



1. Check Package contents

⊙ Wired or Wireless Network Camera




⊙ Power adapter




⊙ Software CD




⊙ Camera Mount Kit & Pads

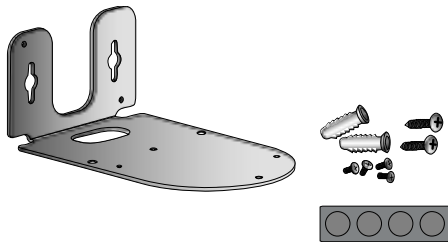

⊙ Quick Installation Guide

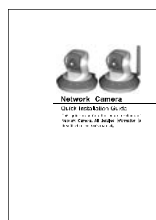


⊙ Antenna for wireless model only

 


2. Physical description

◎ Front panel

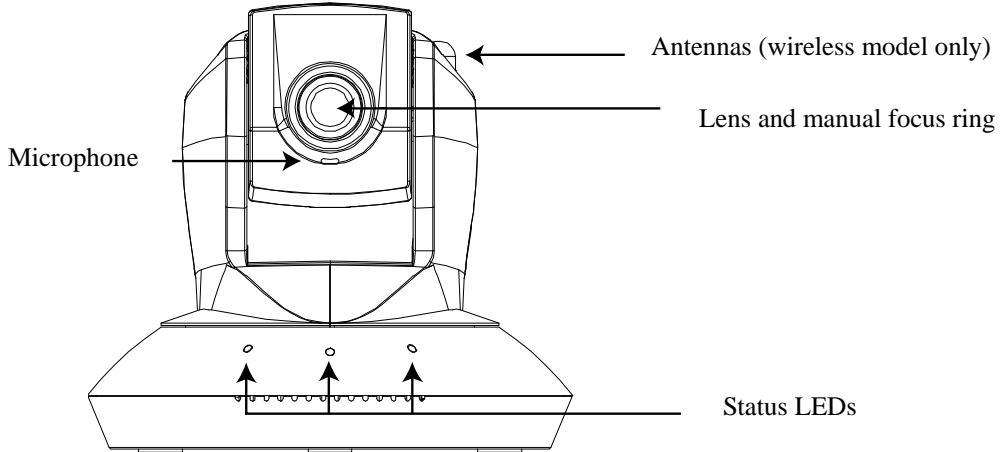


◎ Rear panel

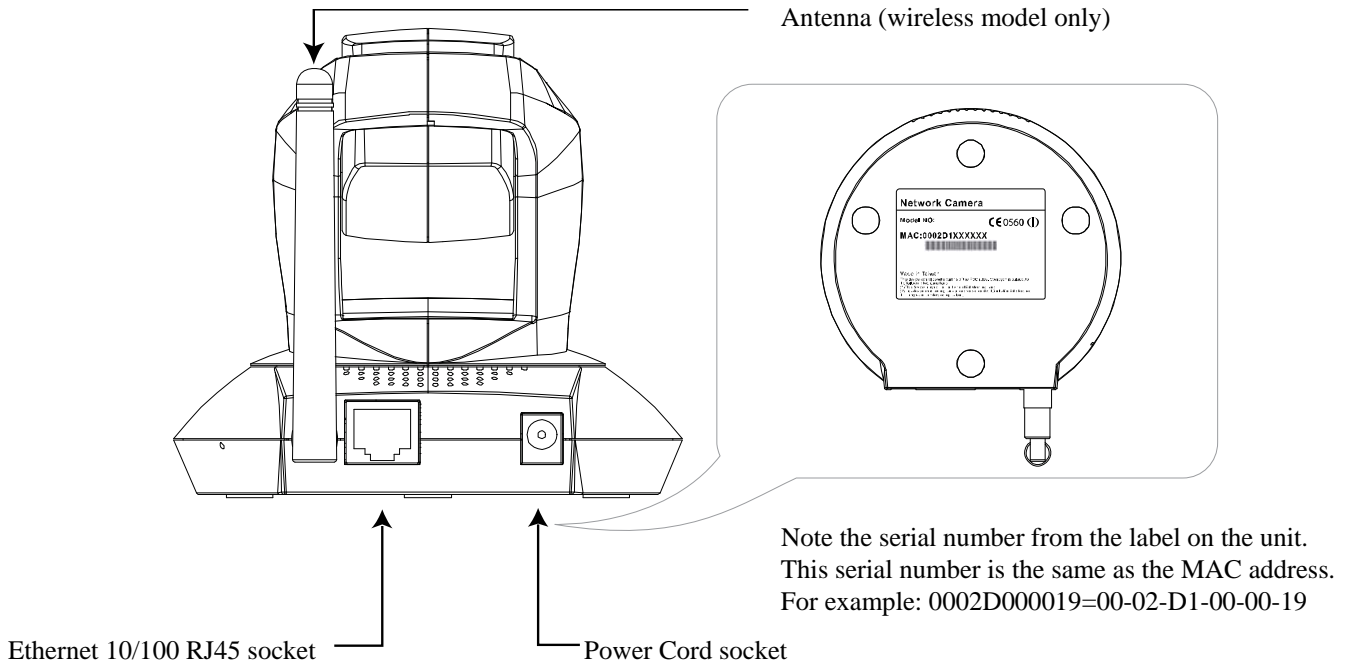

3. Mounting the Camera

Ceiling Mount

1. Fix the camera to the bracket with the two supplied screws (type A).

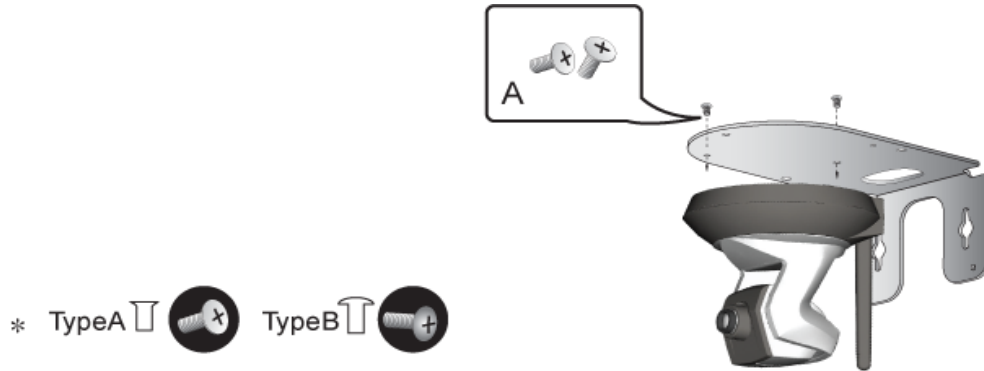

* TypeA  TypeB 

2. Fix the bracket and camera to the ceiling using the two screws and hollow wall anchors.




3. If adopting POE kit (optional accessory) , the POE splitter can be attached to the bracket by using the two supplied screws (type B)




Wall Mount


1. Fix the bracket to the wall using the two screws and hollow wall anchors.

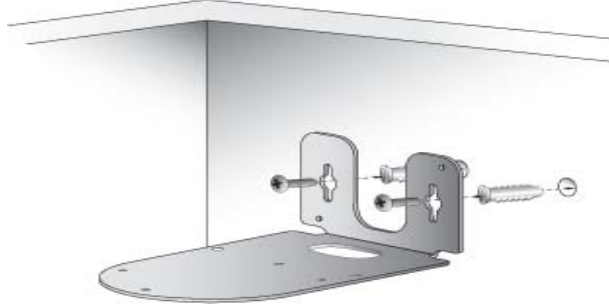


2. Fix the camera to the bracket with the two supplied screws (type A)

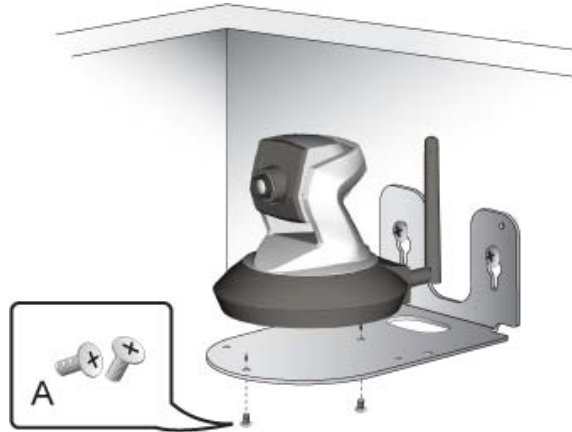

3. If adopting POE kit (optional accessory), the POE splitter can be attached to the bracket by using the two supplied screws * type B).

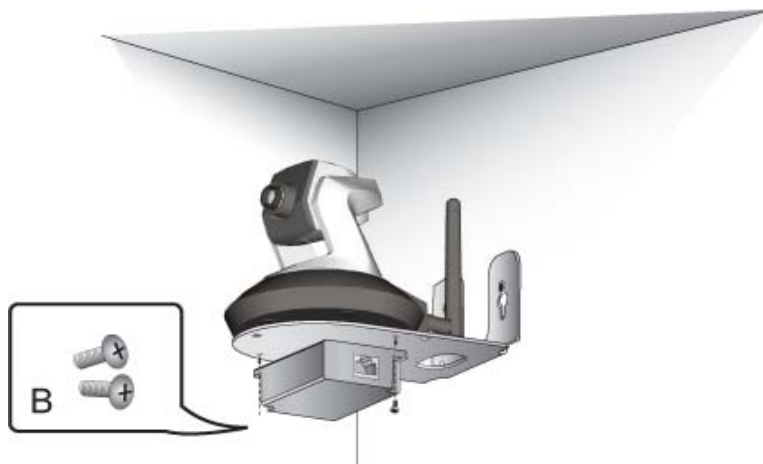

4. Install your Network Camera in Ethernet network

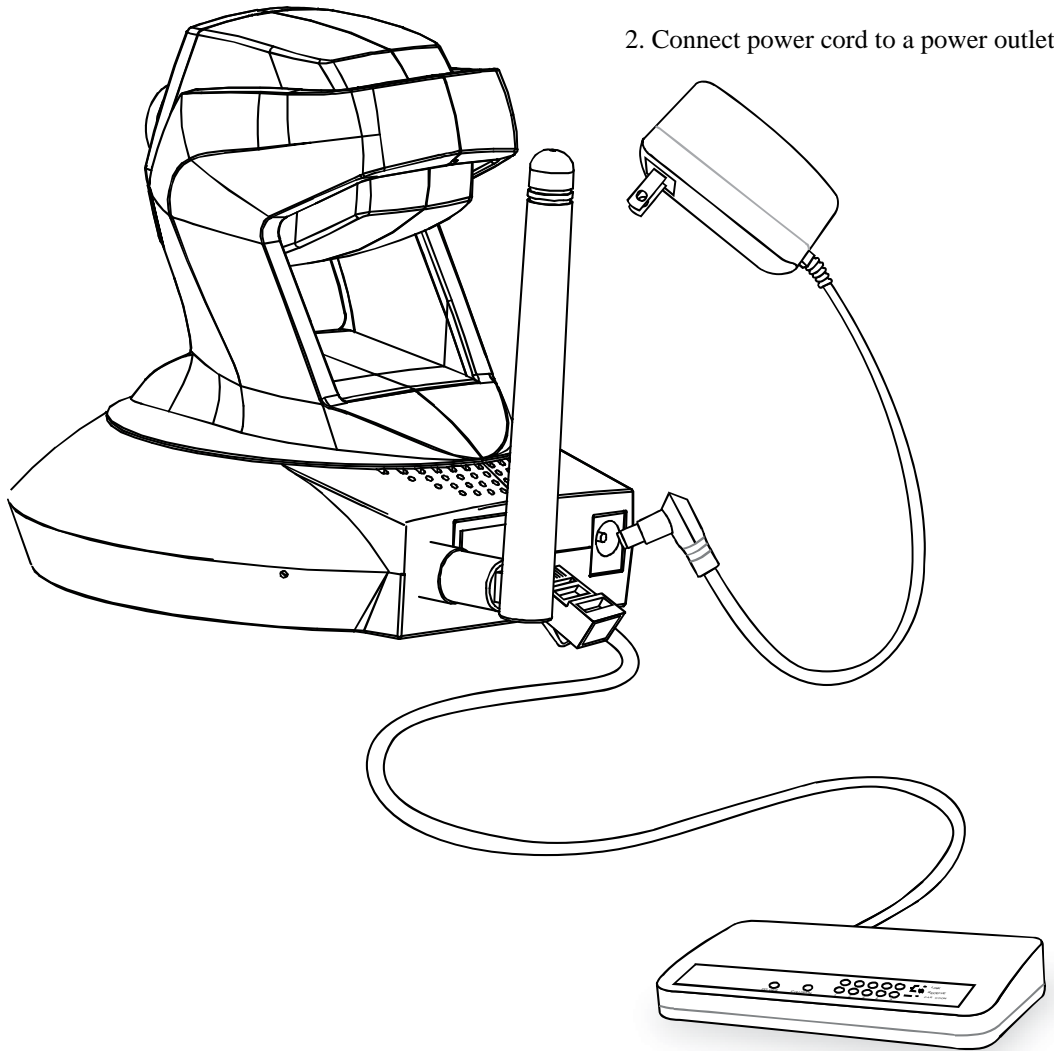


1. Use Ethernet cable to make connection from Ethernet port to the hub.

- Use Category 5 Cross Cable when the Network Camera is directly connected to PC.

5. Assign IP address


1. Run the Installer under the Utility directory from software CD.
2. The program will search the cameras on the same LAN.

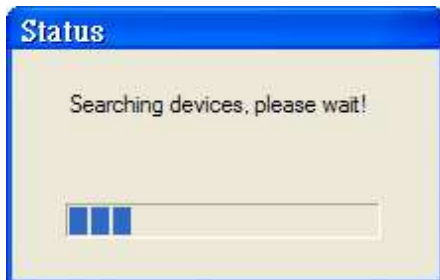


3. After searching, the main installer window will pop up. Click on serial number that matches the one you just note from

2. Physical description

4. Click "Link to selected device" to connect the Internet Explorer to the Network Camera.

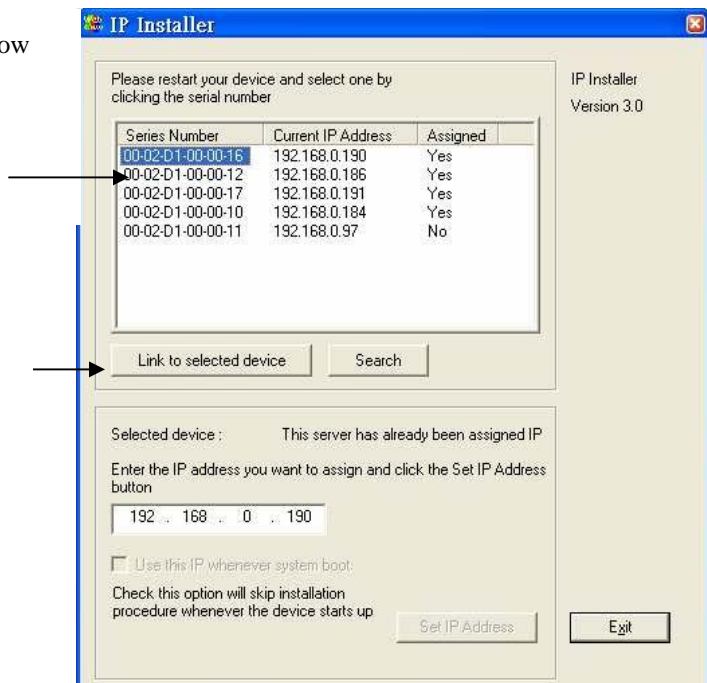

6. The Internet Explorer Connects to the Network Camera

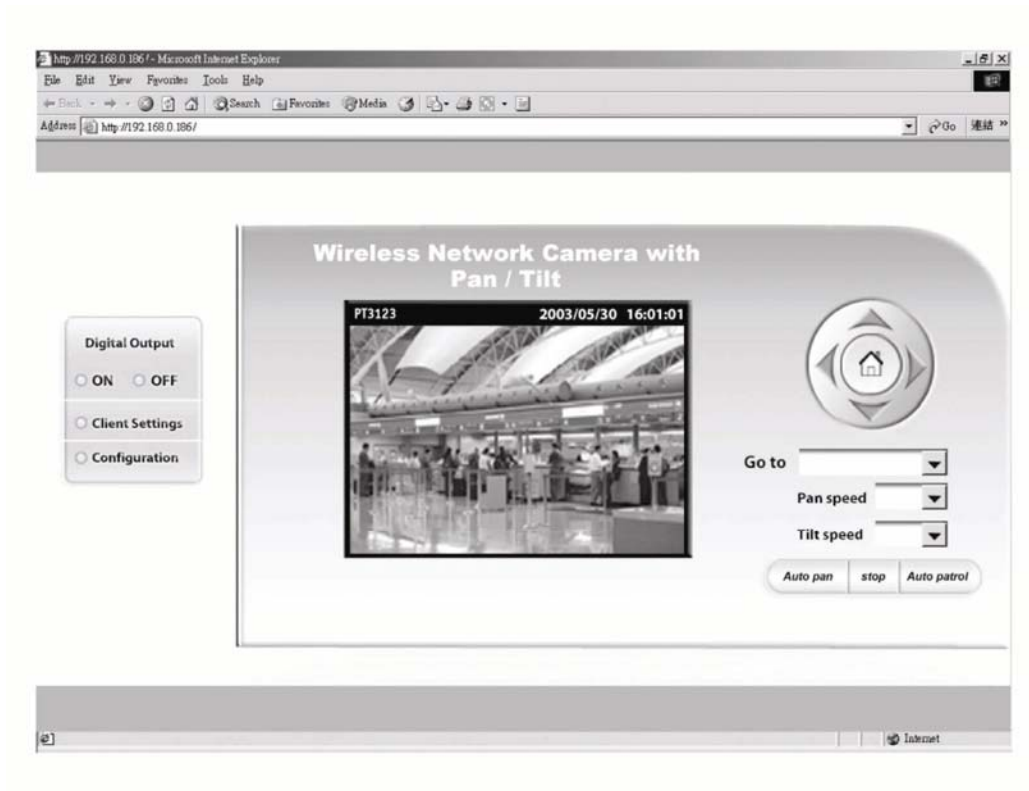


7. Set up Your Wireless Configuration for the Network Camera

(Wireless model only)

1. Check the SSID currently set on your wireless access point (AP).
2. Go to **Configuration > Wireless LAN**

3. Type in the SSID consistent with the setting on your AP.
4. Select the wireless mode as “Infrastructure”
5. Click **Save**

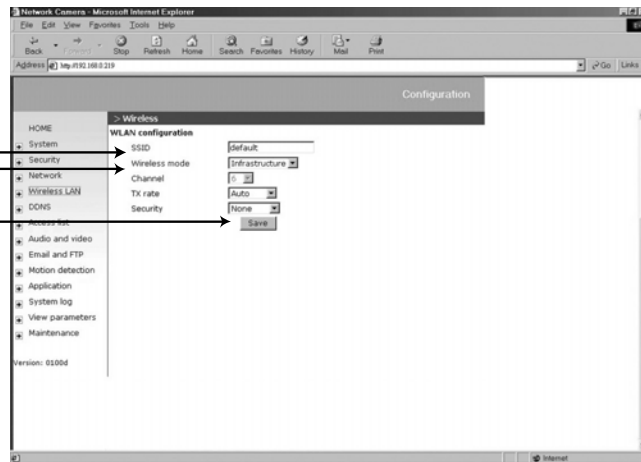

Note:


1. SSID abbreviated from Service Set Identifier is the name to the wireless network. The camera’s factory SSID setting is set to “default”.
2. Select ‘Ad-Hoc’ wireless mode if you want the camera to communicate without using an AP or wireless router.

For setup wireless mode and further configuration, please check user’s manual on the software CD.


8. Client Settings (Windows 2000/Me/98E)

At the initial access to the “Connection type” page in Windows, the web browser will ask for a new plug-in installation, the plug-in being the Network Camera. This plug-in has been registered for certification and can be used to change the parameters at the client’s site. The user may click on to install the plug-in. If the web browser does not allow the user to complete the installation, check the Internet security to lower the security level or contact your IT or networking supervisor.


1. Initial IE browser, select function item “Tools”-> “Internet Options”

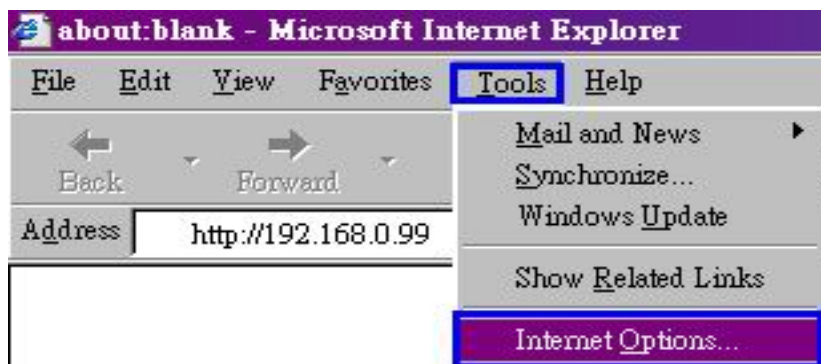

2. Security-> Default Level

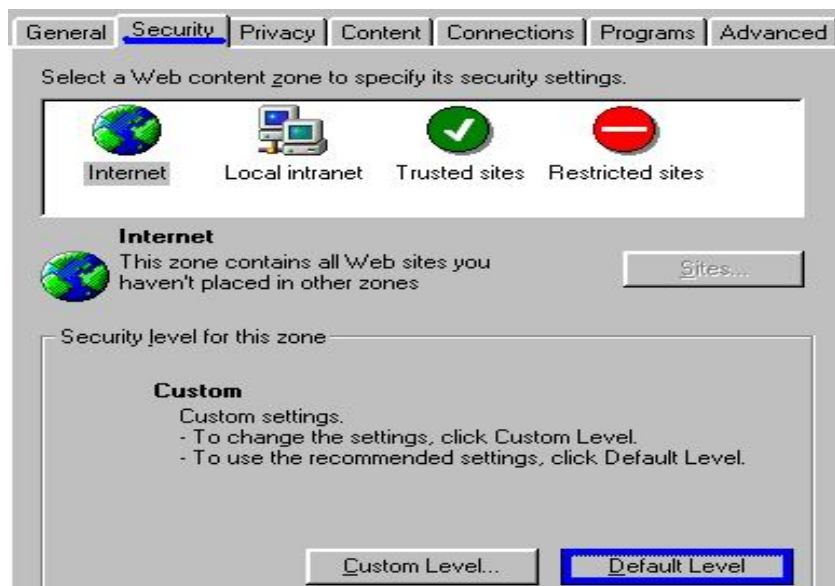

3. Lower down the security level bar to “Low”, and press “Apply”

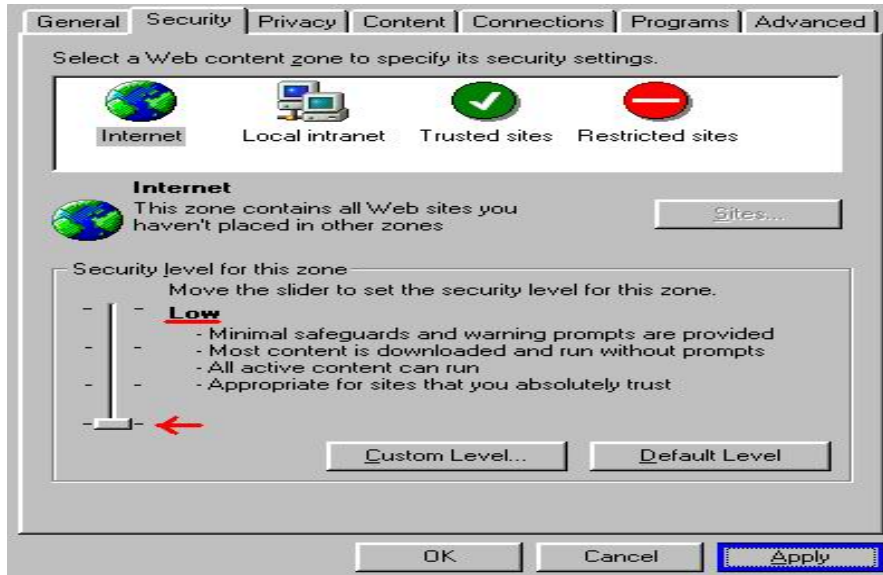


4. Refresh IE Browser, a question frame will pop-up to ask for download Active-X. press "Yes".




9. Client Settings (Windows XP SP2)

1. Initial IE browser, select function item “Tools”→ “Internet Options”

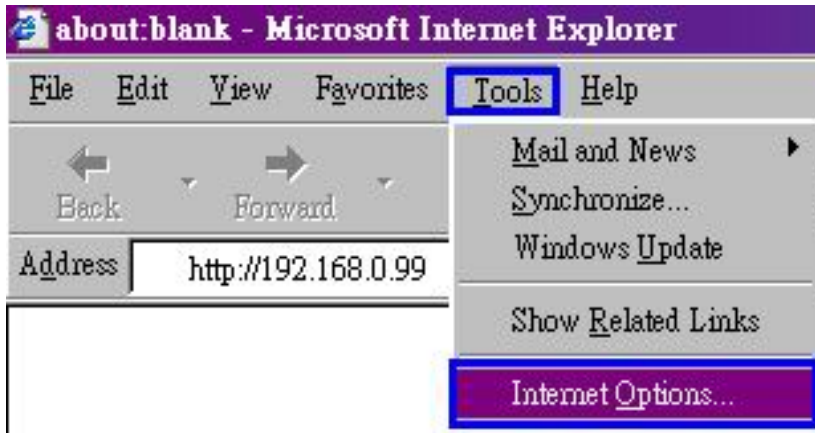

2. Security →”Custom Level”

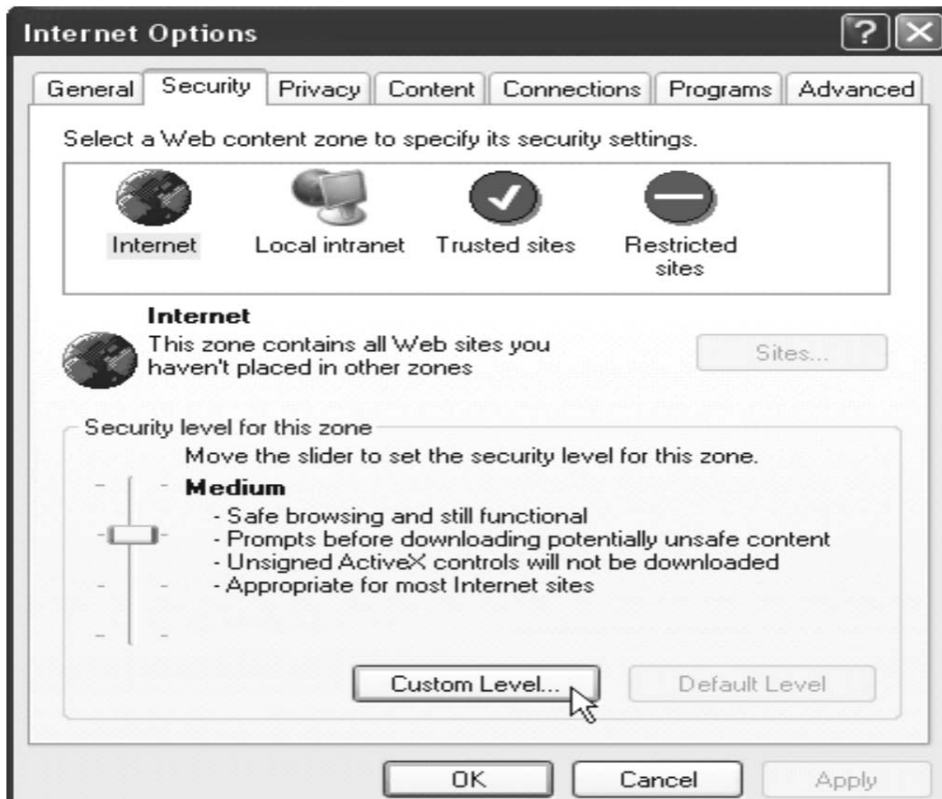

3. Security Settings → Download unsigned ActiveX Controls set “Enable” and press “OK”



4. Press “Apply” and then “OK”






5. Key-In camera's IP address and press "OK" on Information Bar.



6. Click the blue bar under the Camera's IP address in the browser, then choose "Install ActiveX Control"

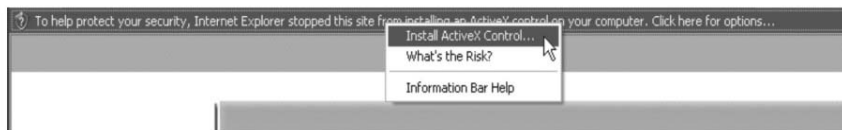

7. Recover security settings. Download unsigned ActiveX Controls set "Disable" and press "OK" and "Apply"

