



User's manual



mini LED SPOT

Table of content

1.	Safety instructions.....	3
2.	Package content	4
3.	Installation.....	4
4.	Functions	4
4.1.	Setting up the Auto mode.....	4
4.2.	Setting up the DMX mode.....	5
4.3.	DMX channels.....	5
5.	Technical data.....	5

1. Safety instructions

FOR SAFE AND EFFICIENT OPERATION

Be careful with heat and extreme temperature. Avoid exposing it to direct rays of the sun or near a heating appliance.

Not put it in a temperature below 41°F /5°C, or exceeding 95°F /35°C.

Keep away from humidity, water and dust

Do not place the set in a location with high humidity or lots of dust.

Containers with water should not be placed on the set.

Keep away from sources of hum and noise

Such as transformer motor, tuner, TV set and amplifier.

To avoid placing on un-stable location

Select a level and stable location to avoid vibration.

Do not use chemicals or volatile liquids for cleaning

Use a clean dry cloth to wipe off the dust, or a wet soft cloth for stubborn dirt.

If out of work, contact sales agency immediately

Any troubles arose, remove the power plug soon, and contact with an engineer for repairing, do not open the cabinet by yourself, it might result a danger of electric shock.

Take care with the power cable

Never pull the power cable to remove the plug from the receptacle, be sure to hold the plug. When not using the player for an extended period of time be sure to disconnect the plug from the receptacle.

2. Package content

1 x Mini LED Spot


1 x manual

3. Installation


Mount the item and set the desired degree for the binder by using the screw on the side.

Connect the DMX Input of the Spot with the DMX Output of your DMX Controller by using a standard XLR 3 Pin DMX Cable.

After that you can go on with connecting other DMX Fixtures with the spot.

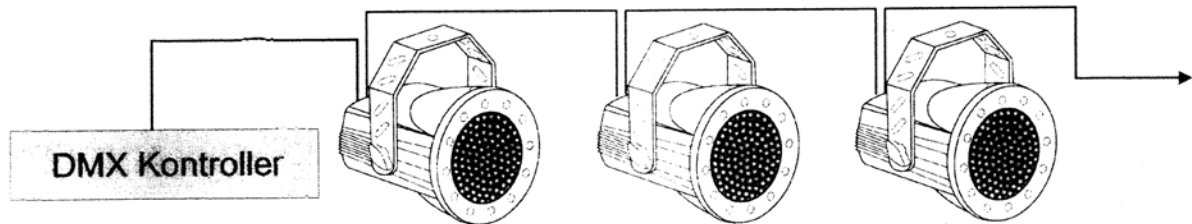

4. Functions

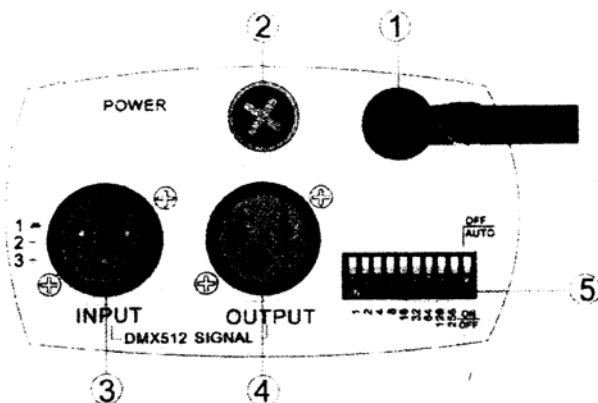

1. Mains Power Connection
(AC220V-240V/50Hz~60Hz)
2. Fuseholder (5x20mmF0.5A)
3. Input DMX
4. Output DMX
5. DMX addressing

4.1. Setting up the Auto mode

ON	OFF	Function
1,2,3	4,5,6,7,8,9,10	Red light on
4,5,6	1,2,3,7,8,9,10	Green light on
7,8	1,2,3,4,5,6,9,10	Blue light on
7,9	1,2,3,4,5,6,8,10	7 color chase automatic
1,9	2,3,4,5,6,7,8,10	Strobe red green blue

4.2. Setting up the DMX mode



For the DMX addressing make sure that the channel 10 is on.

With all the other dipswitches you can set up your desired DMX address by using the binary system.

4.3. DMX channels

Channel 1	Dimmer Strobe
Channel 2	Red
Channel 3	Green
Channel 4	Blue

5. Technical data

Voltage		220V-240V 50Hz~60Hz	
Power consumption		10W	
Fuse		0,5A	
For small Package		For big package	
Content	1 pcs	Content	8 pcs
Measurements	19,5 x 14 x 14	Measurements	40 x 29 x 30
Weight	0,8kg	Weight	6,5kg

Importeur:

B & K Braun GmbH

Industriestraße 1

D-76307 Karlsbad

www.bkbraun.com

info@bkbraun.com

