

Mediacom® the power to simplify

# home controller

*The Power to Control and Secure  
Your Home from Virtually Anywhere.*

**USER MANUAL**





# home controller

Introducing a whole new level of security for the things that matter most in your life. Whether you're home or away, at your desk or on the go, our interactive home security system makes it simple to monitor your property, keep your loved ones safe, and stay connected to home and family from anywhere.


This user manual was designed to help you learn how to use the features of your new system.

## Service and Support

866-455-1595

## Web Portal Address

[mediacomcable.com/homecontroller](http://mediacomcable.com/homecontroller)

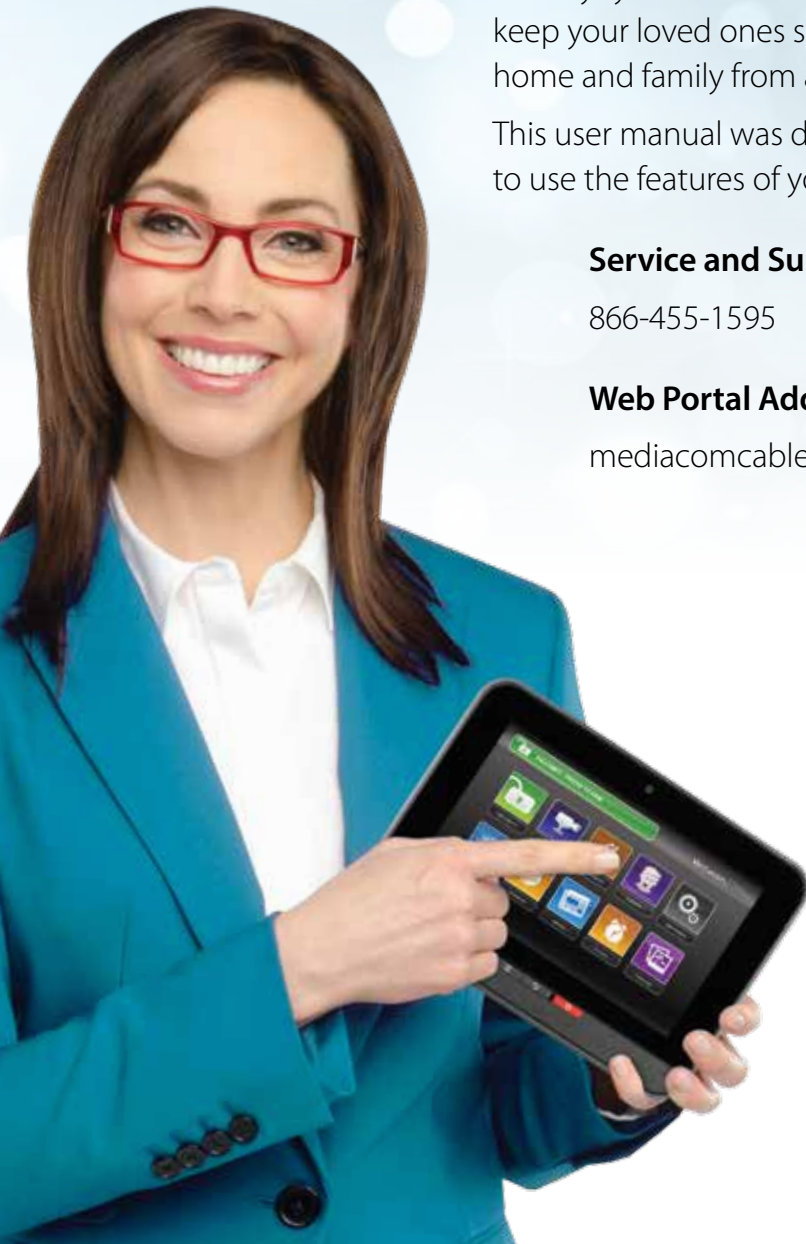

## Contents

<b>System Status Icons</b> .....	1
<b>System &amp; Zone Trouble Header</b> .....	1
<b>TouchScreen</b> .....	2
Introduction .....	2
Security Status Header .....	2
Arm .....	3
Disarm .....	3
Emergency .....	3
Settings .....	4
Home Management (Camera & Lights) .....	4
Thermostats .....	5
Information, Media and Entertainment (Clock, Radio, & Word of the day) .....	6
Photos .....	7
Weather .....	7
Life360 .....	8
<b>Key Fob Keychain Remote</b> .....	9
Introduction .....	9
Checking System Status .....	9
Arming the System .....	9
Disarming the System .....	10
Sending an Emergency Police Alarm .....	10
<b>Web Access</b> .....	11
Introduction .....	11
Signing In .....	11
Main Tab .....	11
Security .....	12
To arm a disarmed system .....	12
To disarm the system .....	12
Zone Activity .....	13
History .....	13
Cameras .....	14
Rules (Alerts, Automations, and Schedules) .....	15
Manage TouchScreen Apps .....	16/17
Thermostats .....	18
Lights .....	18
<b>iPhone®/iPod Touch®/iPad®/Android® Access</b> .....	19
Introduction .....	19
Security .....	20
Cameras .....	21
History .....	21
Thermostat .....	22
Lights .....	22
<b>Security Monitoring</b> .....	23
Central Monitoring Station .....	23
How to Test Your System .....	24

## System Status Icons

The various user interfaces include the following icons that provide an at-a-glance overview of the status of your system.

The Security status of your security system is displayed in the large Security Status header.



This is the Security Status header when the status is "Armed".



This is the Security Status header when the status is "Disarmed".




When you arm the system, an exit delay period begins. The System Status Header indicates the number of seconds before the system is armed. You must exit the premises and secure the entry/exit door before the exit delay period ends.



You must exit the premises and secure the entry/exit door before the exit delay period ends. When someone enters an armed premises, an entry delay period starts (generally, around 30 seconds long).

## System & Zone Trouble Header


The System & Zone Trouble header displays in the upper right hand of the Subscriber Portal and TouchScreen. It only displays when there is a connectivity or power problem with the TouchScreen (power, broadband, etc.). It also displays when a sensor is inoperable (such as due to a battery failure) or is being tampered with.

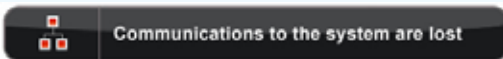

No Connectivity



Power Failure

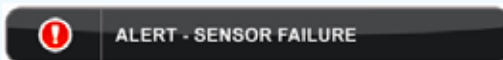

Critical Sensor Failure



Multiple Troubles

When a System & Zone header is displayed, click it to display more information.

## Introduction

The interactive TouchScreen acts as the control center that enables you to operate your security system and interact with your home at the touch of a button. Use it to arm and disarm your system, view live video from cameras placed in your home and view real-time web content all from the full-color display. The following section provides an overview of your TouchScreen and offers quick tips on how to use the various features.



## Home Screen

The Home Screen is the main display that provides quick access to all TouchScreen features. In addition to the descriptive icons that make it easy to navigate, this screen provides a visible and audible alert if a sensor is triggered when the system is armed or if an environmental sensor, such as a smoke detector, is activated.


Press the  button on the TouchScreen at anytime to return to the Home screen.



## Security Status Header

The Security Status header displays in the upper left hand of the TouchScreen. It displays whether the system is armed or disarmed. During an alarm, the Security Status header changes to show an Alarm state.

Displayed events that prevent arming replace the Security Status Header altogether.

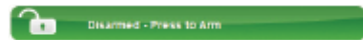

## Arm

1. Touch the **Disarmed - Press to Arm** button on the Home Screen.
2. Select **Arm Stay** to arm the sensors on your doors and windows only with a 30-second exit delay, or **Arm Night** with no delay. Or select **Arm Away** to arm all sensors including the motion detectors.
3. Press the **Turn Zone Off** button for any security zones that you want to bypass.
4. Follow prompt to enter code to **Turn Zone Off**.
5. Enter your 4-digit security code to arm the system.

*Note: The TouchScreen generates short, audible alerts while arming, indicating 60 seconds for exit. Audible alerts last for 30 seconds for entry.*




## Disarm

1. Touch the **Armed Away - Press to Disarm** button on the Home Screen.
2. Enter your 4-digit security code to disarm the system.



## Emergency

Sends an immediate alarm to the central monitoring station, indicating an emergency of a specific type — medical, fire or police.

1. Touch  on the bottom of the TouchScreen to display the individual emergency buttons.
2. Press the applicable button to alert the proper authorities.
3. Note: Enter your 4-digit security code to cancel the alarm.

*Note: Pressing the police button will sound a silent panic. Pressing the screen a second time will sound an audible alarm.*



## Settings

Displays a list of setting options to customize your TouchScreen. Categories include:

1. **TouchScreen** – Clean screen, screensaver, sound and button configurations, etc.
2. **Security** – Manage keypad codes, default arming app configuration, alarm test.
3. **Sensors & Zones** – Change zone order, etc.
4. **Home Devices** – Add, edit and delete devices that control cameras, key fobs and more.
5. **Apps** – Add, remove and reorder apps.
6. **Advanced Settings** – Account information, security secret word, connectivity and TouchScreen reboot features.
7. **About** – Detailed TouchScreen information.




## Home Management

View live video from in-home cameras.

### Cameras

View live video from cameras installed on your system.

1. Touch the **Cameras** app.
2. Touch the camera image to view live video from that camera. If only one camera is connected to the system, live video will automatically appear. Multiple cameras will display thumbnails.

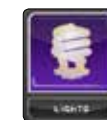

### Lights

Adjust settings for lights throughout your home.

1. Touch the **Lights** app to display a list of the lighting modules installed in your home, as well as the current setting of each.
2. Change the current setting with the power switch.
3. For lamps equipped with a dimmer function, use the slider bar to adjust the brightness level.





## Thermostats

Adjust settings for thermostats installed throughout your home.

1. Touch the **Thermostats** app.
2. Change mode to **Off, Cool** or **Heat**.
3. When in **Cool** or **Heat** Mode, use the arrows to adjust.
4. Turn **Hold** on to maintain the mode and ignore any other programming configured on the Thermostat device.




## Information, Media and Entertainment

Quick-glance, customizable information.

### Clock

Touch the clock app icon to display the time.

1. Touch the **Clock** app.
2. Touch **:00** to add seconds to the digital time display.
3. Touch **↔** to change to an analog clock.

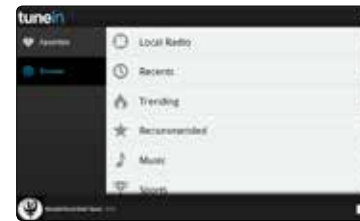

### TuneIn Radio

Listen to the world's radio with music, news, talk and comedy streaming from every continent.

1. Touch the **TuneIn Radio** app.
2. Browse from the menu to select station.



### Word of the Day

Displays word of the day and its definition.



## Photos

Displays photos from your Yahoo! flickr® account in full-screen mode on the TouchScreen.

*Note: You need a Yahoo! flickr® account with at least one photo set to personalize this feature. If you do not have a Yahoo! flickr® account, you can sign up for one free at [www.flickr.com](http://www.flickr.com) and upload the photos you want to view on your TouchScreen.*

Once you have a Yahoo! flickr® account:


1. From your subscriber portal, add photos app, then follow prompts to sync your flickr® account with your TouchScreen.
2. Touch **Photos** app.
3. Answer **YES** to the App Needs Permission page if presented.
4. Touch the display.
5. Use the [<] and [>] buttons to scroll through your photos
6. Touch the photos button at the bottom to choose a new photo album.



## Weather

View 4 day forecast and weather radar.

1. Touch the **Weather** app.
2. Touch drop down scroll arrow.
3. Click on **Edit** to add a city.

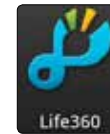

## Life360

Keeping your family safe and in sync.

1. Touch the **Life360** app.
2. Touch to log into your account or create a new account.




## Introduction

The wireless key fob gives you additional access to your system, enabling you to:

- Check the current system status (armed, disarmed, or “not ready”).
- Arm the system in Arm Away mode or Arm Stay mode.
- Disarm the system before entering the premises.
- Send an audible Panic alarm for police assistance.



## Checking System Status

1. Press the  button to light the LED to show the current status of the security system.
2. The LED flashes red once to indicate that it has contacted the system then:
  - Lights green for three seconds if the system is disarmed.
  - Lights red for three seconds if the system is armed.
  - Lights amber for three seconds if the system is not ready to be armed (for example, a door is open).

## Arming the System

From the key fob, you can arm your system in Arm Away mode or Arm Stay (Arm Night mode must be performed from the TouchScreen or Subscriber Portal).




### Arm Away

Press the  button for about 2 seconds to arm the system in Arm Away mode (the home is unoccupied).

*The LED flashes red once to indicate that it has contacted the system then lights red for one second. The Exit Delay starts.*




### Arm Stay

Press the  button for about 2 seconds to arm the system in Arm Stay mode (there are still people within the premises).

*The LED flashes red once to indicate that it has contacted the system then lights red for one second. The Exit Delay starts.*




## Disarming the System

Before entering the premises in Armed state, press the  button for about 2 seconds to disarm the system without entering the premises.

*The LED flashes green once to indicate that it has contacted the system then lights green for one second indicating that the system is disarmed.*



## Sending an Emergency Police Alarm

Press and hold the  button for 3 seconds to send an audible alarm to central monitoring for police assistance. The LED flashes red to indicate that the alarm has been sent.

**Introduction**

Access your interactive home security system through your personal, secure web page: [mediacomcable.com/homecontroller](http://mediacomcable.com/homecontroller) and click on the Home Controller portal link. Check the status of your home, arm and disarm your system, see live video of your home, view video clips and pictures, change settings and much more from anywhere you have Internet access.




**Signing In**

You will need to sign in each time you access the website.

1. Go to the subscriber portal.
2. Enter your username and password.
3. Click **Sign In**.

**Main Tab**

 The Main tab provides a snapshot overview of your entire system. From this page, you can view general status information about your home and security system, and access various tabs to change system settings.

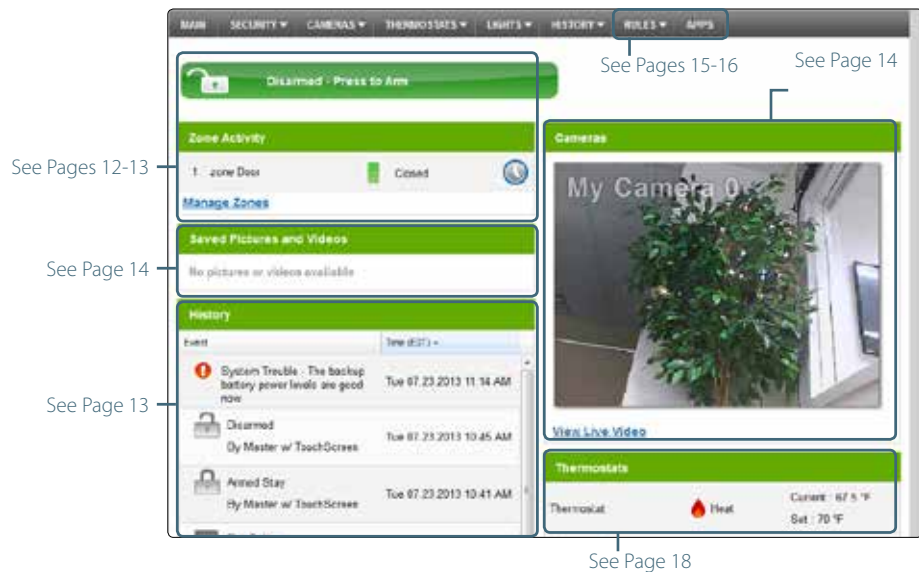


**Security**

Indicates the overall status of your security system.



**To arm a disarmed system:**

1. Click the Security Status header when it is in the Disarmed state. Or select **Security > Arm** on the toolbar.
2. If any security zones are currently faulted, preventing the system from being armed, you must click the **Turn Zone Off** button for that zone before arming the system.
3. Select the Arming Mode.
  - **Arm Away** — Everyone is leaving the house.
  - **Arm Stay** — There are still people in the premises.
  - **Arm Night** — Everyone is going to bed. This mode works the same as Arm Stay except that there is no Entry Delay period. If an entry/exit zone is opened, an alarm sounds immediately.
4. Enter your 4-digit security code.
5. Click **Arm Now**.

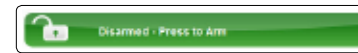

**To disarm the system:**

1. Click the Security Status header when it is in the Armed state. Or select **Security > Disarm** on the toolbar.
  2. Enter your 4-digit security code, and click **Disarm**.
- To manage other security settings, click **Security** on the toolbar.

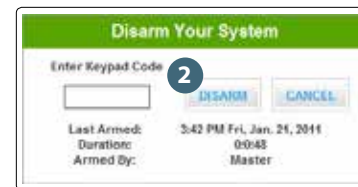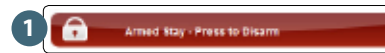

**Managing Keypad Codes**

Keypad codes are used to arm or disarm the system. Multiple keypad codes can be assigned to track who enters and leaves the premises. To manage keypad access codes, select **Security > Keypad Codes** on the toolbar and add a new access code or modify current access codes.






### Zone Activity

The current state of all security devices connected to your system appears here. Click the device number to see the recent history.


1. Click the clock icon next to the sensor name to see the recent history.
2. Click **Manage Zones** to edit zone names and to turn zones off.

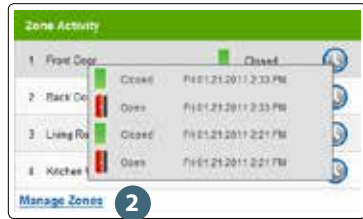

### History

View recent security device activity, alarm events and more.

 1. Use the scroll bar to view all of the 30 most recent events.
2. Click **View History** or click the **History Tab** to view all events or to sort by date and event type.

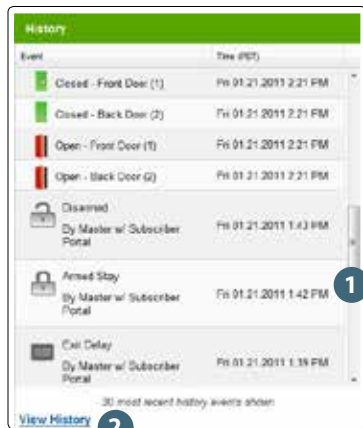


### Cameras

Displays live video and enables you to capture manual pictures or video clips from cameras installed in your home.

#### Viewing & Capturing Live Video and Snapshots

To view live video from the cameras attached to your system and take snapshots or videos, click **Cameras > Live Video** on the toolbar.

 One of the cameras is displayed as live video. The other camera views (not live video) are arrayed over it.

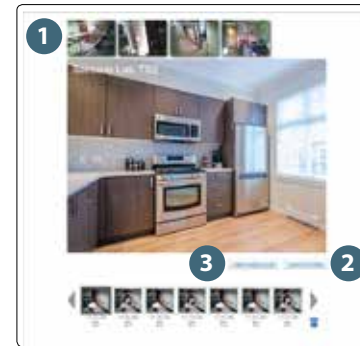

1. Click an image above the video to view live video from each camera.

2. To take a snapshot with the currently selected camera, click **Take Picture**.

3. To take a video clip (about 20 seconds) with the currently selected camera, click **Take Video Clip**.

4. To delete snapshots or video clips, select one or more check boxes, and click the trash can.



#### Viewing Captured Pictures and Video Clips

To view captured images:

1. Select **Cameras > Saved Pictures and Videos** on the toolbar.

The displayed screen lists the pictures and video clips captured manually and automatically (during alarm events).

2. Click on an image to view the captured images.

3. Images that were captured automatically during an alarm have an ALARM button and display the security zone that cause the images to be taken.

4. Images that were captured manually have a camera icon.

5. To delete an image or video, select the check box for each captured image or video and click the trash can.





## Rules (Alerts, Automations and Schedules)

The Rules are flexible methods for generating a variety of system actions (such as sending an email alert) whenever something else happens under specific circumstances.

To manage rules, click the **Rules** Tab. Rules setup and Contact for Rules will be displayed.

To add a rule, click **Rule Setup** and then **Add Rule** to determine which type of rule you'd like to configure:

- **Schedule** - Actions occur regularly on specified times, dates, and date ranges without regard to an additional event.
- **Event** - Actions occur when a specified event occurs at a security zone (door, window, motion detector, smoke alarm, etc.).
- **Non-event** - Actions occur when an expected event does not occur at a security zone. For example, send an SMS notification if the front door does not open between 3:30pm and 5pm on Monday through Friday when the kids are expected home.

 
### To set a Schedule:

1. Determine the Start Time for your Schedule. Check the box if you would like to add an End Time. Determine if you want the Schedule to repeat during the set times and then click the applicable Days.
2. Determine the action the rule will take. Depending on the action, you may have additional items to select.
3. Select the arming mode the rule applies.
4. Describe the rule.
5. Click **Save**.



### To add a Contact:

1. Select Contacts for Rules on Rules Tab. This allows you to add people you want to receive system alerts from the rules.

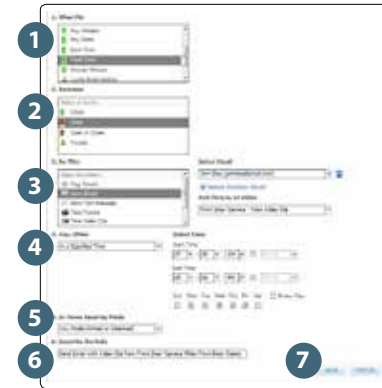

### To set an Event rule:

1. Select a specific security zone that will trigger the action, or select the entire system.
2. Determine what happens at the security zone or the security system to trigger the action.
3. Select the action the rule will take. Depending on the action, you may have additional items to select.
4. Determine the time range and days of the week when the rule is applicable. You can select **Any Time** to have the rule apply whenever the selected event occurs.
5. Select the arming mode the rule applies.
6. Describe the rule.
7. Click **Save**.



### To set a Non-Event rule:

1. Select a specific security zone to monitor.
2. Determine the event that fails to occur during the specified time range.
3. Determine the time/day range when the rule is applicable.
4. Select the action the rule will take if the specified conditions are met. Depending on the action, you may have additional items to select.
5. Select the arming mode the rule applies.
6. Describe the rule.
7. Click **Save**.



## Manage TouchScreen Apps

You can manage what TouchScreen apps are displayed on your TouchScreen, configure them, and determine how they are displayed from the Subscriber Portal only.

Click **Apps** on the toolbar.

The apps at the top of the screen are those available to be added to the TouchScreen. The apps displayed in the TouchScreen image are those apps currently displayed on the TouchScreen. The apps are positioned in the image just as they are on the actual TouchScreen.



### Adding TouchScreen Apps

1. Click on the TouchScreen app you want to add from the top menu bar.
2. Click **Add App**. The Subscriber Portal pushes the app to the TouchScreen. An “updating” message is displayed while the app is being added.
3. Once you’ve added more than 10 apps, you must manage apps from your TouchScreen.



### Editing TouchScreen Apps

Several TouchScreen apps have the capability to be personalized.

1. From the Manage Apps screen, hover your cursor over the app you want to edit. A label is displayed over the app.
2. Click **Edit**.
3. Each app will have a different edit menu.



### Deleting TouchScreen Apps



1. From the Manage Apps screen, hover your cursor over the app you want to delete. A label is displayed over the app.
2. Click **Delete**.
3. Click **Delete App** in the displayed confirmation dialog box.



### Repositioning TouchScreen Apps

You can change the order in which TouchScreen apps are displayed on the TouchScreen. All apps, except the Security, Settings, and Cameras apps, can be moved to the preferred location on the TouchScreen.


1. Click **Reposition Apps** to re-arrange the apps.
2. Drag and drop the apps to the preferred location on the TouchScreen.
3. When all the apps are repositioned to your satisfaction, click **Update**.

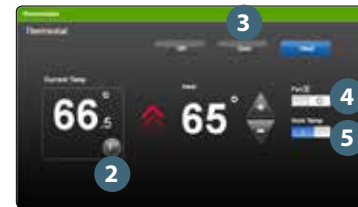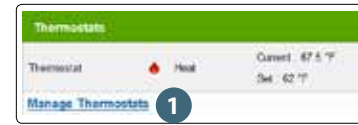

## Thermostats

The current states of your thermostats are displayed on the Main screen. To manage your thermostat:

1. On the Main screen, in the Thermostats tool, click **Manage Thermostats** or click the **Thermostats Tab**. The current temperature appears in the middle of the screen. The unit of measure button on the right indicates whether the temperature is displayed in Fahrenheit or Celsius.
2. You can click unit of measure button to toggle the display between Fahrenheit or Celsius.
3. On the top of the screen, you can click **Off, Cool** or **Heat**, or to set the mode.
4. Turn **Fan** on or off using the toggle switch.
5. You can click **Hold** to maintain the mode and temperature settings and ignore any programming configured on the thermostat device.

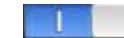


## Lights

The current state of your light settings is displayed on the Main screen. To manage your lights:

 

 
1. On the Main screen, in the Lights tool, click **Manage Lights** or click the **Lights Tab**.
2. In the Lights tool, you can turn the light on or off and set dimming percentage.

### Introduction

The iPhone® application allows you to access a core set of security system functions using your using your iPhone® iPod touch®, iPad® or Android®. The application contains only the essential functionality available through web access.

Download the “My Home TouchScreen” app by Comporium from the App Store<sup>SM</sup> or Google Play<sup>TM</sup> Store.  Then, launch the application. Enter your Username and Password and click **Login**.

*Note: This application requires your mobile device to be connected to the Internet.*

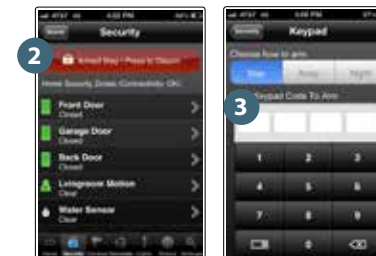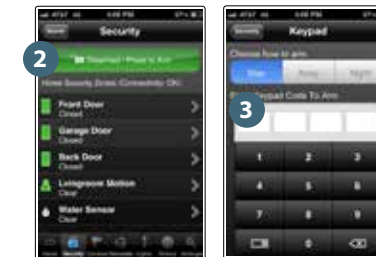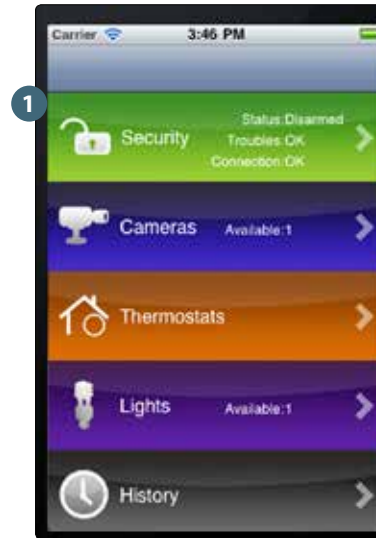

### Security

Remotely control your security system and view current arm/disarm status.

#### To arm your security system:

1. On the Home screen, tap **Security**.
2. To bypass any Home Security Zone, tap the respective zone and use the On/Off toggle.
3. On the Security screen, tap **Disarmed – Press to Arm**.
4. Tap **Arm Stay** to arm the sensors on your doors and windows only with a 30-second exit delay, or **Arm Night** with no delay. Or select **Arm Away** to include the motion detectors.
5. Enter your 4-digit security code to arm the system.
6. Once activated, your system will arm in a few seconds and indicate the new status.

#### To disarm your security system:

1. On the Home screen, tap **Security**.
2. On the Security screen, tap **Armed – Press to Disarm**.
3. Enter your 4-digit security code to disarm the system.





## Cameras


View live video or captured pictures and video clips.

### To view live video from your cameras:

1. On the Home screen, tap **Cameras**.
2. From the list, tap the camera you'd like to access. Live video will appear for that respective camera.

### To view captured video clips or pictures from your cameras:


1. On the Home screen, tap **History**.
2. Use the menu at the top of the screen to filter the History:
  - **All** – View images captured manually from the Subscriber Portal or as a result of a Schedule rule configured in the Subscriber Portal.
  - **Alarm** – View images captured as part of an alarm.
  - **Arm** – View images captured as part of an arming event.
  - **Zone** – View images captured as part of a zone event.
3. Tap the listing to view the captured images.

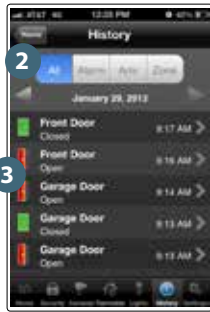

## History

View a log of events that have occurred in the system.

 
1. On the Home screen, tap **History**.
2. Choose to view a history of recent events based on the following criteria:
  - **All** – All logged events.
  - **Alarm** – Alarm events.
  - **Arm** – Arm/Disarm events.
  - **Zone** – Events related to security zones

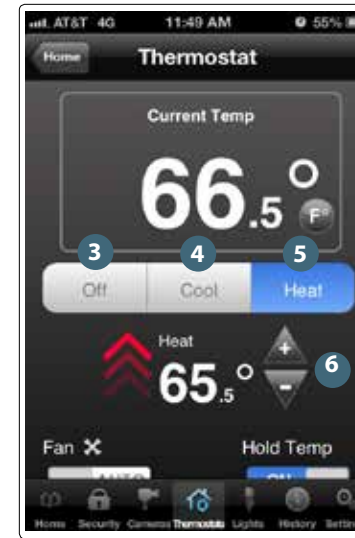

## Thermostats

Adjust all thermostats connected to your system.

 1. On the Home screen, tap [**Thermostats**].
2. Tap the name of any thermostat to control that thermostat.
3. Tap  to turn off the thermostat.
4. Tap  to set the thermostat to Cool mode.
5. Tap  to set the thermostat to Heat mode.
6. Tap  to change the Heat or Cool temperature setting.

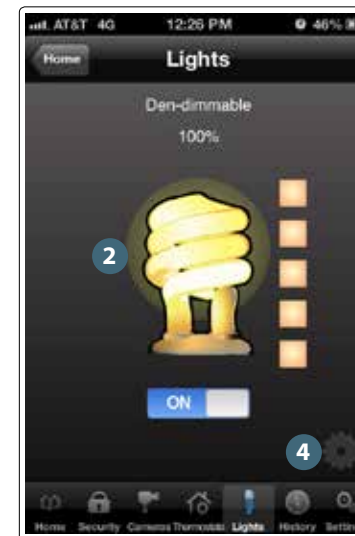

## Lights

Adjust all lights connected to your system via the plug-in modules.

1. On the Home screen, tap [**Lights**].
2. If the light is on, tap bulb to turn it off.
3. If the light is off, tap bulb to turn it on.
4. If the light includes the dimmer function, you can adjust its brightness by tapping  and tapping preferable setting.





## **The central monitoring station provides 24/7 UL approved monitoring for your residence or business.**

The following information will provide you an overview of what occurs when the central monitoring station receives an alarm signal:

### **Burglary and Fire**

- 1.** Customer Notification - Two calls are placed in an attempt to notify the customer
- 2.** Dispatch Authorities

### **Panic**

- 1.** Dispatch Authorities - No calls are made first
- 2.** Customer List Notification

Suggested Action: Leave the house immediately if you have any doubt about your safety.

## **How to Test Your System**

### **Alarm system testing procedures**

The purpose of testing the alarm system is to ensure proper local operation and proper communication to the central station. The following procedure should be done at least once per month.

- 1.** Call the security monitoring station at 866-455-1595 to place your account on test. You will need your account number and your personal security password.
- 2.** Arm your system in the “stay” mode, this will allow you to test your perimeter devices – doors, windows, etc. Remember your entry door has a time delay, it will not activate the alarm until both the entry and exit delay has expired. As you open each door or window it is not necessary to re-set the system each time.
- 3.** Arm your system in the “away” mode. This will allow you to test the interior devices. Open an entry exit door.
- 4.** If you have any external panic devices such as a wireless key fob, they can be tested at this time.
- 5.** After all testing is complete; insure you re-set your alarm system by entering your code or using your off button on your wireless key fob.
- 6.** Call the security monitoring station at 866-455-1595 and ask if they have received all of your test alarms. If there is any question, re-test the affected part of the system again.

call today for  
service and support  
**866-455-1595**



License Number: IOWA AC-230

**[mediacomcable.com/homecontroller](http://mediacomcable.com/homecontroller)**