



CTAB

User Manual

Welcome	3
Important Notices	4
Keys and Functions	5
I. Getting Started.....	6
1.1 Turn on/of	6
1.1.1 Turn on	6
1.1.2 Turn off.....	6
1.2 Lock/unlock the screen (sleep mode).....	6
1.3 Connect to computer	6
II. Home Screen	7
2.1 Add applications on home screen.....	7
2.2 Delete applications on home screen	7
2.3 Add widgets to home screen	8
2.4 Multitasking	8
III. Network Connection	8
3.1 Wi-Fi	8
3.1.1 Turn on Wi-Fi.....	8
3.1.2 Turn off Wi-Fi	9
3.1.3 Add a Wi-Fi network	9
3.2 Bluetooth	9
3.2.1 Make device discoverable.....	9
3.2.2 Scan for devices	9
3.2.3 Pair with the Bluetooth device	9
3.2.4 Unpair a Bluetooth device	10
3.3 3G Network	10
IV. Web browser	10
4.1 Browse the web	10
V. Install and Manage Apps	11
5.1 Install Apps.....	11
5.1 Manage Apps	11
VI. Multimedia.....	12
6.1 Music.....	12
6.2 Video	13
6.2.1 HDMI output	14
6.3 Gallery	14
6.4 Camera	15
6.5 E-book reader.....	16
VII. Settings	17
VII. Battery information	18
Troubleshooting.....	19
Additional Information.....	20



Welcome

Thank you for purchasing this tablet.

It brings you much convenience for your business (supports Word, Excel, send & receive e-mails...) and entertainment (supports 3D game, chatting, movie playback, eBooks.....).

 
Running on **Android 4.1**, with a dual-core 1.6 GHz processor and highly responsive capacitive touch screen, it brings you wonderful user experience.

Before beginning, please refer to this user manual carefully.

Important Notices

- The new battery will be in its best condition after 2-3 times full charge and discharge.
- While using the earphone, if the volume is excessively high it may cause hearing damage. So please adjust the volume of the player to a moderate level and balance the time of using.
- Do not disconnect the tablet suddenly when formatting or uploading and downloading, which can lead to program errors.
- Do not dismantle the tablet by yourself, and do not use alcohol, thinner or benzene to clean its surface.
- Do not use the tablet while driving or walking.
- The tablet is not moisture and water resistant. Please do not use it in a damp environment.
- Do not drop or hit it to hard surface, or the screen may get damaged.
- Do not upgrade the firmware by yourself. This would cause damage to your tablet.

Keys and Functions

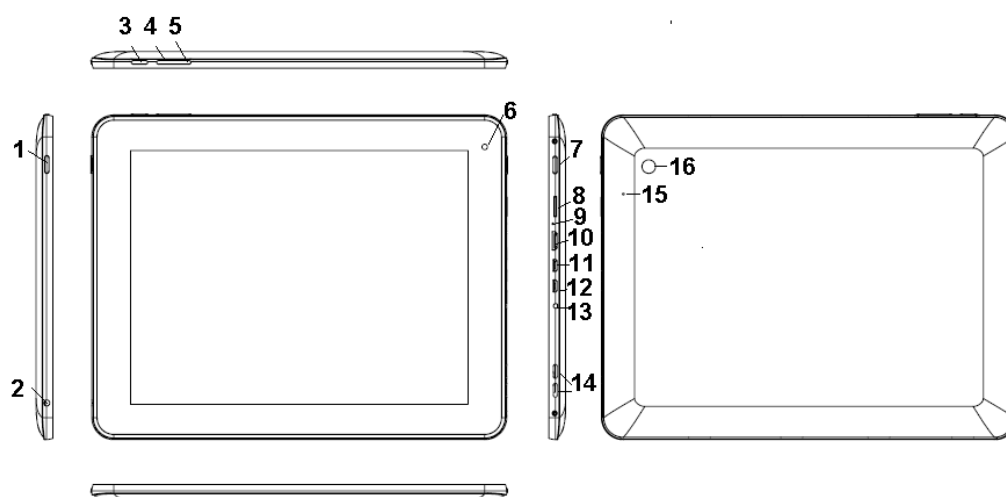


- 1. Power and lock key
- 2. Earphone jack
- 3. Menu key
- 4. Vol + key
- 5. Vol - key
- 6. Front camera
- 7. Home key
- 8. TFcard key
- 9. MIC
- 10. HDMI
- 11. Mini-USB slot
- 12. USB OTG
- 13. Power Jack (DC input)
- 14. Speakers
- 15. Reset
- 16. Rear camera

I. Getting Started

1.1 Turn on/of

1.1.1 Turn on

 To start your tablet, press and hold the power key at the right side of your tablet for a while. Tab and drag the lock out of the circle to unlock.

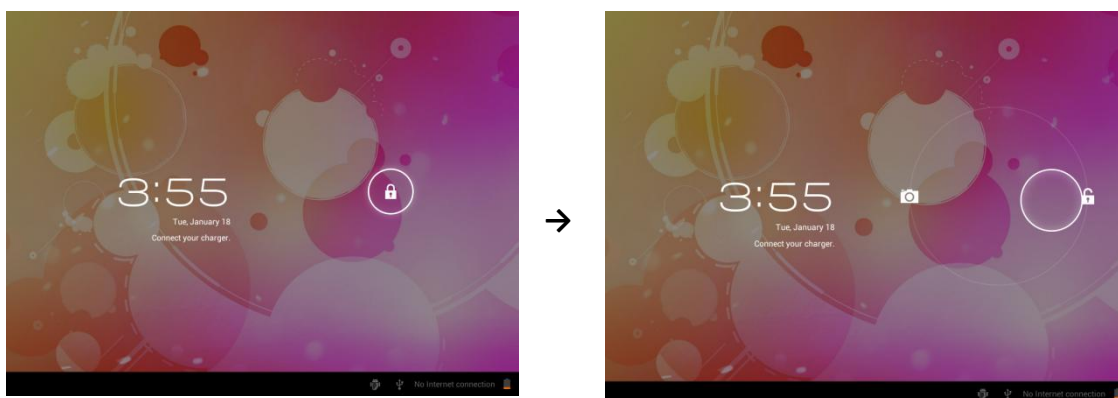

Tab and drag the lock  out of the circle to unlock.

Drag the lock to right: you will go to the home screen.

Drag the lock to left: you will go to camera directly.

1.1.2 Turn off

To power off your tablet, press and hold the power button until the “Would you like to shut down?” dialog appears and tap “OK” to power it off.

1.2 Lock/unlock the screen (sleep mode)

To save battery, you should put your tablet in sleep mode by turning off the LCD display. To do this, shortly press the power key. Press it again to wake up the screen.

1.3 Connect to computer

You can connect your tablet to your computer with the supplied USB cable so you can transfer media files.

If your computer is XP system, please install a Windows Media Player 11 for your computer before transfer media files as Android 4.1 system needs Windows Media Player 11 support.


II. Home Screen



2.1 Add applications on home screen

Tap the app launcher in the top right corner to go to all apps panel, tap and move the app you want to the home screen.

2.2 Delete applications on home screen


To delete an app from home screen, tap and hold it, and then move it to the remove icon 

2.3 Add widgets to home screen

Tab all Apps launcher → Tab WIDGETS. There are Analog clock, bookmarks, calendar, Email, and lots of other widgets. Drag the widget you want to the home screen.

Tips: Besides your home screen, you can access to other four panels by sliding left or right in your home screen. You can also customize these panels.

2.4 Multitasking

CTAB is a multitask device. To get to the programs, which recently have used, press and hold the icon . To restore the previously used application, simply select it from the list.

 
III. Network Connection

3.1 Wi-Fi


Wi-Fi can only be used when it connects with home Wi-Fi Access Point (AP) or a free unsecured Wi-Fi hotspot. Under “Wireless & networks”, tap “Wi-Fi” to turn it on. After a moment, your Wi-Fi networks list should populate. If you need to rescan for available networks, tap "scan"

3.1.1 Turn on Wi-Fi

Within the App Panel, tap “Settings” → then “Wireless & networks” → “Wi-Fi” to turn on WI-FI.

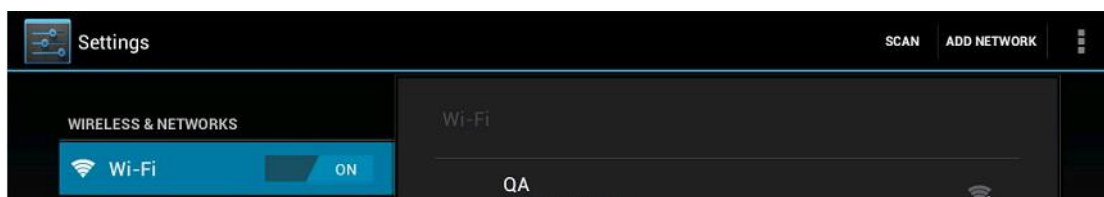


Your tablet lists the networks it finds within range. Tap a network to connect. If necessary, enter Network SSID, Security, and Wireless password, and tap “Connect”.

When your tablet is connected to the network, the wireless indicator  appears in the status bar. Waves indicate connection strength.


3.1.2 Turn off Wi-Fi

 Please turn off Wi-Fi if you're not using it to save the battery. To turn off Wi-Fi, tap it again.

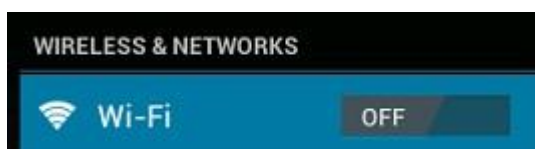

3.1.3 Add a Wi-Fi network

Users may also add a Wi-Fi network under “Wi-Fi settings”. In “Wi-Fi settings”, tap “Add network”. Enter the SSID (name) of the network. If necessary, enter security or other network configuration details. Touch Save.

Note: Network status icons turn green  if you have a Google Account added to your tablet and the tablet is connected to Google services, for syncing your Gmail, Calendar events, contacts, for backing up your settings, and so on.

3.2 Bluetooth

3.2.1 Make device discoverable

Under “Settings”, tap “Wireless & networks” → “Bluetooth settings”. Tap Bluetooth to turn on Bluetooth power and tap “Discoverable”. The Bluetooth indicator then appears in the status bar.

3.2.2 Scan for devices


After scanning, there will be a list of the IDs of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, ensure that the other device is turned on and set to be discoverable.



3.2.3 Pair with the Bluetooth device

Tap the name of an available Bluetooth device to pair with. In the popup “Bluetooth pairing request” dialog, type a PIN.

If the pairing is successful, your tablet connects to the device.

Example: to transmit a photo

Go to “Gallery”, choose a photo to share. Tap  icon or any spot on the photo to

view a submenu. Tap  →  →  , and then choose the device name in the Paired devices list. The photo will then be sent.

3.2.4 Unpair a Bluetooth device

To unpair your Tablet from a Bluetooth device, touch and hold the device name in the devices list. Tap “Unpair” in the popup dialog.

Note: After pairing, it shows under the Bluetooth device “Paired but not connected”, but file transmission is still possible.

At present, the Bluetooth function only supports files transmission.

To extend battery life, turn Bluetooth power off when not in use.

3.3 3G Network

A 3G network is a mobile network that allows high-speed data access and advanced network capacity. It features a wider range of services and advanced network capacity over the previous 2G network.


Your tablet supports external 3G network by a 3G dongle. 3G dongles are connected via the USB HOST port.

Note: some models support 3G network optional. If you purchase this tablet with a SIM card slot, you can access to the Internet via your 3G SIM card while Wi-Fi network is not available. Please insert your 3G card into the SIM card slot of the tablet, and the tablet will obtain 3G signal automatically. If you purchase this tablet without a SIM card slot, you can also try to access to Internet with a USB 3G dongle.


IV. Web browser

4.1 Browse the web

Before using your browser, make sure Wi-Fi or internet is connected.

In your app panel, tap the icon browser  to open your browser.

Tap the address bar, the Android keyboard will appear for your entry of keywords or URL.

Tap the  icon in the top corner of the browser page to open the submenu.

V. Install and Manage Apps

5.1 Install Apps



Go to the “ApkInstaller” to install and manage your apps. To install an application, follow below steps:

 
1. Tap to open the ‘ApkInstaller’ → ‘Install’ → then tap “Internal Memory” or “TF Card”. Available .apk files will appear at the right side. Touch the required one to install it.

Note: Make sure the .apk file is workable on Android 4.1, and the suffix is .apk. e.g. “angrybirds.apk”.

In some cases, there may be no icon on in the App Panel after a .apk file is installed. Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is a broken one so you may need to download a full version.

5.1 Manage Apps


Tap to open the ‘ApkInstaller’ → ‘Manage’. Tap the app and then you can launch, export, and uninstall it.

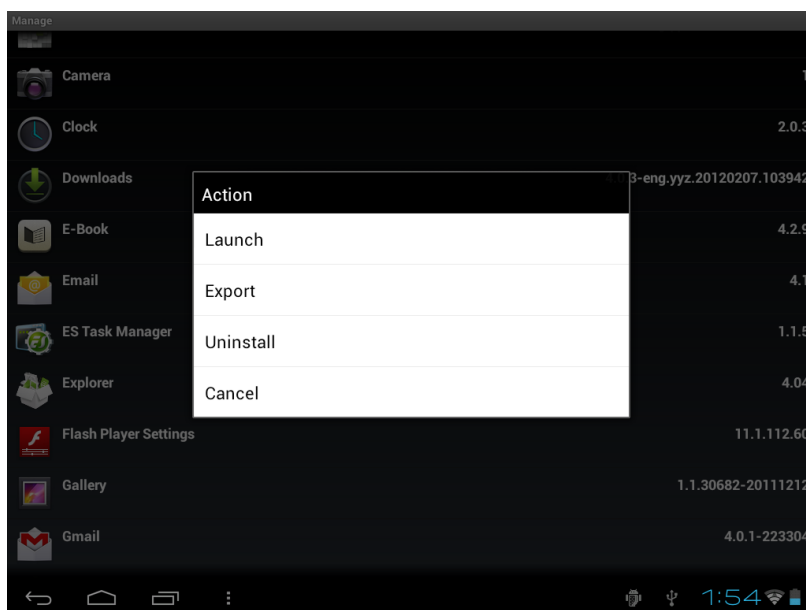


You can also go to “Apps” under “Settings” to manage apps.

VI. Multimedia

6.1 Music

 After loading your music into your tablet, tap the music icon  to open the music player. You can select songs by Artist, Albums, songs or Play lists. Tap to select. The media player allows you to shuffle, skip, or pause your current selection and even displays the album artwork when available.

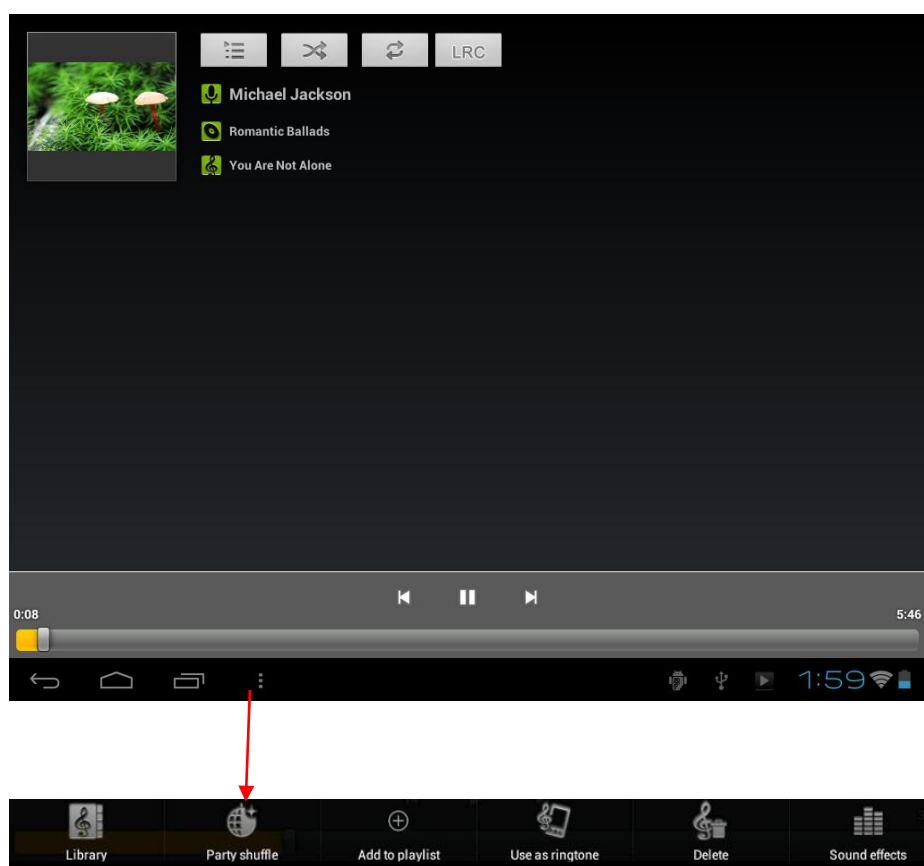


Tab  in the bottom line to open a submenu in music playing page.

6.2 Video

You can play videos saved in your tablet or TF card.

 To play, tap icon “MX Player” to launch the video player: select a movie that interests you. Playback should start automatically. Click anywhere on the screen to see the sound bar. You can withdraw the film, rewind it or stop it. You can also adjust the aspect ratio. To change the brightness of the screen, slide your finger vertically up and down the left side of the screen. To change the volume while playing a movie, slide your finger vertically up and down the right side of the screen.

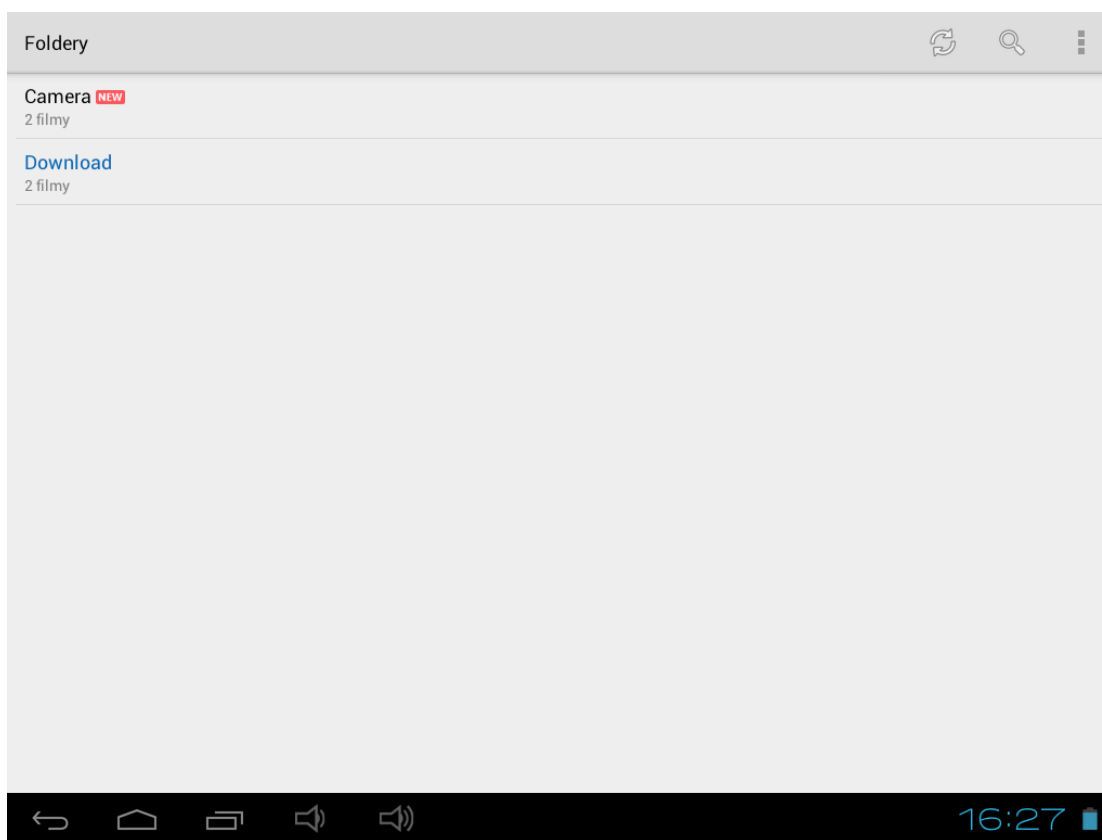

With the Wi-Fi on, you are also able to view an on-line video.

 
6.2.1 HDMI output

Connect the tablet to your TV via an HDMI cable and wait for the signal to the TV. If this fails, set the correct reception of the TV. The HDMI cable is not included with the CTAB.

Resolution, sent by HDMI cable, you can adjust the HDMI settings, which are located in the settings menu.

Note: Connecting your TV to the HDMI port will cause the tablet screen expires. To continue, we recommend that you use the mouse.

6.3 Gallery


You can view, show off, and even edit your digital pictures on the tablet's full color, high-resolution display. After loading your media, tap Gallery  to display your pictures:




Tap the picture you want to display it, and slide right or left to show other pictures. Tap the menu icon, you can edit, rotate, crop, or set it as wallpaper.

6.4 Camera




Tap the  icon to open camera. Your tablet is built in 2M front camera and 2M rear camera. You can take a photo, or a video both by front camera and rear camera.

 
Note: After you power on your tablet, you can go to camera directly by drag the lock to left.

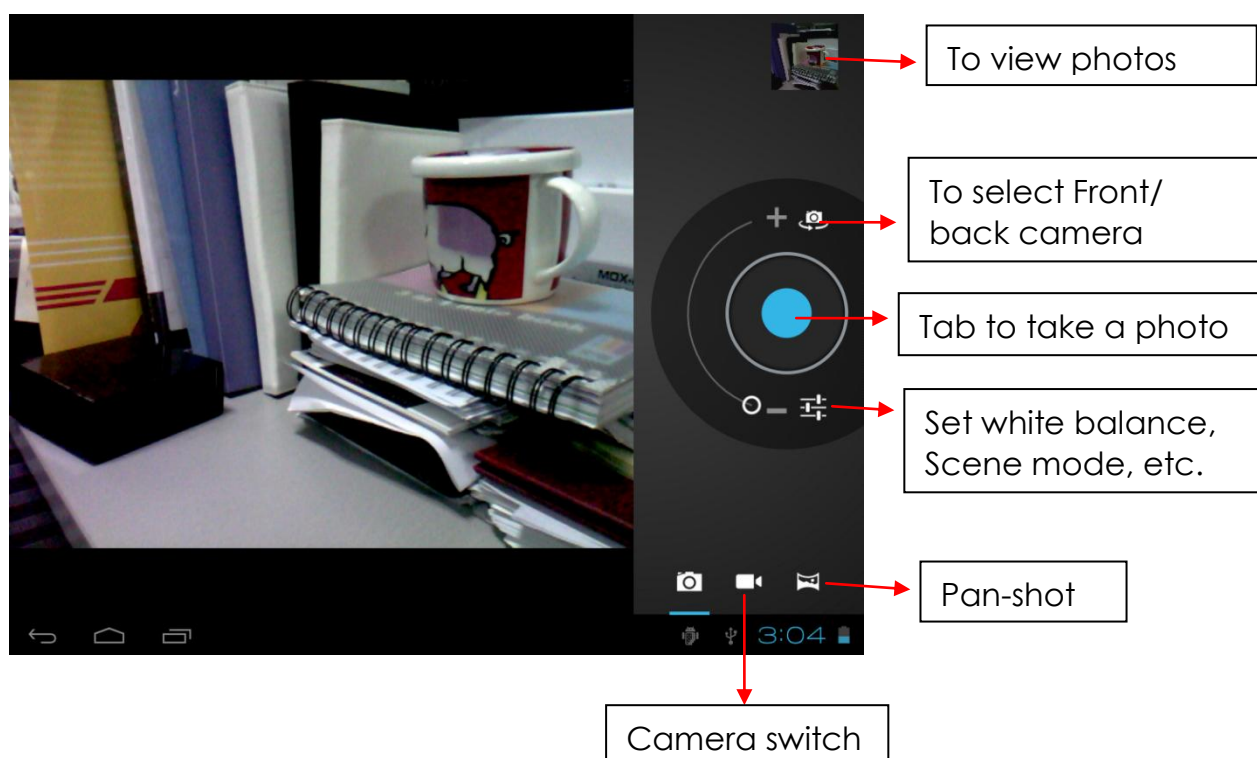


6.5 E-book reader

The tablet supports many eBook formats like PDF, Text, E-Pub, FB2....

 Tap the “e-book”  icon to open e-book shelves. Tab an e-book to open the book and read.

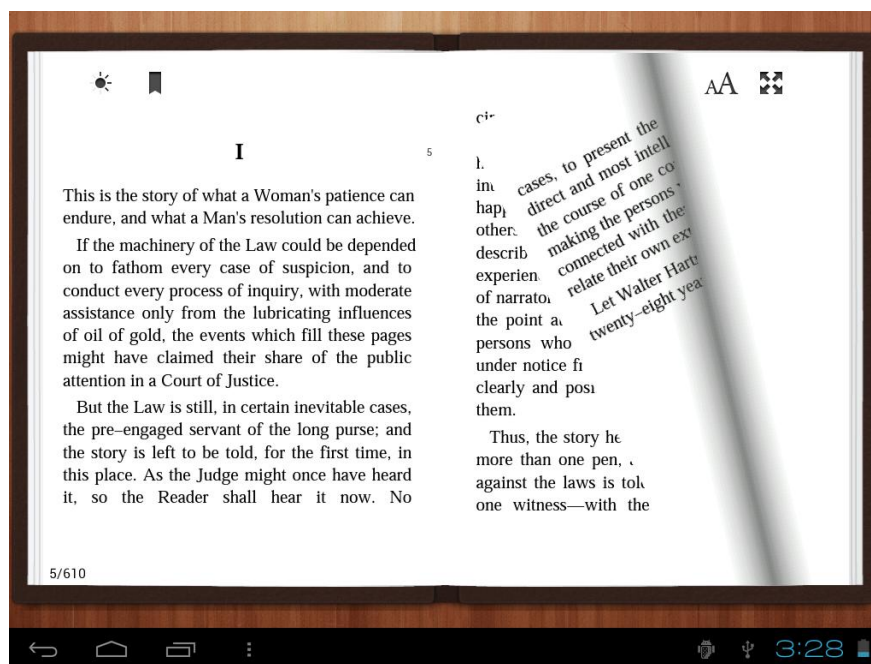

You can page up or page down by sliding your finger right or left.

 
Tab  or the menu button to check the sub-menus. You can set the font size, Go to Page jump; check your bookmarks, set the auto flip time, etc.

VII. Settings



Tap the “Settings” icon to go to settings.

You can check and set wireless&networks, sound, display, storage, Battery, Accounts &sync, security, language, date&time, about tablet, etc.

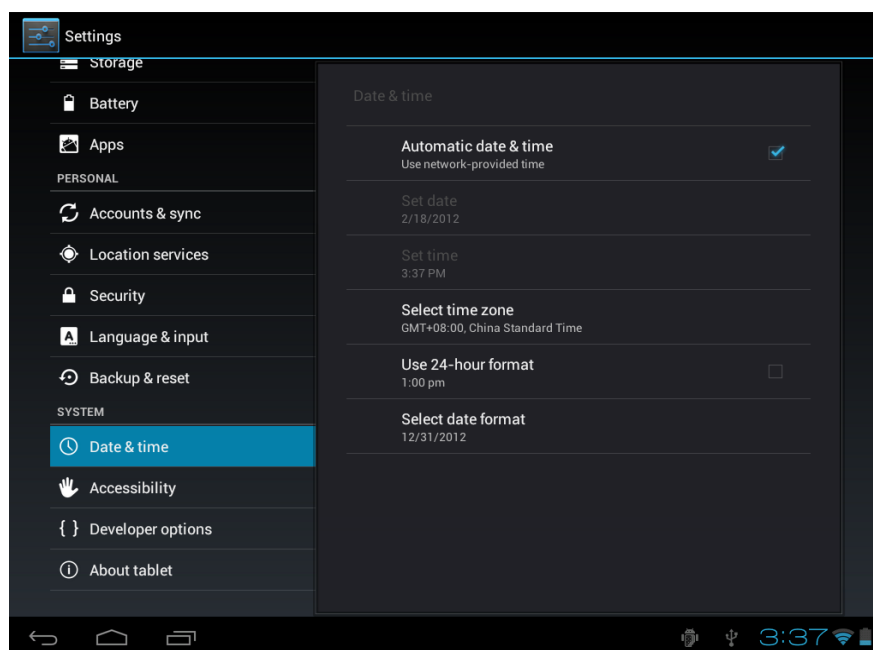

Wi-Fi: tap “Settings” → “Wireless & networks” to turn on wifi and scan. It will show a list of Wi-Fi networks scanned in range. Choose a strong Wi-Fi network to connect. (You may need to input the password).

Display: To set Brightness, Wallpaper, Sleep time-out, Font size here.

Storage: Check internal storage here. If you insert a Micro SD card, or USB disk, you can check the total and available space for your Micro SD card or USB disk. Please unmount it to safely remove it.

Battery: Check the Battery status here.

Display: Tap “Settings” → “Display” to set brightness, screen time-out, etc.

Language & input: to set language and keyboard input.

Backup & reset: to go to submenu "back up my data" and "Factory data reset". If you choose factory data reset, all data from your tablet's internal storage will be erased. Choose this option carefully.

About Tablet: To check information about your tablet, such as Model number, android version, etc.

VII. Battery information



Very Low Battery



Full Battery



Charging Battery



indicates that the power of Battery is full. When the battery level becomes too low, a prompt comes up to note you to charge your tablet.

While charging, you can check the charging status in the lock screen:



It takes around 5 hours to charge your tablet to full battery. Please only use a 5V /2.5A adaptor included in the gift box to charge it.

Troubleshooting

1. Cannot turn on the tablet

Check the tablet's power level; please charge it before starting it. In case your tablet still cannot be turned on, you may try to reset it

2. No sound from earphone

Check if volume is set to '0'. Or earphone may be broken, please change for another one.

3. Big noise

Check if there is dust in the earphone or speaker. Check if the file is broken.

4. Screen drift or unresponsive screen

To pin the reset button to reset your tablet and power it on again.

5. Application not workable

Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is broken so you may need to download a full version.

6. How to delate a Google account?

If an account is added, the account is shown in "Accounts & sync" of "Settings", where you may also add another account. To delete an undesired account, go to "Settings" → "Privacy settings" → "Factory data reset". Your tablet's internal storage, downloaded apps, etc. will also be deleted, except the info in your flash memory. Be careful before you carry out this operation.

Additional Information

CTAB was produced for company [Compendium Education Center](#).

Information on the warranty on page: <http://www.ctab.pl/>.

Distribution in Poland: Veracomp S.A.