

# E-Book Reader

## **User Manual**

You are highly appreciated to purchase our products. For optimum performance and safety, please read this operation manual carefully before connecting, operating, or adjusting the product. Please keep this manual for future reference.

## Safety Information

### Please read all instructions before usage

- Pls note only after two or three times with full electric charge and electric discharge, the battery can reach the top performance.
- New battery should be extended 3-4 hours after charged up well at the first 3 times, then charged up the battery to be full in the fourth time.
- To avoid the information drops, suggest the user copy the important datum, especially be care to copy the datum before upgrade the hardware. Damages result from datum losing is out of our company responsibility.
- This device is the higher precision electronic product, pls don't dismantle by yourself.
- Be careful to avoid fall, impact this player.
- Avoid to use in below instances: high/low temperature, damp, mass dust, strong magnetic field and reveal under sunshine for long time.
- Clean the shell of the device lightly with moist cotton cloth, ban to use other chemical washing water.
- This device should not be exposed to water, and there should not be any cup fill with water and other liquid be around.
- Adjust the sound volume when listening to the music or video. avoid to injure your aural comprehension.
- Pls don't change any parts of this device.
- Pls use the battery, adapter and accessories which the manufacturer permit to use other type of similar products will go against the warranty details, and some dangerous may triggered.
- Pls deal with the discarded device and accessories according to the local environmental rules.
- If any problems arose when using, pls get in touch with our company directly.
- Due to our continuous updates on the product, all figures in this manual are only for reference. If any development of this product in future, will be not notified.
- Special hint: Easy for reading, you can store up the ebook which you usually read in "my storage" documents, convenient to open quickly.

# Table of Contents

- 1. Safety Information~::~::~::~::~
- 2. Table of Contents~::~::~::~::~
- 3. Main functions~::~::~::~::~
- 4. Accessories~::~::~::~::~
- 5. Confour and keysroke introduction~::~::~::~::~
- 6. Transmit Date and Charging Process~::~::~::~::~
- 7. Operation~::~::~::~::~
  - Turn on the ebook reader.....
  - Main interface.....
  - Browse history.....
  - Ebook.....
  - Music playing.....
  - Vedio.....
  - Photo.....
  - Record.....
  - Explore.....
  - FM.....
  - Settings.....
  - Calendar.....
  - Search.....
  - Shut down the ebook reader.....
  - Restart.....
- 8. Hackneyed problems~::~::~::~::~
- 9. Function list~::~::~::~::~

 
**Main Features:**

- **Display: 7" e-paper LCD screen resolution:800\*480**
- **RAM: 256MB**
- **Extension slot: SD card**
- **Image : JPG,BMP**
- **Text : TXT、 EPUB、 FB2、 HTML、 PDB、 PDF、 DOC formats**
- **Music : MP3,WMA,OGG,FLAC,WAV,AAC, APE**
- **Vedio : MKV、 AVI、 RM、 RMVB、 VOB、 DAT、 MP4、 FLV、 3GP with 720P**

**Accessories:**

- ✓ **Power Adapter**
- ✓ **User Manual**
- ✓ **Earphone**
- ✓ **USB Cable**
- ✓ **Leather Case**

## Contour and keystroke introduction:

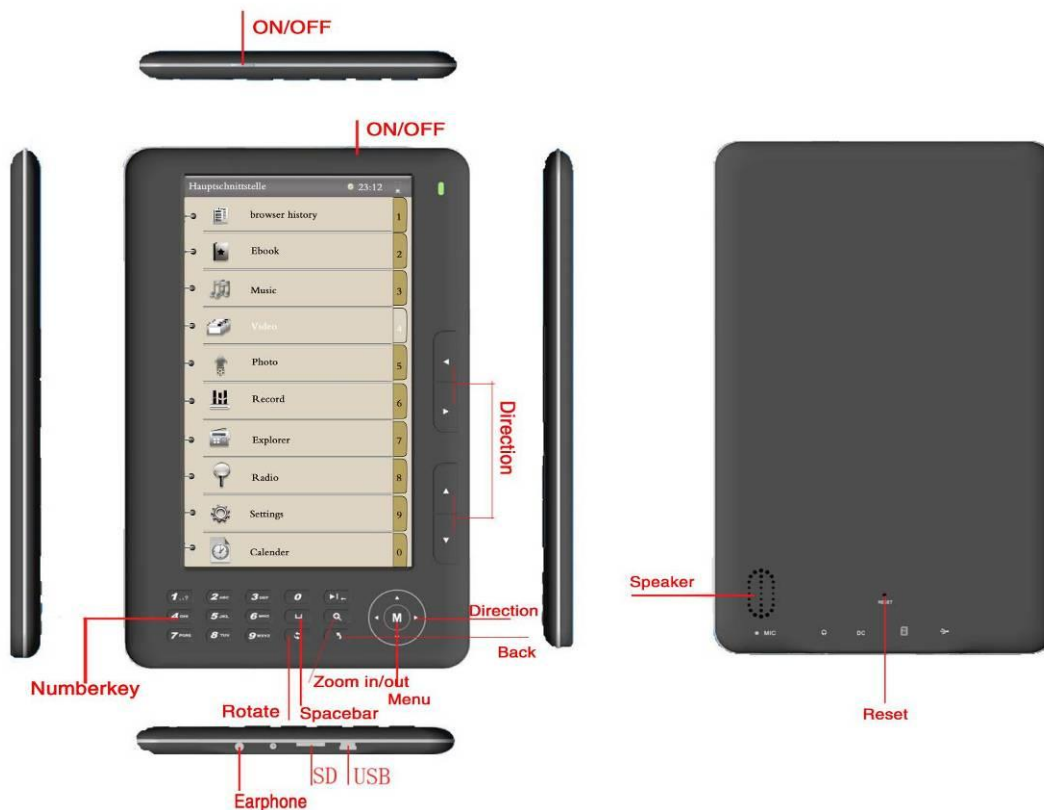


### Keystroke description:


#### 1. Direction keys:

- 1) In the main interface and content list: press the direction keys shortly to choose the sections down and upon.
- 2) In music interface the direction keys can be used for add/ decrease volume, choose the previous/next music.

**2.Main menu key:** in any interfaces, press shortly to enter into main menu directly.




**3.Zoom in/Zoom out key:** when reading articles, press the key shortly to adjust the size of the fonts

**4.On line menu M key:** when in reading or music playing interface, press  shortly to recall the functions online menu.

**5.Back/cancel:** press  shortly to go back to previous menu step by step or cancel the current settings.


**6.Number keys:** on the right side with serial numbers interface, press the right number shortly to jump to the corresponding interface

**7.Rotate:**

- 1) in reading interface, press  shortly can rotate the article
- 2) in Search interface, press  shortly to change Input Method Editor.
- 3) in reading article/music list interfaces, press  shortly to sort order the files list again by the document name or phonetic transcription.

### **8.Up/down keys:**

In the menu interface, press shortly to chose the menu up and down;  
in the reading article menu interface, turn pages to be previous and next.

**9.Play/pause:** in music playing interface, press  to switch play and pause.

### **Transmit Data、charging process:**

#### **Transmit Data:**

Connect with the PC by USB cable in the package, copy files, music, vedio, documents, which you need in hard disks of your PC, switch to your ebook reader memory to put down these files.

#### **Charging process:**

##### 1.Use the standard USB cable

Firstly,connect ebook reader with computer by USB cable.

Secondly, there will be icon indicator on screen to show connecting well after connect computer. Click twice the icon “delete hardware safely” to move away the device on the corner of right side. Don't pull out the USB cable, keep further connect with computer, and the device is charging.

##### 2.Charge by the adapter:

Special note: the Adapter which you choose must meet the following requirements ,otherwise any damages will be due to human influence.

input: AC110V~240V 50/60Hz Max:150mA

output: DC5.0~5.5V 1000mA(USB) 1500mA(DC)

## Operation:

### 1.turn on the ebook reader

Long press the On/Off key 3~5seconds to start up the device.

### 2.Main interface:



#### 1).Browser history:

 
Short press up/down direction keys to move the cursor to“ browser history”, press "M" to enter in, you can check name, page information. about the files you open recently.

Remark: press the Play/pause key in the browse history interface, can delete all the history.

#### 2).E-book

All the files are displayed in the interface, press the direction keys to let the cursor move to the right article,short press the Main menu key to enter the

reading interface.

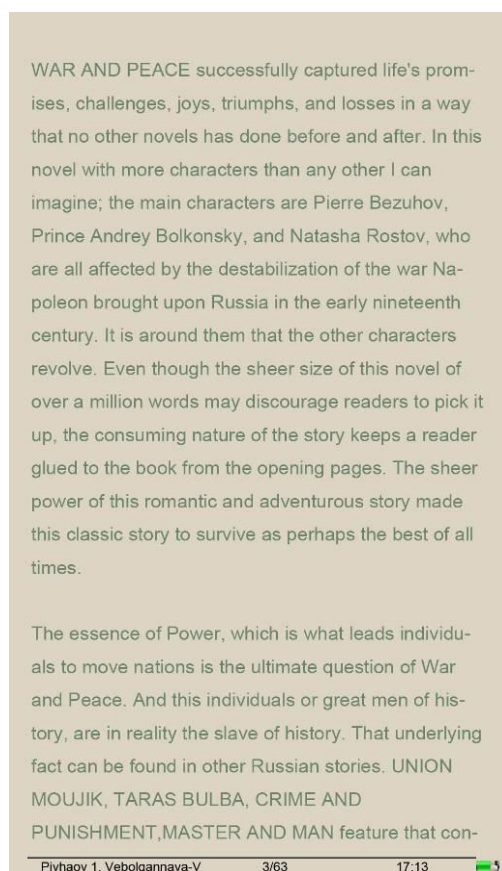

Functions introduction briefly: in the reading interface, press **"M"** shortly to enter the online menu interface, include below functions:

Page jump:

Operation step: reading articles---press **"M"** shortly—chose page jump---press direction keys to choose the page numbers ---after make sure then press **"M"** to choose the page.

Save mark:

Operation step: reading articles---press **"M"** shortly—chose save mark---press **"M"** key---press direction keys shortly to chose number---press **"M"** to confirm the number you chose---the bookmark was stored with name.

Loadmark:

Operation step: reading articles---press **"M"** shortly—chose Loadmark---press **"M"** shortly---press direction keys to chose the bookmark you need ---press



"M" to confirm the number you choose ---the bookmark was picked up and enter into reading interface directly.

Delmark:

Operation step: read articles---press "M" shortly—choose Delmark---press "M" shortly---press direction keys to chose the bookmark need to be deleted ---press "M" to confirm the number you chose---finished

Browser mode:

Operation step : Reading article---Press "M" shortly---chose browser mode---press shortly of the direction keys to chose Auto Mode and Manual Mode.

Manual Mode: Change pages by human actions.


Auto Mode: The device will change pages automatically in reasonable time

Auto change pages:

Operation step: reading article---Press "M" shortly—chase Auto changing pages---choose Flip Time to chose the time of changing pages.


Table of Contents: Shows the information of the article.

### 3).Music playing

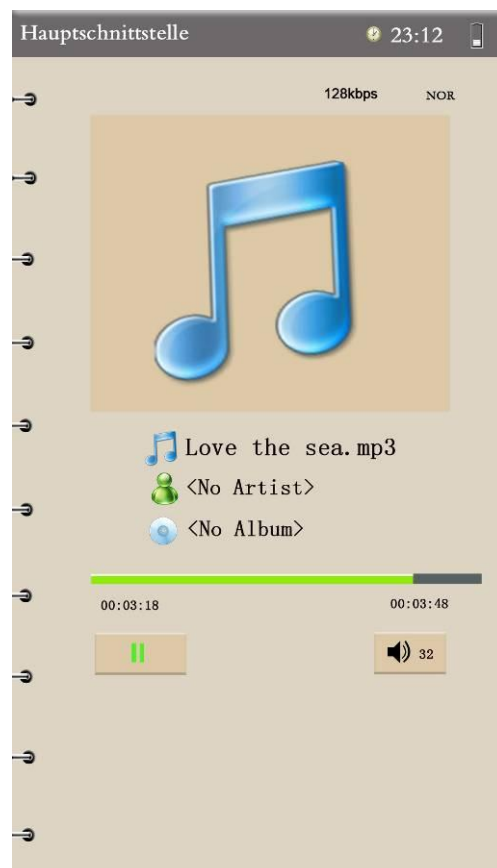 

## Functions introduction:

**Adjust volume:** press left/right keys to adjust volume.

**Play/Pause:** press  can play and pause the music in this interface.

**Previous/Next:** Press up/down keys shortly to change music.


**Fast Forward/Fast Reverse:** long press left/right keys can let the music Forward/Reverse

**Music list setting:** Press "M" shortly to callout the online menu. There are Repeated Mode, Play Mode, MS EQ, EQ Sel, User EQ Setup, Display different modes for optional.

**Repeated setting:** Once, Repeat, All, All Repeat, Intro

**MS Sound Effects:** 3D, Bass, LEQ.

**EQ:** Normal, MS EQ, Rock, POP, Classic, Bass, Jazz, User EQ.

**Back:** Press  shortly back to previous music list.

## 4).Vedio



## Functions instructions:

**Adjust volume:** short press right/left direction keys to adjust Volume.

**Play/Pause:** press  can play and pause the Video in this interface.

**Back:** Short press back to return to previous menu; long press back to main menu.

## 5).Photo

**Functions Instructions:**

**Rotate images:** press the  in the image browse interface

**Image Zoom in/Zoom out:** press the   keys when browse images can change the size of the pictures.


**Image switch:** press direction keys to switch images.

**Back/Exit:** short press  to retreat to last menu.

**Special note:** clients can also listen music when browse images.

**Actions:** Play music first, then browse the images.
 
## 6).Record

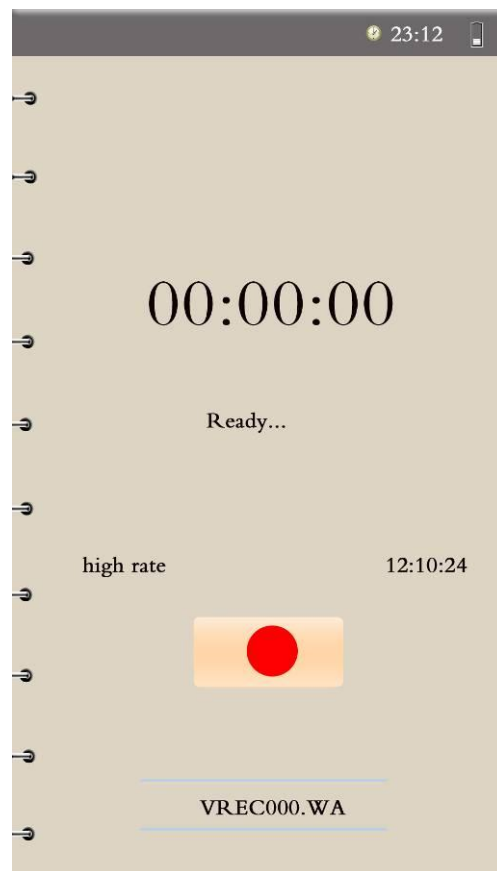**Functions instructions:**

**Confirm:** Short press "M" to confirm.

**Start/Pause recording:** Short press "M" to switch record condition

**Exit storage:** there will be storage notes "yes" and "no" appeared when short press back key, then press direction keys to choose to store or not.

**Record playing:**

 
1:Choose the "record playing" in the recording functions to play records.

2: Choose the “Record” files in the catalog list of the main menu.

7). Explore



8). FM

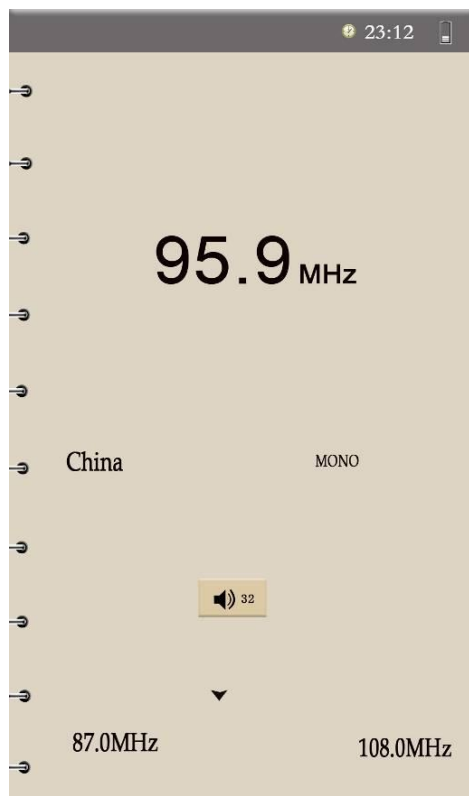

## Functions instructions:

Confirm: Press **"M"** shortly to confirm.

Start/Pause FM: Press **"M"** short to switch FM condition.

### 9).Settings

Functions instructions:

- 1) Display setting: set the time and the brightness of the backlight.
- 2) System Setting: Restorable/Key lock time.
- 3) Time/Date setting: set the time and date of the system.
- 4) Languages:English,Deutsch,Italiano,Portugues,hollands,Francais,Spanish ,Russia,Korea,Japanese,Dansk etc.
- 5) Auto shut time: the device will Auto shut down when there is no other procedure running. For example: when the device is playing music,the Auto shut down function will be futile.

### 10). Calendar



The screenshot shows a mobile calendar interface. At the top, the time is 23:12. Below that, the date is 2010-07-10 and the day is Saturday. The calendar grid below shows the days of the week (SUN to SAT) and the dates from 01 to 31. The date 10 is highlighted in green.

SUN	MON	TUE	WED	THU	FRI	SAT
						01
02	03	04	05	06	07	08
09	10	11	12	13	14	15
16	17	18	19	20	21	22
23	24	25	26	27	28	29
30	31					

## Functions instructions:

Confirm: press **"M"** shortly to chose and confirm

Direction keys: Press direction keys to search dates.

### 11).Search



Functions instructions:

Confirm: Press **"M"** shortly to chose and confirm.

Searching: press number keys to enter letters to search bookmark list.

**Shut down the ebook reader:** Long press the ON/OFF key to shut down the device.

**Restart:** If any anomaly case just as screen quiescence, out of control because of some unruly operations, the user can press the small hole "Reset" on the back of the shell to restart the device, then the device will return to normal.

### **Hackneyed problems**

①The ebook reader can start normally.

- Pls check the battery, if there is enough electric quantity in the battery.
- Check again after connect with the adapter.
- If still cant start after charge well,pls contact with us engineer team.

②No sounds from the earphone.

- Pls have a check if the volume was set to be “0”.
- Pls check the connection of the earphone with the device.

③Severe Noise

- Pls make sure the plug of the earphone is clean, Noise maybe arose because of dirt.
- Pls test the files,try to play other music to check. If the file was damaged, serious noise will arose.

④Keys cant operated normally.

- Pls make sure the electronic lock is locked or not,if it is locked, pls press play shortly to unlock..

## Function list

Number	Functions list	
	Designation	Content
1	Music formats	MP3,WMA,OGG,FLAC,WAV,AAC , APE
2	TXT formats	TXT,FB2, PDF,PDB,EPUB,SKT,HTML etc.
3	Image formats	Support playing JPG,BMP Black/white picture
4	SD card expand	Support
5	Video formats	Support MKV、 AVI、 RM、 RMVB、 VOB、 DAT、 MP4、 FLV、 3GP etc with 720P vedio.
6	System information	Support
7	Record	support