



Business
Services

User's manual

4019/4018IP/4008IP


















Introduction

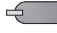Thank you for choosing a telephone from the 4019/4018/4018IP range manufactured by **Orange Business Services**. Your terminal has a new ergonomic layout for more effective communication.



How to use this guide

	Lift the receiver.		Line key.
	Hang up.		Specific key on numeric keypad.
	Numeric keypad.		Partial view of display.
	Means that the function is subject to programming. If necessary, contact your installer.		
	Adjustment "reduce".		Fixed key.
	Adjustment "increase".		MENU key.
	Loudspeaker, hands free.		Voice mail access key.
	Move the navigation key up or down.		
	To go back one level (press and release) or to return to the welcome page (press and hold) ; during a conversation, can be used to access the different pages (Menu, Perso, etc.) and to return to the telephone screens.		

These symbols can be supplemented by small icons or text.



Recommendations on the management of password (or personal code) of your phone:

When connected to an external public network your e-diatonis IPBX can be subject to malicious attacks.

A simple way of protecting against attack is to change your passwords regularly as you do for your PCs.

Here are a few tips on choosing your password, called "personal code" (4 digits on your phone) :

- Do not use a too easy password (ex. 1234, 2010 ...)
- Take a different password for each application
- Your password is personal and should remain confidential, not disclose it to anyone else
- Never write down your password. The first thing an attacker will do is rummage through your belongings – check your diary, look under your monitor and keyboard, sift through your garbage, etc.



Your phone is now correctly secure and the fraud risks are minimized.

Contents

	Getting to know your telephone	p. 6			
1.	Using your telephone	p. 7		6.	Managing your charges.
	1.1 Making a call	p. 7		6.1	Charging your calls directly to business accounts
	1.2 Receiving a call	p. 7		6.2	Finding out the cost of an outside call made for an internal user from your terminal
	1.3 Using the telephone in "Hands free" mode	p. 7		6.3	Call duration restriction
	1.4 Activating the loudspeaker during a conversation (receiver lifted)	p. 7			
	1.5 Calling your correspondent by name (company directory)	p. 7		7.	Programming your telephone.
	1.6 Make a call using the personal phone book	p. 7		7.1	Initializing your voice mailbox
	1.7 Filtering calls using the voice mailbox	p. 7		7.2	Customising your voice greeting
	1.8 Redialling	p. 8		7.3	Modifying your personal code
	1.9 Make a call-back request to a busy number	p. 8		7.4	Configuring the telephone ringer
	1.10 Receiving intercom calls	p. 8		7.5	Adjusting screen brightness
	1.11 Sending DTMF signals	p. 8		7.6	Selecting language
	1.12 Mute, so that your correspondent cannot hear you	p. 8		7.7	Make a call using the personal phone book
2.	During a conversation	p. 9		7.8	Programming direct call keys
	2.1 Making a second call during a conversation	p. 9		7.9	Programming an appointment reminder
	2.2 Answering a second call during a conversation	p. 9		7.10	Identify the terminal you are on
	2.3 Switching between calls (Broker call)	p. 9		7.11	Broadcasting background music on your loudspeaker
	2.4 Transferring a call	p. 9		7.12	Lock / unlock your telephone
	2.5 Transfer a call to the voice mailbox of an absent party	p. 9		7.13	Activating/deactivating "forced headset" mode
	2.6 Three-way conference with internal and/or external correspondents (conference)	p. 10			
	2.7 Placing a call on hold (hold)	p. 10		8.	Diatonis Call Canter : Agent set
	2.8 Placing an outside call on hold (parking)	p. 10		8.1	Agent set
	2.9 Intrusion into an internal conversation	p. 10		8.2	Open an agent session (login)
	2.10 Store a number	p. 11		8.3	The four operating statuses of the agent set
	2.11 Adjust audio volume	p. 11		8.4	Changing the operating status of the set
3.	'Meet me' conference.	p. 12			Declaration of conformity
	3.1 Initiate a 'Meet me' conference	p. 12			p. 26
	3.2 Join a 'Meet me' conference	p. 12			
4.	Sharing.	p. 13			
	4.1 Receiving supervised call ringing	p. 13			
	4.2 Manager/secretary filtering	p. 13			
	4.3 Call pick-up	p. 13			
	4.4 Answering briefly in place of the operator	p. 13			
	4.5 Hunting groups	p. 13			
	4.6 Calling an internal correspondent on his/her pager	p. 14			
	4.7 Answering a call on your pager	p. 14			
	4.8 Calling a correspondent on his/her loudspeaker	p. 14			
	4.9 Sending a written message to an internal correspondent	p. 14			
	4.10 Send a voice message copy	p. 15			
	4.11 Sending a recorded message to a number / a distribution list	p. 15			
	4.12 Broadcasting a message on the loudspeakers of a station group	p. 15			
	4.13 Modify the automated attendant welcome message remotely	p. 16			
5.	Keep in touch	p. 17			
	5.1 Selecting calls to be diverted	p. 17			
	5.2 Diverting calls to another number (immediate diversion)	p. 17			
	5.3 Diverting your calls to your voice message service	p. 17			
	5.4 When you return, consult recorded messages	p. 17			
	5.5 Activate/disable the personal assistant	p. 17			
	5.6 Personal assistant: reaching you with one number only	p. 18			
	5.7 Diverting calls to your pager	p. 18			
	5.8 Forwarding your calls from the receiving terminal ("Follow me")	p. 18			
	5.9 Applying a selective diversion	p. 18			
	5.10 Diverting all group calls	p. 18			
	5.11 Cancelling all diversions	p. 18			
	5.12 Diverting calls when your line is busy (divert if busy)	p. 18			
	5.13 Do not disturb	p. 19			
	5.14 Leaving a recorded message for internal callers	p. 19			
	5.15 Consulting written messages	p. 19			
	5.16 Message notification	p. 20			

Getting to know your telephone

Handset

Alphanumeric keypad



■ Audio keys



Hang-up key: to terminate a call.



Hands-free/Loudspeaker Key: to make or answer a call without lifting the receiver (4018IP/4008IP).

- Lit in hands-free mode or headset mode (short press).
- Flashing in loudspeaker mode (long press).



Intercom/Mute key:

- During a conversation: press this key so that your correspondent can no longer hear you.
- Terminal idle: press this key to answer calls automatically without picking up the receiver (4018IP/4008IP).



To adjust the loudspeaker or handset volume up or down

■ Function keys



Messaging key to access various mail services

 
If the key flashes, a new voice message or a new text message has been received.



'Redial' key

- To access the 'Redial' function (short press)
- Call back on the last 10 number dialed (long press).

■ Navigation

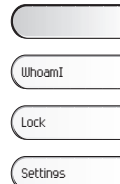


Up-down navigator: used to navigate around the home page, through the menus or in a text zone when entering characters.


The home page consists of:

- Information on the status of the set (set locked, call forward, etc.)
- Date and time
- Set programming and configuration functions

 Functions accessible (set in idle position):



Identify the terminal you are on,

 


Call back on the last 10 number dialed,




Lock / unlock your telephone,



 
Programming an appointment reminder,



 divert your calls to another number. (immediate forwarding, forward to voice mail, forward to bleeper),




 configure the set (personal assistant, display, ring tone, voice mail, etc.),




Using call by name.

 Features accessible in conversation:



Placing a call on hold (hold),

 

Sending DTMF signals,



store the number in the personal phone book,



Transfer a call to the voice mailbox of an absent party.

Other features can be accessed depending on the configuration of the system.



OK key: used to validate your choices and options while programming or configuring.



Back/Exit key: to return to previous menu (short press) or return to first screen (long press). You can also use this key to correct a character you entered.

■ Function keys and programmable keys



Guide key: use to obtain information on the pre-programmed keys or to access the set programming or configuration.



Phone book key : phone book key to access your personal phone book (short press) or to make a call by name (long press or press twice).


Pre-programmed function keys and programmable key

Lit when the function associated with the key is activated.

The 6-key block consists of:

- two line keys,
- one 'immediate forwarding or cancel call-forward' key,
- one 'conference' key,
- one 'transfer' key,
- one direct call key to programme.

 1.1 Making a call

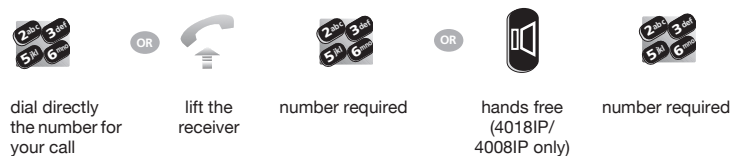


To make an external call, dial the outside line access code before dialling your correspondent's number. 0 is the default code for an outside line.

For the operator, dial '9' (by default).

The duration of your external call may be limited in time by the administrator.. In this case, a beep sounds and/or a message will be displayed on the screen 20 seconds before the end of the communication

 1.2 Receiving a call

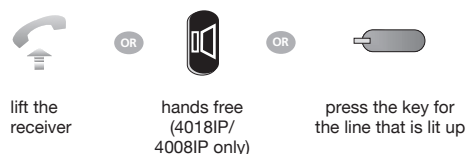

1.3 Using the telephone in 'Hands free' mode (4018IP/4008IP only)

■ Terminal idle:

 


■ Call in progress:




During a conversation, you can lift the receiver without terminating the call.

1.4 Activating the loudspeaker during a conversation (receiver lifted) - Loudspeaker

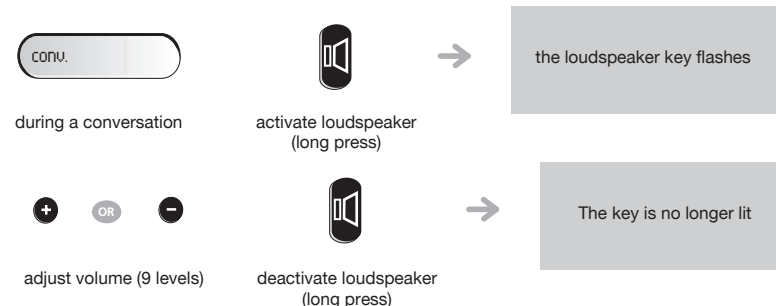


press and release the loudspeaker key to switch to hands free mode (light steady) (4018IP/4008IP).

 1.5 Calling your correspondent by name (company directory)

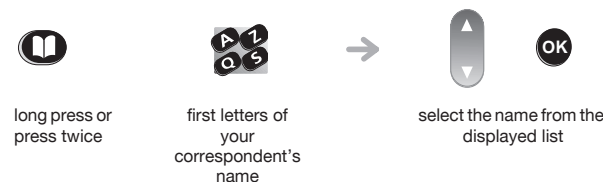

You enter your contact's name in predictive text mode. In this mode, enter each letter of the name by pressing only once on the key with this letter.

 1.6 Make a call using the personal phone book

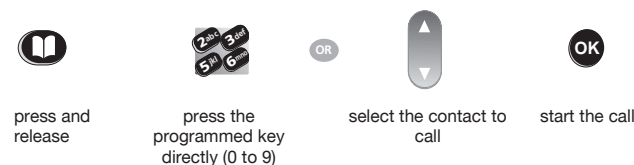

1.7 Filtering calls using the voice mailbox (4018IP/4008IP only)

This service lets you filter incoming calls to your voice mailbox. When your caller leaves his message you can choose to communicate with him.

■ Activating call screening:



Using your telephone

• When you receive a call:



1.8 Redialling

- Redialling the last number dialled (redial)

 


'Redial' key(short press)

- Call back on the last 10 number dialled



'Redial' key (long press)

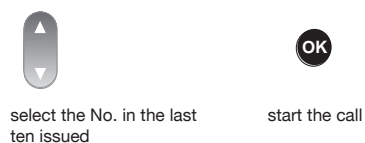

1.9 Make a call-back request to a busy number



1.10 Receiving intercom calls (4018IP/4008IP only)

 
You can answer a call without lifting the receiver. When you receive a call, you are automatically connected in hands-free mode. The identity of the caller is displayed on the screen.

- To activate - Terminal idle:



When your caller hangs up, intercom mode remains active.

- To deactivate - Terminal idle:



1.11 Sending DTMF signals

During a conversation you sometimes have to send DTMF signals, such as with a voice server, an automated attendant or a remotely consulted answering machine.



 
during a conversation

to activate

The feature is activated by default.


1.12 Mute, so that your correspondent cannot hear you

You can hear your correspondent but he/she cannot hear you:

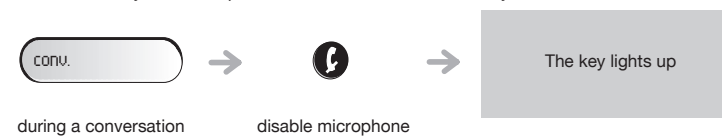

during a conversation

 disable microphone



resume the conversation

2.1 Making a second call during a conversation



during a conversation

number of
second
correspondent

call back the last
number dialed.
(short press)

• Other methods for calling a second correspondent



Call back on the last 10 number dialed (long press).



Calling from your personal directory (PersSpDial) (long press or press twice - phone book key).



OR



Dialbyname

OK

Using call by name.

long press or
press twice



Programmed line key.

• To cancel your second call and recover the first:



during a conversation

 
key for the line
whose light is
flashing



If you make an error, hang up: your telephone will ring and you will recover your first call.

2.2 Answering a second call during a conversation

• A second correspondent is trying to call you:



during a conversation

name or no. of the caller
displayed for 3 seconds

light flashes

■ Answer call displayed



line key for which
icon is flashing

• To return to your first caller and end the conversation in progress

 


during a conversation

key associated with
the 'incoming call'
icon

2.3 Switching between calls (Broker call)

During a conversation, a second call is on hold.
To accept the second call:



light flashes

2.4 Transferring a call

• To transfer your call to another number:



during a conversation

no. of the 2nd
terminal

• If the number receiving the transfer answers:



'transfer' programmed
key

You can also transfer your call immediately, without waiting for your correspondent to answer.



Transfer between two outside calls is not generally possible (depends on country concerned and system configuration).

2.5 Transfer a call to the voice mailbox of an absent party

During the call, you want to transfer your correspondent to the voice mailbox of another correspondent.



during a conversation

number of
second
correspondent

During a conversation

2.6 Three-way conference with internal and/or external correspondents (conference)

- During a conversation, a second call is on hold:



during a conversation

"Conference" programmed key

- Cancel the conference and remain with your second correspondent (your first call is placed on hold):



"Conference" programmed key

- Hang up on all correspondent:



- After the conference, to leave your two correspondents talking together:



cancel the conference

'transfer' programmed key

2.7 Placing a call on hold (hold)

- **Exclusive hold:**

During a conversation, you wish to place the call on hold and recover it later, on the same telephone.



during a conversation

- **Recover the call on hold:**



key for the line whose
light is flashing

2.8 Placing an outside call on hold (parking)

You can place an outside call on hold and recover the call on another telephone:



during a conversation

- **To recover the parked call:**



number of telephone
from which call was
parked



If the parked call is not recovered within a preset time (default value 1 min 30), it is transferred to the operator.

2.9 Intrusion into an internal conversation

Your correspondent's line is busy. If the number is not "protected" and if authorised, you can intrude into the call:



'Intrude on a call'
programmed key

- **Protection against intrusion:**



**'communication
protection'** programmed
key

enter the number



Protection is cancelled when you hang up.

2.10 Store a number

During a call, to save the number onto a call key:



during a conversation

select the key to programme (0 to 9)

 


enter the name of your correspondent*

apply

apply

* enter the name of your correspondent :



Position the cursor in the entry field.



Erase last character entered.



Enter a digit (keys 0 to 9).

2.11 Adjust audio volume

During a call, to adjust the volume level of the loudspeaker or receiver:



during a conversation

adjust audio volume

The 'Meet me' function is used to set up a conference with a maximum of 6 persons: the 'master' of the conference (who has the rights for initiating the conference) and the participants (maximum of 5) who meet for the conference.

3.1 Initiate a 'Meet me' conference

In order for the participants to join the conference, you must first decide on a meeting time for the conference and send them the access code.



When the system prompts you to enter a code or password, you are allowed 3 attempts before the system rejects your request.



lift the receiver
(see Making a call)



enter the 'Meet me'
conference activation
code



from the outside, dial the
'Meet me' conference
activation call number



enter your telephone
number (internal)



enter your
personal
password



enter the conference
access code



the conference is set-up

- This code is defined by the administrator during system configuration.
- Call number for activating the 'Meet me' conference: this call number is used by the conference master when he wishes to initiate a conference from an external set. This number must have been defined previously by the system administrator.
- Password: the default password cannot be used. If necessary, refer to chapter 'Modifying your personal code'.



When the conference master on-hooks, all the communications will be cut-off.

3.2 Join a 'Meet me' conference

Once set-up by the conference master, the participants can join the 'Meet me' conference (5 participants maximum).



lift the receiver
(see Making a call)



enter the joining code for
the 'Meet me'
conference



from the outside, dial the
'Meet me' conference
joining call number



You are in conference mode

enter the conference
access code

- Joining code: this code is defined by the administrator during system configuration.
- call number for joining the 'Meet me' conference: this call number allows the participants to join a conference from an external set. This number must have been defined previously by the system administrator



An audible beep sounds when a participant joins the conference. 2 audible beeps sound when a participant leaves the conference.



You cannot join a conference if the maximum allowed number of participants is already reached.



 
If the conference has not yet been set up by the conference master you are put on hold until the conference is initiated (5 minutes maximum).



If you cannot directly reach the conference, you have to call first an internal user or an automatic operator. This one dials the call number for joining the 'Meet-me' conference and then transfers your call (10 seconds).

4.1 Receiving supervised call ringing


To receive the special ringing for calls to another number:



4.2 Manager/secretary filtering

System configuration allows "manager/secretary" groups to be formed, so that the manager's calls can be directed to one or more secretaries.

 • From the manager's or secretary's telephone:



same key to cancel

Filtering is indicated on the manager's telephone by the icon corresponding to the "filtering" programmed key.

 
4.3 Call pick-up

You hear a telephone ringing in an office where no-one can answer. If authorised, you can answer the call on your own telephone.

• If the telephone ringing is in your own pick-up group:




• If the telephone ringing is not in your pick-up group:

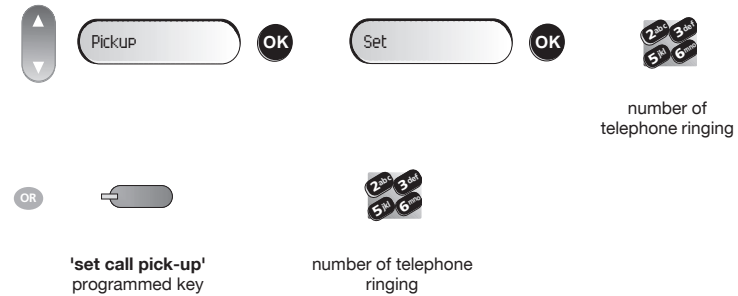

The system can be configured to prevent call pick-up on certain telephones.

4.4 Answering briefly in place of the operator

 Outside calls to the operator will ring on your telephone and you can answer the call:

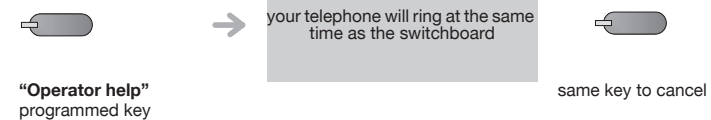

"Operator help" programmed key

• Calls to the switchboard:



 
4.5 Hunting groups

• Hunting group call:

Certain numbers can form a hunting group and can be called by dialling the group number.




• Temporary exit from your hunting group:/Return into your group:

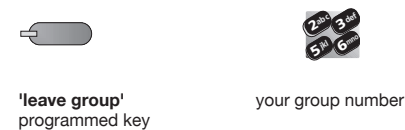

Belonging to a group does not affect the management of direct calls. A specific telephone within a group can always be called by using its own number.

4.6 Calling an internal correspondent on his/her pager

 
The number called does not answer and you know that the person called has a pager:

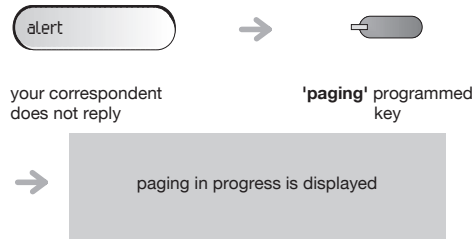

Your correspondent can answer from any telephone in the system.


4.7 Answering a call on your pager

 A call on your pager can be answered from any telephone within the system.

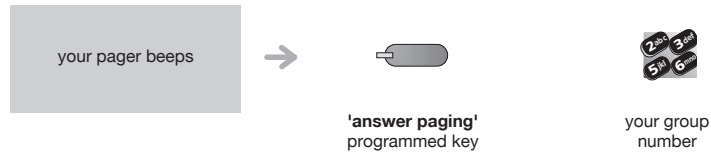

4.8 Calling a correspondent on his/her loudspeaker

 
Your internal correspondent does not answer. If authorised, you can remotely activate your correspondent's phone:

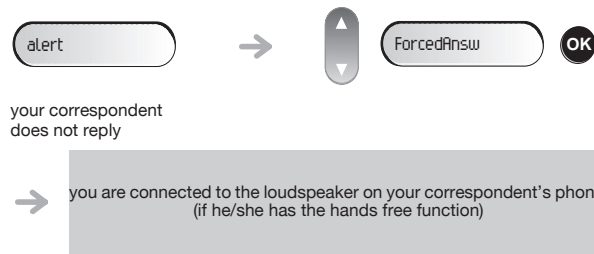


4.9 Sending a written message to an internal correspondent



 
• Predefined message:

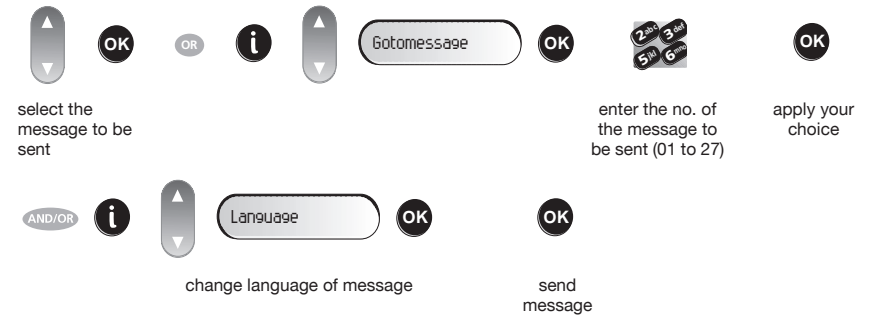

• Personal message:

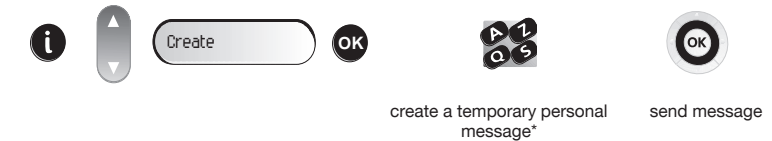 


* create a temporary personal message :

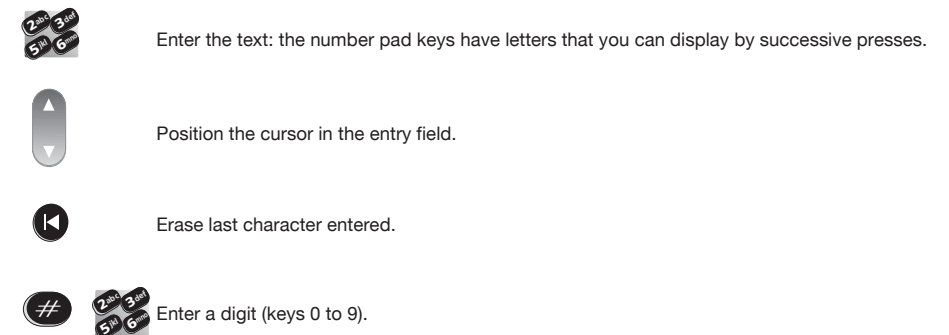 


• The 27 standard messages are shown below:

1	Call me back	15	Meeting on ____ (*)
2	Call me back tomorrow	16	Meeting on ____ at ____ (*)
3	Call me back at ____ (*)	17	Out for a while
4	Call back ____ (*)	18	Absent for the rest of the day
5	Call the attendant	19	Absent, back at ____ (*)
6	Call the secretary	20	Absent, back on ____ at ____ (*)
7	I will call back at ____ (*)	21	On vacation, back on ____ (*)
8	Use paging	22	External meeting
9	Please fetch your fax	23	External meeting, back on ____ (*)
10	Please fetch your mail	24	I am in room nr ____ (*)
11	Please cancel your forwarding	25	In a meeting - do not disturb
12	Visitors are waiting	26	At lunch
13	You are expected at reception	27	Indisposed
14	Meeting at ____ (*)	(*)	Messages to be completed using numeric keypad

 
4.10 Send a voice message copy

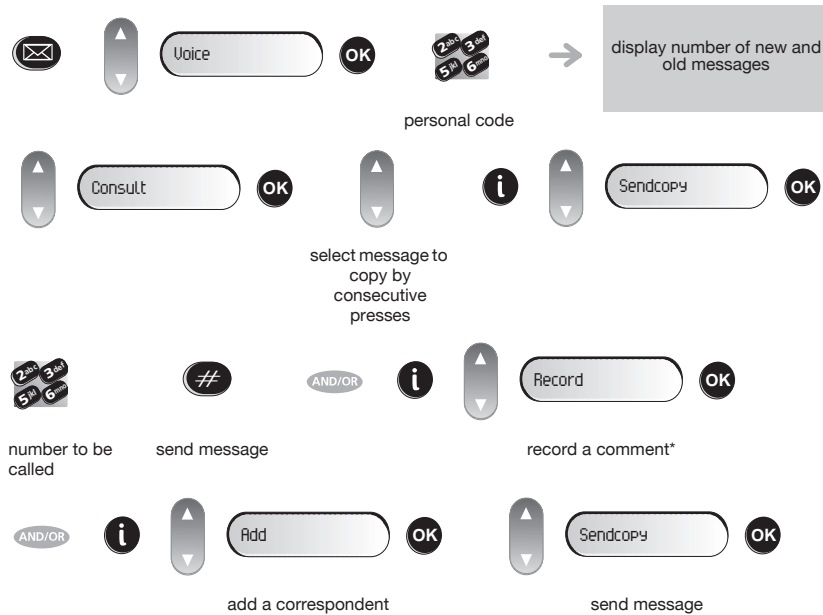

* To record a comment:

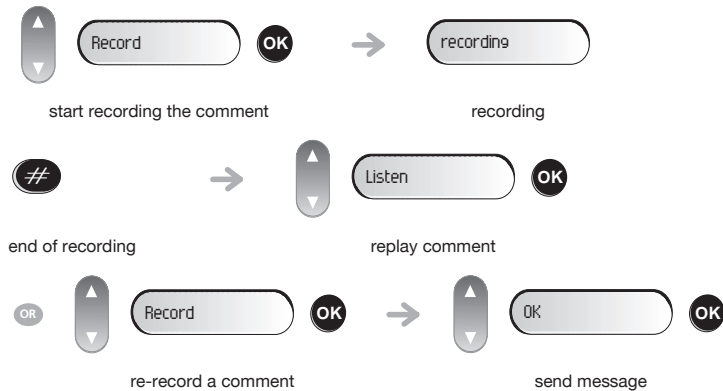 


 4.11 Sending a recorded message to a number / a distribution list

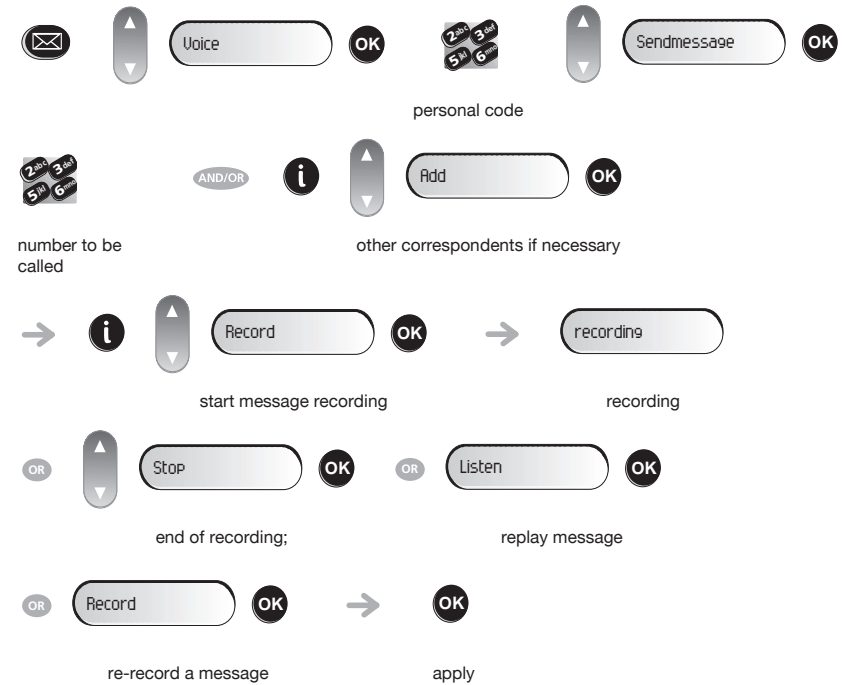

4.12 Broadcasting a message on the loudspeakers of a station group

 A message not requiring an answer can be broadcast on the loudspeakers within your broadcast group:

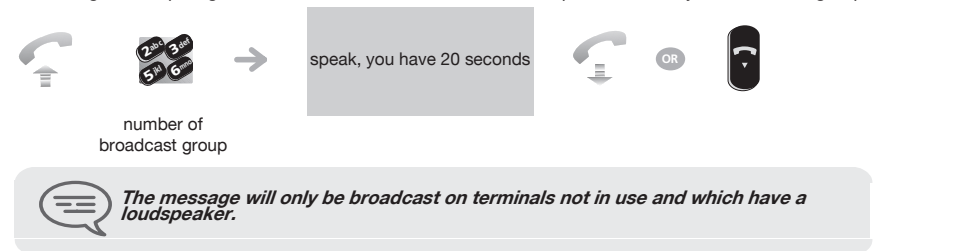

4.13 Modify the automated attendant welcome message remotely

This feature enables a user with the appropriate rights to modify the automated attendant night or day-time message.



voice mail call number



number of your voice mailbox



personal code



access the
'personal
options' menu



 
access the 'welcome
messages
customisation' menu



follow the instructions of the
voice guide


5.1 Selecting calls to be diverted

When a diversion is applied, you can select the types of call to be diverted: outside, internal, all.

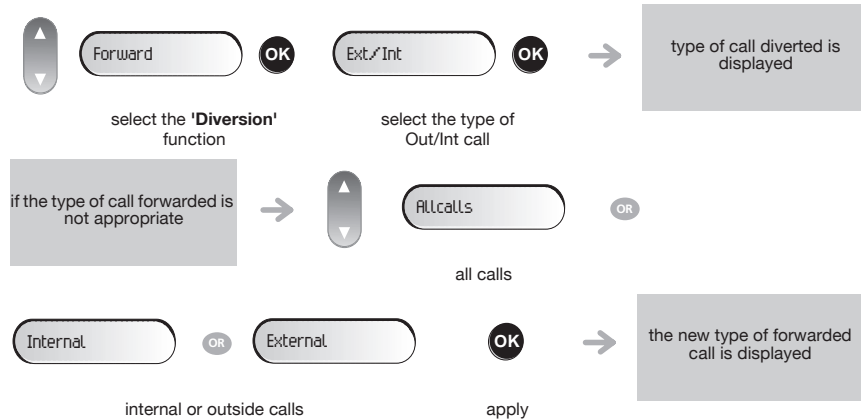


5.2 Diverting calls to another number (immediate diversion)

 The number can be your home, portable or car phone, voice message or an internal extension (operator, etc.).

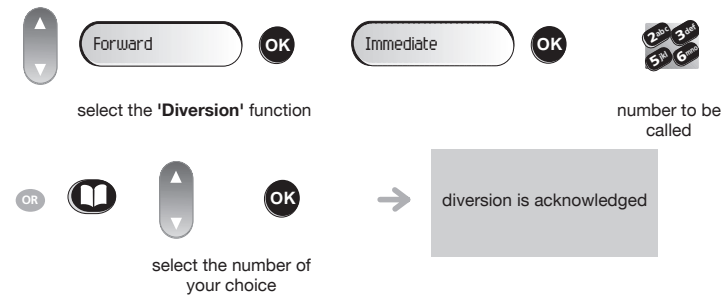


 5.3 Diverting your calls to your voice message service

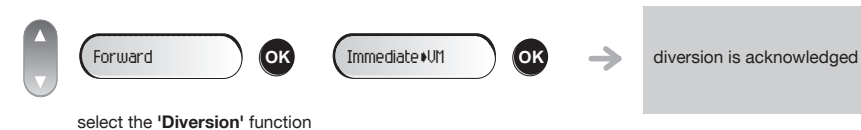


5.4 When you return, consult recorded messages

 
The light indicates that messages have been received.

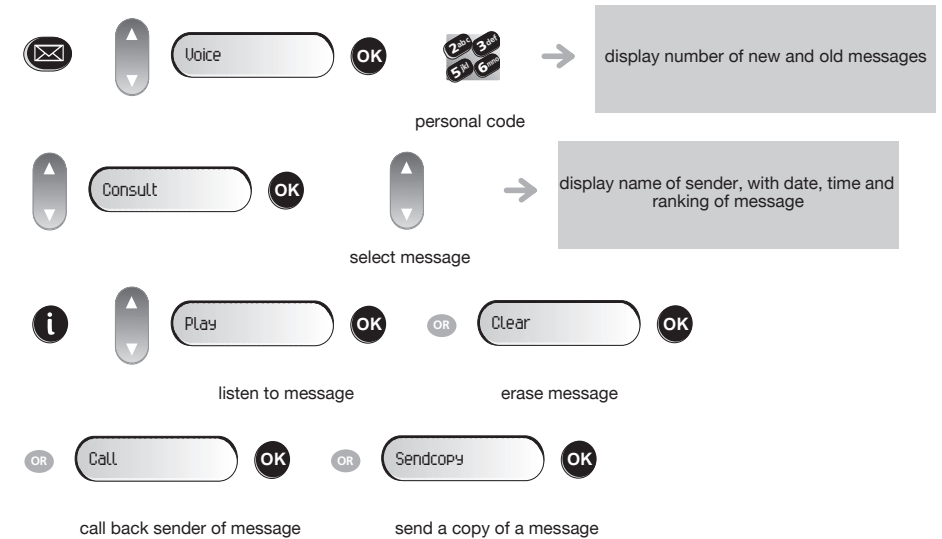

 5.5 Activate/disable the personal assistant

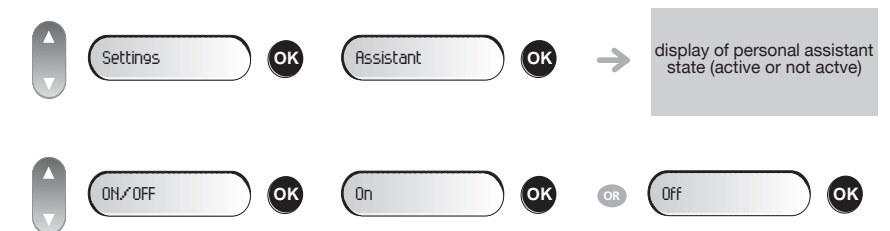


 5.6 Personal assistant: reaching you with one number only

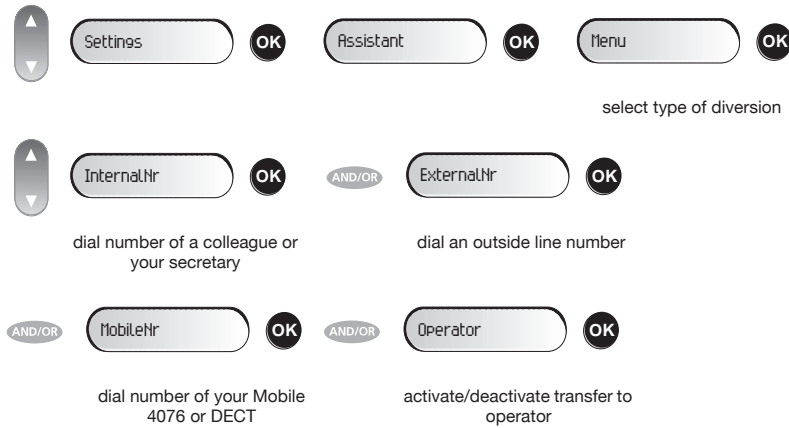

5.7 Diverting calls to your pager

 
Callers will thus be able to contact you while you are moving around the company:

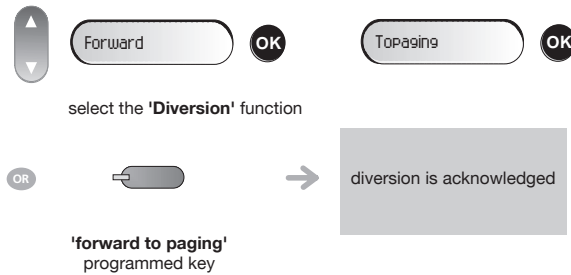

5.8 Forwarding your calls from the receiving terminal ("Follow me")

You wish to receive your calls in your present location:

 Use the "Follow me" function.

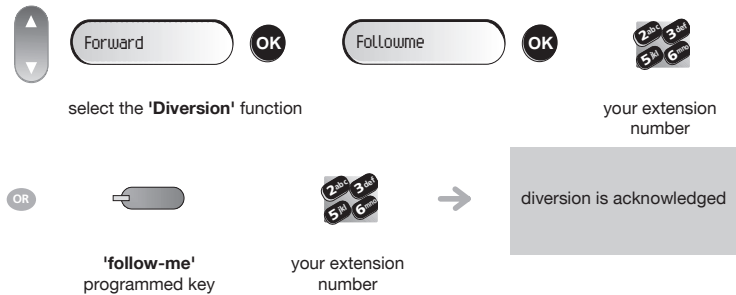


5.9 Applying a selective diversion

You can selectively divert calls, according to the caller's identity:




5.10 Diverting all group calls

 You can divert all your group calls to another internal number:

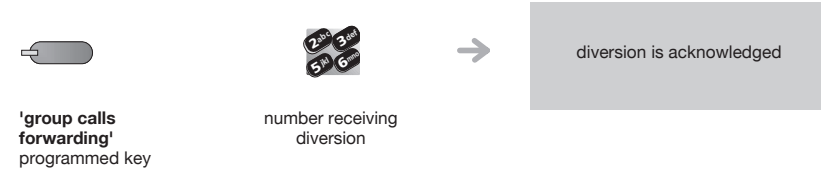


 5.11 Cancelling all diversions

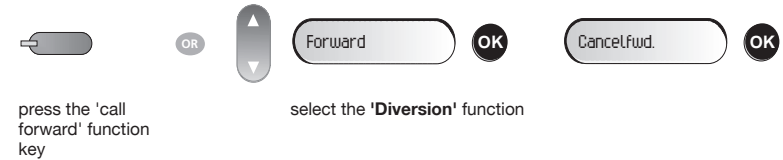

5.12 Diverting calls when your line is busy (divert if busy)

 Callers can be diverted to another telephone if you are already on the line.

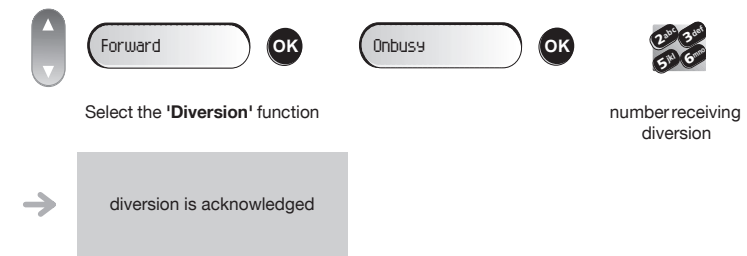

5.13 Do not disturb

You can make your terminal temporarily unavailable for all calls.



Select the 'Diversion' function

Callers wishing to contact you will see the 'Do Not Disturb' message displayed on their sets when they try to call.

 
5.14 Leaving a recorded message for internal callers

You can leave a message on your terminal which will be displayed on the screen of the terminal calling you.




select the 'Diversion' function

• Predefined message:

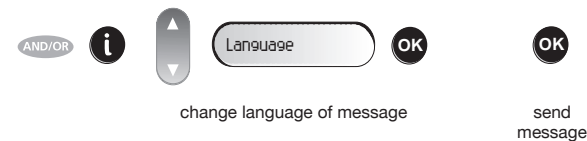

• Personal message:

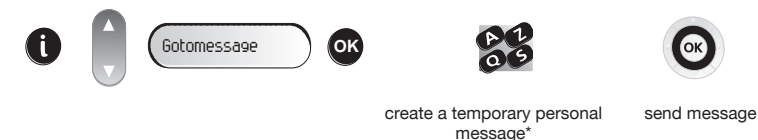 

* create a temporary personal message :



Enter the text: the number pad keys have letters that you can display by successive presses.



Position the cursor in the entry field.



Erase last character entered.




Enter a digit (keys 0 to 9).

• The 27 standard messages are shown below:


1	Call me back	15	Meeting on __ (*)
2	Call me back tomorrow	16	Meeting on __ at __: __ (*)
3	Call me back at __: __ (*)	17	Out for a while
4	Call back ____ (*)	18	Absent for the rest of the day
5	Call the attendant	19	Absent, back at __: __ (*)
6	Call the secretary	20	Absent, back on __ at __: __ (*)
7	I will call back at __: __ (*)	21	On vacation, back on __ (*)
8	Use paging	22	External meeting
9	Please fetch your fax	23	External meeting, back on __ (*)
10	Please fetch your mail	24	I am in room nr __ (*)
11	Please cancel your forwarding	25	In a meeting - do not disturb
12	Visitors are waiting	26	At lunch
13	You are expected at reception	27	Indisposed
14	Meeting at __: __ (*)	(*)	Messages to be completed using numeric keypad

5.15 Consulting written messages

 The light indicates that messages have been received.

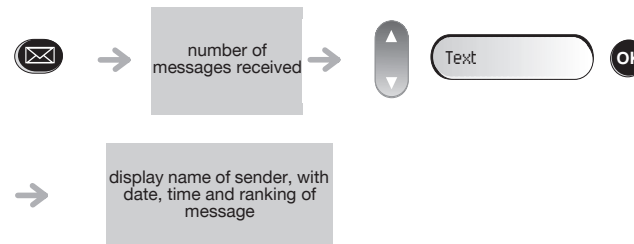


During the display of the information:


 Call back the message sender (the message is erased automatically after the call).


 Next message.


 Previous message.


During consultation of a message, pressing the 'i' key provides access to the following functions: ()

 Erase message.

 Call back sender of message.

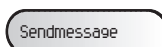 Sending a written message to an internal correspondent.

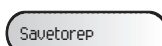 Save the sender's number in your directory.

 Terminate consultation.

5.16 Message notification

A message is left in your mailbox but you are not at your desk. You can configure your telephone so that you receive notification of the message on another telephone.

• Activate/deactivate message notification:

• Enter the number of the set where the notification is to be received:

 
    
enter the number apply

• Change the time slot:

The time slot during which notification is activated can be changed.

    
change times apply

7.1 Initializing your voice mailbox



Your personal code is used to access your voice mailbox and to lock your telephone.

 
7.2 Customising your voice greeting

You can replace the greeting message by a personal message





recording

During consultation of a message, pressing the 'i' key provides access to the following functions: (i)




7.3 Modifying your personal code

  Your personal code is used to access your voice mailbox and to lock your telephone.

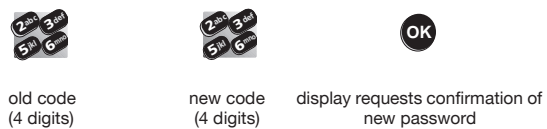


As long as your voice mailbox has not been initialized, personal code is 1515.

 
7.4 Configuring the telephone ringer




▼ Choose the tune:

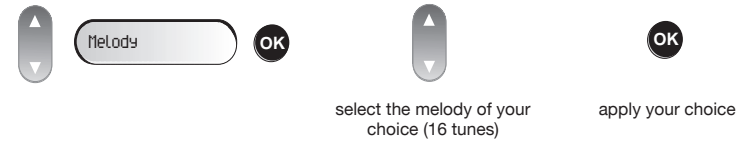 

▼ Adjusting the ringer volume:

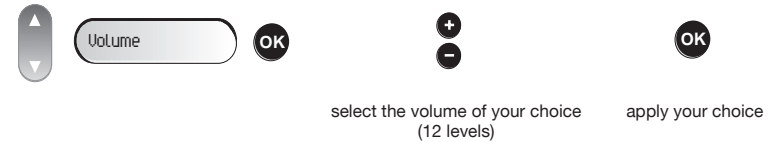 

 ▼ Activate/disable meeting mode (progressive ringing):

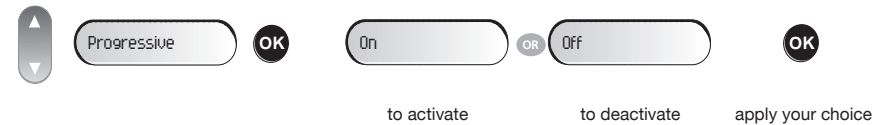


▼ Activate/deactivate discreet ring mode:




▼ Adjust ringer volume while a call arrives:



 
7.5 Adjusting screen brightness

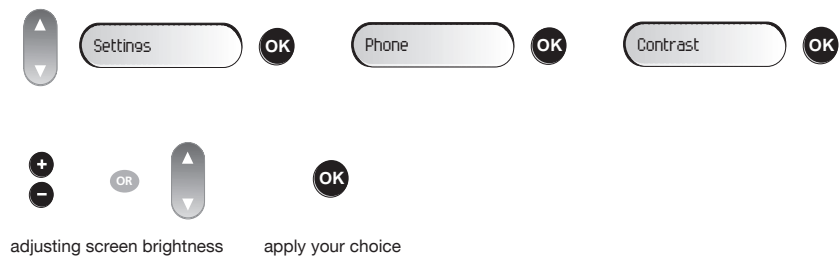

 
7.6 Selecting language

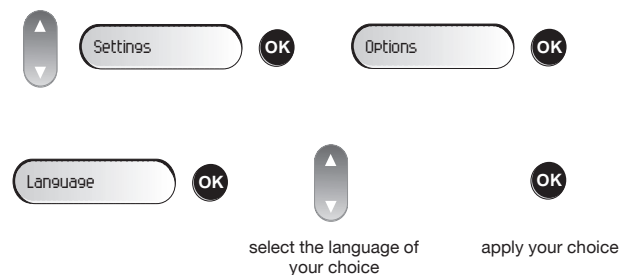

 7.7 Make a call using the personal phone book

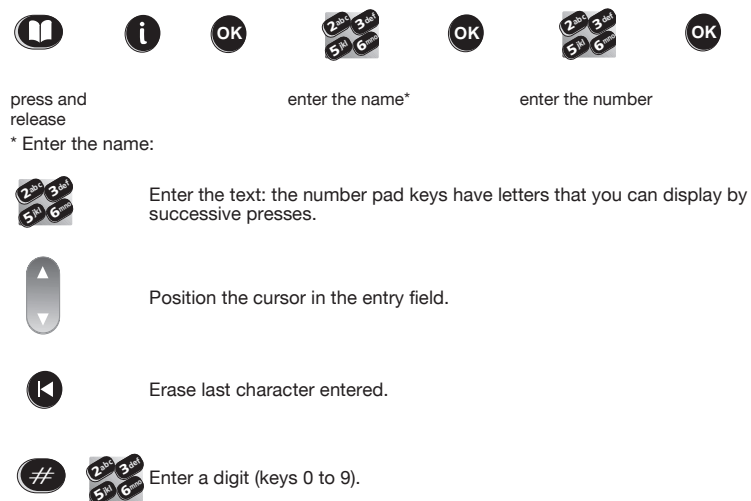

 
7.8 Programming direct call keys

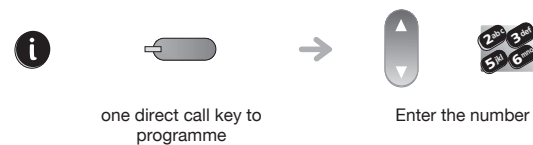

7.9 Programming an appointment reminder

You can define the time of a temporary reminder (one in 24 hours) or a permanent reminder (every day at the same time).

 Program a temporary reminder call:

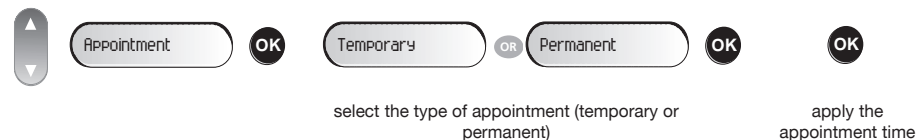


At the programmed time, your telephone rings:



If you are in conversation, the display flashes and an audio tone is generated. After three calls without reply, a temporary request is cancelled but a permanent request remains in memory.

If your calls are diverted to another terminal, the diversion is not applied to the reminder call.

 To cancel your appointment call-back request:

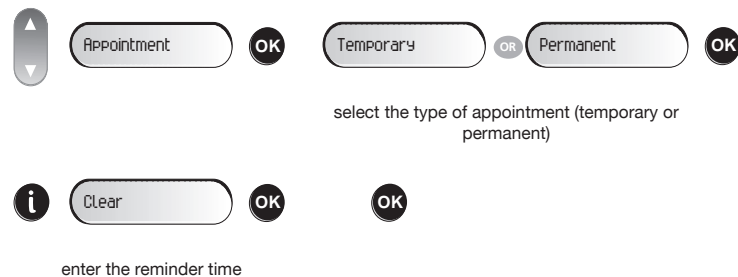

7.10 Identify the terminal you are on

 


7.11 Broadcasting background music on your loudspeaker

You can broadcast background music on the loudspeaker of your telephone (depending on configuration):



when telephone is not in use,
background music is played



For the 4019, a short press on the loudspeaker key enables you to play background music.

The music stops when a call is made or received and starts again when you hang up.

7.12 Lock / unlock your telephone

 


your telephone is
locked/unlocked

enter your personal password

7.13 Activating/deactivating 'forced headset' mode

'Forced headset' mode must be activated as soon as a headset is installed instead of the receiver;.



activating/deactivating '**forced headset**' mode

8.1 Agent set

A call centre solution allows optimum distribution of calls to agents according to their availability and skills.

8.2 Open an agent session (login)



enter the code for the 'Login' function



select the agent and validate



depending the displayed informations, enter your password or confirm



DCC application welcome screen display

• DCC application welcome screen

name of the agent set

[A2]

[01]

status of the queues

8.3 The four operating statuses of the agent set

An agent's availability is determined by the operating status (of which there are 4), that the agent can change at any time. These statuses are:

- In service, the agent is ready to receive calls.
- Withdrawn, the agent has withdrawn from the DCC application.
- Additional task, the agent is performing a task concerning a call and is not taking other calls.
- Temporarily absent, the agent has taken a break and is not taking calls.

8.4 Changing the operating status of the set

The operating status change codes are defined when the system is configured. Contact the system administrator to obtain these codes.



enter the feature code to activate

Statuses	Codes
in service	
withdrawn	
additional task	
temporarily absent	



A melody is played: activation accepted, the change of status has been carried out



A 'buzzer' type alarm sounds: activation refused, the set is probably not taken into account by the call centre; you should contact your administrator

Independently of the legal warranty that covers this appliance, it is guaranteed for 1 year, parts and labour, counting from the date indicated on your invoice. The invoice will be demanded if making a claim under the warranty. The warranty does not however apply in the following cases: in the event of use that does not comply with the instructions given in this user's manual, faults or damage caused by natural wear, damage resulting from a cause external to the appliance (e.g. impact, fall, exposure to dampness, etc.), noncompliant installation or modifications or repairs carried out by people who are not approved by the manufacturer or retailer.

Warning: never place your telephone in contact with water. To clean your telephone, you may however use a damp soft cloth. Never use solvents (trichlorethylene, acetone, etc.) which may damage the plastic parts of your telephone. Never spray it with cleaning products. The ear piece and microphone area of the handset may attract metallic objects that may be dangerous for the ear.

The wording is not contractual and may be subject to change. Some functions of your telephone are controlled by a software key and the configuration of the unit.

"EC" declaration of compliance

We, FRANCE TELECOM

Fonction Groupe Achats et Amélioration de la Performance

42 av de la Marne

92120 Montrouge

declare that the product mentioned in this note, conform to the following European Directives and European Standards:

Radio and Telecommunication Terminal Equipment Directive 99/5/EEC.



1999/5/CE (R&TTE)

Standby power consumption = 3,5 W.



Information relative to the environment

This symbol indicates that at the end of its life, this product should be subject to special collection and disposal in member countries of the European Union, as well as in Norway and Switzerland. By ensuring this product is disposed of correctly, you will help to conserve natural resources and help prevent potential negative consequences to the environment and human health which could otherwise be caused by inappropriate disposal of this product. For further details about recycling this product, please contact the supplier who sold you the product.

Operating conditions

Operating temperature range: -5°C /45°C .

Acoustic shock protection

The acoustic level of the signal generated by the handset earpiece is less than 130 dBspl for a transient signal (123 dBspl for Australia) and less than 118 dBspl (rms) for a continuous signal (120 dBA for Australia) .

Directive 2003/10/EC specifying the risks inherent in noise at work

The ring contributes towards overall daily noise; at its maximum setting, the level is 105 dBA at 60 cm from terminal. To reduce the level, the following is recommended:

- reduce the setting (9 levels of 5 dB)
- program a progressive ring

Any unauthorised modification to the products shall render this declaration of compliance null and void. All rights reserved.

To contact your after sales department, please dial

N° Indigo 0 825 817 807

0,15 € TTC/MN
monday to saturday from 8 a.m to 8 p.m
(except bank holidays)

France Télécom

6, place d'Alleray - 75505 Paris Cedex 15

S.A. au capital de 10 594 839 096 € - 380 129 866 - RCS Paris

Notre site internet : <http://www.orange-business.com>

MU19008ZUAE-O711ed02-1027