




HALE

UMC32

DIY 32 channel USB-MIDI controller

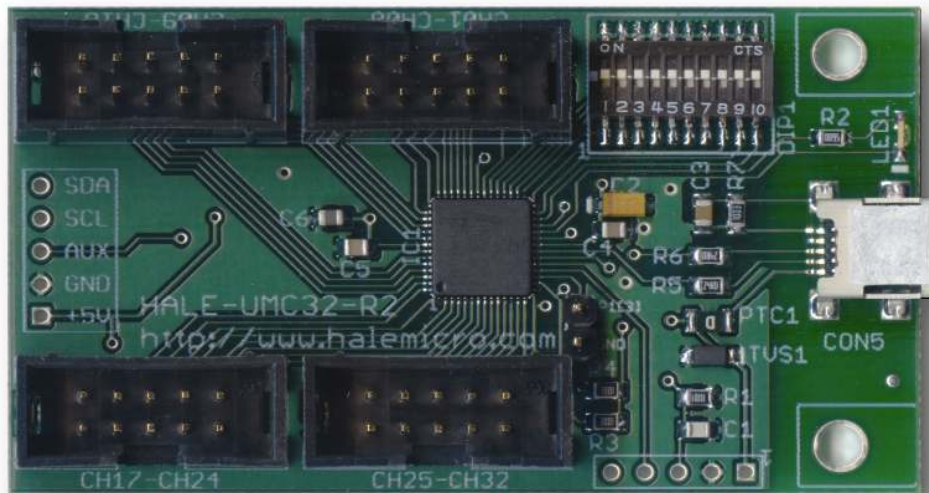

USER MANUAL 1.41

Table of Contents

Product Description	3
Hardware Setup.....	4
Standard Mode (DIP Switch #10 = Off)	5
Extended mode (DIP Switch #10 = ON)	6
MIDI Channel / Device Driver Identification	7
Indicator LED	7
Shift Pin / Firmware Update.....	7
Precautions	8
Example Connections.....	9
Pin Diagram	10
Mechanical Specifications	10
Electrical Specifications.....	11
Troubleshooting	11
Limited Warranty.....	12
Disclaimer.....	12

Product Description

The UMC32 is an OEM/DIY product that allows Electronic Musicians, Multimedia Artists and Experimenters the ability to create custom user interfaces to control any software application that supports the MIDI protocol. The UMC32 provides the essential core (microcontroller, power supply, USB functionality) to allow the user to easily implement their choice of control elements (example: switches, pots and or faders). In short, the UMC32 will allow you to build your own USB-MIDI controller.

Features

- Easy to implement with minimal effort and little or no electronics experience.
- 32 analog and/or digital inputs provide MIDI note or continuous controller data to your host application.
- Small printed circuit board (1.6" x 2.7") allows creating portable end devices
- No programming is necessary. Onboard DIP switches allow simple configuration of MIDI note or controller data.
- USB bus powered. A single USB cable handles power and data.
- Upgradeable firmware via Windows XP / Vista bootloader utility.
- True plug-and-play (USB-MIDI class compliant drivers are provided by the operating system)
- Compatible with Mac OS X 10.5.x(Leopard), Mac OS X 10.4.x(Tiger), Windows **Vista** / XP / 2000.
- 90 day limited warranty, 30 day money back guarantee (USA Only).

Hardware Setup

Before proceeding it is **strongly** recommended that you read and understand the precautions section of this manual. Failure to observe the recommendations may void your warranty. The UMC32 offers two operating modes, analog and digital. By setting the onboard DIP switch appropriately, various control layouts can be achieved. The UMC32 ships with the all DIP switches in the on position (all inputs digital). In order to change from the default setting, please remove the protective tape (if present). It is important to note that all unused channels be set to digital mode (factory default) in order to suppress spurious controller data be sent to your host application.

Analog Mode:

Channels that are configured as analog inputs are sampled and converted into MIDI continuous controller (CC#) messages and sent to your host application. Analog mode is usually the choice when connecting a potentiometer or fader. For the sake of simplicity, each input channel maps directly to its corresponding continuous controller (CC) number on MIDI channel 1. For example assume that input channel 1 on the UMC has a fader connected to it and is configured for analog input. When the fader is changed it will output controller messages on CC#01, MIDI channel 1.

Digital Mode:

Digital mode is usually selected to determine the state of a switch for triggering MIDI notes. Channels that are configured for digital mode will output MIDI note data on channel 1. For example when a button is pressed then a note on message will be sent, when the button is released a note off message will be sent.

MIDI Output Mapping

Input Channel	Digital Input Configuration							Analog Input Config				
	Shift pin=off			Shift pin=on			Note value Off On	Shift off		Shift on		
	Key	Oct	#	Key	Oct	#		CC #	CC #	Min	Max	
01	C	2	36	G#	4	67	0	127	01	33	0	127
02	C#	2	37	A	4	68	0	127	02	34	0	127
03	D	2	38	A#	4	69	0	127	03	35	0	127
04	D#	2	39	B	4	70	0	127	04	36	0	127
05	E	2	40	C	5	71	0	127	05	37	0	127
06	F	2	41	C#	5	72	0	127	06	38	0	127
07	F#	2	42	D	5	73	0	127	07	39	0	127
08	G	2	43	D#	5	74	0	127	08	40	0	127
09	G#	2	44	E	5	75	0	127	09	41	0	127
10	A	2	45	F	5	76	0	127	10	42	0	127
11	A#	2	46	F#	5	77	0	127	11	43	0	127
12	B	2	47	G	5	78	0	127	12	44	0	127
13	C	3	48	G#	5	79	0	127	13	45	0	127
14	C#	3	49	A	5	80	0	127	14	46	0	127
15	D	3	50	A#	5	81	0	127	15	47	0	127
16	D#	3	51	B	5	82	0	127	16	48	0	127
17	E	3	52	C	6	83	0	127	17	49	0	127
18	F	3	53	C#	6	84	0	127	18	50	0	127
19	F#	3	54	D	6	85	0	127	19	51	0	127
20	G	3	55	D#	6	86	0	127	20	52	0	127
21	G#	3	56	E	6	87	0	127	21	53	0	127
22	A	3	57	F	6	88	0	127	22	54	0	127
23	A#	3	58	F#	6	89	0	127	23	55	0	127
24	B	3	59	G	6	90	0	127	24	56	0	127
25	C	4	60	G#	6	91	0	127	25	57	0	127
26	C#	4	61	A	6	92	0	127	26	58	0	127
27	D	4	62	A#	6	93	0	127	27	59	0	127
28	D#	4	63	B	6	94	0	127	28	60	0	127
29	E	4	64	C	7	95	0	127	29	61	0	127
30	F	4	65	C#	7	96	0	127	30	62	0	127
31	F#	4	66	D	7	97	0	127	31	63	0	127
32	G	4	67	D#	7	98	0	127	32	64	0	127

Standard Mode (DIP Switch #10 = Off)

DIP Switch #			Input Channel							
1	2	3	1	2	3	4	5	6	7	8
OFF	OFF	OFF	Analog	Analog	Analog	Analog	Analog	Analog	Analog	Analog
ON	OFF	OFF	Analog	Analog	Analog	Analog	Analog	Analog	Digital	Digital
OFF	ON	OFF	Analog	Analog	Analog	Analog	Analog	Digital	Digital	Digital
ON	ON	OFF	Analog	Analog	Analog	Analog	Digital	Digital	Digital	Digital
OFF	OFF	ON	Analog	Analog	Analog	Digital	Digital	Digital	Digital	Digital
ON	OFF	ON	Analog	Analog	Digital	Digital	Digital	Digital	Digital	Digital
OFF	ON	ON	Analog	Digital	Digital	Digital	Digital	Digital	Digital	Digital
ON	ON	ON	Digital	Digital	Digital	Digital	Digital	Digital	Digital	Digital

DIP Switch #		Input Channel								
4	5	9	10	11	12	13	14	15	16	
OFF	OFF	Analog	Analog	Analog	Analog	Analog	Analog	Analog	Analog	
ON	OFF	Analog	Analog	Analog	Analog	Digital	Digital	Digital	Digital	
OFF	ON	Analog	Analog	Digital	Digital	Digital	Digital	Digital	Digital	
ON	ON	Digital	Digital	Digital	Digital	Digital	Digital	Digital	Digital	

DIP Switch #		Input Channel								
6	7	17	18	19	20	21	22	23	24	
OFF	OFF	Analog	Analog	Analog	Analog	Analog	Analog	Analog	Analog	
ON	OFF	Analog	Analog	Analog	Analog	Digital	Digital	Digital	Digital	
OFF	ON	Analog	Analog	Digital	Digital	Digital	Digital	Digital	Digital	
ON	ON	Digital	Digital	Digital	Digital	Digital	Digital	Digital	Digital	

DIP Switch #		Input Channel								
8	9	25	26	27	28	29	30	31	32	
OFF	OFF	Analog	Analog	Analog	Analog	Analog	Analog	Analog	Analog	
ON	OFF	Analog	Analog	Analog	Analog	Digital	Digital	Digital	Digital	
OFF	ON	Analog	Analog	Digital	Digital	Digital	Digital	Digital	Digital	
ON	ON	Digital	Digital	Digital	Digital	Digital	Digital	Digital	Digital	

Extended mode (DIP Switch #10 = ON)

Past UMC users should take note that the previous UMC32 datasheet did not specify the state at which DIP 10 should be set. For users who are updating an existing device please ensure that DIP10 is in the **OFF** position prior to installing the 1.41 firmware. This will guarantee continued operation of the new firmware with your existing setup. For new projects DIP 10 offers a pathway to new features in the device, to access these features simply place the DIP in the ON position. Setting the DIP switched to combinations not listed below will cause the device to simply blink on and off.

	DIP Switch									
	1	2	3	4	5	6	7	8	9	10
Diagnostic Mode	ON	ON	ON	ON	ON	ON	ON	ON	ON	ON
32 Channel Output Only Mode	OFF	ON	OFF	ON	OFF	ON	OFF	ON	OFF	ON
Even ch Digital w/ Odd ch LEDs	OFF	ON	OFF	ON	ON	ON	ON	ON	ON	ON

Diagnostic Mode:

This is the test we use at the factory to make sure that the UMC's hardware is to specification. To run this test you'll need to devise a way to connect channels 01-08 together, 09-16 together, 17-24 together, and 25-32 together. DO NOT connect anything to the +5V or Ground lines as they are not used here. Now plug in the USB cable to the UMC to provide power. The firmware will cycle thru and check each line to make sure that there isn't a defect with the PCB. If there is a problem with your hardware the LED will flash on and off at fast. If the test was OK, it will flash slower at around 1/2 second.

32 Channel Output Only Mode:

In this mode all MIDI Note On/Off data that is received by the UMC32 is converted into logic level signal on the UMC's outputs. This is useful for connecting LED's, transistors and relays. For normal/safe operation it is recommended that the per channel load current (sourcing or sinking) per be less than 10mA.

C2(Note #36) = UMC Channel 01

C#2(Note #37) = UMC Channel 02

Etc...

* Please note that in this mode the Shift Pin has no effect in this mode.

Even ch Digital w/ Odd ch LEDs:

In this mode all Odd UMC channels are configured as digital inputs, while all even UMC channels are configured as digital outputs. The even channels are for driving LED to help the user track the state of the corresponding digital input. For instance, press the switch that is connected to input 1, the note on message will be sent and the LED connected to channel 2 will turn on. Release the switch (to send the note off), the LED will remain on. Press the same switch again, note on sent, LED turns off. Release the switch, note off sent, LED stays off. The LED's will also update their on or off state according to the current shift mode. Thus making the tracking of 64 on/off states is possible. To connect an LED to a UMC channel that is configured as an output you MUST have a resistor in series with the LED and the channel output. It does not matter if the resistor is connected to the anode or cathode of the LED. To find the correct resistance use the online calculator provided by Linear Electronics at <http://led.linear1.org/1led.wiz>. The source voltage parameter will be +5V (the UMC's working voltage), the diode forward current should be 8mA, the diode forward voltage will depend on your LED. Most red LED's are 1.8 - 2.2 volts. See the datasheet of your LED to obtain forward voltage parameters.

MIDI Channel / Device Driver Identification


All UMC32's ship with a default of MIDI channel 1. Changing the MIDI channel is possible by running the firmware update utility and selecting the appropriate firmware. For example you purchased 2 UMCs and want to connect them to the same PC/Mac. You decide that the first UMC is to be left at channel 1, while the second you want configured to output on channel 2. To do this, you would first download the latest firmware from the Hale website. The zip file will contain multiple firmware revisions with ".DLD" extensions. Next download and install the UMC32's firmware update utility, follow the directions provided by the utility and select the appropriate firmware. In this case you would select "umc32_v141_Dev02.dld", This is the correct file for Device 2 / Midi channel 02. Apart from changing the MIDI channel, the firmware also contains a unique USB Product ID (PID) as well as a unique Driver Name. As there are many implementations by host applications and operating system driver this is a full-proof way of uniquely identifying each UMC that is connected to your system.

Indicator LED

The indicator LED (LED1) can be found next to the USB connector. This LED provides information about the state of the UMC. When connected, your computer will recognize the UMC and load the class compliant USB-MIDI class device driver that is provided by your operating system. The LED will stay on until communication with your host application begins. At this point the LED will flicker when MIDI traffic between the host application and the UMC occurs.

Shift Pin / Firmware Update

When the Shift pin (P1[3] pictured below) is pulled to ground all MIDI note on/off messages will be transposed by 32 notes. Simply place a single pole single throw normally open (SPST/NO) switch between P1[3] and ground. The shift pin does not affect MIDI continuous controller (CC) data.

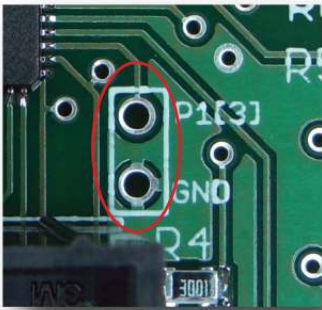

When the UMC is plugged into the USB port it first checks the state of the shift pin, if it is pulled low (your switch is being held) then the UMC will enter bootloader mode and prepare to accept a firmware update. Information regarding firmware updates will be made available on our website at <http://www.halemicro.com>


Precautions

The UMC is designed to protect against short circuits, over current conditions, transient voltages and electrostatic discharge. However, we ask that you observe some simple guidelines when working with the UMC. Failure to do so may cause damage to your equipment and/or void your product warranty.


- Do not solder any wires or attempt to make any modifications to the UMC directly.
- Do not connect the “+V” (+5 Volts DC) terminal to G (Ground). When this occurs, it is commonly referred to as a “short circuit”.
- Always unplug the USB cable from the device before modifying connections on the UMC.
- As with all electronic devices, observe proper ESD handling practices. Always handle the printed circuit board (PCB) by the edges, never touch the top or bottom.
- Never allow the UMC to touch a wet or conductive surface.
- Do not use any external voltage source to power devices that are connected to the UMC.
- You may use the +5V and Ground to power other devices such as LED’s however the maximum recommended load current per pin is 50mA.
- As an additional precaution, we **strongly** recommend using a powered USB hub when experimenting with the device. Once you have finalized your project, and are sure you do not have any short circuits then you may connect the UMC directly to your computer’s USB input. This is especially important when interfacing with a laptop, as damage to your laptop could be substantial.
- This product is offered to the end user in a non-enclosed OEM form, it is the responsibility of the end user of this product to ensure that they comply with local regulations pertaining to unintentional radio frequency emissions. In the United States, this pertains to FCC rules and regulations, Part 15, Section B.

Example Connections


Although there are a seemingly infinite number of types of control elements (potentiometers, switches etc.) that you can connect to the UMC, here are a few examples of how to connect the most common types.

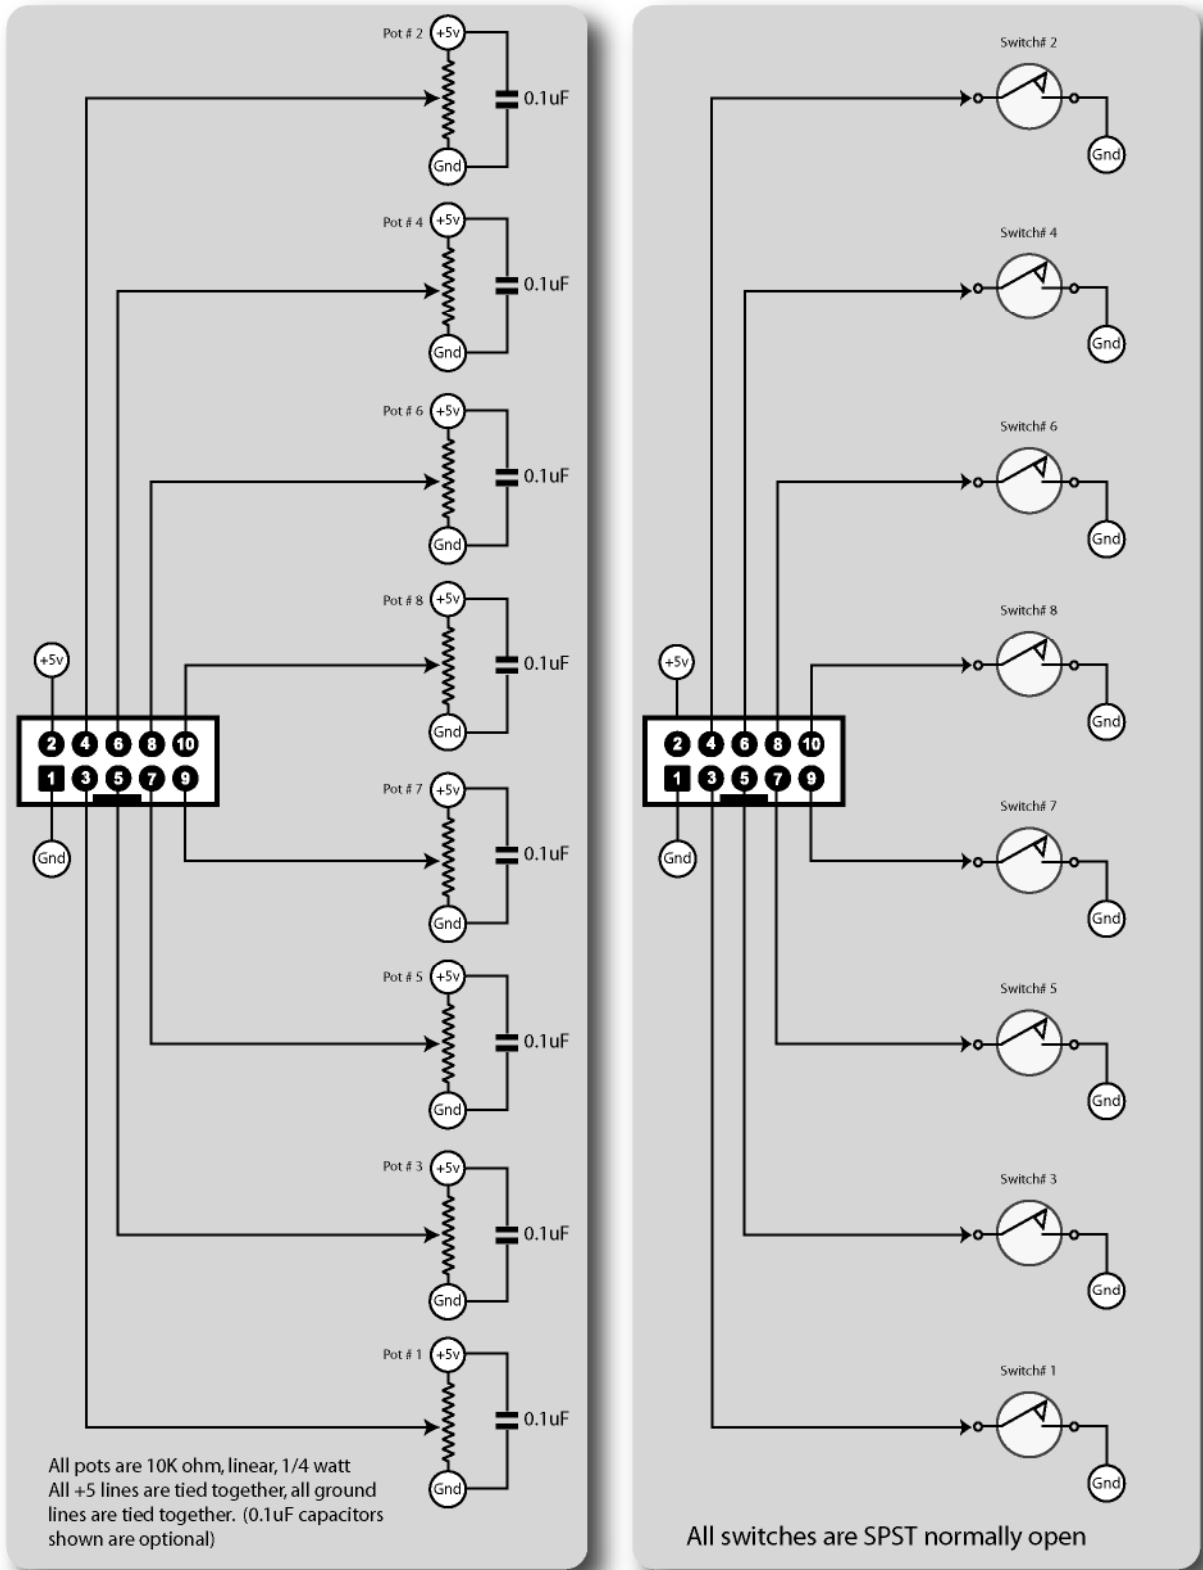

Pin Diagram

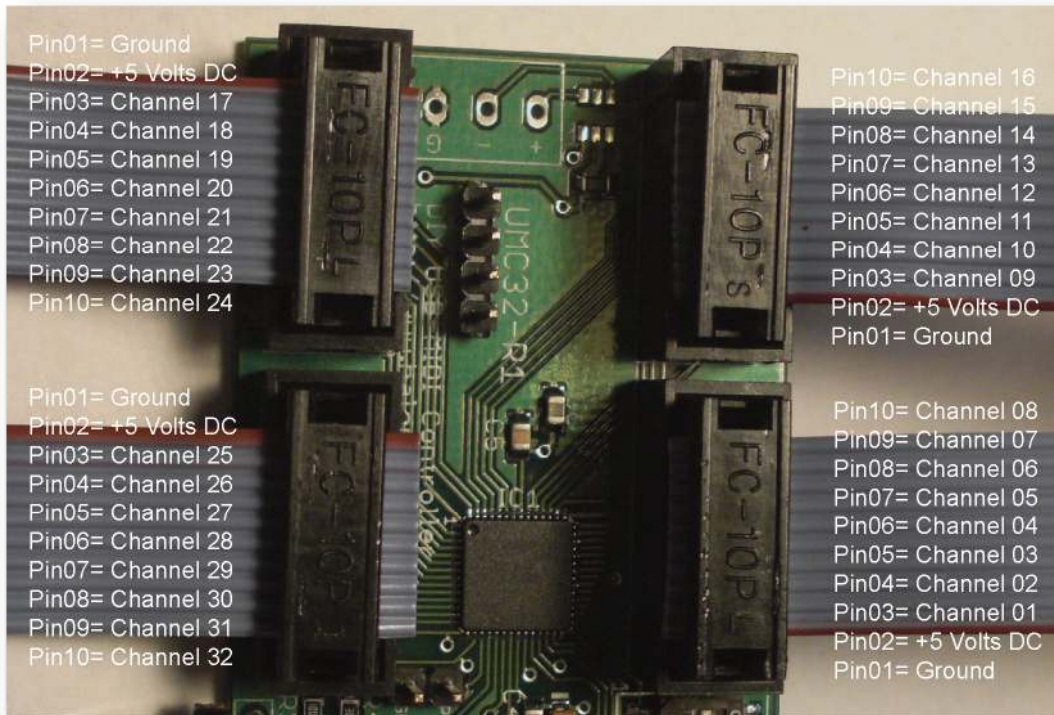

Mechanical Specifications

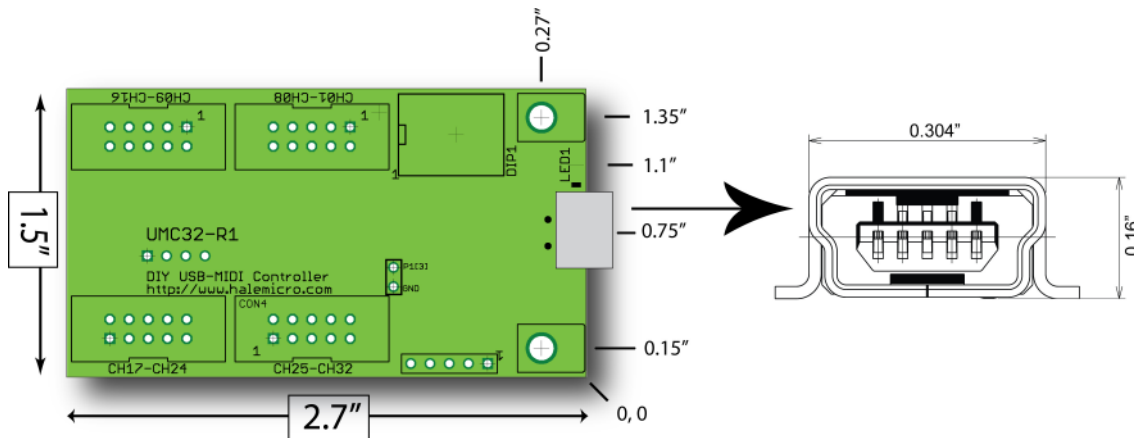

Recommended mounting screws 4-40. Optional right angle bracket to mount UMC to sidewall of your enclosure is Keystone # 621 (Digikey.com # 621K-ND)

Please note that an alternative method to mounting the UMC to your enclosure via screws and standoffs is to simply use double backed 3M VHB tape. Be sure that everything is working correctly before affixing to chassis as any attempt to remove UMC affixed via from the chassis will place stress on the circuit board. Regardless of the mounting method you choose, please take care that the exposed solder joints on the bottom of the UMC do not make contact with your enclosure.

Electrical Specifications

Exceeding the absolute maximum ratings below may cause permanent damage to the device.

- Storage temperature: -20°C to + 70°C
 - Operating temperature: 0°C to + 50°C
 - Operating voltage (power supplied via USB bus): 5.4 Volts DC max
 - Max recommended current per channel 8mA
 - Maximum device current: *200mA (R1 & R2 PCB's with a "C" PTC)
 - Maximum device current: *250mA (R1 & R2 PCB's with a "D" PTC)
 - Maximum device current: *500mA (R2 PCB's with a "F" marked PTC)
- *Check the component marking for PTC1

Troubleshooting

Here is a list of common questions we anticipate you may run into. We will periodically add to this as new questions arise.

- Q1: A few pots are generating data even though I'm not moving them.**
Verify that the pots are clean (CAIG Labs DeoxIT D5 works very well). If you have long wires consider making them shorter. Generally speaking you should try to keep wire lengths as short as possible. You might also try placing a 0.1uF capacitor across the power and ground inputs of your potentiometer or fader. (Example: Digikey.com # BC1084CT-ND).
- Q2: Adjacent channels appear to affect one another.**
Check the resistance with your multi-meter between the signal inputs of each channel. It should read at least 1 Mega ohm. Also verify that your DIP switch pack is set correctly. Channels with switches attached to them should be set for digital. Channels with fader or rotary potentiometers should be set for analog mode. All unconnected channels should be set for digital mode.
- Q3: My MIDI application is seeing a lot of spurious controller data from the UMC, I do not have any control elements connected to those channels.**
Each time the USB is plugged into the UMC, it checks the state of the DIP pack to set each channel to analog or digital mode. Channels that are left "floating" or in an undetermined state will generate noise unless that are pulled high or low with an external resistor. Any channel that is set for analog mode must be connected to a source (potentiometer) or it must be connected to a 10K resistor that is connected to ground or +5 volts. Double check the DIP switches to confirm that they are set correctly then restart the UMC.
- Q3: I plug the UMC into my USB port but it appears to be dead.**
Disconnect the UMC from the USB bus immediately and check for any short circuits. Reboot your computer and/or power cycle your USB hub. Make sure that the Shift pin (P1[3]) is not connected when connecting the USB cable as this will cause the unit to startup in the bootloader mode.
- Q4: What to do when you receive an OS error about a surge of a USB device.**
This generally happens when the user short circuits the +5V and power lines. See Q3 for remedy.
- Q5: When I turn a pot one way (clockwise), my application turns it another (counter clockwise).**
Swap the V+ and G lines on your potentiometer, or perform a controller invert in your host software.
- Q6: If I disconnect the UMC while my host application is running, then re-connect again the host does not see the UMC.**
In our testing, Mac OS X had no problems with this. Depending on the application under Windows XP you may need to re-launch your host application.
- Q7: How do I change the default MIDI output mapping ?**
Since the UMC will always be connected to a computer and since most modern MIDI host applications have a "Learn" function we felt that this option was unnecessary. If customer feedback on this issue is strong we can provide a firmware update and or a utility.

Limited Warranty

Hale Microsystems LLC warrants this product to be free of manufacturing defects for a period of 90 days (USA only). If you feel that there is a defect with your device, please email technical support with a detailed description of the problem: support@halemicro.com. In most cases we will issue a replacement. Please note that the unit must be shipped back in its original packaging and be in original saleable condition. We will not accept the return of any product that has been modified beyond factory condition.

Disclaimer

Neither the whole nor any part of the information contained herein or the product described in this datasheet may be adapted or reproduced in any material or electronic form without the prior written consent of the copyright holder. This product and its documentation are supplied on an as-is basis, and no warranty as to their suitability for any particular purpose is either made or implied. Hale Microsystems LLC will not accept any claim for damages whatsoever arising as a result of use or failure of this product. Your statutory rights are not affected. This product is not intended for use in any medical appliance, device or system in which the failure of the product might reasonable be expected to result in personal injury. This document provides preliminary information that may be subject to change without notice.