



# DVD Player MD 42072



## Instruction manual



MD 42072  
MSN 5001 4410



## Content

---

### Introduction

• Safety Precautions.....	2
• Important Safety Instructions .....	3
• Features.....	5
• Front Panel and Rear Panel Illustration .....	6
• Remote Control.....	7

### Connections

• Connecting to a TV set .....	8
• Connecting to an AV Receiver with 2 Channel Analog Audio Input .....	9
• Connecting to an AV Receiver with Digital Audio Input.....	10

### Basic Playback

• Basic Operation.....	11
------------------------	----

 
### Advanced Features

• Modes and Features Setup.....	12
• Remote Control Operation.....	17
• MP3 Playback.....	26
• KODAK Picture CD playback.....	27

### Others

• Troubleshooting .....	28
• Insert batteries .....	29
• Specifications.....	30

Please read this User Manual carefully to ensure proper use of this product and keep this manual for further reference.

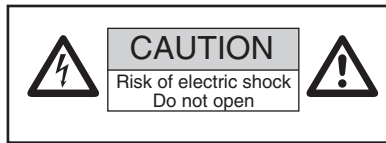

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE UNIT'S CABINET THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE MANUAL ACCOMPANYING THE UNIT.

### **WARNING:**

TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THE UNIT TO RAIN OR MOISTURE. NEVER ATTEMPT TO OPEN THE CABINET, DANGEROUS HIGH VOLTAGES ARE PRESENTED IN THE UNIT. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

### **CAUTION:**

TO PREVENT ELECTRIC SHOCK, MATCH WIDE- BLADE PLUG WITH WIDE SLOT AND FULLY INSERT. THE APPARATUS SHALL NOT BE EXPOSED TO WATER AND NO OBJECTS FILLED WITH LIQUID SUCH AS VASES SHALL BE PLACED ON THE APPARATUS.

### **CAUTION:**

THE UNIT EMPLOYS A LASER SYSTEM. TO ENSURE THE PROPER USE OF THE UNIT, READ THIS MANUAL CAREFULLY AND KEEP IT FOR FUTURE REFERENCE.

IF THE UNIT REQUIRES SERVICING, CONTACT THE SELLER OR SEE "TROUBLESHOOTING".

TO PREVENT DIRECT EXPOSURE TO THE LASER RADIATION, DO NOT OPEN THE CABINET. VISIBLE LASER MAY RADIATE WHEN THE CABINET IS OPENED OR THE INTERLOCKS ARE DEFEATED. DO NOT STARE INTO THE LASER BEAMS.

### **CAUTION:**

THE DVD VIDEO PLAYER IS A CLASS 1 LASER PRODUCT. USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

AS THE LASER BEAM USED IN THIS DVD VIDEO PLAYER IS HARMFUL TO THE EYES, DO NOT ATTEMPT TO DISASSEMBLE THE CABINET.

REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

### **WARNING:**

FCC REGULATIONS STATE THAT ANY CHANGE OR MODIFICATION TO THE EQUIPMENT, NOT EXPRESSLY APPROVED BY MAKER OR ITS AUTHORIZED PARTIES, COULD VOID USER'S AUTHORITY TO OPERATE THIS EQUIPMENT.

## **1. Read Instructions**

All the safety and operating instructions should be read before the product is operated.

## **2. Retain Instructions**

The safety and operating instructions should be retained for future reference.

## **3. Heed Warnings**

All warnings on the product and in the operating instructions should be adhered to.

## **4. Follow Instructions**

All operating instructions should be followed.

## **5. Cleaning**

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

## **6. Attachments**

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

## **7. Water and Moisture**

Do not use this product near water for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

## **8. Ventilation**

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

## **9. Power Sources**

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.

## **10. Power Cord Protection**

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

### **11. Object and Liquid Entry**

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

### **12. Servicing**

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

### **13. Damage Requiring Service**











Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A) If liquid has been spilled, or objects have fallen into the product,
- B) If the product has been exposed to rain or water,
- C) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
- D) If the product has been dropped or damaged in any way, and
- E) When the product exhibits a distinct change in performance this indicates a need for service.

### **14. Heat**

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

### Disc formats supported by this player:

 
	Dolby Digital		Multi-angle
	KODAK picture CDs		Closed Caption
	MP3 files on CD-R/CD-RW		Subtitle choices
	DVD video		Audio choices
	Parental Lock		TV Aspect Ratio modes

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

The product complies with the KODAK Picture CD format and will display KODAK Picture CDs. The "KODAK Picture CD Compatible" logo is a trademark of Eastman Kodak Company and is used with permission.


Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. c 1992-1997 Dolby Laboratories, Inc. All rights reserved.

### Front panel

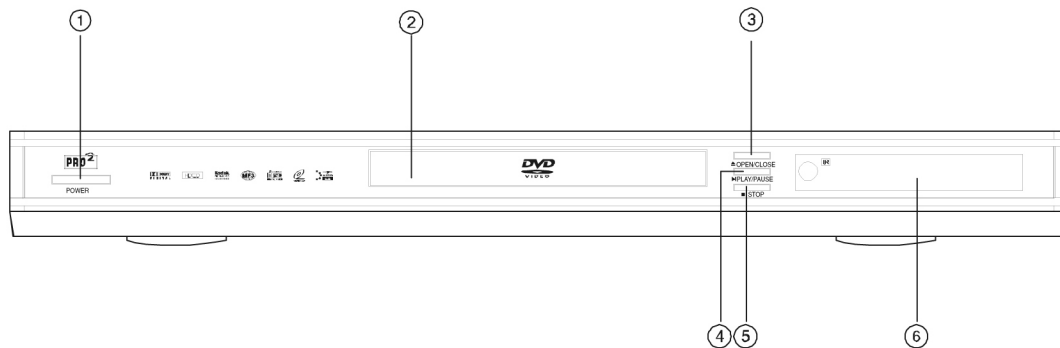


- |              |           |       |
|--------------|-----------|-------|
| ① POWER      | ④ DISPLAY | ⑦ N/P |
| ② CABIN DOOR | ⑤ PLAY    | ⑧ R/L |
| ③ OPEN/CLOSE | ⑥ STOP    |       |

### Rear panel

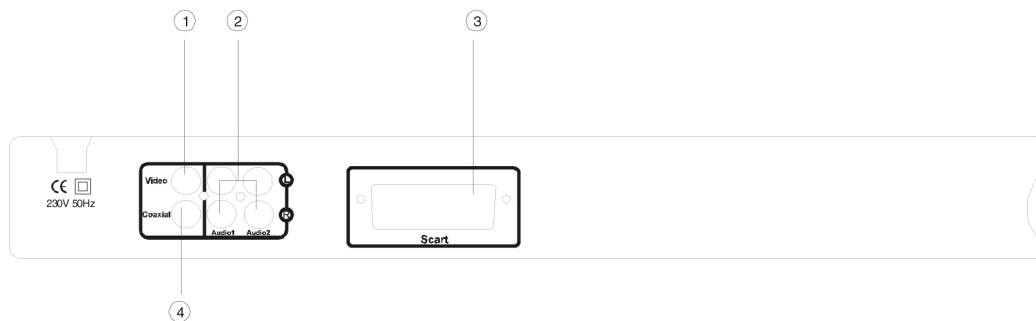 

- |                |                  |
|----------------|------------------|
| ① Video output | ② Audio output   |
| ③ Scart output | ④ Koaxial output |

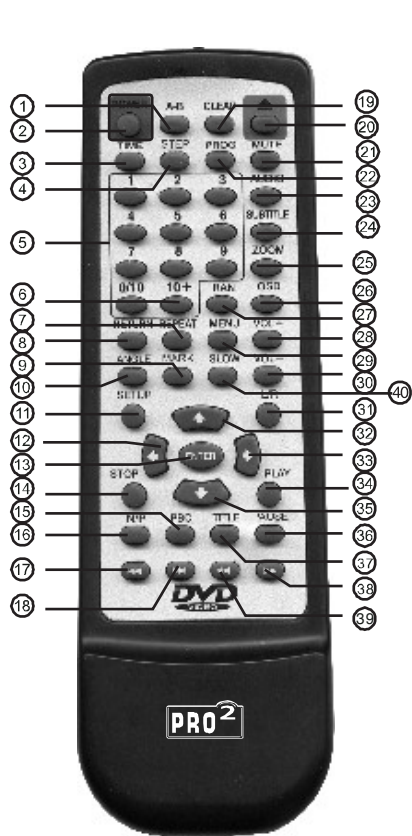 


- |                  |                            |
|------------------|----------------------------|
| ① A-B REPEAT     | ②① MUTE                    |
| ② POWER          | ②② PROG                    |
| ③ TIME           | ②③ AUDIO                   |
| ④ STEP           | ②④ SUBTITLE                |
| ⑤ 0-9 NUMBER KEY | ②⑤ ZOOM                    |
| ⑥ 10+ KEY        | ②⑥ OSD                     |
| ⑦ REPEAT         | ②⑦ RAN                     |
| ⑧ RETURN         | ②⑧ VOL+                    |
| ⑨ MARK           | ②⑨ MENU                    |
| ⑩ ANGLE          | ③⑩ VOL-                    |
| ⑪ SETUP          | ③① L/R                     |
| ⑫ LEFT           | ③② UP                      |
| ⑬ ENTER          | ③③ RIGHT                   |
| ⑭ STOP           | ③④ PLAY                    |
| ⑮ PBC            | ③⑤ DOWN                    |
| ⑯ N/P            | ③⑥ PAUSE                   |
| ⑰ PREV           | ③⑦ TITLE                   |
| ⑱ NEXT           | ③⑧ SEARCH QUICKLY FORWARD  |
| ⑲ CLEAR          | ③⑨ SEARCH QUICKLY BACKWARD |
| ⑳ OPEN/CLOSE     | ④① SLOW                    |


**Note:**

 1. Please note that reference numbers for the remote are described beginning on page 17 of this manual.
2. In this manual,  $\leftarrow$   $\Rightarrow$   $\uparrow$   $\downarrow$  will be used to represent different NAVIGATION ARROWS on the remote respectively.



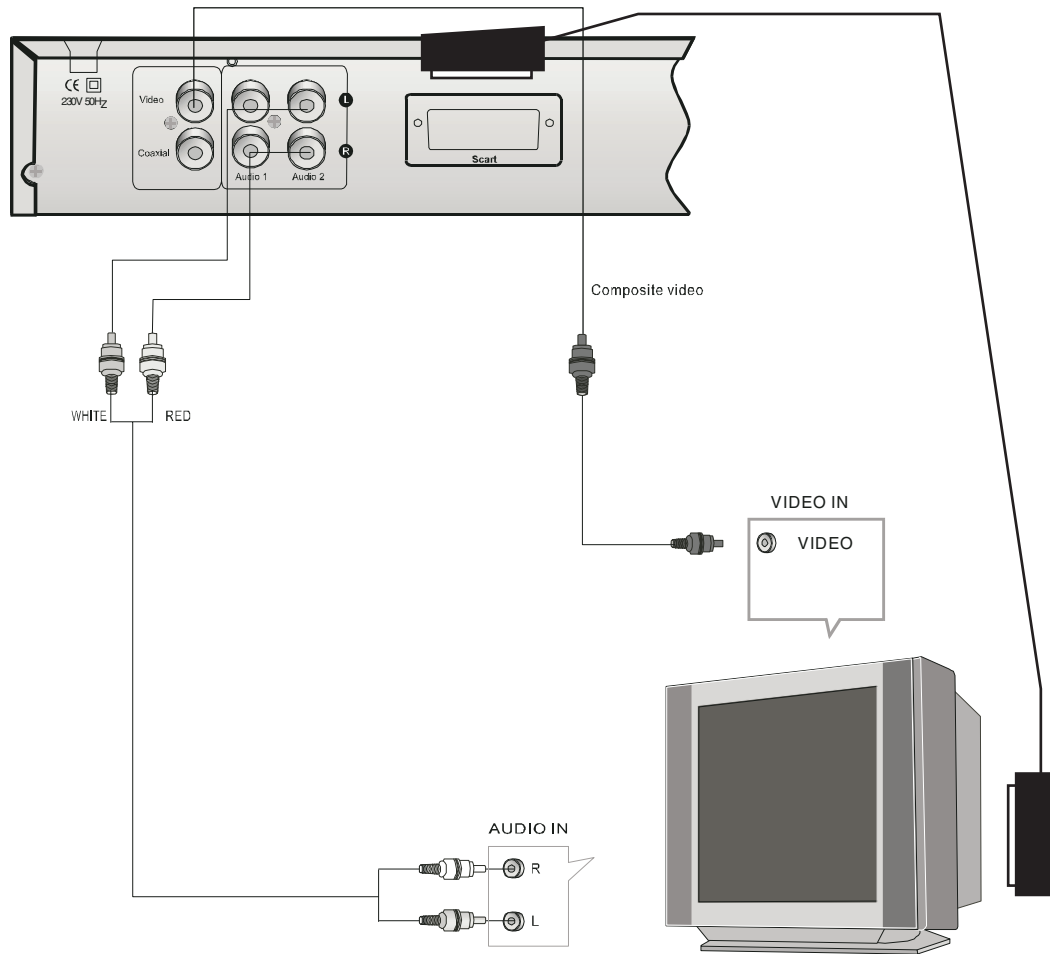


 Connect either the Scart cable or the Cinch cable.

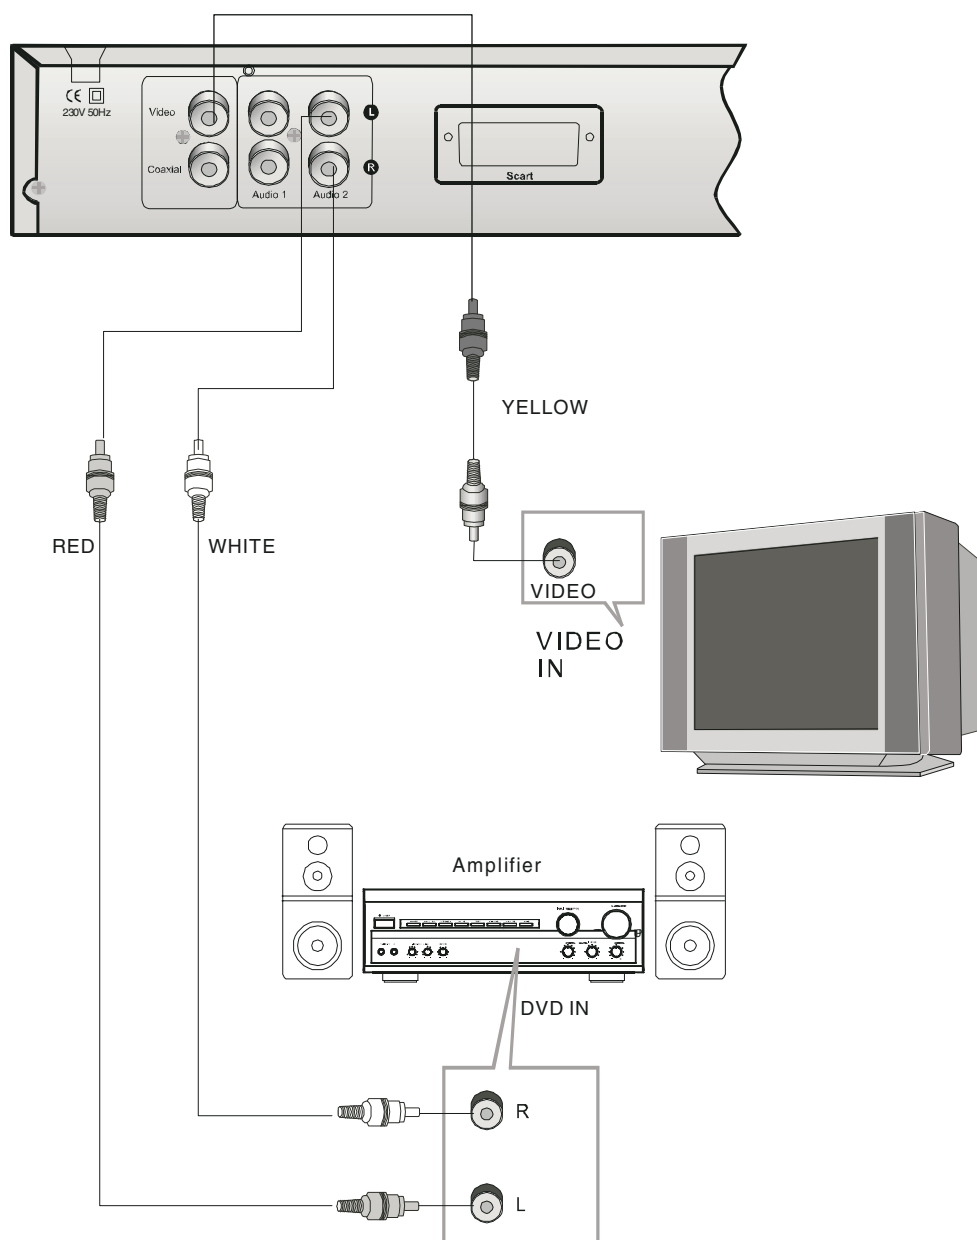

### Notes:

 1. Set the TV to the AVinput.
2. Set the Amplifier to the AVinput.

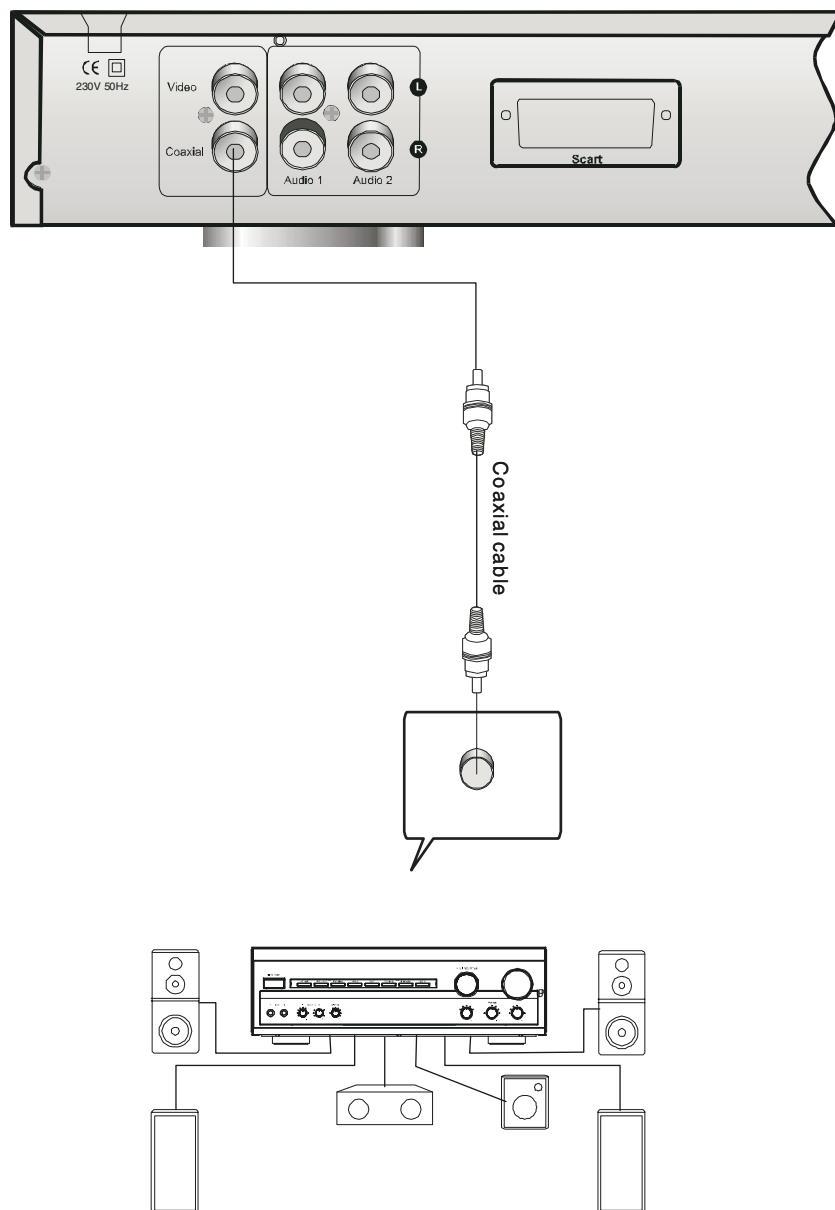

### Notes:

1. Select the Coaxial digital audio output.
2. Set the player's audio out to Raw or PCM mode .
3. Set the Amplifier to the AV input.

### Preparation before playing:

1. Connect the DVD player to your TV and amplifier.
2. Turn on the TV.
3. Set the TV to the AV input.
4. Turn down the volume on your amplifier, and then power it on.
5. Set the amplifier to the AV input.



STEP 1 - Press POWER start the player. The DV logo appears on the TV screen.

STEP 2 - Press OPEN/CLOSE either on the front panel or remote control. When the tray is opened, place the disc on the tray with the label side up. Press OPEN/ CLOSE again to close the disc tray.

STEP 3 - Press the PLAY button on the front panel or remote control. The player will automatically read and identify the disc, and begin playback.



In stop mode, press **SETUP**, and the TV screen will display the Setup Menu as follows:



Press  $\leftarrow \rightarrow$  to change items

 
Setup Menü

- A. Press **ENTER** to display each submenu
- B. Press **SETUP** to exit the Setup Menu

## Language Setup


Select [Language] in the Setup Menu, and press **ENTER** to display the [Language] submenu:

Press  $\uparrow \downarrow$  to select the menu item

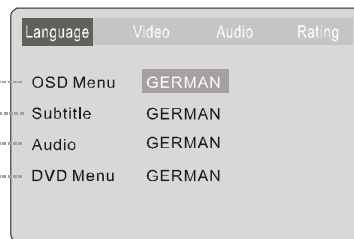

- A. Press **ENTER** or  $\rightarrow$  to set
- B. Press  $\leftarrow$  to go back one menu
- C. Press  $\leftarrow$  OR  $\uparrow$  repeatedly to return to the Setup Menu

 Select [OSD Menu], and press **ENTER** or  $\rightarrow$  to display the [OSD Menu] submenu:

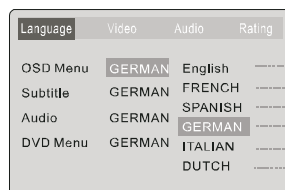

Press  $\uparrow \downarrow$  to change your selection

- A. Press **ENTER** to confirm.
- B. Press **SETUP** to exit the Setup Menu.

### Language Setup

Select [Subtitle], and press **ENTER** or **⇒** to display the [Subtitle] submenu:

 


Press **↑↓** to change your selection

**Note:**  
Subtitle languages vary by disc.

- A. Press **ENTER** to confirm
- B. Press **SETUP** to exit the Setup Menu

Select [Audio], and press **ENTER** or **⇒** to display the [Audio] submenu:

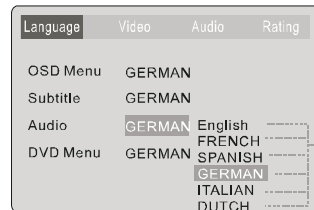


Press **↑↓** to change your selection

**Note:**  
Audio languages vary by disc.

- A. Press **ENTER** to confirm
- B. Press **SETUP** to exit the Setup Menu

 Select [DVD Menu], and press **ENTER** or **⇒** to display the [DVD Menu] submenu:

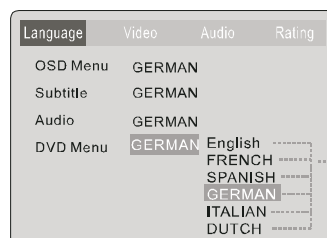


Press **↑↓** to change your selection

**Note:**  
Menu languages vary by disc.

- A. Press **ENTER** to confirm
- B. Press **SETUP** to exit the Setup Menu


### Video Setup

 Select [Video] in the Setup Menu, and press **ENTER** to display the [Video] submenu:

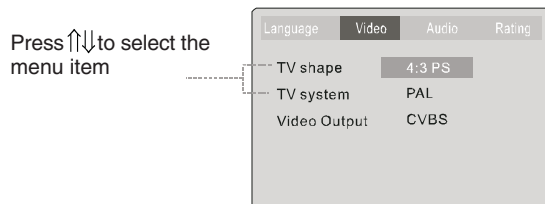

- A. Press **ENTER** or  $\Rightarrow$  to set
- B. Press  $\Leftarrow$  to return to the Setup Menu

 Select [TV shape], and press **ENTER** or  $\Rightarrow$  to display the [TV shape] submenu:

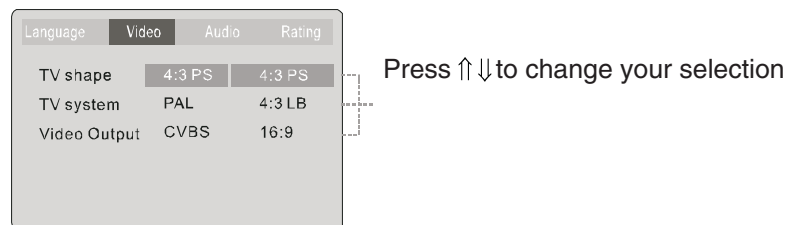


- A. Press **ENTER** to confirm
- B. Press **SETUP** to exit the Setup Menu

[4:3 PS] - Pan and scan refers to pictures where part of pictures is cut off so it fills the whole screen.  
 [4:3LB] - Letter Box refers to pictures where black bands appear at the top and bottom.  
 [16:9] - The picture fills the screen of a wide-screen (16:9) television.

**Note:** Not all DVDs offer movies in Full Screen format. If not, the disc will override your TV Display setting and the movie will be displayed in Letterbox format.

 
Select [TV system] and press **ENTER** or  $\Rightarrow$  to display the [TV system] submenu:

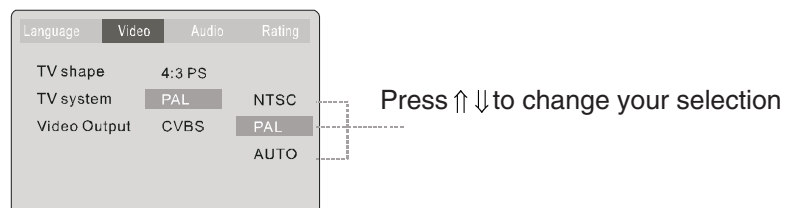

- A. Press **ENTER** to confirm
- B. Press **SETUP** to exit the Setup Menu.
- [NTSC] - Select if you are using NTSC signal system to match your TV set.
- [PAL] - Select if you are using PAL signal system to match your TV set.
- [AUTO] - Select if you are using AUTO signal system to match your TV set.

Select [Video Output], and press **ENTER** or to display the [Video Out] submenu:

 - A . Press **ENTER** to confirm
- B. Press **SETUP** to exit the Setup Menu

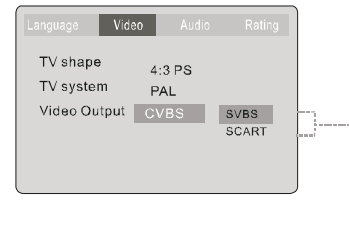

Press **↑↓** to change your selection

### Audio Setup

The Audio menu allows you to set the analog and digital audio outputs to correspond with the external components you have connected to the player. For example, if you connected the player to a TV using the Stereo Audio jacks, you should set 2 channel to Enjoy downmixed stereo audio.

 
- **You can set the audio format for each of the following sources: MP3, CD and . Others**
- **DVD playback must be stopped in order to adjust the Audio setup.**

#### Set Digital Out to:

**PCM** (default) To output 2 channel digital from the coaxial digital audio outputs; e.g., to a Minidisc recorder.

**RAW** To output the raw 5.1 channel digital bitstream form the coaxial digital audio outputs; e.g., to an external amplifier with a Dolby Digital decoder.

**Off** To disable Dolby Digital decoder. Press **SETUP** to save and exit.

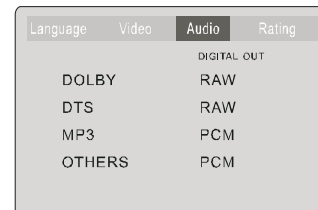

PCM stands for Pulse Code Modulation, and is the standard 2-channel stereo format used for audio Cds.




### System Setup

 The system menu allows you to block playback of DVDs based on their ratings.

#### Setting the Password & Rating Level

The DVD player allows you to block playback of inappropriate content with a password-protected Rating system (not all discs are rated).

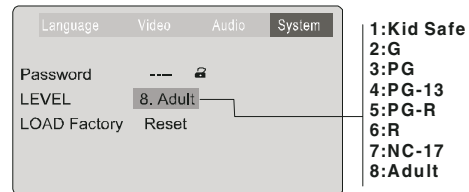

- From Stop mode, press **SETUP**.
- Select LEVEL and press **ENTER**.
- Select and press **ENTER** repeatedly to set the from 1 (most restrictive) to 8( least restrictive ).  
If a password has already been set, the lock icon will be closed. You will not be able to select until you **SELECT** the correct password using the 0-9 keys.
- Select Password.
- Use the 0-9 keys to **SELECT** a 4-digit password and press ENTER. The lock icon will close to indicate that the and password are set.
- Press SETUP to save and exit.

Not all DVDs are rated.

DVDs that are rated higher than the level you select will not play without **SELECTING** the correct password.

If you forget your Rating password, select 8888 to clear the memory. Keep this password out of reach of children as it will always unlock the Parental Control setting.

### STANDBY



- During playback, press **STANDBY** to stop the player and return to standby mode.
- While the player is in standby, press **STANDBY**

### OPEN/CLOSE



- To open the disc tray, press **OPEN/CLOSE**.
- To close the disc tray, press **OPEN/CLOSE** again.

### 0-10+ keys



- These keys are used to input the time, as well as title, chapter and track numbers.
- When a numeric item is displayed on the screen, press the 0-10+ keys to select the desired entry, and press **ENTER** to confirm.

### A-B



 
- During playback, press A-B to select point A.
- Press it again to select point B. The player will repeat the section from A to B automatically.
- Press A-B third time to cancel A-B repeat and clear points A and B.

### Note:



1. During CD playback, points A and B must be within the same track. During DVD playback, points A and B can be selected from different chapters.
2. This function is subject to the disc.



During playback, press OSD to display the current time counter position. Elapsed time of the current track/chapter

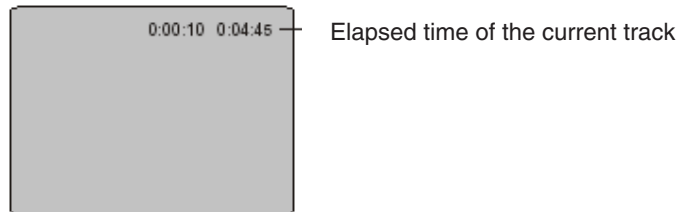


  Press OSD again to display additional information about the playing disc.

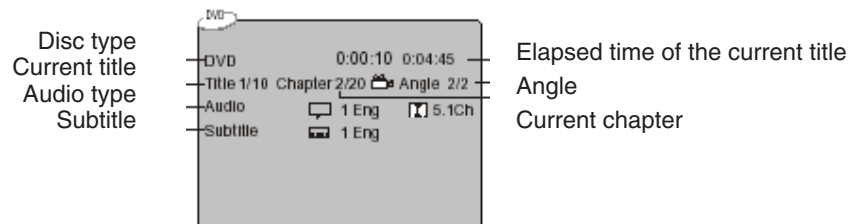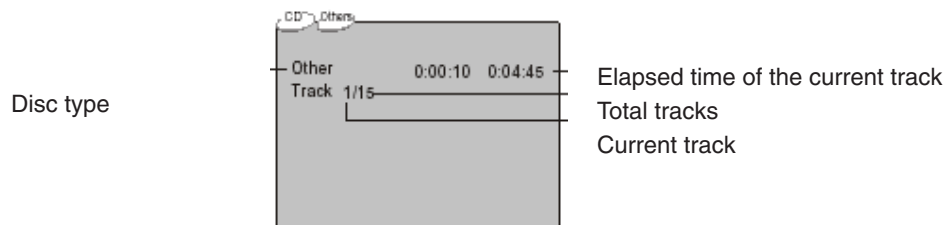



 During playback, press TIME, and the [Track Search] menu will display as follows:

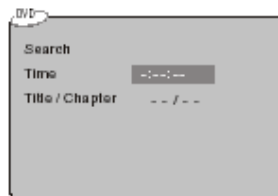

### Notes:

 
1. Time searches for an exact time in the movie
2. In Title/Chapter mode, you cannot SELECT a value outside the range of the total number of titles or chapters
3. For some DVD discs, the Search function is unavailable.

Use the number keys to input the desired Time, Title or Chapter, then press ENTER to confirm.


Press TIME again , the [Disc Search] menu will display as follows:





- During DVD or CD playback, press once >> to play the next chapter, title or track.
- During DVD or CD playback, press >> and hold to scan forward. The player will review the disc at 2, 4, 8 and 20 times normal speed as follows:  

 - Press **PLAY** to resume normal playback.



- During DVD or CD playback, press once << to play the previous chapter, title or track.
- During DVD or CD playback, press << and hold to scan in reverse. The player will review the disc at 2, 4, 8 and 20 times normal speed as follows:  

- Press **PLAY** to resume normal playback.

PREV



- Press **PREV** to skip to previous chapter or track.

NEXT




- Press **NEXT** to skip to the next chapter or track.

STOP




- Press **STOP** once during playback to stop and hold playback.
- Press **PLAY** to resume playback from the point you pressed STOP.
- Press **STOP** twice to stop playback completely.

**Anmerkung:** The screen saver will automatically turn on if playback is stopped about 5 minutes (when Screen Saver is set to on)




- Press **PLAY** from stop mode to start playback.
- Press **PLAY** during playback to replay the last 10 seconds. This function is not available if the elapsed time of current track is less than 10 seconds

**Note:** MP3 discs and some DVD discs do not have a 10 second review feature.




- Press **PAUSE** during playback to pause playback.
- Press **PLAY** to resume normal playback.



- During DVD, playback , press **MENU** to return to the program menu.
- In the Setup Menu, press **MENU** to return to the main menu or stop mode.
- Any time, press **MENU** to cancel the current OSD or some menus

**Note:** This function is subject to the disc.



- During DVD playback, press **TITLE** to display the DVD title menu or play the first title.

**Note:** This function is subject to the disc.



While [PROGRAM] is on, press **ENTER** to display the [Program] submenu:

CD

Others

Program Input

1 _ _	4 _ _	7 _ _	10 _ _
2 _ _	5 _ _	8 _ _	11 _ _
3 _ _	6 _ _	9 _ _	12 _ _

Play Program

Clear All

Input the track numbers in the order you would like them to play. When finished, select [Play Program] and then press **ENTER** to play the tracks in the new programmed order. Select [Clear All] and press **ENTER** to clear all the numbers you have input.

DVD

Program Input      Title / chapter

1 _ _ : _	4 _ _ : _	7 _ _ : _	10 _ _ : _
2 _ _ : _	5 _ _ : _	8 _ _ : _	11 _ _ : _
3 _ _ : _	6 _ _ : _	9 _ _ : _	12 _ _ : _

Play Program

Clear All

Input the title number and the chapter number in the desired order. Then select [Play Program] and press **ENTER** to play the chapters in the order you have set. Select [Clear All] and press **ENTER** to clear all the numbers you have input.

### SLOW



- Press **SLOW** repeatedly to slow motion playback at variable speeds.

### STEP



- Press **STEP** during playback to pause playback.
- Press **STEP** repeatedly to play frame.
- Press **PLAY** to resume normal playback.

### PBC



- During the playback of medion, without DVD's
- Press **PBC** (playback control) to switch the function on of.

### REPEAT



- Select to press **REPEAT** to select Repeat Title, Repeat chapter, Repeat off During DVD playback.
- Press **REPEAT** to select Repeat Single, Repeat All and Repeat off ( CD or Others).



VOL+ VOL-



- Press **VOL+**, to increas the loudness.
- Press **VOL-**, to decreas the loudness..

MUTE



- Press **MUTE** to mute the Audio output
- Press **MUTE** again to resume normal audio output

 
During DVD playback, press **ZOOM** to magnify the image as

ZOOM



?

Press during the playback **ZOOM**, to change the size of the pictures:



CLEAR



- Press **CLEAR** to delete the choosen Tracknumber
- Press once **CLEAR** to delete the Tracknumber.  
To delete all number, hold the button pressed.

### ANGLE



During DVD playback

- Press **ANGLE** to view scenes from different camera angles.
- Press **ANGLE** repeatedly to change from one camera angle to another.

#### Note:

This function is disc specific.

### Audio



During DVD playback

- Press **AUDIO** repeatedly to select from up to 8 audio languages/formats.

#### Note:

This function is disc specific.

### SUBTITLE



During DVD playback

- Press **SUBTITLE** repeatedly to select from up to 32 subtitle languages.

#### Note:

 
This function is disc specific.(languages will vary)

### Supported formats:

- Disc format: ISO 9660, Joliet
- Music file format: MP3
- MP3 bit rate (data rate): 32 -192 kbps
- Total number of music files and albums: around 350 per disc.
- Sampling rate: (CBR)32kHz/44. 1kHz/48kHz/64kHz;  
(VBR) 16kHz/22kHz/24kHz/32kHz (MPEG )

**Note:** The player will not identify or play MP3 discs under the following conditions:  
recording format is not supported, badly scratched or deformed disc, MP3 recorded  
in CD-R or CD-RW which is not finalized, or a dirty pickup.

When a MP3 disc is loaded, the screen will display as follows:

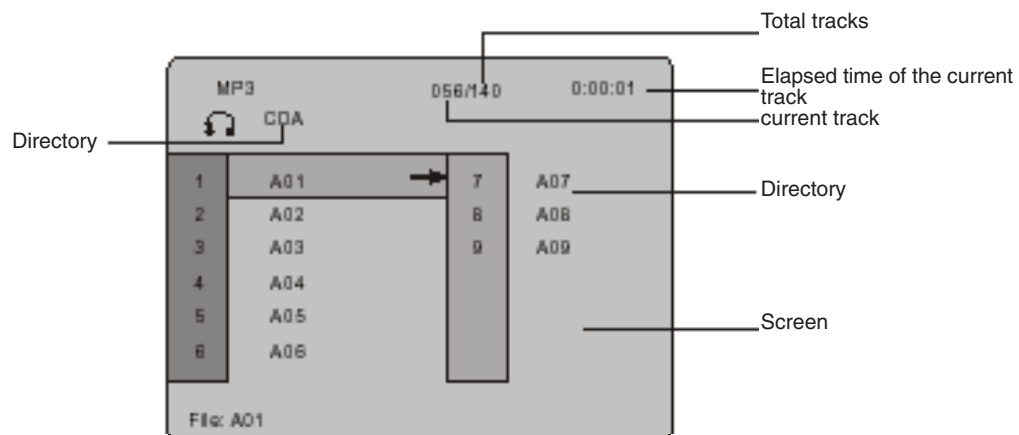

Press  $\uparrow \downarrow$  to select the file when the cursor appears in the file window.

Press **SELECT** to play the current file selected by the cursor.

Press  $\Leftarrow \Rightarrow$  to switch between the directory window and the file window.

**Note:** During MP3 playback, Forward Scan and Reverse Scan are not available.

### The introduction of KODAK Picture CD

A Kodak Picture CD has the size and shape of a regular CD. You can order a KODAK Picture CD simply by checking the box on the photo finishing envelope when you drop off a roll of film (35 mm or Advanced Photo System (APS) color print film) at the time of processing in Kodak Express store displaying "Kodak Picture CD" sign. When your order is returned, you receive your prints, negatives, and your full roll of pictures safely stored on your KODAK

Picture CD. Each KODAK Picture CD brings you the tools to enhance, share and manage your pictures on your computer. You also can record the JPEG picture into CD-R or CD-RW with the CD-Rewriter yourself.

### Note:

1. The Max. Size of JPEG Picture can be supported: 3840X3840 pels
2. JPEG stands for Joint Picture Experts Group. It is the first International Standard on Still Picture Compressing: ISO 10918-1, constituted by the Committee on Still Picture Compressing Standard of ISO. The pictures on KODAK Picture CD are stored in this format (JPEG). This player can decode the JPEG pictures in KODAK Picture CD and playback the pictures in different modes.  
Now, you can playback Kodak Picture CDs on this player and view your wonderful pictures on your TV in the comfort of your living room.

When a Kodak Picture CD is inserted on a player an automatic slide show is launched. Each picture in the Kodak Picture CD will be displayed consecutively in a slide-show fashion and will be scaled to fit in the whole TV screen.

### General function:

- You can set slideshow transition modes for any pictures.
- Press **PAUSE** to stop playing.
- Press **◀** or **▶** to see the previous or next picture.
- Press **PLAY** to continue slideshow transitions.
- Press **STOP** to return to root menu.

 
### Image Rotation:

There are three modes to rotate a picture: original, 90 Deg, and 180 Deg. These operations are allowed only when a picture is being displayed normally and will be cancelled automatically when a new picture is displayed. The **ANGLE** keys are used to select the different rotation modes:

- Press **ANGLE**  OSD display original.
- Press **ANGLE** again  OSD display 90 Deg.
- Press **ANGLE** again  OSD display 180 Deg.

### Zoom Function:

This player provides both Zoom in/out and Zoom pan function. Press the **ZOOM** consecutively, the picture will zoom in/out in turn as followings:



**Note:** During the **ZOOM** function, slideshow transitions and image rotation are disabled.

Q off: close zoom, press **PLAY** again to resume slideshow transition mode.

If you have any questions, please consult the troubleshooting guide below.

**NO PICTURE OR SOUND**

- Ensure the power button is on.
- Ensure the power outlet is operational.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

**PICTURE BUT NO SOUND**

- Ensure the audio jacks are securely connected.
- Ensure the audio connector is not damaged.
- Ensure the volume is turned up in VOL/CH setup.
- Ensure you have set the player's AUDIO settings correctly.
- Ensure you have ENTERed the correct AV input for your TV.
- Ensure the audio is not set to mute.

**SOUND BUT NO PICTURE**

- Ensure the video jacks are securely connected.
- Ensure you have ENTERed the correct AV input for your TV.
- Ensure the video connector is not damaged.
- Ensure you have set the player's VIDEO settings correctly.

**POOR PICTURE OR SOUND**

- Ensure you have set the player's AUDIO settings correctly.
- Ensure the disc is not scratched or stained.
- Ensure the AV connector or the output terminal is not damaged.

**"BAD DISC" DISPLAYED**

- Ensure the disc is not warped, damaged or deformed.
- Ensure the disc is not badly stained or damaged.

- Ensure the disc format is compatible with the player.
- Please check whether you have tried to play a software CD. If so, please restart the player.

**REMOTE NOT WORKING**

- Ensure the remote batteries are working.
- Point the remote control directly at the player's IR sensor.
- Remove any obstacles between the remote and the IR sensor.

**UNIT NOT WORKING**

- Turn off the power, and then turn it on again.

**"NO DISC" DISPLAYED**

- Ensure you have put the disc on the tray.
- Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

## Insert batteries

### 1. Open the cover



### 2. Insert batteries



Make sure to match the "+" and "-" of the batteries with the marks inside the battery compartment.

### 3. Close the cover



#### Notes:

 
Improper use of batteries may cause battery leakage and corrosion. To operate the remote control correctly, follow the instructions below: Do not insert the batteries in the wrong direction.

- Do not charge, heat, open, or short-circuit the batteries.
- Do not throw batteries into a fire.
- Do not leave dead batteries in the Remote Control.
- Do not use different types of batteries together, or mix old and new batteries.
- If you do not use the remote control for a long period of time, remove the batteries to avoid possible damage from battery corrosion.
- If the remote control does not function correctly or the operating range becomes reduced, replace all batteries with new ones.
- If battery leakage occurs, clean the battery compartment, then insert new ones.
- Using the remote control

## Using the remote control

Point the remote control at the remote sensor.

(The pictures below are for reference only.)

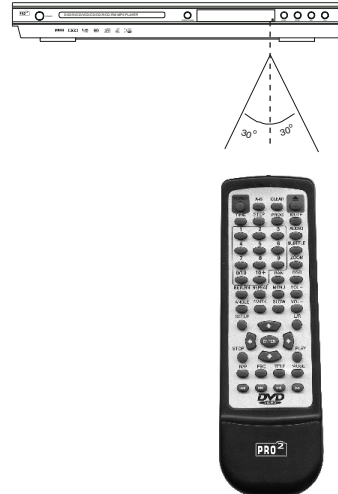

Remarks: Do not expose the remote sensor of the DVD Player to a strong light source, such as direct sunlight.

#### Notes:

- Point the remote control directly at the player's remote sensor.
- Do not leave the remote control in an extremely hot or humid place.
- Do not spill water or put anything wet on the remote control.
- Battery life is ~1 year under normal conditions.

## Specifications

## Others

Type .....	DVD PLAYER
Model .....	MD 42068
Video standard.....	NTSC/PAL/AUTO
Compatible Discs	DVD+R/RW, DVD-R/RW, CD-R/RW, MP3-CD, JPEG, VCD, SVCD
D/A converter .....	96KHz/24bit
Digital audio output .....	coaxial
Power requirements.....	AC 230V ~ 50Hz
Power consumption .....	25 W

---

Specifications are subject to change without notice.



**D**

MTC Medion Technologie Center  
Freiherr-vom-Stein-Str. 131  
D-45473 Mülheim / Ruhr

Tel. 01805 / 633 633 • Fax 01805/566 566  
(0,12 Euro/Minute innerhalb des Festnetzes)  
ce-support@medion.com  
<http://www.medion.com>



**GB**

Medion Electronics Ltd.  
120 Faraday Park  
Faraday Road  
Dorcan  
Swindon SN3 5JF  
Wilts  
Hot-Line: 0870 727 03 70  
Fax: 017 93 71 57 16  
E-Mail: [hotline@medion.co.uk](mailto:hotline@medion.co.uk)

**F**

Medion France  
ZAC de La Bertraie  
Route de Sablé  
F-72270 VILLAINES SOUS  
MALICORNE

**N° Indigo 0 825 81 1000**

[hotline@medion.fr](mailto:hotline@medion.fr)  
[www.medion.fr](http://www.medion.fr)

**I**

Medion Service Center  
Zona Industriale  
Pianodardine  
83100 Avellino-Italy  
Tel.: 199 101 295  
[medionservicecenter@it.flextronics.com](mailto:medionservicecenter@it.flextronics.com)

**E**

Medion Service Center  
Visonic S.A.  
Alejandro Sanchez 95- 97  
28019 Madrid  
Hot-Line: 902 15 14 48  
Fax: 914 60 47 72  
E-Mail: [hotline@visonic.es](mailto:hotline@visonic.es)

**NL**

Medion Service Center  
J. F. Kennedylaan 16a  
NL-5981 XC Panningen  
Hot-Line: 0900 / 633 6330  
Fax: 0900 / 665 5660  
E-Mail: [CE-infoNL@medion.com](mailto:CE-infoNL@medion.com)