



# Safety Notice

The purpose of this Safety Notice is for the proper and safe use of the product and the prevent of personal injury or property damage. Please be sure to follow

## Meanings of some symbols



This symbol means what you can't do or what is forbidden



This symbol means what you must do or what is required



This symbol means you should cut off the power



## DANGER

- use of gasoline  
Prohibited !

Kerosene only



KEROSENE ONLY



## WARNING

- Do not use it when an exception occur

Turn off it when going to bed or going out



## WARNING

- Off the sealed container



Do not place a sealed gas container and things alike near the exit



- Necessary airflow



Do not use in an enclosed room, such as the basement




1 ~ 2 times per hour, 1 ~ 2 minutes for each time .

- Avoid blocking out the outlet



Avoid blocking out the outlet with objects .

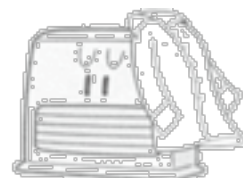

- Being Close to combustible materials is strictly prohibited



Do not use the heater near burning objects



- Touching the outlet prohibited  
Take care !




Disassembling or assembling the heater without permission is prohibited . Or your heater will be damaged .





# Names of its Parts

## Exterior appearance

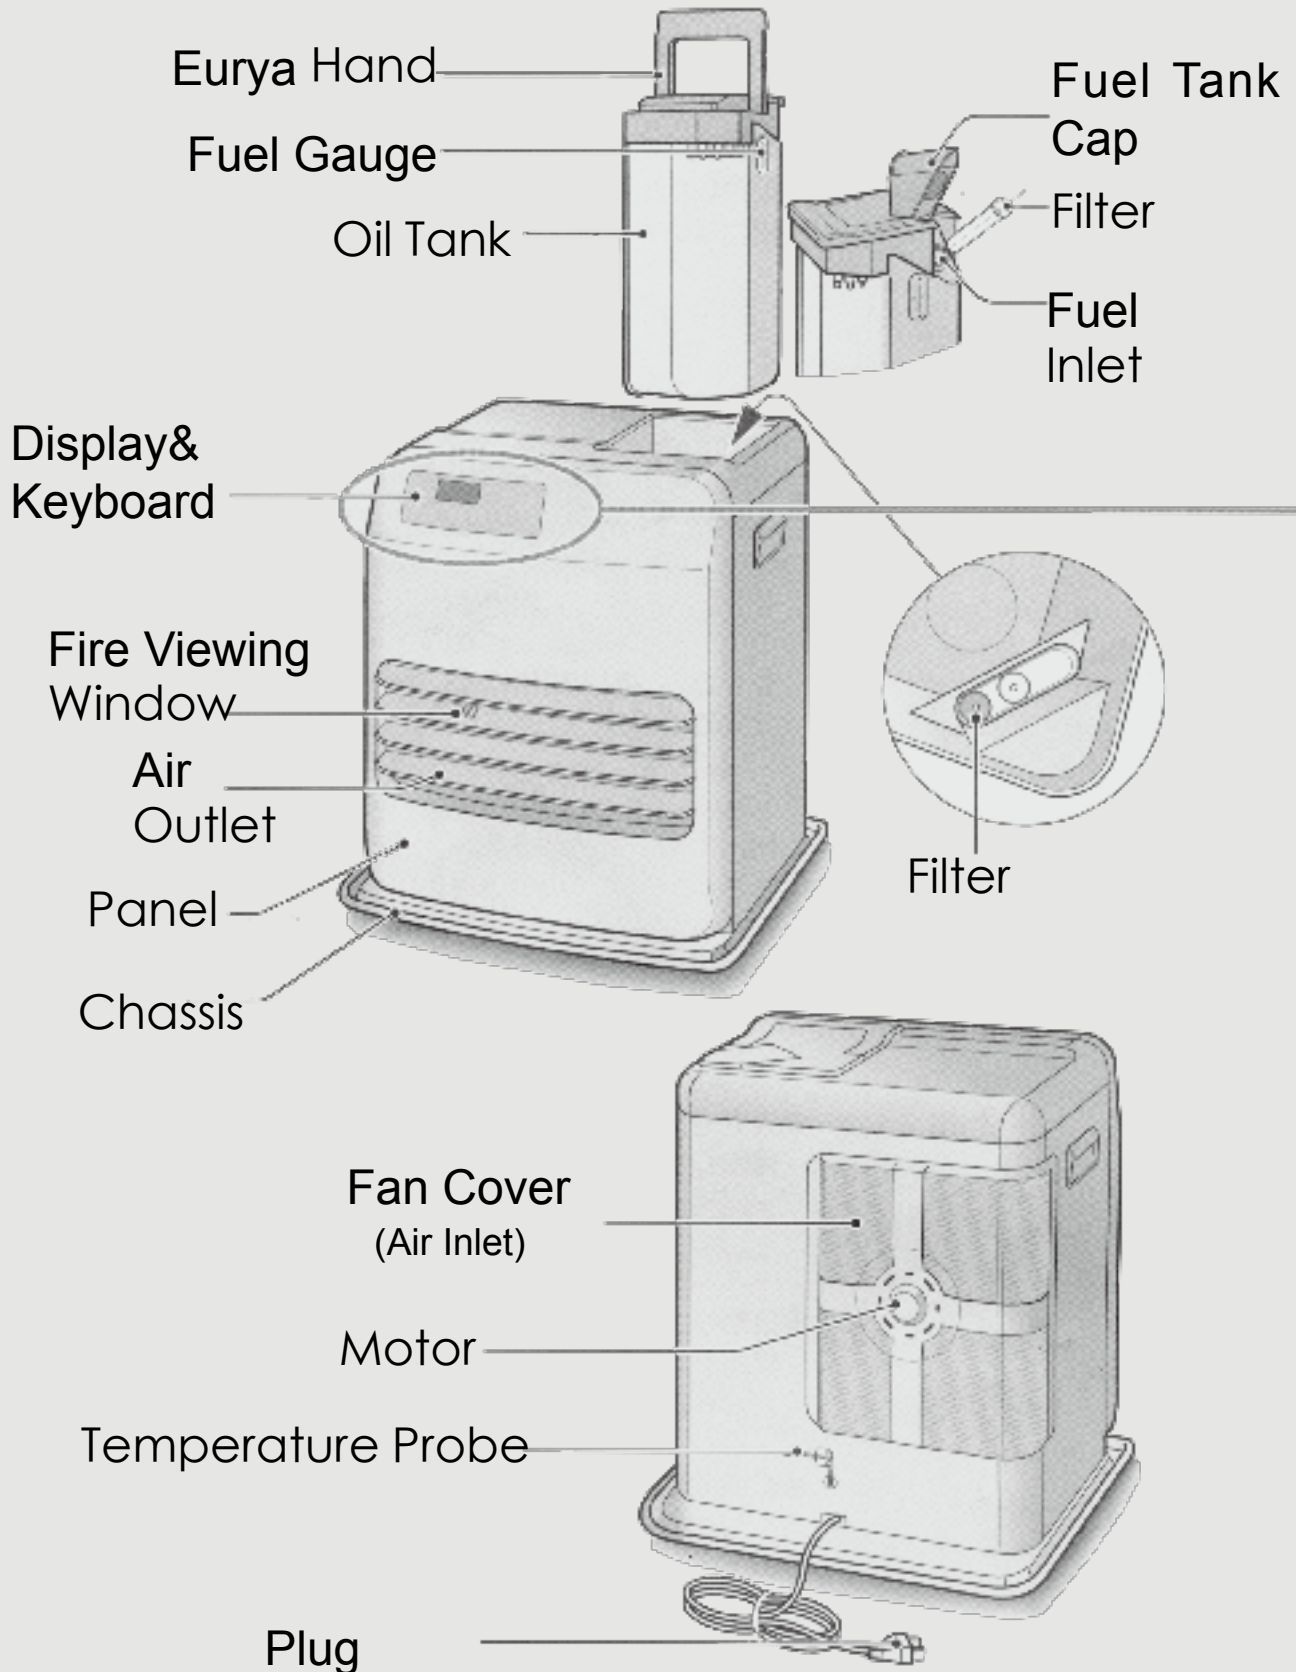

# Operating parts

## Setting Button \ Timer Button

Pressing this button means confirmation while in the mode of adjusting time and enters next mode of adjusting time

Pressing the button while working means the entrance in the timer setting mode


Indicator ON ----- the state of timing setting

Indicator Flashes ----timing is setted

## Running Button

Turning on / Turning off heater

Indicator Flashes---Firing  
Indicator ON---Run Mode

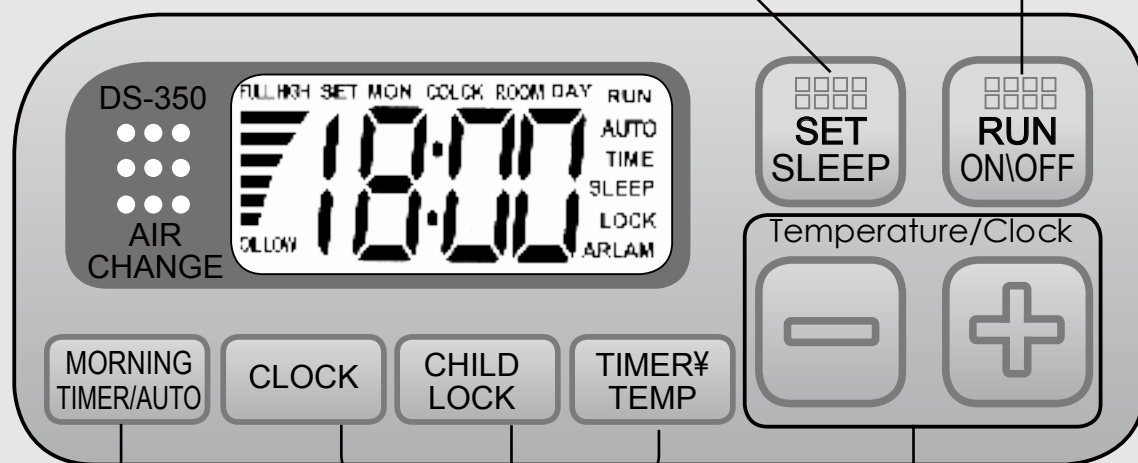

Automatic timer switch per day or per week  
This Function in Next Model

## clock button

Long standby time by 3 seconds to enter setting mode

## child lock(Working)

Pressing it for three seconds in the phase of unlocking means the failure of all buttons .

Pressing it for three seconds while in the phase of locking means the retrieval of all buttons .

## Temperature SET



Temperature decrease



Temperature increase

## Time SET



time decrease



time increase

## Timing SET



Timing decrease



Timing increase

## Shift Button

In the standby mode means the switch in time from date to week or week to date

In the working mode means the switch in Temperature to Time

# Names of its Parts

## Display

### Time

MON-----Month  
DAY-----day  
CLOCK-----Time

### Temperature


Set-----Set Temperature  
Room----Room Temperature

### Auto

Auto-----Auto Open heater

### Work State

RUN-----In Working

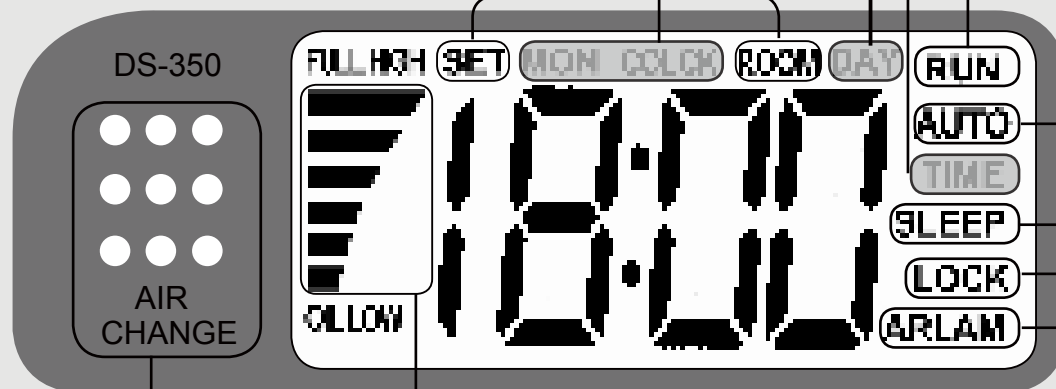

### Indicator of changing air

Flashes----- should open the window and allow more air

### meter indicator

It shows the left amount of kerosene and tells the user to add more before running out

### ARLAM

ARLAM-----the heater has wrong.









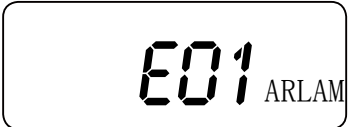
### locking

LOCK----- the keyboard is locked

### sleeping

SLEEP-----he heater is in a sleeping mode and will be off automaticallz according to the set time
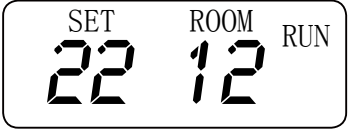
# LCD digital display instructions

<div><div>• TIME DISPLAY</div><div>Using a 24-hour time system Pressing the  Button you can switch back and forth the date and the week .</div></div>	<div>COLCK--Time</div> <div>MON---Month DAY --Day</div>	<div>(Sample)6:30 PM</div> <div></div> <div>(Sample) June 8th</div> <div></div> <div>(Sample) Monday</div> <div></div>
<div><div>• TEMPERATURE SETTING</div><div>The room temperature display ranges from 9 to 35 . Below 9 , it shows “lo” while above 35, it shows “hi ” The set temperature is marked by such symbols as [Lo] [9]~[30][Hi]</div></div>	<div>SET ROOM</div>	<div>(Sample)Set Temperature 22° C Room Temperature 12° C</div> <div></div>
<div><div>• SLEEP SETTINGS</div><div>Pressing the  whiling the heater is working , the heater is in the mode of sleep setting</div></div>	<div>SLEEP</div>	<div>(Sample)The heater is set to turn off ten minutes later</div> <div></div>
<div><div>• SLEEP OFF SHOW</div><div>The set sleep reads SLOF when turning off automatically</div></div>	<div></div>	<div></div>
<div><div>• Error Show</div><div>The heater is equipped with self-diagnosis,the error code will display while error occurs</div></div>	<div></div>	<div>(Sample)No Oil Tank</div> <div></div>



# PREPARATIONS

## Preparation

### 1 Open the package and take the heater out

- The smell of kerosene when opening the package is a normal phenomenon and it is due to the combustion test . Please feel at ease to use .


### 2 plug into the socket

- AC 220V~240V
- LCD screen will display the current time




## FOR BETTER EFFECTS

place the heater against the window

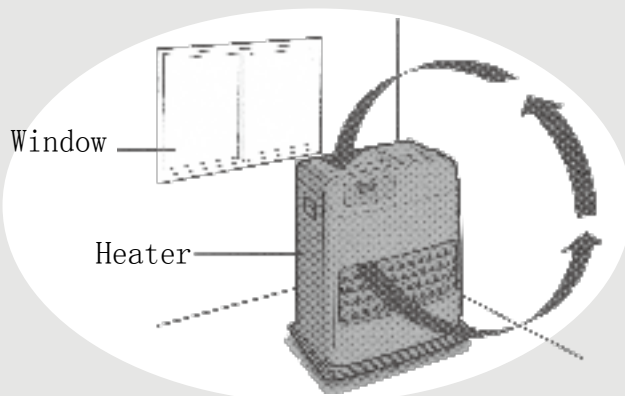

Please do not put out the draft articles which will prevent warm air circulation .

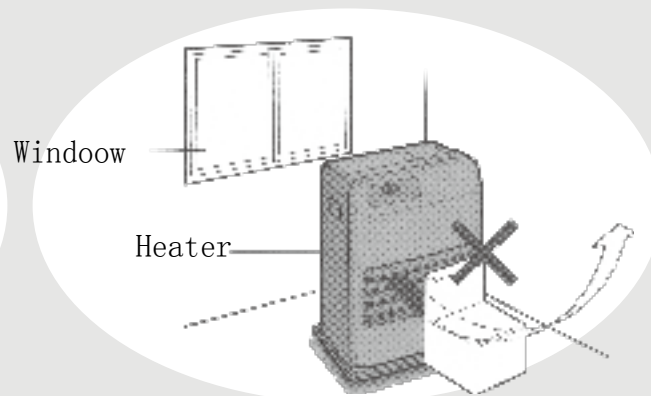




# Fuels

**Use pure kerosene**

**Use of gasoline Prohibited**

**Distinction between  
kerosene and gasoline**

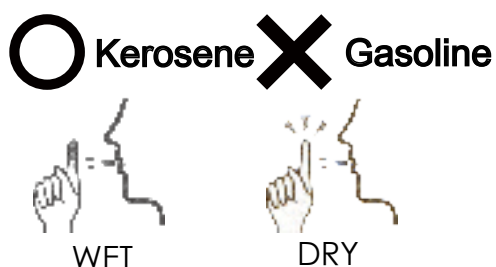

## STOCK AND MANAGE KEROSENE

Kerosene should be kept in special containers, which are put in a clean, dry, cool and fire-free room and avoid direct sunshine exposure



### ● Use Impure kerosene

The consequences of using kerosene mixed with water will lead to the failure of burning, and the heater displays error button[ER05]

### ● The consequences of using gasoline will lead to fire disaster

### ● How to purify kerosene


Please pull out the oils in the tank and wash it with pure kerosene two or three times and then add pure kerosene into the tank.

# PREPARATIONS

## Refueling


Please refuel after powering off

- 1 Turn it off until the heater stops .  
Turn off the power and then pull the fuel tank out .

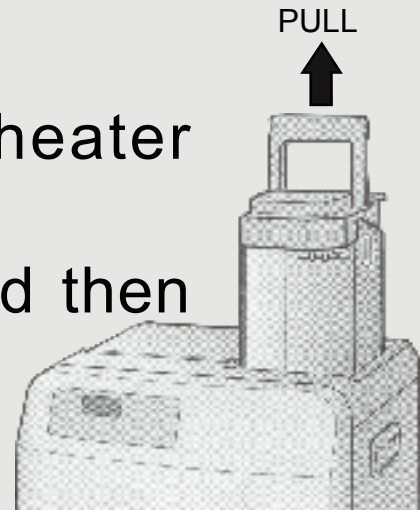


- 2 Open the fuel tank

Pull the fuel tank out of the heater after opening the cap

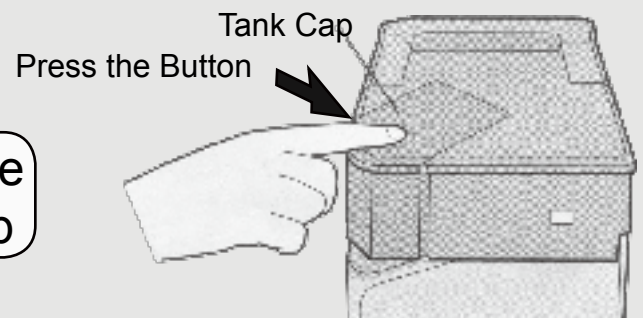


- 3 Fueling

- Put the fuel pump into the bottom of the oil filter

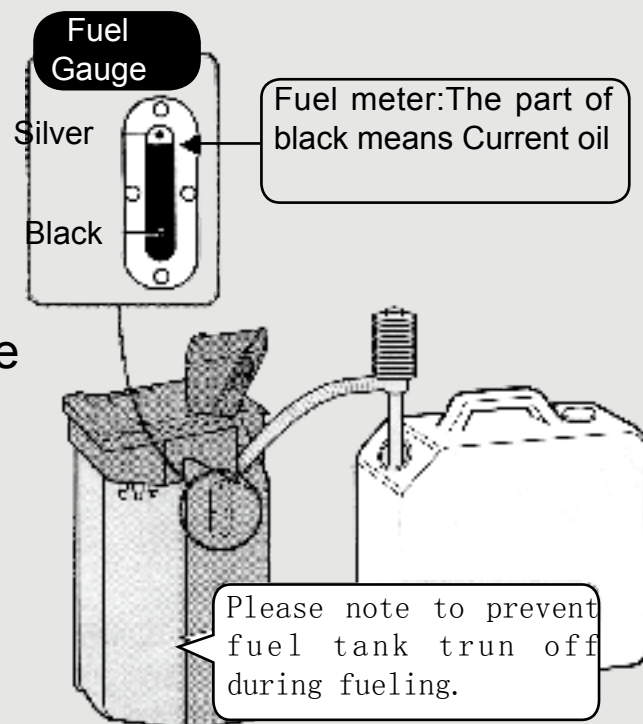

## 4 Close the fuel tank

- Push the fuel tank cap, until you hear a carbazole sound .

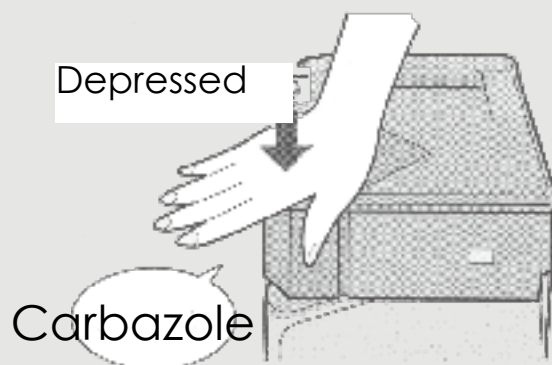

## 5 Put it in the heater .

- Check the bottom of the fuel tank and see if there is debris or waterdrop . Clean the tank with a piece of dry cloth .
- Put the fuel tank in the heater and be sure there is no □Er01□ on the display when powering . This signal shows you havenot put the tank in or you have not made it flat .







---

### Attention


- Do not fuel near snow , sand or rubbish because there is a sensor at the
- bottom of the fuel tank . If the fuel tank is covered with snow , sand or rubbish , please clear them off .
- Do not tilt the fuel tank when fueling
- After fueling , the kerosene will leak if you carry the fuel tank horizontally.

# PREPARATIONS

## Oil Show

Fuel state	Operation State	Left Working Hour
	Light ON Working Mode 	Above 1 hour
		About 1 hour
		Ten minutes
	Light off Standby Mode 	About 10 minutes

### Attention


- According to the state of burning ,big fire or small fire ,the remaining oil will have a certain run-time error .
- When the oil amount is in the state of  ,Buzzer will issue beep sound to alert users to refuel

# TIME SETTING

In the Standby mode, LCD screen displays the current time . Press time\temp to switch to time in the mode of working . Generally speaking , it is not necessary to adjust the clock since the heater has an inbuilt chip clock which has been set the right time . please follow the tips if you want to adjust the clock .

## 1 Enter time setting mode

- Hold down  button, After 3 seconds you hear “beep” , and the LCD screen display, such as at right. Enter “Year” setting

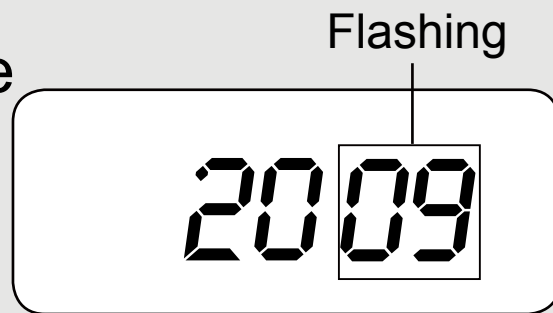

## 2 Time Adjustment

- Press the “+” key to increase the time value, press the “-” key to reduce the current time value.

## 3 Save Time


- Press the “set” button, save the current settings, and set the next mode. But when finishing 【minute】 setting, pressing the key is to exit setting mode
- Time-setting order: year month Date hour minute

# Start to use

## Start to power

1 Press  Button

- Lights start flashing
- The Display screen shows the set temperature and room temperature .

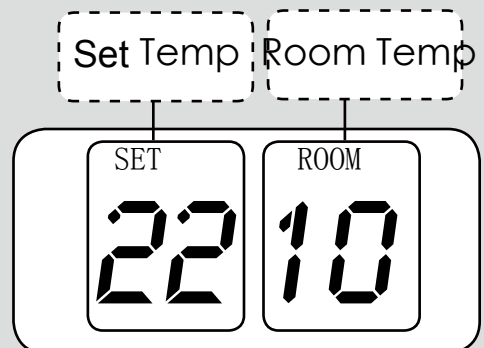

**About 3~4 minutes start fire**

- A bang sound is heard , the heater begins to fire .

### Attention

- It is a normal phenomenon When the first time use gives off smoke and odor .They are caused by rust oil and heat-resistant coatings .Please open the window for more wind and air .
- It is a normal sound when you hear Ta Ta sound
- It is a normal sound when you hear Chi Chi sound . They are from vaporization of the burning kerosene .




### ■ Fire Condition

Check the fire from the window of observation. Please stop the heater

○ Normal

Blue Flame

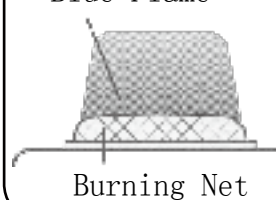

**The following phenomena are normal**

- The blue flame mixed
- with yellowones are normal .
  - Yellow flame is from
  - the burning net when the fire is small .



# Temperature regulation

1 The   button  
is for temperature

## Set to your Temperature

If you press the button continuously, the figure will change accordingly.

### Setting Range(°C)

Press 	LO → 9 → 10 → ●●● → 30 → 31 → HI
Press 	HI → 31 → 30 → ●●● → 10 → 9 → LO

- The signal “Lo “ means that the heater is always in the state of small fire
- The signal “HI“ means that the heater is always in the state of big fire .

### Attention


- The temperature sensors may have different shows from the room thermometer because of their different accuracy.
- Warming speeds may be different because of different room sizes and placements of the machine
- If remain in the moderate fire state after firing about 2 minutes, it has nothing to do with the room temperature

when you find abnormal combustion .

XAbnormal

Outside of the normal

Yellow Flame

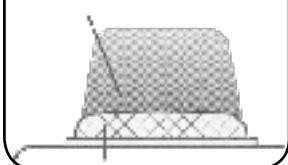

### Disposal

- Ventilate
- Clear dust in air inlet, outlet, and the fuel tank filter
- If the above disposal methods can not solve the problem, please contact our Local dealers.




# Start to use

## Set Sleep Mode

1 Press



- SLEEP lamp is always bright
- Enter the timing mode when the Display shows [00]

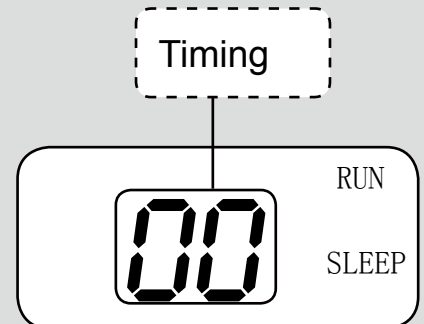

2

Use



button to set time

- Setting range: 1 ~ 99 minutes

3


After finish setting press



- SLEEP light often twinkling
- Back to the temperature setting interface
- Start Sleeping mode

4

After the setting time, the system will shut down automatically and the Display shows[SLOF], such as at right.

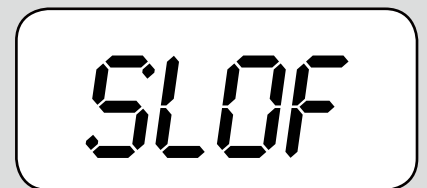

- Use



to back to the Time Display

interface

### Attention

- To enter the sleep mode only after the machine starts.
- In the sleep mode setting state, if there is no action within 5 seconds, the system will automatically return to the temperature setting Interface, and start the sleep mode

## Cancel Sleep Mode



- SLEEP lamp is always bright
- The display shows the remaining setting time



- SLEEP light always off
- Back to the temperature setting interface
- Cancel Sleep mode

## Power OFF



- Running lights off, and there is the voice **【da】**
- Confirm that the fire had been extinguished from the fire window

### Attention

- After the machine is turned off, the fan will run 3 minutes to cool the furnace core  
To ensure the fan is running, please do not do the following actions
  - Do not unplug the power
  - Do not pull out the fuel tank
  - Do not press the Run button
  - If you do not use the machine a long time, please unplug the power
  - Please do not switch the machine frequently. Or it will cause odor

# Start to use

## 3 Hours Delay

In order to prevent the accident caused by forgetting turning off, the machine will turn off automatically three hours later.

1 After the machine runs 2 hours and 58 minutes, the display backlight will blink, indicating [3HOF], and there will be [drip ~ drip ~] alarm sounds, such as at right.

If no action is taken at the time, the machine will automatically turn off after 2 minutes



3HOF

2 Press  The display

shows [3HdL] and the system will continue to run 3 hours



3HdL

3 Press the  twice the display

shows [2HdL] and the system will continue to run 2 hours



2HdL

4 Press  three times the

display shows [1HdL] and the system will continue to run 1 hours



1HdL


**Attention :** The heater will automatically turn off after working for six hours at its longest . For your heating, please re-boot .

# Routine Maintenance

## Once a week

### ● Fan cap maintenance


Please use the vacuum cleaner and brush to remove dust from fan cover

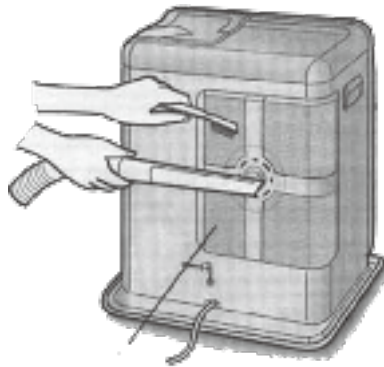

### ● Heater maintenance

By using soft, dry cloth, you can clean the fuselage.


Please use the vacuum cleaner for draft maintenance

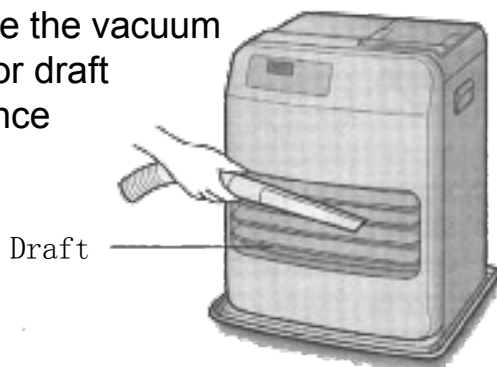

## Once a Month

### ● Filter tank Cleaning

Check whether the filter is dirty or not, if it is dirty, clean the filter with pure kerosene.

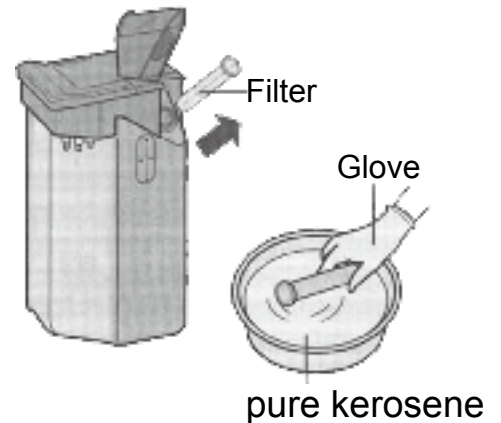

#### Take out of the filter

Rotate the filter illustrated and take it out



#### Install the filter

Install the Filters and then rotate in the opposite direction

### ● Vibration switch checking

In the state of normal burning, shake around the fuselage. If you hear [ER02] false alarm and the heater automatically turn off, this indicates that the vibration switch is good



# Problems checking and Electrical performance

## Resolve the problems

The error code will be displayed on the screen if the heater dose not work  
 .After the problem is resolved , reset the Run button

Display	Reason	Approach
No Display	•No power / power plug out	•Check the power plug
<i>ER01</i>	•No tank or not placed flatly	•Place the fuel tank again .
<i>ER02</i>	•The heater is tilted or hitted	• Make sure the heater is placed vertically
<i>ER03</i>	•Not fired after working for 5 minutes	•Check whether the ignition furnace core is heat
<i>ER05</i>	•Set fire fail	•Check the fuel tank if water on it or not
<i>ER06</i>	• Detect the flame ignition voltage when the heater is not fired .	•Please Check flame probe whether there is dirt .
<i>ER07</i>	•The cooling time is more than 3 minutes .	• If the chimney probe has dirt .
<i>ER08</i>	•Abnormal combustion of kerosene	•check whether the kerosene is pure or not.
<i>ER09</i>	•The chimney temperature is too high	•Check whether the room temperature probe works or not .
<i>ER14</i>	•The core temperature is not measured when the heater works .	•Check whether the furnace core probe works or not .
<i>RDF</i>	•The room temperature probe is short circuit	•Check whether the room temperature probe works or not .
<i>ROP</i>	•The room temperature probe opens circuit .	
<i>KOF</i>	•The oven temperature is short circuit	•Check whether the oven temperature works or not
<i>FLOF</i>	• The flame probe is short circuit .	•Check whether the flame probe is dirty or not
<i>KSOF</i>	•The chimney probe is short circuit	•Check whether the chimney probe is dirty or not
<i>KSOP</i>	The chimney probe is open circuit	

## Electrical performance of DS-350ER

Specification: Forced ventilation, open-end

Category: vaporization-type , forced convection

Fuels: lamp oil or kerosene

Fuel Consumption: 0.08~0.33L/H

Heat: 3.2 or 3.5KW

Fuel tank capacity: 5.0L

Rated Voltage AC220~240V

Frequency: 50~60Hz

Consumption power:

Igniting state: 300W

Working state: 28W

Made in China

**SHANGHAI DASHAN INDUSTRIES CO.,LTD**