

230W Beam Moving Head Light User Manual

HS-MB230



Support Telephone: +86-20-37707017

Support Email: support@hosenlighting.com (QQ、Skype)

Website: http://www.hosenlighting.com

Copyright: The data at Hosen lighting Technology Limited common to all, to prohibit any unauthorized copying, printing and dissemination.

Contents

Con					
1.	Packin	ng List	1		
2.	Schematic Diagram				
3.	Product Features				
4.		ications			
	4.1.	Physical Specifications			
	4.2.	Electrical Specifications			
	4.3.	Other Specifications			
5.	Installation Method				
	5.1.	Installation Steps			
	5.2.	Fixture Linking			
	5.3.	AC Power			
6.	Techni	ical Support			
7.		2			
8.	Disclaimer				
9.	Amendment Log				
10.	Appendix				
	10.1.				
	10.2.	DMX Channel Explanation			

1. Packing List

- 230W beam MovingHead Light 1 pcs
- User Manual <u>1</u> pcs

2. Schematic Diagram

3. Product Features

- Unlimited programming effects
- Special lighting effect
- Modular & highly portable
- No technical experience required
- Quick and easy installation
- More affordable than any existing solutions
- Over heat protection
- Sealed for long, durable lifetime
- ➤ Indoor use in well temperate rooms

4. Specifications

4.1. Physical Specifications

Product Series: Traditional Stage Lighting

Item No.: HS-MB230

Lamp: ☐ YODN MSD230 7R ☐ Jenbo 230W

☐ Philips 230W ☐ Osram 230W

Color temperature: 7800K

Color wheel: One color wheel, 14 kinds of color chips in one color wheel

Gobo: 17 gobos

Effect Wheel: Rotatable eight prism, effect move, frost · 0-100% mechanical

dimming, mechanical dimming and free dimming availed . strobe

macro control viable

DMX Channels: 18CH

Control mode: Auto-run mode, DMX-512 mode, Sound active mode

Color: Black Material: Plastic

Size: 396x360x495mm

Net Weight: 19.0Kg Gross Weight: 21.0Kg Package Quantity: 1pcs

Package Size: 460x380x550mm

IP level: IP20

Working Temperature: $-25^{\circ}C^{\sim}+35^{\circ}C$

4.2. Electrical Specifications

Power: 350W

Voltage: AC 100-240V 50/60Hz

Service Life: 2200 hours

4.3. Other Specifications

Over heat protection

5. Installation Method

5.1. Installation Steps


- 1. Please hand this light into the suitable place with suitable angel (if operate the light in external place, please remember to get some water-proof cover to protect them.).
- 2. To connect the signal cable, plug one side into IN socket in the back of light and plug another side into OUT signal connector in the DMX 512 board(signal input: 1=>Ground, 2=>Data, 3=>data+)
- 3. To connect the cable and put into power, them the light stay in the status to receive the operation signal like: Music, Automatic, DMX512ect. Take note: Please out off the power

line if you will not operate it for a certain time.

5.2. Fixture Linking

To run your light shows of one or more fixtures using DMX-512 controller or to run synchronized shows on two or more fixtures in master/slave operating mode , you need DMX cables to link the units from DMX IN to DMX OUT.

Notice: the length of signal cables should be within 100meters, to prevent the signal interference by other appliances because of the long signal cables.

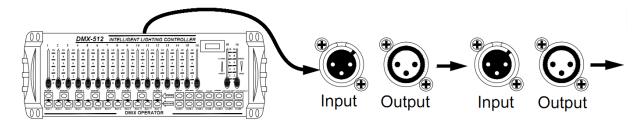

5.3. AC Power

The fixture is designed to work on 100-240V 50/60Hz.Before applying power to a unit, check that the source voltage matches the unit's requirement.

6. Technical Support

Support Telephone: +86-20-37707017

Support Email: support@hosenlighting.com (QQ、MSN as same)

Website: http://www.hosenlighting.com

Working Time: (BeiJing Time)

Monday to Friday 08:00~12:00 13:30~17:30 18:30~20:30

Saturday 09:00~12:00 13:30~17:00

Note: all the rest of China's holidays!

7. Notice

In order to make sure the product is used well, please read the Manual carefully!

- ★ Please restart it 20 minutes later after turning off light , until full-cooling. Frequent switching will reduce the life span of lamps and bulbs; intermittent using will improve the life of bulbs and lamps.
- ★ If the product not been used for long time, please keep it under normal temperature environment, to avoid damage the element through too dry or too wet environment.
- ★ Don't use the product under the hot, cold, dusty or damp environment. Please make sure the temperature of the environment is not high than 35 centi degree.
- ★ During usage, don't drop the product or make friction or collide with hard material.
 Otherwise the surface of the product may be scuffed and the hardware may by damaged.
- ★ When installing or moving the product, please protect the lens of the head, to avoid scuff and damage.
- * Avoiding water drop on the product.
- ★ When using the product, don't look at the light directly. This will hurt your eyesight.

- * Always mount this unit in safe and stable matter.
- ★ Install or dismantle should operate by professional engineer
- ★ Using lamp, the change rate of power voltage should be within±10%,If the voltage is too high,it will shorten the light's life; if it's not enough, will affect the effect.

8. Disclaimer


While every care has been taken with the details on this specification sheet, we take no responsibility for any inaccuracies caused during installation. We reserve the right to change these specifications without notice to always ensure that the customer is receiving a superior product.

9. Amendment Log

> 2012-9-19 Refresh and revise the user manual. Version 1.0.9.19

10. Appendix

10.1. LED Display Explanation

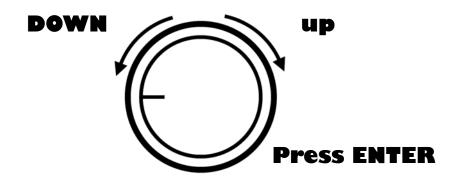

Main menu	Sub-menu	
Exit		
DMX Address	Address= [001-512]	
	Back	
	Control	Standard
Parameter		Extended
	Models	Movinghead light
Option	Back	
	X Reverse	Off / On
	Y Reverse	Off / On
	XY Exchange	Off / On
	Dimmer Reverse	Off / On
	Iris Reverse	Off / On

Current 4 Page, Total 7Page(s)

	Turn shortest	Off / On	
	Dmx Reset	Off / On	
	Back		
	Language	English	
	Language	简体中文	
Display	Lightness	Lightness=[01-32]	
Display	Poorlight	Constant open	
		Dim	
		Off	
	Display LOGO	Off / On	
	Back		
	CH1 000		
	CH2 000		
	CH3 000		
	CH4 000		
	CH5 000		
	CH6 000		
	CH7 000		
	CH8 000		
	CH9 000		
Man control	CH10 000		
	CH11 000		
	CH12 000		
	CH13 000		
	CH14 000		
	CH15 000		
	CH16 000		
	CH17 000		
	CH18 000		
	CH19 000		
	CH20 000		
	Back		
Test operation	Sound	Program Run	
	Auto	Program Run	
Bosumo defecilé	Back		
Resume default	Enter		
Firefrance reseat	Back		
Fixture reset	Enter		

10.2. DMX Channel Explanation

Channels	Value	Function
CH1	0-255	Pan: 0-450
CH2	0-255	Tilt: 0-270
CH3	0-255	Pan fine (0-2.1°)
CH4	0-255	Tilt fine (0-1.0°)
CH5	0-255	XY speed (from fast to slow)
CH6	0-255	Dimmer (0-100%)
UIIU	0	Off
	1-50	Light on (strobe fine ON : CH6)
	51-240	Strobe effect (from slow to fast)
СН7	241-249	Light on (strobe fine ON : CH6)
	250-253	Off
	254-255	Light on (strobe fine ON: CH6)
СН8	0-255	Frost effect (0-100%)
V22 0	0-7	White
	8-15	Color 1
	16-23	Color 2
	24-31	Color 3
	32-39	Color 4
	40-47	Color 5
	48-55	Color 6
	56-63	Color 7
	64-71	Color 8
СН9	72-79	Color 9
	80-87	Color 10
	88-95	Color 11
	96-103	Color 12
	104-111	Color 13
	112-127	Color 14
	128-191	Rainbow effect plus rotate (from slow to
		fast)
	192-255	Rainbow effect minus rotate (from slow to fast)
	0-127	Color step adjust
CH10	128-255	Color step adjust Color step fine adjust
CH11	0-6	White
VIIII	7-13	Gobo 1
	14-20	Gobo 2
	21-27	Gobo 3
	28-34	Gobo 4
	35-41	Gobo 5

	42-48	Gobo 6
	49-55	Gobo 7
	56-62	Gobo 8
	63-69	Gobo 9
	70-76	Gobo 10
	77-83	Gobo 11
	84-90	Gobo 12
	91-97	Gobo 13
	98-104	Gobo 14
	105-111	Gobo 15
	112-118	Gobo 16
	119-127	Gobo 17
	128-191	Rainbow effect plus rotate (from slow to fast)
	192-255	Rainbow effect minus rotate (from slow to fast)
077.4O	0-191	Gobo shaking (from slow to fast)
СН12	192-255	No function
61140	0-31	No function
СН13	32-255	Prism effect
	0-127	Prism position adjusting
CH14	128-191	Prism plus rotate (from fast to slow)
	192-255	Prism minus rotate (from slow to fast)
CITAE		· · · · · · · · · · · · · · · · · · ·
<u>CH15</u>	0-255	Prism zoom (from small to big)
CH16	0-255	Zoom (from near to far)
	0-99	No function
	100-105	Delay OFF (After the bulb cooled down with the fan, the lamp cut off the power)
CH17	106-199	No function
	200 205	Delay ON (After the bulb cooled down with
	200-205	the fan, the lamp turn on the power)
	206-255	No function
СП10	0-254	No function
CH18	255	Delay reset