

Coverage Mapping with GPS

With the Anritsu E-Series Spectrum Master™, Cell Master™, and Site Master™ (Option 431)

Introduction

Spectrum analyzers provide accurate RF power measurements over a wide frequency range. With an antenna attached, RF power measurement becomes Received Signal Strength (RSSI). RSSI measurements can be combined with on-screen map displays to become a very versatile solution for mapping the coverage of RF transmitters.

The Anritsu E-Series Spectrum Master, Cell Master, and Site Master models with spectrum analysis capability can include Option 431, Coverage Mapping. This option supports the needs for both indoor and GPS coverage mapping.

In this application note, you will learn how to fully operate the instrument with accordance to the coverage mapping with GPS process. This type of mapping requires Option 31, GPS. Instead of reporting your location to the instrument like in indoor mapping, the GPS receiver will automatically pinpoint your location relative to the map.

Anritsu Map Master

Note: A USB flash drive is required to transfer MAP (.map) files to the instrument.

To coverage map with GPS, a PC software program called “Map Master” must be used in order to convert picture files captured from a map provider to a MAP (.map) file for the instrument to read. Map Master is located on the CD provided with the instrument, or can be downloaded and installed from the Anritsu website (www.anritsu.com). The ideal image size would be close to 666 pixels x 420 pixels (~1.6:1 ratio).

The first step is to create a MAP file using Map Master.

Map Master has the capability to capture a map directly from the source to the program. To do so, press **Capture Map**. The software program will load a 3rd party map, and you can enter the address of the area you wish to map. There is a zoom option as well, so the map and area can be larger or smaller. Once the proper specifications are made, press **Capture Map** located at the lower right. The picture is now on the Map Master screen and the latitudinal and longitudinal coordinates have been entered. Then press **File | Save As** to save as a MAP file. Set the destination to the USB flash drive, which can then be inserted into the instrument.

Create Map file using Map Master

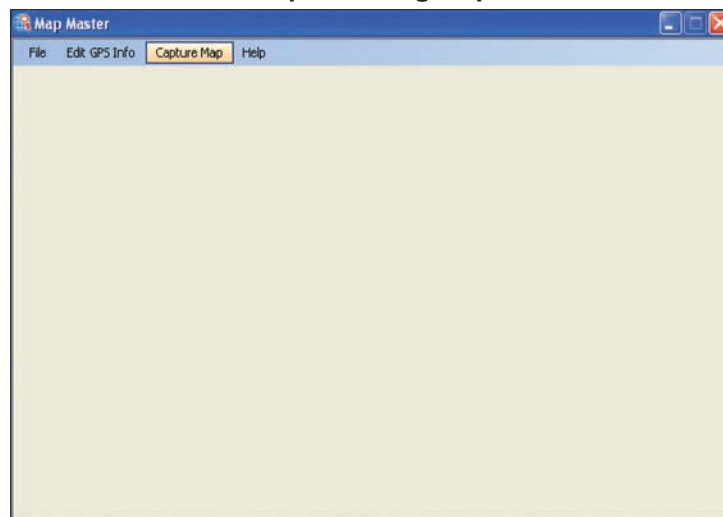


Figure 1: Capturing the Map

After pressing **Capture Map**, Map Master will load a 3rd-party map provider for easy screen-capturing.

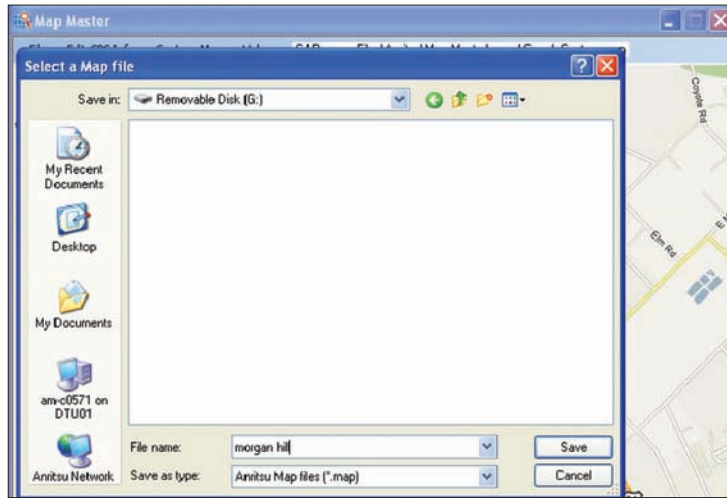


Figure 2: Saving the Map

After pressing **Capture Map** on the bottom right, the map and coordinates will be sent to Map Master. Once done, simply save it to the USB flash drive.

Getting Started

Prior to conducting the coverage mapping survey, the analyzer itself must first be configured to properly measure the signals of interest. Knowledge of various parametrics such as anticipated signal strength and variation, potential presence of interfering signals, and noise sources should be used in determining analyzer settings. A brief summary of the main analyzer setups is shown below. However, the user may want to refer to the instrument user manual for more detailed guidance.

1. Bandwidth Parameters
 - a. Resolution Bandwidth (RBW): minimum bandwidth over which one can separate two signals for viewing. The RBW can be decreased for viewing closely spaced signals at the expense of acquisition time. A low RBW is also advantageous in limiting noise distortion and resolution of low-level signals.
 - b. Video Bandwidth (VBW): used for averaging and filtering noise. This is particularly useful in discerning low-level signals in the presence of noise.
2. Reference Level, Pre-Amplifier and Attenuator
 - a. Reference Level: Input signal levels are reference to the top line of the graticule, known as the reference level. Depending on the amount of power anticipated in the signals to be measured, the reference level should be adjusted accordingly.
 - b. Pre-Amplifier and Attenuator: In order to present the proper signal level to the analyzer detection circuits, pre-amplification or attenuation can be adjusted on the signal input. The attenuator can be automatically adjusted as a function of the reference level. In general, signals below -40 dBm can use the pre-amplifier while signals over -30 dBm should be attenuated. For example, if the reference level setting is 20 dBm, attenuation should be set to 50 dB for a mixer input of -30 dBm.
3. Detector Type
 - a. Various detection circuits can be utilized. These include Peak, RMS, Negative and Sample. The type of detection is predicated on the user's measurement needs.
4. Filtering
 - a. Filtering should be used to measure signals in the presence of interferers. Filters can be added to the input of the analyzer to discriminate between wanted and unwanted signals, avoiding corruption of the measurement with adjacent high level signals.
5. Frequency
 - a. Select frequency to be measured.

To access the Coverage Mapping menu, either press the main menu icon **SPA Coverage Mapping**, or press the **Shift + Measure (4)** key, the **More**, and then the **Coverage Mapping** submenu key.

Note: For some instruments, this shortcut will not show up. Users can add it by pressing the **Shift + Measure (4)** key, the **More**, and then by holding the **Coverage Mapping** soft key for at least 3 seconds.

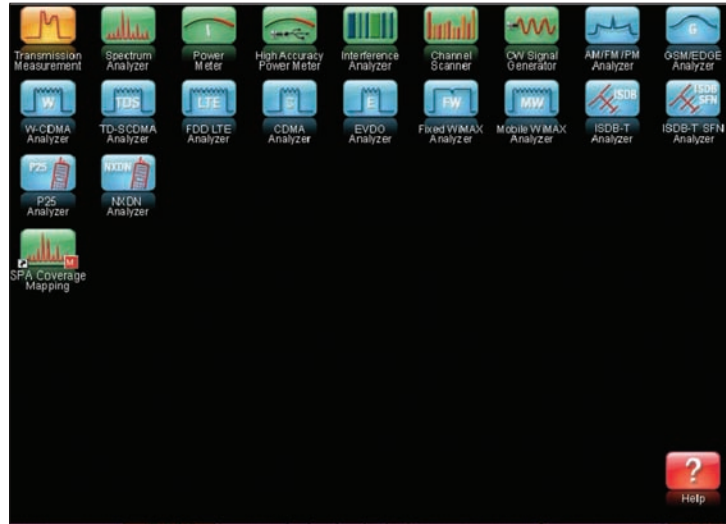


Figure 3: SPA Coverage Mapping

Setting Parameters

Before you begin Coverage Mapping, the parameters should be adjusted appropriately. In order to do so, first access the coverage mapping menu. Once there, select **Measurement Setup** and then to edit the measurement settings, touch the **RSSI** button. The threshold RSSI values provide the user with easy visibility of the power level.

- Better than Excellent
- Between Excellent and Very Good
- Between Very Good and Good
- Between Good and Poor
- Worse than Poor

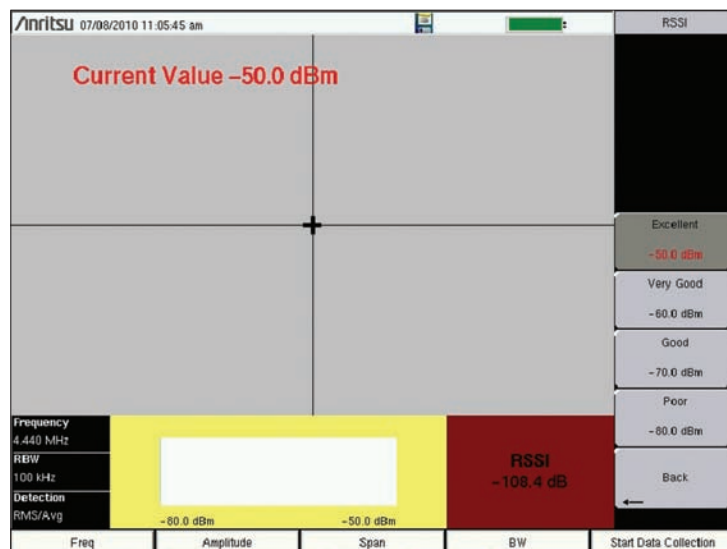


Figure 4: RSSI

The thresholds for the dBm values can be altered so the measurement indications on the map are colored appropriately for the expected signal levels.

Data Collection

Another setting that can be personalized is the way the data is recorded. In the coverage mapping menu, select **Point Distance/Time Setup**. Once there, you can set the way it records data by either time or distance, and the intervals of which it collects the data. If the collection setting was set to time, the instrument will plot a data point whenever the time set in Repeat Time is reached. If the distance option was set, the user receives a data point whenever the allocated distance is attained.

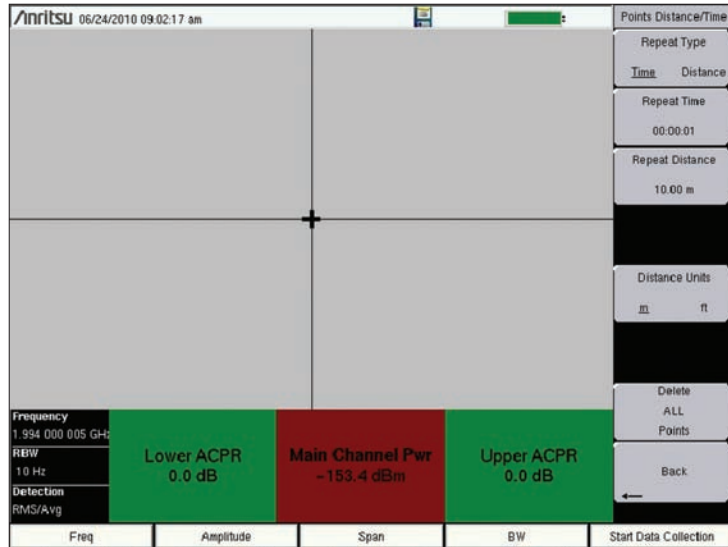


Figure 5: Data Collection Settings

Turning on GPS

In order to coverage map with GPS, Option 31 (GPS), is required. To turn the GPS on, press **Shift + System (8)**, and then the **GPS** soft key. In the GPS sub-menu, you can turn the GPS on or off, view GPS info, change the GPS Voltage, or reset the GPS.

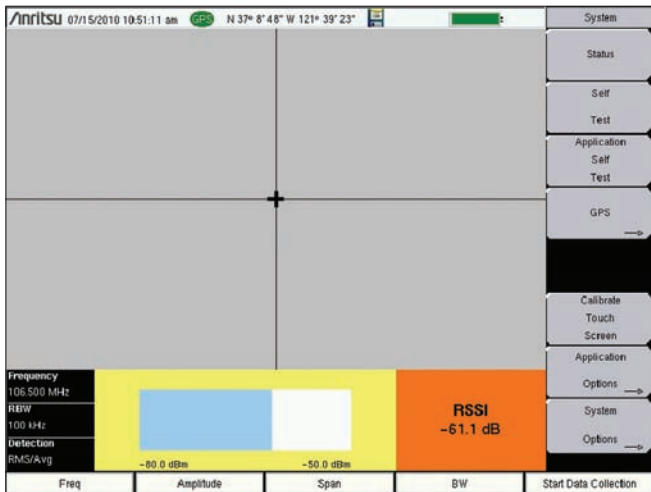


Figure 6: System Menu

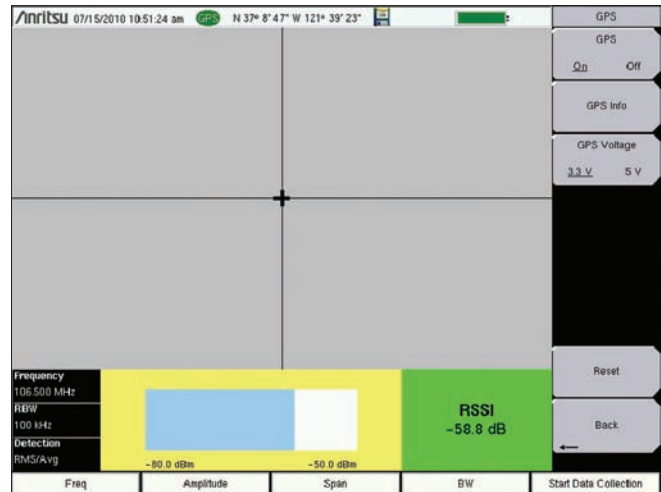


Figure 7: GPS Sub-Menu

The GPS sub-menu contains options essential for coverage mapping with GPS.

GPS Mapping

To begin Coverage Mapping, you first must open the MAP (.map) file created earlier. Insert the USB flash drive into the USB port of the instrument. From there, at the Coverage Mapping menu, touch **Save/Recall Points/Map**. In the Mapping Save/Recall submenu, touch **Recall a Map**. Find the file from the USB you inserted, and press **Enter** on the keypad. The map should now appear on the screen. If not done so already, the instrument will attempt to lock the GPS by tracking at least three satellites. Your location will then be set for you by the instrument relative to the map. Once that's done, touch the **Start Data Collection** key to get started. The instrument will automatically update your location and record points as you move. Once all the needed points have been plotted, press **Stop Data Collection** to finish.

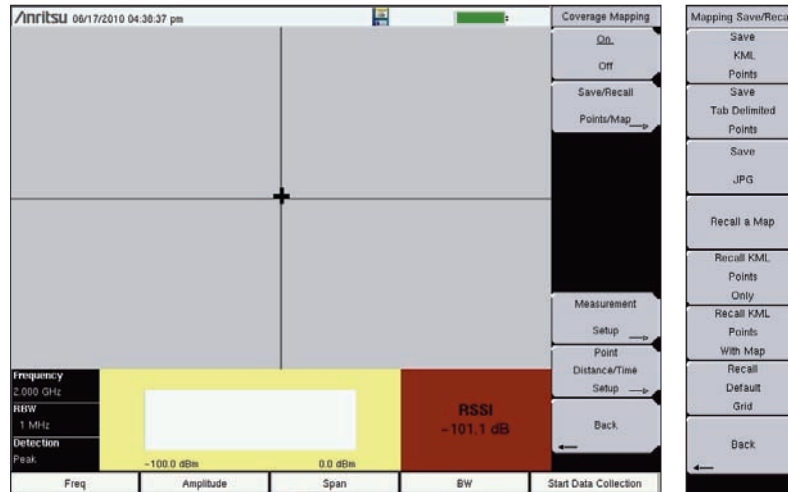


Figure 8: Recalling a Map

From the Coverage Mapping menu, select **Save/Recall Points/Map** and in the next menu, **Recall a Map**.

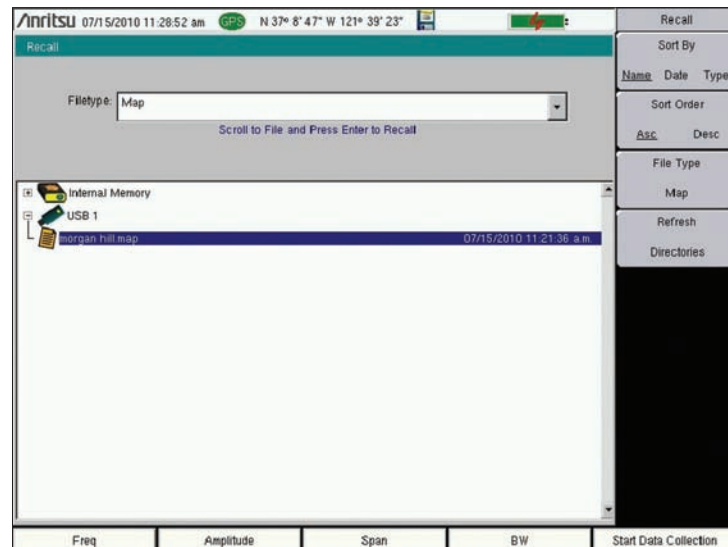


Figure 9: Selecting MAP file

Select the MAP (.map) file from the USB and press **Enter** on the keypad.

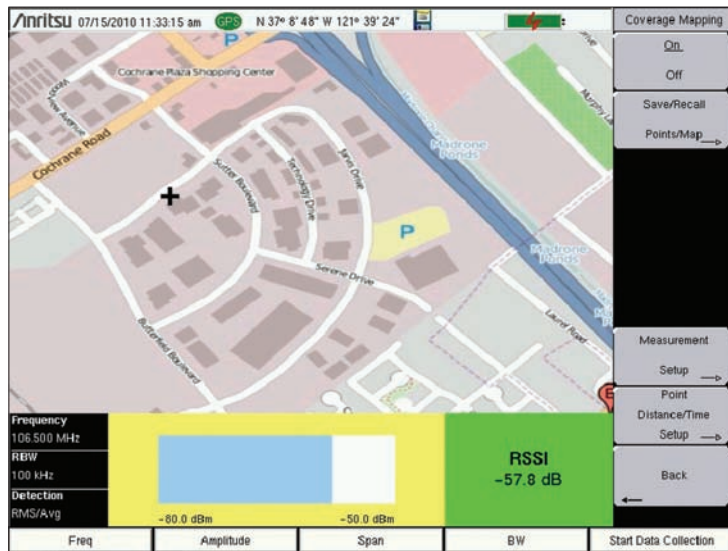


Figure 10: Position

With the map on the screen, the instrument automatically pinpoints your location relative to the map.

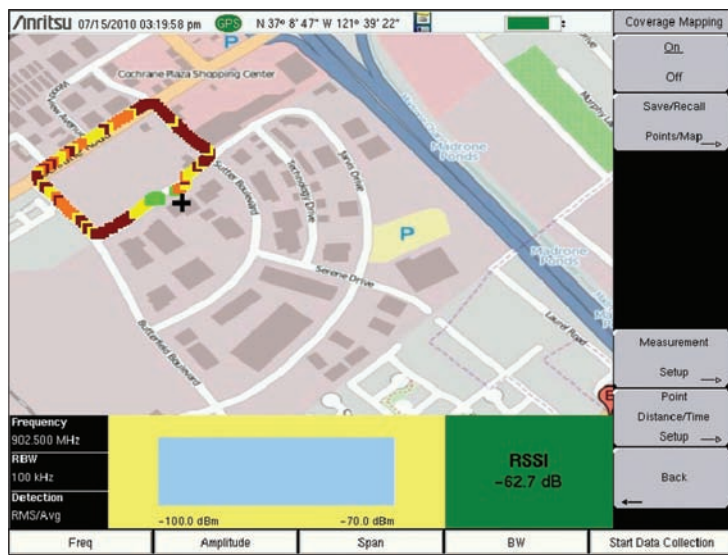


Figure 11: GPS Mapping

When you press **Start Data Collection**, the instrument begins plotting the points. Once you are finished mapping, press **Stop Data Collection** to finish.

Saving the Data Collected

Once Data Collection is complete, the data points can be saved as a KML file, a tab delimited text file (.mtd), and/or a JPEG. When it is saved as a KML file, the data points can be later recalled by the instrument to be used once again, and when coverage mapped with the GPS option, the file can also be opened by Google Earth. For viewing the data collected however, it is recommended that the data be saved as a tab delimited file (.mtd). A tab delimited file can be opened with notepad or Excel for easy viewing and report generation.

To begin, access the Mapping Save/Recall submenu from the Coverage Mapping Menu. From there, touch **Save KML Points**, **Save Tab Delimited Points**, or **Save JPG**. A pop-up save prompt comes up, where the filename and file type can be changed. Once finished, press enter on the keypad or touch screen to save. The file can then be copied to the USB, transferred and opened.

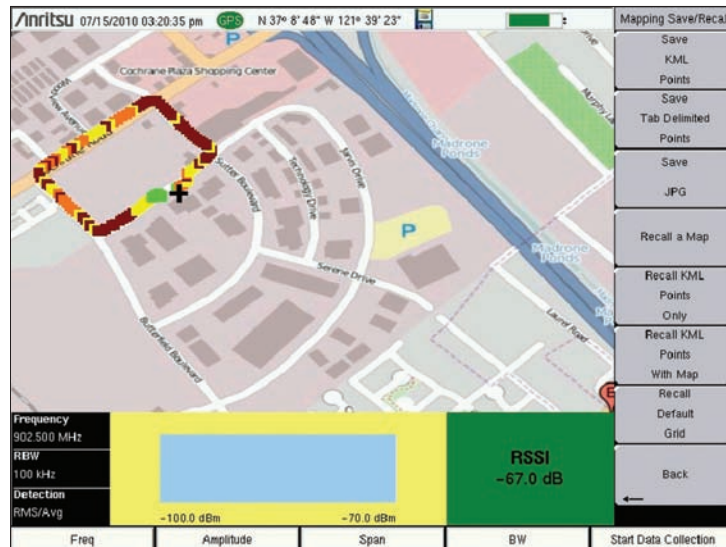


Figure 12: Saving Data Points

Access the Mapping Save/Recall submenu from the Coverage Mapping Menu.

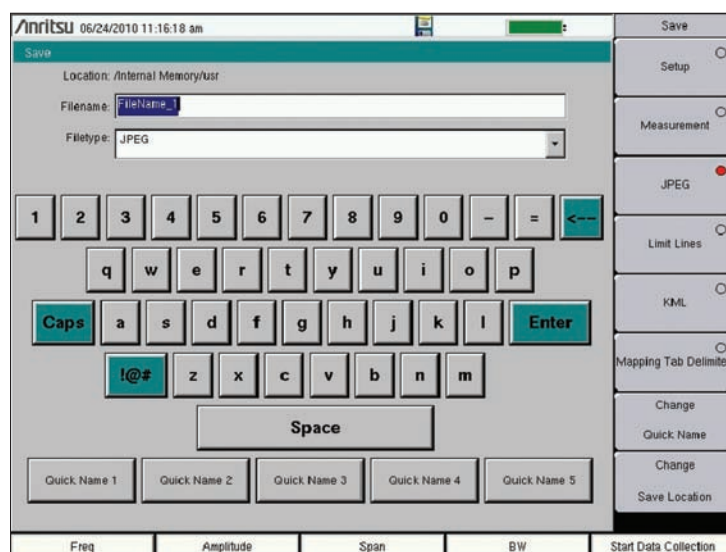


Figure 13: Saving the File

Change the needed fields, and press **Enter** in order to save the file.

Analyzing the Data

When saved as a tab delimited file (.mtd), the points recorded by the instrument can later be opened by a program such as Excel, to be viewed and analyzed.

Once opened, looking at the file from top to bottom, the first things you see are the rows 1-16. It has basic information, such as the file mode, model, serial number, and date the mapping was done. The actual data below is divided into columns. Columns A-F is only relevant when coverage mapping with GPS, but the columns G-AE pertain to both coverage mapping methods.

Column A- the point number

Column B- the status of the GPS

Column C- the longitude

Column D- the latitude

Column E- the UTC date

Column F- the UTC time

Column G- the system date

Column H- the system time

Column I- the mode the instrument was in

Column J- what type of data was collected

Column K- the values recorded by the instrument

Columns L-AE corresponds to the setup of the instrument. The way that the setup is organized, columns N, P, R, and T have the actual setting values, and the preceding columns indicate the user of what exactly the following values mean.

Column N- the frequency

Column P- the RBW setting

Column R- the VBW setting

Column T- the detection type

The columns U-AC shows the threshold values designated by the user earlier. You can look at the value placed in column K and refer to columns U-AC to determine the strength of the RF power measurement. At the very end, in the column AE, errors, if any, are listed. There are three possible values: ADC over range; saturation; and none.

The colors shown by the instrument provide easy viewing for the user when determining signal strength, but by viewing the file as a tab delimited file, the actual raw data can be seen.

The screenshot shows an Excel spreadsheet with the following data structure:

#Pt	GPS Stat	Longitude	Latitude	UTC Date	UTC Time	System D	System T	Measurement	RSSI	Setup	Frequenc	RBW	VBW	10 Hz	Detection	Rh
Point# 1	GPS Lock	-121.657	37.14698	7/15/2010	22:12:55	7/15/2010	15:12:36	Spectrum	-72.6	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 2	GPS Lock	-121.656	37.14703	7/15/2010	22:13:01	7/15/2010	15:12:42	Spectrum	-80	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 3	GPS Lock	-121.656	37.1471	7/15/2010	22:13:03	7/15/2010	15:12:45	Spectrum	-82	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 4	GPS Lock	-121.656	37.14718	7/15/2010	22:13:06	7/15/2010	15:12:48	Spectrum	-96.5	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 5	GPS Lock	-121.656	37.14725	7/15/2010	22:13:10	7/15/2010	15:12:51	Spectrum	-93.6	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 6	GPS Lock	-121.656	37.14736	7/15/2010	22:13:14	7/15/2010	15:12:55	Spectrum	-107.1	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 7	GPS Lock	-121.656	37.14746	7/15/2010	22:13:17	7/15/2010	15:12:59	Spectrum	-85.5	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 8	GPS Lock	-121.656	37.14752	7/15/2010	22:13:19	7/15/2010	15:13:01	Spectrum	-91.2	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 9	GPS Lock	-121.656	37.1476	7/15/2010	22:13:22	7/15/2010	15:13:03	Spectrum	-93.4	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 10	GPS Lock	-121.656	37.14769	7/15/2010	22:13:23	7/15/2010	15:13:05	Spectrum	-96.6	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 11	GPS Lock	-121.656	37.14778	7/15/2010	22:13:25	7/15/2010	15:13:07	Spectrum	-100.5	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 12	GPS Lock	-121.656	37.14787	7/15/2010	22:13:28	7/15/2010	15:13:09	Spectrum	-99.9	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 13	GPS Lock	-121.656	37.14796	7/15/2010	22:13:30	7/15/2010	15:13:11	Spectrum	-106.4	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 14	GPS Lock	-121.656	37.14804	7/15/2010	22:13:32	7/15/2010	15:13:13	Spectrum	-109.7	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 15	GPS Lock	-121.656	37.14812	7/15/2010	22:13:37	7/15/2010	15:13:18	Spectrum	-101	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 16	GPS Lock	-121.656	37.1482	7/15/2010	22:13:39	7/15/2010	15:13:20	Spectrum	-106.1	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 17	GPS Lock	-121.656	37.14832	7/15/2010	22:13:41	7/15/2010	15:13:22	Spectrum	-98.4	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 18	GPS Lock	-121.656	37.14843	7/15/2010	22:13:43	7/15/2010	15:13:24	Spectrum	-108.9	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 19	GPS Lock	-121.656	37.14848	7/15/2010	22:13:44	7/15/2010	15:13:25	Spectrum	-110.1	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 20	GPS Lock	-121.656	37.14854	7/15/2010	22:13:45	7/15/2010	15:13:26	Spectrum	-110.9	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 21	GPS Lock	-121.656	37.14861	7/15/2010	22:13:46	7/15/2010	15:13:27	Spectrum	-108.9	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 22	GPS Lock	-121.656	37.14869	7/15/2010	22:13:46	7/15/2010	15:13:28	Spectrum	-110.2	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 23	GPS Lock	-121.656	37.14876	7/15/2010	22:13:47	7/15/2010	15:13:29	Spectrum	-108.6	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 24	GPS Lock	-121.656	37.14883	7/15/2010	22:13:49	7/15/2010	15:13:30	Spectrum	-108.8	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh
Point# 25	GPS Lock	-121.656	37.14892	7/15/2010	22:13:50	7/15/2010	15:13:31	Spectrum	-106.1	Setup:	902.500 M	100 kHz	VBW	10 Hz	Detection	Rh

Figure 14: Viewing the Data

The data can then be opened by other software programs for analysis and report generation.

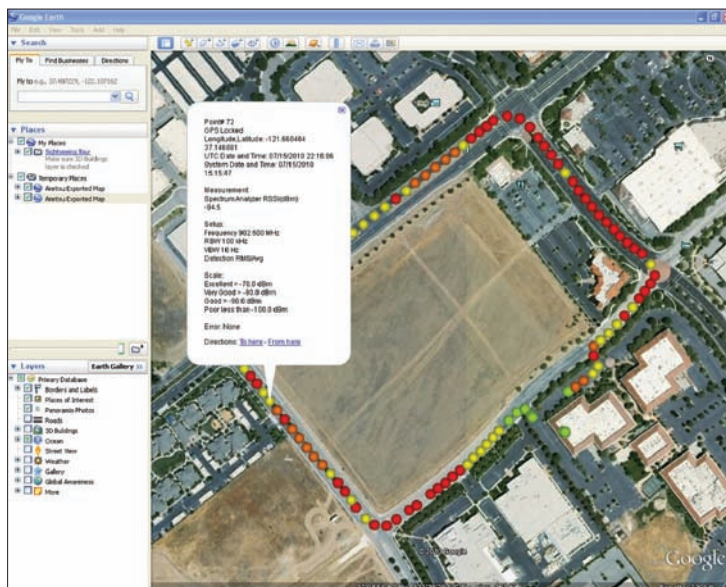


Figure 15: Google Earth

With Google Earth, you can open a saved KML file transferred from the device to your computer. Simply double-click the KML file and Google Earth will run and show the points in a Digital Orthophoto Quadrangle (DOQ) format. You can click on the points to see both the colors for easy analyzing, as well as the more specific values given by a tab delimited file.

To install Google Earth, go to the web site: <http://earth.google.com/>. Download the program and then install it to your computer. Additional help may be found through the Help pull-down menu.

Conclusion

Most wireless communications systems are designed to provide coverage over a predetermined area and not interfere with distant systems using the same frequencies. Coverage estimation software must make assumptions about loss due to terrain, buildings and other factors. If the assumptions are not accurate, the actual coverage of a system will differ from the design. Mapping the coverage with a precision receiver provides the ultimate proof and can help separate interference issues from signal strength problems.

The Anritsu E-Series Spectrum Master™, Cell Master™, and Site Master™ models are powerful battery operated instruments that can support a wide range of signal types. With the addition of Option 431, and the power of GPS (Option 31), Coverage Mapping users can easily make signal strength measurements and create detailed maps and reports of system coverage.

Notes

Anritsu

Anritsu Corporation

5-1-1 Onna, Atsugi-shi, Kanagawa, 243-8555 Japan
Phone: +81-46-223-1111
Fax: +81-46-296-1238

• U.S.A.

Anritsu Company

1155 East Collins Boulevard, Suite 100,
Richardson, TX, 75081 U.S.A.
Toll Free: 1-800-ANRITSU (267-4878)
Phone: +1-972-644-1777
Fax: +1-972-671-1877

• Canada

Anritsu Electronics Ltd.

700 Silver Seven Road, Suite 120, Kanata,
Ontario K2V 1C3, Canada
Phone: +1-613-591-2003
Fax: +1-613-591-1006

• Brazil

Anritsu Eletrônica Ltda.

Praça Amadeu Amaral, 27 - 1 Andar
01327-010 - Bela Vista - São Paulo - SP - Brasil
Phone: +55-11-3283-2511
Fax: +55-11-3288-6940

• Mexico

Anritsu Company, S.A. de C.V.

Av. Ejército Nacional No. 579 Piso 9, Col. Granada
11520 México, D.F., México
Phone: +52-55-1101-2370
Fax: +52-55-5254-3147

• U.K.

Anritsu EMEA Ltd.

200 Capability Green, Luton, Bedfordshire LU1 3LU, U.K.
Phone: +44-1582-433280
Fax: +44-1582-731303

• France

Anritsu S.A.

12 Avenue du Québec,
Bâtiment Iris 1-Silic 638,
91140 VILLEBON SUR YVETTE, France
Phone: +33-1-60-92-15-50
Fax: +33-1-64-46-10-65

• Germany

Anritsu GmbH

Nemetschek Haus, Konrad-Zuse-Platz 1
81829 München, Germany
Phone: +49 (0) 89 442308-0
Fax: +49 (0) 89 442308-55

• Italy

Anritsu S.p.A.

Via Elio Vittorini, 129, 00144 Roma, Italy
Phone: +39-06-509-9711
Fax: +39-06-502-2425

• Sweden

Anritsu AB

Borgarfjordsgatan 13, 164 40 KISTA, Sweden
Phone: +46-8-534-707-00
Fax: +46-8-534-707-30

• Finland

Anritsu AB

Teknobulevardi 3-5, FI-01530 VANTAA, Finland
Phone: +358-20-741-8100
Fax: +358-20-741-8111

• Denmark

Anritsu A/S (for Service Assurance)

Anritsu AB (for Test & Measurement)

Kirkebjerg Allé 90 DK-2605 Brøndby, Denmark
Phone: +45-7211-2200
Fax: +45-7211-2210

• Russia

Anritsu EMEA Ltd.

Representation Office in Russia

Tverskaya str. 16/2, bld. 1, 7th floor.
Russia, 125009, Moscow
Phone: +7-495-363-1694
Fax: +7-495-935-8962

• United Arab Emirates

Anritsu EMEA Ltd.

Dubai Liaison Office

P O Box 500413 - Dubai Internet City
Al Thuraya Building, Tower 1, Suite 701, 7th Floor
Dubai, United Arab Emirates
Phone: +971-4-3670352
Fax: +971-4-3688460

• Singapore

Anritsu Pte. Ltd.

60 Alexandra Terrace, #02-08, The Comtech (Lobby A)
Singapore 118502
Phone: +65-6282-2400
Fax: +65-6282-2533

• India

Anritsu Pte. Ltd.

India Branch Office

3rd Floor, Shri Lakshminarayan Niwas, #2726, 80 ft Road,
HAL 3rd Stage, Bangalore - 560 075, India
Phone: +91-80-4058-1300
Fax: +91-80-4058-1301

• P. R. China (Hong Kong)

Anritsu Company Ltd.

Units 4 & 5, 28th Floor, Greenfield Tower, Concordia Plaza,
No. 1 Science Museum Road, Tsim Sha Tsui East,
Kowloon, Hong Kong, P.R. China
Phone: +852-2301-4980
Fax: +852-2301-3545

• P. R. China (Beijing)

Anritsu Company Ltd.

Beijing Representative Office

Room 2008, Beijing Fortune Building,
No. 5, Dong-San-Huan Bei Road,
Chao-Yang District, Beijing 100004, P.R. China
Phone: +86-10-6590-9230
Fax: +86-10-6590-9235

• Korea

Anritsu Corporation, Ltd.

8F Hyunjuk Bldg, 832-41, Yeoksam-Dong,
Kangnam-ku, Seoul, 135-080, Korea
Phone: +82-2-553-6603
Fax: +82-2-553-6604

• Australia

Anritsu Pty Ltd.

Unit 21/270 Ferntree Gully Road, Notting Hill
Victoria, 3168, Australia
Phone: +61-3-9558-8177
Fax: +61-3-9558-8255

• Taiwan

Anritsu Company Inc.

7F, No. 316, Sec. 1, Neihu Rd., Taipei 114, Taiwan
Phone: +886-2-8751-1816
Fax: +886-2-8751-1817

