



# Quick Reference Card


Please consult your spa user manual for complete info on the features of your spa system.



## in.k800™ intuitive color keypad

With its bright, full color display, the in.k800 provides an intuitive user experience, while its screen's high resolution brings hot tub user interfaces to a new level. Loaded with a large amount of memory and a powerful on-board processor we have created the seamless graphic interface that spa users have been waiting for.

### Description

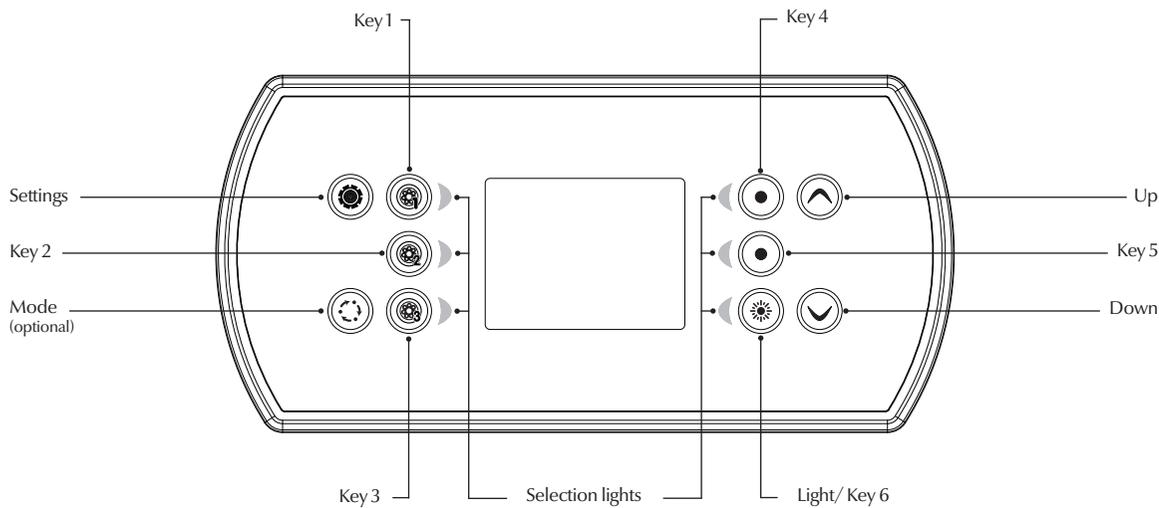

*\*Functions for keys 1 to 5 will depend on your system's low level configuration.*

### Main functions



#### Power

Press any button to turn the keypad on. After 30 minutes without activity it will shut off.

#### Main screen

The main screen gives you access to your accessories and water temperature. At the bottom of the screen you will see any error or maintenance messages that are present.



#### Start or stop accessories

To start or stop an accessory, press the associated button. Icons will become animated when their accessory is turned on, and inanimate when turned off. Icons on the screen will reflect the speed or state of the devices running on your spa.

When an accessory has more than two states, press the button until it reaches the desired state.



#### Water temperature

The temperature shown at the bottom of the screen gives the actual water temperature. Use the Up and Down buttons to set the desired temperature. The set point will appear in blue. After 3 seconds without any change to the set temperature value, the current water temperature will reappear.

## Settings



### Settings

From the home page you can access the *Settings*, where you will find:

- *Water care*
- *Audio*
- *Date and Time*
- *Keypad Settings*
- *Electrical Configuration*
- *About*

Use the arrow keys to move up and down in the list. To select an option, press the lit button beside it (key 2).

At any point you can press the Settings button to return to the home screen.



### Water care

The Water Care section will help you set up your ideal filtration and heating settings. Choose a mode depending on your need.

Use key 2 to choose your setting. A checkmark will appear on the selected icon to confirm.

In Energy Savings mode, the set point will be reduced by 20°F\*, which means that the heating system will not be engaged unless the temperature falls to 20°F below the spa's set temperature.

If your spa uses a circulation pump configured to run 24 hours, the screen will show you the purge setting instead of filtration. The purges are pre-programmed for a fixed number of minutes, therefore the duration will be set to N/A on the screen, and only the start time can be modified.

\*Default pack value

### Water care modes



#### Away from home:

In this mode the spa will always be in economy; the set point will be reduced by 20° F and filtration will be reduced.



#### Beginner:

The spa will never be in economy mode, and will run a normal 8 hours of filtration a day.



#### Energy Savings:

The spa will be in economy mode during the peak hours of the day and resume normal mode on the weekend.



#### Super Energy Savings:

The spa will be in economy mode during peak hours, every day of the week.



#### Weekender:

The spa will be in economy mode from Monday to Friday, and will run normally on the weekend.



### Modifying schedules

To modify a Water Care category, use the lit button to the right (key 5) to open the selected Water Care menu.

You can add schedules by scrolling down to Add, and selecting with key 2.

To delete a schedule, press the lit button next to the garbage can icon on the top right of the screen.

You can modify the programmed schedules by selecting one and adjusting the schedule using the arrow keys. Use key 2 to move between parameters.

You have several possibilities for the schedule (Mon-Fri, weekend, every day, or single days). The schedules will be repeated every week. The time and duration are set in 30 minute increments. Once you have set the schedule, use key 1 to go back. Ensure that you have selected the desired Water Care option in the main Water Care menu.



### Date and time

Here you can adjust the time format, and change the year, date, and time. Use the arrows to choose the setting that you want to adjust, and select it by pressing key 2. Use the arrow buttons to change the parameters, and key 2 to move between parameters. Key 1 will take you back to the main Settings menu.



### Keypad settings

In this section you can change the temperature unit and language. Use the arrow keys, and move to the setting that you would like to change. Use key 2 to choose, and then the arrow keys to modify.



### Electrical configuration

Please do not make changes in this section unless you are a qualified electrician.

In this section you can change the low-level configuration, number of phases, and input current. Use the arrow keys to scroll between selections, key 2 to choose and move between parameters.

Please refer to the TechBook for your specific spa pack for details about the low level settings.

Once you have reached Number of Phases in the menu, you cannot use the arrow keys to go back up to Low-level Configuration. Please go back and re-enter the Electrical Config menu.



### About

This section shows information about the in.k800 software number, and the revision numbers of the different components of your system.

## Audio



### Audio

The in.k800 can be used with either the in.tune or in.stream audio system. The Audio section in the Settings menu gives you the option to disconnect or unpair your Bluetooth enabled device when using the in.stream.

The Mode key (audio access) is only present/functional when the spa is equipped with a Gecko audio component (in.stream or in.tune). The keypad will be set appropriately in the factory.



### in.tune operation

Press the Mode key to access your in.tune.

#### Turning power on/off

Press the Power key to turn the in.tune on or off.

#### Selecting the source

Press the Source key to choose between CD, Auxiliary input, and Radio. If no source is selected, the in.tune will use the last selected source.

#### Play/Pause audio

Press the Play/Pause key to start or pause the audio.

#### Adjusting the volume

Press the Volume Up or the Volume Down key to increase or decrease the volume.

#### Changing tracks

Use the Last Track and Next Track keys to change tracks for the CD or AUX input. When in Radio mode, the Last Track and Next Track keys will move through preset radio stations on the selected band. To change bands or preset stations, see your in.tune manual.



### in.stream operation

Press the Mode key to access your in.stream.

If you are using a device with Bluetooth technology, it must be connected for functions to work.

Please note that the Play/Pause and Change Track functions apply to devices using Bluetooth technology only, and will not work when AUX is selected as the source.

#### Selecting the source

Press the Bluetooth key to select a device using Bluetooth wireless technology. Press the Source key to use a device connected to the auxiliary cable. If no source is selected, the in.stream system will use the last selected source.

#### Play/Pause audio

Press the Play/Pause button to start or pause the audio

#### Adjusting the volume

Press the Volume Up or the Volume Down key to increase or decrease the volume.

#### Changing tracks

Use the Last Track and Next Track keys to change tracks

#### Disconnect or Unpair Bluetooth

These options can be found under the Audio section in the Settings menu.

