



Sine Voltage Powered 3-Phase Permanent Magnet Synchronous Motor with Hall Sensors

Designer Reference Manual

M68HC08 Microcontrollers

DRM036/D Rev. 0, 03/2003

MOTOROLA.COM/SEMICONDUCTORS

Sine Voltage Powered 3-Phase Permanent Magnet Synchronous Motor with Hall Sensors

Designer Reference Manual — Rev 0

by: Jiri Ryba Motorola Czech Systems Laboratories Roznov pod Radhostem, The Czech Republic

DRM036 — Rev 0

MOTOROLA

Revision history

To provide the most up-to-date information, the revision of our documents on the World Wide Web will be the most current. Your printed copy may be an earlier revision. To verify you have the latest information available, refer to:

http://www.motorola.com/semiconductors

The following revision history table summarizes changes contained in this document. For your convenience, the page number designators have been linked to the appropriate location.

Revision history

Date	Revision Level	Description	Page Number(s)
January, 2003	1	Initial revision	N/A

Designer Reference Manual

DRM036 — Rev 0

MOTOROLA

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

List of Sections

Section 1. Introduction	13
Section 2. System Description	17
Section 3. Hardware Design	25
Section 4. Software Design	35
Section 5. Application Setup	47
Appendix A. References	57
Appendix B. Glossary	59

DRM036 — Rev 0

MOTOROLA

List of Sections

Designer Reference Manual

DRM036 — Rev 0

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

Table of Contents

Section 1. Introduction

Section 2. System Description				
1.4	68HC908MR32 Features14			
1.3	Brief Description			
1.2	Overview			
1.1	Contents			

2.1	Contents
2.2	Application Features17
2.3	Target Motor Theory

Section 3. Hardware Design

3.1	Contents
3.2	Hardware Configuration25
3.3	MC68HC908MR32 Control Board26
3.4	3-Phase BLDC Low Voltage Power Stage
3.5	EVM Motor Board
3.6	Hardware Documentation

Section 4. Software Design

4.1	Contents	35
4.2	Software Design	35
4.3	Software Data Flow	35

DRM036	 Rev	0
		-

Tab	le of	Cont	ents

4.4	Software Processes			
4.5	PC Master Software (Remote) Operating Mode			
Section 5. Application Setup				
5.1	Contents			
5.2	Warning			
5.3	Hardware Setup			
5.4	Software Setup			
5.5	Executing the Application			

Appendix A. References

Appendix B. Glossary

Designer Reference Manual

DRM036 — Rev 0

MOTOROLA

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

List of Tables

Table	Title	Page
3-1	Electrical Characteristics of Control Board	28
3-2	Electrical Characteristics of the 3-Ph BLDC	
	Low Voltage Power Stage	30
3-3	Electrical Characteristics of the EVM Motor Board	31
3-4	Characteristics of the BLDC motor	32
5-1	MCHC908MR32 Board Jumper Settings	49
5-2	Motor Application States	52

DRM036 — Rev 0

MOTOROLA

List of Tables

Designer Reference Manual

DRM036 — Rev 0

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

List of Figures

Figu	re Title	Page
2-1	System Concept	19
2-2	Three Phase Permanent Magnet Motor - Cross Section	20
2-3	Voltage is 90° Relative to Rotor Flux	22
2-4	Stator Current is 90° Relative to Rotor Flux	23
2-5	Voltage Vector in the Direction of the Current Vector	23
3-1	H/W System Configuration	26
3-2	MC68HC908MR32 Control Board	27
3-3	Block Diagram	29
4-1	Main Data Flow	36
4-2	Calculation of Hall Sensor Period	38
4-3	Difference between Motor Position	
	and Generated Sine Wave	39
4-4	Control with Minimal Reactive Power	42
4-5	Measured Reactive Power for Different Torque and Speed	143
5-1	H/W System Configuration	48
5-2	MC68HC908MR32 Jumper Reference	49
5-3	Target Build Selection	51
5-4	MC68HC908MR32 Board - Control Elements	53
5-5	USER LEDs, PWM LEDs, and RESET	53
5-6	PC master software control window	55

List of Figures

Designer Reference Manual

DRM036 — Rev 0

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

Section 1. Introduction

1.1 Contents

1.2	Overview	13
1.3	Brief Description	13
1.4	68HC908MR32 Features	14

1.2 Overview

This reference design describes the control of a 3-phase PMS (Permanent Magnet Synchronous) motor with Hall sensors powered by a sine voltage. It is based on Motorola's 68HC908MR32 microcontroller dedicated for motor control applications. This reference design includes a brief description of the Motorola 68HC908MR32 features, basic motor theory, system design concept, hardware implementation and software design including the PC Master visualization tool.

1.3 Brief Description

The application demonstrates the control of a 3-phase permanent magnet synchronous drive with Hall sensors. It is based on Motorola's MC68HC908MR32 microcontroller.

The application is designed to get the lowest possible audible noise level of the motor. The motor is powered by a sinusiodal voltage. The position of the rotor is sensed by means of Hall-effect sensors. The generated voltage waveform is synchronized with the rotor position by a phase-locked loop algorithm (PLL). The motor speed is controlled by means of the voltage amplitude. The voltage frequency is generated to match the actual speed of the motor. It allows both closed and open-loop

DRM036 — Rev 0

Introduction

speed control. This PMS motor control application with Hall sensors operates in two modes:

- 1. Manual operating mode
- 2. PC master software (remote) operating mode

1.4 68HC908MR32 Features

The MC68HC908MR32 is a member of the low-cost, high-performance M68HC08 Family of 8-bit microcontroller units (MCUs). The M68HC08 Family is based on the customer-specified integrated circuit (CISC) design strategy. All MCUs in the family use the enhanced M68HC08 central processor unit (CPU08) and are available with a variety of modules, memory sizes and types, and package types:

Features of the MC68HC908MR32 include:

- High-performance M68HC08 architecture
- Fully upward-compatible object code with M6805, M146805, and M68HC05 Families
- 8-MHz internal bus frequency
- 32Kbytes of on-chip electrically erasable in-circuit programmable Read Only Memory (FLASH)
- On-chip programming firmware for use with host personal computer
- Flash data security
- 768 bytes of on-chip Random Access Memory (RAM)
- 12-bit, 6-channel center-aligned or edge-aligned pulse width modulator with optional independent and complementary mode
- Serial peripheral interface module (SPI)
- Serial communications interface module (SCI)
- 16-bit, 4-channel timer interface module (TIMA)
- 16-bit, 2-channel timer interface module (TIMB)
- Clock generator module (CGM)

Designer Reference Manual

DRM036 — Rev 0

- Low-voltage inhibit (LVi) module with software selectable trip points
- 10-bit, 10-channel analog-to-digital converter (ADC) with multiplexed inputs
- Computer operating properly (COP) watchdog timer

DRM036 — Rev 0

Designer Reference Manual

Introduction For More Information On This Product, Go to: www.freescale.com

Introduction

Designer Reference Manual

DRM036 — Rev 0

MOTOROLA

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

Section 2. System Description

2.1 Contents

2.2	Application Features1	7
2.3	Target Motor Theory	20

2.2 Application Features

The control strategy is designed to optimally utilize features of controller 68HC908MR32. The application provides following features:

- sine voltage powered 3-phase PM synchronous motor
- position sensing using three Hall sensors
- low audible noise of motor
- closed or open speed loop operation
- high motor efficiency
- motor deceleration (energy is returned to the dc-bus)
- DC-Bus voltage ripple cancellation
- manual (speed pot, start-stop switch) / PC master control (RS 232)
- recognition of the spinning motor after CPU reset
- limitation of dc-bus over-voltage during deceleration
- over voltage protection
- over current protection
- dc-bus voltage sensing
- PC master software

- memory requirements
 - RAM 135 Bytes
 - Flash 3485 Bytes

The **Figure 2-1** shows the system concept of the designed application. The application was designed to control a PMS motor driving a ventilator. Speed of the motor is controlled by the amplitude of the voltage vector. The direction of the voltage vector depends on the rotor position. The PLL is used to synchronize the calculated vector position with the actual one. The calculated position is updated in PWM reload at 16kHz. The position resolution is 2¹⁶ points per period.

This application uses the Hall sensors to obtain the rotor position. The Hall sensor consists of three sensors (Sensor A, Sensor B, Sensor C). The HC908MR32 control board contains EOR logic, which reflect change of any sensor to the one output. This output is connected to the Timer A channel 2. The example application, which is a subject of this design uses three hall sensors, however, the control algorithm can be used to control a motor having only one Hall senor. In this case the merits of this design are much more obvious.

The PI controller is used to control the speed of motor. The output of the controller sets the desired value of the phase voltage amplitude. The voltage ripple cancellation block recalculates the absolute voltage value to the value, which is relative to the actual dc-bus voltage level. This minimizes the influence of the dc-bus voltage changes (ripples) to the generated phase voltage.

The deceleration control algorithm controls the deceleration of the motor to avoid dc-bus over-voltage. In this application the maximum voltage is kept at 16V.

The application also contains PC master software, which supports communication between the target microcontroller and PC via an RS232 serial interface. This tool allows a real- time access to any memory location of the target processor. The user can debug or remotely control the application, using a user-friendly graphical interface.

Designer Reference Manual

DRM036/D - Rev 0



Figure 2-1. System Concept

DRM036/D — Rev 0

MOTOROLA

System Description

2.3 Target Motor Theory

The PMS (Permanent Magnet Synchronous) motor is a rotating electric machine where the stator is a classic three phase stator like that of an induction motor and the rotor has surface-mounted permanent magnets. In this respect, the PMS motor is equivalent to an induction motor where the air gap magnetic field is produced by a permanent magnet (see Figure 2-2). The use of a permanent magnet to generate a substantial air gap magnetic flux makes it possible to design highly efficient PMS motors. The PMS motors provide a range of advantages in the design of modern motion control systems, such as high efficiency, high torque per volume and low moment of inertia.



Figure 2-2. Three Phase Permanent Magnet Motor - Cross Section

A PMS motor is driven by sine wave voltage coupled with the given rotor position. The generated stator flux together with the rotor flux, which is generated by a rotor magnet, defines the torque, and thus speed, of the motor. The sine wave voltage output have to be applied to the 3-phase winding system in a way that angle between the stator flux and the rotor flux is kept close to 90° to get the maximum generated torque. To meet this criterion, the motor requires electronic control for proper operation. To perform electronic control the rotor position has to be either sensed

Designer Reference Manual

DRM036/D - Rev 0

by position sensors or calculated by means of sensorless control algorithm.

The presented application uses the Hall sensors to sense actual position of the rotor. The sensor output is read by the MCU, and used for synchronizing the generated sine wave.

The PMS motor model is defined by the following equations:

$$\vec{U}_{s} = r_{s} \cdot \vec{I}_{s} + \frac{\vec{d\psi}_{s}}{dt}$$
 (EQ 2-1.)

$$\vec{\Psi}_{s} = L_{s} \cdot \vec{I}_{s} + \vec{\Psi}_{r}$$
 (EQ 2-2.)

$$T_{e} = \left| \vec{I}_{s} \right| \cdot \left| \vec{\psi} \right| \cdot \sin(\angle \vec{I}_{s}, \vec{\psi}) = \left| \vec{I}_{s} \right| \cdot \left| \vec{\psi}_{r} \right| \cdot \sin(\angle \vec{I}_{s}, \vec{\psi}_{r})$$
(EQ 2-3.)

where:

- $\vec{U_s}$ Space vector of stator voltage
- \vec{I}_s Space vector of stator current
- r_s- Stator resistance
- Ψ Space vector of magnetic flux
- $\vec{\Psi_r}$ Space vector of rotor magnetic flux evoked by the permanent magnet
- T_e Electrical torque
- $\angle \vec{i_s}, \vec{\psi_r}$ is angle between vectors of stator current and rotor magnetic flux

The speed of the motor can be controlled by an amplitude of the voltage vector, while the direction of the voltage vector depends on the rotor position. Several methods can be used to control the voltage vector direction.

The three basic method are:

 vector of stator voltage is placed 90° relative to the vector of rotor magnetic flux

System Description

- vector of stator current is kept 90° relative to the vector of rotor magnetic flux
- 3. voltage vector is kept in the direction of the current vector.

It is desired to run the motor with maximum efficiency. In this case, the angle of current is higher than 90° relative to the rotor magnetic flux, but lower than in method 3, where the current has the same direction as the voltage. The motor parameters have to be known, or some experimental control strategy has to be used to achieve this criterion.

2.3.1 Vector of Stator Voltage Is Placed 90° Relative to the Vector of Rotor Magnetic Flux

The control strategy keeps the vector of stator voltage at 90° relative to the vector of rotor magnetic flux. This control strategy is shown in **Figure 2-3**. The advantage of this strategy is a simplicity. The only feedback signal needed for driving the motor is the rotor position. The presented application is based on this control strategy with some enhancements to achieve the best efficiency of the motor.



Figure 2-3. Voltage is 90° Relative to Rotor Flux

2.3.2 Vector of Stator Current Is Kept 90° Relative to the Vector of Rotor Magnetic Flux

This situation is shown in **Figure 2-4**. As can be seen from equation **(EQ 2-3.)** the optimal torque is generated when the vector of the stator

Designer Reference Manual

DRM036/D - Rev 0

System Description Target Motor Theory

current is placed 90° relative to the rotor magnetic flux space-vector. In this case the maximal utilization of the motor's magnetic is obtained. The control strategy requires current sensing.



Figure 2-4. Stator Current is 90° Relative to Rotor Flux

2.3.3 Vector of Stator Voltage Is Kept in the Direction of the Current Vector

This situation is shown in **Figure 2-5**. This control strategy keeps the current vector in the direction of the voltage vector. In this case the electrical losses are minimized. Current sensing is also required.



Figure 2-5. Voltage Vector in the Direction of the Current Vector

DRM036/D - Rev 0

MOTOROLA

System Description

Designer Reference Manual

DRM036/D - Rev 0

MOTOROLA

24

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

Section 3. Hardware Design

3.1 Contents

3.2	Hardware Configuration25
3.3	MC68HC908MR32 Control Board26
3.4	3-Phase BLDC Low Voltage Power Stage
3.5	EVM Motor Board
3.6	Hardware Documentation

3.2 Hardware Configuration

The system configuration is shown in Figure 3-1 It consists of:

- 68HC908MR32 controller board
- Power Stage (3-phase BLDC Low Voltage Power Stage or EVM Motor Board)
- 3ph PM synchronous motor with three Hall sensors

DRM036 — Rev 0

Hardware Design



Figure 3-1. H/W System Configuration

3.3 MC68HC908MR32 Control Board

Motorola's embedded motion control series MR32 motor control board is designed to provide control signals for 3-phase ac induction, 3-phase brushless dc (BLDC), and 3-phase switched reluctance (SR) motors. In combination with one of the embedded motion control series power stages, and an optoisolation board, it provides a software development platform that allows algorithms to be written and tested without the need to design and build hardware. With software supplied on the CD-ROM, the control board supports a wide variety of algorithms for ac induction, SR, and BLDC motors. User control inputs are accepted from START/STOP, FWD/REV switches, and a SPEED potentiometer located on the control board. Alternately, motor commands can be entered via a PC and transmitted over a serial cable to DB-9 connector. Output connections and power stage feedback signals are grouped together on 40-pin ribbon cable connector. Motor feedback signals can be connected to Hall sensor/encoder connector. Power is supplied

Designer Reference Manual

DRM036 — Rev 0

through the 40-pin ribbon cable from the optoisolation board or low-voltage power stage.

The control board is designed to run in two configurations. It can be connected to an M68EM08MR32 emulator via an M68CBL08A impedance matched ribbon cable, or it can operate using the daughter board. The M68EM08MR32 emulator board may be used in either an MMDS05/08 or MMEVS05/08 emulation system.



Figure 3-2 shows a block diagram of the board's circuitry.

Figure 3-2. MC68HC908MR32 Control Board

The electrical characteristics in **Table 3-1** apply to operation at 25°C.

Hardware Design

Characteristic	Symbol	Min	Тур	Max	Units
dc power supply voltage ⁽¹⁾	Vdc	10.8	12	16.5	V
Quiescent current	I _{CC}		80	_	mA
Min logic 1 input voltage (MR32)	V _{IH}	2.0			V
Max logic 0 input voltage (MR32)	V _{IL}		_	0.8	V
Propagation delay (Hall sensor/encoder input)	t _{dly}	_	_	500	ns
Analog input range	V _{In}	0	_	5.0	V
RS-232 connection speed				9600	Baud
PWM sink current	I _{PK}		_	20	mA

Table 3-1. Electrical Characteristics of Control Board	Table	3-1.	Electrical	Characteristics	of	Control	Board
--	-------	------	------------	------------------------	----	---------	-------

1. When operated and powered separately from other Embedded Motion Control tool set products

3.4 3-Phase BLDC Low Voltage Power Stage

Motorola's embedded motion control series low-voltage (LV) brushless DC (BLDC) power stage is designed to run 3-ph. BLDC and PM Synchronous motors. It operates from a nominal 12-volt motor supply, and delivers up to 30 amps of rms motor current from a dc bus that can deliver peak currents up to 46 amps. In combination with one of Motorola's embedded motion control series control boards, it provides a software development platform that allows algorithms to be written and tested, without the need to design and build a power stage. It supports a wide variety of algorithms for controlling BLDC motors and PM Synchronous motors.

Input connections are made via 40-pin ribbon cable connector J13. Power connections to the motor are made with fast-on connectors J16, J17, and J18. They are located along the back edge of the board, and are labeled Phase A, Phase B, and Phase C. Power requirements are met with a 12-volt power supply that has a 10- to 16-volt tolerance.

DRM036 — Rev 0

Fast-on connectors J19 and J20 are used for the power supply. J19 is labeled +12V and is located on the back edge of the board. J20 is labeled 0V and is located along the front edge. Current measuring circuitry is set up for 50 amps full scale. Both bus and phase leg currents are measured. A cycle by cycle overcurrent trip point is set at 46 amps.

The LV BLDC power stage has both a printed circuit board and a power substrate. The printed circuit board contains MOSFET gate drive circuits, analog signal conditioning, low-voltage power supplies, and some of the large passive power components. This board also has a 68HC705JJ7 microcontroller used for board configuration and identification. All of the power electronics that need to dissipate heat are mounted on the power substrate. This substrate includes the power MOSFETs, brake resistors, current-sensing resistors, bus capacitors, and temperature sensing diodes. Figure 3-3 shows a block diagram.



Figure 3-3. Block Diagram

The electrical characteristics in **Table 3-2** apply to operation at 25°C with a 12-Vdc supply voltage.

Hardware Design

Characteristic	Symbol	Min	Тур	Max	Units
Motor Supply Voltage	Vac	10	12	16	V
Quiescent current	I _{CC}	—	175	_	mA
Min logic 1 input voltage	V _{IH}	2.0	—		V
Max logic 0 input voltage	V _{IL}	_	—	0.8	V
Analog output range	V _{Out}	0		3.3	V
Bus current sense voltage	I _{Sense}	_	33		mV/A
Bus voltage sense voltage	V _{Bus}	_	60	_	mV/V
Peak output current (300 ms)	I _{PK}	_	_	46	A
Continuous output current	I _{RMS}	_	—	30	А
Brake resistor dissipation (continuous)	P _{BK}	_	_	50	W
Brake resistor dissipation (15 sec pk)	P _{BK(Pk)}	—	_	100	W
Total power dissipation	P _{diss}	_	_	85	W

Table 3-2. Elec	ctrical Characteris	tics of the 3-Ph BLDC
	Low Voltage Powe	er Stage

3.5 EVM Motor Board

Motorola's embedded motion control series EVM motor board is a 12-volt, 4-amp, surface-mount power stage that is shipped with an MCG IB23810-H1 brushless dc motor. In combination with one of the embedded motion control series control boards, it provides a software development platform that allows algorithms to be written and tested without the need to design and build a power stage. It supports algorithms that use Hall sensors, encoder feedback, and back EMF (electromotive force) signals for sensorless control.

The EVM motor board does not have overcurrent protection that is independent of the control board, so some care in its setup and use is

Designer Reference Manual

DRM036 — Rev 0

required if a lower impedance motor is used. With the motor that is supplied in the kit, the power output stage will withstand a full-stall condition without the need for overcurrent protection. Current measuring circuitry is set up for 4 amps full scale. In a 25°C ambient operation at up to 6 amps continuous RMS output current is within the board's thermal limits.

Input connections are made via 40-pin ribbon cable connector J1. Power connections to the motor are made on output connector J2. Phase A, phase B, and phase C are labeled on the board. Power requirements are met with a single external 12-Vdc, 4-amp power supply. Two connectors, labeled J3 and J4, are provided for the 12-volt power supply. J3 and J4 are located on the front edge of the board. Power is supplied to one or the other, but not both. The electrical characteristics in **Table 3-3** apply to operation at 25°C and a 12-Vdc power supply voltage.

Characteristic	Symb ol	Min	Тур	Max	Units
Power Supply Voltage	Vdc	10	12	16	V
Quiescent Current	I _{CC}		50		mA
Min Logic 1 Input Voltage	V _{IH}	2.4	_		V
Max Logic 0 Input Voltage	V _{IL}	_	—	0.8	V
Input Resistance	R _{In}		10		kΩ
Analog Output Range	V _{Out}	0	_	3.3	V
Bus Current Sense Voltage	I _{Sense}		412		mV/A
Bus Voltage Sense Voltage	V _{Bus}		206		mV/V
Power MOSFET On Resistance	R _{DS(O} n)		32	40	MΩ
RMS Output Current	١ _M		_	6	А
Total Power Dissipation	P _{diss}	_	_	5	W

Table 3-3. Electrical Characteristics of the EVM Motor Board

Hardware Design

The EVM Motor Board is shipped with an MCG IB23810-H1 brushless dc motor. The motor characteristics in **Table 3-4** apply to operation at 25°C.

Characteristic	Symb ol	Min	Тур	Max	Units
Terminal Voltage	Vt		—	60	V
Speed @ V _t		_	5000	_	RPM
Torque Constant	K _t	_	0.08	_	Nm/A
Voltage Constant	K _e	_	8.4	_	V/kRP M
Winding Resistance	R _t	_	2.8	_	Ω
Winding Inductance	L		8.6		mH
Continuous Current	I _{cs}		—	2	А
Peak Current	I _{ps}	_	—	5.9	А
Inertia	J _m		0.075		kgcm ²
Thermal Resistance		_	_	3.6	°C/W

Table 3-4. Characteristics of the BLDC motor

3.6 Hardware Documentation

All the system parts are supplied and documented according to the following references:

- U1 MC68HC908MR32 Control Board:
 - supplied as: ECCTR908MR32
 - described in: Motorola Embedded Motion Control MC68HC908MR32 Control Board User's Manual MEMCMR32CBUM/D
- U2 3 ph AC/BLDC Low Voltage Power Stage
 - described in: Motorola Embedded Motion Control 3-Phase BLDC Low-Voltage Power Stage User's Manual MEMC3PBLDCLVUM/D

Designer Reference Manual

DRM036 — Rev 0

MOTOROLA

- or Evaluation Motor Board
 - described in: Motorola Embedded Motion Control Evaluation Motor Board User's Manual

Detailed descriptions of individual boards can be found in comprehensive User's Manuals belonging to each board. The manuals are available on the Motorola web. The User's Manual incorporates the schematic of the board, description of individual function blocks and a bill of materials. An individual board can be ordered from Motorola as a standard product.

DRM036 — Rev 0

Hardware Design

Designer Reference Manual

DRM036 — Rev 0

MOTOROLA

Hardware Design For More Information On This Product, Go to: www.freescale.com

34

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

Section 4. Software Design

4.1 Contents

4.2	Software Design	35
4.3	Software Data Flow	35
4.4	Software Processes	37
4.5	PC Master Software (Remote) Operating Mode	45

4.2 Software Design

This section describes the design process of control algorithm, and of the software blocks implemented in the drive.

4.3 Software Data Flow

The control algorithm of closed loop drive for the sine voltage powered 3-phase PMS motor with Hall sensors is described in **Figure 4-1**. The inputs to the algorithm are desired omega from speed pot (Manual Control), or from remote control interface (SCI) and Hall sensor signals (Hall Sensors). The output is a three phase PWM signal (PWM Generation).

DRM036 — Rev 0

Software Design



Figure 4-1. Main Data Flow

Designer Reference Manual

DRM036 — Rev 0

4.4 Software Processes

4.4.1 PC Master Process

A small program is resident in the MR32 that communicates with the PC master software running on the PC. It controls data exchange between the application and the Serial Communication Interface (SCI). The module enables read and write to the CPU RAM and reading the whole CPU memory. It provides a remote control interface to the application. For control actions provided see section **4.5 PC Master Software** (Remote) Operating Mode.

4.4.2 Sensor Edge Detection

Each incoming edge on the signal from Hall sensors causes the saving of the actual timer value and setting of the capture flag. The flag is recognized in the following PWM reload, and it starts a task which is divided between two PWM reloads interrupts. In the first interrupt the sine wave is synchronized, and the period of the hall sensor signal is calculated. In the following PWM reload interrupt, the "phase_increment" is calculated.

4.4.3 Period Calculation

The principle of period calculation is shown in **Figure 4-2**. The motor used has two pole-pairs and three Hall sensors. To eliminate the difference between the Hall sensors, the edges from same sensor are used for period calculation. The period is calculated on each EOR signal edge, but for period calculation the difference between six successive edges on EOR signal is taken.

DRM036 — Rev 0

Software Design

EOR output signal



Figure 4-2. Calculation of Hall Sensor Period

4.4.4 Phase-Locked Loop

The phase-locked loop (PLL) provides synchronization of generated sine voltage with Hall sensor signals, and maintains the generated voltage vector in proper position. The frequency of the sine wave is given by "phase_increment". The actual angle of sine wave is increased by this increment at each PWM reload. The new "phase_increment" is calculated, from the difference between the Hall sensor signals and the sine wave period. (see Figure 4-3.)

The phase increment difference $\Delta\alpha$ is calculated as:

$$\Delta \alpha = \Delta T \cdot \frac{2 \cdot \alpha}{T}$$
 (EQ 4-1.)

where:

- ΔT position difference [sec]
- α phase increment [deg]
- T phase period (T = 256^2)





The new phase increment is α expressed as:

$$\alpha = C_{I} \cdot \Delta \alpha$$
 (EQ 4-2.)

where C_I is integral constant of PLL.

Position calculation parameters:

- calculated position resolution 2¹⁶ per period
- position update 16 kHz
- phase increment resolution 2¹⁸ per period

4.4.5 Sine Wave Synchronization

This algorithm calculates actual phase of the generated voltage vector (its position). The presented design uses three Hall sensors to get the rotor position. Thus we obtain six positions per electrical revolution. The control algorithm keeps the angle between generated voltage vector and rotor flux at 90°. In instances between the two position readings the position of voltage vector is estimated. When a new rotor position is read

DRM036 — Rev 0

MOTOROLA

Software Design

from Hall sensors the position of the generated voltage vector is synchronized by means of PLL algorithm (see **4.4.4 Phase-Locked Loop**). The designed application is even able to perform high-efficient control of a motor using **only one** Hall sensor for position sensing.

4.4.6 Speed Ramp

The Speed ramp decreases the rate of required speed variation.

4.4.7 Speed Calculation

The speed ω_m (EQ 4-3.) is calculated every 5ms in the timer overflow interrupt.

$$\omega_{\rm m} = \frac{C_{\omega}}{T_{\rm h}}$$
(EQ 4-3.)

where

- C_ω is a constant representing the omega scale and the number of pole pairs.
- T_h is the Hall sensor period

4.4.8 Speed Controller

The scaled PI controller is used for the speed closed loop. The controller is called every 5ms. The controller constants were tuned experimentally. The frequency of speed update depends on actual motor speed (according to the rate of incoming edges for Hall sensors). To achieve the best results the speed controller constants are recalculated according to the sensed speed. The controller constants are calculated according to (EQ 4-4.) and (EQ 4-5.). The sensed speed can be updated only when the edge on the Hall sensor signal is detected. The long

DRM036 — Rev 0

MOTOROLA

period between the Hall sensor signal edges al low speed could cause speed fluctuations of the motor.

$$C_{I} = C_{1} + C_{2} \cdot \omega_{m}$$
 (EQ 4-4.)

$$C_{P} = C_{3} + C_{4} \cdot \omega_{m}$$
 (EQ 4-5.)

where

- Cl is integral constant
- CP is proportional constant
- C1,C2,C3,C4 are constants tuned experimentally

4.4.9 Voltage Ripple Cancellation

The voltage ripple cancellation recalculates the absolute required voltage into a relative voltage, so that output voltage amplitude does not depend on the dc-bus voltage.

$$U_{rel} = \frac{U_{req}}{U_{DC}}$$
(EQ 4-6.)

where:

- U_{reg} is absolute voltage required by speed controller [V]
- U_{rel} is relative voltage going to sine wave generator [-]
- U_{DC} is dc-bus voltage [V]

The purpose of the function is to ensure that a jump in dc-bus voltage does not cause transient speed deviation.

4.4.10 Field Weakening Calculation

A field weakening of the motor may be required to extend the full speed range. The PMS motor can be field weakened by increasing the angle

DRM036 — Rev 0

MOTOROLA

Software Design

between motor voltage and rotor flux. The basic control keeps the angle at 90°, as can be seen in **Figure 2-3**. Change of control angle is not only useful for field weakening, but also for setting the optimal working point of a motor. One goal of finding a working point where the motor has maximum efficiency, can be simplified as a task of minimizing resistance losses. In this case the reactive power has to be minimized by the correct control angle. **Figure 4-4** shows that the optimal angle is higher than in basic control. The angle value depends on motor parameters and load of the motor. The dependence of reactive power relative to control angle of motor used is shown in **Figure 4-5**. The measured reactive power is shown for three different torques (T1,T2,T3) and two speeds (ω 1 and ω 2), where T1<T2<T3 and ω 1< ω 2. In the graph the ω is substituted by w. In **Figure 4-5** we can see that the optimal control angle depends on both the speed and the torque.



Figure 4-4. Control with Minimal Reactive Power

The designed application has the control angle δ calculated from speed **(EQ 4-7.)** and is suitable for applications where the torque depends on speed, e.g. ventilators.

$$\delta = \delta_{\text{base}} + C_{\delta} \cdot \omega$$
 (EQ 4-7.)

$$C_{\delta} = \frac{\delta_{max} - \delta_{base}}{\omega_{max}}$$
 (EQ 4-8.)

DRM036 - Rev 0

MOTOROLA

Software Des

where:

- δ is control angle (angle between motor voltage and rotor magnetic flux)
- δ_{base} is the control angle when speed is zero
- δ_{max} is the control angle when speed is maximal



Figure 4-5. Measured Reactive Power for Different Torque and Speed

Precise tuning of control angle to speed is not critical. This is because the range of acceptable angles is comparable with the range of optimal angles over the whole torque and speed range. Increasing the control angle with speed allows a higher torque at maximum speed. In the application, the minimum and maximum control angles are:

- $\delta_{\text{base}} = 101^{\circ}$
- $\delta_{max} = 122^{\circ}$

Software Design

4.4.11 Sine Wave Generation

The sine wave generation is calculated each PWM reload interrupt, which is every 64us. The function

sin3p3hPIxLUT (UByte u_phase_amplitude, SWord16 phase_actual);

gets the sine of the actual phase for all three phases from the table, and multiplies it by the voltage amplitude. Resolution of the sine is 1024 points per period and, 256 points per amplitude. The function is written in assembly to minimize execution time. The execution time is about 20us.

4.4.12 Over Voltage Limitation

Over-voltage limitation protects the power stage during deceleration. If the dc-bus voltage exceeds maximum voltage limit the deceleration of the motor is interrupted. The required speed is increased to keep the dc-bus voltage under the limiting value. When the dc-bus voltage is stabilized the deceleration of motor continues.

4.4.13 CPU Reset to Turning Motor

If the CPU is reset while the motor is running, the initialization routine recognizes the running motor from the Hall sensor signals. Then the speed of motor is calculated, and PLL is synchronized with the Hall sensor signals. The voltage amplitude is estimated from the measured speed, which helps to switch-on PWM without torque surge. CPU reset always switches the application to manual control, even if the application before reset was controlled by PC master software.

NOTE: The application source code includes also "Torque Limitation" algorithm. This feature is disabled in this application. If the limitation of motor torque is required it may be added to the user application. The torque limitation constants used in the algorithm depend on particular motor parameters, therefore the user has to define his motor specific parameters. For more details on "Torque Limitation" algorithm see AN 2357/D "Sine Voltage Powered 3-Phase Permanent Magnet Motor with Hall Sensor", Motorola, 2002.

Designer Reference Manual

DRM036 — Rev 0

4.5 PC Master Software (Remote) Operating Mode

The drive is controlled remotely from a PC via an RS-232 physical interface. The manual control is ignored and all required values are controlled from PC.

The actions controlled in PC master operating mode are:

- Start/Stop control
- Motor speed setpoint
- Close Loop/Open Loop operation

PC master software displays the following information on a control page:

- Speed
- DC-Bus voltage
- Drive status
- Close Loop/Open Loop operation status
- Application mode (manual/remote control)

The other variables can be viewed in the variables section.

DRM036 — Rev 0

Software Design

Designer Reference Manual

DRM036 — Rev 0

Software Design For More Information On This Product, Go to: www.freescale.com

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

Section 5. Application Setup

5.1 Contents

5.2	Warning	17
5.3	Hardware Setup	17
5.4	Software Setup	50
5.5	Executing the Application	51

5.2 Warning

The application includes a rotating machine and power transistors. Both can reach temperatures hot enough to cause burns. To facilitate safe operation, 12-volt input power should come from a dc laboratory power supply that is current limited.

The user should be aware that:

Before moving scope probes, making connections, etc., it is generally advisable to power down the 12-volt supply.

Operation in lab setups that have grounded tables and/or chairs should be avoided.

Wearing safety glasses, avoiding ties and jewelry, using shields, and operation by personnel trained in power electronics lab techniques are also advisable.

5.3 Hardware Setup

The motor control system is designed to drive the 3-phase PMS motor in a speed closed loop using a 68HC908MR32 microcontroller. The

DRM036 — Rev 0

Application Setup

System configuration is shown in **Figure 5-1**. The system configuration consists of:

- Motorola MC68HC908MR32 control board
- 3-phase BLDC low voltage power stage or EVM motor board
- PMS motor with 3 Hall sensors
- 12V DC Power supply
- Serial cables to PC



U1 – 68HC908MR32 MC Board
U2 – Low Voltage BLDC Power Stage or Evaluation Motor Board
U3 – 68HC908MR32 Daughter Board
M1 – 3 phase PM Motor

Figure 5-1. H/W System Configuration

5.3.1 Controller Board Jumper Settings

To execute the PMS motor control application with Hall sensors, the MC68HC908MR32 control board requires the jumper settings shown in **Figure 5-2** and **Table 5-1**

Designer Reference Manual

DRM036 — Rev 0





NOTE: The JP2 jumper must be connected

Jumper Group	Comment	Connections
JP1	Tacho	No connection
JP2	Encoder / Hall Sensor	1–2
JP3	BEMF_z_c	No connection
JP4	PFC_z_c	No connection
JP5	PFC_PWM	No connection
JP7	GND_Connection	1–2

Table 5-1. MCHC908MR32 Board Jumper Settings

Application Setup

5.4 Software Setup

5.4.1 Required Software Tools

The application requires then following software development tools:

- Metrowerks¹CodeWarrior^{®2} for MC68HC08 microcontrollers version 1.2 or later.
- PC master software version 1.2.0.11 or later

5.4.2 Application Files

The application files are distributed in compressed zip-file: 3ph_pm_sin_3hs_sa.zip. Uncompress the files to the folder on you hard drive. The PMS motor control application with Hall sensors is composed of the following files:

- 3ph_pm_sin_3hs_sa.mcp, application project file
- sources\3ph_pm_sin_3hs.c, main program
- sources\3ph_pm_sin_3hs.h, main program header file
- **sources\appconfig.h**, application configuration file for static periphery configuration
- prms\hc908mr32.prm, linker parameters file
- pcmaster\3ph_pm_sin_3hs.pmp, PC master software file

Besides the application specific files listed above the application is distributed with peripheral drivers and algorithms placed in following folders:

- config peripheral start-up code
- drivers and drivers\highlevel peripheral and high-level drivers

MOTOROLA

^{1.} Metrowerks® and the Metrowerks logo are registered trademarks of Metrowerks, Inc., a wholly owned subsidiary of Motorola, Inc.

^{2.} CodeWarrior® is a registered trademark of Metrowerks, Inc., a wholly owned subsidiary of Motorola, Inc.

algorithms - general motor control algorithms

5.4.3 Building the Application

To build this application, open the **3ph_pm_sin_3hs_sa.mcp** project file and execute the *Make* command; see Figure 5-3.. This will build and link PMS motor control application with Hall sensors along with all needed Metrowerks libraries.



Figure 5-3. Target Build Selection

5.5 Executing the Application

To execute the PMS motor control application with Hall sensors, select *Project\Debug* in the CodeWarrior IDE, followed by the *Run* command. For more help with these commands, refer to the CodeWarrior tutorial documentation in the following file located in the CodeWarrior installation directory:

<...>\info\CodeWarrior\IDE_User_Guide.pdf

If the MMDS target is selected, CodeWarrior will automatically download the program to MMDS05/08 emulator.

DRM036 — Rev 0

Application Setup

5.5.1 Application Modes

This PMS motor control application with Hall sensors can operate in two modes:

- 1. Manual operating mode
- 2. PC master software (remote) operating mode

5.5.1.1 Manual Operating Mode

Refer to MC68HC908MR32 control board shown in **Figure 5-4** and **Figure 5-5** for this description:

- START/STOP switch (SW3) start/stop of the motor
- SPEED potentiometer (P1) set motor speed
- DIP switch SW2 functions:
 - 1 open/closed loop operation (ON closed loop on)

– 2 - N/A

• USER LED - indicates status of the drive, for detailed description see **Table 5-2**.

 Table 5-2. Motor Application States

Application State	Motor State	Green LED State	Yellow LED State	Red LED State
Stopped	Stopped	Blinking at a frequency of 2 Hz	_	_
Running	Spinning	On	—	—
Fault	Stopped	Blinking at a frequency of 8 Hz	_	_

Designer Reference Manual

MOTOROLA



Figure 5-4. MC68HC908MR32 Board - Control Elements



Figure 5-5. USER LEDs, PWM LEDs, and RESET

Application Setup

5.5.1.2 PC Master (Remote) Operating Mode

The drive is controlled remotely from a PC via an RS-232 physical interface. The actions controlled in PC master operating mode are:

- Start/Stop control
- Motor speed setpoint
- Close Loop/Open Loop operation

The PC master software displays the following information:

- Speed
- DC-Bus voltage
- Drive status
- Close Loop/Open Loop operation status
- Application mode (manual/remote control)

Project files for PC master software are located in:

PC master software file

..\pcmaster\3ph_pm_sin_3hs.pmp

To start the PC master software's window application

3ph_pm_sin_3hs.pmp

NOTE: If the PC master project (**.pmp** file) is unable to control the application, it is possible the wrong symbol file(**.elf** file) has been selected. The PC master software uses the elf file to determine addresses for global variables being monitored. Once the PC master project has been launched, this option may be selected in the PC master window under "Project/Select Symbol File". To reload the symbol file select "Project/Reload Symbol File"

The PC master software control window is shown in Figure 5-6.

Designer Reference Manual

DRM036 — Rev 0

MOTOROLA

For 3ph_pm_sin_3hl.pmp - PCMa File Edit View Explorer Item	aster Project Help					
		<u>.</u>				
讀到 3-PMS Motor with Hall sensors	Designed By Radh., Czech Republic 3-ph PMS Motor with Hall Se			MOTOROLA		
	Required Spe Actual Speed	ed: :	798 rpm 798 rpm	PC Control	1,500 rpm	
	Drive Status:		RUN	Start Stop		
	DC Bus Volta Temperature	ge: ;		Motor Motor		
	Fault Status:		No fault	Close Loop		
	Identified Hardware: Power stage board: Not identified Optoisolation board: Not identified CPU: 68HC908MR32					
	intelligence everywh	ere`	8.	M	otorola * digital dna	
Speed_ramp [omega_de						
	AppFaultStatus	Value 0	DEC	Pr 500	eriod	
commands stimulators	driveMessage omega_desired_PCM	RUN 798	ENUM unit	1000 1000		
Done				R5232;COM4;speed=	=9600 Scope Bad	

Figure 5-6. PC master software control window

5.5.2 Starting the Motor in Manual Mode

Switch the START/STOP switch to the START position and set the required speed by the SPEED potentiometers. If successful, the PMS motor will be spinning.

NOTE: If the START/STOP switch is set to the START position when the application starts, toggle the START/STOP switch between the STOP and START positions to enable motor spinning. This is a protection feature preventing the motor from starting when the application is executed from CodeWarrior.

You should also see a lighted green LED, indicating the application is running. If the application is stopped, the green LED will blink at a

DRM036 — Rev 0

MOTOROLA

Application Setup

frequency of 2 Hz. If a fault occurs, the green LED will blink at a frequency of 8 Hz.

NOTE: In manual control mode, the SW2-1 switch on the CPU board (see **Figure 5-5**) determines close/open loop (close loop is at position On).

5.5.3 Starting the Motor in Remote Control Mode (using PC Master)

To set the PC master control, perform the following steps:

- 1. The RUN/STOP switch must be in the STOP position
- 2. Check the PC master mode on the PC master control page
- 3. Start the motor by pressing the START PC Master Push Button
- 4. Set the speed with the bar graph
- 5. Stop the motor by pressing the STOP PC Master Push Button

Designer Reference Manual

DRM036 — Rev 0

MOTOROLA

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

Appendix A. References

- 1. Electronically Commutated Motors for Fan Applications, A. Lelkes, PCIM 2002.
- Design of Brushless Permanent-magnet Motors, J.R. Hendershot and T.J.E. Miller, Magna Physics Publishing and Clarendon Press, 1994
- 3. AN 2357/D Sine Voltage Powered 3-Phase Permanent Magnet Motor with Hall Sensor, Motorola, 2002
- 68HC908MR32 User's Manual, Motorola, Inc. (2001), (order #:MC68HC908MR32/D)
- Motorola Embedded Motion Control MC68HC908MR32 Control Board User's Manual, Motorola, 2000 (order #:MEMCEVMBUM/D)
- Motorola Embedded Motion Control 3-Phase BLDC Low-Voltage Power Stage User's Manual, Motorola, 2000 (order #: MEMC3PBLDCLVUM/D)
- Motorola Embedded Motion Control Evaluation Motor Board User's Manual, Motorola, 2000 (order #:MEMCEVMBUM/D)
- 8. AN 1917/D 3-Phase Synchronous PM Motor Control with Quadrature Encoder Using DSP56F80x, Motorola, 2002

References

Designer Reference Manual

DRM036 — Rev 0

MOTOROLA

Designer Reference Manual — Sine Voltage Powered 3-ph PMS Motor

Appendix B. Glossary

AC — Alternating current.

analogue-to-digital converter (ADC) — The ADC module is an 10-channel, multiplexed-input successive-approximation analog-to-digital converter.

brush — A component transfering electrical power from non-rotational terminals, mounted on the stator, to the rotor

byte — A set of eight bits.

central processor unit (CPU) — The primary functioning unit of any computer system. The CPU controls the execution of instructions.

clear — To change a bit from logic 1 to logic 0; the opposite of set.

commutation — A process providing the creation of a rotation field by switching of power transistor (electronic replacement of brush and commutator)

commutator — A mechanical device alternating DC current in DC commutator motor and providing rotation of DC commutator motor

comparator — A device that compares the magnitude of two inputs. A digital comparator defines the equality or relative differences between two binary numbers.

computer operating properly module (COP) — A counter module that resets the MCU if allowed to overflow.

COP — Computer Operating Properly timer

DC — Direct Current.

DT — see "Dead Time (DT)"

DRM036 — Rev 0

MOTOROLA

Glossary

Dead Time (DT) — short time that must be inserted between the turning off of one transistor in the inverter half bridge and turning on of the complementary transistor due to the limited switching speed of the transistors.

duty cycle — A ratio of the amount of time the signal is on versus the time it is off. Duty cycle is usually represented by a percentage.

GPIO — General Purpose Input/Output.

Hall Sensors - A position sensor giving six defined events (each 60 electrical degrees) per electrical revolution (for 3-phase motor)

interrupt — A temporary break in the sequential execution of a program to respond to signals from peripheral devices by executing a subroutine.

interrupt request — A signal from a peripheral to the CPU intended to cause the CPU to execute a subroutine.

input/output (I/O) — Input/output interfaces between a computer system and the external world. A CPU reads an input to sense the level of an external signal and writes to an output to change the level on an external signal.

LED — Light Emitting Diode

logic 1 — A voltage level approximately equal to the input power voltage (V_{DD}) .

logic 0 — A voltage level approximately equal to the ground voltage (V_{SS}) .

MCU — Microcontroller unit. See "microcontroller."

memory map — A pictorial representation of all memory locations in a computer system.

microcontroller — Microcontroller unit (MCU). A complete computer system, including a CPU, memory, a clock oscillator, and input/output (I/O) on a single integrated circuit.

modulo counter — A counter that can be programmed to count to any number from zero to its maximum possible modulus.

Designer	Reference	Manual
----------	-----------	--------

DRM036 — Rev 0

PI controller — Proportional-Integral controller.

peripheral — A circuit not under direct CPU control.

phase-locked loop (PLL) — A clock generator circuit in which a voltage controlled oscillator produces an oscillation which is synchronized to a reference signal.

PM — Permanent Magnet

PMSM - Permanent Magnet Synchronous Motor.

port — A set of wires for communicating with off-chip devices.

program — A set of computer instructions that cause a computer to perform a desired operation or operations.

PWM — Pulse Width Modulation.

PWM period — The time required for one complete cycle of a PWM waveform.

read — To copy the contents of a memory location to the accumulator.

register — A circuit that stores a group of bits.

reset — To force a device to a known condition.

RPM — Revolutions per minute.

SCI — See "serial communication interface module (SCI)."

serial communications interface module (SCI) — A module that supports asynchronous communication.

serial peripheral interface module (SPI) — A module that supports synchronous communication.

set — To change a bit from logic 0 to logic 1; opposite of clear.

software — Instructions and data that control the operation of a microcontroller.

software interrupt (SWI) — An instruction that causes an interrupt and its associated vector fetch.

DRM036 — Rev 0

SPI — See "serial peripheral interface module (SPI)."

stack — A portion of RAM reserved for storage of CPU register contents and subroutine return addresses.

subroutine — A sequence of instructions to be used more than once in the course of a program. The last instruction in a subroutine is a return from subroutine (RTS) instruction. At each place in the main program where the subroutine instructions are needed, a jump or branch to subroutine (JSR or BSR) instruction is used to call the subroutine. The CPU leaves the flow of the main program to execute the instructions in the subroutine. When the RTS instruction is executed, the CPU returns to the main program where it left off.

timer — A module used to relate events in a system to a point in time.

variable — A value that changes during the course of program execution.

waveform — A graphical representation in which the amplitude of a wave is plotted against time.

word — A set of two bytes (16 bits).

write — The transfer of a byte of data from the CPU to a memory location.

DRM036 — Rev 0

MOTOROLA

HOW TO REACH US:

USA/EUROPE/LOCATIONS NOT LISTED:

Motorola Literature Distribution; P.O. Box 5405, Denver, Colorado 80217 1-303-675-2140 or 1-800-441-2447

JAPAN:

Motorola Japan Ltd.; SPS, Technical Information Center, 3-20-1, Minami-Azabu Minato-ku, Tokyo 106-8573 Japan 81-3-3440-3569

ASIA/PACIFIC:

Motorola Semiconductors H.K. Ltd.; Silicon Harbour Centre, 2 Dai King Street, Tai Po Industrial Estate, Tai Po, N.T., Hong Kong 852-26668334

TECHNICAL INFORMATION CENTER:

1-800-521-6274

HOME PAGE:

http://motorola.com/semiconductors

Information in this document is provided solely to enable system and software implementers to use Motorola products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Motorola reserves the right to make changes without further notice to any products herein. Motorola makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Motorola assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters which may be provided in Motorola data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. Motorola does not convey any license under its patent rights nor the rights of others. Motorola products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Motorola product could create a situation where personal injury or death may occur. Should Buyer purchase or use Motorola products for any such unintended or unauthorized application, Buyer shall indemnify and hold Motorola and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the part.



Motorola and the Stylized M Logo are registered in the U.S. Patent and Trademark Office. digital dna is a trademark of Motorola, Inc. All other product or service names are the property of their respective owners. Motorola, Inc. is an Equal Opportunity/Affirmative Action Employer.

© Motorola, Inc. 2003

DRM036/D

For More Information On This Product, Go to: www.freescale.com