

WARRANTY INFORMATION

SERVICE INSTRUCTIONS

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the Warranty.
2. If you have any questions regarding this unit's operation or believe any repair is necessary, please write to our Consumer Service Department.
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed Warranty.
4. If you have any other questions or comments, see our correspondence below or visit our website at www.holmesproducts.com.

HOLMES
CONSUMER SERVICE DEPARTMENT
32B SPUR DRIVE
EL PASO, TX 79906

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchase below.

STORE NAME: _____

LOCATION: _____

DATE PURCHASED: _____

(STAPLE RECEIPT HERE)

THREE (3) YEAR LIMITED WARRANTY

SAVE THIS WARRANTY INFORMATION

- A. The quality controls used in the manufacture of this product are to ensure your satisfaction.
- B. This Warranty applies only to the original purchaser of this product.
- C. This Warranty applies ONLY to repair or replacement of any supplied or manufactured parts of this product that, upon inspection by The Holmes Group, Inc., authorized personnel, proves to have failed in normal use due to defects in material or workmanship. The Holmes Group will determine whether to repair or replace the unit. This Warranty does not apply to installation expenses.
- D. Operating this unit under conditions other than those recommended or at voltages other than the voltage indicated on the unit, or attempting to service or modify the unit, will render this WARRANTY VOID.
- E. Unless otherwise proscribed by law, The Holmes Group shall not be liable for any personal injury, property or any incidental or consequential damages of any kind (including water damages) resulting from malfunctions, defects, misuse, improper installation or alteration of this product. SOME STATES DO NOT ALLOW THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.
- F. All parts of this product are guaranteed for a period of 3 years as follows:
 1. Within the first 30 days from date of purchase, the store from which you purchased your product should replace this product if it is defective in material or workmanship (provided the store has in-stock replacement.)
 2. Within the first thirty six months from date of purchase, subject to the conditions in paragraph H, The Holmes Group will repair or replace the product if it is defective in material or workmanship providing it is returned to Holmes, freight prepaid, with PROOF OF PURCHASE date, together with \$7.00 for handling and return packing/shipping charges.
- G. If you have any problem with this product, please write to our Consumer Service Department.
- H. **IMPORTANT Return INSTRUCTIONS** Your warranty depends on your following these instructions if you are returning the unit more than 30 days after the date of purchase:
 1. Carefully pack the item in its original carton or other suitable box to avoid damage in shipping.
 2. Before packing your unit for return; be sure to enclose:
 - a) Your name, full address with zip code and telephone number,
 - b) A dated sales receipt or PROOF OF PURCHASE,
 - c) Your \$7.00 check for return packaging, and
 - d) The model number of the unit and the problem you are having. (Enclose in an envelope and tape directly to the unit before the box is sealed.)
 3. The Holmes Group recommends you insure the package (as damage in shipment is not covered by your warranty).
 4. All shipping charges must be prepaid by you (as noted in paragraph F).
 5. Mark the outside of your package:

HOLMES
THE HOLMES GROUP, INC.
CONSUMER RETURNS
32B SPUR DRIVE
EL PASO, TX 79906
SHIPPING AND HANDLING CHARGES: \$7.00

This Warranty gives you specific legal rights, and you may have other rights which vary from state to state. The provisions of this Warranty are in addition to, and not a modification of, or subtraction from, the statutory warranties and other rights and remedies contained in any applicable legislation. To the extent that any provision of this Warranty is inconsistent with any applicable law, such provision shall be deemed voided or amended, as necessary, to comply with such law.

Holmes® and Holmes® logo are registered trademarks of The Holmes Group, Inc.

JOB#HCH4062.02.US.OM1

HCH406202UM3

Printed in China

Holmes®

HCH4062

Ceramic Heater

Owner's Guide



PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use grip handle when provided.
3. Keep combustible materials such as drapes, furniture, pillows, bedding, paper, clothes, and curtains at least three (3) feet (0.9 m) from the front of heater and away from its sides and rear.
4. Extreme caution is necessary when heater is used by or near children or invalids and whenever heater is left unattended.
5. Always unplug heater when not in use.
6. Do not operate any heater with a damaged cord or plug, or after the heater malfunctions, or has been dropped or damaged in any manner. Return heater to manufacturer for examination, electrical or mechanical adjustment, or repair. (See Warranty for information)
7. Do not use outdoors.
8. This product is not to be used in bathrooms, laundry areas, or other similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
9. Do not run cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
10. To disconnect heater, turn controls to OFF then remove plug from outlet.
11. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause electric shock or fire, or damage the heater.
12. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
13. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.



THIS PRODUCT IS EQUIPPED WITH A POLARIZED AC (Alternating Current) PLUG (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact qualified personnel to install the proper outlet.

DO NOT DEFEAT THE SAFETY PURPOSE OF THIS POLARIZED PLUG IN ANY WAY

14. Use this heater only as directed in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
 15. Avoid the use of an extension cord because the extension cord may overheat and cause risk of fire. However, if you must use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
 16. If the heater will not operate: See specific instructions on Auto Safety Shut-off.
 17. Discontinue use if plug or outlet is hot. It is recommended that the outlet be replaced if plug or outlet is hot to touch.
- Thank you for choosing a Holmes heater. To ensure the best performance from your heater, please read and save the following instructions.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

TECHNICAL SPECIFICATIONS

- Wattage: 1500 W (+5% -15%)
- Working Voltage: 120 V AC/60 Hz

AUTO SAFETY SHUT-OFF WITH CERAMIC CONTROL

This heater is equipped with a patented, technologically-advanced, ceramic controlled safety system that requires the user to reset the heater if there is a potential overheat situation. When a potential overheat temperature is reached, the system will automatically shut the heater off. It can only resume operation when the user resets the unit.

To Reset the Heater:

1. Turn the Control Setting to the OFF position.
2. Unplug the heater and wait 5-10 minutes for the unit to cool down
3. After the 5-10 minutes, plug the unit in again and operate normally.

FEATURES - OPERATIONS

PRE-OPERATING INSTRUCTIONS

1. Carefully remove your heater from the box (please save the carton for off-season storage).
2. Make sure the unit is in the OFF position before plugging the heater into the outlet.
3. Place heater on a firm, level surface. At 1500 watts, this unit draws 12.5 Amps.

OPERATING INSTRUCTIONS

1. For heater operation, please set the Thermostat all the way to HI.
2. Move the Selector Control to the desired heat setting (LOW for 1000W or HI for 1500W).
3. For fan-only operation, without any heat output, turn the Selector Control to the FAN setting.
4. The Power Light will remain lit during operation.

THERMOSTAT INSTRUCTIONS

Setting the Thermostat-

1. Before setting the thermostat, allow heater to operate and warm up the room. As noted above, you need to set thermostat on HI to start the heater.
2. When the desired temperature comfort level is reached, lower the thermostat setting until the fan/heater stops operating. This is done by moving the thermostat control toward the LOW setting.
3. The control will now automatically maintain the pre-set temperature level by turning the heater ON and OFF.

Note: It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to change the thermostat setting.

CAUTION: FRONT GRILL IS HOT WHEN UNIT IS IN OPERATION

CLEANING/MAINTENANCE


DURING SEASON CARE:

1. Before cleaning, be sure to turn off and unplug the heater.
2. Carefully wipe the unit with a soft, damp cloth. Please be very cautious near the motor and heating elements.
3. After cleaning, be sure to completely dry the unit with a cloth or towel.

AFTER SEASON CARE:


1. Store heater in a cool, dry location.
2. The manufacturer recommends that you store the unit in its original carton.

Figure 2

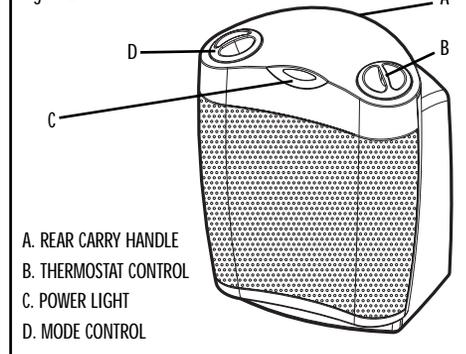

- A. REAR CARRY HANDLE
- B. THERMOSTAT CONTROL
- C. POWER LIGHT
- D. MODE CONTROL

Figure 1 (Top view of controls)

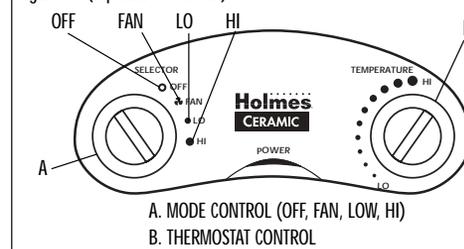

- A. MODE CONTROL (OFF, FAN, LOW, HI)
- B. THERMOSTAT CONTROL