

SH100
mrHandsfree® **SELF'IT**

USER'S MANUAL

GB NL F D



DECLARATION OF CONFORMITY

We, the undersigned

Company:	TE-GROUP nv
Address:	Kapelsestraat 61, 2950 Kapellen - BELGIUM

declare, that the following equipment:

Product Name:	mr Handsfree Self'It SH100
Product Type:	Selfie Maker

Is in conformity with the Directions of the European Union EC R&TTE Directive 1999/5/EC.

This product has been tested against following standards and specifications:
EN60950-1+A11+A1+A12
EN62479
ETSI EN 301 489-1 V1.9.2
ETSI EN 301 489-17 V2.2.1
ETSI EN 300 328 V1.8.1

Joseph van Oosterum, CEO TE-Group NV



QRG/Self'It SH100/09-14/V01
Copyright © mr Handsfree

ILLUSTRATIONS

ILLUSTRATION I

A



B



C



ILLUSTRATION II



ILLUSTRATION III



ILLUSTRATION IV



PACKAGE CONTENTS & PARTS (SEE ILL. I)

- A. **Extendable monopod with holder**
 - 1. Metal clasp
 - 2. Monopod attachment point
 - 3. Adjustment knob
- B. **Remote Shutter**
 - 4. On/OFF Switch
 - 5. Apple iOS Button
 - 6. Android Button
 - 7. LED Indicator
- C. **Button battery 200mAh – CR2032 for Remote Shutter**

PLACE THE BATTERY (SEE ILL. II)

Insert the button battery (C) with the positive (+) side facing up. Slide the battery tray back onto the remote shutter until it clicks.

USE REMOTE SHUTTER WITH SMARTPHONE OR TABLET

Remote shutter can be used with tablet and smartphone (iOS & Android compatible).

STEP 1: TURN REMOTE SHUTTER ON

Slide the ON/OFF Switch (4) to 'ON'. The blue LED indicator (7) will light.

STEP 2: CONNECT REMOTE SHUTTER TO PHONE OR TABLET

The remote shutter is now ready for pairing → Let your phone or tablet search for other BT-devices (please refer to the manual of your phone or tablet for more information). → Select '**MHfree SH100**' out of the list and enter PIN code **0000** (if requested) to connect both devices.

STEP 3: SHOOT!

Make sure your phone or tablet is in camera mode! Press the Apple iOS button (5) or the Android button (6) depending on which type of phone or tablet you have to make a **photo or a video**.

GB To turn the remote shutter OFF: Slide the ON/OFF Switch (5) to 'OFF'.

HOW TO PLACE SMARTPHONE INTO HOLDER (SEE ILL. III)

Make sure that you push/slide your smartphone right in and that it is firmly seated within the metal clasp (1)! Use the adjustment knob (3) to adjust the position of the phone according to the desired shooting angle. Fasten the knob (3) firmly after adjusting the camera to your preferred angle.

YOU CAN ALSO USE THE MONOPOD WITH A COMPACT, LIGHTWEIGHT CAMERA (SEE ILL. IV)

Use the monopod attachment point (2) to attach a **compact, lightweight** camera onto the monopod.

ATTENTION: HANDLE WITH CARE!

Always make sure your smartphone or camera is placed firmly and securely on the monopod and that the adjustment knob (3) of the holder is firmly fastened. Be careful and DO NOT make sudden movements with the monopod, while shooting. The guarantee of this selfie-fun-pack does NOT cover damage caused by improper use by the user!

CUSTOMER SUPPORT

For more information, technical questions and return requests concerning this product, you should contact support@mrhandsfree.com.

GUARANTEE

Mr Handsfree is a registered trademark of TE-Group NV. The mr Handsfree brand stands for superior product quality and outstanding customer service. That is why mr Handsfree warrants this product against all defects in material and workmanship for a period of **two (2) years** from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of mr Handsfree under this guarantee can be downloaded from our website: www.mrhandsfree.com.