

Our mission is to make learning fun

RadioShack



Accelerator Vision

For the next generation



For ages 8 and up

RadioShack

Dear Parent/Guardian,

Thank you for choosing the Oregon Scientific **Accelerator Vision**.

Designed and engineered with extreme precision,

the **Accelerator Vision** is packed full of learning,

offering stimulating games and activities that

make an invaluable contribution to your child's development.

Some of the activities to further your child's skills include language,

mathematics, music, memory and logical reasoning.

The **Accelerator Vision** provides a dependable and

realistic introduction to computers and

encourages creativity and independent learning.

Learning with Oregon Scientific is so much fun!

— **Table of Contents** —

Chapter 1 ————— 1

About Your Accelerator Vision Learning PC

Chapter 2 ————— 3

Getting Started

Chapter 3 ————— 6

Useful Features and Controls

Chapter 4 ————— 9

Game Rules

Chapter 5 ————— 12

User Settings

Chapter 6 ————— 14

Activities

Word Sector ————— 14

Vocabulary Sector ————— 16

Mathematics Sector ————— 18

A. Mathematics Sector ————— 21

Trivia / Games Sector ————— 22

Skill / PDA / Center ————— 25

Tools / Reference Center ————— 30

Web Area ————— 38

Chapter 7 ————— 42

Safe-site.net

How to sign up for Safe-site.net ————— 43

The parent password ————— 43

Chapter 8 ————— 44

How to synchronize with your home PC

Chapter 9 ————— 44

X-Cable Connection

Chapter 10 ————— 45

Trouble Shooting

Chapter 1

About your Accelerator Vision Learning PC

Features

76 Activities

 
- Vocabulary / Spelling
- Mathematics
- Trivia
- Games / Language Tutor
- Reference / Tools
- PDA / Keyboard Skills
- Web Area

Internet Zone

- Safe-site.net capable
- Free email account
- Download new questions
- Post game scores
- Profanity check
- Newsgroups
- Design your own web page and host it at the safe-site.net server

The Accelerator Vision is supplied with the following parts. Please contact your retailer should any parts be missing.

- 1 - Unit
- 2 - Mouse Pad
- 3 - Opti-mechanical mouse
- 4 - Instruction manual for X-Cable
- 5 - User Manual for the Accelerator Vision
- 6 - X-Cable software CD-ROM
- 7 - X-Cable
- 8 - Registration password


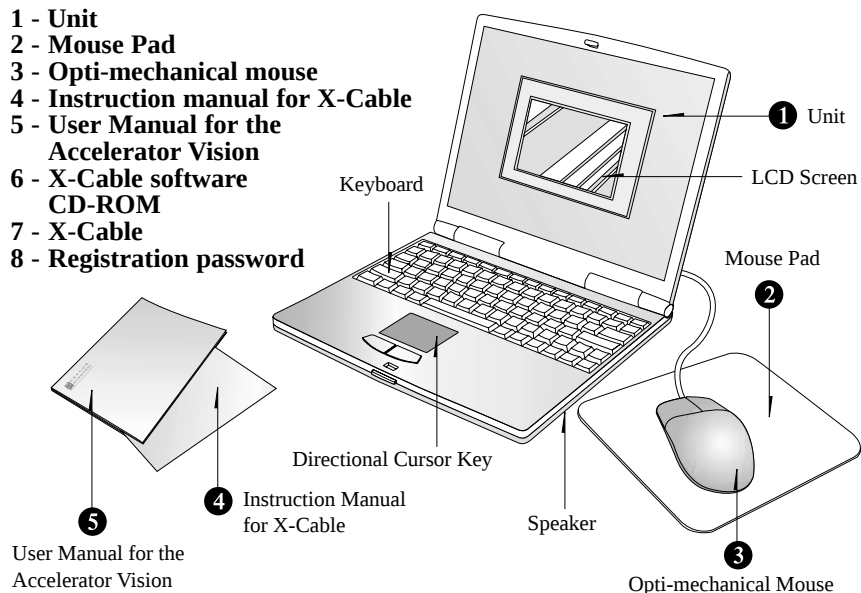


1

Unit

USBX-Cable Connection to PC

  - Transfer document between the Accelerator Vision and a PC
- Print to any PC compatible printer
- Internet Connection

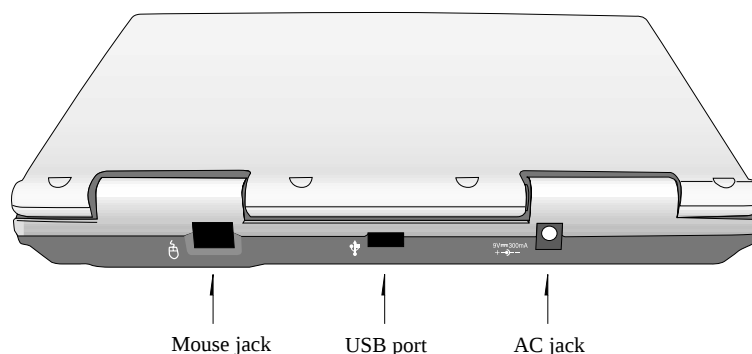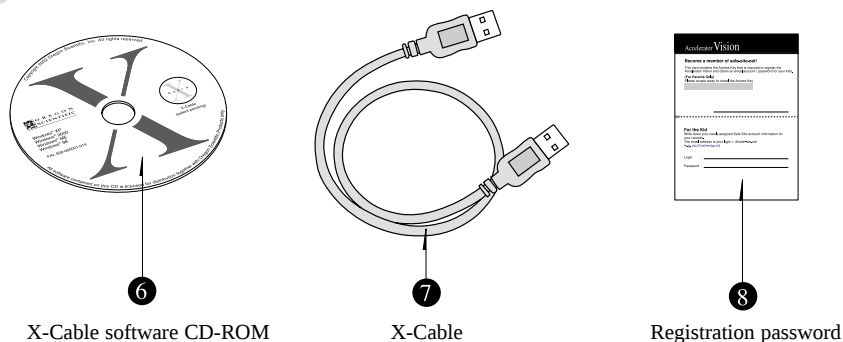

2

— Chapter 2 —

Getting Started

Your Accelerator Vision operates on 4 AAA size batteries plus 2 AA size batteries (not included), or a 9V AC adaptor (not included).

Battery Installation

1. Make sure the unit is turned off.
2. Using a Phillips screwdriver, open the big battery cover at the back of the unit.
3. Insert 4 AAA size batteries. (Note the correct polarity +, -).
4. Replace the cover. (The unit is automatically turned on as soon as the batteries are installed or the adaptor is plugged in.)

Back-up battery installation

1. Make sure the unit is turned off.
2. Using a Phillips screwdriver, open the small battery cover at the back of the unit.
3. Insert 2 AA size batteries. (Note the correct polarity +, --).
4. Replace the batteries and cover.

NOTE: Back-up batteries are essential for the retention of stored data.

3

Caution



- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon --zinc) or rechargeable (nickel-cadmium) batteries.
- Remove all batteries when replacing.
- Remove the batteries from the unit if it is not going to be used for long periods.
- Do not dispose of batteries in fire.
- Do not attempt to recharge ordinary batteries.

Power failure may corrupt data stored in the memory. To reset your Accelerator Vision, see “Memory Failure” in the Trouble Shooting section.

Auto-off

The learning PC will be automatically turned off after about 6 minutes of no input from the player.

AC Adaptor Connection

1. Plug the adaptor into the adaptor jack at the back of the unit.
2. Plug the adaptor into a wall outlet

Caution

- The unit must not be connected to a power supply of more than 9V.
- Only use the unit with the recommended adaptor.
- The adaptor is not a toy.
- The supply terminals are not to be short-circuited.

4

Cleaning and Maintenance

- The unit should be regularly examined for damage to the adaptor, the adaptor cord, enclosure and other parts. In the event of such damage, the unit must not be used with the adaptor until the damage has been repaired.
- Do not dismantle the unit.
- Always disconnect the power supply before cleaning.
- Do not get the unit wet.
- Wipe the unit with a dry cloth.

Mouse Connection

1. Ensure that the unit is turned OFF.
2. Open the mouse jack cover on the back of the unit.
3. Plug the mouse into the mouse jack
4. Turn the unit ON.
5. To prolong the life of the mouse, only use it on a clean mouse pad.

Starting Accelerator Vision Learning PC

When you first turn on the Accelerator Vision you will be asked to do the following:

1. Click on the words “YourName”. You will be prompted to type in your name and then press Enter.
N.B.: This should be the same name you use when you install the X-Cable software in your PC.
2. Enter a password and then press Enter. Do this again to confirm the password and then press Enter.
3. Set the date and time and then press Enter.
4. Select your time zone and then press Enter.

5

Password Screen

Logging in

1. From the pull-down menu, select your name.
2. Enter the password in the Password field and press [Enter]. (If you have forgotten the password, click on [Hint] to see your pre-entered clue).

Logging in as “Guest”

From the pull-down menu, select “Guest”, and press [Enter].

NOTE: Users who log in as "Guest" will not be able to save any information or access to the web area.

— Chapter 3 —

Useful Features and Controls

Scroll Bar

To view continuing pages, click on the arrows at the bottom of the bar or press the down arrow key.
To view previous pages, click on the arrows at the top of the bar or press the up arrow key.

Demo

Press this key to see a demonstration of the exciting features and activities on your Accelerator Vision Learning PC.

6

X-Cable

Please refer to the X-Cable manual.

The Keyboard

The keyboard operates in the same way as a computer keyboard or typewriter.

Cursor

The arrow cursor can be controlled by the mouse or touch pad.

The Touch Pad

Use this to control the arrow cursor. Just move your finger across the touch pad in the direction that you wish the cursor to move.

The Mouse

This controls the arrow cursor. Move the mouse, on the mouse pad in the direction that you would like the cursor to move. The left mouse button functions as a select key and [Enter] key (see “ Making a Selection” below).

The Flashing Cursor

This shows where the next typing entry will appear. This can be repositioned by moving the cursor arrow to a new position, and clicking the left mouse/touch pad button.

Making a Selection

In most of the activities, you will need to make a selection. This can be done in the following four ways:

7

A. Making a selection with the touch pad - also called “Clicking on”

Use the touch pad to position the cursor arrow over the desired icon and press the left button.

B. Making a selection with the mouse - also called “clicking on”

Use the mouse to position the cursor arrow over the desired icon and press the left mouse button.

C. Making a selection with the arrow keys

Press the arrow keys to highlight the desired icon and press [Enter].

D. Making a selection using the keyboard

For multiple-choice questions, type in the letter corresponding to the chosen answer.

Undoing a selection/Return to previous screens/Quitting a game

Click on the exit icon at the top right of the title bar or press the [ESC] key on the keyboard.

Main Menu

When the power is turned on, a welcome animation is shown, followed by the main menu. This menu consists of 8 sectors. To reveal what activities are available in each sector, select a sector by clicking on one of the icons using the touch pad or mouse (see making a selection).

Remark: you can also assign keys to open any activity with the Hot Key settings

8

— Chapter 4 —

Game Rules

These rules apply to most games.

Attempts

You have three attempts to answer each question correctly.

Time Limit

There is a time limit for answers to be entered. (About one minute for each question). The clock resets after each incorrect attempt. However, if the time elapses before an answer is submitted, then no more attempts to answer that question are allowed, and the game proceeds to the next question.

Help

Use "Help" to see the instructions.

- Press [Help] on the keyboard, OR
- Click the triangle on the top of the screen.

While the Help screen is open, the game's clock stops. Click on the exit icon, or press [Esc] to exit Help and resume the game.



9

Hints

In some activities, you are allowed to get a hint from the learning PC. Select [Hint] from the Help screen or press Function + [T]. But remember there is a maximum of two hints per question, and a point is deducted for each hint used. Activities with the hint function are: Jail Break (1&2player), Word Shuffle, and Anagram Slam.

Level/Score/Time Remaining

These are displayed on the Instruction/Help screen. (also see "Help").

Answer

If you don't know the answer to a question, you can press [Ctrl] + [A] to see the answer. No points are awarded.

Levels

There are five levels in each game. There are 10 questions for each level, and your movement between levels depends on your performance on the level just completed (see the table below). After a round of questions, a summary screen appears to show the score and whether you advance a level, go back a level, or stay at the same level.

Score	Movement
Above 85%	Advance to the next level
61%-84%	Repeat the current level
Below 60%	Move down to the previous level

10

Scores

Points are awarded according to the number of attempts taken to answer each question correctly.

If a question is answered correctly	Points awarded	e.g Level 2	e.g :evel 3
1st Attempt	10 x level	10 x 2 = 20	10 x 3 = 30
2nd Attempt	6 x level	6 x 2 = 12	6 x 3 = 18
3rd Attempt	3 x level	3 x 2 = 6	3 x 3 = 9

One point is deducted for each hint used (maximum of two per question).

Your score is totaled only when you advance a level or when or you quit the current level.

Penalty (minus 100 x level) will be applied for those who move down to the previous level.

For example: If you are in level 1 and you score 95 points you move up to level 2.

In level 2 you only score 45 points, then your cumulative points are 95-100, and you must go back to level 1.

Winning a Game

Beat level 5 and discover a special surprise. Good Luck!



11

Chapter 5

User Settings

Changing the Password

1. Type the your new password in the “ New Password” field and the “ Confirm Password” field. The same word must be entered in both of these fields.
(An asterisk is displayed for each letter entered so that your password remains a secret.)
2. Enter a clue in the “ Hint” field to remind yourself of the password in case you forget.
 - Reset the password by removing and replacing the back-up batteries.
Be sure to leave all batteries out for at least 10 minutes to clear the memory.
 - NOTE: Back-up batteries are essential for the retention of stored data.
Removing the back-up batteries will delete all stored data.



Screen Saver

The Screen Saver protects the screen from damage from a prolonged period of exposure to one image. If there is no input for more than a set period of time, the Screen Saver is turned on automatically. As soon as any key is pressed the Screen Saver is turned off and the previous screen returns. The time that elapses before the Screen Saver picture comes on can be changed.

1. Select “ Screen Saver”.
2. Select the elapsed time before the Screen Saver comes on.
3. Press [Enter] or select [OK] to save the changes or [Cancel] to ignore any changes.



 
CHANGE GRAPHIC
TO "Atom, Space,
X-Cable" in the pull
down menu

12

Volume

You can adjust the volume to a lower setting.

1. You can press [Function] + [Q] to go to the volume setting screen.
2. Click on the plus or minus button or press the arrow keys to move the button to the desired volume level.
3. Click on [OK] or press [Enter] to set any changes, or click on [Cancel] to ignore any changes.



The Contrast Setting Screen

Depending on the surrounding lighting conditions, adjust the contrast for better viewing. The Accelerator Vision features a 10 level adjust.

1. You can press [Function] + [W] to go to the Contrast setting screen.
2. Click on the plus or minus button or press the arrow keys to move the button to the desired level.
3. Click on [OK] or press [Enter] to set the changes or [Cancel] to ignore any changes.



 
The Voice Setting Screen

1. Click on [On] or [Off] to activate or de-activate the voice prompts.
2. Click on [OK] or press [Enter] to set the changes or [Cancel] to ignore any changes.



The Time and Date Setting Screen

1. At the Setting sub-menu, select “ Time/Date”, OR press [Function] + [E] to go to the Time/date setting screen.
2. Set the date by selecting the month, day and year from the pull-down menu.
3. Set the time by highlighting the field and pressing the up or down arrow keys to change the hour/minutes/am/pm components. Click on the time box again to confirm the time set.
4. Click on the box to activate/deactivate the 24-hour clock.

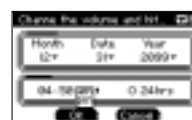

13

Assigning Hot Key Settings

At the Setting sub-menu, select “ Hot Key”.

Assign any of the activities to the F1-F12 keys by selecting from the pull down menu.

Chapter 6

 
Activities

WORD SECTOR

Spelling Zone

Jail Break

Your mission is to prevent the villain from escaping from jail. At the bottom of the screen is a secret word. You are given 10 free points at the beginning of each question and you are allowed 3 incorrect guesses after which 2 points are deducted for each incorrect guess. You have 7 guesses for each question. With each incorrect guess a bar will be removed from the jail. When all the bars are taken away, the villain will escape from the jail.



Jail Break - 2 players

Play against a friend. Take turns to score as many points as possible.

Player 1 - Enter a word (maximum 9 characters)

Player 2 - Prevent the villain from escaping from jail (see instructions for Jail Break)

14

Word Warp

You must select the correct answer from the choices given.



Letter Eliminator

A word appears spelled incorrectly with an extra letter. Remove the letter by shooting it with the Air Fighter. The Air Fighter is controlled by using the left and right arrow keys. Once you select a letter, press the space bar or [Enter] to fire a laser beam to eliminate the extra letter.



Word Shuffle

 
A scrambled card appears on the screen. Unscramble the cards to reveal the word. Insert the unscrambled cards at the bottom by typing in the word using the keyboard or using the arrow keys.



Grammar Zone

Word Detective


For each word that appears at the bottom of the screen, you must click on the appropriate part of speech that it belongs to.

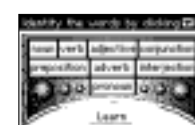

Capital Caper

On the screen is a sentence. Identify the words that require capitalization or uncapitalization and correct them by:

 1. Using the arrow key, or clicking on the word(s).
2. Press [Capitalized] or [Un-capitalized] to submit your answer.




15

Punctuation Perfection

A sentence with a punctuation error appears on the screen.

 1. Select the incorrect punctuation mark and click [Enter] to highlight it.
2. Replace this with the correct punctuation mark by selecting from the list at the bottom.

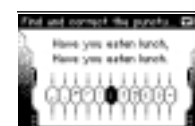

Grammar Jammer

You must select the correct answer from the choices given.



VOCABULARY SECTOR

Vocabulary Zone

Like It Or Not

A pair of words appears on the screen. Choose whether they are an antonym, a synonym or neither by pressing one of the three buttons.



Word Transformer

A word appears on the screen. By changing one letter, another word can be formed. There is also a clue given. Change one letter to form the new word and press [Enter].



 
16

Anto-Match

Flip over two tiles at a time and try to match up pairs that are antonyms.
Each game consists of 5 pairs and each pair is worth 2 points.

Syno-Match

Flip over two tiles at a time and try to match up pairs that are synonyms.
Each game consists of 5 pairs and each pair is worth 2 points.

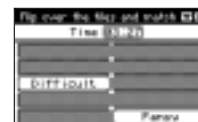

Game Zone

Word Quest

You are shown a list of words found in a grid. When you are ready to find the words press [Enter] and the clock will begin to count down. All words read from left to right or top to bottom.

1. Select the first letter of a word, hold down the shift key and then select the last letter.
2. Press [Enter] each time a word has been found.

You can view the list of words again by pressing the [List] button on the screen but the clock will continue to count down.



Word Quest – 2 player

This game is played like to Word Quest but with 2 players.

Player 1 – Type in words for Player 2 to find. After typing each word, press [Enter].

Player 2 – Look at and memorize the words to be found and when you are ready, press [Enter] to start searching.

17

 
Anagram Slam

Rearrange the letters of the word to find the anagram.
Simply type in your answer.



Silly Stories

Enter in words according to the part of speech indicated. Press [Enter] after each word.

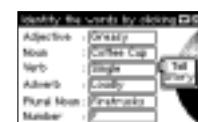


Crypto – Code

Guess a four-letter word. To fill in your answer, type in in and press [Enter].

In each level, you have 10 guesses.

The following will help you make the correct guess:

 - 1.) the solid cross mark - X indicates a correct letter and a correct corresponding position
- 2.) the hollow cross mark indicates a correct letter, but the wrong position
- 3.) a blank space indicates a wrong letter and position.

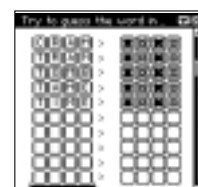

MATHEMATICS SECTOR

You are given 3 attempts to answer each question correctly. Good Luck!

Submit your answer by:

1. Typing in the answer or using the mouse or touch pad to click on the on-screen number pad.
2. Some games require the answer to be submitted in a different way, in which case the instruction is given with the game description.

NOTE: If you type in the answer incorrectly, press [Back Space] to make a correction.

18

Basic Math Zone

Addition, Subtraction, Multiplication and Division

These games challenge the basic arithmetic skills of addition, subtraction, multiplication and division. Fill in the box with the correct answer.

Fraction Zone

Fraction Tutor

This is a fun introduction to fractions. Scroll down to reveal more pages and up to return to the previous pages. Some pages have places to click on the screen that show interactive pictures to help you understand.

Fractions Addition/ Subtraction and Multiplication/Division

Develop your fraction skills by solving these problems.

1. Type the answer in the boxes.

Fraction Comparison

This activity challenges your understanding of fractions.

There is a box with three buttons: [<], [=] and [>].

Two fractions appear on the screen and if you think the first fraction is:

- Greater than the second fraction, then click on [>] and press [Enter].
- Less than the second fraction, then click on [<] and press [Enter].
- The same size as the second fraction, then click on [=] and press [Enter].

Fraction Reaction

4 fractions appear on the screen, you must select the one that is different from the others.



19

Decimal Zone

Decimal Tutor

This is a fun introduction to decimals. Scroll down to reveal more pages or up to return to the previous page. On some pages, there are places to click on the screen that show you interactive pictures to help you understand decimals.

Decimals Addition / Subtraction and Multiplication / Division

The purpose of these games is to develop your skill in decimal arithmetic. Fill in the boxes with the correct answer.

Percentage Tutor

This is a fun introduction to percentages.

Scroll down to reveal more pages or up to return to the previous page.

With some pages, there are places to click on the screen that show you interactive pictures to help you understand.

Percentages Problems

Be perfect at percentages by solving these problems.



 
20

A. MATHEMATICS SECTOR

Geometry Zone

3D Geometry Tutor

This tutor will illustrate geometry formulas (area, volume, and angles) using 3D animations. When a new formula is introduced, there will be a button to show the animation and an example.

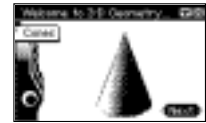

Geometry Problem

Solve these questions to prove that you really are a geometry genius!
Type your answers in the box and press [Enter]

Mathematics Game Zone

Big or Little

This activity challenges your understanding of Mathematics.

There is a box with three buttons: [<], [=] and [>].

 
Two equations appear on the screen and if you think the first equation is:

- Greater than the second, then click on [>] and press [Enter].
- Less than the second, then click on [<] and press [Enter].
- The same size as the second, then click on [=] and press [Enter].



Operation Order

You are given 3 numbers. You must enter each of the 3 given numbers into the correct boxes, thus creating a correct equation.



21

TRIVIA / GAMES SECTOR

Trivia Zone

Science Trivia, History Trivia, and World Trivia

Test and improve your general knowledge in the Trivia Zone!
Just select the correct answer.

Place Your Order

You are given four pieces of information. Rearrange them in the proper order according to the description.



Games

Repeat the Beat

Repeat the sequence shown by clicking on the tone buttons or by typing the tone number. See the sequence again by pressing the [Repeat] button. You can only use the [Repeat] button once in each question.



22

Water Balloon Attack

Uncover all of the squares except the water balloons as quickly as possible. Click on a square to reveal what's behind it.

1. If a number appears in the square, this number describes how many balloons are in the surrounding 8 squares.
2. If it is a balloon, then the game is over and a new game begins.
3. If there are no balloons in the surrounding 8 squares, no number is shown and all adjoining squares are uncovered.
4. If you believe there is a balloon behind a covered square, you can mark it with a flag by clicking the right mouse button.
5. If you believe you have marked all of the balloons around the numbered squares, you can uncover all the empty squares around it by clicking on it with both mouse buttons.

The timer starts counting as soon as the first move is made.

Note:

Level 1, is 6 squares across by 8 squares tall, with 8 balloons.

Level 2, is 8 squares across by 8 squares tall, with 16 balloons.

Level 3, is 12 squares across by 8 squares tall, with 24 balloons.

Scoring

Level 1: 500 points minus the time it takes in seconds.

Level 2: 1000 points minus the time it takes in seconds.

Level 3: 1500 points minus the time it takes in seconds.



Code Buster

Game-play is similar to Crypto-Code, but instead of guessing four-letter words, you guess numbers (1- 6).

To submit your answer, type in your answer and press [Enter].

In each level, you have 10 guesses. If you complete a level within the given amount of time, you can advance a level.

Indicator:

- In this game the position of the circles does not correspond to position of the numbers.
- A filled circle indicates the correct position and the right number.
- An empty circle indicates the wrong position, but the right number.
- The blank space indicates an incorrect number and position

Note:

 
- Level 1: 4 columns.
- Level 2: 5 columns.
- Level 3: 6 columns.

Crystal Ball

This game tells you the fortune that you will have.

Think of a question and then press [Enter].

After the crystal ball stops rotating, the screen then turns to reveal the answer.

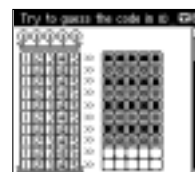

Super Snake

The snake is controlled by arrow keys - once a direction is pressed, it keeps going until another direction is pressed.

The snake cannot hit itself or the wall. It grows bigger when fruit is eaten.

Each level has 10 pieces of fruit. In order to move to the next level, you must eat all the pieces of fruit.

There are 5 levels, and the speed of the snake is faster in each higher level.

 


Brick Breaker

You use the paddle to hit the ball and remove all the bricks.

Use the arrow buttons to control the paddle.

There are 5 levels. If you fail to hit the ball 3 times, the game is over and a new game begins.



SKILL / PDA CENTER

Skill Zone

Keyboard Tutor

Scroll down the document and follow the instructions given in the tutorial pages.

(With some pages, there will be places to click on the screen that will show you pictures to help you understand.)



 
25

Hyper Typer

Find your typing speed.

Type the given paragraph. As you type the words, any errors are highlighted.


At the end of the paragraph, a summary screen appears showing the total number of characters typed and your accuracy percentage.

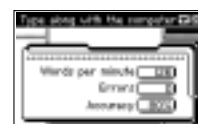

Keyboard Conveyor

A conveyor belt appears on the screen. Letters start rolling out on the belt.

 You must type the letters as they appear and stop them from falling off into the bin.

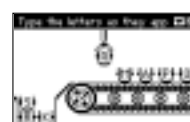

PDA Zone

Address Book

This special feature offers a comprehensive and convenient way to store important telephone numbers and contacts. Depending on memory, a maximum of 96 contacts can be stored.

- **Adding a new entry**

1. Select "New" from the title bar.
2. The flashing cursor appears in the name field. Type in a name and press [Enter] or [Tab]. The flashing cursor moves to the next field. Complete the remaining fields in the same way. (There is a maximum of 15 characters in the telephone number field.) Use the scroll bar to view further down the page.
3. Click [Save] on the screen or press [Ctrl] + [S] to save the entry or [Cancel] to disregard any changes.

 
Note: Only the name field must be filled in. All the other fields can be skipped and filled in later. Move between fields by clicking the cursor arrow in the desired fields or pressing [Enter] or [Tab]. The Address Book can store a maximum of 96 contacts.



26

- **Finding a record with the Search function**

1. Entries are listed alphabetically by name.
Use the scroll bar to view entries further down the page, or
2. Select “Search” from the title bar.
3. Type in the name you are looking for and press [Enter].



- **To view all the fields of an entry**

1. Highlight the entry you want to view and press [Edit]
2. Alternately, double click on the selected entry

- **To print the telephone list (only name and phone number)**

1. Select “Print” from the title bar.
If the printer is not connected to your PC, a warning screen appears.
Make sure the printer is connected and switched on.
2. Click on [Yes] to print or [No] to abort the print command.

- **To delete an Address Book entry**

1. Highlight the entry you want to remove.
2. From the title bar, select “Delete”. A warning screen appears.
3. Click on [Yes] to delete or [No] to cancel.

- **To edit a saved Address Book entry**

1. Highlight the entry you want to edit.
2. Select “Edit” from the title bar.
3. Move the flashing cursor to the required field and type over the old information.
4. Click on “Save” on the title bar to update the entry or [Esc] to ignore the changes.

27

- **To print a full Address Book record**

1. Highlight the selected record and press [Edit] to print from the Edit window.
2. Select “Print” from the title bar.
If the printer is not connected to your PC, a warning screen appears.
Make sure the printer is connected and switched on.
3. Click on [Yes] to print or [No] to abort the print command.

Calendar

The calendar opens with today's date highlighted. If there is a day reminder or an appointment on that day, that day is highlighted on the calendar.

- **Changing the displayed months and years**

- To display preceding months, click on the month back icon (◀).
To display future months, click on the month forward icon (▶).



- **Accessing the Appointment Book from the Calendar**

You can access the Appointment Book from the Calendar.
Highlight the day you want to view, then select “Appointment book”.

- **Accessing the Day Reminder from the Calendar**

You can access the Day Reminder from the Calendar.
When the Calendar screen is opened, select “Day Reminder” from the bottom right of the screen.

28

Day Reminder

The Accelerator Vision will also remind you of special dates by displaying a message on the screen every time the unit is turned on from 7 days before, up until the actual date. When this activity is open, today's date is shown. You can review the record by selecting the Task number.



1. Creating and Editing Reminders

- Select a task number. (You can set different tasks to run at the same time).
- Select a date by clicking on the arrows in the date bar
- Change the time by clicking on the time display and using the up and down arrow keys to adjust it.
- Type in your message in the content field.
- Select 7 days or Yearly. If you choose Yearly the reminder will work every year.
- Press [Save] to save the records or [Del] to delete the records.

Appointment Book

The built-in personal appointment book can remind you of special meetings and dates.

Alarm: The unit will ring you up when the



1. Creating and Editing Appointments

- Turn to the required date
- Select a Task number. (You can set different tasks to run at the same time).
- Click on the hour/minute components of the clock and press the arrow keys to set the time.
- Click on the message box and type in the appointment details.
- Click on [Alarm] or [Reminder].
 - ↪ The Reminder option displays a message at the marked time but only if the unit is turned on.
 - ↪ The Alarm option sets off an alarm at the designated time even if the unit is turned off.
- Click on [Save] to save the changes or [Delete] to delete the records.

TOOLS/REFERENCE CENTER

Tool Zone

Word Processor

With the Accelerator Vision, you can create and print your own documents.

You can even transfer them to your PC for editing. (See the X-Cable Manual)

Printing:

The Accelerator Vision comes with a standard keyboard. Use the letter and number keys to type your text.

- **Shift Key**
Hold down the 'Shift' key while pressing another key to make uppercase letters or to create punctuation marks and symbols as shown on the top part of the keys.
- **Caps Lock Key**
Press this key to lock letters into upper or lower case.
- **Back Space**
Press this key to delete the character to the left of the flashing cursor or any selected, highlighted text.
- **Delete**
Press this key to delete a character to the right of the flashing cursor or any highlighted text.
- **Enter key**
Press this key to go to the next line.
- **Arrow Keys**
Use these to insert the flashing cursor anywhere in the text field. The flashing cursor cannot be moved beyond the limits of the active text.

- **Highlighting /selecting a block of text**

Format blocks of text by highlighting the text first.

1. Click twice on the first character of the text to be highlighted.
2. Click on the last character of the text to be highlighted.

NOTE: Only one block of text can be highlighted at a time.

- **Space Bar**

Press this to insert a space

- **Opening a menu**

1. Keyboard method:

To open the File menu, press [Alt] + [F]

To open the Edit menu, press [Alt] + [D]

To open the Format menu, press [Alt] + [O]

To open the Tools menu, press [Alt] + [T]

2. Mouse/touch pad method:

Click on the desired menu option.

- **Selecting from menus**

Once a menu is opened, you can select from the listed options by clicking on that option or pressing the key combinations shown beside the menu options.

- **Selecting from a different menu**

Once a menu is opened, a different menu can be opened by using arrow keys on the keyboard.

Moving Blocks of Text (Cutting/Copying and Pasting)

Cutting Text (also see Highlighting and Pasting):

1. Highlight the block of text to be moved.
2. Select “Cut” from the Edit menu or press [Ctrl] + [X]
3. Paste the block into its new position [Ctrl] + [V]

Copying Text (See Pasting):

1. Highlight the block of text to be copied.
2. Select “Copy” from the Edit menu or press [Ctrl] + [C]
3. Paste the block into its new position.

Pasting Text:

The last selection of text that has been copied or cut can be pasted to a new position.

1. Place the cursor at the new position for the text.
2. Select “Paste” from the Edit menu or press [Ctrl] + [V].

Bold

Make the highlighted text or a new section of text boldface by selecting “Bold” from the Format menu or press [Ctrl] + [B].

Italicize

Italicize highlighted text or a new section of text by selecting “Italic” from the Format menu or press [Ctrl] + [I].

Underline

Underline highlighted text or a new section of text by selecting “Underline” from the Format menu or press [Ctrl] + [U].

- File menu

Start a new document:

Select “New” from the File menu or press [Ctrl] + [N].

Open an existing/saved document:

1. Select “Open” from the File menu or press [Ctrl] + [O]. A list of documents are shown.
2. Select the document you wish to open by:
 - a. clicking on the document name or
 - b. using the up/down arrow keys to highlight the document name and press [Enter].
 The “Open” command is cancelled by selecting [Cancel] or pressing the [ESC] key.

Save a document:

Remember to save your document and any changes made so you can continue working on the latest document in the future.

1. Select “Save” from the File menu or press [Ctrl] + [S].
If it is the first time that the document has been saved, you are prompted to type in a name for the document.
2. Click on [OK] or press [Enter].

To delete a current document:

If you no longer need a file, remove it from the learning PC’s memory. This releases more memory to save other files.

1. Select “Delete” from the File menu or press [Ctrl] + [D].
2. A dialogue box appears asking you to confirm the deletion.
Click on [OK] to confirm, or [cancel] or escape icon to cancel the delete command.

Please note that the Accelerator Vision can store a maximum of twenty-four documents depending on the file size of each.

33

Print:

Select “Print” to print out the current document. Remember to check that the:

1. Printer is connected to your PC and power is on.
2. X-Cable is attached to your PC.

 
Exit:

Selecting this option closes the Word Processor and returns you to the Tool Zone menu.

Scoreboard

Use the pull-down menu to see either Personal Best scores or Challenge Game scores. The scores of each game are listed in the score display field. Scroll down to see all the scores. Then you can:

1. Click on [Print] to print out the current scores in the display field, or
2. Click on [Clear] to clear the Personal Best list if the list is displayed.

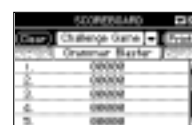

World Time

Check the current time around the world. Select the country where you want to learn the time. You can select up to four different countries at a time.



Alarm Clock

The alarm can be turned off by pressing the space bar on the keyboard.

1. Click on the alarm sound menu and select a sound.
2. Activate the alarm by clicking on the alarm field so “On” is displayed.
Deactivate the alarm by clicking on the alarm field so “Off” is displayed.
3. Set the alarm time by clicking on the time display. The hour component begins to flash.
Set the hour of the alarm using the up/down arrow keys. Remember to specify am or pm. Move to minutes by pressing the left/right arrow keys then change the minutes using the up/down arrow keys.



 
34

Creative Zone

Percussion Pro


There are six different drums to create a composition.

1. Produce the sounds by
 - a. Clicking on the pads.
 - b. Pressing the corresponding keyboard keys (show beside each picture).
2. Click on [] to start Recording.
3. Click on [] to pause the recording
4. Click on [] to hear your composition. If there is no recording, nothing plays back.
5. Click [Clear] to clear the recorded composition.
6. Click on [Pause] to insert a pause in between the tunes.

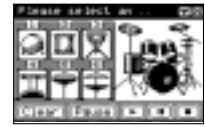

Music Station

 1. There are 10 music melodies that you can choose to play.
2. Press the letter keys to see different animation effects on the screen.

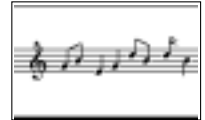

Sequencer

Use 6 musical instruments to create a composition.

1. Select an instrument from the right hand side menu. Click on any instrument, and the instrument becomes highlighted.
2. Produce the sounds by
 - a. Clicking on the keyboard.
 - b. Pressing the corresponding keyboard keys (shown on the keyboard).
3. Click on [] to start recording.
4. Click on [] to pause the recording
5. Click on [] to hear your composition. If there is no recording, nothing plays back.
6. Click [Clear] to clear the recorded composition.
7. Click on [Pause] to insert a pause in between the tunes.

 


35

Music Tutor


Note Name

Learn about note name by clicking on the note mark on the staff.
It will tell you the name of the note.

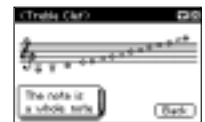


Note Length

 Learn about note length by clicking on the note mark on the staff.
It will tell you the length of the note.

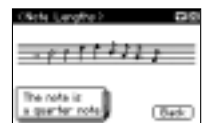


Rest

 Learn about rest name by clicking on the rest mark on the staff.
It will tell you the name of the rest.

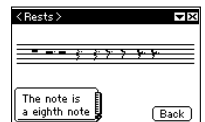

Note Quiz

 A note is displayed on the staff randomly. Select the correct note name by clicking on a choice at the bottom.

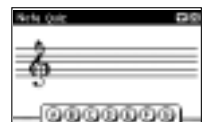

Musical Mathematics

A random musical equation is displayed. You select the note that makes a correct equation.



36

Reference Zone

Calculator

The built-in calculator has an eight-character display. Click on the numbers or operands on the on-screen number pad and press [Enter], or key in the equation using the keyboard and press [Enter] to see the answer.



Graphic Calculator

This activity plots equations and functions into accurate graphs. Enter an equation in the field and click on [Graph]. If the equation is valid, the graph appears in the graph field.



Metric Converter

Enter a number beside the known unit and it is converted to the corresponding U.S. standard / metric measurement. Scroll down for additional choices.



Part of Speech

This is a grammar reference area that defines parts of speech and provides examples.



World Atlas

Learn about over 190 different countries around the world.

1. Click on a continent to show a new map with a list of the countries located there.
2. To see the location of the country, click on the name of the country.
3. Press [Enter] or double-click on the country name and a document appears with statistical information about the country
4. Click on [X], to return to the country name list.



37


Language Zone

Super Translator

You can learn common phrases in 6 languages

French	Italian	Portuguese
German	Japanese	Spanish

 Select a word from the English field to hear that word, first in English, then in another language.

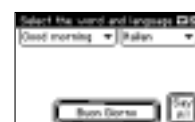

Translation Test

Test your ability to understand a foreign language. Read the question carefully, and then select the correct answer from the choices.

WEB AREA

Oregon Scientific's Web Area, a closed system, is custom designed for children to have fun and learn more about the Internet without the risk of being exposed to inappropriate adult material or the possibility of being contacted by dangerous people.

The Web Area has unique filters, one of which is a specially developed profanity checker to ensure that no e-mail, sent or received, contains profanity. The Web Area also features an online Access Control List that allows parents to select who can e-mail their child.

Additionally there is another exciting feature that can let you create your own web page and upload it to safe-site.net.

For the connection to safe-site.net, please go to the Uplink activity. (Also see "How to synchronize with your home PC" below).

38

E-mail

 
Your child can send e-mail to all Internet users, and you can decide who may send e-mail to your child through the online Access Control List at: www.safe-site.net

To create an e-mail

1. Go to File and select "New"
2. Type in an address in the "To" field
3. Add in a Subject
4. Type in your message
5. Press send
6. Make sure to go to Uplink to connect to the Internet

(Reminder: your PC must already have a connection and be online.)

Depending on the size of each message, a maximum of 70 e-mails can be stored on the Accelerator Vision.

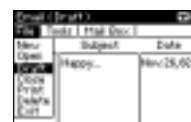

Newsgroups

Your child can participate in newsgroups managed and filtered by Oregon Scientific.

 
Each one contains topics of interest for your child to discuss with their peers.

Read a message:

After each synchronization, your newsgroups will be updated.

Post a message:

To add a message press [Post] and then you must go to the Uplink window and connect to the Internet.

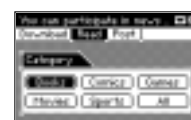

Download Questions

Periodically, your child can download fun new educational questions from the Web Area.

39

Card Gallery

From the choice of greeting cards, your child can select one, fill it in, and send it to another Safe-site member or to any Internet user.

Sending a greeting Card

1. Type in an e-mail address
2. Select a greeting card and press [Next] to enter your message
3. Press [E-mail]

Printing a Greeting Card

You may also print it out through your home PC's printer.

1. Select a greeting Card and enter your message
2. Press [Print]



Remarks:

There are two choices: the Large Card folds an A4 paper in half, and the Small Card folds it in quarters.

You can select the choices on the PC (see also Card Viewer in the X-Cable manual)

Score

 
The Web Area stores and updates a list of the top 10 verified scores for the 10 "Challenge" Games in the Accelerator Vision.

When you access the Web Area, it automatically updates the scoreboard and lets you know if you are in the top 10.

40

Web Page Designer


1) First select a template (each template consists of 4 pages)

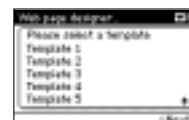

2) Next, enters the content for each page.





 3) Afterwards there are two options - view on the PC or upload to Safe-site.net.



- If you choose “PC”, the web pages will only send the file to the PC after the next synchronization.
- If you choose “Safe-site” the web page will be sent both to the PC and Safe-site (web.safe-site.net/log in_name). (Also see safe-site.net registration) (<http://web.safe-site.net/your login name>)

 REMEMBER: In order to send to Safe-site.net your Accelerator Vision must be connected to a PC that is connected to the Internet.

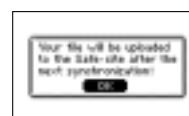

41

Uplink

 
Establish a connection with the Accelerator Vision to the Server and the PC.

1. Enter the log in name and password into the fields
2. Press [Connect] or [function] + [] to start the “ Synchronization” process with your home PC.



For Recovery (Also see the X-Cable Manual – Recovery)

- Please select the option as shown in the picture. You can backup files on the PC from the Vision or the other way round.

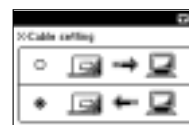

Chapter 7

Safe-site.net

A safe introduction to Internet communication for children

We all want our children to learn valuable Internet skills without the possibility of encountering undesirable web sites.

That's why we designed **www.safe-site.net**

Our Web Area's stylish design provides the same up-to-date activities that are available to all web users but in a child-safe, friendly environment. With Safe-site.net, children can build real Internet skills in a fun and exciting way.

“Top 10” scoreboard

If your score is in the top 10, then your name will appear on the scoreboard until it is surpassed.

Web Page Designer

Design your own web page and host it at our Safe-site server.

How to sign up for safe-site.net:

Activating the account:

The product comes with a secret password for the parent that is used to open the safe-site account.

It can be found on a separate piece of paper attached to the manual, and labeled “Access Key”.

The parent first registers the product using the access key on our web site (www.safe-site.net) and obtains the Safe-site e-mail account (log in name & password) for their kids. An additional parent password is also given to oversee control of the account (also see Password for Parents).

Password for Kids:

Kids can enter the log in name and password through the Uplink activity to gain access to the Web Area.

Password for Parents:

Parent can control two main aspects:

1. The publication of the Web Page:

When you press Uplink or [function] + [], a pop up window with the message “Please enter your parent password” will appear. If you fail to enter the password, your web page cannot be viewed on the World Wide Web. Additionally the parent password can be used to control the web page uploaded onto the World Wide Web.

2. You may control access to the child’s account through use of the ‘Admin’ site (www.safe-site.net)

Here you may:

- Filter any unwanted e-mail.
- Delete the web pages.

43

Chapter 8

How to synchronize with your home PC

Synchronization is the process that transfers data (such as Web activities) back and forth between the Internet, the PC, and the Accelerator Vision.

1. Go to the Web Area and select Uplink.
2. Enter the log in name and password (obtained after web registration).
3. Press [connect] or [function] + [] to begin the synchronization.

Note: the log in name and password are obtained after your web registration. (also see “How to sign up for safe-site.net”)

Chapter 9

X-Cable

The Accelerator Vision is sold with the X-Cable (a USB device) for use with your home PC. The X-Cable connection is used for Web activities, Printing, and System recovery. For more detailed information, please refer to the X-Cable manual.

44

— Chapter 10 —

Trouble Shooting

Before contacting an authorized service center, please carry out the following simple checks. You may call at 1-800-THESHCK (843-7422) to speak to a customer service representative.

No Display

Is the power supply connected?
Are the batteries installed properly?
Do the batteries need replacing?

Difficult or no response from the mouse

Is the ball of the mouse or mouse pad clean and free from dust?
Is the mouse connected correctly?

Cannot connect to the Web or use Email

Have you established the Internet connection on your PC?
Please check the safe-site log in name and password are entered correctly.
Please check that the X-Cable is securely attached to your PC and the Accelerator Vision.

Cannot Print

Have you correctly connected your printer to your PC?
Is the printer cable securely attached to your PC?
Please check that the X-Cable is securely attached to your PC and the Accelerator Vision.

45

Black-out screen or abnormal display

Disconnect the power supply by removing the batteries or disconnecting the adaptor for at least 10 seconds before connecting the power supply again.

Memory Failure

In the unlikely event that the memory becomes corrupted, reset your Accelerator Vision by:

1. Removing all batteries, including back-up batteries and leave the machine unplugged for 30 minutes. OR:
2. Press [R] + [On] to reset. (Warning: All memory will be erased.)

Developing learning aids is a responsibility that we at Oregon Scientific take very seriously. We make every effort to ensure the accuracy and appropriateness of the content that forms the value of our products. However, errors can sometimes occur. It is important for you to know that we stand behind our products and we encourage you to call our Consumer Services Department at 1-800-853-8883 with any problems and/or suggestions that you might have. Our service representatives will be happy to help you.

Conforms to safety requirements of ASTM F963, EN71 Parts 1,2 & 3 and EN50088.

In an effort to continually improve our products, the actual screen display on the product may differ slightly from the diagrams shown.

46

Unit

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99

RadioShack Corporation
Fort Worth, Texas 76102

60-2630
C140
05A01
Printed in China
P/N: 086-000740-010