

# Projector

## User's Manual - Operating Guide

Thank you for purchasing this projector.



**WARNING** Before using, first read the "Before using" section of this manual. Then read other sections of this manual to ensure correct usage through understanding. After reading, store them in a safe place for future reference.

### NOTE

- The information in this manual is subject to change without notice.
- The manufacturer assumes no responsibility for any errors that may appear in this manual.
- The reproduction, transmission or use of this document or contents is not permitted without express written authority.

### TRADEMARK ACKNOWLEDGMENT :

- VGA and XGA are registered trademarks of the International Business Machines Corporation.
- Apple and Mac are registered trademarks of Apple Computer, Inc.
- VESA and SVGA are trademarks of the Video Electronics Standard Association.
- Windows is a registered trademark of Microsoft Corporation.
- Internet Explorer is a trademark of Microsoft Corporation.

All other trademarks are the property of their respective owners.

# Before Using

## SAFETY PRECAUTIONS

|   |   |
|---|---|
| <p><b>WARNING:</b><br/>BEFORE OPERATING, PLEASE READ OWNER'S MANUAL.</p> <p>DO NOT REMOVE SCREWS EXCEPT LAMP COVER SCREWS.</p> <p>DO NOT BLOCK VENTING OPENINGS.</p>                                | <p>THE USER MUST COMPLETELY AVOID THE FOLLOWING OPERATIONS IN ORDER TO PREVENT THE FOLLOWING TWO CONSEQUENCES: (1) THE USER MUST NOT CAUSE A SHORT CIRCUIT, AND (2) THE USER MUST NOT CAUSE A SHORT CIRCUIT THAT MAY CAUSE UNDESIRABLE OPERATIONS.</p> <p>THIS CLASS A DIGITAL APPARATUS COMPLIES WITH CANADIAN REQUIREMENTS.</p> <p>CEI APPAREIL NUMÉRIQUE DE LA CLASSE A EST CONFORME À LA NORME NMB-003 DU CANADA.</p> |
| <p><b>AVIS:</b><br/>VEUILLEZ LIRE LE MODE D'EMPLOI AVANT L'USAGE.</p> <p>NE PAS RETIRER LES VIS À L'EXCEPTION DES VIS DU COUVERCLE DE LAMPE.</p> <p>NE BLOCHEZ PAS LES ORIFICES DE VENTILATION.</p> | <p><b>WARNING:</b><br/>VOR DEM EINSATZ DIE BEDIENTUNGSANLEITUNG LESEN.</p> <p>KEINE SCHRAUBEN AUßER DEN LAMPENDECKELSCHRAUBEN ENTFERNEN.</p> <p>LÜFTUNGSÖFFNUNGEN NICHT BLOCKIEREN.</p>   |
| <p><b>警告:</b><br/>ご使用になる前に、取扱説明書をお読みください。<br/>・ランプカバー以外のネジを取り外さないでください。<br/>・通気孔をふさがないでください。</p>  | <p><b>警告:</b><br/>操作前、請詳細阅读使用说明书。<br/>・请勿移除非灯罩盖(灯罩盖除外)的螺丝。<br/>・请勿堵塞通风孔以免内部温度升高导致故障或火灾。<br/>23553839</p>  |



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DANGEROUS HIGH VOLTAGES ARE PRESENT INSIDE THE ENCLOSURE. DO NOT OPEN THE CABINET. REFER SERVICING TO QUALIFIED PERSONNEL ONLY.

### FCC Radio Frequency Interference Statement

#### Note:

#### USA only

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiates radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### WARNING:

#### USA only

Changes or modifications made to this equipment, not expressly approved by Toshiba, or parties authorized by Toshiba, could void the user's authority to operate the equipment.

#### Notice:

#### CANADA only

This Class A digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

#### WARNING:

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

## Before Using (continued)

### **IMPORTANT SAFETY INSTRUCTIONS**


**CAUTION: PLEASE READ AND OBSERVE ALL WARNINGS AND INSTRUCTIONS GIVEN IN THIS OWNER'S MANUAL AND THOSE MARKED ON THE UNIT. RETAIN THIS BOOKLET FOR FUTURE REFERENCE.**

This set has been designed and manufactured to assure personal safety. Improper use can result in electric shock or fire hazard. The safeguards incorporated in this unit will protect you if you observe the following procedures for installation, use and servicing. This unit is fully transistorized and does not contain any parts that can be repaired by the user.

**DO NOT REMOVE THE CABINET COVER, OR YOU MAY BE EXPOSED TO DANGEROUS VOLTAGE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.**

#### **1. Read Owner's Manual**

After unpacking this product, read the owner's manual carefully, and follow all the operating and other instructions.

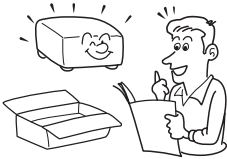

#### **3. Source of Light**

Do not look into the lens while the lamp is on. The strong light from the lamp may cause damage to your eyes or sight.



#### **2. Power Sources**

This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.



#### **4. Ventilation**

Openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.




## Before Using (continued)

### IMPORTANT SAFETY INSTRUCTIONS (continued)

#### 5. Heat

The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

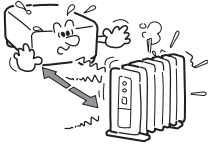


#### 6. Water and Moisture

Do not use this product near water. - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool and the like.



#### 7. Cleaning

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a soft cloth for cleaning.

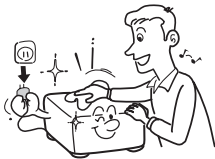

#### 8. Power-Cord Protection

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.




#### 9. Overloading

Do not overload wall outlets; extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.



#### 10. Lightning storms

For added protection for this product during storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the product due to lightning and power-line surges.

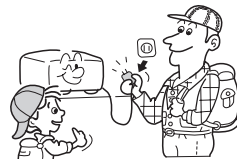

## Before Using (continued)

### IMPORTANT SAFETY INSTRUCTIONS (continued)


#### 11. Object and Liquid Entry

Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.




#### 12. Do not place the product vertically

Do not use the product in the upright position to project the pictures at the ceiling, or any other vertical positions. It may fall down and dangerous.

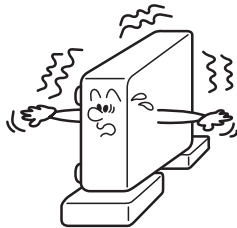

#### 13. Stack Inhibited

Do not stack other equipment on this product or do not place this product on the other equipment. Top and bottom plates of this product develops heat and may give some undesirable damage to other unit.

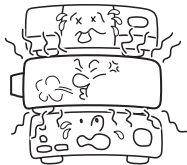

#### 14. Attachments

Do not use attachments not recommended by the product manufacturer as they may cause hazards.

#### 15. Accessories

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



## Before Using (continued)

### IMPORTANT SAFETY INSTRUCTIONS (continued)

#### 16. Damage Requiring Service

Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a) When the power-supply cord or plug is damaged.
- b) If liquid has been spilled, or objects have fallen into the product.
- c) If the product has been exposed to rain or water.
- d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e) If the product has been dropped or damaged in any way.
- f) When the product exhibits a distinct change in performance - this indicates a need for service.

#### 17. If glass components, including lens and lamp, should break, contact your dealer for repair service.

This product incorporates glass components, including a lens and a lamp. If such parts should break, please handle with care to avoid injury and contact your dealer for repair service. The broken pieces of glass may cause injury. In the unlikely event of the lamp rupturing, thoroughly clean the area around the projector and discard any edible items placed in that area.

#### 18. Servicing

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



#### 19. Replacement Parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards. (Replacement of the lamp only should be made by users.)

#### 20. Safety Check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.



 
 
#### 21. Do not leave thermal-paper documents or easily deformed items on top of the unit or near the air exhaust.

The heat from the unit could erase the information on the thermal paper, or cause deformation or warping. Also, when you touch a metal object put near the air exhaust, a burn may be caused.


 
 
## Before Using (continued)

### POWER SUPPLY CORD SELECTION

If your line voltage is 220 to 240V, use one of the following types of cable.

| Plug configuration  | Plug type | Line voltage |
|---|-----------|--------------|
|  | EURO      | 220 - 240V   |
|  | UK        | 220 - 240V   |

Use a 5A fuse which is approved by ASTA or BSI to BSI362.  
Always replace the fuse cover after changing the fuse.

| Plug configuration  | Plug type                     | Line voltage |
|---|-------------------------------|--------------|
|  | Australian<br>240V<br>10A     | 200 - 240V   |
|  | Switzerland<br>240V<br>6A     | 200 - 240V   |
|  | North American<br>240V<br>15A | 200 - 240V   |

### IMPORTANT PRECAUTIONS

#### Save Original Packing Materials

The original shipping carton and packing materials will come in handy if you ever have to ship your LCD projector. For maximum protection, repack the set as it was originally packed at the factory.

#### Moisture Condensation

Never operate this unit immediately after moving it from a cold location to a warm location. When the unit is exposed to such a change in temperature, moisture may condense on the crucial internal parts. To prevent the unit from possible damage, do not use the unit for at least 2 hours when there is an extreme or sudden change in temperature.

#### Place and Manner of Installation

- Do not place in hot locations, such as near heating equipment. Doing so could cause malfunction, and shorten the life of the LCD panel.
- Avoid locations with oil or cigarette smoke. Doing so will dirty the LCD panel and other optical parts, shortening their lives, and darkening the screen.
- Do not use in angle of 20° or more degrees. Doing so could shorten the life of the lamp.
- If used at high altitudes, the unit could cease operation even if used within the rated temperature range. This is because the thinner air at high altitudes decreases the internal cooling efficiency. Therefore, please lower the ambient temperature if using at high altitudes.

## Before Using (continued)

### **IMPORTANT PRECAUTIONS (continued)**

#### **Avoid Volatile Liquid**

Do not use volatile liquids, such as an insect spray, near the unit. Do not leave rubber or plastic products touching the unit for a long time. They will leave marks on the finish. If cleaning with a chemically saturated cloth, be sure to follow the product's precautions.

#### **LCD Panel**

The life of the LCD panel is limited. Take care over the points below so as to use the panel for years.

- To prolong the life of this panel, never fail to turn the power off when the panel is not in use and make sure that the lamp has gone out. The state of the lamp being extinguished helps enhance the effect of energy saving.
- If the air filter is stained and is clogged up, the main unit inner temperature rises. As a result, the life of the LCD is shortened and a malfunction may also occur. Clean the air filter from time to time and replace it regularly. It is recommended that this replacement be done at the time of replacing a lamp. (Ask a dealer where the unit was purchased or your nearby service station about an air filter for replacement.)

In the spaces provided below, record the Model and Serial No. located at the bottom of your LCD projector.

Model No.

Serial No.

Retain this information for future reference.



## Before Using (continued)

### **EXEMPTION CLAUSES**

- Toshiba Corporation bears no responsibility in the case of damages arising from natural disaster such as earthquakes, lightning, etc., fire not liable to Toshiba Corporation, operating by third parties, other accidents, or use under abnormal conditions including erroneous or improper operation and other problems.
- Toshiba Corporation bears no responsibility for incidental damages (lost profit, work interruption, corruption or loss of the memory contents, etc.) arising from the use of or the inability to use this unit.
- Toshiba Corporation accepts no liability whatsoever for any damages arising from not having followed the descriptions in this Instruction Manual.
- Toshiba Corporation accepts no liability whatsoever for any damages arising from malfunctions arising from combination with equipment or software that is not related to Toshiba Corporation.

### **OTHER CAUTIONS AND INFORMATIONS**

#### **Copyrights**

Publicly showing or transmitting commercial imaging software or broadcast or Cable-broad casting programs, either commercially or collecting a fee from the audience, or modifying images using the freeze or resize functions, could violate the direct or indirect copyrights of the imaging software or broadcast program, etc., if done without first consulting with the copyright holder. For this reason, please take appropriate measures before performing one of the actions listed above, including obtaining a license from the copyright holder.

#### **Disposal**

This product contains substances which are harmful to humans and the environment.

- The solder used in the PCB manufacturing process contains lead.
- The lamp contains inorganic mercury.

Please dispose of this product or used lamps in accordance with local regulations.

## Projector Features

This multimedia projector is used to project various computer signals as well as NTSC/PAL/SECAM video signals onto a screen. Little space is required for installation and large images can easily be realized.

### ● **Ultra High Brightness**

Crisp, ultra-bright presentations is achieved by using a UHB (ultra high brightness) lamp and a highly efficient optical system.

### ● **Whisper Mode Equipped**

Special mode is available for reducing projector noise to achieve quieter operation.

### ● **User Memory Function**

This projector can memorize 4 settings by MY MEMORY function.

### ● **Partial Magnification Function**

Interesting parts of images can be magnified for closer viewing.

### ● **Keystone Distortion Correction**

Quick correction of distorted images electrically.

### ● **Optical Lens Shift**

The lens of this projector can be shifted vertically. When you want to finely adjust the picture position, use the LENS SHIFT buttons.

## Preparation

Please see the “Contents Of Package” of the “User’s Manual – Quick Guide”. Your projector should come with the items shown there. Contact your dealer anything is missing.


**NOTE** • Keep the original packing material for future reshipment. For moving the projector, be sure to use the original packing material. Use special caution for the lens part.

# Contents

|   |           |   |           |
|---|-----------|---|-----------|
| <b>Before Using</b> .....                       | <b>2</b>  | Correcting The Keystone Distortion .....                        | 26        |
| SAFETY PRECAUTIONS .....                        | 2         | Adjusting The Volume .....                                      | 27        |
| IMPORTANT SAFETY INSTRUCTIONS .....             | 3         | Muting The Sound .....  | 27        |
| POWER SUPPLY CORD SELECTION .....               | 7         | Temporarily Blanking The Screen .....                           | 27        |
| IMPORTANT PRECAUTIONS .....                     | 7         | Freezing The Screen .....                                       | 28        |
| EXEMPTION CLAUSES .....                         | 9         | Using The Magnify Feature .....                                 | 28        |
| OTHER CAAUTIONS AND INFORMATIONS .....          | 9         | Displaying The Child Window .....                               | 29        |
| <b>Projector Features</b> .....                 | <b>10</b> | Selecting An Audio Input .....                                  | 29        |
| <b>Preparation</b> .....                        | <b>10</b> | <b>Multifunctional Settings</b> .....                           | <b>30</b> |
| <b>Part Names</b> .....                         | <b>12</b> | Using The Menu Functions .....                                  | 30        |
| Projector .....                                 | 12        | MAIN Menu .....   | 31        |
| Control Buttons .....                           | 13        | PICTURE-1 Menu .....  | 32        |
| Remote control .....                            | 13        | PICTURE-2 Menu .....  | 34        |
| <b>Setting Up</b> .....                         | <b>14</b> | INPUT Menu .....  | 35        |
| Arrangement .....                               | 14        | AUTO Menu .....   | 37        |
| Adjusting The Projector's Elevator .....        | 15        | SCREEN Menu .....   | 39        |
| Using The Lens shift Buttons .....              | 15        | OPTION Menu .....   | 41        |
| Connecting Your Devices .....                   | 16        | NETWORK Menu .....  | 43        |
| Connecting The Power Supply .....               | 19        | <b>Network Setting Up</b> .....                                 | <b>44</b> |
| <b>Remote Control</b> .....                     | <b>20</b> | <b>Lamp</b> .....   | <b>45</b> |
| About The Laser Pointer .....                   | 20        | Replacing The Lamp .....  | 46        |
| Putting Batteries .....                         | 20        | <b>Air Filter</b> .....   | <b>47</b> |
| Operating The Remote Control .....              | 21        | Caring For The Air Filter .....                                 | 47        |
| Using The Remote ID Feature .....               | 21        | <b>Other Care</b> .....   | <b>48</b> |
| Using The Mouse/Keyboard Control Function ..... | 22        | Caring For The Inside Of The Projector .....                    | 48        |
| <b>Power ON/OFF</b> .....                       | <b>23</b> | Caring For The Lens .....                                       | 48        |
| Turning On The Power .....                      | 23        | Caring For The Cabinet And Remote Control .....                 | 48        |
| Turning Off The Power .....                     | 23        | <b>Troubleshooting</b> .....                                    | <b>49</b> |
| <b>Operating</b> .....                          | <b>24</b> | Related Messages .....  | 49        |
| Selecting An Input Signal .....                 | 24        | Regarding The Indicator Lamps .....                             | 51        |
| Selecting The Aspect Ratio .....                | 25        | Phenomena That May Easily Be Mistaken For Machine Defects ..... | 53        |
| Using The Automatic Adjustment Feature .....    | 25        | <b>Warranty And After-Service</b> .....                         | <b>55</b> |
| Adjusting The Picture Position .....            | 26        | <b>Specifications</b> .....                                     | <b>55</b> |
|   |           | <b>TECHNICAL</b>  |           |

## Part Names

### Projector

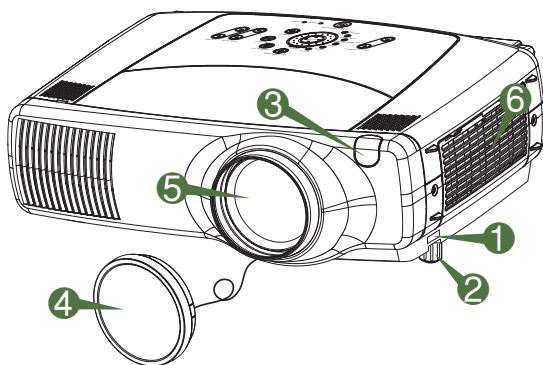

**Projector (Front/Right)**

① Elevator button

② Elevator foot

③ Remote sensor


④ Lens cap

⑤ Lens

The picture is projected from here.

⑥ Filter cover

An air filter is inside.

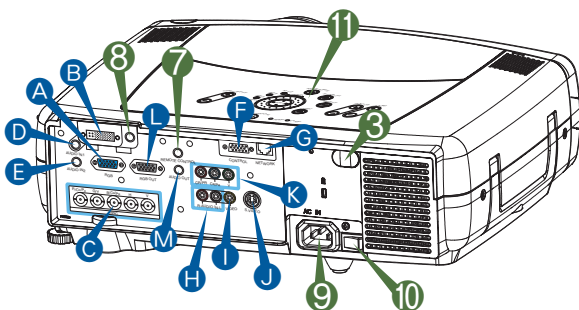

**Projector (Rear/Left)**

A RGB port

B M1-D port

C BNC port

D AUDIO IN 1 port

E AUDIO IN 2 port

F CONTROL port

G NETWORK port

H AUDIO IN R/L port

I VIDEO IN port

J S-VIDEO port

K COMPONENT port

L RGB OUT port

M AUDIO OUT port

⑦ REMOTE CONTROL port

⑧ DC OUT port

⑨ AC Inlet


⑩ Power switch

⑪ Control buttons


See the following page.

## Part Names (continued)

### Control Buttons

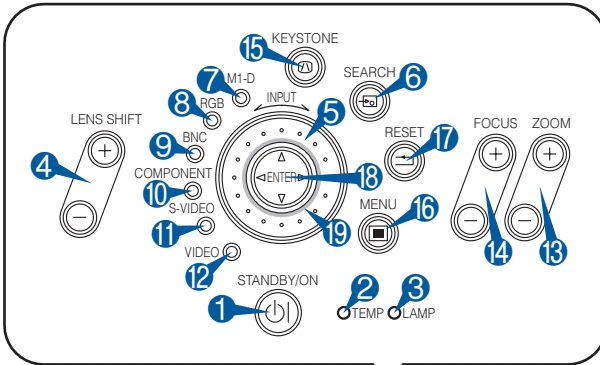


Control Panel  
on the Projector

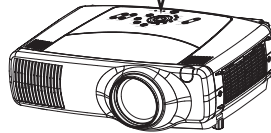

- 1 STANDBY/ON button and STANDBY/ON indicator
- 2 TEMP indicator
- 3 LAMP indicator
- 4 LENS SHIFT buttons
- 5 INPUT dial
- 6 SEARCH button
- 7 M1-D indicator
- 8 RGB indicator
- 9 BNC indicator
- 10 COMPONENT indicator
- 11 S-VIDEO indicator
- 12 VIDEO indicator
- 13 ZOOM buttons
- 14 FOCUS buttons
- 15 KEYSTONE button
- 16 MENU button
- 17 RESET button
- 18 ENTER button
- 19 Cursor buttons ▲/▼/◀/▶

### Remote Control

- 1 STANDBY/ON button
- 4 LENS SHIFT buttons
- 6 SEARCH button
- 13 ZOOM buttons
- 14 FOCUS buttons
- 15 KEYSTONE button
- 16 MENU button
- 17 RESET button
- 18 ENTER button  
(⏏ Mouse left button)

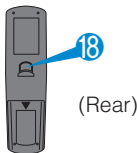

- 19 Cursor buttons  
▲/▼/◀/▶  
(⌨ Keyboard  
Arrow keys ⏏/⏏/⏏/⏏)



- 20 LASER INDICATOR
- 21 VIDEO button
- 22 RGB button
- 23 BLANK button
- 24 ASPECT button
- 25 LASER button
- 26 Cursor buttons ▲/▼/◀/▶  
(⏏ Mouse move pointer)
- 27 ESC button  
(⌨ Keyboard [ESC] key)
- 28 (⏏ Mouse right button)
- 29 POSITION button
- 30 AUTO button
- 31 PinP button
- 32 MAGNIFY buttons
- 33 FREEZE button
- 34 VOLUME button
- 35 MUTE button
- 36 ID CHANGE switch

Remote Control

# Setting Up


## Arrangement

**WARNING** • Before installation, make sure that the projector is turned off and the power code is disconnected.

- Do not set up and move the projector, while it is hot.
- Install the projector in a suitable environment according to instructions of this manual.
- The power outlet should be close to the projector and easily accessible.


Refer to the illustrations and tables below to determine the screen size and projection distance. The values shown in the table are calculated for a full size screen. (±10%)

Reference for  
the 4:3 aspect ratio

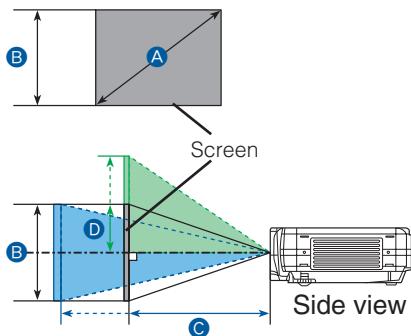

| A<br>[type (m)] | B<br>[type (cm)] | C [type (m)] |           | D [type (cm)] |          |
|-----------------|------------------|--------------|-----------|---------------|----------|
|                 |                  | min.         | max.      | min.          | max.     |
| 40(1.0)         | 24(61)           | 46(1.2)      | 71(1.8)   | 12(30)        | 24(61)   |
| 60(1.5)         | 36(91)           | 71(1.8)      | 107(2.7)  | 18(46)        | 36(91)   |
| 70(1.8)         | 42(107)          | 83(2.1)      | 126(3.2)  | 21(53)        | 42(107)  |
| 80(2.0)         | 48(122)          | 95(2.4)      | 144(3.7)  | 24(61)        | 48(122)  |
| 100(2.5)        | 60(152)          | 120(3.0)     | 181(4.6)  | 30(76)        | 60(152)  |
| 120(3.0)        | 72(183)          | 144(3.7)     | 217(5.5)  | 36(91)        | 72(183)  |
| 150(3.8)        | 90(229)          | 181(4.6)     | 272(6.9)  | 45(114)       | 90(229)  |
| 200(5.1)        | 120(305)         | 243(6.2)     | 364(9.2)  | 60(152)       | 120(305) |
| 250(6.4)        | 150(381)         | 304(7.7)     | 455(11.6) | 75(191)       | 150(381) |
| 300(7.6)        | 180(457)         | 366(9.3)     | 547(13.9) | 90(229)       | 180(457) |
| 350(8.9)        | 210(533)         | 427(10.9)    | 638(16.2) | 105(267)      | 210(533) |
| 400(10.2)       | 240(610)         | 489(12.4)    | 730(18.5) | 120(305)      | 240(610) |
| 500(12.7)       | 300(762)         | 612(15.5)    | 913(23.2) | 150(381)      | 300(762) |

Reference for  
the 16:9 aspect ratio

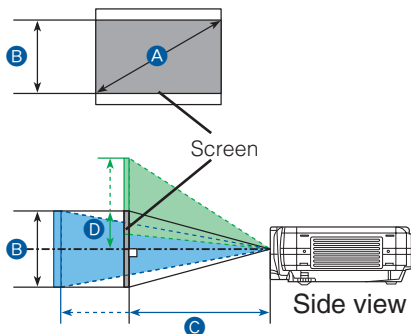

| A<br>[type (m)] | B<br>[type (cm)] | C [type (m)] |           | D [type (cm)] |          |
|-----------------|------------------|--------------|-----------|---------------|----------|
|                 |                  | min.         | max.      | min.          | max.     |
| 40(1.0)         | 20(50)           | 50(1.3)      | 77(2.0)   | 10(25)        | 23(58)   |
| 60(1.5)         | 29(75)           | 77(2.0)      | 117(3.0)  | 15(37)        | 34(87)   |
| 70(1.8)         | 34(87)           | 91(2.3)      | 137(3.5)  | 17(44)        | 40(102)  |
| 80(2.0)         | 39(100)          | 104(2.6)     | 157(4.0)  | 20(50)        | 46(116)  |
| 100(2.5)        | 49(125)          | 131(3.3)     | 197(5.0)  | 25(62)        | 57(145)  |
| 120(3.0)        | 59(149)          | 158(4.0)     | 237(6.0)  | 29(75)        | 69(174)  |
| 150(3.8)        | 74(187)          | 198(5.0)     | 297(7.5)  | 37(93)        | 86(218)  |
| 200(5.1)        | 98(249)          | 265(6.7)     | 396(10.1) | 49(125)       | 114(291) |
| 250(6.4)        | 123(311)         | 332(8.4)     | 496(12.6) | 61(156)       | 143(363) |
| 300(7.6)        | 147(374)         | 399(10.1)    | 596(15.1) | 74(187)       | 172(436) |
| 350(8.9)        | 172(436)         | 466(11.8)    | 696(17.7) | 86(218)       | 200(508) |
| 400(10.2)       | 196(498)         | 533(13.5)    | 795(20.2) | 98(249)       | 229(581) |
| 450(11.4)       | 221(560)         | 600(15.2)    | 895(22.7) | 110(280)      | 257(654) |

## Setting Up (continued)


### Adjusting The Projector's Elevator

**⚠ WARNING** • Do not touch about the lens and ventilation openings during use or immediately after use to prevent a burn.

**⚠ CAUTION** • To prevent damaging the projector and injuring yourself, always hold the projector whenever using the elevator buttons to adjust the elevator feet.



You can use the elevator feet to make adjustments if the surface on which you need to set the projector is uneven or if you otherwise need to adjust the angle of projection. The adjustment range of the elevator feet is 0 to 9 degrees.

- 1** Press and hold in the elevator buttons.
- 2** Raise or lower the projector to the desired height and then release the elevator buttons.  
When you release the elevator buttons, the elevator feet will lock into position.
- 3** As necessary, you can also finely adjust the height of the projector by twisting the elevator feet by hand.

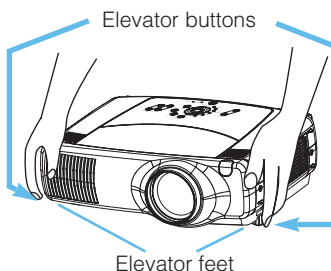

### Using The Lens Shift Buttons

The lens of this projector can be shifted vertically. When you want to finely adjust the picture position, use the LENS SHIFT buttons of the projector.

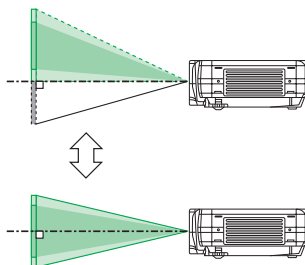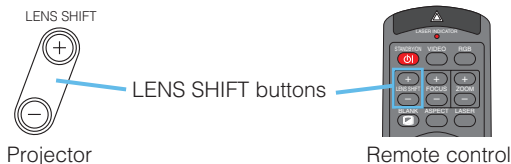

## Setting Up (continued)

### Connecting Your Devices

**⚠ WARNING** • Whenever attempting to connect other devices to the projector, read thoroughly, this manual and the manual of each device to be connected. Incorrect connecting could result in fire or electrical shock.

**⚠ CAUTION** • **TURN OFF ALL DEVICES** prior to connecting them to the projector. Attempting to connect a live device to the projector may generate extremely loud noises or other abnormalities that may result in malfunction and/or damage to the device and/or projector.

**⚠ ATTENTION** • Make sure that you connect devices to the correct port. Incorrect connection may result in malfunction and/or damage to the device and/or projector. Refer to the section “Technical” of this manual for the pin assignment of connectors and RS-232C communication data.

- Some cables have to be used with core set. Use the accessory cable or a designated-type cable for the connection. For cables that have a core only at one end, connect the core to the projector.
- Secure the screws on the connectors and tighten.
- Whenever attempting to connect a laptop computer to the projector, be sure to activate the laptop's RGB external image output (set the laptop to CRT display or to simultaneous LCD and CRT display). For details on how this is done, please refer to the instruction manual of the corresponding laptop computer.

**NOTE** • Some computers may have multiple display screen modes. Use of some of these modes may not be compatible with this projector.

- For some RGB input modes, adapter or conversion cable is necessary.
- When the image resolution is changed on a computer, depending on an input, automatic adjust function may take some time and may not be completed. In this case, you may not be able to see a check box to select “Yes/No” for the new resolution on Windows. Then the resolution will go back to the original. It might be recommended to use other CRT or TFT monitors to change the resolution.

#### **NOTE Plug-and-Play Capability**


- Plug-and-Play is a system incorporated in the computer, its operating system and peripheral equipment (i.e. display devices).
- This projector is compatible with VESA DDC 1/2B. Plug-and-Play can be achieved by connecting this projector to computers that are VESA DDC (display data channel) compatible.
- Please take advantage of this function by connecting the accessory RGB cable to the RGB port (DDC 1/2B compatible). Plug-and-Play may not work properly if any other type of connection is attempted.
- Please use the standard drivers in your computer as this projector is a Plug-and-Play monitor.



## Setting Up (continued)



Please refer to the following (for example) for connecting your devices. See the rear of the projector. You can see the ports.

### Examples of connection with a computer

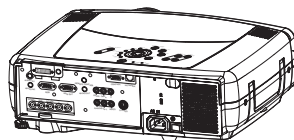


#### Computer




 
#### Projector

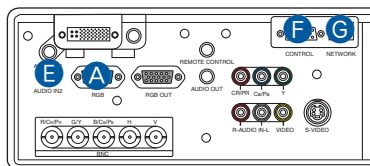

### ■ If using a M1-D input (to mouse control)

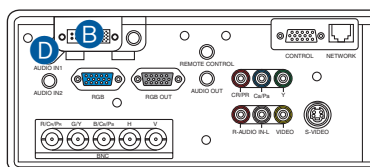

### ■ If using a BNC input

  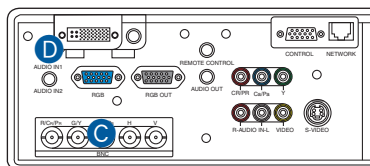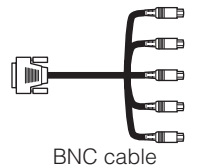



# Setting Up (continued)

## Examples of connection with a VCR/DVD Player





### VCR/DVD Player



### Projector

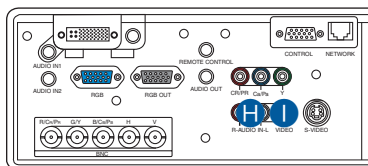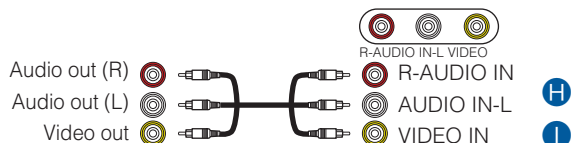



### ■ If using a s-video signal

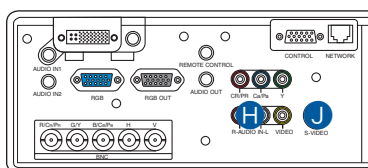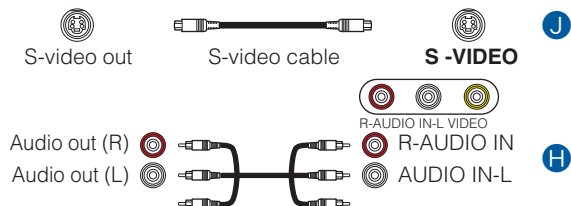

### ■ If using a component signal

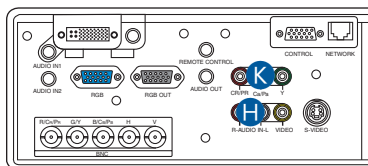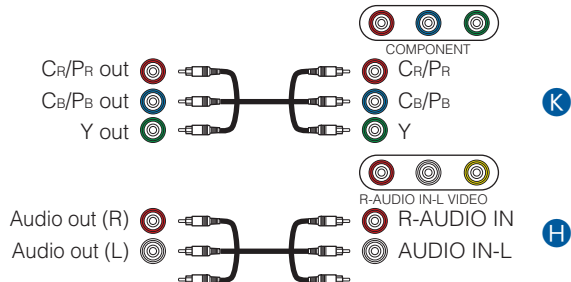

### ■ If using a SCART RGB input

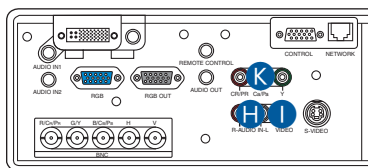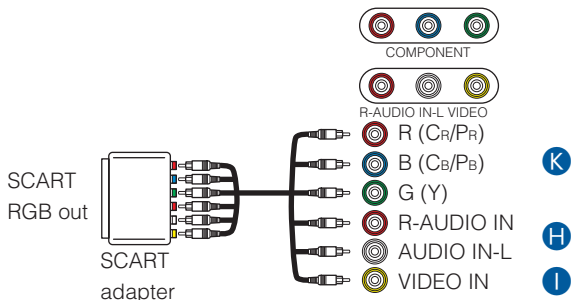

## Setting Up (continued)

### Connecting to a monitor



**Monitor**



RGB in




RGB cable

**Projector**



RGB OUT

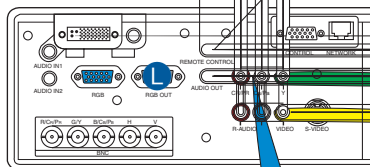

### Connecting to a speaker (with amplifier)



**Speaker**



Audio in




Stereo Mini cable

**Projector**



AUDIO OUT

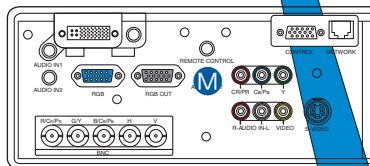

## Connecting The Power Supply



**WARNING** • Use extra caution when connecting the power cord as incorrect or faulty connections may result in fire and/or electrical shock. Please adhere to the “Before using” section of this manual and the following.


- Only plug the power cord into outlets rated for use with the power cord's specified voltage range.
- Only use the power cord that came with the projector. If it is damaged, contact your dealer to newly get correct one.
- Never modify the power cord. Never attempt to defeat the ground connection of the three-pronged plug.
- Make sure that you firmly connect the power cord to the projector and wall outlet.

**1**

Connect the connector of the power cord to the AC inlet of the projector.

**2**


Firmly plug the power cord's plug into the outlet.

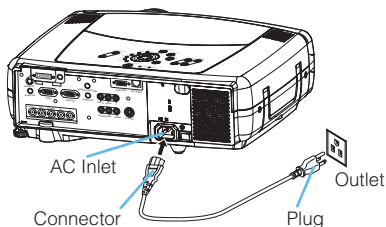

# Remote Control

## About The Laser Pointer

- ⚠ WARNING** • The laser pointer of the remote control is used in place of a finger or rod. Never look directly into the laser beam outlet or point the laser beam at other people. The laser beam can cause vision problems.
- ⚠ CAUTION** • Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

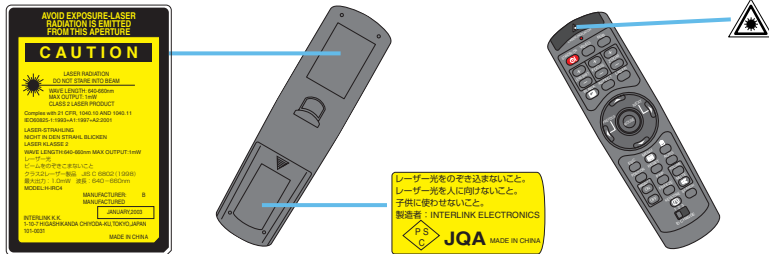


This remote control has a laser pointer in place of a finger or rod. The laser beam works and the LASER INDICATOR lights while the LASER button is pressed.


## Putting Batteries

- ⚠ CAUTION** • About the battery
- Keep a battery away from children and pets.
  - Use only the battery specified: two AA batteries.
  - Do not mix new battery with used one.
  - Make sure the plus and minus terminals are correctly aligned when loading the battery (as indicated in the remote control).
  - Dispose of batteries in accord with environmental laws.


**1** Remove the battery cover. Slide back and remove the battery cover in the direction of the arrow.

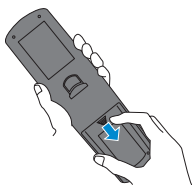

**2** Insert the batteries. Align and insert the two AA batteries according to their plus minus terminals (as indicated in the remote control).

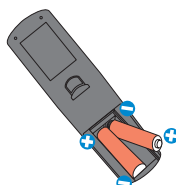

**3** Close the battery cover. Replace the battery cover in the direction of the arrow and snap it back into place.

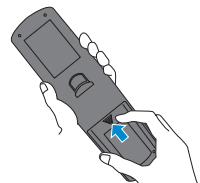

## Remote Control (continued)

### Operating The Remote Control



**CAUTION** • Do not disassemble the remote control.

- Do not place the remote control near the projector's lens, fan, or vents.
- Do not drop or otherwise expose the remote control to physical impact.
- Do not get the remote control wet or place it on wet objects on it. Doing so may result in malfunction.
- Remove the batteries from the remote control and store them in a safe place if you won't be using the remote control for an extended period.

#### NOTE

• Replace the batteries whenever the remote control starts to malfunction.


- When strong light, such as direct sunlight or light from an extremely close range (such as from an inverter fluorescent lamp), hits the projector's remote sensor, the remote control may cease to function. Adjust the direction of the projector to keep light from directly hitting the projector's remote sensor.

- The remote control works with the projector's remote sensor.
- **Front remote sensor** is 3 meters with a 60 degree range (30 degrees to the left and right of a remote sensor).

**Rear remote sensor** is 3 meters with a 40 degree range (20 degrees to the left and right of a remote sensor).

- Also a remote signal reflected in the screen etc. may be available. If it is difficult to send a remote signal to the sensor directly, please try.
- Since the remote control uses infrared light to send signals to the projector (Class1 LED), be sure to use the remote control in an area free from obstacles that could block the remote control's output signal to the projector.

**memo** You can use the remote control as a wired remote control, by connecting the REMOTE CONTROL ports of the main unit and remote control via an audio cable (3.5 dia. stereo mini cable with plugs).

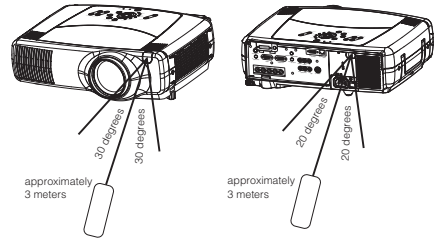

### Using The Remote ID Feature

This is the function to properly use when you use two or three same type projectors at the same time. This function should be used combining a setup of a projector.


**1**

Set the ID number to the projector beforehand, referring to the item "IR REMOTE ID" of the section "OPTION Menu".

**memo** When the ALL is selected to the item "IR REMOTE ID" of the OPTION menu, the projector is controlled by a remote control irrespective of the position of the ID CHANGE switch.

**2**

Slide the knob of the switch into the position of the ID number of the projector you want to control.

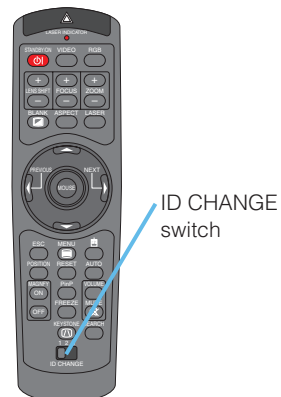

## Remote Control (continued)

### Using The Mouse/Keyboard Control Function

**⚠ CAUTION** • Before connecting, read the manuals of the device you will connect. Mistaken use of the mouse/keyboard control could damage your equipment.

- Only connect to a PC or an USB Hub connected PC.
- Do not unplug the connector cables while the computer is operating.


Using the USB control feature, you can use the remote control as a simplified mouse or keyboard of the computer.

Connect the M1-D port of the projector to the computer via the M1-D cable. Then functions illustrated below will be enabled.

**memo** The USB control can be used with Windows 95 OSR 2.1 or higher. It may not be possible to use the remote control, depending on the computer's configurations and mouse drivers.

**memo** The function can be used only for the functions illustrated on the right.

**memo** The projector would be enumerated as a mouse and a keyboard of HID (Human Interface Device) class devices, after connecting cable.

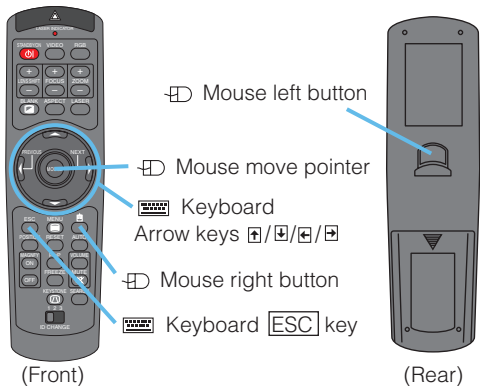

## Power ON/OFF




**WARNING** • When the power is ON, a strong light is emitted. Do not look into the lens or vents of the projector.

### NOTE

• Turn the power on/off in right order. Please power on the projector before the connected devices. Power off the projector after the connected devices.


### Turning On The Power

- 1** Remove the lens cap.
- 2** Set the power switch to [ I ] (ON).  
The STANDBY/ON indicator will light to solid orange.
- 3** Press the STANDBY/ON button.  
The projector lamp will light up and the STANDBY/ON indicator will begin blinking green. When the power is completely on, the indicator will stop blinking and light green.
- 4** Use the LENS SHIFT buttons to shift the picture upward or downward.
- 5** Select an input signal according to the section "Selecting An Input Signal" of the following page.

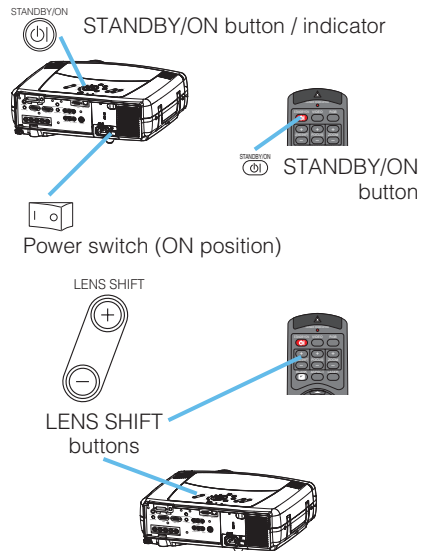

### Turning Off The Power

- 1** Press the STANDBY/ON button.  
The message "Power off?" will appear on the screen for approximately 5 seconds.
- 2** Press the STANDBY/ON button again while "Power off?" the message is visible.  
The projector lamp will go off, and the STANDBY/ON indicator will begin blanking orange. Then the STANDBY/ON indicator will stop blinking and light to solid orange when the lamp cooling is complete.
- 3** Switch the power switch to [ O ] (OFF).  
The STANDBY/ON indicator will go off.
- 4** Attached the lens cap.

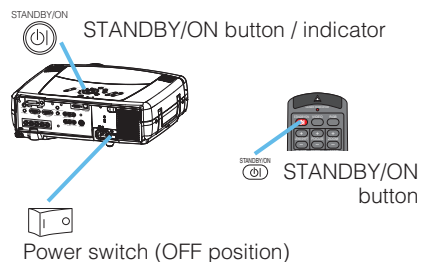

# Operating

## Selecting An Input Signal

1

Select an input signal.

### ■ Using the INPUT dial

Turn the INPUT dial of the projector.  
Turning the dial cycles through the input ports as shown below. Select the signal you wish to project.



### ■ Using SEARCH button

Press the SEARCH button of the projector or the remote control.  
Pressing the button automatically cycles through input ports and displays the picture of retrieved signal.

**memo** If no signal is found or the projector is unstable to find an input signal at any of its ports, it will turn to the state it was in prior to the search.



 
### ■ Using RGB button

Press the RGB button of the remote control.  
Pressing the button toggles between the RGB ports as shown below. Select the signal you wish to project.



### ■ Using VIDEO button

Press the VIDEO button of the remote control.  
Pressing the button toggles between the VIDEO ports as shown below. Select the signal you wish to project.






2

Use the ZOOM buttons to adjust the screen size.

3

Use the FOCUS buttons to adjust the focus.

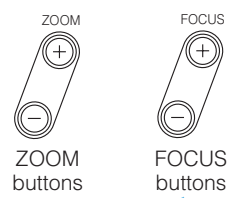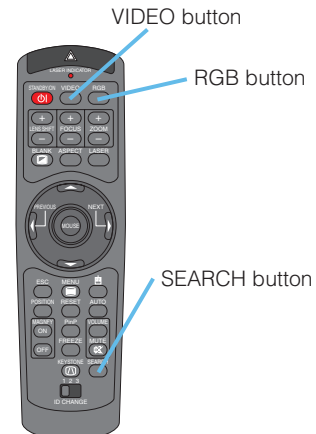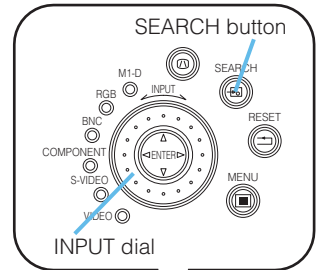



## Operating (continued)

### Selecting The Aspect Ratio

- 1 Press the Aspect button to toggle between the modes for aspect ratio.

#### ■ At a M1-D signal

NORMAL → 4:3 → 16:9  
↑

**memo** NORMAL keeps the original aspect ratio of the input signal.

#### ■ At a RGB signal (not M1-D)

4:3 ↔ 16:9

#### ■ At a video signal / no signal

4:3 → 16:9 → SMALL  
↑

**memo** At a HDTV signal of 1125i(1080i) or 750p(720p), only 16:9 can be selected.



ASPECT button

### Using The Automatic Adjustment Feature

**memo** The automatic adjustment operation requires approximately 10 seconds. Also, please note that it may not function correctly with some input.

- 1 Press the AUTO button.

#### ■ At a RGB signal

The Vertical position (V POSITION), the horizontal position (H POSITION), the clock phase (H PHASE) and horizontal size (H SIZE) will be automatically adjusted.

**memo** Make sure that the application window is set to its maximum size prior to attempting to use this feature. Dark pictures may still be incorrectly adjusted. Use a bright screen when adjusting.

#### ■ At a video signal

The signal type mode best suited for the respective input signal will be selected automatically.

**memo** This function is available only when the AUTO is selected to the item VIDEO of the INPUT menu. For a component video signal, the signal type is identified automatically independently of this function.



AUTO button

## Operating (continued)

### Adjusting The Picture Position

**memo** This function is available only for RGB signals.

- 1 Press the POSITION button.  
As illustrated on the right, a dialog will appear on the screen to aid you in adjusting the position.




- 2 Use the cursor buttons ▲/▼/◀/▶ to adjust the position.

**memo** When you want to initialize the position, press the RESET button during adjustment.


- 3 Press the POSITION button again to close the dialog and complete this operation.

**memo** Even if you don't do anything, the dialog will automatically disappear after a few seconds.

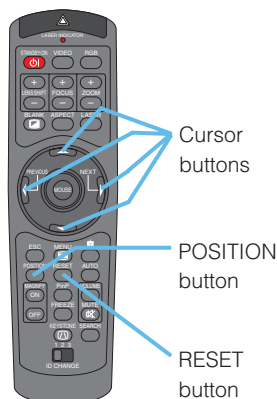

### Correcting The Keystone Distortion

- 1 Press the KEYSTONE button.  
As illustrated on the right, a dialog will appear on the screen to aid you in correcting the keystone distortion.

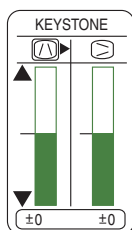


- 2 Use the cursor buttons ◀/▶ to select the direction of distortion to correct (△ or ▢).

- 3 Use the cursor buttons ▲/▼ to correct the distortion.

- 4 Press the KEYSTONE button again to close the dialog and complete this operation.

**memo** Even if you don't do anything, the dialog will automatically disappear after a few seconds.

**memo** When this adjustment is excessive, certain degradation may appear on the picture. Also, please note that it may not function correctly with some input.

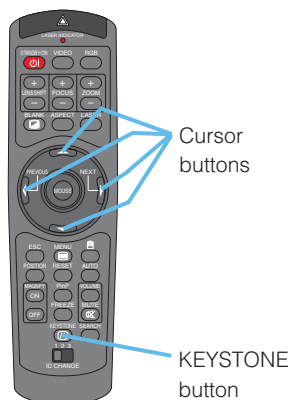

## Operating (continued)


### Adjusting The Volume

**1** Press the VOLUME button.  
As illustrated on the right, a dialog will appear on the screen to aid you in adjusting the volume.

**2** Use the cursor buttons ▲/▼ to adjust the volume.

**3** Press the VOLUME button again to close the dialog and complete this operation.

**memo** Even if you don't do anything, the dialog will automatically disappear after a few seconds.

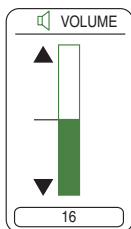

Cursor  
buttons


VOLUME  
button

### Muting The Sound

**1** Press the MUTE button.  
As illustrated on the right, a dialog will appear on the screen indicating that you have muted the sound.

**2** Press the MUTE or VOLUME button to restore the sound.

**memo** Even if you don't do anything, the dialog will automatically disappear after a few seconds.

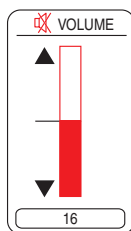

MUTE  
button

### Temporarily Blanking The Screen

**1** Press the BLANK button.  
The input signal screen will shut off, and a BLANK screen will appear.

**memo** You can set the BLANK screen using the menu. Please refer to the item "BLANK" of the table of the section "SCREEN Menu".

**2** Press the BLANK button again to remove the blank screen, and return to the input signal screen.



BLANK  
button

## Operating (continued)

### Freezing The Screen

- 1 Press the FREEZE button.  
As illustrated on the right, a dialog will appear on the screen, and the screen will freeze at the current image.



- 2 Press the FREEZE button again to restore the screen to normal.  
The icon "||" will change to the icon "▶". And after a couple of seconds, the dialog will be closed and the screen will be restored to normal.

**memo** The freezing feature will automatically finish if a remote control's button that changes some display state (ex. blanking the screen, displaying a dialog or a menu, adjusting the picture, changing the input signal) is pressed, or a button of projector is pressed.



FREEZE button

**NOTE** • If the projector continues projecting the same image for a long time (i.e. you forget to exit FREEZE mode), the image might possibly remain as an afterimage. Do not leave the projector in FREEZE mode for too long.

### Using The Magnify Feature

- 1 Press the MAGNIFY **ON** button.  
As illustrated on the right, a dialog will appear on the screen to aid you in magnifying the picture.



- 2 Press the POSITION button, then use the cursor buttons ▲/▼/◀/▶ to select the area to zoom.

- 3 Press the POSITION button again to finalize the zoom area.

- 4 Use the cursor buttons ▲/▼ to adjust the zoom level.

- 5 Press the MAGNIFY **OFF** button again to close the dialog and complete this operation.

**memo** The magnify feature will automatically finish if the automatic adjustment is executed, or the aspect, the signal type mode of video or the signal input state is changed.



Cursor buttons

POSITION button

MAGNIFY buttons

## Operating (continued)

### Displaying The Child Window

**memo** This feature called "PinP (Picture in Picture)" is available only when a RGB signal is selected to main screen.

- 1 Press the PinP button.  
The child window with a picture of a video signal will appear.
- 2 Press the PinP button again to change the size of the child window or close the window.

Small child window → Large child window  
↑  
No child window  
↓

**memo** You can select the video signal to display in the child window, and the position of the child window. Please refer to the items "P.INP. INPUT" and "P.INP. POSIT." of the table of the section "INPUT Menu".



PinP button

### Selecting An Audio Input

**memo** This feature is available only when the child window is on the screen.

- 1 When the child window is on the screen, press the VOLUME button.  
As illustrated on the right, a dialog will appear on the screen.

- 2 Use the cursor buttons ◀/▶ to select an audio input.

RGB (Audio input for the main screen)




Video (Audio input for the child window)

**memo** You also can adjust the volume using the cursor buttons ◀/▶. Please refer to the section "Adjusting The Volume".

- 3 Press the VOLUME button again to close the dialog and complete this operation.

**memo** Even if you don't do anything, the dialog will automatically disappear after a few seconds.

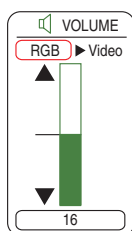

Cursor buttons

VOLUME button

# Multifunctional Settings

## Using The Menu Functions

This projector has the following menus: MAIN, PICTURE-1, PICTURE-2, INPUT, AUTO, SCREEN, OPTION and NETWORK. Each of these menus is operated using the same methods. The basic operations of these menus are as follows.

**1**

Press the MENU button.  
The menu will appear on the screen.

**2**

Use the cursor buttons ▲/▼ to select a menu, then press the ► (or the ENTER) button to progress.  
The display of the selected menu will appear.

**3**

Use the cursor buttons ▲/▼ to select an item, then press the ► (or the ENTER) button to progress.  
The operation display of the selected item will appear.

**4**

Use the cursor buttons ▲/▼ to operate the item.


**memo** When you want to reset the adjustment, press the RESET button during the operation. Note that the items whose functions are performed simultaneously with operating (ex. LANGUAGE, WHISPER, H PHASE etc.) are not reset.

**memo** When you want to return to the previous display, press the ◀ or ESC button.

**5**

Press the MENU button again to close the menu display and complete this operation.

**memo** Even if you don't do anything, the menu will automatically disappear after a few seconds.

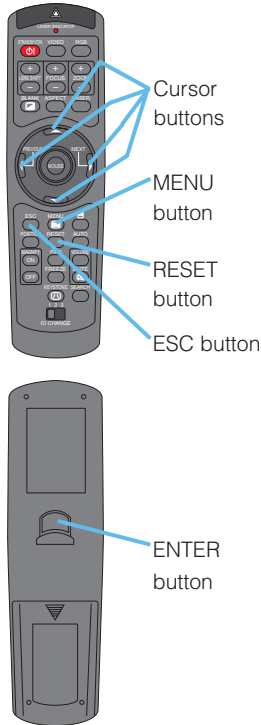

### ex. Turning off the built-in speaker

1) Press the MENU button.

| MENU       |            |         |
|------------|------------|---------|
| MAIN       | BRIGHT     | 40      |
| PICTURE-1  | CONTRAST   | 40      |
| PICTURE-2  | ASPECT     | 4:3     |
| INPUT      | WHISPER    | NORMAL  |
| AUTO       | MIRROR     | NORMAL  |
| SCREEN     | LANGUAGE   | ENGLISH |
| OPTION     | (Language) |         |
| NETWORK    | RESET      |         |
| [C] SELECT |            |         |

2) Select the "OPTION" using the ▼ button, then press the ► button.

| MENU       |              |         |
|------------|--------------|---------|
| MAIN       | VOLUME       | 16      |
| PICTURE-1  | SPEAKER      | TURN ON |
| PICTURE-2  | IR REMOTE    | ALL     |
| INPUT      | IR REMOTE ID | ALL     |
| AUTO       | LAMP TIME    | 1234 h  |
| SCREEN     | FILTER TIME  | 4321 h  |
| OPTION     | SERVICE      |         |
| NETWORK    | RESET        |         |
| [C] SELECT |              |         |

| MENU       |              |         |
|------------|--------------|---------|
| MAIN       | VOLUME       | 16      |
| PICTURE-1  | SPEAKER      | TURN ON |
| PICTURE-2  | IR REMOTE    | ALL     |
| INPUT      | IR REMOTE ID | ALL     |
| AUTO       | LAMP TIME    | 1234 h  |
| SCREEN     | FILTER TIME  | 4321 h  |
| OPTION     | SERVICE      |         |
| NETWORK    | RESET        |         |
| [C] SELECT |              |         |

3) Select the "SPEAKER" using the ▼ button, then press the ► button.

| MENU       |              |         |
|------------|--------------|---------|
| MAIN       | VOLUME       | 16      |
| PICTURE-1  | SPEAKER      | TURN ON |
| PICTURE-2  | IR REMOTE    | ALL     |
| INPUT      | IR REMOTE ID | ALL     |
| AUTO       | LAMP TIME    | 1234 h  |
| SCREEN     | FILTER TIME  | 4321 h  |
| OPTION     | SERVICE      |         |
| NETWORK    | RESET        |         |
| [C] SELECT |              |         |

4) Use the cursor button ▼ to select the "TURN OFF".

| SPEAKER |          |  |
|---------|----------|--|
| TURN ON | TURN OFF |  |

 
5) Press the MENU button.

## Multifunctional Settings (continued)

### MAIN Menu

With the MAIN menu, the items shown in the table below can be performed. Perform each operation in accordance with the instructions in the table below.

| MENU        |            |         |
|-------------|------------|---------|
| MAIN        | BRIGHT     | +0      |
| PICTURE-1   | CONTRAST   | +0      |
| PICTURE-2   | ASPECT     | 4:3     |
| INPUT       | WHISPER    | NORMAL  |
| AUTO        | MIRROR     | NORMAL  |
| SCREEN      | LANGUAGE   | ENGLISH |
| OPTION      | [Language] |         |
| NETWORK     | RESET      |         |
| [OK]:SELECT |            |         |

| Item            | Description   |
|-----------------|---|
| <b>BRIGHT</b>   | Adjust the brightness using the ▲ / ▼ buttons. : Light ⇄ Dark   |
| <b>CONTRAST</b> | Adjust the contrast using the ▲ / ▼ buttons. : Strong ⇄ Weak  |
| <b>ASPECT</b>   | <p>Select an aspect ratio using the ▲ / ▼ buttons. :</p> <p>■ At a M1-D signal<br/>NORMAL ⇄ 4:3 ⇄ 16:9<br/>The NORMAL keeps the original aspect ratio of the input signal.</p> <p>■ At a RGB signal (not M1-D)<br/>4:3 ⇄ 16:9</p> <p>■ At a video signal<br/>4:3 ⇄ 16:9 ⇄ SMALL</p> <p><b>memo</b> At a HDTV signal of 1125i(1080i) or 750p(720p), only the 16:9 can be selected.</p> |
| <b>WHISPER</b>  | <p>Select the NORMAL or the WHISPER using the ▲ / ▼ buttons. :<br/>NORMAL ⇄ WHISPER</p> <p>When the WHISPER is selected, acoustic noise and screen brightness are reduced.</p>  |
| <b>MIRROR</b>   | <p>Select a mirror status using the ▲ / ▼ buttons. :<br/>NORMAL ⇄ H:INVERT ⇄ V:INVERT ⇄ H&amp;V:INVERT</p> <p>ex. </p>  |
| <b>LANGUAGE</b> | <p>Select a menu language using the ▲ / ▼ buttons. :</p> <p>ENGLISH ⇄ FRANÇAIS ⇄ DEUTSCH ⇄ ESPAÑOL ⇄ ITALIANO<br/>NORSK ⇄ NEDERLANDS ⇄ 日本語 ⇄ PORTUGUÊS ⇄ 中文<br/>한글 ⇄ SVENSKA ⇄ РУССКИЙ ⇄ SUOMI ⇄ POLSKI</p>   |
| <b>RESET</b>    | <p>Select the EXECUTE using the ▲ button to reset the MAIN menu items. :<br/>EXECUTE ⇄ CANCEL</p> <p>The items of the MAIN menu are collectively returned to the initial setting. Note that the items "WHISPER" and "LANGUAGE" are not reset.</p>   |

# Multifunctional Settings (continued)

## PICTURE-1 Menu

With the PICTURE-1 menu, the items shown in the table below can be performed. Perform each operation in accordance with the instructions in the table below.

| MENU        |             |        |
|-------------|-------------|--------|
| MAIN        | GAMMA       | NORMAL |
| PICTURE-1   | COLOR BAL R | +0     |
| PICTURE-2   | COLOR BAL G | +0     |
| INPUT       | COLOR BAL B | +0     |
| AUTO        | SHARPNESS   | +0     |
| SCREEN      | COLOR       | +0     |
| OPTION      | TINT        | +0     |
| NETWORK     | MY MEMORY   | LOAD1  |
| [2]: SELECT |             |        |

| Item        | Description   |   |
|-------------|---|---|
| GAMMA       | <p>Select a gamma mode using the ▲ / ▼ buttons. :<br/>NORMAL ⇄ CINEMA ⇄ DYNAMIC ⇄ CUSTOM</p> <p>Selecting the CUSTOM and then pressing the ► (or the ENTER) button calls the CUSTOM menu.</p> <p><b>CUSTOM Menu</b></p> <p>Select an item using the ▲ / ▼ buttons, and press the ► (or the ENTER) button to perform each function.</p> <p>GAMMA ⇄ COLOR TEMP ⇄ R ⇄ G ⇄ B</p> <p><b>memo</b> The R, G and B can be selected only when the USER is selected under the COLOR TEMP.</p> |   |
|             | GAMMA   | Adjust the gamma data using the ▲ / ▼ buttons. :<br>Up ⇄ Down   |
|             | COLOR TEMP  | Select a color temperature using the ▲ / ▼ buttons. :<br>HIGH ⇄ MIDDLE ⇄ LOW ⇄ USER                       |
|             | R   | Adjust the red color level for the USER mode of the COLOR TEMP using the ▲ / ▼ buttons. : Strong ⇄ Weak   |
|             | G   | Adjust the green color level for the USER mode of the COLOR TEMP using the ▲ / ▼ buttons. : Strong ⇄ Weak |
|             | B   | Adjust the blue color level for the USER mode of the COLOR TEMP using the ▲ / ▼ buttons. : Strong ⇄ Weak  |
| COLOR BAL R | Adjust the red color balance using the ▲ / ▼ buttons. :<br>Strong ⇄ Weak  |   |
| COLOR BAL G | Adjust the green color balance using the ▲ / ▼ buttons. :<br>Strong ⇄ Weak  |   |
| COLOR BAL B | Adjust the blue color balance using the ▲ / ▼ buttons. :<br>Strong ⇄ Weak   |   |
| SHARPNESS   | <p>Adjust the sharpness using the ▲ / ▼ buttons. :<br/>Clear ⇄ Soft</p> <p><b>memo</b> This item can be selected only at a video signal.</p>  |   |
| COLOR       | <p>Adjust the whole color using the ▲ / ▼ buttons. :<br/>Strong ⇄ Weak</p> <p><b>memo</b> This item can be selected only at a video signal.</p>   |   |
| TINT        | <p>Adjust the tint using the ▲ / ▼ buttons. :<br/>Green ⇄ Red</p> <p><b>memo</b> This item can be selected only at a video signal.</p>  |   |

(This table is continued to the following page.)



## Multifunctional Settings (continued)

### PICTURE-1 Menu (continued)

| Item             | Description  |
|------------------|--|
| <b>MY MEMORY</b> | <p>Select a command to load or save using the ▲ / ▼ buttons, and then press the ► (or the ENTER) button to perform the function.:</p> <p>LOAD1 ⇄ LOAD2 ⇄ LOAD3 ⇄ LOAD4</p> <p>↕ ↗</p> <p>SAVE1 ⇄ SAVE2 ⇄ SAVE3 ⇄ SAVE4</p> <p>This projector has 4 numbered memories for adjustment data. Performing the SAVE1, SAVE2, SAVE3 or SAVE4 puts the current adjustment data on the memory whose number corresponds with the command's number. Performing the LOAD1, LOAD2, LOAD3 or LOAD4 loads the data on the memory whose number corresponds with the command's number, and adjusts the picture automatically depending on the data.</p> |
| <b>RESET</b>     | <p>Select the EXECUTE using the ▲ button to reset the PICTURE-1 menu items. :<br/>EXECUTE ⇄ CANCEL</p> <p>The items of the PICTURE-1 menu are collectively returned to the initial setting. Note that the items "MY MEMORY" and "GAMMA" of the CUSTOM menu under the item "GAMMA" are not reset.</p>   |

## Multifunctional Settings (continued)

### PICTURE-2 Menu

With the PICTURE-2 menu, the items shown in the table below can be performed. Perform each operation in accordance with the instructions in the table below.

**memo** This menu cannot be selected at a M1-D signal.

| MENU        |            |      |
|-------------|------------|------|
| MAIN        | V POSITION | 20   |
| PICTURE-1   | H POSITION | 142  |
| PICTURE-2   | H PHASE    | 31   |
| INPUT       | H SIZE     | 1344 |
| AUTO        | OVER SCAN  | 95   |
| SCREEN      | RESET      |      |
| OPTION      |            |      |
| NETWORK     |            |      |
| [?]: SELECT |            |      |

| Item              | Description  |
|-------------------|--|
| <b>V POSITION</b> | Adjust the vertical position using the ▲ / ▼ buttons. :<br>Up ⇄ Down<br><b>memo</b> This item can be selected only at a RGB signal.  |
| <b>H POSITION</b> | Adjust the horizontal position using the ▲ / ▼ buttons. :<br>Left ⇄ Right<br><b>memo</b> This item can be selected only at a RGB signal.   |
| <b>H PHASE</b>    | Adjust the horizontal phase to eliminate flicker using the ▲ / ▼ buttons. :<br>Right ⇄ Left<br><b>memo</b> This item can be selected only at a RGB signal or a component video signal other than a COMPONENT port input of 525i(480i)/625i(576i)/SCART RGB.  |
| <b>H SIZE</b>     | Adjust the horizontal size using the ▲ / ▼ buttons. :<br>Large ⇄ Small<br><b>memo</b> This item can be selected only at a RGB signal.<br><b>memo</b> When this adjustment is excessive, the picture may not be displayed correctly. In such a case, please reset the adjustment pressing the RESET button during this operation. |
| <b>OVER SCAN</b>  | Adjust the over-scan ratio using the ▲ / ▼ buttons. :<br>Small ⇄ Large<br><b>memo</b> This item can be selected only at a video signal.<br><b>memo</b> When this adjustment is too large, certain degradation may appear at the frame area of the picture. In such a case, please adjust small.                                  |
| <b>RESET</b>      | Select the EXECUTE using the ▲ button to reset the PICTURE-2 menu items. :<br>EXECUTE ⇄ CANCEL<br>The items of the PICTURE-2 menu are collectively returned to the initial setting.<br>Note that the item "H PHASE" is not reset.  |

## Multifunctional Settings (continued)

### INPUT Menu

With the INPUT menu, the items shown in the table below can be performed. Perform each operation in accordance with the instructions in the table below.


| MENU        |               |           |
|-------------|---------------|-----------|
| MAIN        | COLOR SPACE   | AUTO      |
| PICTURE-1   | COMPONENT     | COMPONENT |
| PICTURE-2   | VIDEO         | AUTO      |
| INPUT       | 3D-YCS        | TURN OFF  |
| AUTO        | VIDEO NR      | LOW       |
| SCREEN      | P.INP. POSIT. | VIDEO     |
| OPTION      | P.INP. POSIT. | VIDEO     |
| NETWORK     | POWERUP INPUT | RGB       |
| [2]: SELECT |               |           |

| Item               | Description   |
|--------------------|---|
| <b>COLOR SPACE</b> | <p>Select a color space mode using the ▲ / ▼ buttons. :<br/>           AUTO ⇄ RGB ⇄ SMPTE240 ⇄ REC709 ⇄ REC601<br/>           Selecting the AUTO automatically selects the optimum mode.</p> <p><b>memo</b> This item can be selected only at a RGB signal or a component video signal other than a COMPONENT port input of 525i(480i)/625i(576i)/SCART RGB.</p> <p><b>memo</b> The AUTO operation may not work well at some signals. In such a case, select the SMPTE240 or the REC709 for a HDTV signal.</p>  |
| <b>COMPONENT</b>   | <p>Select a function of COMPONENT port using the ▲ / ▼ buttons. :<br/>           COMPONENT ⇄ SCART RGB</p> <p>When the SCART RGB is selected, the COMPONENT port function as a port for a SCART RGB signal input. Please refer to the section "Connecting Your Devices".</p>  |
| <b>VIDEO</b>       | <p>Select a signal type mode using the ▲ / ▼ buttons. :<br/>           AUTO ⇄ NTSC ⇄ PAL ⇄ SECAM ⇄ NTSC4.43 ⇄ M-PAL ⇄ N-PAL</p> <p>Selecting the AUTO automatically selects the optimum mode.</p> <p><b>memo</b> This item is performed only at a video signal from the VIDEO port or the S-VIDEO port. For a component video signal, the signal type is identified automatically independently of this function.</p> <p><b>memo</b> The AUTO operation may not work well at some signals. If the picture becomes unstable (ex. a irregular picture, a color lack), please select the mode depending on the input signal.</p> |
| <b>3D-YCS</b>      | <p>Select the TURN ON or the TURN OFF using the ▲ / ▼ buttons. :<br/>           TURN ON ⇄ TURN OFF</p> <p>When the TURN ON is selected, the 3D-YCS mode works for a completely still image, or images with few motions.</p> <p><b>memo</b> This item performs only at a video signal of NTSC3.58.</p> <p><b>memo</b> When this function performs, the setting of the item "VIDEO NR" of this INPUT menu is not effective.</p>   |
| <b>VIDEO NR</b>    | <p>Select a noise reduction level using the ▲ / ▼ buttons. :<br/>           HIGH ⇄ MIDDLE ⇄ LOW</p> <p>The noise on screen is reduced according to the selected level.</p> <p><b>memo</b> This item performs only at a video signal from the VIDEO port or the S-VIDEO port. At a video signal of NTSC3.58, this function performs only when the TURN OFF is selected to the item "3D-YSC" of this INPUT menu.</p> <p><b>memo</b> When this adjustment is excessive, certain degradation may appear on the picture.</p>   |

(This table is continued to the following page.)

## Multifunctional Settings (continued)

### INPUT Menu (continued)

 
 
| Item                  | Description  |
|-----------------------|--|
| <b>P.IN P. INPUT</b>  | Select a signal input port for the child window using the ▲ / ▼ buttons. :<br>VIDEO ⇄ S-VIDEO<br><b>memo</b> About the child window, please refer to the section “Displaying the Child Window”.  |
| <b>P.IN P. POSIT.</b> | Select the display position of the child window using the ▲ / ▼ buttons. :<br><br><b>memo</b> About the child window, please refer to the section “Displaying the Child Window”.  |
| <b>POWERUP INPUT</b>  | Select a signal input port to display just when the projector is turned on, using the ▲ / ▼ buttons. :<br>LAST INPUT ⇄ M1-D ⇄ RGB ⇄ BNC ⇄ COMPONENT ⇄ S-VIDEO ⇄ VIDEO<br>Selecting the LAST INPUT selects the port that was used at the last time.   |
| <b>INFORMATION</b>    | Pressing the ► (or the ENTER) button displays the INPUT INFORMATION menu.<br>The INPUT INFORMATION menu shows the information about the current signal input as illustrated below.<br><div style="display: flex; justify-content: space-around; align-items: center; margin: 10px 0;"> <div style="border: 1px solid black; padding: 5px; text-align: center; width: 150px;">◀ INPUT-INFORMATION<br/>RGB<br/>1024x768 @60.0<br/>FRAME LOCK</div> <div style="border: 1px solid black; padding: 5px; text-align: center; width: 150px;">◀ INPUT-INFORMATION<br/>S-VIDEO<br/>SECAM<br/>AUTO</div> <div style="border: 1px solid black; padding: 5px; text-align: center; width: 150px;">◀ INPUT-INFORMATION<br/>COMPONENT<br/>575i @50<br/>SCART RGB</div> </div> <b>memo</b> The “FRAME LOCK” message means the frame lock function is working. This function automatically works when a RGB signal with vertical frequency of 50 to 60 is input, and it displays a moving picture more smoothly.<br><b>memo</b> The “SCART RGB” message means the COMPONENT port is working as a SCART RGB port. Please refer to the item “COMPONENT” in this table. |
| <b>S2-ASPECT</b>      | Select the TURN ON or the TURN OFF using the ▲ / ▼ buttons. :<br>TURN ON ⇄ TURN OFF<br>When the TURN ON is selected, an S2-video signal can be identified and the optimum aspect ratio is automatically selected.<br><b>memo</b> This item is performs only at a S-VIDEO signal.<br><b>memo</b> When the ASPECT button is used or the item “ASPECT” of the MAIN menu is operated, the TURN OFF will be automatically selected to this item.  |
| <b>RESET</b>          | Select the EXECUTE using the ▲ button to reset the INPUT menu items. :<br>EXECUTE ⇄ CANCEL<br>The items of the INPUT menu are collectively returned to the initial setting. Note that the item “INFORMATION” is not reset.   |

## Multifunctional Settings (continued)

### AUTO Menu

With the AUTO menu, the items shown in the table below can be performed. Perform each operation in accordance with the instructions in the table below.

| MENU        |           |         |
|-------------|-----------|---------|
| MAIN        | ADJUST    | 0 min   |
| PICTURE-1   | POWER OFF | TURN ON |
| PICTURE-2   | POWER ON  | TURN ON |
| INPUT       | SEARCH    | TURN ON |
| AUTO        | RESET     |         |
| SCREEN      |           |         |
| OPTION      |           |         |
| NETWORK     |           |         |
| [?]: SELECT |           |         |

| Item      | Description   |
|-----------|---|
| ADJUST    | <p>Pressing the ► (or the ENTER) button performs the automatic adjustment.</p> <ul style="list-style-type: none"> <li>■ At a RGB signal<br/>The vertical position (V POSITION), the horizontal position (H POSITION), the clock phase (H PHASE) and the horizontal size (H SIZE) will be automatically adjusted.</li> <li><b>memo</b> Make sure that the application window is set to its maximum size prior to attempting to use this feature. Dark pictures may still be incorrectly adjusted. Use a bright screen when adjusting.</li> <li>■ At a video signal<br/>The signal type mode best suited for the respective input signal will be selected automatically.</li> <li><b>memo</b> This function is available only when the AUTO is selected to the item "VIDEO" of the INPUT menu. For a component video signal, the signal type is identified automatically independently of this function.</li> <li><b>memo</b> This operation requires approximately 10 seconds, and the message "AUTO IN PROGRESS" is displayed during the operation.</li> <li><b>memo</b> This operation may not work well at some signals. If the picture becomes unstable (ex. a irregular picture, a color lack), please select the suitable mode to the item "VIDEO" of the INPUT menu.</li> </ul> |
| POWER OFF | <p>Set the time using the ▲ / ▼ buttons. :<br/>Long (max. 99 minutes) ⇔ Short (min. 0 minute = DISABLE)</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> <p>ex.</p>  </div> <div style="text-align: center;">  </div> </div> <p>When the time is set to 1 to 99, the projector lamp will go off and the STANDBY/ON indicator begins blinking when the passed time with a proper signal (without no-signal and an unsuitable signal) reaches at the set time. Please refer to the section "Turning Off The Power".</p>   |
| POWER ON  | <p>Select the TURN ON or the TURN OFF using the ▲ / ▼ buttons.:<br/>TURN ON ⇔ TURN OFF</p> <p>When the TURN ON is selected, you can turn the projector on without pressing the STANDBY/ON button. Please refer to the section "Turning Off The Power".</p>  |

(This table is continued to the following page.)

## Multifunctional Settings (continued)

### AUTO Menu (continued)

| Item   | Description   |
|--------|---|
| SEARCH | <p>Select the TURN ON or the TURN OFF using the ▲ / ▼ buttons. :<br/>TURN ON ⇔ TURN OFF</p> <p>When the TURN ON is selected, detecting no signal cycles through input ports and displays the picture of retrieved signal.</p> <pre>       M1-D  →  RGB  →  BNC       ↑      ↓ VIDEO ← S-VIDEO ← COMPONENT           </pre> <p><b>memo</b> When the TURN ON is selected, pressing the RGB button selects the M1-D ports, and pressing the VIDEO button selects the COMPONENT port.</p> <p><b>memo</b> If no signal is found or the projector is unstable to find an input signal at any of its ports, it will return to the state it was in prior to the search.</p> |
| RESET  | <p>Select the EXECUTE using the ▲ button to reset the AUTO menu items. :<br/>EXECUTE ⇔ CANCEL</p> <p>The items of the AUTO menu are collectively returned to the initial setting. Note that the item "ADJUST" is not reset.</p>   |

## Multifunctional Settings (continued)

### SCREEN Menu

With the SCREEN menu, the items shown in the table below can be performed. Perform each operation in accordance with the instructions in the table below.

| MENU         |               |          |
|--------------|---------------|----------|
| MAIN         | BLANK         | BLACK    |
| PICTURE-1    | START UP      | ORIGINAL |
| PICTURE-2    | MyScreen      |          |
| INPUT        | MyScreen SIZE | x1       |
| AUTO         | MyScreen LOCK | TURN OFF |
| SCREEN       | MENU POSITION |          |
| OPTION       | MESSAGE       | TURN ON  |
| NETWORK      | RESET         |          |
| [F2]: SELECT |               |          |

| Item                 | Description  |
|----------------------|--|
| <b>BLANK</b>         | <p>Select a type of the BLANK screen using the ▲ / ▼ buttons. :<br/> MyScreen ⇄ ORIGINAL ⇄ BLUE ⇄ WHITE ⇄ BLACK</p> <p>The BLANK screen is the screen, which is displayed by pressing the BLANK button. The MyScreen is the screen you can register a desired screen, and the ORIGINAL is the existing standard screen. The BLUE, the WHITE and the BLACK are the non-pattered (plain) screens in each color.</p> <p><b>memo</b> To avoid remaining as an afterimage, the MyScreen and the ORIGINAL screens will change to the BLACK screen after several minutes.</p> <p><b>memo</b> For the MyScreen, please refer to the item "MyScreen" in this table.</p>   |
| <b>START UP</b>      | <p>Select a type of the START UP screen using the ▲ / ▼ buttons. :<br/> MyScreen ⇄ ORIGINAL ⇄ TURN OFF</p> <p>The START UP screen is the screen, which is displayed by detecting no signal or an unsuitable signal.</p> <p>The MyScreen is the screen you can register a desired screen, and the ORIGINAL is the existing standard screen. When the TURN OFF is selected, the BLUE is used.</p> <p><b>memo</b> To avoid remaining as an afterimage, the MyScreen and the ORIGINAL screens will change to the BLANK after several minutes. If also the BLANK screen is the MyScreen or the ORIGINAL, it will change to the BLACK screen.</p> <p><b>memo</b> About the MyScreen, please refer to the item "MyScreen" in this table. About the BLUE, BLACK and BLANK screens, please refer to the item "BLANK" in this table.</p> |
| <b>MyScreen</b>      | <p>Pressing the ► (or the ENTER) button starts the MyScreen registration. Please see the flow chart on the following page.</p>   |
| <b>MyScreen SIZE</b> | <p>Select the size of the MyScreen using the ▲ / ▼ buttons. :<br/> x1 ⇄ FULL</p>   |
| <b>MyScreen LOCK</b> | <p>Select the TURN ON or the TURN OFF using the ▲ / ▼ buttons. :<br/> TURN ON ⇄ TURN OFF</p> <p>The TURN ON disables the operation of the item "MyScreen" of this SCREEN menu.</p>   |
| <b>MENU POSITION</b> | <p>Adjust the menu position using the ▲ / ▼ / ◀ / ▶ buttons. :<br/> Up<br/> ↑<br/> Left ⇄ + ⇄ Right<br/> ↓<br/> Down</p> <p><b>memo</b> To finish this operation, press the ESC button but not the ◀ button.</p>   |


(This table is continued to the following page.)

## Multifunctional Settings (continued)

### SCREEN Menu (continued)

| Item           | Description  |
|----------------|--|
| <b>MESSAGE</b> | <p>Select the TURN ON or the TURN OFF using the ▲ / ▼ buttons. :<br/>TURN ON ⇔ TURN OFF</p> <p>When the TURN ON is selected, the following message function works.</p> <p>The message of the "AUTO IN PROGRESS" for the auto adjustment.</p> <p>The message of the "NO INPUT IS DETECTED"</p> <p>The message of the "SYNC IS OUT OF RANGE"</p> <p>The message of the "Searching ..."</p> <p>The message of the "Detecting ..."</p> <p>The indication of the input signal by input change.</p> <p>The indication of the aspect ratio by changing the aspect ratio.</p> <p>The indication of "FOCUS" by adjusting the focus.</p> |
| <b>RESET</b>   | <p>Select the EXECUTE using the ▲ button to reset the SCREEN menu items. :<br/>EXECUTE ⇔ CANCEL</p> <p>The items of the SCREEN menu are collectively returned to the initial setting.</p>  |

### How to register your picture as the MyScreen

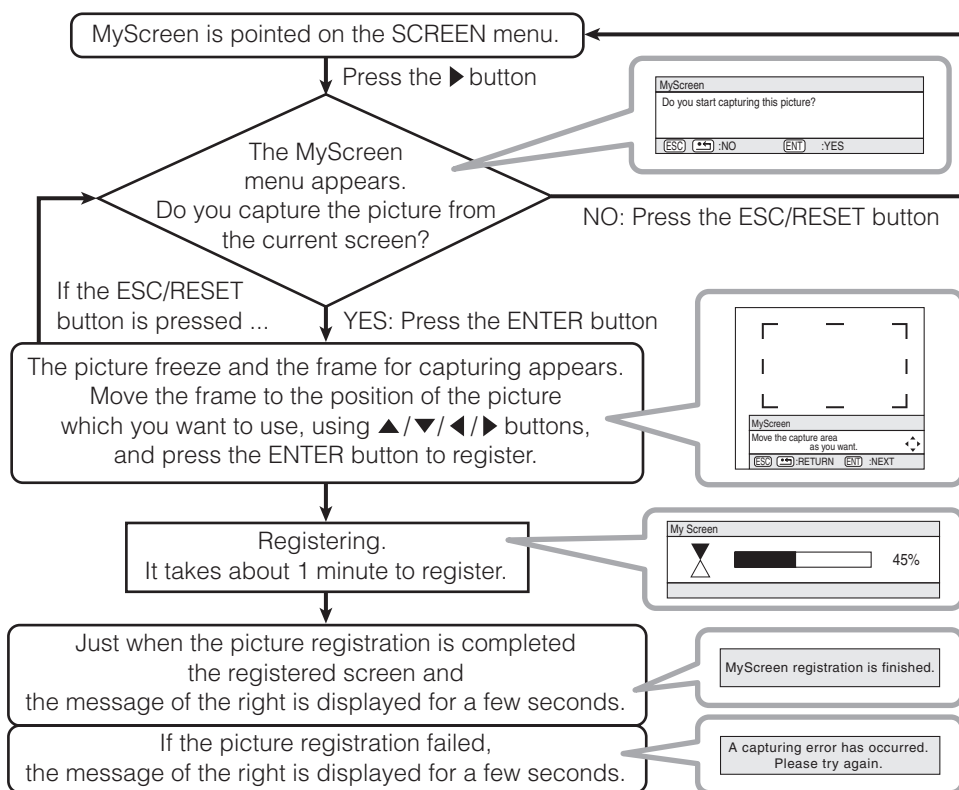



## Multifunctional Settings (continued)

### OPTION Menu

With the OPTION menu, the items shown in the table below can be performed. Perform each operation in accordance with the instructions in the table below.

| MENU        |              |   |
|-------------|--------------|---|
| MAIN        | VOLUME       | 16  |
| PICTURE-1   | SPEAKER      | TURN ON   |
| PICTURE-2   | IR REMOTE    | 1: <input checked="" type="checkbox"/> 2: <input type="checkbox"/> 3: <input checked="" type="checkbox"/> |
| INPUT       | IR REMOTE ID | ALL   |
| AUTO        | LAMP TIME    | 1234 h  |
| SCREEN      | FILTER TIME  | 4321 h  |
| OPTION      | SERVICE      |   |
| NETWORK     | RESET        |   |
| [?]: SELECT |              |   |

| Item                | Description   |
|---------------------|---|
| <b>VOLUME</b>       | Adjust the volume using the ▲ / ▼ buttons. :<br>High ⇄ Low  |
| <b>SPEAKER</b>      | Select the TURN ON or the TURN OFF using the ▲ / ▼ buttons. :<br>TURN ON ⇄ TURN OFF<br>When the TURN ON is selected, the built-in speaker works.  |
| <b>IR REMOTE</b>    | Select a remote sensor using the ▲ / ▼ button (1), then switch it using the ENTER button (2). :<br>(1) 1 : FRONT ⇄ 2 : TOP ⇄ 3 : REAR (2) <input type="checkbox"/> (Off) ⇄ <input checked="" type="checkbox"/> (On)<br><b>memo</b> A sensor cannot be turned off when the other two are off.<br>Always at least one sensor is on.   |
| <b>IR REMOTE ID</b> | Select a number as an ID number for remote control using the ▲ / ▼ buttons. :<br>ALL ⇄ 1 ⇄ 2 ⇄ 3<br>The projector is controlled by the remote control whose ID CHANGE switch is set into the position of the same number as this number. When the ALL is selected, the projector is controlled by a remote control irrespective of the position of the ID CHANGE switch.<br><b>memo</b> Please refer to the section "Using The Remote ID Feature".  |
| <b>LAMP TIME</b>    | Pressing the RESET button for about 3 seconds displays the LAMP TIME menu.<br>Select the RESET using ▲ button to reset the timer. :<br>RESET ⇄ CANCEL<br>Selecting the RESET resets the count of the lamp timer to 0.<br><b>memo</b> Perform this function only when you have replaced the lamp. The lamp timer counts the used time of the current lamp, to display the messages about the lamp. Incorrect performing causes incorrect operation of the messages.<br><b>memo</b> About replacing the lamp, please refer to the section "Lamp".   |
| <b>FILTER TIME</b>  | Pressing the RESET button for about 3 seconds displays the FILTER TIME menu.<br>Select the RESET using ▲ button to reset the timer. :<br>RESET ⇄ CANCEL<br>Selecting the RESET resets the count of the lamp timer to 0.<br><b>memo</b> Perform this function only when you have cleaned or replaced the air filter. The filter timer counts the used time of the air filter after cleaning or replacement, to display the messages about the air filter. Incorrect performing causes incorrect operation of the messages.<br><b>memo</b> About caring for the air filter, please refer to the section "Air Filter". |

(This table is continued to the following page.)

## Multifunctional Settings (continued)

### OPTION Menu (continued)

| Item    | Description  |  |
|---------|--|--|
| SERVICE | Pressing the ► (or the ENTER) button calls the SERVICE menu.<br><b>SERVICE Menu</b><br>Select an item using the ▲ / ▼ buttons, and press the ► (or the ENTER) button to perform each function. :<br>FANSPEED ⇄ AUTO ADJUST ⇄ LENS TYPE ⇄ LENS LOCK                     |  |
|         | FANSPEED   | Select the fan speed level using the ▲ / ▼ buttons. :<br>HIGH ⇄ NORMAL<br>The HIGH ups rotation speeds of fans, though. Please use this function in using a projector at highlands etc.<br><i>memo</i> Note that the projector is noisier when the HIGH is selected.   |
|         | AUTO ADJUST  | Select the ENABLE or the DISABLE using the ▲ / ▼ buttons. :<br>ENABLE ⇄ DISABLE<br>When you want to keep the current adjustment state, select the DISABLE. When the ENABLE is selected, detecting a signal change to a RGB signal performs the automatic adjustment of the vertical position (V POSITION), the horizontal position (H POSITION), the clock phase (H PHASE) and the horizontal size (H SIZE).   |
|         | LENS TYPE  | Select the lens type currently used using the ▲ / ▼ buttons. :<br>AUTO ⇄ 1 ⇄ 2 ⇄ 3 ⇄ 4 ⇄ 5<br>Please select depending on the following.<br>AUTO: automatically selects optimum mode.<br>1: for a standard lens<br>2: for a fixed short throw lens<br>3: for a short throw lens<br>4: for a long throw lens<br>5: for a super long throw lens<br><i>memo</i> This setting has an influence on the keystone distortion etc.<br><i>memo</i> About the optional lens, ask your dealer. |
|         | LENS LOCK  | Select the TURN ON or the TURN OFF using the ▲ / ▼ buttons. :<br>TURN ON ⇄ TURN OFF<br>Selecting the TURN ON locks the adjustment of the lens shift, the zoom and the focus.   |
| RESET   | Select the EXECUTE using the ▲ button to reset the OPTION menu items. :<br>EXECUTE ⇄ CANCEL<br>The items of the OPTION menu are collectively returned to the initial setting.<br>Note that the items "VOLUME", "LAMP TIME", "FILTER TIME" and "SERVICE" are not reset. |  |

|             |          |
|-------------|----------|
| SERVICE     |          |
| FANSPEED    | ►NORMAL  |
| AUTO ADJUST | ENABLE   |
| LENS TYPE   | AUTO     |
| LENS LOCK   | TURN OFF |
| ◀:SELECT    |          |

## Multifunctional Settings (continued)

### NETWORK Menu

This projector provides the NETWORK function. If you use this function, please set up the projector according to the Network environment in which you use it.

**memo** If DHCP function on your Network is activated, the following operation is not normally required, because DHCP function on this projector is active as initial settings. Please see the section "Network Setting Up".

| MENU        |             |          |
|-------------|-------------|----------|
| MAIN        | SETUP       | TURN OFF |
| PICTURE-1   | DHCP        |          |
| PICTURE-2   | INFORMATION |          |
| INPUT       | RESET       |          |
| AUTO        |             |          |
| SCREEN      |             |          |
| OPTION      |             |          |
| NETWORK     |             |          |
| [F2]:SELECT |             |          |

| Item               | Description   |
|--------------------|---|
| <b>SETUP</b>       | <p>Press the ► (or the ENTER) button, then the IP ADDRESS menu as right comes up.</p> <p><b>memo</b> This menu will be shown only when the DHCP is disabled at the NETWORK menu.</p> <p>The IP Address is identification number of the projector on the Network.</p> <p>1. Set the IP Address using the ▲ / ▼ buttons.</p> <p><b>memo</b> The same IP Address with other units cannot be used.</p> <p>Press the ► (or the ENTER) button at the IP ADDRESS menu, then the SUBNET MASK menu comes up. The SUBNET MASK is an address of the Network.</p> <p>2. Set the address of the Network to be used.</p> <p>Press the ► (or the ENTER) button at the SUBNET MASK menu, then the DEFAULT GATEWAY menu comes up. The DEFAULT GATEWAY is the main device to access outside of the Network.</p> <p>3. Set the address of the device as gateway to an outer Network.</p> |
| <b>DHCP</b>        | <p>Select the TURN ON or the TURN OFF using the ▲ / ▼ buttons.</p> <p>TURN ON ⇄ TURN OFF</p> <p>If your Network doesn't support the DHCP function, select the TURN OFF.</p>   |
| <b>INFORMATION</b> | <p>Pressing the ► (or the ENTER) button displays the INFORMATION menu.</p> <p>The menu shows the information about the current Network setting as illustrated right.</p>  |
| <b>RESET</b>       | <p>Select the EXECUTE using the ▲ button to reset the NETWORK menu items. :</p> <p>EXECUTE ⇄ CANCEL</p> <p>All items on the NETWORK menu are returned to the initial setting.</p>   |

| NETWORK-SETUP     |                    |
|-------------------|--------------------|
| IP ADDRESS        |                    |
| ▲                 | 192 . 168 . 1 . 24 |
| ▼                 |                    |
| [ESC] [F2]:RETURN | [ENT]:NEXT         |

| NETWORK-SETUP     |                     |
|-------------------|---------------------|
| SUBNET MASK       |                     |
| ▲                 | 255 . 255 . 255 . 1 |
| ▼                 |                     |
| [ESC] [F2]:RETURN | [ENT]:NEXT          |

| NETWORK-SETUP     |                     |
|-------------------|---------------------|
| DEFAULT GATEWAY   |                     |
| ▲                 | 255 . 255 . 255 . 0 |
| ▼                 |                     |
| [ESC] [F2]:RETURN | [ENT]:NEXT          |

| NETWORK |          |
|---------|----------|
| DHCP    |          |
| ▲       | TURN ON  |
| ▼       | TURN OFF |

| NETWORK-INFORMATION |                   |
|---------------------|-------------------|
| IP ADDRESS          | 192.168.1.24      |
| SUBNETMASK          | 255.255.255.0     |
| DEFAULT GATEWAY     | 255.255.255.0     |
| MAC ADDRESS         | 00.E0.47.03.0C.D8 |

## Network Setting Up


This projector provides the NETWORK function. When you start to use this function, please consult your dealer for further information.

To start, connect the NETWORK port to a gateway device via a CAT-5 cable, then set up the projector according to the Network environment in which you use it.

### When your Network enables the DHCP function

You can set automatically, if you set the DHCP function to "TURN ON" using the NETWORK menu. Please refer to the section "NETWORK Menu".

### When your Network doesn't support the DHCP function or When you use a fixed address even if your Network can support the DHCP function


Please set the IP Address, the Subnet Mask, the Default Gateway and the DHCP using the NETWORK menu.  At first, set the DHCP function to "TURN OFF".

You can set them using a Web Browser (Internet Explorer 4.0 or higher) on the computer connected to the Network.

Input the same IP address as set to the projector onto the Web Browser on the computer connected to LAN.

#### ex. Case of IP Address = 192.168.1.11

- 1) Input "http://192.168.1.11".
- 2) Click "ENTER".

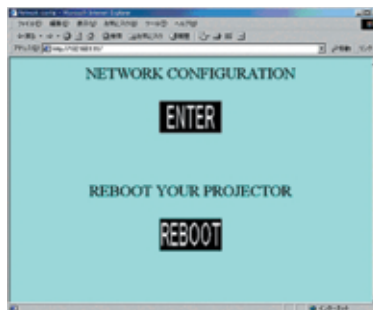


- 3) Input the required data according to the screen.
- 4) Make sure of the input data, then click "Write".

**memo** These setting will be active after reboot. These setting will be stored, and used when DHCP is OFF.

- 5) Click "Return to top page".

- 6) Click "REBOOT" to complete this operation.

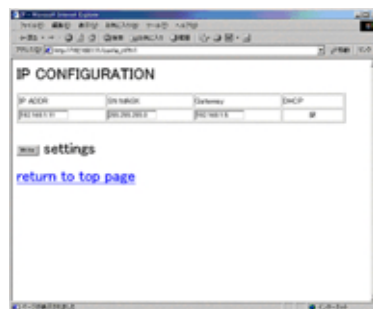

# Lamp



## WARNING



HIGH VOLTAGE



HIGH TEMPERATURE



HIGH PRESSURE

The projector uses a high-pressure mercury glass lamp. The lamp can **break with a loud bang, or burn out**, if jolted or scratched, handled while hot, or worn over time. Note that each lamp has a different lifetime, and some may burst or burn out soon after you start using them. In addition, when the bulb bursts, it is possible for **shards of glass** to fly into the lamp housing, and for **gas containing mercury** to escape from the projector's vent holes.

**About disposal of a lamp** • This product contains a mercury lamp; do not put in trash. Dispose of in accord with environmental laws.

For lamp recycling, go to [www.lamprecycle.org](http://www.lamprecycle.org). (in the US)

For product disposal, contact your local government agency or [www.eiae.org](http://www.eiae.org) (in the US) or [www.epsc.ca](http://www.epsc.ca) (in Canada).

For more information, call your dealer.



Disconnect the  
plug from the  
power outlet

- If the lamp should break (it will make a loud bang when it does), unplug the power cord from the outlet, and make sure to request a replacement lamp from your local dealer. Note that shards of glass could damage the projector's internals, or cause injury during handling, so please do not try to clean the projector or replace the lamp yourself.
- If the lamp should break (it will make a loud bang when it does), ventilate the room well, and make sure not to breathe the gas that comes out of the projector vents, or get it in your eyes or mouth.
- Before replacing the lamp, make sure the power switch is off and the power cable is not plugged in, then wait at least 45 minutes for the lamp to cool sufficiently. Handling the lamp while hot can cause burns, as well as damaging the lamp.



- Do not open the lamp cover while the projector is suspended from above. This is dangerous, since if the lamp's bulb has broken, the shards will fall out when the cover is opened. In addition, working in high places is dangerous, so ask your local dealer to have the lamp replaced even if the bulb is not broken.
- Do not use the projector with the lamp cover removed. At the lamp replacing, make sure that the screws are screwed in firmly. Loose screws could result in damage or injury.



- Use the lamp of the specified type only.
- If the lamp breaks soon after the first time it is used, it is possible that there are electrical problems elsewhere besides the lamp. If this happens, contact your local dealer or a service representative.
- Handle with care: jolting or scratching could cause the lamp bulb to burst during use.
- If the indicators or a message prompts you to replace the lamp (see the section "Related Messages" and "Regarding the indicator Lamps"), replace the lamp as soon as possible. Using the lamp for long periods of time, or past the replacement date, could cause it to burst. Do not use old (used) lamps; this is a cause of breakage.

## Lamp (continued)


### Replacing The Lamp

If the indicators or a message prompts you to replace the lamp, replace the lamp as soon as possible.


- 1** Turn off the projector, and unplug the power cord. Allow the lamp bulb to cool for at least 45 minutes.
- 2** Contact your dealer to prepare a new lamp. Tell the dealer your lamp type number. If the projector is mounted on the ceiling, or if the lamp has broken, also ask the dealer to replace the lamp.

#### In the case of replacement by yourself,

- 3** After making sure that the projector has cooled adequately, slide the knob of a lamp cover lock as shown in the Figure. Then, one side of the lamp cover is raised. Pull up the lamp cover and remove it, as shown in the Figure.

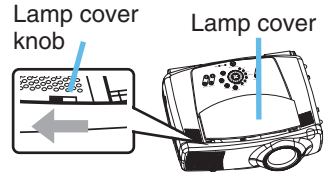


- 4** Unscrew the 3 screws, and slowly pull out the lamp by the handle. Be careful not to touch the inside of the lamp case.

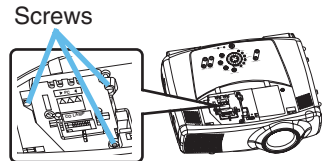

- 5** Insert the new lamp, and tighten the 3 screws firmly to lock it in place.

- 6** Interlocking the 2 tabs of the lamp cover to the projector, put the lamp cover on the projector. Then push the point of the lamp cover to fix it, as shown in the Figure. Make sure that the lamp cover doesn't come up.

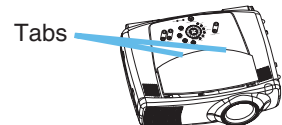

- 7** Turn on the projector, and reset the lamp timer.
  - (1) While the projector running, press the MENU button to open the menu.
  - (2) Choose the "OPTION" on the menu using the ▲ / ▼ button, then press the ► button or ENTER button.
  - (3) Choose the "LAMP TIME" using the ▲ / ▼ button, then press and hold the RESET button for 3 seconds.
  - (4) Choose the "RESET" using the ▲ button.

**memo** When the lamp has been replaced after the message of "THE POWER WILL TURN OFF AFTER 0hr." is displayed, complete this operation within 10 minutes of switching power on.

**memo** Incorrectly resetting of the lamp timer (resetting without replacement, or neglect of resetting after replacement) will result in incorrect message functions.

# Air Filter

**⚠ WARNING** • Please carefully read the “Before using” section of this manual.  
• Before caring, make sure the power switch is off and the power cable is not plugged in, then wait at least 45 minutes for the lamp to cool sufficiently.

• Use the air filter of the specified type only.  
• Do not use the projector with the air filter and filter cover removed. The use without the air filter could result in damage.

**⚠ CAUTION** • If the air filter becomes clogged by dust or the like, internal temperature rises and could cause malfunction. The power is automatically turned off in order to prevent the projector from overheating internally.

## Caring For The Air Filter

The air filter should be cleaned about every 100 hours. If the indicators or a message prompts you to clean the air filter, clean the air filter as soon as possible.

If the soiling will not come off the air filter, or it becomes damaged, then it needs to be replaced. Please replace the air filter as soon as possible.

**memo** When you replace the lamp, please replace also the air filter.

**1**

Turn off the projector, and unplug the power cord. Allow the lamp bulb to cool for at least 45 minutes.

**2**

After making sure that the projector has cooled adequately, remove the filter cover and air filter.


**3**

Apply a vacuum cleaner to the top of the filter cover and the air filter to clean.

If the soiling will not come off the air filter, or it becomes damaged, it needs to be replaced.

If the air filter needs to be replaced, contact your dealer to prepare a new air filter. Tell the dealer your air filter type.


Hold the release buttons of the filter cover while pulling down it.

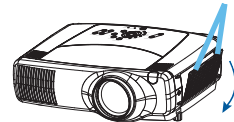

**4**

Insert the cleaned air filter or a new air filter, and replace the filter cover.

Hold the release button of the air filter while pulling out it.

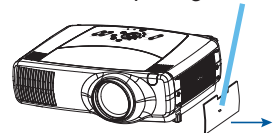

**5**

Turn on the projector power, and reset the filter timer.

(1) While the projector running, press the MENU button to open the menu.

(2) Choose the “OPTION” on the menu using the ▲ / ▼ button, then press the ► button or ENTER button.

(3) Choose the “FILTER TIME” using the ▲ / ▼ button, then press and hold the RESET button for 3 seconds.

(4) Choose the “RESET” using the ▲ button.

**memo** Incorrectly resetting of the filter timer (resetting without replacement, or neglect of resetting after replacement) will result in incorrect message functions.

## Other Care



**WARNING** • Please carefully read the “Before using” section of this manual.

- Before caring, make sure the power switch is off and the power cable is not plugged in.

- Be cautious of high temperature. Do not touch about the lens and ventilation openings during use or immediately after use prevent a burn.

- Never try to care for the inside of the unit yourself. Doing so is dangerous.



**CAUTION** • Incorrect care could have adverse influence such as discoloration, peeling paint, etc.

- Do not use chemicals, including benzene and paint thinner.

- Do not use aerosols or sprays.

- Do not polish or wipe with hard objects.

### ***Caring For The Inside Of The Projector***

In order to ensure the safe use of your projector, please have it cleaned and inspected by your local dealer about once every 2 years.

### ***Caring For The Lens***

**1**

Turn off the projector, and unplug the power cord.

**2**

Lightly wipe the lens with a commercially available lens-cleaning wipe. Do not touch the lens directly with your hand.

### ***Caring For The Cabinet And Remote Control***

**1**

Turn off the projector, and unplug the power cord.

**2**

Wipe lightly with gauze or a soft cloth.






## Troubleshooting

### ***Related Messages***

When the unit's power is on, messages such as those shown below may be displayed. When any such message is displayed on the screen, please respond as described below. If the same message is displayed after the treatment, or if a message other than the following appears, please contact your dealer or service company.

**memo** Although these messages will be automatically disappeared around several minutes, it will be reappeared every time the power is turned on.

| Message   | Description  |
|---|--|
|  <b>CHANGE THE LAMP</b><br><br><b>AFTER REPLACING LAMP,<br/>RESET THE LAMP TIMER.</b>  | <b>The time the lamp timer has counted is approaching 2000 hours.</b><br>Preparation of a new lamp, and an early lamp change is recommended. After you have change the lamp, please be sure to reset the lamp timer.   |
|  <b>CHANGE THE LAMP</b><br><br><b>AFTER REPLACING LAMP,<br/>RESET THE LAMP TIMER.</b><br><br><b>THE POWER WILL TURN OFF<br/>AFTER ** hr.</b> | <b>The time the lamp timer has counted is approaching 2000 hours, so a lamp change within ** hours is recommended.</b><br>When lamp usage reaches 2000 hours, the power will automatically be turned off.<br>Please change the lamp by referring to the section "Lamp". After you have changed the lamp, please be sure to reset the lamp timer. |
|  <b>CHANGE THE LAMP</b><br><br><b>AFTER REPLACING LAMP,<br/>RESET THE LAMP TIMER.</b><br><br><b>THE POWER WILL TURN OFF<br/>AFTER 0 hr.</b>  | <b>As the time the lamp timer has counted has reached 2000 hours, the power will soon be automatically turned off.</b><br>Please immediately turn the power off, and change the lamp by referring to the section "Lamp". After changing the lamp, please be sure to reset the lamp timer.  |

(This table is continued to the following page.)

**NOTE** • A lamp has a finite product life. Lamps are characterized by the fact that, after long hours of usage, a lamp will no longer light up, or the lamp will break or burst, etc. This projector is equipped with an automatic shut-down function, such that the power will automatically be turned off when lamp usage time has reached 2000 hours. Please be aware, however, that among lamp types, there are major differences in product lifetimes; a lamp may thus fail to light even prior to the functioning of the automatic shut-down function of this projector.

## Troubleshooting (continued)

### Related Messages (continued)

| Message  | Description   |
|--|---|
| <b>CLEAN THE AIR FILTER</b><br><br><b>POWER OFF FIRST,<br/>THEN CLEAN THE AIR FILTER.<br/>AFTER CLEANING THE AIR<br/>FILTER,<br/>RESET THE FILTER TIMER.</b> | <b>The time the filter timer has counted has reached 100 hours.</b><br>Please clear or change the air filter by referring to the section "Air Filter". After caring for the air filter, please be sure to reset the filter timer.   |
| <b>CHECK THE AIR FLOW</b>  | <b>The internal portion temperature is rising.</b><br>Please turn the power OFF, and allow the unit to cool down at least 20 minutes. After the projector has sufficiently cooled down, please make confirmation of the following items, and then turn the power on again. <ul style="list-style-type: none"> <li>• Is there blockage of the air passage aperture?</li> <li>• Is the air filter dirty?</li> <li>• Does the peripheral temperature exceed 35°C?</li> </ul> |
| <b>NO INPUT IS DETECTED</b><br><b>ON ***</b>   | <b>There is no input signal.</b><br>Please confirm the signal input connection, and the status of the signal source.  |
| <b>SYNC IS OUT OF RANGE</b><br><b>ON *** [fH] *****kHz [fV] *****Hz</b>  | <b>The horizontal or vertical wavelength of the inputted signal is outside of the response parameters of this unit.</b><br>Please confirm the specs for this unit or the signal source specs.   |

## Troubleshooting (continued)

### Regarding The Indicator Lamps

Lighting and flashing of the STANDBY/ON indicator, the LAMP indicator, and the TEMP indicator have the meanings as described in the table below. Please respond in accordance with the instructions within the table. If the same indication is displayed after the treatment, or if an indication other than the following is displayed, please contact your dealer or service company.

**NOTE** • When the interior portion has become overheated, for safety purposes, the power source is automatically turned off, and the indicator lamps may also be turned off. In such a case, press the “○” (OFF) side of the main power switch, and wait at least 45 minutes. After the projector has sufficiently cooled down, please make confirmation of the attachment state of the lamp and lamp cover, and then turn the power on again.

| STANDBY/ON indicator             | LAMP indicator         | TEMP indicator    | Description   |
|----------------------------------|------------------------|-------------------|---|
| Lighting in <b>Orange</b>        | Turned <b>off</b>      | Turned <b>off</b> | <b>The projector is in a standby state.</b><br>Please refer to the section “Power On/Off”.  |
| <i>Blinking in <b>Green</b></i>  | Turned <b>off</b>      | Turned <b>off</b> | <b>The projector is warming up.</b><br>Please wait.   |
| Lighting in <b>Green</b>         | Turned <b>off</b>      | Turned <b>off</b> | <b>The projector is in an on state.</b><br>Ordinary operations may be performed.  |
| <i>Blinking in <b>Orange</b></i> | Turned <b>off</b>      | Turned <b>off</b> | <b>The projector is cooling down.</b><br>Please wait.   |
| <i>Blinking in <b>Red</b></i>    | (discretionary)        | (discretionary)   | <b>The projector is cooling down. A certain error has been detected.</b><br>Please wait until the STANDBY/ON indicator finishes blink, and then perform the proper response measure using the item descriptions below as reference.   |
| Lighting in <b>Red</b>           | Lighting in <b>Red</b> | Turned <b>off</b> | <b>The lamp does not light, and there is a possibility that interior portion has become heated.</b><br>Please turn the power off, and allow the unit to cool down at least 20 minutes. After the projector has sufficiently cooled down, please make confirmation of the following items, and then turn the power on again.<br><ul style="list-style-type: none"> <li>• Is there blockage of the air passage aperture?</li> <li>• Is the air filter dirty?</li> <li>• Does the peripheral temperature exceed 35°C?</li> </ul> If the same indication is displayed after the treatment, please change the lamp by referring to the section “Lamp”. |

(This table is continued to the following page.)

## Troubleshooting (continued)

### Regarding The Indicator Lamps (continued)

| STANDBY/ON indicator     | LAMP indicator                      | TEMP indicator         | Description   |
|--------------------------|-------------------------------------|------------------------|---|
| Lighting in <b>Red</b>   | <i>Blinking in Red</i>              | Turned <b>off</b>      | <p><b>Either there is no lamp and/or lamp cover, or either of these has not been properly fixed.</b></p> <p>Please turn the power off, and allow the unit to cool down at least 45 minutes. After the projector has sufficiently cooled down, please make confirmation of the attachment state of the lamp and lamp cover, and then turn the power on again. If the same indication is displayed after the treatment, please contact your dealer or service company.</p>  |
| Lighting in <b>Red</b>   | Turned <b>off</b>                   | <i>Blinking in Red</i> | <p><b>The cooling fan is not operating.</b></p> <p>Please turn the power off, and allow the unit to cool down at least 20 minutes. After the projector has sufficiently cooled down, please make confirmation that no foreign matter has become caught in the fan, etc., and then turn the power on again. If the same indication is displayed after the treatment, please contact your dealer or service company.</p>  |
| Lighting in <b>Red</b>   | Turned <b>off</b>                   | Lighting in <b>Red</b> | <p><b>There is a possibility that the interior portion has become heated.</b></p> <p>Please turn the power off, and allow the unit to cool down at least 20 minutes. After the projector has sufficiently cooled down, please make confirmation of the following items, and then turn the power on again.</p> <ul style="list-style-type: none"> <li>• Is there blockage of the air passage aperture?</li> <li>• Is the air filter dirty?</li> <li>• Does the peripheral temperature exceed 35°C?</li> </ul> <p>If the same indication is displayed after the treatment, please change the lamp by referring to the section "Lamp".</p> |
| Lighting in <b>Green</b> | Alternative <i>Blinking in Red</i>  |                        | <p><b>There is a possibility that the interior portion has become overcooled.</b></p> <p>Please use the unit within the usage temperature parameters (0°C to 35°C). After the treatment, resent the power to ON.</p>  |
| Lighting in <b>Green</b> | Simultaneous <i>Blinking in Red</i> |                        | <p><b>It is time to clean the air filter, or there is no air filter.</b></p> <p>Please immediately turn the power OFF, and clean or change the air filter by referring to the section "Air Filter". After cleaning or changed the lamp, please be sure to reset the filter timer. After the treatment, resent the power to ON.</p>  |

## Troubleshooting (continued)

### Phenomena That May Easily Be Mistaken For Machine Defects

**⚠ WARNING** • Never use the projector if abnormal operations such as smoke, strange odor, excessive sound, damaged casing or elements or cables, penetration of liquids or foreign matter, etc. should occur. In such cases, immediately turn off the power switch and then disconnect the power plug from the power outlet. After making sure that the smoke or odor has stopped, contact your dealer or service company.

Before requesting repair, please check in accordance with the following chart. If the situation cannot be corrected, please contact your dealer or service company.

**NOTE** • Although bright spots or dark spots may appear on the screen, this is a unique characteristic of liquid crystal displays, and such do not constitute or imply a machine defect.

| Phenomenon                                 | Cases not involving a machine defect  | Reference pages |
|--|---|-----------------|
| Power does not come on.                    | <b>The electrical power cord is not plugged in.</b><br>Correctly connect the power cord.  | 19              |
|  | <b>The power switch is not set to the on position.</b><br>Set the power switch to [ I ] (On).   | 23              |
|  | <b>The main power source has been interrupted during operation such as by a power outage (blackout), etc.</b><br>Please turn the power off, and allow the unit to cool down at least 20 minutes. After the projector has sufficiently cooled down, please turn the power on again.  | 23              |
|  | <b>Either there is no lamp and/or lamp cover, or either of these has not been properly fixed.</b><br>Please turn the power off, and allow the unit to cool down at least 45 minutes. After the projector has sufficiently cooled down, please make confirmation of the attachment state of the lamp and lamp cover, and then turn the power on again. | 43, 44          |
| Neither sounds nor pictures are outputted. | <b>The signal cables are not correctly connected.</b><br>Correctly connect the connection cables.   | 16, 17          |
|  | <b>Signal source does not correctly work.</b><br>Correctly set up the signal source device by referring to the manual of the source device.   | -               |
|  | <b>The input changeover settings are mismatched.</b><br>Select the input signal, and correct the settings.  | 24              |

(This table is continued to the following page.)

## Troubleshooting (continued)

### Phenomena That May Easily Be Mistaken For Machine Defects (continued)

| Phenomenon  | Cases not involving a machine defect  | Reference pages |
|---|---|-----------------|
| Pictures are displayed, but no sounds are heard.            | <b>The signal cables are not correctly connected.</b><br>Correctly connect the connection cables.   | 16, 17          |
|   | <b>The volume is adjusted to an extremely low level.</b><br>Adjust the VOLUME to a higher level.  | 27, 40          |
|   | <b>The sound is muted.</b><br>Press the MUTE button to restore the sound.   | 27              |
|   | <b>The audio input is not correctly selected when the child window is displayed.</b><br>Correctly select the audio input.   | 30              |
| Sounds are heard, but no pictures are displayed.            | <b>The lens cap is attached.</b><br>Remove the lens cap.  | 12, 23          |
|   | <b>The signal cables are not correctly connected.</b><br>Correctly connect the connection cables.   | 16, 17          |
|   | <b>The brightness is adjusted to an extremely low level.</b><br>Adjust the BRIGHT to a higher level using the menu function.  | 31              |
|   | <b>The screen is blanked.</b><br>Press the BLANK button to return to the input signal screen.   | 27              |
| Colors have a faded- out appearance, or Color tone is poor. | <b>Color settings are not correctly adjusted.</b><br>Perform picture adjustments by changing the COLOR BAL R, COLOR BAL G, COLOR BAL B, COLOR and/or TINT settings, using the menu functions. | 32              |
| Pictures appear dark.                                       | <b>The brightness and/or contrast are adjusted to an extremely low level.</b><br>Adjust the BRIGHT and/or CONTRAST settings to a higher level using the menu function.                        | 31              |
|   | <b>The WHISPER function is working.</b><br>Select the NORMAL to the item WHISPER in the MAIN menu.  | 31              |
|   | <b>The lamp is approaching the end of its product lifetime.</b><br>Replace the lamp.  | 43, 44          |
| Pictures appear blurry.                                     | <b>Either the focus and/or horizontal phase settings are not properly.</b><br>Adjust the focus using the focus buttons, and/or H PHASE using the menu function.                               | 24              |
|   | <b>The lens is dirty or misty.</b><br>Clean the lens by referring to the section "Caring For The Lens".   | 46              |
| Input signal changes with no operation.                     | <b>The INPUT dial is set between the click points.</b><br>Turn the INPUT dial and set it at a click point.  | 24              |

## Warranty And After-Service

If a problem occurs with the equipment, first refer to the “Troubleshooting” and run through the suggested checks. If this does not resolve the problem, please contact your dealer or service company. They will tell you what warranty condition is applied.

## Specifications

**NOTE** • This specifications are subject to change without notice.

| Item                 |              | Specification   |
|----------------------|--------------|---|
|                      |              | TLP-X4500   |
| Product name         |              | Liquid crystal projector  |
| Liquid crystal panel | Panel size   | 2.5 cm (0.99 type)  |
|                      | Drive system | TFT active matrix   |
|                      | Pixels       | 786,432 pixels (1024 horizontal x 768 vertical)   |
| Lens                 |              | Zoom lens F=1.7 ~ 2.4 f=30.5 ~ 45.8 mm  |
| Lamp                 |              | 310W UHB  |
| Speaker              |              | 1.0W + 1.0W (Stereo)  |
| Power supply         |              | AC100 ~ 120V, 5.2A<br>AC220 ~ 240V, 2.2A  |
| Power consumption    |              | 470W  |
| Temperature range    |              | 0 ~ 35°C (Operating)  |
| Size                 |              | 420 (W) x 150 (H) x 310 (D) mm (Not including protruding parts)<br>• Please refer to the figure of the section “TECHNICAL” of the end of this manual.   |
| Weight (mass)        |              | 7.7 kg  |
| Ports                |              | <div> <b>RGB input ports</b><br/>           RGB<br/>           M1-D<br/>           BNC (R, G, B, H, V)         </div> <div> <b>Video input ports</b><br/>           VIDEO IN<br/>           S-VIDEO<br/>           COMPONENT<br/>           (Cr/Pr, Cb/Pb, Y)         </div> <div> <b>Audio input ports</b><br/>           AUDIO IN 1<br/>           AUDIO IN 2<br/>           AUDIO IN R/L         </div> <div> <b>RGB output port</b><br/>           RGB OUT         </div> <div> <b>Audio output port</b><br/>           AUDIO OUT         </div> <div> <b>Control port</b><br/>           CONTROL         </div> <div> <b>Other ports</b><br/>           NETWORK<br/>           REMOTE CONTROL<br/>           DC OUT         </div> |
| Optional Parts       | Lamp         | TLPLX45   |
|                      | Others       | • Please consult your dealer.   |