




LOT NUMBER: _____
DATE PURCHASED: ___/___/___

Isabella 62" TV Console Model # ISB62C

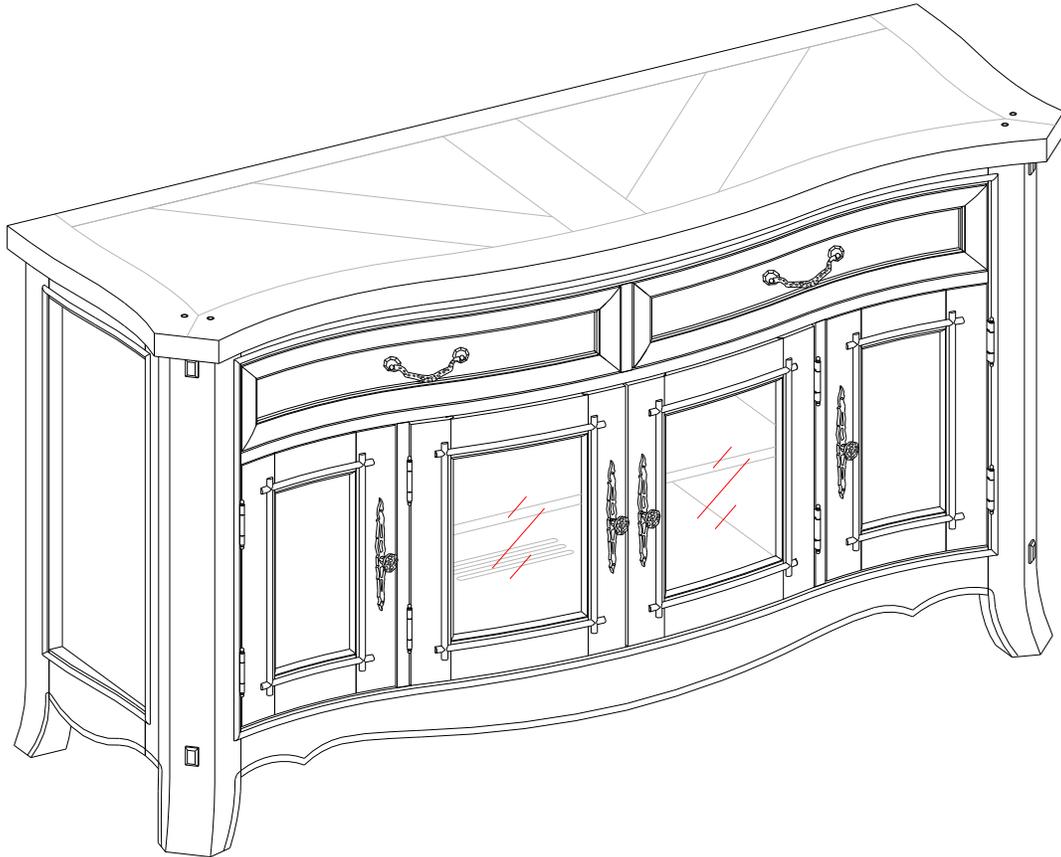

ADULT ASSEMBLY REQUIRED

If you have any questions regarding assembly or if parts are missing, **DO NOT** return this item to the store where it was purchased. Please call our customer service number and have your instructions and parts list ready to provide the model name, part name or factory number:

1-866-942-5362

Pacific Standard Time: 8:30 a.m. - 4:30 p.m., Monday - Friday

Or visit our web site 24 hours a day, 7 days a week for product assistance at

www.whalenstyle.com

Or e-mail your request to **parts@whalenfurniture.com**

**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

QUALITY GUARANTEE

We are confident that you will be delighted with your Whalen Furniture purchase.

Should this product be defective in workmanship or materials or fail under normal use, we will repair or replace it for up to one (1) year from date of purchase. Every Whalen Furniture product is designed to meet your highest expectations. We guarantee that you will immediately see the value of our fine furniture.

This warranty gives you specific legal rights and you may also have other rights which vary from State to State.


Customer Service: 1-866-942-5362

8:30 a.m. - 4:30 p.m., PST, Monday to Friday

www.whalenstyle.com

MAXIMUM RECOMMENDED WEIGHT LOADS

MANUFACTURER: Whalen Furniture
 CATALOG: Isabella 62" TV Console (ISB62C)
 DATE OF MANUFACTURE: May 2012
 MADE IN CHINA

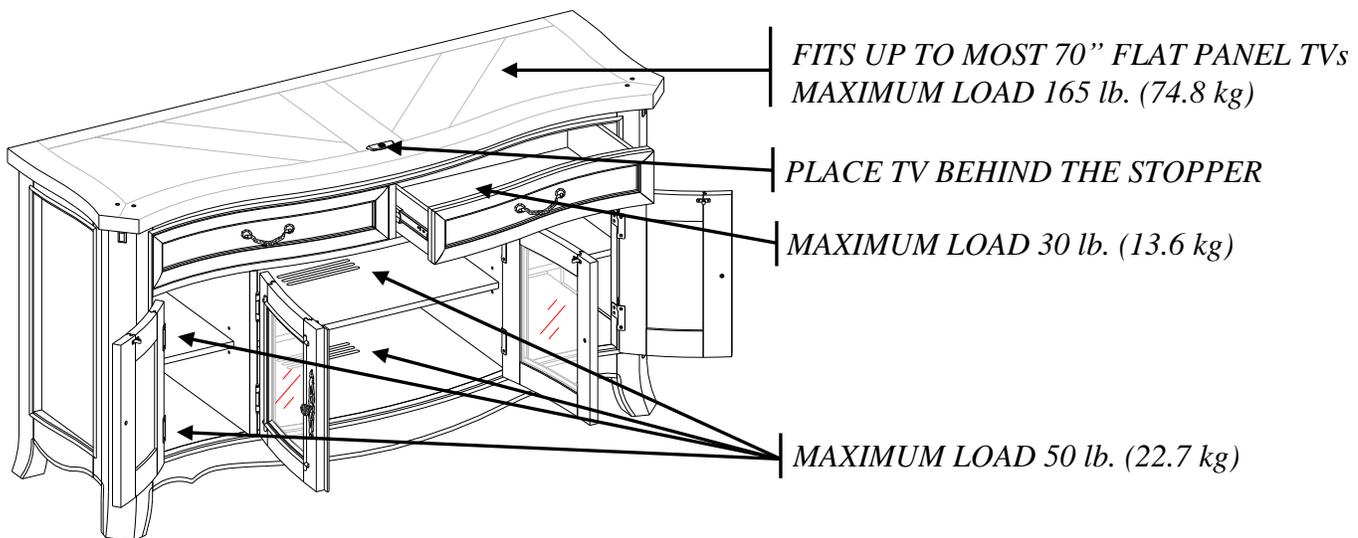


WARNING


THIS UNIT IS NOT INTENDED FOR USE WITH CRT TVS. USE ONLY WITH FLAT PANEL TVS AND AUDIO/VIDEO EQUIPMENT MEETING RECOMMENDED SIZE AND WEIGHT LIMITS. NEVER USE WITH LARGER/HEAVIER THAN RECOMMENDED FLAT PANEL TVS OR EQUIPMENT. TO AVOID INSTABILITY, PLACE FLAT PANEL TV IN CENTRE OF UNIT; CRT TVS, IMPROPERLY POSITIONED FLAT PANEL TVS, OR FLAT PANEL TVS OR OTHER EQUIPMENT THAT EXCEED RECOMMENDED SIZE AND WEIGHT LIMITS COULD FALL OFF OR BREAK THE UNIT, CAUSING POSSIBLE SERIOUS INJURY.

Parts and Hardware List


Please read completely through the instructions and verify that all parts listed are present before beginning assembly.

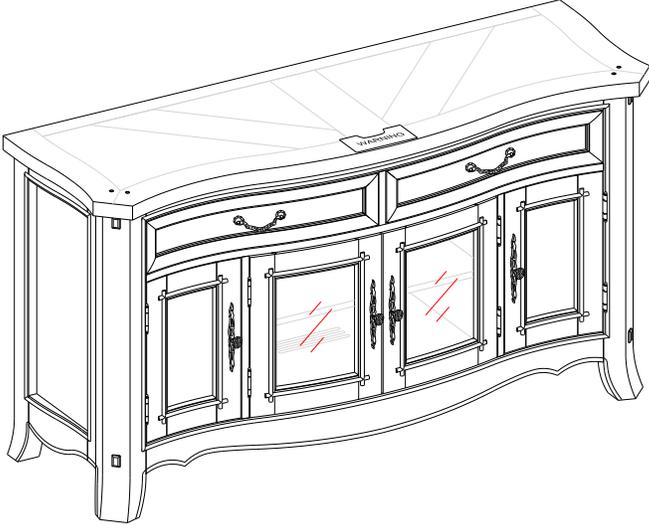

A- TV CONSOLE (1)

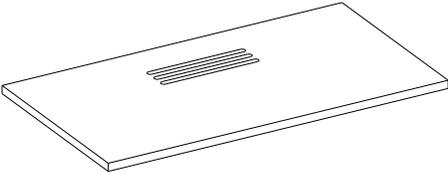

B- LARGE WOOD SHELF (1)
(Pre-attached)

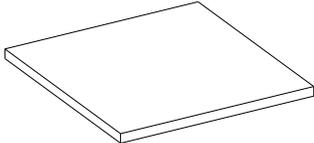

C- SMALL WOOD SHELF (2)
(Pre-attached)



 
(1) SHELF PIN w/HOLE (12)
(Pre-attached)




(2) 1/2" WOOD SCREW (12)
(Pre-attached)



(3) ACRYLIC STOPPER (1)



TOUCH-UP PEN (1)

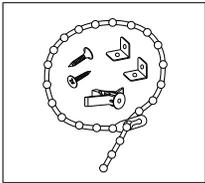



TIPPING RESTRAINT HARDWARE KIT (2)
(Included in plastic bag)

Tools required: Phillips screwdriver (not provided).

DRAWER INSTALLATION


If you need to remove the drawers with ball bearing slides from the unit, please follow the steps below to prevent any damage to the slides or the drawers.

1. If you need to remove the drawer, please pull the drawer all the way out, then simultaneously push the plastic release lever of the ball bearing slide up on one side and down on the other side, and pull the drawer completely out. See detail #A.

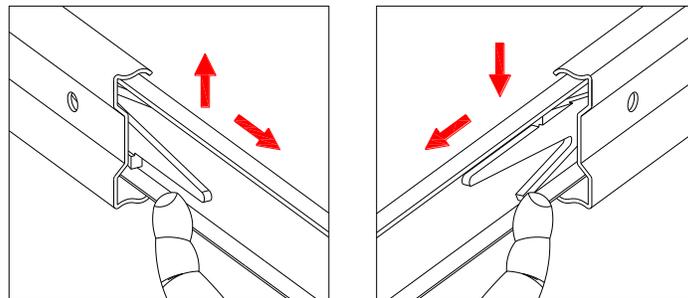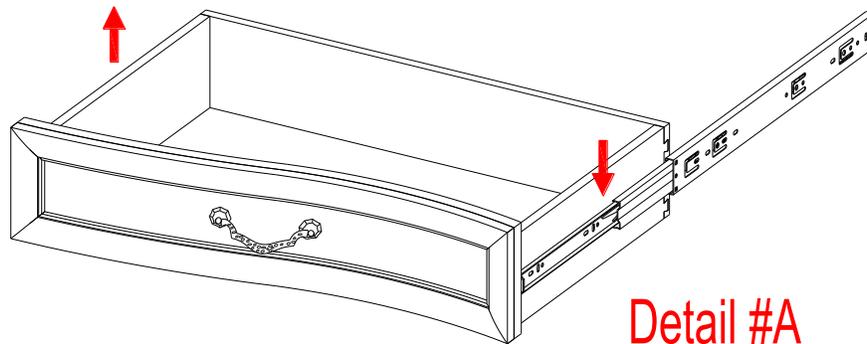


2. To place the drawer back, simply push the ball bearing cart all the way to the end of the slides (on both sides), and align the slide runners on the drawer with the slide tracks on the unit. Push it carefully inside until it stops. See detail #B.

NOTE: If this does not go smoothly, please take out and repeat step.

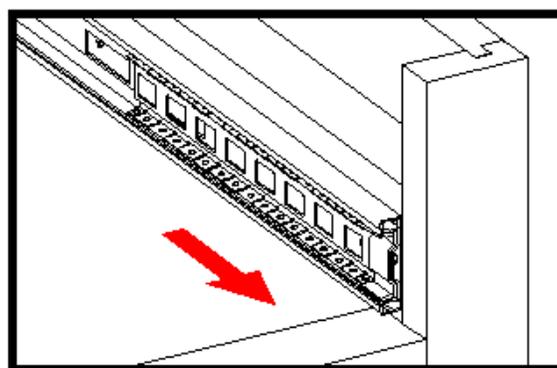


Assembly Instructions

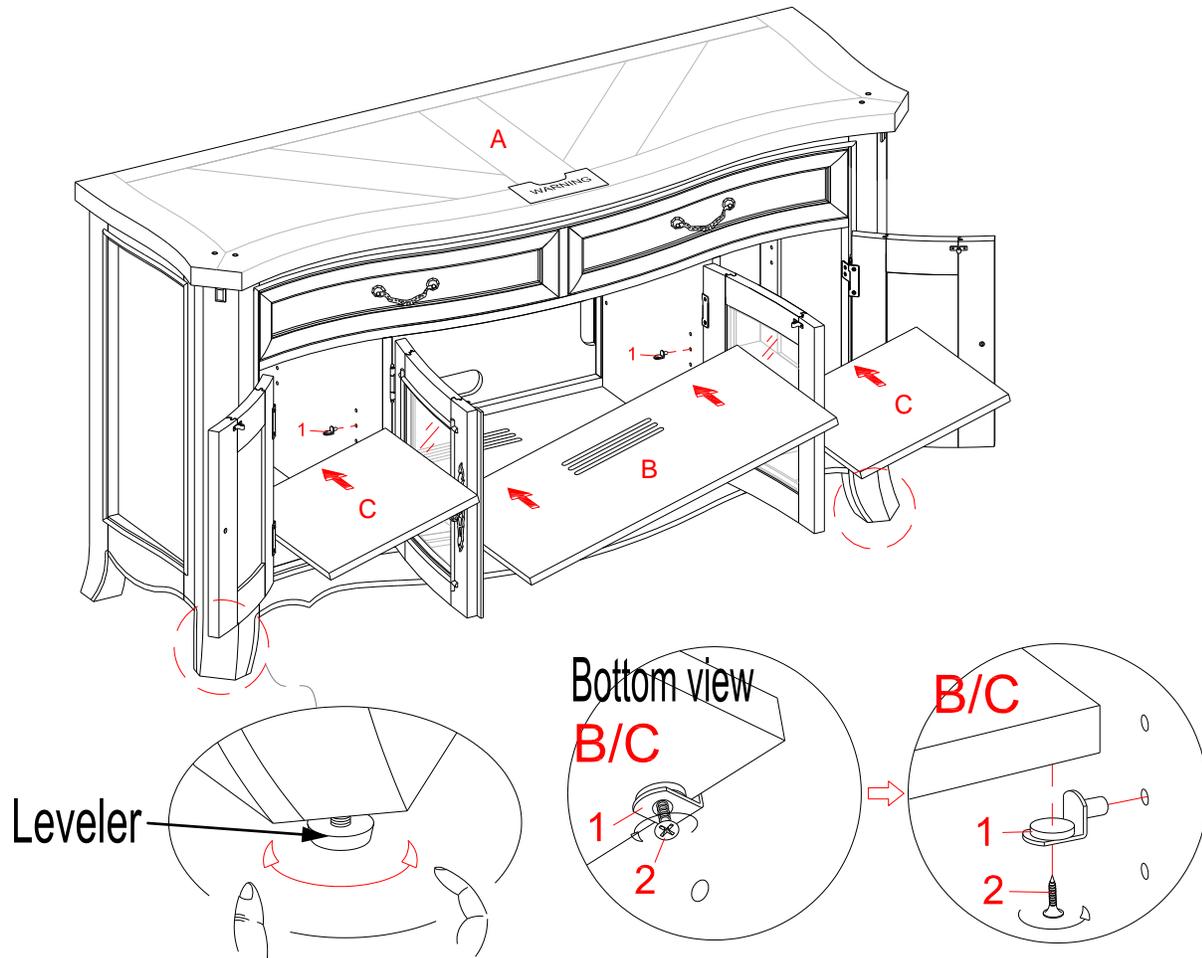

1. Unpack the unit and confirm that you have all the hardware and required parts listed.
2. With assistance, position the unit at your desired location to place your TV on top when you finish assembly.
3. The WOOD SHELVES (B and C) are pre-installed for shipping. If the shelf position is not to your liking, you will need to reposition the shelves by following the next steps.
 - a. With the doors open, look under each SHELF (B or C), and locate the 1/2" WOOD SCREWS (2) holding the SHELF to the SHELF PINS (1).
 - b. Remove the 1/2" WOOD SCREWS (2) from each SHELF PIN (1) with a Phillips screwdriver.
 - c. Remove the SHELF (B or C) from the console.
 - d. Remove the SHELF PINS (1) from the compartment and re-position them in the desired location. Make sure you place the SHELF PINS in the same level so the SHELF is not tilted.
 - e. Place the SHELF (B or C) back onto the newly relocated SHELF PINS (1).
 - f. Using the Phillips screwdriver, reinstall the 1/2" WOOD SCREWS (2) through the SHELF PINS (1) and into the SHELF (B or C).
4. If necessary, adjust the FLOOR LEVELERS pre-attached at the bottom of front legs of console to level the unit.


Assembly Instructions

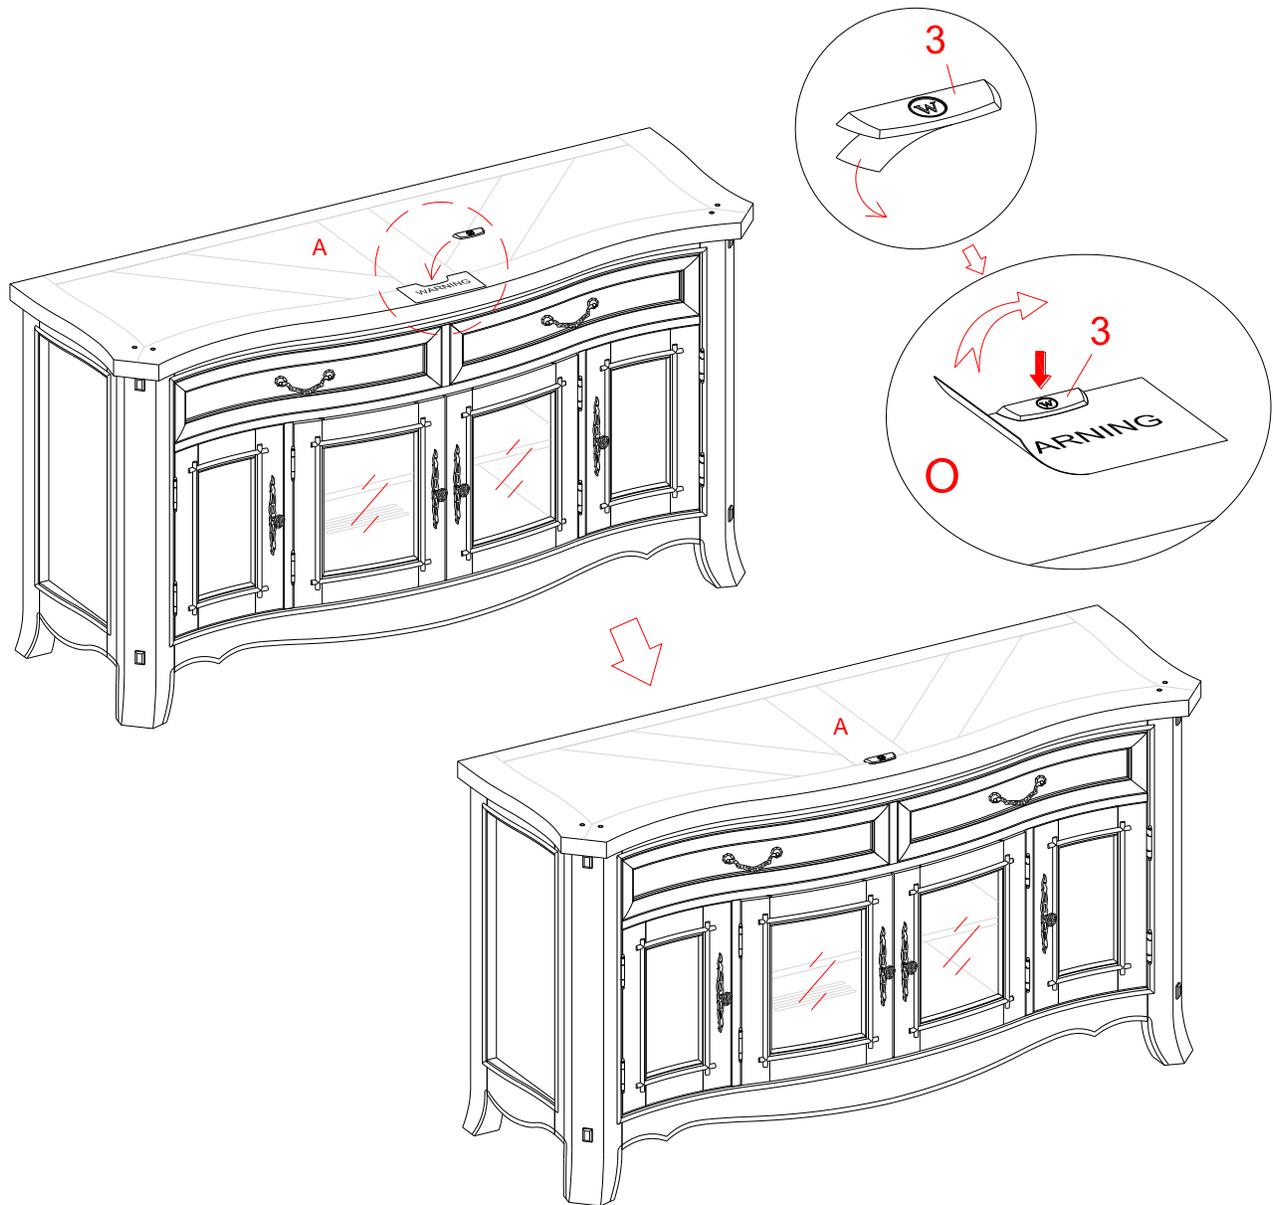

NOTE: You must install the Acrylic TV Stopper to prevent TV from tipping when placing your flat panel television directly on the table-top console.


5. Remove the tape of ACRYLIC STOPPER (3) and place it on the cut-out of the warning label on the front of CONSOLE. Make sure it is aligned before applying pressure.
6. Remove the warning label for ACRYLIC STOPPER (3) carefully.

Assembly Instructions

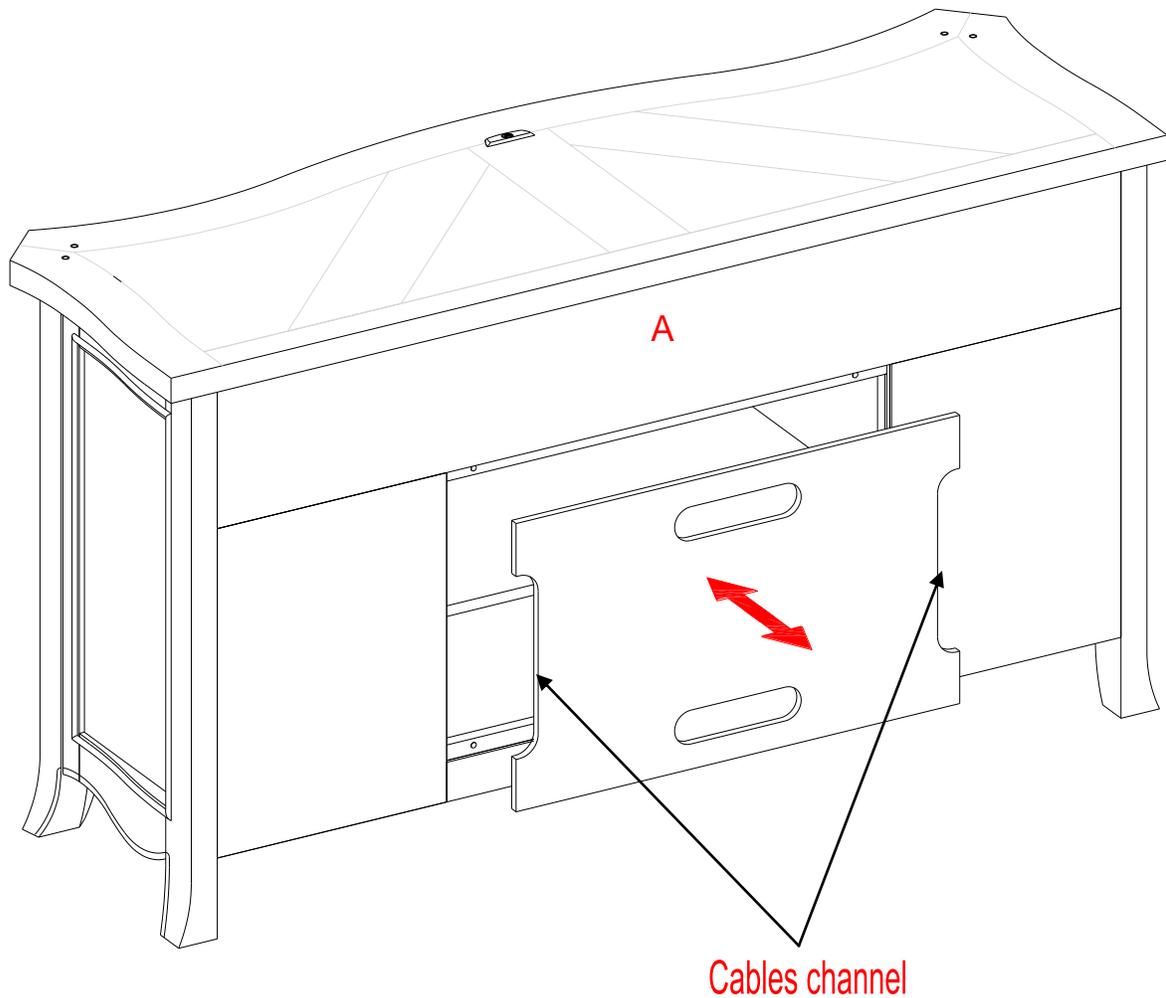

7. The vented back panel is removable for easy access to audio and video component hook-up. Make sure you route the cables through the cutout on the side of back panel rather than ventilation holes.

Assembly Instructions

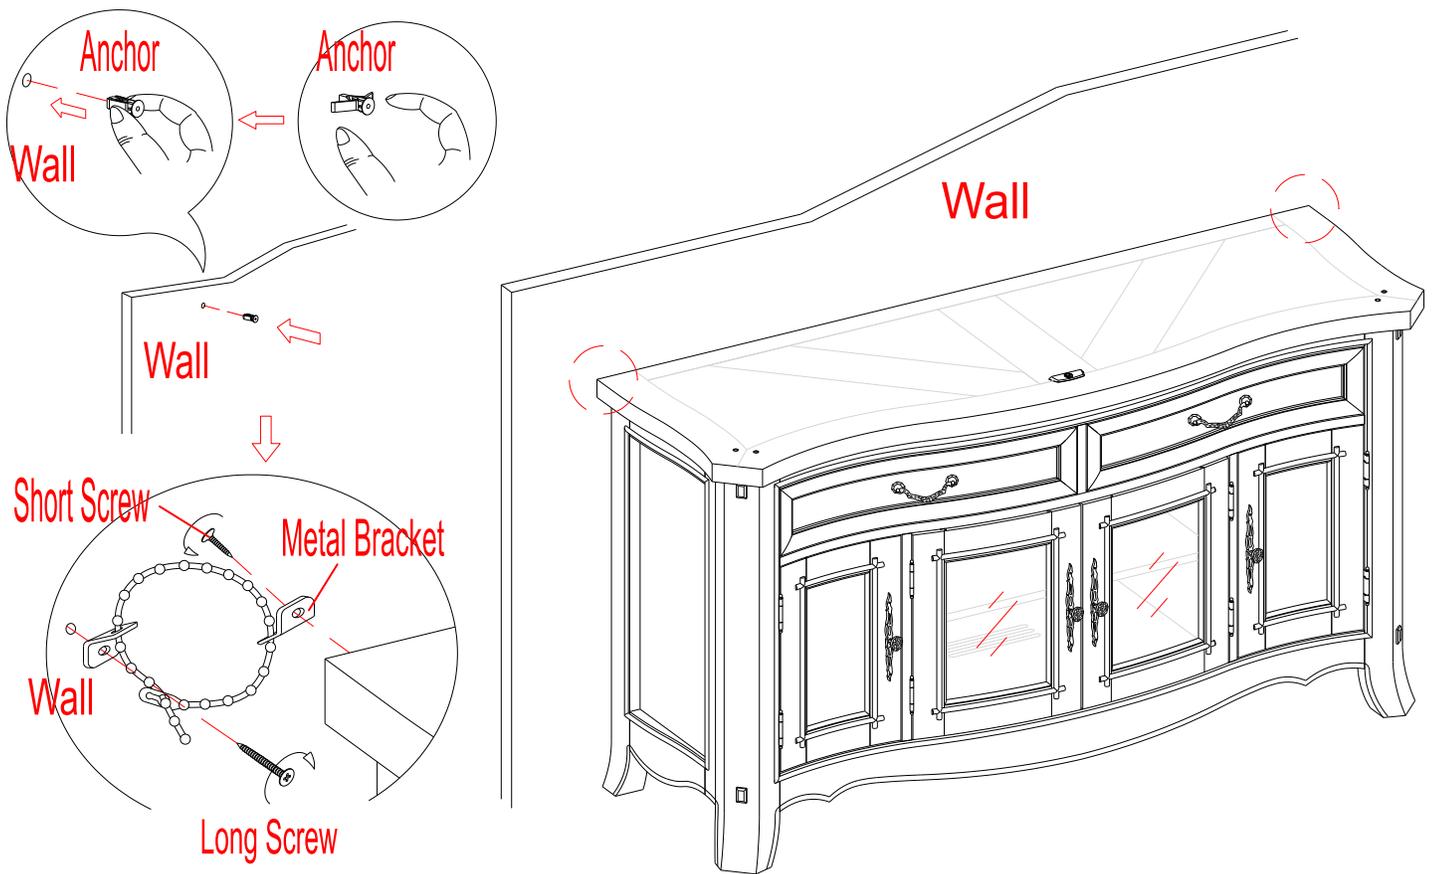

Tools required: Phillips Screwdriver, Mallet, Power Drill, and 3/8" Drill Bit.

8. With help from your assistant, position the CONSOLE (A) on your desired location against a wall. Now follow the instructions printed on the plastic bag containing the Tipping Restraint Hardware to mount two tipping restraints to the unit and the wall. As shown in the illustration.

NOTE: Young children can be seriously injured by tipping furniture. You must install the Tipping Restraint Hardware with the unit in use to prevent any accidents or damage to the unit. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

Care and Maintenance

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polish is not necessary. Should you choose to use polish, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage your furniture's finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Stains or marks from crayons or ink markers will be difficult to remove.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

Further advice about wood furniture care

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.



A Touch-up Pen has been provided to repair any small nicks or scratches that may occur during assembly or shipping.

We hope you enjoy your purchase for many years.
Thank you for choosing Whalen Furniture!



IF YOU NEED TO ORDER PARTS PLEASE USE THE LIST BELOW

Isabella 62" TV Console (ISB62C)

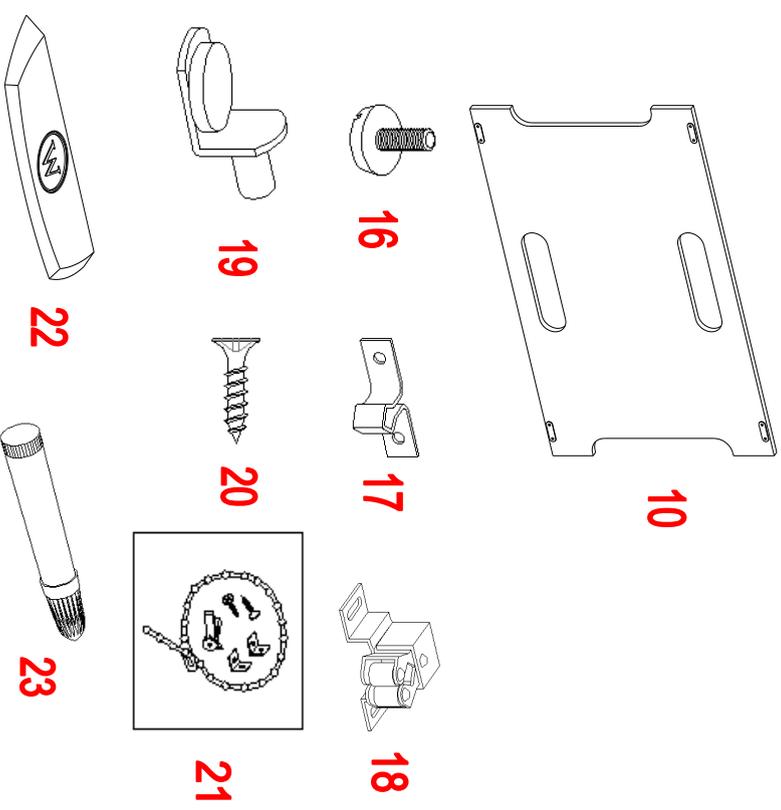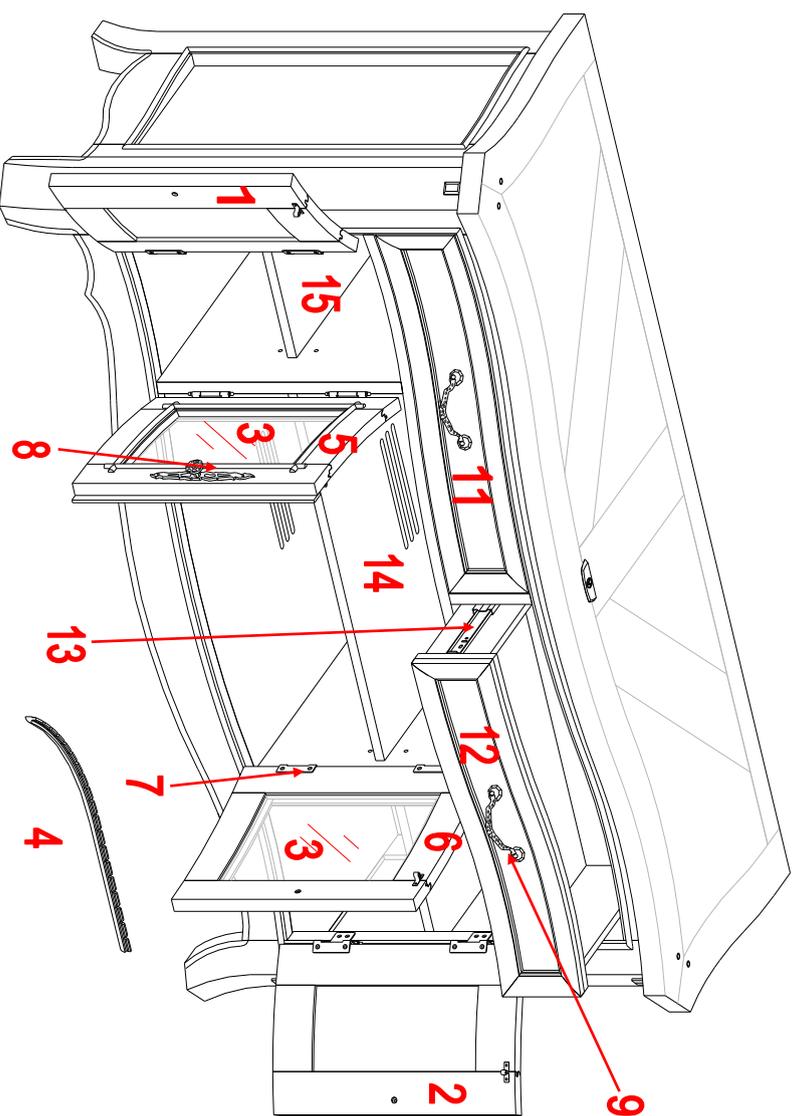

- | | | | |
|----------------|----------------------|------------------|--------------------------------|
| *ISB62C-1-LOD | Left Outside Door | *ISB62C-13-DS | Drawer Slides (45 mm x 14" L) |
| *ISB62C-2-ROD | Right Outside Door | *ISB62C-14-LWS | Large Wood Shelf |
| *ISB62C-3-GDP | Glass Door Panel | *ISB62C-15-SWS | Small Wood Shelf |
| *ISB62C-4-RL | Rubber Liner | *ISB62C-16-FL | Floor Leveler |
| *ISB62C-5-LMD | Left Middle Door | *ISB62C-17-MC | Male Catch |
| *ISB62C-6-RMD | Right Middle Door | *ISB62C-18-DRC | Double Roller Catch |
| *ISB62C-7-BHS | Butt Hinge w/Screws | *ISB62C-19-SPH | Shelf Pin w/Hole |
| *ISB62C-8-DHB | Door Handle w/Bolt | *ISB62C-20-1/2WS | 1/2" Wood Screw |
| *ISB62C-9-DPB | Drawer Pull w/Bolts | *ISB62C-21-TRHK | Tipping Restraint Hardware Kit |
| *ISB62C-10-RBP | Removable Back Panel | *ISB62C-22-AS | Acrylic Stopper |
| *ISB62C-11-LUD | Left Utility Drawer | *ISB62C-23-TUP | Touch-up Pen |
| *ISB62C-12-RUD | Right Utility Drawer | *ISB62C-CH | Complete Hardware |