

Picture similar

User Manual

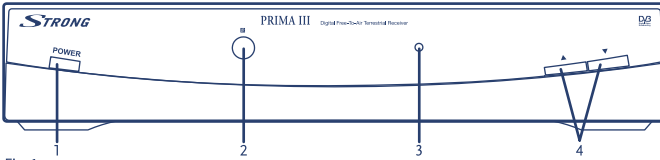 


Fig. 1

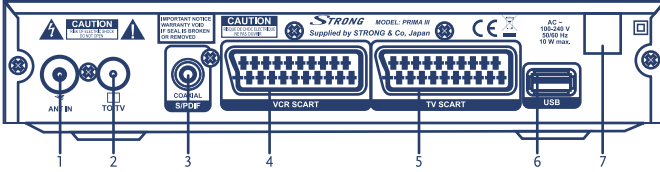 


Fig. 2

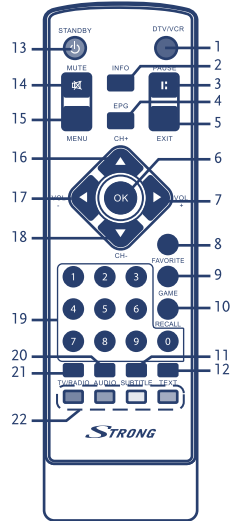 


Fig. 3



Fig. 4

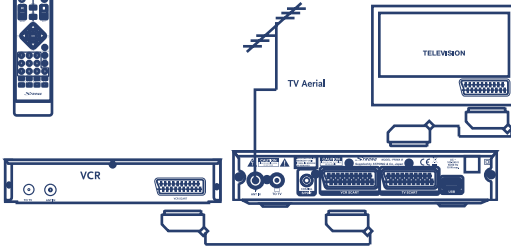 


Fig. 5

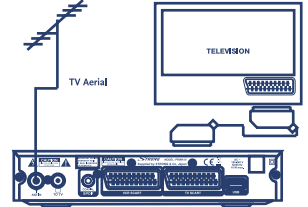 


Fig. 6



Scr. 1



Scr. 2




Scr. 3



Scr. 4



 Scr. 5

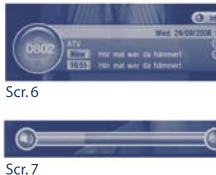

Scr. 6



Scr. 7



Scr. 8



Scr. 9



Scr. 10



Scr. 11



Scr. 12



Scr. 13



Scr.14



Scr.15



Scr.16



Scr.17



Scr.18



Scr.19



Scr.20



Scr.21



Scr.22



Scr.23



Scr.24



Scr.25



Scr.26



Scr.27



Scr.28



Scr.29



Scr.30



Scr.31



Scr.32



Scr.33



Scr.34



Scr.35



Scr.36

DIGITAL FREE-TO-AIR TERRESTRIAL RECEIVER PRIMA III

USER MANUAL

Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.

Safety Instructions

Always read the safety instructions carefully

Keep this User's Manual for future reference

Keep this equipment away from humidity

Lay this equipment on a reliable flat surface before setting it up.

Do not position the receiver on soft furnishings.

If any of the following situations arise, get the equipment checked by a service technician:

- The equipment has been exposed to moisture.
- The equipment has been dropped and damaged.
- The equipment has obvious sign of breakage.
- The equipment has not been working well or you cannot get it work according to User's Manual.

Warning

To prevent the risk of electric shock, do not open the cover or the back of the receiver.

Do not block the ventilation holes of the device. Leave appropriate gap above and around it to allow for adequate ventilation.

Do not place the device in an unventilated cabinet or on top of a unit which emits heat.

Copyright Statement

No part of this publication may be reproduced in any form by any means without the prior written permission. Other trademarks or brand names mentioned herein are trademarks or registered trademarks of their respective companies.

Disclaimer

Information in this document is subject to change without notice. The manufacturer does not make any representations or warranties (implied or otherwise) regarding the accuracy and completeness of this document and shall in no event be liable for any loss of profit or any commercial damage, including but not limited to special, incidental, consequential, or other damage.

TABLE OF CONTENTS

1.0 INTRODUCTION	3
1.1 Main Features	3
1.2 Accessories	3
2.0 FRONT PANEL AND REAR PANEL	3
2.1 Front panel	3
2.2 Rear panel	3
2.3 Remote Control	4
2.4 Installing the Batteries	4
2.5 Using the Remote Control	4
3.0 CONNECTIONS	4
3.1 Connecting to a TV Set	4
3.2 Connecting to TV and VCR	5
4.0 FIRST TIME INSTALLATION	5
5.0 BASIC OPERATIONS	5
5.1 Switching On and Off	5
5.2 Changing Channels	5
5.3 Adjusting the Volume	5
5.4 Watching Favourite List	6
5.5 Displaying information	6
5.6 Choosing Subtitle	6
5.7 Freezing	6
5.8 Displaying EPG	6
5.9 Displaying Text	6
5.10 Selecting Sound Mode	6
6.0 USING THE ON-SCREEN SETUP MENU	6
7.0 SOFTWARE INFO	6
8.0 MANAGING PROGRAM LIST	6
8.1 Creating Favourite Channel Groups	7
8.2 Locking a Channel	7
8.3 Editing a Channel	7
8.4 Moving a Channel	7
8.5 Sorting Channels	7
8.6 Skipping a Channel	7
8.7 Deleting a Channel	7
8.8 Searching for a Channel	8
8.9 Watching Locked Channels	8
9.0 INSTALLATION	8
9.1 Antenna Power	8
9.2 Country Setting	8
9.3 Language	8
9.4 Time Setting	8
9.5 Program Search	8
10.0 TV SETUP	9
10.1 TV Format	9
10.2 TV Mode	9
10.3 OSD Transparency & Banner Display Time	9
10.4 Video Output	9
10.5 Video Enhancement	9
11.0 PASSWORD	9
12.0 ADVANCED TIMER	10
13.0 SET DEFAULT	10
14.0 SOFTWARE UPDATE	10
15.0 ACCESSORY	10
16.0 TROUBLESHOOTING	10
17.0 SPECIFICATIONS	11

1.0 INTRODUCTION

PRIMA III is a Free-To-Air digital terrestrial receiver, allowing you to access free-to-air digital terrestrial TV channels and radio broadcasts on your TV set. Its digital reception covers VHF & UHF band. Compared with the analogue TV programs, digital TV programs eliminate the noise and interference but offer high quality video and audio. An on-screen initial installation guide is provided so that you can easily start to enjoy watching the programs. In addition, a fully featured remote controller is included that offers you access to every feature with a simple press of a button.

1.1 Main Features

- Fully complies with European DVB-T standard
- MPEG-2 ISO/IEC 13818 transport stream compliant audio/video decoding
- Bandwidth of 6/7/8 MHz supported
- COFDM demodulator
- Automatic/manual channel search
- Many Channel handling options as: locking, editing, moving, sorting, skipping, deletion and searching
- Parental lock control
- NTSC/PAL converting automatically and manually
- EPG (Electronic Program Guide) and Teletext function with search function
- Multiple-language OSD
- Supports multi-subtitle
- USB port **ONLY** for software upgrade
- 2 SCART's (TV SCART output/VCR SCART input)
- Tuner RF in/loop through
- Active antenna support (5 volt)
- Full function remote control
- Extended FAV list for up to 8 groups

1.2 Accessories

Before installation, please check the items of the package. The package should contain the following items:

- SRT PRIMA III Receiver x1
- Remote Control x1
- AAA Battery for the remote control x2
- User Manual x1

2.0 FRONT PANEL AND REAR PANEL

2.1 Front panel

(Fig. 1)

- | | |
|---------------------------------|--|
| 1. POWER BUTTON | Used to turn on/off the main power supply. |
| 2. REMOTE CONTROL SENSOR | Used to receive the signal from the remote control. |
| 3. STANDBY INDICATOR | Used to visually show power state of the receiver, the green LED will be light if turned on the receiver and the red LED will be light if the receiver entered standby mode. |
| 4. CHANNEL UP/DOWN | Used to change channels without using the remote control. |

2.2 Rear panel

(Fig. 2)

- | | |
|----------------------------|--|
| 1. ANT IN | This socket connects to your external aerial. |
| 2. TO TV | This socket will bypass the RF signal to either your TV or another video system. |
| 3. S/PDIF COAXIAL | This socket connects to a coaxial socket on your surround sound system. |
| 4. VCR SCART | This socket connects to either a DVD or other video system. |
| 5. TV SCART | This socket connects to your TV. |
| 6. USB-Service Port | This socket is explicitly to use for software upgrade. |
| 7. POWER CABLE | This is used to connect to your main power supply. |

2.3 Remote Control

(Fig. 3)


1. **DTV/VCR** To switch between the VCR SCART input and the DTV output mode.
2. **INFO** To display information about the program being viewed or further information about the channel data.
3. **PAUSE** To pause or playback the program being viewed.
4. **EPG** To display information about the program being viewed and what's on next.
5. **EXIT** To return to the previous screen or menu.
6. **OK** To confirm a selection within a menu.
7. **VOL+** To move around the menu screens or changing the volume in non-menu state.
8. **FAVORITE** To access your favourite channels.
9. **GAME** To display built-in mini game: Gomoku.
10. **RECALL** To switch between the last two viewed channels.
11. **SUBTITLE** To switch between different subtitles that are broadcasted
12. **TEXT** To open teletext OSD display if teletext available in the broadcasted stream. 2nd pressing will call up search function.
13. **STANDBY** To switch the receiver to Standby and ON.
14. **MUTE** To turn the sound on or off.
15. **MENU** To open the Main Menu.
16. **CH+** To move around the menu screens or selecting the channels in non-menu state.
17. **VOL-** To move around the menu screens or changing the volume in non-menu state.
18. **CH-** To move around the menu screens or selecting the channels in non-menu state.
19. **NUMBER KEYS** To select channel numbers or input numbers/letters in menus.
20. **AUDIO** To set the sound output, the available settings are STEREO, LEFT, RIGHT, MONO.
21. **TV/RADIO** To switch between TV channels and Radio stations.
22. **COLOR KEYS (RED/GREEN/YELLOW/BLUE):**
To operate different functions in Menu screens or in viewing mode: **RED** -set time for sleep timer, **GREEN** -Call directly TV List from Main Menu, **YELLOW** -Multi Picture (9 PIC.).

NOTE: SUBTITLE/TEXT/LANGUAGE may not be available for all channels

2.4 Installing the Batteries

Remove the battery cover from the remote control and put 2 x AAA size batteries inside the compartment. The diagram inside the battery compartment shows the correct way to install the batteries.

1. Open the cover
2. Install batteries
3. Close the cover

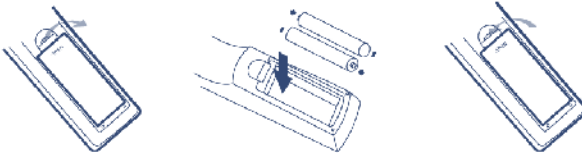

2.5 Using the Remote Control

To use the remote control, point it towards the front of the digital receiver. The remote control has a range of up to 7 metres from the receiver at an angle of up to 60 degrees. (Fig. 4)

The remote control will not operate if its path is blocked.

NOTE: Sunlight or very bright light will decrease the sensitivity of the remote control.

3.0 CONNECTIONS

CAUTION: Make sure to check the voltage specification of the wall outlet is the same rating with the receiver. To prevent the risk of electric shock, do not open the cover or the back of the receiver.

3.1 Connecting to a TV Set

(Fig. 6)

3.2 Connecting to TV and VCR

NOTE: When connecting the receiver to other equipment, e.g., TV, VCR and amplifier, make sure to refer to relevant user manual for instruction. Also, make sure you disconnect all the equipments from the mains supply before the connection. (Fig. 5)

4.0 FIRST TIME INSTALLATION

After all the connections have been made properly, switch on your TV. Make sure the receiver is connected to the mains and press Power to switch the receiver on. If you are using the receiver for the first time, a *Setup - Installation* menu will be displayed to guide you through the initial setup. Use the remote control to finish the setup.

1. At the *Setup - Installation* menu, select in first step your regional settings, accordingly to your region and settings you prefer.
2. Select then following settings *Antenna Power*, *Country Setting*, *OSD Language*, *Audio Language*, *Subtitle Language*, *LCN*, *Time Zone*. If you use an active antenna please select *Antenna Power* to *ON*. For well known countries where the Logical Channel Numbering is provided the LCN mode is automatically set to *ON*, but if your country is providing LCN although, then you can switch *ON*. If you aren't sure on that point please leave it switched *OFF*.
(Scr. 1) Press ▼ to adjust time settings (Scr. 2)

NOTE: Make sure to select the region you are located since the receiver will scan the channels based on the bandwidth of the region you selected. If your region is not on the list, you are recommended to conduct a manual search. Press *Manual Search* (**GREEN**) button on remote control.

3. Then select *Auto Scan* (**RED**) to proceed (Scr. 3)
4. Wait to complete the scanning.
In case you want to stop the scanning, press the **EXIT** key. The channels already found will still be stored. (Scr. 4)
5. When finished, all channels found will be stored automatically. The first found channel will be played. Refer to chapter Country Setting & Program Search. (Scr. 5)

Now you are ready to watch digital terrestrial TV channels and radio broadcasts.

In case you skip the *Setup - Installation* screen, you can still specify your *Country Settings* and *Program Search* via the on-screen setup menu.

The *Country Setting & Program Search* menu can be accessed via *Main Menu > Installation*. Refer to chapter Country Setting & Program Search.

5.0 BASIC OPERATIONS

Once program search is completed, you can start to watch digital terrestrial TV and radio channels. Some typical operations are given in this chapter.

5.1 Switching On and Off

Whenever you are not using the receiver, press the **STANDBY** key on remote control to put it into standby mode.

5.2 Changing Channels

To switch between different channels, you can:

- Press **OK** to display the channel list and ▲/▼ to select a desired channel.
- Press the ▲/▼ key or buttons on the receiver to go to the previous/next channel.
- Use the numeric keys to select a channel number.
- Use the **RECALL** key to return to the previous viewed channel.

Whenever you change a channel, a banner appears at the bottom of the screen displaying the basic information on the current channel. (Scr. 6)

5.3 Adjusting the Volume

Press the ◀▶ key to adjust the volume. (Scr. 7)

5.4 Watching Favourite List

You can press **FAVORITE** to watch your preset favourite channels. To create your favourite list, go to *Main Menu > TV List*. Refer to chapter Creating Favourite Channel Group.

5.5 Displaying information

To show the Info Banner press the **INFO** key.

To display the detailed info of current program, press the **INFO** key once again. (Scr. 8)

To display the detailed information of the current channel, press the **INFO** once again. (Scr. 9)

5.6 Choosing Subtitle

Press the **SUBTITLE** key to select or close subtitles on the screen. The available subtitles depend on the broadcaster. (Scr. 10)

5.7 Freezing

When watching a channel, you can freeze the current screen by pressing the **PAUSE** key. Pressing it again disables the freeze function.

5.8 Displaying EPG

To view the EPG (electronic program guide) provided by the content provider.

1. Press the **EPG** key and then use the **▲/▼** key highlight a desired channel to preview the **EPG**. To be able to scroll in today's complete EPG, press the **▶** key. (Scr. 11)
2. When today's complete EPG is displayed, use the **▲/▼** key to scroll along the EPG. To view the EPG of next/previous day, press the **◀/▶** key. To see the highlighted EPG details, press the **OK** key. (Scr. 12)
3. The detailed **EPG** screen will show as below if pressed the **OK** key. (Scr. 13)
4. To exit the detailed **EPG** screen, press the **EXIT** key.

5.9 Displaying Text

Press the **TEXT** key to start Teletext function. If Teletext is transmitted, press **▼** key and **OK**. 2nd pressing will call up search function. Each time by pressing **OK** button the level of transparency will be changed. Press **EXIT** key to close it. (Scr. 14)

NOTE: When you want to use the search function for Teletext, we suppose to insert the whole text phrase what you are looking for to minimize the time schedule you need to wait. (Scr. 15)

5.10 Selecting Sound Mode

To switch the sound mode between *Left, Right* and *Stereo*, press the **AUDIO** key to open this menu. (Scr. 16)

6.0 USING THE ON-SCREEN SETUP MENU

The receiver features an on-screen menu providing access to a variety of setup and management controls. Use the remote control to navigate through the menu and activate required settings. As this is a dialling menu you can adjust it's order like you prefer. Use the **◀/▶** key to adopt. (Scr. 17, 18)

7.0 SOFTWARE INFO

In *Main menu* state press **INFO** to view the current system information. (Scr. 19)

8.0 MANAGING PROGRAM LIST

Main Menu > TV List / Radio List

All TV channels are listed in the *TV List* and all Radio channels in *Radio List*. There you can make your own favorite groups or lock, edit, move, sort, skip, delete and search for a channel. You can also access *TV List* when you press the **GREEN** button in viewing mode.

8.1 Creating Favourite Channel Groups

Possible via TV or Radio list depending on what channel you will add to FAV list.

This feature allows you to group your favorite channels. To create your favorite groups:

1. Select the *Heart sign* (below channel list) with the channel ◀/▶ keys than choose channel with ▲/▼ keys which you would like to add to one of the Favorite groups.
2. Then press **Numeric key** between 1 and 8 to select a Favorite group which the desired channel should belong to. The symbol for the favorite group will be coloured. Now you have the possibility to *Save (YELLOW)* or you add other channels to Favorite groups.
3. Once your Favorite group is created, you can press the **FAVORITE** key to quickly access your favorite channels. The according Favorite group symbol is from now on as well coloured to see in *INFO*. (Scr. 20)

8.2 Locking a Channel

Possible via TV or Radio list depending on what channel you will lock.

1. Select the *Padlock sign* (below channel list) with the channel ◀/▶ keys than choose channel with ▲/▼ keys which you would like to lock. (Scr. 21)
2. To apply done changes press *Save (YELLOW)*.

8.3 Editing a Channel

Possible via TV or Radio list depending on what channel you will edit.

1. Select the *Edit sign* (below channel list) with the channel ◀/▶ keys than choose channel with ▲/▼ keys which you would like to edit.
2. The field with channel name will be shown and then press **OK** to edit channel name. (Scr. 22)
3. To apply done changes press *Save (YELLOW)*.

8.4 Moving a Channel

Possible via TV or Radio list depending on what channel you will add to FAV list.

1. Select the *Move sign* (below channel list) with the channel ◀/▶ keys than choose channel with ▲/▼ keys which you like to move.
2. Press **OK** and the symbol will be displayed.
3. Use the ▲/▼ keys to move the channel to a desired position. (Scr. 23)
4. To apply done changes press *Save (YELLOW)*.

8.5 Sorting Channels

Possible via TV or Radio list depending on what channel you will add to FAV list.

1. Select the *Sort sign* (below channel list) with the channel ◀/▶ keys than choose channel with ▲/▼ keys which you would like to sort.
2. Then you can sort the channels by the channel name **A-Z** or **Z-A (RED)** or **Free - Pay / Pay - Free (GREEN)**. Select one method as required. (Scr. 24)
3. Press **MENU** or **EXIT** to return the menu. The list is now sorted by the specified order.

NOTE: Please take care once desired order is executed this order stays.

8.6 Skipping a Channel

Possible via TV or Radio list depending on what channel you will skip.

1. Select the *Skip sign* (below channel list) with the channel ◀/▶ keys than choose channel with ▲/▼ keys which you would like to skip in channel zapping mode.

8.7 Deleting a Channel

1. Select the *Delete sign* (below channel list) with the channel ◀/▶ keys than choose channel with ▲/▼ keys which you like to delete.
2. Press **OK** and an X symbol will be displayed. Repeat this step at the channel(s) to be deleted.
3. To apply done changes press *Save (YELLOW)*.

8.8 Searching for a Channel

1. Select the *Search sign* (below channel list) with the channel ◀▶ keys than press *OK* and keypad will appear to insert channel name you're searching for.

8.9 Watching Locked Channels

Once a channel is locked, whenever you want to watch a locked channel, correct PIN must be entered. (Scr. 25)

9.0 INSTALLATION

9.1 Antenna Power

The default setting is *OFF*. Set this option to *ON* if this receiver is connected to an external active antenna that amplifies the received signal. This receiver box can supply 5 V DC at 50 mA maximum.

Caution: If you are using a normal passive antenna, make sure to set this setting to *OFF*. (Scr. 17)

9.2 Country Setting

Country: Select the country you are located. Depending on the country you select, the LCN mode and time zone settings change accordingly. (Scr. 1)

9.3 Language

OSD Language: Select the on-screen-display language as required.

Audio Language: This option allows you to select your audio language. If neither of your selected language is available on the program transmitted, the main language of the program will be used. You can alternatively press the **AUDIO** key (in viewing mode) to use another available language.

Subtitle Language: Allows you to select the subtitle language. If your selected language is not available on the program transmitted, the main language of the program will be used. You can also select *OFF* to close the subtitle on the screen.

9.4 Time Setting

Select an appropriate time zone to display the local time correctly. Both EPG and system schedule need a correct time zone setting.

Auto Time Zone: Allows you to enable/disable Greenwich Mean Time (GMT) usage & the time zone which is adjusted through your adjusted country.

If you prefer to set the time manually, select *OFF* in *Auto Time Zone* item and then manually select the time zone. (Scr. 2)

9.5 Program Search

Auto Scan

1. Enter the *Auto Scan* menu via *Main Menu > Installation*.
2. Select *Auto Scan (RED)* to start auto search. (Scr. 1)
3. Select whether to erase your previous channel list as required or to cancel Auto Scan. (Scr. 26)
4. Wait to complete the scanning.
In case you want to stop the scanning, press the **EXIT** key. The channels already found will still be stored. (Scr. 4)
5. When finished, the first found channel will be played.

Manual Scan

If any channel is missing after auto search, or you want to add newly launched channels, you can use Manual Scan to scan the desired channels. To manually search the target channel, you must know its parameters, e.g., the channel number. After the channel is found, it is appended to the current channel list.

1. Enter the *Manual Scan* menu via *Main Menu > Installation*.
2. Specify the appropriate channel number in the *Channel No* field by pressing ◀▶ keys. Upon your selection, the frequency and bandwidth values are changed accordingly. Use **Numeric buttons** to enter a specific frequency.
3. Select **OK** to start manual search. (Scr. 27)
4. If no signal is found, a message indicating no signal will appear. Otherwise scanned channel will be saved and appended to the current channel list.

10.0 TV SETUP

10.1 TV Format

This option allows you to select the aspect ratio of the video output. If you are using normal 4:3 TV, it is OK to view the regular 4:3 content being broadcasted. But occasionally broadcasters transmit widescreen content; in this situation, you can choose how to display it in a conventional TV set.

4:3 LB (Letterbox) For conventional 4:3 TV. The full width of widescreen content is displayed on a normal TV with black bars above and below the picture. (Scr. 28)

4:3 PS (Pan & Scan) For conventional 4:3 TV. It crops the left and right edges of a widescreen content to fit a normal TV. (Scr. 29)

16:9PB If you are using a wide screen TV, select this option or select *16:9 Auto* to see when content is switched to 4:3.

10.2 TV Mode

This option allows you to select your TV system among *PAL*, *NTSC* and *Auto*. (Scr. 30)

10.3 OSD Transparency & Banner Display Time

This options you can adjust according your wishes.

10.4 Video Output

Set the video mode as *CVBS* or *RGB*.

10.5 Video Enhancement

This options you can adjust according your wishes.

11.0 PASSWORD

This feature allows you to prevent children or unauthorized people from access to your settings or watching channels.

1. Go to *Main Menu > Password*. First you will need to enter PIN as prompted to use the parental control menu. The default PIN is **0000**
2. After correct PIN input, the following options are provided: (Scr. 31)

Menu Lock: Allows you to lock important setting menus.

Channel Lock: Allows you to switch *ON* or *OFF* the channel lock for desired channel (s). When set to *ON*, all the channels with padlock symbol will be locked (provided that you have set in TV-List). (Scr. 21)

Censorship Lock: If on a certain channel is broadcasted a parental rating for example 12 years, then the movie will be locked with Password.

Change Password: Allows you to change the PIN. A PIN can be entered in 4 digits. To change the PIN, enter the old, new PIN in the provided fields. After pressing **OK**, a message indicating PIN Code Changed will appear.

NOTE: To activate the channel lock feature, *Channel Lock* must be set to *YES*. If you want to lock particular channels while keeping other channels unlocked, use TV List table to make the settings.

12.0 ADVANCED TIMER

This feature allows the receiver to automatically switch on (from Standby) and tune to a pre-specified channel for a pre-set length of time. You can use this feature to schedule recording if your receiver is connected to a VCR-recorder or as a reminder of a certain programs. Up to 10 tasks can be scheduled.

1. First choose a *Timer* which you want to configure (between 1-10).
2. Press **Edit (RED)** to enter the *Event edit* pane.
3. Enter the following settings as required. Use the ▲/▼ keys to move between setting items, the ◀/▶ key to switch between available selections and **numeric keys** to enter numeric value.

Mode: You can repeat the task by setting the cycle as *Once, Daily, Weekly* or *Monthly*. Or you can select *Stop* to disable the task.

Start and End Time: Enter the start and end time that automatically turns on and off the receiver.

Channel Type: Select TV or radio channel as required.

Channel No: Select the channel to be played at scheduled time.

4. When the setting is done, press **OK** to save the changes. (Scr. 32, 33)

13.0 SET DEFAULT

Go to *Main Menu > Set Default*. First, you will need to enter PIN as prompted to be able to set factory default.

1. To reset defaults, press **OK**. (Scr. 34, 35)
2. All programs you have searched will be erased and all parameters, e.g., the regional settings, languages and favourite lists, will return to the factory default.
3. After restoring defaults, the Setup Installation screen appears.

14.0 SOFTWARE UPDATE

Whenever a software update is available on our Website (www.strong.tv), the receiver can be upgraded through USB. (Scr. 36)

15.0 ACCESSORY

Includes Gomoku, Calendar & Calculator

16.0 TROUBLESHOOTING

If you experience problems with this receiver or its installation, in the first instance please read carefully the relevant sections of this User Manual and this Troubleshooting section.

Problem	Possible cause	What to do
Standby light not lit	Power cord unplugged Mains fuse blown	Check power cord Check fuse
No signal found	Antenna disconnected Antenna is damaged/misaligned Out of digital signal area	Check antenna lead Check antenna Check with dealer
No picture or sound	Viewing incorrect SCART output Tuned to digital teletext channel	Press the DTV/VCR button Retune to another channel
Mosaic blocks in picture or picture freezes	Antenna may not be compatible	Check antenna
Scrambled channel message	Channel is scrambled	Select an alternative channel
Forgotten channel lock code		Re-install channels to cancel channel lock

No response to remote control	Receiver off Handset not aimed correctly Front panel obstructed Remote control batteries are inserted incorrectly Handset batteries exhausted	Plug in and turn on receiver Aim handset at front panel Check for obstructions Check batteries direction Replace remote control batteries
After moving the receiver to another room, there is no digital reception	The antenna feed may come through a distribution system which may reduce the digital signal now received by the receiver	Try a direct feed from the antenna

17.0 SPECIFICATIONS

Demodulation

Demodulator:	COFDM
OFDM Modulation:	2K, 8K FFT, SFN and MFN
Packet Carriers:	2K/8K
Guard Interval:	1/4, 1/8, 1/16, 1/32

Tuner

Frequency Range:	174 ~ 230 MHz (VHF), 470 ~ 862 MHz (UHF)
Input Impedance:	75 Ohms unbalanced
Signal Input Level:	-78 ~ -25 dBm
Bandwidth:	6 / 7 / 8 MHz

Decoder

Video:	MPEG-2 Transport MP@ML
Audio:	MPEG-2 Audio Layer I & II

Display

Decoder Module:	PAL, NTSC
Resolution:	720 x 576 (PAL); 720 x 480 (NTSC)
Aspect Ratio:	4:3 (Letterbox, Pan & Scan), 16:9 PB and Auto

Connectors

ANT IN	IEC 169-2 female connector
TO TV	IEC 165-2 male connector
TV SCART	composite video (CVBS), RGB, audio L/R
VCR SCART	composite video, audio L/R
RCA	S/PDIF coaxial for digital audio output
USB	type A female for software upgrade

General Data

Supply Voltage:	100 - 240 V AC (SMPS), 50/60 Hz
Power Consumption (max):	10 W
Standby Power Consumption:	2 W
Operating Temperature:	0 ~ +45 °C
Storage Temperature:	-25 ~ +60 °C
Operating Humidity Range:	10 ~ 60 %, RH, Non-condensing
Net-weight:	0.78 kg
Size (W x D x H) in mm:	220 x 161 x 45

Subject to alterations. In consequence of continuous research and development technical specifications, design and appearance of products may change. All product names are trademarks or registered trademarks of their respective owners.

© STRONG 2009. All rights reserved. 04/2009

ENVIRONMENTAL ISSUES

STRONG is committed to reducing the impact of its products on the environment. To maximise the benefits of our design enhancements, your co-operation is required.

Electronic product recycling

Do not dispose of this product with your domestic rubbish.

At the end of its useful life, this product contains materials which when processed correctly can be recovered and recycled. By participating in the responsible recycling of this product you will be reducing the requirement for new raw materials and reducing the amount of material that would otherwise end up in landfill.

When you purchase a new, similar product your retailer may offer to take this old one off you. Alternatively, you can take it to your local recycling centre. Your retailer or local municipal authority will advise you of the collection facilities available for waste electronically products in your area. User of this service will be free to you.

Within the scope of the European legislation on Waste Electrical and Electronic Equipment (Directive 2002/96/EC valid as of August 2005) STRONG provides a recycling system free of charge for consumers to returning products after end of life. For more information about STRONG's environmental policy to you:

www.strong.tv - select "About us" and "Environmental Policy" from the submenu.



Packaging

When disposing of this product packaging, please ensure that it is recycled.

Packaging material is to be depolluted in waste separation.



Power Saving

To save power and money, please put the product into standby mode when not in use. We also recommend disconnection from mains supply when not in use for longer periods of time.



Batteries

Do not dispose of the batteries from your handset with your domestic waste.



Where they are available, participate in your local municipal or retailer collection schemes for spent batteries. Batteries discarded in landfill sites or incinerated increases the chances of pollutants being dispersed into the atmosphere.

Alternations reserved 04/2009

