User Manual for Inon Viewfinder for Nauticam Housings

1. <u>Take off the o-ring</u>: From Picture 1., you can see there is an o-ring around the finder of Nauticam housings. It's used to fasten the viewfinder tightly. Please take it off first.



2. **Remove the viewfinder itself**: After taking off the o-ring, you can remove the viewfinder itself easily through pushing a little hard from inner side.



3. <u>Take off the adapter ring</u>: You will see a serrated ring. It's adapter ring to fasten the viewfinder adapter. Please use tools like Anthis Ring Nut Tool or pliers to unfasten it. Probably put a cloth on it to avoid any damage on the housing back cap.



4. <u>Install Inon Viewfinder</u>: After taking off all Nauticam viewfinder and accessories, put Inon Viewfinder into it. Please check if it completely attached on the back cap of housings.



5. Screw the Adapter Ring: From the inner of the cap, you can see threaded around the finder.

Just screw the adapter ring on this position tightly.





• From following picture, you can see the four parts we are removing from Nauticam housings. From left to right, they are o-ring for Nauticam finder, Nauticam finder, finder adapter ring, and finder adapter.



 Notice: We **strongly** suggest you to test it without camera at the first time after installing the Inon viewfinder by yourselves.