



**PROTEX
SAFE CO., LLC**


■ Manufacturing ■ Distribution ■ Wholesale

USER'S MANUAL FOR ELECTRONIC HOTEL SAFE

MODELS:

LC-30D, LC-35D & LC-53D

DIAGRAM 1.0

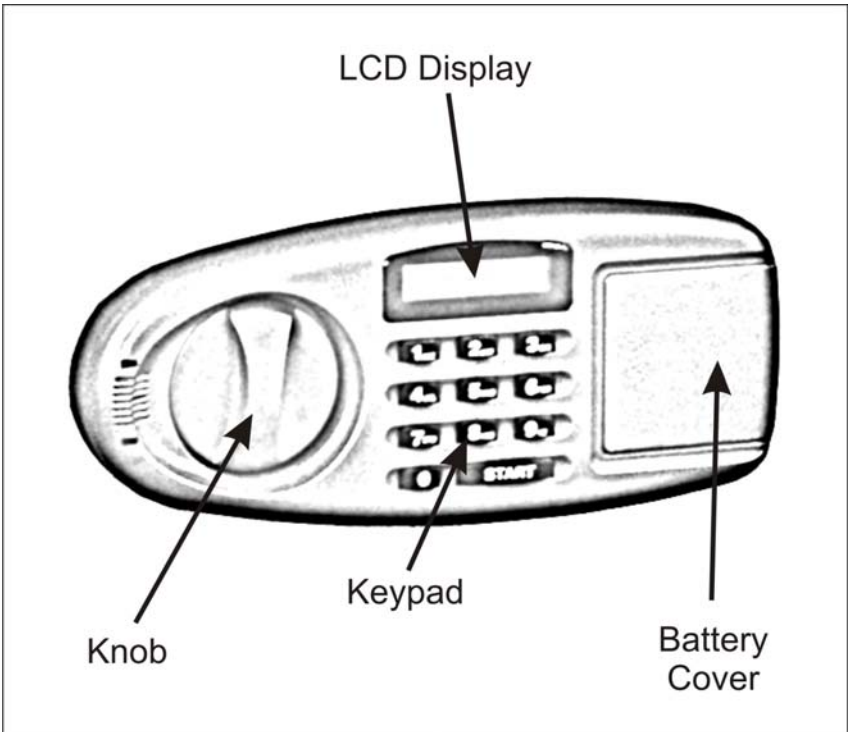

WELCOME:

STEP 1 – OPENING THE SAFE:

1. PRESS THE **START** KEY. THE **LCD DISPLAY** WILL SHOW -----.
2. ENTER CODE. **FACTORY DEFAULT CODE IS: 0-0-0-0**
3. PRESS THE **START** KEY.
4. THE **LCD DISPLAY** WILL SHOW **OPEN**.
5. TURN KNOB TO OPEN THE DOOR. **FOR MODEL No. LC-53D TURN METAL KNOB BELOW THE KEYPAD ONLY!**

NOW YOU ARE READY TO OPERATE YOUR SAFE.

ENROLLING:

STEP 2 – CHANGING CODE

1. OPEN THE SAFE BY FOLLOWING **STEP 1**.
2. PRESS THE **SETUP BUTTON** (LOCATED IN BACK OF DOOR), THE **LCD DISPLAY** WILL SHOW **SET-CODE**.
3. NOW: (WHILE THE **LCD DISPLAY** IS ON)
 - a. ENTER YOUR NEW CODE (3-8 DIGITS).
 - b. PRESS THE **START** KEY.
 - c. THE **LCD DISPLAY** WILL SHOW **IN**.
 - d. THE **LCD DISPLAY** WILL BRIEFLY SHOW YOUR NEW CODE.
 - e. YOUR CODE IS NOW SET TO OPEN THE SAFE.

NOTE: MAKE SURE YOU REMEMBER YOUR NEW CODE.

ENROLLING:

STEP 3 – CHANGING MASTER CODE

1. OPEN THE SAFE BY FOLLOWING **STEP 1**.
2. PRESS THE **SETUP BUTTON** (LOCATED IN BACK OF DOOR), THE **LCD DISPLAY** WILL SHOW **SET-CODE**.
3. PRESS THE **START** KEY, THE **LCD DISPLAY** WILL SHOW **OLD-CODE**.
4. NOW: (WHILE THE **LCD DISPLAY** IS ON)
 - a. ENTER THE CURRENT **MASTER CODE**. **FACTORY DEFAULT CODE IS: 8-8-8-8**
 - b. PRESS THE **START** KEY.
 - c. THE **LCD DISPLAY** WILL SHOW **SET**.
 - d. ENTER YOUR NEW **MASTER CODE** (3-8 DIGITS), THE **LCD DISPLAY** WILL SHOW **RE-INPUT**.
 - e. ENTER YOUR NEW **MASTER CODE** AGAIN.
 - f. THE **LCD DISPLAY** WILL SHOW **IN**.
 - g. THE **LCD DISPLAY** WILL BRIEFLY SHOW YOUR NEW **MASTER CODE**.
 - h. YOUR **MASTER CODE** IS NOW SET TO OPEN THE SAFE.

NOTE: MAKE SURE YOU REMEMBER YOUR NEW **MASTER CODE**.

NOTE: THE SAFE KEEPS THE CODE IN MEMORY UP TO 6 MONTHS WITHOUT POWER.

TIPS:

- USE DIGITS 1 – 0 TO ENTER YOUR CODE.
- IF YOU ENTER A WRONG CODE THE **LCD DISPLAY** WILL SHOW **ERROR**.
- IF YOU ENTER A WRONG CODE FOR FOUR CONSECUTIVE TIMES THE **LCD DISPLAY** WILL SHOW **ERROR** AND THE SAFE WILL BE LOCKED FOR 3 MINUTES. AFTER 3 MINUTES THE SAFE WILL RETURN TO NORMAL OPERATION MODE.
- WHEN THE **LCD DISPLAY** SHOWS **LO-BAT** IT IS HIGHLY RECOMMENDED TO CHANGE THE BATTERIES AS SOON AS POSSIBLE.