



User's Guide

Genius Scanner



All trademarks and brand names mentioned in this publication are property of their respective owners. © 2003 KYE Systems Corp. All rights reserved. No portion of this document may be reproduced without permission.

Table of Contents

INTRODUCTION	1
How to Use This Guide	1
Conventions of this Guide	2
A Note about Icons	2
System Requirements	2
Package Contents	3
The Scanner's Features	4
CHAPTER I. INSTALLING GENIUS SCANNER	5
Software Requirements	5
Hardware Requirements	5
Installing and Setting up the Scanner	6
Step 1. Connecting the Genius Scanner to Your Computer	6
Step 2. Installing the Software	7
Step 3. Testing the Scanner	8
Software Setup Troubleshooting	9
Installing Additional Software	9
Uninstalling the Scanner	9
Uninstall from the "Start Menu" (Uninstall Wizard)	9
Scanner Setup After Windows XP Upgrade	. 10
CHAPTER II. USAGE AND MAINTENANCE	. 11
Operating the Scanner	. 11
Scan and Image Editing	. 12
Status Indicator	. 13
Scanner Connection	. 13
Maintenance	. 14
Calibrating the Scanner	14
Cleaning the Scanner	15
Usage & Maintenance Tips	. 15
Storage of the Scanner	. 16
Using the Base Stand	16
Using the Wall Holder	17
-	
Using the Wall Holder	. 18
Using the Wall Holder CHAPTER III. HOW TO USE QUICK FUNCTION BUTTONS Scan Button Custom Button	. 18 18 20
Using the Wall Holder CHAPTER III. HOW TO USE QUICK FUNCTION BUTTONS Scan Button	. 18 18 20

APPENDIX B: CUSTOMER SERVICE AND WARRANTY	24
Statement of Limited Warranty	24
FCC Radio Frequency Statement	25
CONTACTING GENIUS	27

Introduction

Welcome to the world of Genius scanners, the ultimate in imaging. Your new scanner will improve the professionalism of your day-to-day computing tasks by allowing you to input images and electronic text into your computer system.

Like all of our products, your new scanner is thoroughly tested and backed by our reputation for unsurpassed dependability and customer satisfaction.

The last page of this user's manual provides more information for contacting Genius Service Center. Please feel free to contact us or visit GeniusLife Homepage (<u>http://www.geniusnet.com.tw</u>) for getting better service.

Thank you for choosing Genius Product. We hope you will continue to turn to us for additional quality products as your computing needs and interests grow.

How to Use This Guide

This User's Guide provides instructions and illustrations on how to install and operate your scanner. This guide assumes the user is familiar with the Microsoft Windows XP/Me/2000/98. If this is not the case, we suggest you learn more about Microsoft Windows by referring to your Microsoft Windows manual before using your scanner.

The **Introduction** section of this manual describes the box contents and minimum computer requirements to use this scanner. Before you start installing your Genius scanner, check the box contents to make sure all parts are included. If any items are damaged or missing, please contact the vendor where you purchased your scanner or Genius' customer service directly at one of the locations listed at the back of this manual.

<u>Chapter I</u> describes how to install scanner's software and connect the scanner to your computer.

Note: The scanner connects to your computer through the Universal Serial Bus (USB). If your computer does not support USB technology, you will need to purchase a USB interface card to add USB capabilities to your computer, or buy and install USB connectors if your motherboard has USB capabilities. This guide assumes that your computer is USB-ready and has a free USB port.

Chapter II describes how to use, maintain and clean your scanner.

Chapter III contains some basic descriptions on how to use your scanner. More detailed descriptions can be found by using the Help function in the relevant scanner programs.

Appendix A contains the Specifications of this Genius scanner.

<u>Appendix B</u> contains Genius' limited warranty agreement and FCC statement concerning the product.

Conventions of this Guide

Bold — Important note or first use of an important term in a chapter.

[XXX] — Represents commands or contents on your computer screen.

A Note about Icons

This guide uses the following icons to point out information that deserves special attention.



Danger: A procedure that must be followed carefully to prevent injury, or accidents.



Caution: Information that, if not followed, may result in data loss or damage to the product.




Pay Special Attention: Instructions that are important to remember and may prevent mistakes.

System Requirements¹

- Windows/Intel Compatible Personal Computer
- Pentium II or above
- CD-ROM Drive
- 64 MB RAM (128 MB Recommended)
- 250 MB Free Hard Disk Space
- USB Port
- Microsoft[™] Windows XP/Me/2000/98
 NOTE: Windows NT 4.0 does not support Universal Serial Bus (USB) connectivity.
- Video card that supports 16-bit color or greater

¹ Higher requirements might be needed when you scan or edit a large quantity of image data. The system requirements herein are only a guideline, as in general the better the computer (motherboard, processor, hard disk, RAM, video graphic card), the better the results.

Package Contents²

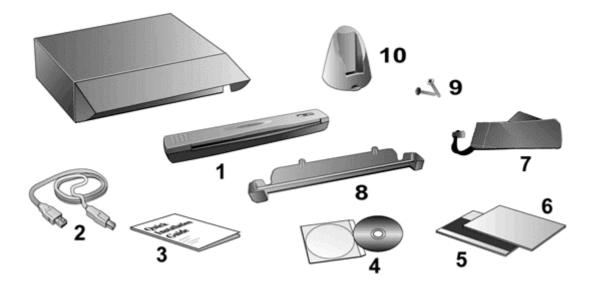

- 1. The Scanner³
- 2. USB Cable
- 3. Quick Installation Guide
- 4. Setup / Application CD-ROM includes the following software applications⁴
 - Scanner Setup Program
 - Smart Touch (Scanner Button Setting Software)
 - TWAIN Program
 - NewSoft Presto! PageManager (Photo Management Software)
 - NewSoft Presto! ImageFolio (Imaging Editing Software)
 - NewSoft Presto! Mr. Photo (Web Photo Software)
 - ABBYY FineReader 5.0 Sprint (Text Recognition Software)
 - IRIS Cardiris 3.0
 - Adobe Acrobat Reader (PDF Product Manuals Reading Program)
 - This User's Guide (Electronic Version)
- 5. Calibration Sheet
- 6. Clean Sheet
- 7. Travel Pouch
- 8. Wall Holder
- 9. Two Screws
- 10. Base Stand


³ The scanner illustration(s) may appear different than from the actual scanner itself.

² Save the box and packing materials in case you need to transport this scanner in the future.

⁴ The bundled software may change at any time without prior notice.

³ Genius Scanner

The Scanner's Features

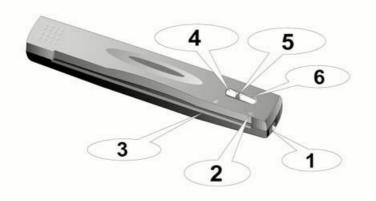

- 1. **USB port**: It connects the scanner to a USB port on your computer by the included USB cable.
- 2. Alignment arrow: Always align the edges of your documents to this arrow sign.
- 3. **Page feed slot**: Feed the document into the scanner from this direction. You can feel the document being grabbed by the scanner.
- 4. Custom button: Press this button to start scanning for OCR, Copy or E-mail.
- 5. LED indicator: It indicates the scanner's current status.
- 6. **Scan button**: Press this button to start scanning and save the images into your computer.

Chapter I. Installing Genius Scanner

Before installing your scanner, please verify that you have all of the proper components. A list of the package contents is provided in this guide.


Software Requirements

Your scanner comes with the software of NewSoft Presto! ImageFolio, ABBYY FineReader 5.0 Sprint, NewSoft Presto! PageManager, NewSoft Mr. Photo, Adobe Acrobat Reader, the scanner's driver, Smart Touch, and TWAIN Program. All of these software applications use approximately 160 megabytes of hard disk space after they are installed into your computer. To ensure ample room for the installation, as well as for scanning and saving images, a minimum of 250 megabytes of hard disk space is recommended.

Hardware Requirements

This scanner connects to your computer through the Universal Serial Bus (USB) which supports hot Plug and Play. To determine whether your computer is USB-capable, you must check the rear of your PC to locate a USB jack that looks the same as the one pictured below. Note that on some computers, the USB port at the rear of the computer may be occupied and additional ports may be found on the monitor or keyboard. If you are having trouble in locating the USB port on your computer, please refer to the hardware manual that came with your computer.


Upon examination, you should find one or two rectangular USB ports, which usually appear as shown below.

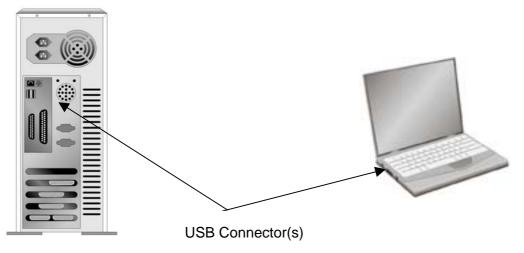

If you don't find such USB ports on your computer, then you need to purchase a certified USB interface card to add USB capabilities to your computer.

Installing and Setting up the Scanner

Step 1. Connecting the Genius Scanner to Your Computer

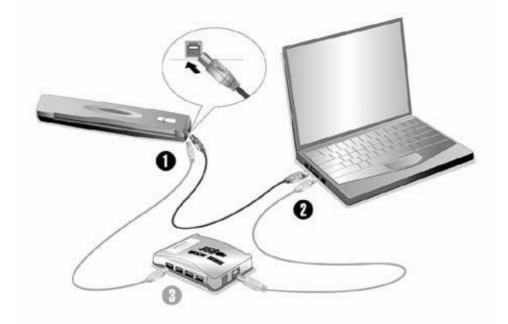

- 1. Plug the square end of the included USB cable to the USB port of the scanner.
- 2. Plug the rectangular end of the USB cable to the USB port on the back of your computer.

Note: If there is another USB device connected to the computer, connect the scanner to an available USB port.

3. If you plan to connect your scanner to a USB hub⁵, make sure that the hub is connected to the USB port in your computer. Next, connect the scanner to the USB hub.

Note: If you do not have a USB port available, you might need to buy a USB port.

⁵ The USB hub is not included with the scanner. *Genius Scanner*

Step 2. Installing the Software


1. If the USB components on your computer are functioning correctly, they will automatically detect the scanner causing the "Add New Hardware Wizard" or "Found New Hardware Wizard" to be launched.

2. For Windows 98 & 2000

- a. Click on the [Next] button when the "Add New Hardware Wizard" window is displayed.
- b. Select "SEARCH FOR THE BEST DRIVER FOR YOUR DEVICE [RECOMMENDED]" and click on the [Next] button.
- c. The next window will ask you where to search to find the drive. Select [CD-ROM drive], and deselect [Floppy disk drives] if it is checked.
- d. Insert the Setup/Application CD-ROM, included with your scanner, into your CD-ROM drive and then click on the [Next] button.
- e. Click on the [Next] button in the window that appears. Afterwards, for Windows 98 users, please skip to Step 4.
- f. Windows 2000 users During the process of the installation, a message "Digital Signature required" might be prompted. Please ignore it, and click on [Yes] to continue the installation without any misgiving at your scanner functioning. Afterwards, please skip to Step 4.

3. For Windows XP & Me

- a. Insert the Setup/Application CD-ROM, included with your scanner, into your CD-ROM drive.
- b. Select "INSTALL THE SOFTWARE AUTOMATICALLY [RECOMMENDED]" and click on the [Next] button.
- c. Click on the [Next] button in the window that appears.
- 4. When the system completes the installation, click on the [Finish] button.
- 5. Follow the on-screen instructions to install all software that your new USB scanner requires.
- 6. After the software is installed, close all open applications and click on the [Finish] button to restart your computer.
- 7. After the computer is restarted, you will be prompted to perform the scanner calibration.
- 8. Insert the special calibration sheet, included with the scanner, face down into the page feed of the scanner.

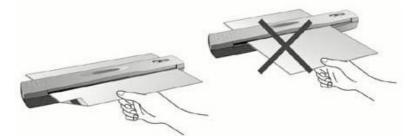

9. Follow the on-screen instructions to complete the scanner calibration.


Attention If the scanner installation is not started and displayed automatically on the screen, click START, select RUN and type in "d:install" (where d: is the drive letter assigned to the CD-ROM drive of your computer)

Step 3. Testing the Scanner

The following test procedure checks to see if the scanner is properly functioning with your computer and the scanning software. Before testing your scanner, double check to make sure that all connections are securely fastened.

To properly test your scanner, please perform the following steps:

1. Insert the document face down into the scanner. Align the document to the arrow sign on the right of the scanner.

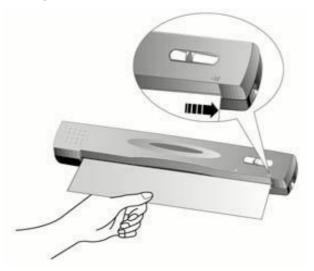

- 2. Press the SCAN button on the scanner. The scanning starts immediately.
- 3. When the scan completes, Presto! PageManager program opens.

If an image appears on your screen, your scanner is working properly.

Software Setup Troubleshooting

Carefully review the steps outlined in this guide and the Quick Installation Guide that accompanied your scanner.

If you are still having problems, please check that:

- You have 250MB of free space on your hard disk drive.
- The scanner is plugged in and has power.
- You are using the USB cable supplied with the scanner.
- The square end of the USB cable is plugged into the rear of the scanner.
- The rectangular end of the USB cable is plugged into the back of your computer.

If you deviated from the installation procedures defined in this manual, please unplug the USB cable from the scanner and reinstall the software from the CD-ROM. To reinstall your scanner's software, click START, RUN, then type D:\Install (where D represents the letter of your CD-ROM drive). Carefully follow all the installation instructions presented in the Setup Wizard. Reboot your computer when prompted, and plug the USB cable back into the scanner while your computer is still turned on.

If you still need support, you can contact Genius at any office listed on the last page of this guide during normal business hours in that area.

Installing Additional Software

Your scanner is TWAIN compliant and functions with virtually all available TWAIN compatible program. If you purchase additional program to be used with your scanner, please make sure that it conforms to the TWAIN standard.

Uninstalling the Scanner

Windows XP/Me/2000/98 provides an Uninstall Wizard for uninstalling your scanner software driver and application programs:

Uninstall from the "Start Menu" (Uninstall Wizard)

- 1. From the Windows Start menu, select Programs, and then the model name of the scanner you have installed.
- 2. From the drop-down menu, select Uninstall.

- 3. A window will pop up, asking you to confirm the deletion of the selected application and all of its components. Click OK and the UninstallShield program will run automatically and delete the scanner software driver.
- 4. Once completed, restart Windows.

Scanner Setup After Windows XP Upgrade

If you plan to upgrade your operating system from Windows 98 or Me to Windows XP after having installed the scanner software, please follow the instructions below:

- 1. Unplug the scanner's USB cable from the rear of the computer.
- From the Windows START menu, click on "Programs" and then "Genius Scanner". In the pop-up menu that opens, click on "Uninstall Genius Scanner". Follow the on-screen instructions to remove all the scanner software.
- 3. After uninstallation completes, close all open applications and click the "Finish" button to restart your computer.
- 4. Start installing your Windows XP upgrade software by following Microsoft's related procedures.
- 5. When the Windows XP upgrade is done, re-install the scanner's hardware and software. Refer to the scanner setup quick guide for details.

Chapter II. Usage and Maintenance

Operating the Scanner

Your scanner accepts documents as small as business cards and as large as letter-sized documents. However, some software programs have limitations as to the information they can handle. The capacity of the computer's memory and free space on your hard drive can also limit the physical size of the document that you scan.

There are two different ways to operate the scanner:

- 1. From within an image-editing program that can acquire images from the scanner.
- 2. By pressing either of the two action buttons on the scanner. You may configure the button settings individually to your personal needs within the Smart Touch program that is automatically installed as your scanner software.

Your scanner needs to be driven by some type of software program. Since all documents or images (whether text or pictures) that are acquired from the scanner are treated by your computer as images, most scanning will probably be done from an image-editing program where you can view, edit, save and output the scanned images. An image-editing program has been bundled with your scanner on the included Setup/Application CD-ROM. It will allow you to alter and correct any scanned images by using a variety of filters, tools and effects.

What about scanning text documents and editing them in a word processor? This is the role of Optical Character Recognition (OCR) software. OCR software converts the image files that are created from scanning text documents into text files that can be viewed, edited and saved by word processors. An OCR program has also been bundled on the included Setup/Application CD-ROM, and if you wish to use the scanner in this way you should install the OCR software that is included.

Genius Smart Touch program is a program that allows you to conveniently scan images and text without the need to work directly within any image-editing application (i.e. Presto! ImageFolio). Genius Smart Touch also includes features to allow you to use your scanner as a copy machine⁶ and to scan documents or photos for e-mail.

⁶ A printer is required for the copy function.

Scan and Image Editing

The following describes how you may use our bundled image-editing application **NewSoft Presto! ImageFolio** to perform your first scan. When you get familiar with the scanning, you may alternatively use other TWAIN compatible scanning program or image-editing application to do your scanning projects.

1. Insert the document face down into the scanner. Align the document to the arrow sign on the right of the scanner.



2. Open Presto! ImageFolio, and click on FILE, ACQUIRE, and then choose ACQUIRE to open the Genius Scanner TWAIN window.



Before you acquire the TWAIN interface, you need to set this scanner as your default scanning source, if you have more than one scanner or other imaging devices installed on your computer.



- 3. Click on an Image Type Tab that best suits your scanning needs. Make adjustments on the settings available on this tab window, if necessary.
- 4. Click the Scan button with to start scanning the image.
- 5. If you desire to scan another image, repeat Step 1 and 3-4 until you have scanned all.
- 6. When you complete the scanning task, click the EXIT button to close the Genius Scanner TWAIN window, and you may review the scanned image in Presto! ImageFoilo software.

Status Indicator

The green LED indicator (located between the Scan and Custom buttons) indicates the status of the scanner, as described below:

Light	Status
On	The scanner is connected with the computer, ready to scan images.
Flashing	The scanner is busy scanning.
Off	The scanner is off, either because of disconnection with the
	computer, or because the computer being turned off.

Scanner Connection

The first step to take when troubleshooting connection problems with your scanner is to check all physical connections. The Smart Touch icon \clubsuit , located on the Windows system tray, indicates if the scanner software is properly launched and the scanner and computer are communicating with each other.

Appearance	Status
\$	The Smart Touch program has been successfully launched and
-	the scanner is connected with the computer, ready to scan
	images.
×	The scanner is not connected with the computer.
No Display	You have chosen to terminate the Smart Touch program, no matter the scanner is connected or disconnected with the computer.

If the Windows system starts and detects the scanner unconnected, the following message will appear to remind you:



If you prefer not to see this reminder message again, you may:

- Check the box of [Do not show this message again] within this message window, and then click [OK] button.
- Click on the Smart Touch icon
 Iocated on the Windows system tray. Uncheck [Enable Warning] from the menu that pops up. Click the [No] button in the message box that appears.



Attention

If you would like to be prompted with this message again, you may click on the Smart Touch icon and check [Enable Warning] from the menu that pops up. Click the [Yes] button in the message box that appears.


Maintenance

Calibrating the Scanner

Calibrate the scanner if colors appear in areas that should be white, or colors of the scanned image and the original vary a lot. This allows you to adjust and compensate for variations which can occur in the optical component over time by its nature.

The following describes how to calibrate the scanner:

1. Insert the special calibration sheet face down into the page feed slot of the scanner.

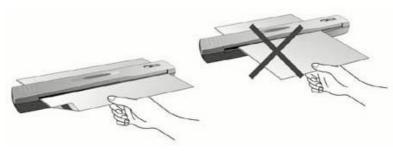

Correct Paper Direction

Incorrect Paper Direction



Attention

Please insert the special calibration sheet included with the scanner. Alternatively you may also use any plain white sheet of paper sized in A4 (210 by 297 mm) instead; however, the calibration effect may be less good than the special calibration sheet.

- Click on the Smart Touch icon located on the Windows system tray.
- 3. Click [Calibrate] from the menu that pops up.
- 4. The scanner pulls the calibration sheet through the scanner, which completes this scanner calibration.

Cleaning the Scanner

When you use this scanner for the very first time after installation, you are suggested to clean the scanner before use.


If unusual dots or lines are found in your scanned image, it is very likely that dust particles or other foreign objects have been brought inside the scanner. You may clean the scanner to rectify the problem.

The following describes how to clean the scanner:

1. Insert the special cleaning paper into the page feed slot of the scanner.



 Do use the cleaning paper included in our package box. Remember to replace the cleaning paper in a safe and clean place when you finish using it.

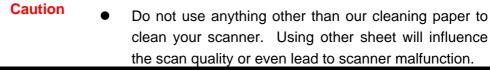

- Click on the Smart Touch icon located on the Windows system tray.
- 3. Click [Clean] from the menu that pops up.
- 4. The scanner pulls the cleaning paper through the scanner, which completes this scanner cleaning.

Usage & Maintenance Tips

To keep your scanner working smoothly, take a moment to review the following maintenance tips.

- Avoid using the scanner in a dusty environment. When it is not in use, keep the scanner covered. Dust particles and other foreign objects may damage the unit. If you will not use the scanner for some time, please place it in the travel pouch.
- Do use the USB cable provided with the scanner. Use of other cable may lead to malfunction.
- Do not attempt to disassemble the scanner. There is danger of an electrical shock and opening your scanner will void your warranty.
- Do not subject the scanner to excessive vibration. It may damage the internal components.
- Do not insert any document into the scanner with small objects such as paper clips, pins, staples or any other fasteners attached.
- Do not insert damp, curled or wrinkled documents into the scanner for scanning. These documents can cause paper jams and possibly damage the unit.
- Your scanner operates best in temperatures between 10° C to 40° C (50° F to 104° F).

Storage of the Scanner

If you will not use the scanner for a while, you may alternatively use the base stand or the wall holder found in the scanner package to store it upright. You may thus save your desk space, and the scanner can be within each reach when you need it any time.

Using the Base Stand

1. Open the bottom plate of the base stand. Place the USB cable inside the base stand and then close the bottom plate.



- 2. Place the base stand on the desk.
- 3. Place the scanner onto the base stand, with the USB port facing up.






Do place the base stand and the scanner on STABLE surfaces to prevent them from falling.


Using the Wall Holder

- 1. Fix the two screws carefully on the wall with a screwdriver. (Spacing between the holes = 120 mm)
- 2. Place the wall holder onto the two screws, and then place the scanner onto the wall holder.

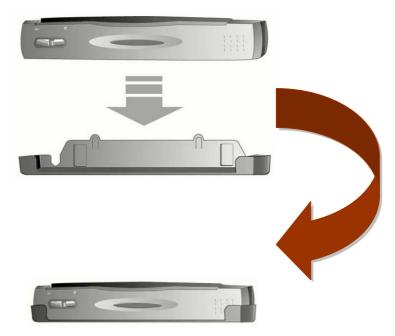

Chapter III. How to Use Quick Function Buttons

Your scanner is equipped with two function buttons designed to make your scanning experience more convenient and efficient. With simply one touch of the button, you can scan to file, copy, OCR or e-mail.

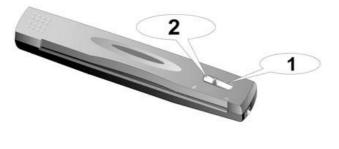

- 1. Scan Button
- 2. Custom Button

Attention

To use the buttons, ensure you have installed the relevant software (e.g., the printer driver is required for using the copy function) beforehand.

Scan Button

The SCAN button enables you to conveniently scan documents or images, save them automatically to the album, and send them to the NewSoft Presto! PageManager program to perform other image editing tasks.

Continuous scans by the same settings:

If you have more than one similar document or image to scan, follow the steps below:

- Click on the Smart Touch icon Flocated on the Windows system tray. From the menu that pops up, point to [Scan Button Link] and then click [Continuous Scan].
- 2. Insert the document or image face down into the scanner. Align the paper to the arrow sign on the right of the scanner.




- 3. Press the SCAN button on the scanner. The scanning starts immediately.
- 4. Follow the on-screen instructions to insert another document or image until you have scanned all.
- 5. When the scan completes, the scanned images appear in the Presto! PageManager program that opens, ready for you to perform other image editing tasks.

Single scan by different settings:

If you would like to scan documents or images with individual settings, follow the steps below:

Click on the Smart Touch icon Iocated on the Windows system tray. From the menu that pops up, point to [Scan Button Link] and then click [Single Scan].

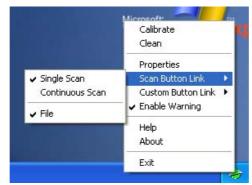

2. To change the scanning settings, click on the Smart Touch icon again, and then click [Properties] from the menu that pops up. Make desired adjustments within the Smart Touch window that opens and then click [Close] button.



Attention

Alternatively you may leave the Smart Touch window open on your Windows desktop while pressing the scanner buttons. Any setting change done within this Smart Touch window is saved automatically. 3. Insert the document or image face down into the scanner. Align the paper to the arrow sign on the right of the scanner.



- 4. Press the SCAN button on the scanner. The scanning starts immediately.
- 5. When the scan completes, the scanned image appears in the Presto! PageManager program that opens, ready for you to perform other image editing tasks.
- 6. If you have more documents or images to scan, repeat Step 2-5 until you have scanned all.

Custom Button

The Custom button enables you to conveniently scan documents or images and send them to the printer, convert images of text documents into text files that can be edited within a word processor, or send them to a new e-mail message as attachment files.

Continuous scans by the same settings:

If you have more than one similar document or image to scan, follow the steps below:

 Click on the Smart Touch icon Flocated on the Windows system tray. From the menu that pops up, point to [Custom Button Link] and then click [Continuous Scan].



 To change the linked scanning task, click on the Smart Touch icon again, point to [Custom Button Link] from the menu that pops up, and then click on [OCR], [Copy] or [E-mail] depending on your needs. 3. Insert the document or image face down into the scanner. Align the paper to the arrow sign on the right of the scanner.



- 4. Press the Custom button on the scanner. The scanning starts immediately.
- 5. Follow the on-screen instructions to insert another document or image until you have scanned all.
- 6. When the scan completes, the scanned images will be sent to the assigned destination.

Single scan by different settings:

If you would like to scan documents or images with individual settings, follow the steps below:

- Click on the Smart Touch icon Flocated on the Windows system tray. From the menu that pops up, point to [Custom Button Link] and then click [Single Scan].
- To change the linked scanning task, click on the Smart Touch icon again, point to [Custom Button Link] from the menu that pops up, and then click on [OCR], [Copy] or [E-mail] depending on your needs.
- To change the scanning settings, right-click on the Smart Touch icon
 again, and then click [Properties] from the menu that pops up.
 Make desired adjustments within the Smart Touch window that opens and then click [Close] button.



Alternatively you may leave the Smart Touch window open on your Windows desktop while pressing the scanner buttons. Any setting change done within this Smart Touch window is saved automatically.

4. Insert the document or image face down into the scanner. Align the paper to the arrow sign on the right of the scanner.



- 5. Press the Custom button on the scanner. The scanning starts immediately.
- 6. When the scan completes, the scanned image is sent to the assigned destination.
- 7. If you have more documents or images to scan, repeat Step 2-5 until you have scanned all.

Changing Button Settings

Default button settings are optimized for most frequently scanning jobs, such as size, mode, resolution, ... You may, however, change the settings to tailor your every scan by accessing the "Smart Touch Setting" program. Please refer to the Smart Touch on-line Help (accessible by clicking on the Smart Touch icon 🗢, located near the clock icon on the Windows system tray, and choosing Help) for more information about these functions.

Appendix A: Specifications

Genius ColorPage-SF600		
Physical dimensions	274mm x 47mm x 33.8 mm (10.79" x 1.85" x 1.33")	
Weight	0.33Kgs (0.73 Lbs)	
Operating Temperature	10° C to 40° C (50° F to 104° F)	
Soon Aroo	Maximum 216 mm x 297 mm (8.5" x 11.69")	
Scan Area	Minimum 47mm x 30 mm	
Scan Method	Single -Pass	
	Color: Input 48-it; Output 24/48-bit	
Scan Modes	Grayscale: Input 16-bit; Output 8/16-bit	
	Black & White: 1-bit	
Resolution	Optical 600 dpi (1200dpi software interpolated)	
Scanning	Reflective color or black-and-white originals	
Materials	Paper Thickness: from 0.08 mm to 0.4 mm	
Protocols	TWAIN Compliant	
Connection	USB Port	
Light Source	Three-color RGB LEDs	
Power		
Requirement	Powered through USB port. No AC power adaptor is required.	
Power	Operation: 2.5 watts maximum	
Consumption	Idle: 1.2 watts	
EMI	FCC Class B	

Appendix B: Customer Service and Warranty

If you encounter problems with your scanner, please review the installation instructions and troubleshooting suggestions contained in this guide.

For further assistance call our customer support phone number listed on the last page of this guide. To avoid any delay, please have the following information available before calling:

- Scanner name and model number
- Scanner serial number (located at rear of scanner near port connectors)
- A detailed description of the problem
- Your computer manufacturer and its model number
- The speed of your CPU (Pentium 133, etc.)
- Your current operating system and BIOS (optional)
- Name of program package(s), version or release number and manufacturer of the program
- Other USB devices installed

We are continuously enhancing the performance of our product drivers. To check for the updated device driver you may visit our Web Site. (Please refer to the section of "Contacting Genius" on the last page of this manual.)

Statement of Limited Warranty

This Statement of Limited Warranty applies only to the options you originally purchase for your use, and not for resale, from an authorized reseller.

If you transfer this product to another user, warranty service is available to that user for the remainder of the warranty period. You should give your proof of purchase to that user.

We warrant that this machine will be in good working order and will conform to its functional descriptions in the documentation provided. Upon provision of proof of purchase, replacement parts assume the remaining warranty of the parts they replace.

Before presenting this product for warranty service, you must remove all programs, data and removable storage media. Products returned without program will be replaced without program.

This Limited Warranty service does not provide for carry-in exchange when the problem results from accident, disaster, vandalism, misuse, abuse, unsuitable environment, program modification, Electro Static Discharge (ESD) damage, another machine or non-vendor modification for this product.

If this product is an optional feature, this Limited Warranty applies only when the feature is used in a machine for which it was designed.

If you have any questions about your Limited Warranty, contact Genius.

THIS LIMITED WARRANTY REPLACES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABLITY AND FITNESS FOR A PARTICULAR PURPOSE. HOWEVER, SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE WARRANTY PERIOD. NO OTHER WARRANTIES APPLY AFTER THAT PERIOD.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply.

Under no circumstances are we liable for any of the following:

- 1. Third party claims against you for losses or damages.
- 2. Loss of, or damage to, your records or data; or
- 3. Economic consequential damages (including lost profits or savings) or incidental damages, even if we are informed of their possibility.

Some jurisdictions do not allow the exclusion or limitations of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from jurisdiction to jurisdiction.

FCC Radio Frequency Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by one or more of the following measures:

 $\sqrt{\text{Reorient}}$ or relocate the receiving antenna.

 $\sqrt{1}$ Increase the separation between the equipment and receiver.

- $\sqrt{}$ Connect the equipment to an outlet on a circuit different from that which the receiver is connected.
- $\sqrt{}$ Shielded interconnect cables and shielded power cord which are supplied with this equipment must be employed with this equipment to ensure compliance with the pertinent RF emission limits governing this device.
- $\sqrt{\rm Consult}$ the dealer or an experienced radio/TV technician for help if the conditions persist.
- $\sqrt{}$ Changes or modifications not expressly approved by the manufacturer or authorized service center could void the users authority to operate this equipment.

Contacting Genius

USA & Canada

KYE International Corp.

Latin America Suite 110, 8400 NW 25th St., Miami, FLORIDA 33162, U.S.A. Tel : 305-468-9250 Fax : 305-468-9251 Web Site: <u>http://www.genius-kye.com</u>

Europe

KYE Systems Europe GmbH

Karl Benz Str. 9 D-40764 Langenfeld, Germany Tel: (49) 21 73 9743-44 Fax: (49) 21 73-9743-17 Web Site: genius@kye.me.uunet.de

Europe

KYE Systems UK Ltd. Unit 4, 131 Beddington Lane, Croydon, Surrey. CR0 4TD, UK Tel : (44) 208 664 2727 (sales) (44) 208 664 2739 (Tech. Support) Fax : (44) 208 664 2721(sales) (44) 208 664 2740(Tech. Support) Web Site: http://www.kye.co.uk

Asia Pacific

KYE Systems H.K. Corp. Ltd.

Unit 01, 17th Floor, Aitken Vanson Centre, No.61 Hoi Yuen Road, Kwun Tong, Kowloon, Hong Kong Tel : (852)2342 3813 Fax : (852)2341 9517 Web Site: http://www.geniusnet.com.hk

Asia Pacific

KYE Systems Corp.

No.492, Sec. 5, Chung Hsin Rd., San Chung, Taipei Hsien, 241, Taiwan, R.O.C. Tel: (886) 2 2995-6645

Fax : (886) 2 2995-6649

Web site: <u>http://www.geniusnet.com.tw</u>

Asia Pacific

KYE Systems (M) SDN BHD

NO. 2, Jalan BK 1/12, Kinrara Industrial Park Bandar Kinrara, 6 1/2 Miles, Jalan Puchong, 58200 Kuala Lumpur, Malaysia Tel: (603) 575 1355 Fax: (603) 575 6362 / 6962 Web site: sales_kye@kye-systems.com.my