

User Manual T50 Second Edition

OEM user manual revision 0.1

Notes:

- 1. The new lithium battery can not reach the optimum performance until two or three cycles of full charge and discharge.**
- 2. 8-10 hours are required to new lithium battery in the first three times of charge. Only 4 hours are needed to fully charge the battery in the fourth time. In this way, the lithium battery can reach the optimum performance.**
3. The player is the high-precise electronic product, so please do not disassemble by yourself.
4. Please avoid violently knocking and hitting the player.
5. Please do not use the player in the environments of high temperature, low temperature, moisture, dust, strong magnet, or the places which long-term expose under sunshine.
6. Please use the wrung-out cotton cloth to slightly wipe the cover of the player. Do not use any chemical solution.
7. The player shouldn't be dropped and splashed by water, and be placed near the containers with full liquid like cups.
8. In order to avoid traumatizing hearing, please choose the proper volume while you are listening to the player.
9. Please do not modify any part of the player.
10. Please only use the battery, charger and accessories supplied by the manufacturer. The usage of any other types of products will violate the warranty terms and may be dangerous.
11. Please deal with the abandoned player and accessories according to your local environment protection policies.
12. In case there are some wrong with the player, please contact your local distributor or the service centre of our company.
- 13. The products are subject to change without prior notice. We apologize for any inconvenience caused.**

Contents :

- I、 Specifications
- II、 Appearance and Keys
- III、 Operate key-press introduce
- IV、 Operations

Planet Metropolis: <http://www.PlanetMetropolis.com>

(1) Open up plane

(2) Transmitted information

(3) Function use

1. Playing Music
2. Playing Video
3. Picture View
4. E-book
5. FM Radio
6. Record
7. Explorer
8. Setting
9. Program

(4) Charge step

1. Use USB line
2. Use charger charge

(5) Abnormity afresh open

V、FAQ

 
I、Specifications :

- Type : T50-SE
- Memory : Build-in 2G/4G/8G/16G high speed flash memory (optional)
- USB Port : USB 2.0 High Speed
- Record Format : WAV
- Bit Rate : 8Kbps ~ 384 Kbps (MP3) , 5Kbps ~ 192 Kbps (WMA)
- Record Time : About 46.3 hours (1G)
- Screen : 2.8 inches (Type) , 432×240 (Pixel) +
- Power Supply : High-energy polymer lithium battery

 
Planet Metropolis: <http://www.PlanetMetropolis.com>

- FM Frequency : 76MHz ~ 108MHz
- Player Dimension : 94mm(L)×48mm (W) ×8.9mm (H)

II、 Appearance and Keys :

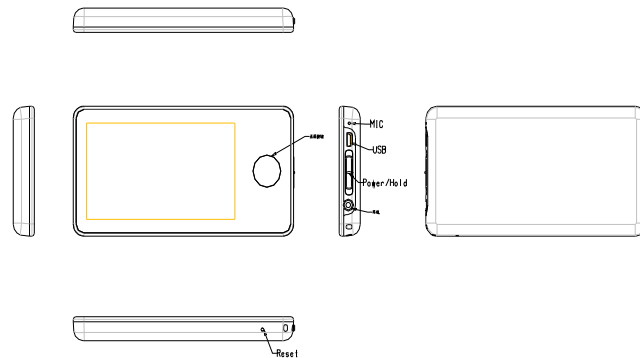

III、 Applications Intro :

Press the  button at any time to see the T50SE applications. Tap any application button to get started:



Listen to songs and audio books

Music



Watch movies, and TV shows.

Videos



View photos transferred from your computer. View them in portrait or landscape mode. Zoom in on any photo for a closer look. Watch a slideshow. Use photos as wallpaper

Phone



Refer to E-book from your computer, you can set font size and color, save mark\load mark\ delete mark

E-book



Auto-search FM., FM record.

FM



Embodiment record files, set record quality and record volume.

Record



Save all songs, videos, photos and so on.

Explorer



Set your wallpaper and screen brightness, and settings for music, video, photos, and more.

Settings



Include Calendar, Games/Simulator and so on.

Program

IV、 Operations

(1) Open up plane

Long press the "power start up" key can open the machine.

(2) Transmitted information

Through the USB cable, connect, copy the computer's hard disk needs transmission of music / video / files, switch to capacity disc player, stick the data transfer .

(3) Using the Touchscreen

The controls on the touchscreen change dynamically depending on the task you are performing

- ① Tap any application to open it.
- ② Press the "○" button below the display at any time to return to the main menu and see all the applications. Dragging your finger to scroll doesn't choose or activate anything on the screen.
- ③ Flick to scroll quickly .You can wait for scrolling to stop or touch anywhere on the screen to stop it immediately. Tapping or touching to stop scrolling doesn't choose or activate anything on the screen.
- ④ Tap an item in the list to choose it .Depending on the list ,tapping an item can do different things –for example, it may open a new list, play a song, or show someone's contact information.
- ⑤ The back button in the upper-left corner shows the name of the previous list. Tap it to go

Planet Metropolis: <http://www.PlanetMetropolis.com>

back.

© When viewing photos ,you can zoom in and out .

(4) Function use :

 
1. Playing Music




 




 

In main menu ,tap music to listen to songs,after you can select “Current play”,”All music”,”Artist”,”Album”,”Genre”,”My favorite”,”Record”,”Dirlist”.

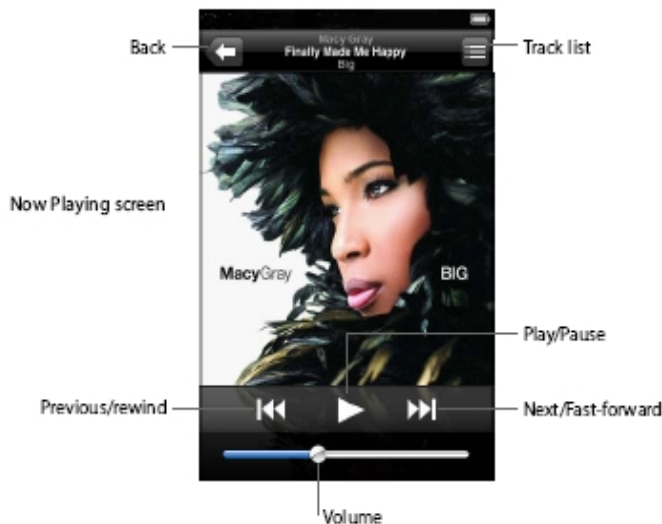Operation :

1) Tap the song;

 
2) When you play a song,the Now Playing screen appears:




Operation	
Adjust the volume	Drag the volume slider
Pause a song	Tap 
Resume playback	Tap 
Restart the previous song	Tap 
Skip to the next song	Tap 
Rewind or fast-forward	Touch and hold  or 
Return to the browse lists	Tap 
See the tracks, you can select frequency ,lyric and special	Tap  ,show songs lyric information; Tap  ,show play frequency; Tap  ,show special information


3) From the Now playing screen tap the album cover,”Repeat” , ” Random”,and shuffle controls appear,you can see time elapsed,time remaining and the song number.;

Planet Metropolis: <http://www.PlanetMetropolis.com>

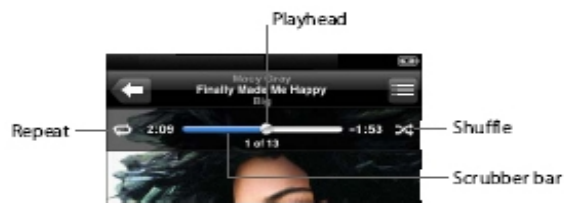

4) When playing music,tap""enter "music setting":

①Repeat mode


Tap "Repeat mode",select Once, Repeat 1, All once, All repeat, and Intro 5 types, tap""that sub-menu return main menu.

②EQ setting


Tap "Repeat mode",select Normal/3D/Rock/Pop/Classic/bass/Jazz/User EQ,


Hardware 3D setting/Custom effect/RBS effect setting and MS PlayFX (3D , Pure Bass

AutoVolume) ,the above eight options will bring you different music effects; also, you

can edit your favorite EQ effect by [User EQ set] option. tap"" that submenu return main menu.

③Play mode

Tap "Play mode" Select" In order" or "Shuttle", tap"" that submenu return main menu.

6) In "music"playlist,tap top right corner"", you can delect/e music files .

2. Video

In main menu ,tap video to view videos.

Operation :

1) Tap videos;

2) When you play the video,the Now Playing screen appears

 
Planet Metropolis: <http://www.PlanetMetropolis.com>



Operation	
Adjust the volume	Drag the volume slider
Pause a video	Tap
Resume playback	Tap
Skip to the next video	Tap
Rewind or fast-forward	Touch and hold or
Return to the browse lists	Tap
Stop watching a video before it finishes playing	Tap or press the "o" button.
Scale a video to fill the screen or fit to the screen	Tap to make the video fill the screen. Tap to make it fit the screen.

3) TV-OUT function: (firmware 1.

- At first ,Connected TV video interface and Player USB by TV-OUT Line; Connected audio interface and Player headphones interface by audio Line .
- Touch "video" and select players into the files, Slide the power-switch to the left briefly to switch the video mode to TV-OUT ,the screen appears "



- "": Volume +, "": Volume -, "": pause / play, "": Forward/ long press to come back, "": Next / long press to speed
- When the television playing Videos, Slide the power-switch to the left briefly to switch the video mode back to the internal LCD screen.

4) In the videos list ,tap top right corner button , then tap delete,you can delete videos files to save space.



 

(Current firmware V1.02 only supports PAL video output format (Asian and Europe), NTSC to be supported in next firmware rev)

3. Photo





In main menu ,tap photo to view photos, use a photo as wallpaper ,and play slideshows.

Operation :

Tap photos:

Operation	
Return to the browse lists	Tap 
Stop watching a photo before it finishes playing	Tap  , or press the “○” button.
Zoom in or out	Tap  to zoom in on, Tap  to zoom in out
Rotate photo	Tap  withershins rotate photo, Tap  deasil rotate photo.
Previous photo or next photo	Touch and hold  or  .

Operation


- 1) Flick left or right, or tap the screen to show the controls, then tap  or .
- 2) When playing music, tap  enter "Photo setting":
 - ① Listen to music while reading browse picture.
 - ② Zoom and Circumgyrate
Smooth screen to achieve this function
 - ③ Slide auto play
 - ④ Set to the background picture
- 3) In the photos list, tap top right corner  button, then tap delete, you can delete videos files to save space.

4.E-BOOK



In main menu, tap ebook to view list,

Operation :

Tap files list:

- 1) Tap the files what you want to see.
- 2) Fluctuate the screen, you can turn over the article content.
- 3) When playing music, tap  enter "ebook setting"


1 . Skip read

To select skip setting, adjust number and tap  to enter setting tap  submenu return main menu.

2 . Save Bookmark, Distill Bookmark, Del Bookmark

To select this settings, tap  submenu return main menu.

3. Setting font size To
4. Browse mode

You can select auto mode and hand mode, tap  submenu return main menu.






5 . Ebook auto-cross

To select 10S、 15S、 20S、 25S and 30S , tap “” submenu return main menu.




5 . FM


In main menu ,tap FM to enter the FM interface.



Operation	
Adjust the volume	Drag the volume slider
Pause FM	Tap 
Resume playback	Tap 
Rewind or fast-forward	Touch and hold  or 
Stop watching a FM before it finishes playing	Tap  , or press the “o” button.

Operation:

- 1) Select Manual : Tap  or  leftwards or rightwards to change the frequent manually ; Select Auto search , the player will automatically search, after search will display:pres CH XX, Tap the screen to select the station.
- 2) Mem: : to select the stations, press [M]to confirm store, the frequent display on screen will replace the frequent that stored before.。
- 3) **FM record** : In FM,select“FM record” , enter record interface , tap“” to start

recording. Tap  to pause the record, tap “○” to save files and return FM interface

4) **Other** : Stereo , 5 types wallpaper;




NOTE : In FM mode, the earphone is using as antenna, so please keeping the earphone is connected well

6. Record



In main menu ,tap Record to enter it “MIC REC”interface.



Operation

Pause record	Tap 
Resume playback	Tap 
Stop record before it finishes playing	Tap  , or press the “○” button.

Operation

- 1) Enter record interface, tap  to start recording.
- 2) Tap  to pause recording.
- 3) tap “○” to save files and return main interface.

Record play


- 1) Return the main interface , enter “music” interface.
- 2) Choose record file , tap screen enter the record file list
- 3) To select files , tap it can playing.

Planet Metropolis: <http://www.PlanetMetropolis.com>


7 . Explorer

In main menu ,tap Explorer to enter it

1) Choose all files ,tap screen can playing

2) In the files list ,tap top right corner  button , then tap delete,you can delete files to save space.

8. Setting

In Main Interface, tap Setting to enter it.You can select [Settings] option and tap screen to enter Setting interface,tap , tap “o”submenu return main menu .

1 . Display Setup

①Backlight time: six options of 5 sec., 10 sec., 15 sec., 20 sec., 30 sec., and always on.

②Lum: five options of +1, +2, +3, +4 and +5, the higher level, the more bright.

③Backlight mode: two options of Normal and Electricity-saving modes

2 . System Setup

There are have the product info.

3 . Desktop setting

This setting have 8 types to select.

4 . Language Selection

①Three options of Simplified Chinese, Traditional Chinese and English.

②Product info

③Firmware upgrade

5 . Auto Power Off Time

In this menu, there are six options of Power: Off, 10 min.,1 5 min., 30 min., 60 min. and 120 min.

9 . Program

Planet Metropolis: <http://www.PlanetMetropolis.com>

In main menu ,tap Program to enter it

1) Calendar

- Press“▲/▼” to browse the dates of last or next month.
- Dail adown the Switch-button to return to the “Program” menu interface

2) Games

The player has some e-games

- Press“▲/▼” to left or right ..
- Dail adown the Switch-button to return to the “Program” menu interface

(4).Charge approach

1. Use collocate USB Date line

First step : Close the screen backlight; boot adjustments "setting / display / backlight display mode" as a "power-saving" mode.

Second step : After long press power key to save Settings.

Third step : USB cable attached to the machine connected the back-end computer USB interface connector.

Fourthly step : Even the machine connect computer, the screen will appear MP3 machines connected icon (MP3 normal and that the computer connection), double-click on the lower right corner of the computer "security hardware delete" to remove equipment, not to pull out the MP3 machines, and computers to stay connected , MP3-screen machines will be displayed battery charge status. That MP3 has been in charge.

2. Use charger charge

Name : Charger

Types : TP-U80

Input : AC220V~50Hz Max:100mA

Output : DC5.5~300mA(USB)

Criterion : MINI-USB

Planet Metropolis: <http://www.PlanetMetropolis.com>

(5). Abnormity afresh open :

If encountered by the illegal operation of the abnormal phenomena, such as the screen, inoperative and so on, insert a small thin pointer (such as an unbent paper clip) into the reset hole on the SIDE of the player)

V、FAQ

① The player can not power on.

- Check the battery and see if it runs out of power.
- Check again after connecting with power supply adapter.
- If the player still can not power on after charging, please contact our service centre.

② No sound comes out from the earphone.

- Please check the volume and see if it is set up to 0.
- Please check and see if there is some wrong with the earphone connection.

③ The keys don't work.

·Please make sure that if the electronic lock is locked. If it is locked, please short-time press "Unlock/ Power-on" key to unlock it and then try it again.

④ The player has serious noise.

- Please check and see if the plug of the earphone is clear. Feculence may cause noise.
- Check and see if the music file has been spoiled. Try to play other music files to confirm. The spoiled files may cause serious noise or jump tone.

⑤ Reception effect of the FM radio is not fine.

- Adjust the position of earphone and the player.
- Shut off all the close electronic devices.
- Earphone can also be used as antenna.

⑥ The screen displays messy code.

·Please check and see if the player has been correctly set up the language. The operation steps of language setup: "Setup"—"General Setup"—"Language".

⑦ The player can not download files.

- Make sure that the player is correctly connected with the computer.
- Make sure if the storage space has been full.
- Make sure if the USB line has been spoiled.



产品中有毒有害物质或元素的名称及含量

部件名称	有毒有害物质或元素					
	铅 (PB)	汞 (HG)	镉 (CD)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
数码多媒体播放器	×	○	○	○	○	○
附属品	○	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006标准规定的限量要求以下。
 ×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006标准规定的限量要求。

