

P2P operation manual

1

Right-click the mouse, and click P2P in the pop-up menu.

- Main Menu
- PlayBack
- PTZ Control
- Color Setting
- Output Adjust
- PTZ Tour
- P2P**
- Logout
- View 1
- View 4

2

Network

Net card: Wire Netcard DHCP Enable

IP Addr: 0 . 0 . 0 . 0

Subnet Mask: 0 . 0 . 0 . 0

Gateway: 0 . 0 . 0 . 0

Primary DNS: 0 . 0 . 0 . 0

Secondary DNS: 0 . 0 . 0 . 0

HTTP Port: 80

CMD Port: 6001

TCP Port: 6002

Mobile Port: 6003

P2P:

Sure you are connected to the external network. In the pop-up window, enable DHCP.

3

Network

Net card: Wire Netcard DHCP Enable

IP Addr: 0 . 0 . 0 . 0

Subnet Mask: 0 . 0 . 0 . 0

Gateway: 0 . 0 . 0 . 0

Primary DNS: 0 . 0 . 0 . 0

Secondary DNS: 0 . 0 . 0 . 0

HTTP Port: 80

CMD Port: 6001

TCP Port: 6002

Mobile Port: 6003

P2P: X00000000

Check if you get the IP address. enable P2P X00000000.dddns.org
Note: x00000000 is serial number.

4

Message

Set has been successful, and will Restart Immediately?

OK Cancel

Check if you get the serial number. In the pop-up window, click the OK button to restart to complete the setup.

5

Internet Explorer

Enter the URL: <http://www.dddns.org/>

Enter the serial number ID: m20122351

Name: Admin

Password: []

Login

Make sure that IE allow ActiveX control to download and install successfully.

Mobile Connection

Android devices can download the app from Google play, or you can also copy the soft "Super Meye.apk" from the cd. iOS devices can download the app from "App Store" directly.

Add device

Cancel Add device Done

Name []

Address []

Port []

User []

Password []

Channel Number

auto 1 4 8 16 32

Delete

- ← Any characters that you like to identify this device.
- ← Target's IP address or URL.
- ← DVR's Mobile port.
- ← DVR's user name.
- ← DVR's password.
- ← Select the channel number, when assign, the app will set the number automatically.

Live View →

Live View →

Add device →

Device list →

PTZ

Snapshot and Record files

Snapshot

Start/Stop Record

Local Settings

User guide

Audio

Query Remote Video

Talkback

For detailed instructions, please read the super meye user manual in the cd.