# TWIN PHONE

# **MT843**

# **User manual**





### **First steps**

Open battery cover, by lifting upper left corner with nail or credit card as shown below.

Insert microSD card as shown.







Install SIM card(s) as shown.



#### Install battery as shown below.



Put on battery cover and firmly press it down until it clicks.

# **Before use**

Charge phone for few hours before first use until on "Charging complete" appear on the display.

## Power on/Power off

Press and hold "finish/power" button for 3 seconds to power on the device. Repeat this action to power off the device.

# **Flashlight function**

When phone is in standby mode press and hold "OK" button for 3 seconds, flashlight LED will be on. To switch off press and hold again "OK" button for 3 seconds.

# Using the phone

#### Dialing

Use numeric buttons to enter phone number or select contact from phonebook, press "call" button to dial number. If you

ΕN

have installed two SIM cards a question will pop-up, then use "up/down" buttons to select SIM card you want to use for dialing.

Note! During call "up/down" buttons will adjust volume. If you want to enter "+" when entering phone number (for i.e.+48 XXX XXX XXX) press twice "0" button.

#### Incoming calls

Press "call" button to receive incoming call.

Reject/finish call.

To finish call or reject incoming call press "finish" button.

# Lock/Unlock keyboard

Press "menu" button and then "\*" button to lock keyboard. Repeat this action to unlock keyboard.

### **Mute function**

Press and hold "#" to disable all sounds, repeat this action to enable sounds.

#### Using menu

Press "menu" button in standby mode to enter menu icons. Use navigation buttons and OK button to enter options. You can also use left and right function buttons to enter context menu options.

#### Main menu content

- Camera
- Audio player
- Messaging
- Call center
- Multimedia
- Phonebook
- Call logs
- Multimedia

Image viewer Video recorder Video player Sound recorder FM Radio



#### Tools

Callendar Alarm Calculator Flash light Bluetooth

#### File manager

#### Settings

**Dual SIM settings** Phone settings Date & time Autopower on/off Language settings Preferred input methods Display Shortcut settings Dedicated keys Fliaht mode Misc. settings Security Connectivity

# Restore factory settings Profiles Internet Games

Note! Menu content depends on device version and hardware configuration.

# FM Radio

This phone has FM radio function. Connect earset to proper socket to receive FM channels. Earset is working also as antenna fro FM radio. Quality of received FM channels is depending of signal broadcasting, transmitters and surrounding terrain.



Due to continuous development specification and appearance of product are subject to change without prior notice. For technical support please visit www.media-tech.eu.