

LH-C015 36pcs 3w LED Moving Head User Manual



LEAHUA 广州丽华舞台灯光音响有限公司
GZ LEAHUA LIGHT LIMITED

This manual contains important information.
Please read before operating fixture.

Add: A1 Building The Sixth Industrial Zone Zhu Gang Road Hongxing Shijing Town Baiyun
District Guangzhou China.

Tel: +86 020-66292177 Fax: +86 020-66292177

1 SECURITY TIPS

WARNING!!! To reduce the risk of fire, electric shock, or injury to persons, follow these important safety instructions:


- non-professionals, not to disassemble the light arbitrarily and lighting accessories inside.
- rated voltage range: AC110V-120V/60Hz or AC200V-240V / 50HZ (to be selected).
- not beam irradiate the flammable materials, flammable materials and the lamp should be maintained at least 1M over the distance.
- lamps used in ambient temperature: -15 °C -40 °C, the highest temperature of the surface of the lamp: 60 °C.
- to keep away from the liquid substance and humid environment.
- before using the lights must ensure the good grounding, can not install charging and remove any parts.
- the installation of lamps, must be fixed screw fasteners with additional security cable and regular inspection.
- lamps consecutive working hours is not recommended more than 10 hours.
- should stop using the lights in time when happens unusual conditions during the process
- lamp parts of the rotation, external accessories and paste parts should be regular inspected, such as the emergence of loose and rock, should be reinforced in a timely manner to prevent the accident.
- lamps adopt strong winds to refrigerate, it is easy to accumulate the dust, so you have to clean it weekly especially the cooling air opening, otherwise the dust will plug leading to poor light

2 TECHNOLOGY REFERENCE

1. Power supply: AC100- 240V, 50/60hz
2. Light source: 36PCS RGBW 3W Cree LED (R8, G10, B10, W8)
3. lifespan:100000hours
4. Lens:5 degree beam lens
5. Counting positioning system:double optional coupler,dual holder positioning
6. Driving mode:led using constant current driver,motor driven by mute
7. Control mode:DMX512,auto program,master-slave control
8. Channel mode:9/16channel
9. Cooling method:using high thermal conductivity aluminum PCB,the high thermal conductivity aluminum,cooling fan,over running speed,adjustable speed.
10. Pan/Tilt:X630/Y240degree,fast running speed,adjustable speed.
11. Dimmer:0-100% linear dimming
12. strobe:1-25/sec
13. display:LCD display
14. Working environment:indoor,-15 to 40 degrees
15. IP rating:IP20
16. Packing Size: 340*270*370mm
17. N.W: 5kg G. W: 5.7kg

3 FUNCTIONS INTRODUCTION

Menu

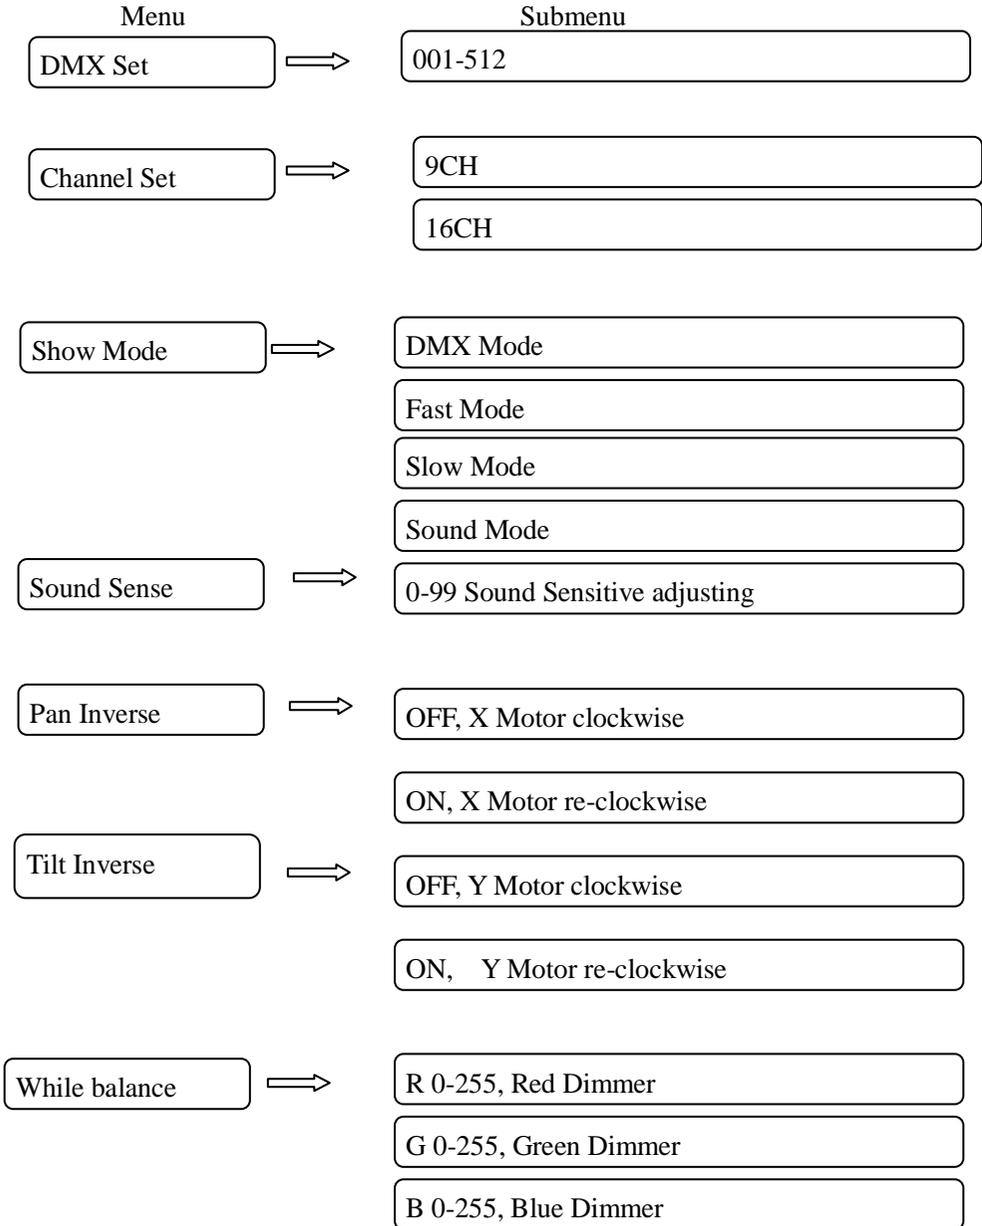

W 0-255, White Dimmer

Default
Confirm



Yes, Initiating System

Fixture
REST



Yes, System Reset

4 DMX CHANNEL SHEET

16 Channels:

Channel	Value	Function
1	0-255	X motor
2	0-255	Y motor
3	0-255	Dimmer total
4	0-255	Red(1-255,dimmer,from dark to bright)
5	0-255	Green(1-255,dimmer,from dark to bright)
6	0-255	Blue(1-255,dimmer,from dark to bright)
7	0-255	White(1-255,dimmer,from dark to bright)
8	0-255	strobe(1-255,strobe,from slow to fast)
9	0-255	XY motor speed from fast to slow
10	0-10	Other CH activated
	11-127	Color changing
	128-160	Color jump changing
	161-200	Color slow changing A
	201-255	Color slow changing B

11	0-255	CH10 speed from slow to fast
12	0-255	Built-in program effect
13	0-255	CH12 speed from slow to fast
14	0-255	Pan fine
15	0-255	Tilt fine
16	150-255	Reset

9Channels:

Channel	Value	Function
1	0-255	X motor
2	0-255	Y motor
3	0-255	Dimmer total
4	0-255	Red(1-255,dimmer,from dark to bright)
5	0-255	Green(1-255,dimmer,from dark to bright)
6	0-255	Blue(1-255,dimmer,from dark to bright)
7	0-255	White(1-255,dimmer,from dark to bright)
8	0-255	strobe(1-255,strobe,from slow to fast)
9	0-255	XY motor speed from fast to slow

5 DIFFICULTY RESOLUTION

The following is a list of problems and resolution, and other malfunction preparing work should be professionally qualified staff to deal with.

1. Bulb not working

- a) Check whether approaching the service life of light bulbs, then

change it

- b) Check whether bulbs circuitry leak, loss or connect poorly

2. Beam appears bleak

- a) The bulbs maybe approach the service life, then change it, or the optical components are unclean.
- b) Bulbs have accumulation of dust, so the bulbs and other parts inside the lamp should be cleaned and maintained in regular period.

3. Computer lamp work intermittently

- a) Check whether the fan process naturally and become dirty
- b) Check inner temperature-response control plug is off
- c) Check whether the circuitry is good

4. The computer lamp not controlled by controller during lighting

- a) Check numeral starting address and the connection of communication control circuit
- b) The corresponding channel button of controller is open or not
- c) Check whether the fuse on power supply input jack is broken off

6 AFTER SERVICE

1. Our company offer technical consultation to customers for ever.
2. If the machine is wrong and need repairmen, please truthfully fill in the related content and feedback us the problems timely, as well as we have to improve the product.
3. In addition to the lamp, also matching accessories are as follows:

accessories: Power line 1 piece

Optional parts: (customers)



Warranty Card

Name	Model
------	-------

Production	Purchase
------------	----------

End User
Company Name:
Add:

Sale Store	
Link man:	Stamp
Tel:	

Description: These must be truthfully fill, seal by the end-user and point-of-sale, or else the warranty will not work (warranty period and terms, see the following)

warranty period: one year since purchase warranty terms: 1、 If fail when using the product in normal state, you can made under the provisions of the warranty, show the warranty card and purchase bills(copy), and enjoy free maintenance service in a specific service center or the manufacturer.

2. The following will be the implementation of paid service:

- (1)Without the effective warranty card
- (2)There’s blank, alter and no point-of-sale name
- (3)Fail caused by unresistance
- (4)Fail caused by transportation or unloading
- (5)Fail caused by not operate by manual
- (6)Fail caused by disassemble without unauthorized
- (7)Fail caused by using the unauthorized control system

Note:

Based on our company continue to improve the product, the statement containing data may have changed, and will not notice the change any more. Company retains its right to change specifications related when product is improved. Thanks for your understanding.