

M a n u a l



U s e r ' s

# Virtuoso™ DX Control Console

---

02.9668.0001

**VARI\*LITE®**  
Express yourself.

## **VARI\**LITE* - VIRTUOSO DX CONSOLE USER'S MANUAL**

**VARI\**LITE***®, **Artisan**®, **VL2**® and **VLD**® are trademarks owned by Vari-Lite, Inc., 201 Regal Row, Dallas TX 75247 USA and are registered in the United States and other countries.

**VL2000**™, **VL2200**™ (and the individual product designations), **VL2400**™ (and the individual product designations), **Virtuoso**™, **VL1**™, **VL2B**™, **VL2C**™, **VL2Q**™, **VL3**™, **VL4**™, **VL5**™, **VL5Arc**™, **VL5B**™, **VL6**™, **VL6B**™, **VL6C**™, **VL7**™, **VL7B**™, **VLM**™, **APS6**™, **C3**™, **SPC-36**™, **UDM**™, **AutoTruss**™, **SmartDMX**™, **Smart Repeater**™, **Series 100**™, **Series 200**™, **Series 300**™, **DICHRO\*WHEEL**™, **DICHRO\*TUNE**™, **VACU\*DEP**™, **VARI\*IMAGE**™, **VARI\*BEAM**™, **VARI\**LITE* Visionary**™, **ArtisanVLQ**™, and the Vari-Lite Asterisk are also trademarks owned by Vari-Lite, Inc. and the Vari-Lite Asterisk are also trademarks owned by Vari-Lite, Inc.

**VARI\**LITE***® products are protected by one or more of the following patents, and other pending patent applications worldwide:

US Patents No. 5,959,758; 5,728,994; 5,590,954; 5,367,444; 5,329,431; 5,209,560; 5,186,536; 5,073,847; 5,010,459; 4,980,806; 4,602,321; 4,392,187; U.S. Design Patents No. 366,712; 359,574;

Australia Patents No. 703868; 693691; 683695; 667109; 657152; 649264; 646588; 618559; 586095; 576400; 575271; 546433; Australia Design Reg. No. 126781;

German Patents No. (DBP) 69314122.0; 69208615.3; 69207692.1; 69121029.2; 3768727.1; 3750201.8; 3587270.5; 3279888.1; 3274291.6; DGM G9312884; DGM 9407689.8;

European Patents No. 0586049 (FR, GB); 0547732 (BE, DK, FR, GB); 0534710 (BE, FR, GB); 0474202 (BE, DK, FR, GB); 0253082 (BE, FR, GB); 0253081 (BE, FR, GB); 0192882 (BE, FR, GB); 0140994 (BE, FR, GB); 0060068 (BE, FR, GB);

France Design Reg. No. 335132 - 335147;

Spain Patents No. 2090191; 2084289; 2082384; 2058071; 2020960; 0548328; Spain Utility Model No. 2031748; Spain Design Reg. No. 129596;

Japan Patents No. 2,059,669; 2,055,324; 2,002,168; 1,889,481; 1,770,241; 1,723,825; 1,683,007; 1,553,011; KR 206051; 181180; 76310; 47673; Japan Design Reg. No. 947552; 945436-1; 945436;

Korean Design Reg. No. 175178;

Mexico Patents No. 180148; 179138;

Taiwan Patents No. 78726; 66975; 65380; 63471; 40611; 28275;

United Kingdom Design Reg. No. 2042174; 2033108; 2029499.

Apple®, Macintosh®, and FireWire® are registered trademarks of Apple Computer, Inc.

All other brand or product names which may be mentioned in this manual are trademarks or registered trademarks of their respective companies or organizations.

Virtuoso™ DX Console User's Manual

The information furnished in this manual is for informational use only and is subject to change without notice. Vari-Lite, Inc. assumes no responsibility or liability for any errors or inaccuracies that may appear in this manual. All information and graphic representations are property of Vari-Lite, Inc. 201 Regal Row, Dallas, Texas 75247 USA.

Version as of: 12-April-01

Printed in the USA.

Part number: 02.9668.0001A

Virtuoso™ DX Console User's Manual

© 2001 Vari-Lite, Inc. All Rights Reserved.

# End User Software License

**PLEASE READ THIS DOCUMENT CAREFULLY BEFORE ACTIVATING, COPYING, INSTALLING, OR USING THIS SOFTWARE PROVIDED BY VARI-LITE, INC. BY ACTIVATING, COPYING, INSTALLING, OR USING THIS SOFTWARE, YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE TO THE TERMS OF THIS LICENSE, DO NOT ACTIVATE, COPY, INSTALL, OR USE THIS SOFTWARE AND PROMPTLY RETURN IT FOR A REFUND.**

1. License. Vari-Lite, Inc. ("Vari-Lite") hereby grants you a limited license to install and use the Virtuoso™ DX software and related documentation (collectively, the "Software") solely with the Virtuoso DX console sold in conjunction with the Software. Vari-Lite retains all right, title and interest to the Software which is protected by various proprietary rights, including but not limited to copyrights, trade secrets, or patents ("Proprietary Rights"). No license, right or interest in any trademark, trade name or service mark of Vari-Lite or any third party is granted under this License.

2. No Implied License. You acknowledge that this License in no way shall be construed to provide an implied license to use, modify or improve any of Vari-Lite's patented technology, copyrights, trade secrets, trademarks, and/or other Proprietary Rights.

3. Restrictions. The Software contains proprietary information that is possibly protected by a combination of patent, copyright, trade secret, and/or other Proprietary Rights, and constitutes valuable property of Vari-Lite. You acknowledge that the Software is disclosed in circumstances of confidence and only for use by you under the terms and conditions of this License and that you do not acquire any rights of ownership or title in the Software. You may not attempt to create or derive source codes by disassembly, reverse engineering or any other method, or otherwise reduce the Software to a human-perceivable form. You may not modify or translate any part of the Software. You may not use, disclose, distribute, make or have made any copies of the Software, in whole or in part, without the prior written authorization of Vari-Lite. You agree to make reasonable efforts to notify and inform your employees or agents having access to the Software of your limitations, duties and obligations regarding non-disclosure and copying of the Software. The Software shall be used only by you, your employees or your authorized agents. You agree to provide notice to Vari-Lite immediately after learning of or having reason to suspect a breach of any of the restrictions set forth in this License.

4. Termination. This License is effective until terminated. You may terminate this License at any time by destroying the Software, and all copies thereof. This License will terminate immediately without notice from Vari-Lite if you fail to comply with any provision of this License. Upon termination, you must destroy the Software and all copies thereof.

5. Export Control Requirements. This License, and any technical information supplied during the term of this License, is made subject to any restrictions concerning the export of products or technical data from the United States of America which may be imposed upon Vari-Lite or you from time to time by the Government of the United States of America. Furthermore, you agree that at no time, either during the term of this License or thereafter, will you knowingly export, directly or indirectly, any United States source technical data acquired from Vari-Lite under this License or any direct products of that technical data to any country for which the U.S. Government or any agency thereof at the time of export requires an export license or other governmental approval, without first obtaining that license or approval when required by applicable United States law.

6. Limited Warranty. Vari-Lite warrants the media on which the Software is recorded to be free from defects in materials and workmanship under normal use for a period of ninety (90) days from the date of purchase as evidenced by a copy of your receipt. Vari-Lite's entire liability and your exclusive remedy will be replacement of a media that does not meet Vari-Lite's limited warranty and is returned at your expense, along with a copy of your receipt, to Vari-Lite customer support or to Vari-Lite's authorized representative. If replacement of the media is not reasonably practical or commercially reasonable as determined solely in the discretion of Vari-Lite, Vari-Lite will refund the purchase price as evidenced by a purchase receipt. Vari-Lite will have no responsibility to replace media damaged by accident, abuse or misapplication. **EXCEPT FOR THE FOREGOING, THE SOFTWARE AND RELATED DOCUMENTATION ARE PROVIDED "AS IS," WITHOUT ADDITIONAL WARRANTY OF ANY KIND, AND VARI-LITE EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF DESIGN, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR TITLE, ANY WARRANTIES ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE, OR ANY WARRANTIES OF NON-INFRINGEMENT OF ANY THIRD PARTY'S PATENT(S), TRADE SECRET(S), COPYRIGHT(S) OR OTHER INTELLECTUAL PROPERTY RIGHTS. VARI-LITE DOES NOT WARRANT THAT THE FUNCTIONS CONTAINED IN THE SOFTWARE WILL MEET YOUR REQUIREMENTS, OR THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE SOFTWARE WILL BE CORRECTED. FURTHERMORE, VARI-LITE DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE SOFTWARE OR RELATED DOCUMENTATION IN TERMS OF THEIR CORRECTNESS, ACCURACY, RELIABILITY, OR**

OTHERWISE. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY VARI-LITE OR ITS AUTHORIZED REPRESENTATIVE SHALL CREATE ANY WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. SHOULD THE SOFTWARE PROVE DEFECTIVE, YOU (AND NOT VARI-LITE OR ITS AUTHORIZED REPRESENTATIVE) ASSUME THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION. SOME STATES DO NOT ALLOW EXCLUSION OF IMPLIED WARRANTIES, SO THE ABOVE EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

7. Limitation Of Liability. UNDER NO CIRCUMSTANCES, INCLUDING NEGLIGENCE, SHALL VARI-LITE BE LIABLE FOR ANY LOST REVENUE OR PROFITS OR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE OR INABILITY TO USE THE SOFTWARE OR RELATED DOCUMENTATION, EVEN IF VARI-LITE OR ITS AUTHORIZED REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. IN NO EVENT SHALL VARI-LITE'S TOTAL LIABILITY TO YOU FOR ALL DAMAGES, LOSSES, AND CAUSES OF ACTION, WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE, EXCEED THE AMOUNT PAID BY YOU FOR THE SOFTWARE.

8. Arbitration, Jurisdiction, and Venue. You agree that any action at law or in equity arising out of the License or relating to this Software shall be resolved, individually, through binding arbitration using the then current rules of the American Arbitration Association, in Dallas, Texas and the resulting decisions may be entered in any court with proper jurisdiction. This means that if you have a grievance with us, you cannot take us to court, and you may not join your action with any other party. You can address such grievances through arbitration only and you are hereby consenting to do it in Dallas, Texas, using Texas' laws (without regard to Texas' conflicts of laws). You agree that are properly subject to the jurisdiction of the courts of the State of Texas and waive any rights to challenge personal jurisdiction.

9. Government Licensee. If you are acquiring the Software on behalf of any unit or agency of the United States Government, the following provisions apply: (a) the Government acknowledges Vari-Lite's representation that the Software and its documentation were developed at private expense and no part of them is in the public domain; (b) the Government acknowledges Vari-Lite's representation that the Software is "Restricted Computer Software" as that term is defined in Clause 52.227-19 of the Federal Acquisition Regulations ("FAR") and is "Commercial Computer Software" as that term is defined in Subpart 227.471 of the Department of Defense Federal Acquisition Regulation Supplement ("DFARS"). The Government agrees that: (i) if the Software is supplied to the Department of Defense ("DoD"), the Software is classified as "Commercial Computer Software" and the Government is acquiring only "limited rights" in the Software and its documentation as that term is defined in Clause 252.227-7013(a)(13) of the DFARS, and (ii) if the Software is supplied to any unit or agency of the United States Government other than DoD, the Government's rights in the Software and its documentation will be as defined in Clause 52.227-19(c)(2) of the FAR.

10. Indemnity. You agree to indemnify and hold harmless Vari-Lite, and its parents, subsidiaries, affiliates, officers, directors, shareholders, employees and agents, from and against any costs, losses, liabilities and expenses, including reasonable attorney's fees, that Vari-Lite may suffer, incur, or be subjected to by reason of any claim by a third party due to or arising out of your conduct, your use of the Software, any alleged breach of this License or the representations and warranties herein, the alleged violation of the rights of any third party, or any alleged infringement of the intellectual property rights of any third party, including but not limited to your use of any content, trademarks, service marks, trade names or other intellectual property used in connection with the Software. Vari-Lite reserves the right to control the exclusive defense of any matter otherwise subject to your indemnification, which will not excuse your indemnity obligations.

11. Complete Agreement. This License constitutes the entire agreement between the parties with respect to the use of the Software and supersedes all prior or contemporaneous understandings or agreements, written or oral, regarding such subject matter.

12. Miscellaneous. If any provision of this License shall be unlawful, void, or for any reason unenforceable, then that provision shall be deemed severable (or reformable, if necessary), and shall not affect the validity and enforceability of any remaining provisions. Alternatively, such provision may also be modified to the extent necessary for its validity.

13. Transfer. This License may be transferred to another party provided the other party reads and agrees to accept the terms and conditions of this License and you notify Vari-Lite of the transfer in writing.

## **How To Obtain Warranty Service**

A copy of the Vari-Lite, Inc. Limited Warranty was included in the shipping package for this VARI\***LITE**® product.

To obtain warranty service, please contact customer service at 1-877-VARI-LITE (1-877-827-4548) or customerservice@vari-lite.com and request a Return Material Authorization (RMA) for warranty service. You need to provide the model and serial number of the item being returned, a description of the problem or failure and the name of the registered user or organization. If available, you should have your sales invoice to establish the date of sale as the beginning of the warranty period.

Once you obtain the RMA, pack the product in its original packing material along with a copy of your invoice (if available) and write the RMA number legibly on or near the shipping address label. Return the unit, freight prepaid to:

Vari-Lite, Inc.  
201 Regal Row  
Dallas, TX 75247  
Attention: Warranty Service

As stated in the warranty, it is required that the shipment be insured and FOB our service center.

## **Compliance Notice**

**FCC** This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when this equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with Vari-Lite system, service, and safety guidelines, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his/her own expense.

### **Declaration of Conformity**

We declare, under our sole responsibility, that this product complies with the relevant clauses of the following standards and harmonized documents:

#### **Safety**

EN 60950: 1999 Safety Standard for Information Technology Equipment

#### **EMC**

EN55022A: 1998 Radiated and Conducted Emissions

EN50082-1: 1997 Generic Immunity Standard

We certify that VARI\**LITE* products conform to the protection requirements of European council directives: 73/23/EEC (LVD) and 89/336/EEC (EMC)

## Safety Notice

It is extremely important to read ALL safety information and instructions provided in this manual and any accompanying documentation before installing and operating the products described herein. Heed all cautions and warnings during installation and use of this product.

Safety symbols used throughout this manual are as follows:



**CAUTION** advising of potential damage to product.



**WARNING** advising of potential injury or death to persons.

### GENERAL INFORMATION PERTAINING TO PROTECTION AGAINST FIRE AND ELECTRICAL SHOCK.

#### **WARNING:**

#### **INSTRUCTIONS FOR CONTINUED PROTECTION AGAINST FIRE**

1. Replace fuses with same type and rating only.

#### **WARNING:**

#### **INSTRUCTIONS FOR CONTINUED PROTECTION AGAINST ELECTRICAL SHOCK**

1. VARI\***LITE**® control consoles are designed for dry locations only. Exposure to rain or moisture may damage the console.
2. Disconnect power before servicing any VARI\***LITE**® equipment.
3. Servicing to be performed by qualified personnel only.

#### **WARNING:**

#### **RF INTERFERENCE**

1. This is a Class A product. In a domestic environment this product may cause radio interference, in which case, the user may be required to take adequate measures.

## **Sicherheitshinweise**

Es ist äußerst wichtig, ALLE Sicherheitsinformationen und -hinweise in diesem Handbuch und dem beiliegenden Informationsmaterial zu lesen, bevor Sie die hierin beschriebenen Produkte installieren bzw. bedienen. Halten Sie bei der Installation und dem Einsatz dieses Produkts alle Warnhinweise und Vorsichtsmaßnahmen ein.

Folgende Sicherheitssymbole werden in diesem Handbuch verwendet:



**VORSICHT** - weist auf möglichen Produktschaden hin.



**WARNUNG** - weist auf mögliche Körperverletzung und Lebensbedrohung hin.

**NACHSTEHEND FINDEN SIE ALLGEMEINE HINWEISE ÜBER SICHERHEITSVORKEHRUNGEN GEGEN FEUER UND ELEKTROSCHOCK.**

### **WARNUNG:**

#### **HINWEISE ZUM FEUERSCHUTZ**

1. Ersetzen Sie Sicherungen nur mit Sicherungen vom gleichen Typ und gleicher Stärke.

### **WARNUNG:**

#### **HINWEISE ZUM SCHUTZ GEGEN ELEKTROSCHOCK**

1. VARI\**LITE*®-Konsole eignen sich ausschließlich für trockene Standorte. Regen oder Feuchtigkeit können die Konsole beschädigen.
2. Unterbrechen Sie die Stromzufuhr, bevor Sie mit der Arbeit an VARI\**LITE*®-Geräten beginnen.
3. Die Geräte sollten nur von qualifiziertem Personal gewartet werden.

### **WARNUNG:**

#### **HF-INTERFERENZ**

1. Es handelt sich um ein Produkt der Klasse A. In einer Wohnumgebung kann das Produkt Hochfrequenzstörungen verursachen. In diesem Fall müssen eventuell geeignete Maßnahmen getroffen werden.

## Notes de sécurité

Avant de procéder à l'installation des produits décrits dans ce guide et de les mettre en marche, il est extrêmement important de lire TOUS les renseignements et TOUTES les directives de sécurité contenues dans ce guide ainsi que toute documentation jointe. Tenir compte de tous les avertissements et suivre toutes les précautions pendant l'installation et l'utilisation de cet appareil.

Les symboles de sécurité utilisés dans ce guide sont les suivants :



**ATTENTION** Ce symbole annonce que l'appareil risque d'être endommagé.



**AVERTISSEMENT** Ce symbole annonce qu'il y a risque d'accident grave ou même fatal.

CETTE SECTION CONTIENT DES INFORMATIONS GÉNÉRALES POUR SE PROTÉGER CONTRE LES INCENDIES ET LES DÉCHARGES ÉLECTRIQUES :

**AVERTISSEMENT:**

**DIRECTIVES POUR SE PROTÉGER CONTRE LES INCENDIES**

1. Ne remplacer les fusibles qu'avec ceux du même type, ayant les mêmes caractéristiques.

**AVERTISSEMENT:**

**DIRECTIVES POUR SE PROTÉGER CONTRE LES DÉCHARGES ÉLECTRIQUES**

1. Les consoles de commande VARI\*LTE® sont conçues pour une utilisation au sec uniquement. Une exposition à la pluie et à l'humidité risque d'endommager la console.
2. Débrancher l'appareil avant de procéder à la révision de tout matériel VARI\*LTE®.
3. Les révisions doivent être effectuées uniquement par des personnes qualifiées.

**AVERTISSEMENT:**

**INTERFÉRENCE RF**

1. Cet appareil est de Classe A. Dans un environnement domestique, cet appareil peut causer des interférences radio, et si c'est le cas, l'utilisateur peut avoir à prendre des mesures adéquates.

## **Aviso sobre Seguridad**

Es muy importante leer TODA la información e instrucciones sobre seguridad que se indica en este manual así como en los documentos adjuntos antes de instalar y operar los productos descritos. Se debe prestar atención a todos los avisos y advertencias durante la instalación y uso de este producto.

Los símbolos de seguridad usados en este manual son los siguientes:



**CUIDADO**, indica posibles daños al producto.



**ADVERTENCIA**, indica posibles lesiones o muerte a las personas.

### **LA INFORMACIÓN GENERAL RELACIONADA A LA PROTECCIÓN CONTRA INCENDIO Y GOLPES DE CORRIENTE ELÉCTRICA:**

#### **ADVERTENCIA:**

#### **INSTRUCCIONES PARA PROTECCIÓN CONTINUA CONTRA INCENDIO**

1. Reemplaze los fusibles solamente con los del mismo tipo y especificación.

#### **ADVERTENCIA:**

#### **INSTRUCCIONES PARA PROTECCIÓN CONTINUA CONTRA CHOQUE ELÉCTRICO**

1. Los controles de la consola de VARI\**LITE*® están diseñados solamente para lugares secos. La exposición a la lluvia o humedad pueden dañar la consola.
2. Desconecte la energía antes de dar servicio a cualquier equipo de VARI\**LITE*®.
3. El servicio debe ser realizado solamente por personal calificado.

#### **ADVERTENCIA:**

#### **INTERFERENCIA RF**

1. Este es un producto de Clase A. En el ambiente de la casa este producto puede ocasionar radiointerferencia, en cuyo caso, el usuario debe tomar las medidas adecuadas.

## 安全性に関する注意事項

ここに記載されている製品を取り扱う場合は、まず本マニュアルおよび付属のマニュアルの安全性に関する情報と説明をすべてお読みください。また、実際に本製品を取り付けたり使用する際には、すべての注意事項および警告に留意して作業してください。

本マニュアルでは、以下の安全マークを使用しています。



**注意：**製品に損傷を与える危険性があります。



**警告：**人身事故につながる危険性があります。

### 火災防止および感電防止についての一般的な注意事項

#### **警告：**

##### **火災の発生を防ぐためのヒント**

1. ヒューズを交換する場合は、同じヒューズ（同じ種類、同じクラス）を使用してください。

#### **警告：**

##### **感電を防ぐためのヒント**

1. VARI\***LITE**® 制御装置は、乾燥した環境で使用するよう設計されています。雨で濡れる場所や湿気の多い場所に取り付けると、制御装置が傷むことがあります。
2. VARI\***LITE**® 照明器具を修理点検する場合は、必ず先に電源を切ってください。
3. 照明器具の修理点検は、資格を持つ技師のみが行うようにしてください。

#### **警告：**

##### **RF 干渉**

1. 本製品は Class A に分類されます。本製品は、家庭環境において無線干渉を起こす可能性があります。その場合、使用者は適切な処置を取らなければならないことがあります。

*(This page intentionally blank.)*

# Table of Contents

## Introduction

|                                        |   |
|----------------------------------------|---|
| About This Manual .....                | 1 |
| Additional Documentation.....          | 1 |
| Obtaining Additional DMX Profiles..... | 2 |
| Text Conventions .....                 | 2 |
| Suggestions .....                      | 2 |

## Chapter 1. Overview and Installation

### Console Overview

|                                       |   |
|---------------------------------------|---|
| Virtuoso™ DX Console Features .....   | 5 |
| Components .....                      | 6 |
| Console .....                         | 6 |
| Macintosh Computer System .....       | 6 |
| Channel Select Panel (Optional) ..... | 7 |
| Accessories List.....                 | 7 |

### Installation Procedures

|                                               |    |
|-----------------------------------------------|----|
| Connecting Console & Computer Components..... | 8  |
| Keyboard Lock/Unlock.....                     | 9  |
| Connecting Additional Components.....         | 10 |
| Installing Desk Lamps .....                   | 11 |

### Operation Overview

|                                    |    |
|------------------------------------|----|
| Window Interaction.....            | 12 |
| Menus and Button Bar.....          | 12 |
| Entering/Editing Window Data ..... | 12 |
| Closing Windows .....              | 13 |
| Status Indicator Bar.....          | 13 |

### Routine Care and Maintenance

|                              |    |
|------------------------------|----|
| Fiber Optic Connectors ..... | 15 |
| Cleaning the Console .....   | 16 |
| Console Panel Surfaces ..... | 16 |
| Console Displays.....        | 16 |

## Chapter 2. Power Up and Patch

### Power Up - DMX Systems

|                                  |    |
|----------------------------------|----|
| Powering Up Console .....        | 19 |
| Powering Down Console .....      | 19 |
| System Configuration Window..... | 20 |

|                                            |    |
|--------------------------------------------|----|
| <b>Power Up - VARI*<i>LITE</i> Systems</b> |    |
| Powering Up Console.....                   | 21 |
| Powering Down Console.....                 | 21 |
| System Configuration Window .....          | 22 |
| Console Naming.....                        | 23 |
| Store Configuration.....                   | 24 |
| Update Configuration.....                  | 24 |
| <b>Patch</b>                               |    |
| Overview .....                             | 25 |
| Setting Up Plan View Window.....           | 26 |
| Plan View Background Picture .....         | 27 |
| Patching DMX/Conventional Fixtures .....   | 28 |
| Patching VARI* <i>LITE</i> Luminaires..... | 32 |
| <b>Patch Editing</b>                       |    |
| Editing Windows .....                      | 35 |
| Plan View.....                             | 35 |
| Patch.....                                 | 36 |
| 2D/3D Mode Guidelines.....                 | 37 |

## **Chapter 3. Manual Control**

|                                                     |    |
|-----------------------------------------------------|----|
| <b>Channel Select</b>                               |    |
| Overview .....                                      | 41 |
| Selecting Channels .....                            | 41 |
| From Channel Select Window .....                    | 42 |
| From Keypad .....                                   | 44 |
| From Channel Select Panel (Optional Accessory)..... | 45 |
| Console Channel Select Buttons.....                 | 47 |
| [Next] and [Last].....                              | 47 |
| <b>Lamp Control</b>                                 |    |
| Start.....                                          | 48 |
| Douse .....                                         | 48 |
| Reset/Recalibration/Erase Luminaire Data .....      | 49 |
| <b>Encoder Control</b>                              |    |
| Overview .....                                      | 50 |
| Console Encoders .....                              | 51 |
| Pan and Tilt.....                                   | 51 |
| Intensity.....                                      | 51 |
| Color .....                                         | 52 |
| Beam .....                                          | 52 |
| Image (Gobo).....                                   | 52 |
| 3D.....                                             | 53 |
| Dynamic States .....                                | 53 |
| Frame (VL7B Luminaire Only).....                    | 54 |
| Storing New Default Min/Max Settings .....          | 55 |
| Encoders Window.....                                | 56 |

**Keypad Control**

|                                      |    |
|--------------------------------------|----|
| Overview .....                       | 57 |
| Setting Parameters From Keypad ..... | 58 |
| Intensity .....                      | 58 |
| Presets.....                         | 58 |
| Colors .....                         | 59 |
| Beams .....                          | 59 |

**Luminaire Status**

|                               |    |
|-------------------------------|----|
| Luminaire Status Window ..... | 60 |
| Parameter Columns Window..... | 61 |
| Intensity Window .....        | 62 |

**Chapter 4. Select Displays**

**General Operation**

|                                             |    |
|---------------------------------------------|----|
| Overview .....                              | 67 |
| What are Selects? .....                     | 67 |
| Accessing Selects From Keypad .....         | 67 |
| Standard Beams and Colors .....             | 67 |
| Panel Select Displays .....                 | 68 |
| Mapping Selects to Different Displays ..... | 69 |
| [Palette Shift] Button.....                 | 69 |
| Applying Selects.....                       | 70 |
| Select Displays Window .....                | 71 |
| Store.....                                  | 72 |
| Label.....                                  | 72 |
| Update .....                                | 72 |
| Delete.....                                 | 73 |
| Select .....                                | 73 |

**Beams**

|                                              |    |
|----------------------------------------------|----|
| Overview .....                               | 74 |
| Beam Palette Data Window .....               | 75 |
| Storing, Modifying, and Recalling Beams..... | 76 |
| From Panel Select Displays.....              | 76 |
| From Select Displays Window .....            | 78 |
| From Keypad.....                             | 78 |

**Colors**

|                                   |    |
|-----------------------------------|----|
| Overview .....                    | 80 |
| Color Palette Data Window .....   | 81 |
| Storing and Recalling Colors..... | 82 |
| From Panel Select Displays.....   | 82 |
| From Select Displays Window ..... | 83 |
| From Keypad.....                  | 83 |

|                                                 |    |
|-------------------------------------------------|----|
| <b>Presets</b>                                  |    |
| Overview .....                                  | 84 |
| Preset Data Window .....                        | 85 |
| Storing, Modifying, and Recalling Presets ..... | 86 |
| From Panel Select Displays .....                | 86 |
| From Select Displays Window .....               | 88 |
| From Keypad .....                               | 88 |
| <b>Groups</b>                                   |    |
| Overview .....                                  | 90 |
| Storing, Modifying, and Recalling Groups .....  | 90 |
| From Panel Select Displays .....                | 90 |
| From Select Displays Window .....               | 91 |
| From Keypad .....                               | 91 |
| <b>Macros, Snapshots, and Effects</b>           |    |
| Overview .....                                  | 92 |

## **Chapter 5. VARI\**LITE* Color System**

|                                                        |     |
|--------------------------------------------------------|-----|
| <b>Color Control</b>                                   |     |
| Overview .....                                         | 95  |
| VARI* <i>LITE</i> Colors .....                         | 95  |
| <b>Applying VARI*<i>LITE</i> Colors</b>                |     |
| From VL Color System Window .....                      | 96  |
| From Keypad .....                                      | 97  |
| <b>VARI*<i>LITE</i> Color System Charts</b>            |     |
| VL Color System for VARI* <i>LITE</i> Luminaires ..... | 98  |
| VL Color System for DMX-Controllable Fixtures .....    | 102 |

## **Chapter 6. Basic Cues**

|                                 |     |
|---------------------------------|-----|
| <b>Cue Concepts</b>             |     |
| What Is a Cue? .....            | 109 |
| <b>Creating Cues</b>            |     |
| Intensity States .....          | 110 |
| The Four Intensity States ..... | 110 |
| Setting Intensity States .....  | 111 |
| Fader Levels .....              | 111 |
| Storing .....                   | 112 |
| Modifying .....                 | 112 |
| Deleting .....                  | 113 |
| Undo .....                      | 113 |
| <b>Playback</b>                 |     |
| Basic Playback .....            | 114 |

## Chapter 7. Basic Effects

### Effects Concepts

|                                         |     |
|-----------------------------------------|-----|
| What is an Effect? .....                | 117 |
| Effects Control Panel and Windows ..... | 118 |
| Direction, Mode, and Start.....         | 119 |
| Direction .....                         | 119 |
| Mode.....                               | 120 |
| Start .....                             | 121 |
| Default Settings .....                  | 121 |

### Creating Effects

|                                        |     |
|----------------------------------------|-----|
| Creating Sets .....                    | 122 |
| Set 0 .....                            | 122 |
| Interlace, Sequential, and Random..... | 122 |
| From Effects Control Panel .....       | 123 |
| From Sets Window .....                 | 124 |
| Creating Sequences.....                | 126 |
| From Effects Control Panel .....       | 127 |
| From Sequences Window.....             | 128 |
| Background State .....                 | 129 |
| From Effects Select Displays .....     | 129 |
| From Sequences Window.....             | 130 |
| Creating Effects .....                 | 131 |
| From Keypad.....                       | 131 |
| From Effects Select Displays .....     | 132 |
| From Effects Window .....              | 133 |
| Storing Effects as Cues .....          | 134 |

### Playback

|                        |     |
|------------------------|-----|
| Basic Playback.....    | 135 |
| Submaster Display..... | 136 |

## Chapter 8. Timing/Filter Displays

### Overview

|                                             |     |
|---------------------------------------------|-----|
| Timing/Filter Features.....                 | 139 |
| General Touch Screen/Window Operations..... | 139 |

### Timing Mode

|                            |     |
|----------------------------|-----|
| Overview .....             | 141 |
| Time/Speed Formats .....   | 142 |
| Time.....                  | 142 |
| Delay .....                | 142 |
| Speed .....                | 143 |
| Timing Mode Operation..... | 143 |

### Filter Mode

|                            |     |
|----------------------------|-----|
| Overview .....             | 146 |
| Filter Mode Operation..... | 148 |

|                                              |     |
|----------------------------------------------|-----|
| <b>Dynamic State Mode</b>                    |     |
| Overview .....                               | 150 |
| Dynamic State Attributes .....               | 150 |
| Storing Dynamic States as Cues/Presets ..... | 152 |
| <b>Sneak Mode</b>                            |     |
| Overview .....                               | 153 |
| Sneak Mode Values .....                      | 154 |
| Sneak Mode Operation .....                   | 155 |
| <b>Templates</b>                             |     |
| Creating Templates .....                     | 156 |
| From Timing Window .....                     | 156 |
| From Touch Screen.....                       | 157 |

## **Chapter 9. Special Features**

|                                  |     |
|----------------------------------|-----|
| <b>Ad Hoc Groups</b>             |     |
| Overview .....                   | 161 |
| Creating Ad Hoc Groups .....     | 161 |
| From Keypad .....                | 161 |
| From Select Displays .....       | 161 |
| From Submasters .....            | 161 |
| <b>Advanced Control</b>          |     |
| Manual Timing .....              | 162 |
| QuickFocus .....                 | 162 |
| Park.....                        | 163 |
| <b>Data Copy and Move</b>        |     |
| Copy Channel .....               | 164 |
| Copy/Move .....                  | 165 |
| <b>Function Keys</b>             |     |
| Setting Function Key Option..... | 166 |
| Using Function Keys .....        | 166 |
| Store - F1.....                  | 166 |
| Selective Store - F2.....        | 166 |
| Update - F3 .....                | 167 |
| Selective Recall - F4 .....      | 167 |
| Delete - F5.....                 | 167 |
| Autoload - F6 .....              | 167 |
| At - F7 .....                    | 168 |
| Copy/Move - F8.....              | 168 |
| Sneak - F9 .....                 | 168 |
| Select - F10 .....               | 168 |
| Time - F11.....                  | 168 |
| Undo - F12 .....                 | 169 |
| Quick Keys.....                  | 169 |

**Chapter 10. Snapshots, Macros, and Board Cues**

|                            |     |
|----------------------------|-----|
| <b>Snapshots</b>           |     |
| Overview .....             | 173 |
| Storing Snapshots.....     | 174 |
| Deleting Snapshots.....    | 176 |
| Recalling Snapshots .....  | 176 |
| Snapshot Data .....        | 177 |
| <b>Macros</b>              |     |
| Overview .....             | 178 |
| Recording Macros.....      | 179 |
| Using Record Button .....  | 179 |
| From Keypad.....           | 180 |
| From Encoders Window.....  | 180 |
| Macros Data Window .....   | 181 |
| Recalling Macros .....     | 183 |
| <b>Board Cues</b>          |     |
| Overview .....             | 184 |
| Recording Board Cues ..... | 185 |
| Using Record Button .....  | 185 |
| From Keypad.....           | 185 |
| From Encoders Window.....  | 186 |
| Deleting Board Cues .....  | 186 |
| Recalling Board Cues ..... | 187 |
| Board Cues Window .....    | 188 |

**Chapter 11. Advanced Cue Features**

|                                                |     |
|------------------------------------------------|-----|
| <b>Special Cue Attributes</b>                  |     |
| Overview .....                                 | 193 |
| Link.....                                      | 194 |
| Loop .....                                     | 195 |
| Wait/Trail Time .....                          | 196 |
| Out Time .....                                 | 197 |
| <b>Advanced Cue Storing and Modifying</b>      |     |
| How Faders Affect Intensity .....              | 198 |
| Grand Master/Black Out .....                   | 198 |
| Submaster Faders .....                         | 199 |
| Command-Line Shortcuts .....                   | 200 |
| Using [+] with [Store] .....                   | 200 |
| [Store] [Store].....                           | 200 |
| Submaster Load .....                           | 200 |
| Cue Store Target.....                          | 201 |
| Cue Attribute Target.....                      | 201 |
| Miscellaneous Shortcuts.....                   | 201 |
| Creating Cue Numbers without Storing Data..... | 201 |
| Locating Stored Cues .....                     | 202 |
| Update .....                                   | 203 |

|                                                          |     |
|----------------------------------------------------------|-----|
| Selective Store .....                                    | 204 |
| Selective Recall .....                                   | 205 |
| Undo a Delete Command .....                              | 206 |
| Modifying Cues in a Submaster .....                      | 206 |
| Store, Update, and Selective Store with Submasters ..... | 207 |
| Unexpected Behavior .....                                | 207 |
| Submaster Direct Mode .....                              | 208 |
| <b>Cue Windows</b>                                       |     |
| Cue Sheet.....                                           | 209 |
| Forward/Backward Buttons .....                           | 209 |
| Separators.....                                          | 210 |
| Renumbering Cues.....                                    | 211 |
| Submasters Track Mode .....                              | 211 |
| Submasters Autoload .....                                | 211 |
| Submaster Stop/Step .....                                | 211 |
| Cue Data .....                                           | 212 |
| Cue Editing .....                                        | 213 |

## **Chapter 12. Advanced Effects Features**

|                                                   |     |
|---------------------------------------------------|-----|
| <b>Advanced Attributes</b>                        |     |
| Changing Direction, Mode, or Start Settings ..... | 217 |
| <b>Effect Timing</b>                              |     |
| Overview .....                                    | 218 |
| Effect Level Timing.....                          | 219 |
| Assigning Effects Level Timing.....               | 220 |
| From Select Displays .....                        | 220 |
| From Effects Window:.....                         | 220 |
| Cycle Count .....                                 | 221 |
| Sequence Level Timing.....                        | 221 |
| Assigning Sequence Level Timing.....              | 222 |
| From Select Displays .....                        | 222 |
| From Effects Window:.....                         | 222 |
| <b>Advanced Playback</b>                          |     |
| Stop Flags .....                                  | 223 |
| Auto Load.....                                    | 223 |
| Run/Stop Control.....                             | 224 |

## Chapter 13. Submasters

|                                            |     |
|--------------------------------------------|-----|
| <b>Submaster Overview</b>                  |     |
| Panel Submasters .....                     | 227 |
| Submasters Window .....                    | 228 |
| <b>Submaster Modes</b>                     |     |
| Using [Choose] and [Clear] .....           | 229 |
| Choose .....                               | 229 |
| Clear .....                                | 230 |
| Rate .....                                 | 231 |
| Freeze .....                               | 231 |
| Function Filter .....                      | 232 |
| Channel Filter .....                       | 233 |
| Dynamic Disable .....                      | 233 |
| Timing Disable .....                       | 233 |
| Independent .....                          | 234 |
| Manual Assign .....                        | 234 |
| Intensity Level with Manual Assign .....   | 235 |
| Bump .....                                 | 236 |
| Board Command Disable .....                | 236 |
| <b>Playback Intensity Level</b>            |     |
| How Playback Intensity is Determined ..... | 237 |
| Example Scenarios .....                    | 238 |
| Intensity Transitions .....                | 239 |
| HTP (Highest Takes Precedence) .....       | 240 |
| <b>Playback</b>                            |     |
| Advanced Playback of Cues .....            | 241 |
| Controlling Linked Playback .....          | 242 |
| Fade Times for Marked/Zero/Out Cues .....  | 242 |

## Chapter 14. System Setups

|                                       |     |
|---------------------------------------|-----|
| <b>Default Options</b>                |     |
| Settings Window .....                 | 245 |
| Default Explanations .....            | 246 |
| Emergency Action .....                | 246 |
| Startup Action .....                  | 246 |
| Date/Time Stamp .....                 | 246 |
| Units .....                           | 246 |
| Palette Store Options .....           | 246 |
| Use of Filters with Color Store ..... | 247 |
| Buttons/Keys .....                    | 247 |
| Timecode Autoswitch .....             | 247 |
| <b>Display Filters</b>                |     |
| Loading Filters .....                 | 248 |

|                                      |     |
|--------------------------------------|-----|
| <b>Multi-Console Features</b>        |     |
| Setting Up a Backup Console.....     | 249 |
| Primary and Secondary Setups .....   | 249 |
| Online Backup .....                  | 249 |
| Power Up .....                       | 250 |
| Configuring Multiple Consoles.....   | 250 |
| Disable Console.....                 | 251 |
| <b>Off-Line Programming</b>          |     |
| Performing Off-Line Programming..... | 252 |

## **Chapter 15. 3D Graphic Display**

|                                   |     |
|-----------------------------------|-----|
| <b>3D Features</b>                |     |
| Overview .....                    | 255 |
| Defining a New Venue.....         | 255 |
| Importing a Venue .....           | 256 |
| 3D Layer Control .....            | 257 |
| Exporting a Scene.....            | 257 |
| Match 3D.....                     | 258 |
| <b>3D Display Window</b>          |     |
| Defining X, Y, Z Locations .....  | 259 |
| Changing 3D Height Location ..... | 260 |
| Using 3D Graphic Window .....     | 261 |
| 3D Graphic Settings .....         | 263 |
| <b>Live/Preview Mode</b>          |     |
| Overview .....                    | 264 |
| Using Preview Mode .....          | 265 |

## **Chapter 16. Show Maintenance**

|                                             |     |
|---------------------------------------------|-----|
| <b>Data Management</b>                      |     |
| Show File Manager.....                      | 269 |
| Open New Show File .....                    | 269 |
| Open Existing Show File .....               | 270 |
| Rename, Duplicate, or Delete Show File..... | 270 |
| Backup Show File to Disk .....              | 270 |
| Import Show Data.....                       | 271 |
| Save A Copy .....                           | 272 |
| Export Patch .....                          | 272 |
| Import Patch .....                          | 273 |
| Console Log.....                            | 274 |
| Printing .....                              | 275 |
| <b>Updating Profiles</b>                    |     |
| Overview .....                              | 277 |
| Importing Profiles.....                     | 277 |
| Updating Show File Profiles .....           | 278 |

|                                                         |     |
|---------------------------------------------------------|-----|
| <b>On-Line Diagnostics</b>                              |     |
| DMX Channel Tests.....                                  | 279 |
| Error Log.....                                          | 280 |
| <b>Off-Line Diagnostics</b>                             |     |
| Overview.....                                           | 281 |
| Diagnostic Mode Operation.....                          | 282 |
| <br><b>Chapter 17. Show Control by External Devices</b> |     |
| <b>Concepts</b>                                         |     |
| About MIDI/SMPTE.....                                   | 285 |
| Input Options .....                                     | 286 |
| <b>MIDI Notes</b>                                       |     |
| Note Mapping .....                                      | 287 |
| <b>MIDI/SMPTE Timecode</b>                              |     |
| Overview.....                                           | 289 |
| Synchronizing Protocol .....                            | 289 |
| Recording.....                                          | 290 |
| Timecode Scripts Window .....                           | 291 |
| <br><b>Appendix A. Tutorial</b>                         |     |
| Overview.....                                           | 293 |
| Basic Tutorial.....                                     | 294 |
| <br><b>Appendix B. Glossary</b>                         |     |
| .....                                                   | 311 |
| <br><b>Appendix C. Technical Specifications</b>         |     |
| Weight/Dimensions.....                                  | 321 |
| Power Requirements .....                                | 321 |
| System Capacity.....                                    | 322 |
| Interface Support.....                                  | 322 |
| Optional Equipment Support .....                        | 322 |
| <br><b>Appendix D. Index</b>                            |     |
| .....                                                   | 323 |

**Appendix E. Reference Fold-Outs**

Virtuoso™ DX Console Overview ..... 329

Virtuoso™ DX Console Connections..... 330

Channel Select/Lamp Status ..... 331

Manual Control ..... 332

Select Displays ..... 333

Command-Line Keypad..... 334

Submasters ..... 335

Timing/Filter Display..... 336

# Introduction

---

## About This Manual

This manual provides necessary information regarding product safety, installation, and operation for the VARI\***LITE**® Virtuoso™ DX console. It covers the Virtuoso DX console and optional components such as the Channel Select panel.



---

**WARNING:** It is important to read ALL accompanying safety and installation instructions to avoid damage to the product and potential injury to yourself or others.

---

For assistance in learning to operate the console, a tutorial has been included in Appendix A of this manual. After completing Chapter 1: Overview and Installation, you may want to perform the tutorial if you are not familiar with Virtuoso console operation. Chapters 2-8 provide all necessary instructions in order to create a cue/effect and play it back. Chapters 9- 17 provide instructions for advanced features and show file maintenance.

---

## Additional Documentation

### Service

A service manual for extended maintenance of the Virtuoso DX console is available in both printed and electronic (PDF) formats.

- Virtuoso DX Console Service Manual (02.9668.0010)

### DMX Reference

The following VARI\***LITE** reference guides are available in electronic (PDF) format from the Customer Support page at [www.vari-lite.com](http://www.vari-lite.com):

- Series 200™ DMX Control Reference Guide (02.3004.0202)
- Virtuoso Profile Reference Guide (02.3004.0405)

For more information on DMX512 systems, refer to the following document available from United States Institute for Theatre Technology, Inc. (USITT).

- Digital Data Transmission Standard for Dimmers & Controllers plus AMX 192 Analog Multiplex Data Transmission Standard for Dimmers & Controllers. (A copy of Recommended Practice for DMX512 is included.)  
USITT Inc.  
Suite 5A, 10 West 19th St.  
New York, NY 10011-4206 USA  
Tel : (212) 924 - 9088 Fax : (212) 924 - 9343  
[www.usitt.org](http://www.usitt.org)

---

## Obtaining Additional DMX Profiles

DMX fixtures are controlled by the Virtuoso DX console using a *profile*. The profile includes the number of DMX channels required to operate the fixture and parameter mapping for console control. A wide range of profiles are included with the console software, however, in the event you require additional profiles these can be found on the Vari-Lite website at: [www.vari-lite.com/VIPA/](http://www.vari-lite.com/VIPA/). Follow the instructions at this site for downloading available profiles. To request a profile not provided on the website, please call 1-877-VARI-LITE (1-877-827-4548) or email [marketing@vari-lite.com](mailto:marketing@vari-lite.com). Please be prepared to provide the necessary information to generate the profile as required.

---

**Note:** Profiles are covered in [“Updating Profiles” on page 277](#).

---

---

## Text Conventions

The following styles and meanings are used throughout this manual:

|                                                                                     |                                                                               |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------|
| Arial Font                                                                          | Software display buttons and menu selections.<br>Example: Click on SAVE.      |
| [Button]                                                                            | Panel hard button. Example: Press [Cue].                                      |
| [Button 1 ] / [Button 2]                                                            | Button combination sequence. Press and hold button 1 while pressing button 2. |
| <Button>                                                                            | Optional button press. Example: Press <Cue>                                   |
|  | Touch screen soft button.                                                     |
|  | Macintosh® keyboard key.                                                      |

---

## Suggestions

If you have suggestions for software improvements, enhancements, or new frontiers, we'd like to hear them. Please email comments to:

[marketing@vari-lite.com](mailto:marketing@vari-lite.com)

# CHAPTER 1.

---

## Overview and Installation

This chapter provides an overview of console features, accessories, and operations, along with instructions for connecting console components.

- **Console Overview**
- **Installation Procedures**
- **Operation Overview**

*(This page intentionally blank.)*

# Console Overview


Refer to Fold-Outs  
at end of manual.

## Virtuoso™ DX Console Features


The Virtuoso™ DX console is an automated control desk capable of operating VARI\**LITE*® luminaires, DMX moving lights, and conventional lights. The console utilizes Virtuoso protocol and/or DMX512 to control the fixtures. It includes eight integrated DMX universes and supports up to 26 DMX universes with additional equipment.

The following system capacities are supported by the Virtuoso DX console:

- Control of 2,000 multiple parameter luminaires
- 2,000-10,000 cues per fixture (luminaire dependent)
- 1,000 presets
- 1,000 effects
- 100 beam selects
- 300 color selects
- 1000 group selects
- 1,000 board cues
- 1,000 macros
- 1,200 snapshots
- 30 submasters (in 3 pages)
- 26 DMX universes

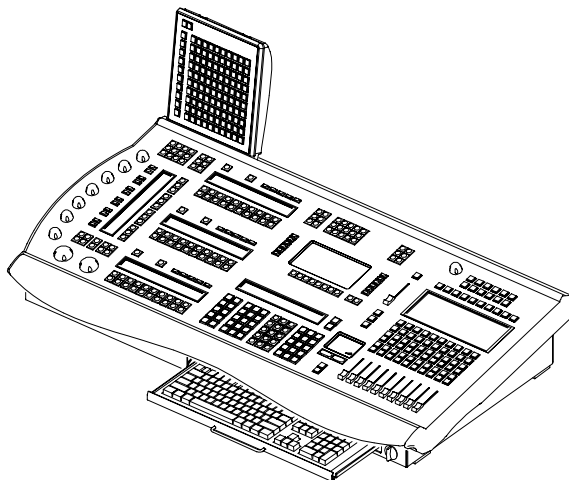

## Components

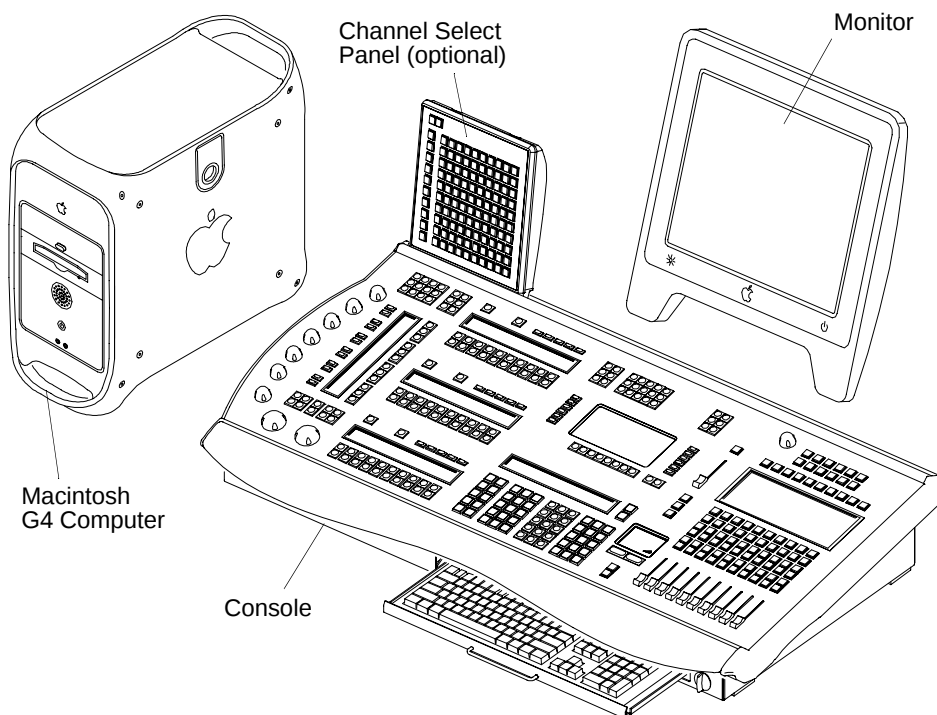

### Console

The Virtuoso DX console itself contains buttons, keypads, encoders, faders, and displays for the purpose of controlling luminaires.

### Macintosh Computer System

An Apple® Macintosh® G4 computer provides the operating system CPU, supports the display monitor(s), and provides a removable backup medium (such as a Zip® drive) and CD or DVD ROM. The removable medium is primarily for importing, exporting, and backing up show file data, while the CD/DVD ROM drive is primarily for upgrading Virtuoso DX console software.

Minimum requirements for Macintosh computer system:

- Macintosh G4 OS9 or greater
- A monitor \*
- Removable backup medium (Zip drive, etc.)
- CD/DVD-ROM

\* Additional monitors can be supported by installing additional video cards. Please call 1-877-VARI-LITE for most recent list of compatible video cards.

### Monitor Power Button Disable Modification



Some Macintosh monitors shipped with the Virtuoso DX console have been modified so that their power button is disabled. It has been discovered that there is a design defect for this product where the button can be remotely activated by cellular phone activity, resulting in shutdown of the Macintosh computer system during console operation. The following sticker applied to the back of the monitor indicates whether the power button has been disabled:

**THE POWER BUTTON ON THIS MONITOR HAS BEEN DISABLED  
SEE VIRTUOSO DX USERS MANUAL FOR DETAILS**

### Channel Select Panel (Optional)

The Virtuoso DX console supports an outboard Channel Select panel which allows instantaneous selection and visible display of up to 2000 channels. (This component is optional and is not required for console operation.)

### Accessories List

The following accessories and/or replacement items can be ordered directly from Vari-Lite. (Please order by Vari-Lite part number.)

| Vari-Lite Part No. | Accessory                                            |
|--------------------|------------------------------------------------------|
| 10.9668.0130       | CONSOLE DUST COVER                                   |
| 20.9625.0142       | CONSOLE ROAD CASE                                    |
| 20.9625.0143       | MACINTOSH COMPUTER ROAD CASE                         |
| 21.9668.0005       | CHANNEL SELECT PANEL                                 |
| 52.6616.0780       | MINI PHONE .141" MONO SHIELDED<br>2-COND SOLDER PLUG |
| 71.5001.0003       | GOOSENECK HI-INTENSITY DESK LAMP                     |
| call for details   | MACINTOSH MONITOR                                    |
| call for details   | AUXILIARY MONITOR VIDEO CARD                         |

The following accessories can be purchased from Vari-Lite or on the open market as required.

| Manufacturer | Part No.  | Accessory                                            |
|--------------|-----------|------------------------------------------------------|
| Switchcraft  | 780       | MINI PHONE .141" MONO SHIELDED<br>2-COND SOLDER PLUG |
| Digi-Key     | SC1057-ND | MINI PHONE .141" MONO SHIELDED<br>2-COND SOLDER PLUG |

# Installation Procedures


## Connecting Console & Computer Components

The Virtuoso console system will require inter-connection of the console desk and Macintosh G4 computer components.

**Note:** For more detailed information on Virtuoso system connections, refer to the Virtuoso System Installation and Checkout Manual (02.3004.0400).

### To connect components:


- Step 1. Connect power/data cable from primary monitor to first (top) monitor port at Macintosh computer. (Connect secondary monitors to additional video ports as required. Additional video cards will not be installed unless requested.)

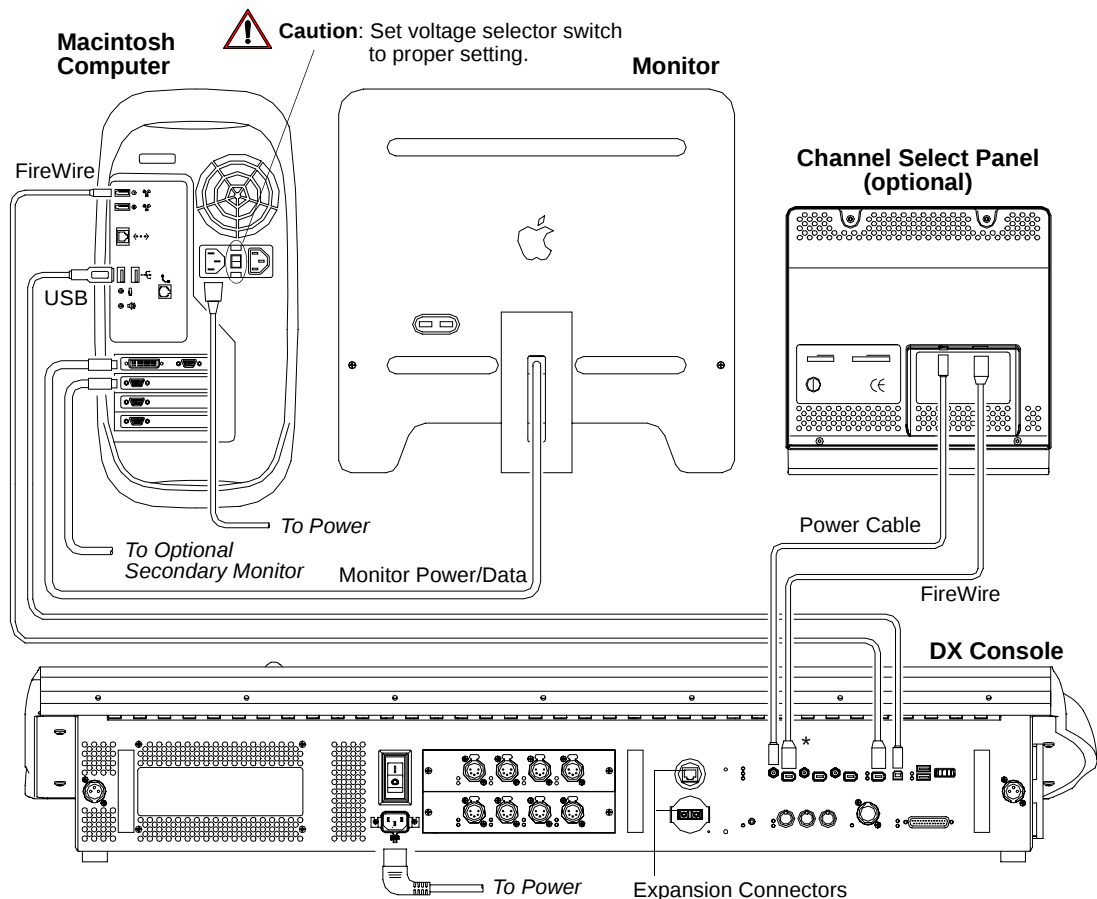

\* Note: Any of the three Aux ports can be used to connect the Channel Select panel.

- Step 2. Connect FireWire® from console CPU port to either comm port (1 or 2) at Macintosh computer.

- Step 3. Connect USB cable from console USB port to either USB port (1 or 2) at Macintosh computer.
- Step 4. Connect system comm cable (Ethernet or Fiber) to appropriate console SYSTEM COMM port.
- Step 5. Connect power cable to console. (Console requires: 2.0 A at 120 V 50/60 Hz or 1.0 A at 240 V 50/60 Hz). Lock power cable in place by tightening retaining bracket as shown.

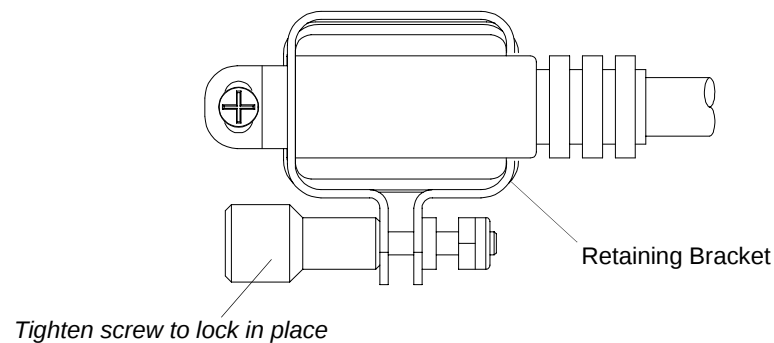


- Step 6. Connect power cable to computer. Ensure that voltage selector switch on back of computer is set correctly.
- Step 7. If applicable, connect Channel Select FireWire and power cables to console.

---

## Keyboard Lock/Unlock


The pull-out drawer for the Macintosh alpha-numeric keyboard can be locked in place for transport. To unlock drawer, turn knob clockwise. (Once drawer has been pushed in, turn knob counter-clockwise to lock.)

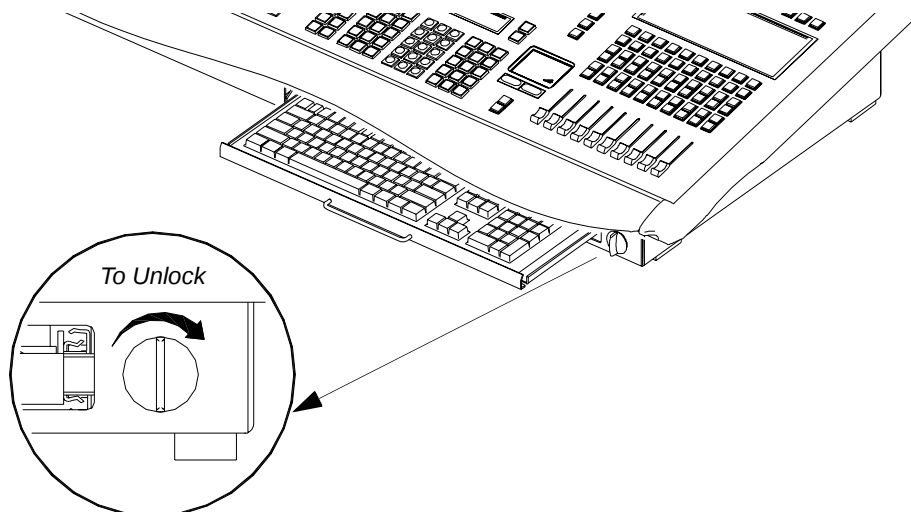



## Connecting Additional Components

Additional components, such as MIDI devices, are connected at the console rear panel.

### DX Console (Desk) Rear Panel

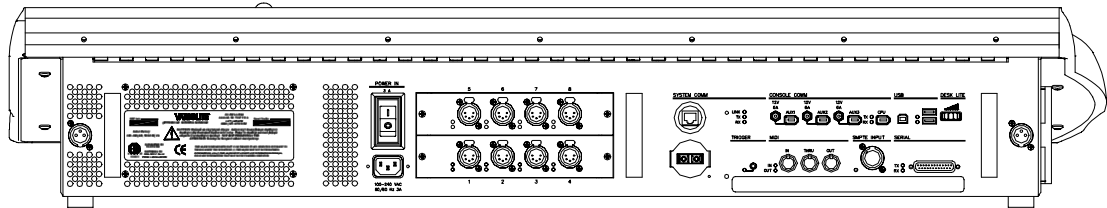


Connectors are designated as follows:

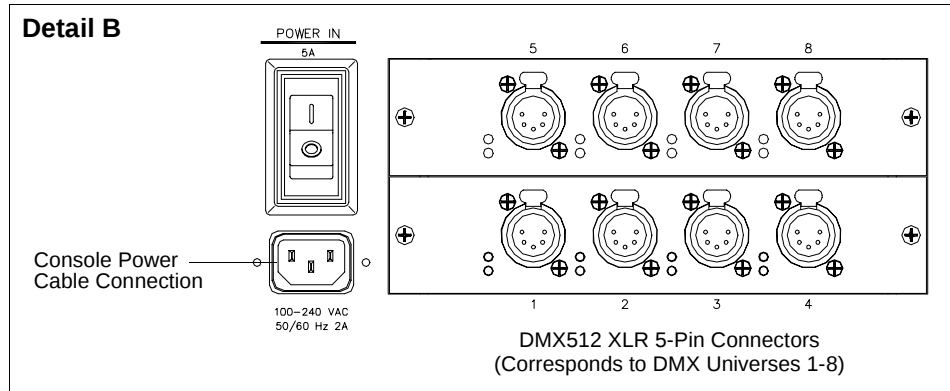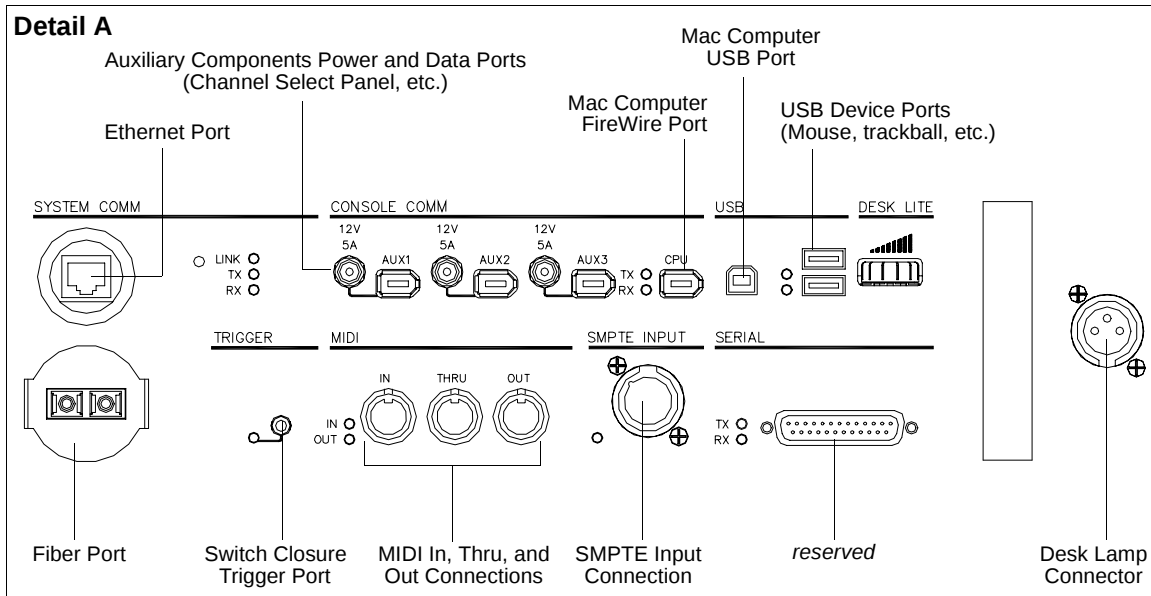


## Installing Desk Lamps

Install desk lamps at console rear panel.

**DX Console (Desk) Rear Panel**

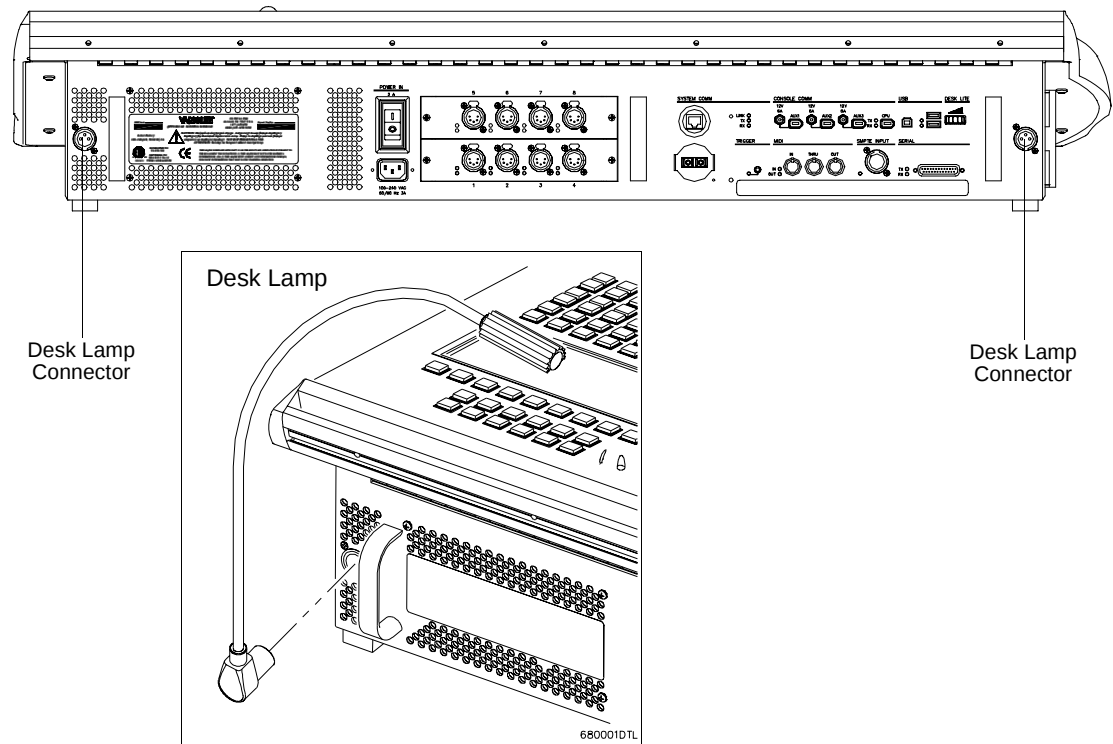

The brightness of the desk lamps can be adjusted at the console rear panel using the intensity knob.

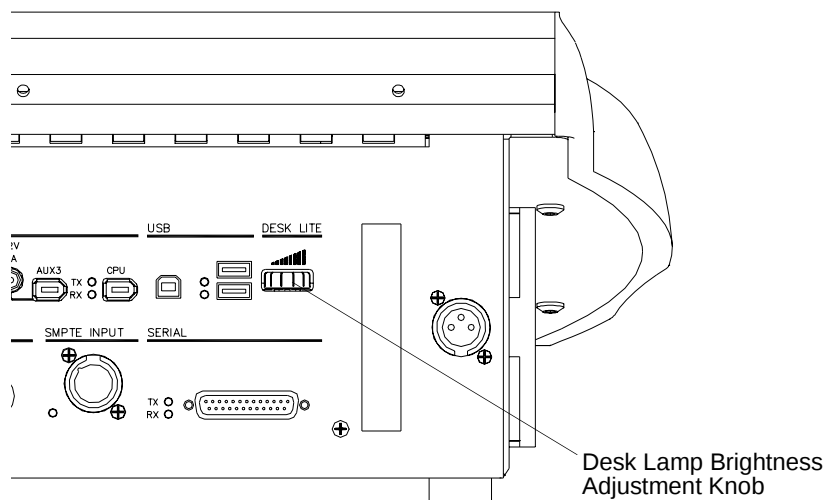


# Operation Overview

## Window Interaction

### Menus and Button Bar

The Virtuoso application displayed in the monitor functions just as any standard Macintosh application.

A menu bar provides access to file management commands and Virtuoso system windows. Virtuoso windows can also be accessed using the button bar at the bottom of each installed monitor. Clicking the soft button with the cursor will open the window (in the event it is closed), bring it to the front (if already open, but hidden), or close it (if in the front). Clicking the far-left button (with the underlined name) will page through the button bars to provide access to different Virtuoso windows and navigation controls.

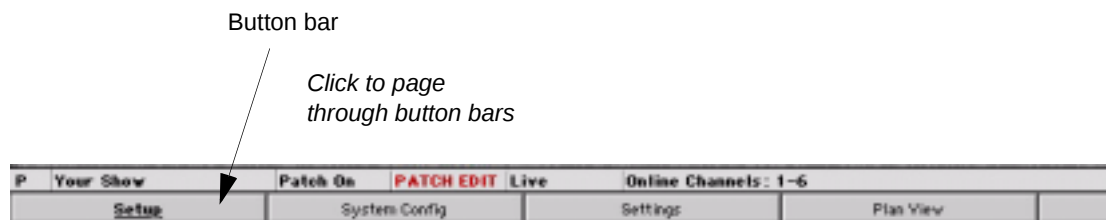

### Entering/Editing Window Data

The Macintosh keyboard can be used to type in alpha-numeric entries or select cells and fields in the windows.


- Pressing  closes the entry field.
- Pressing  automatically selects the next cell down in the column for editing.
- Pressing  /  automatically selects the next cell up in the column for editing.
- Pressing  selects the next cell or field in a row.
- Pressing  /  selects the previous cell or field in a row.
- Use arrow buttons to move cursor through fields.

The trackpad can be used to manipulate the cursor for field/cell editing, clicking radio buttons, accessing pop-up menus, moving windows, or closing windows.




## Closing Windows

Just as with any Macintosh application, windows can be closed by clicking the box in their left-hand corner. Windows can also be closed from the File menu by selecting Close Window.

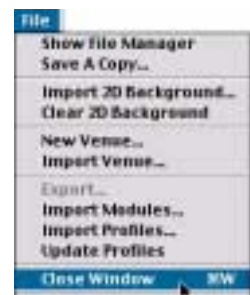

## Status Indicator Bar

Several indicators available at the lower portion of the screen provide an indication of current console status and operations.

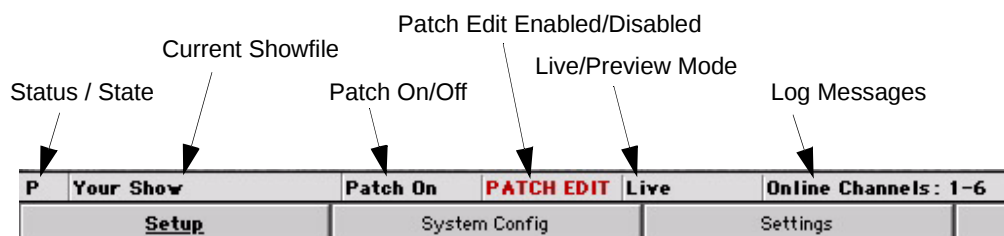

### Status/State

Indicates the console state or status in relationship to communication between the Macintosh CPU and Console Interface Card (CIC). The following indications may be displayed:

- P - Primary console.
- PP - Primary Prep: where the Mac opens the show file and initializes the CIC for downloads.
- PL - Primary Load: where the show file is loaded to the CIC and Mac.
- PS - Primary Select: where a show file back up is being made or other action is occurring where the CIC is not immediately available for changes.

- U - Unknown state: where the CIC is no longer responding.
- \*\* - No CIC reply: where the CIC is not available or ready.
- NL - Net Listen: where the console checks for other active consoles on the network.
- ML - Mac Listen: where the CIC checks for a local Mac. (Not usually displayed.)
- S - Secondary console.
- SP - Secondary Prep: where the secondary console syncs the show file and saves it to disk.
- SL - Secondary Load: where the secondary console loads the show file to the CIC.
- WP - Waiting for Primary: appears while the Waiting For Primary Dialog is open.

### **Current Showfile**

Displays the name of the currently open show file.

### **Patch On/Off**

Indicates whether patch is turned on or off. (Patch On/Off will be covered in the next chapter.)

### **Patch Edit Enabled/Disabled**

"Patch Edit" is displayed when patch is enabled from the Patch menu.

The box is blank when patch is disabled from the Patch menu.

### **Live/Preview Mode**

Indicates whether the console is in the Live or Preview mode.



The Live Mode is used for live editing. While the [Live] button is selected, any manual control actions or event recalls (cues, effects, dynamic states, etc.) will be executed, in real time, on stage.



The Preview Mode is used for preview editing. While the [Preview] button is selected, any manual control actions are stored to the appropriate luminaires, but are not executed on stage.

Refer to [“Live/Preview Mode” on page 264](#) for complete instructions on this feature.

### **Log Messages**

Messages highlighting in the Log Message box are the same messages collected in the Console Log (refer to [“Console Log” on page 274](#)).

# Routine Care and Maintenance

---

## Fiber Optic Connectors

In some cases, data (measured in microns) is broadcast from the console to the system by use of fiber optic cables. Since the surface area of these cable connectors is very small, special care must be taken to ensure fiber optic cleanliness. The slightest dust, scratch, or liquid film residue in contact with the data transmission portion of the connector can result in loss of data integrity.

**To maintain connector cleanliness:**

- Always cap ends of all connectors when cables are not terminated. If cap is not available, tape a small piece of clean paper over end of cable (do not jam paper into the connector).
- Protect connector cap from dust, dirt, and moisture as much as possible.

Special precision connectors are utilized to ensure proper cable alignment and maximize protection for the exposed fiber optic cable ends. As a result, cleaning of the connector and fiber optic ends should not normally be required. However, in the event an unprotected connector is exposed to a contaminated environment, the connector may require cleaning. Refer to Virtuoso DX Console Service Manual (02.9668.0010).

---

## Cleaning the Console

### Console Panel Surfaces

In the event the console surface requires cleaning, window cleaner can be used.



---

**CAUTION:** Apply window cleaner to cloth first. Do not spray directly on console panel surface.

---

- Step 1. At Virtuoso menu, select Shut Down.
- Step 2. At rear of console, set power switch to OFF position.
- Step 3. Disconnect AC input cable from power source.
- Step 4. Apply window cleaner sparingly to clean, white, lint-free cloth.
- Step 5. Wipe outside surface of console with cloth.

### Console Displays

In the event the console panel displays require cleaning, 99% Isopropyl alcohol can be used.



---

**CAUTION:** Use caution when handling displays. Avoid touching or scratching optical surfaces.

---

- Step 1. At Virtuoso menu, select Shut Down.
- Step 2. At rear of console, set power switch to OFF position.
- Step 3. Disconnect AC input cable from power source. Apply a small amount of isopropyl alcohol to a clean, white, lint-free cloth.
- Step 4. Clean displays by gently wiping with cloth.

# CHAPTER 2.

---

## Power Up and Patch

This chapter shows you how to power up and patch your system so that you will have control of the connected devices.

- **Power Up - DMX Systems**
- **Power Up - VARI\**LITE* Systems**
- **Patch**
- **Patch Editing**

*(This page intentionally blank.)*

## Power Up - DMX Systems


---

### Powering Up Console

Once your Virtuoso DX console has been connected to the system, you will need to power up the console and verify status of the connected devices.

**To power up console and verify system connections:**

- Step 1. At rear of console, set power switch to ON position.
- Step 2. At Macintosh computer, press power button.
- Step 3. Wait for console panels to initialize and Virtuoso application to launch. A new show file (or last open show file) will automatically open.
- Step 4. Verify that your console appears in System Configuration window. Refer to [“System Configuration Window” on page 20.](#)

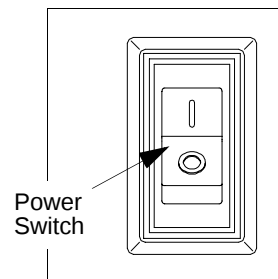

---

### Powering Down Console

When powering down the console for storage or in the event a restart is required, use the following procedure.


**To power down console:**

- Step 1. At Virtuoso menu, select Shut Down.
- Step 2. At rear of console, set power switch to OFF position.

## System Configuration Window

When in a DMX environment, the System Configuration (Config) window displays the console icon. This allows access to console naming and software version information. It also displays the offline indicator when the system is running in offline mode (refer to [“Off-Line Programming” on page 252](#)).

To open System Configuration window, select System Config at Setup menu.

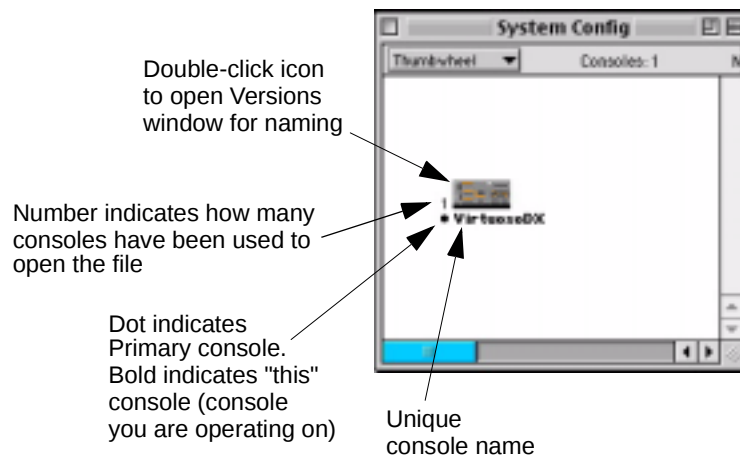

The window displays and keeps track of the following information:

- **Console hardware ID number.** A unique ID number will be generated for each console that opens a single show file. When a new show file is created, the console ID number will always be (1) one.

## Power Up - VARI\*LTE Systems


---

### Powering Up Console

Once your Virtuoso DX console has been connected to the system, you will need to power up the console and verify status of the connected devices. The System Configuration window displays each device's thumbwheel address, which can then be used to patch your system.

**To power up console and verify system connections:**

- Step 1. At rear of console, set power switch to ON position.
- Step 2. At Macintosh computer, press power button.
- Step 3. Wait for console panels to initialize and Virtuoso application to launch. A new show file (or last open show file) will automatically open and System Configuration window will open within the show file.
- Step 4. Verify that your lighting system devices appear in System Configuration window (this verifies that data communication is present). Refer to [“System Configuration Window” on page 22](#). If any devices are not present, check system connections and power.
- Step 5. Once everything is verified as online, store configuration. Refer to [“Store Configuration” on page 24](#).

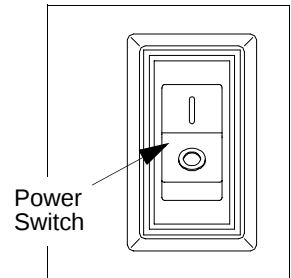

---

### Powering Down Console


When powering down the console for storage or in the event a restart is required, use the following procedure.

**To power down console:**

- Step 1. At Virtuoso menu, select Shut Down.
- Step 2. At rear of console, set power switch to OFF position.

## System Configuration Window

When in a VARI\*LITE environment, the System Configuration (Config) window is a representation of your physical system of consoles, NIF units, VARI\*LITE luminaires, and interface devices (i.e. UDM™ unit, SPC-36™ interface). The window is associated with a specific show file so that you can keep track of system information based on each show. To open System Configuration window, select System Config at Setup menu.

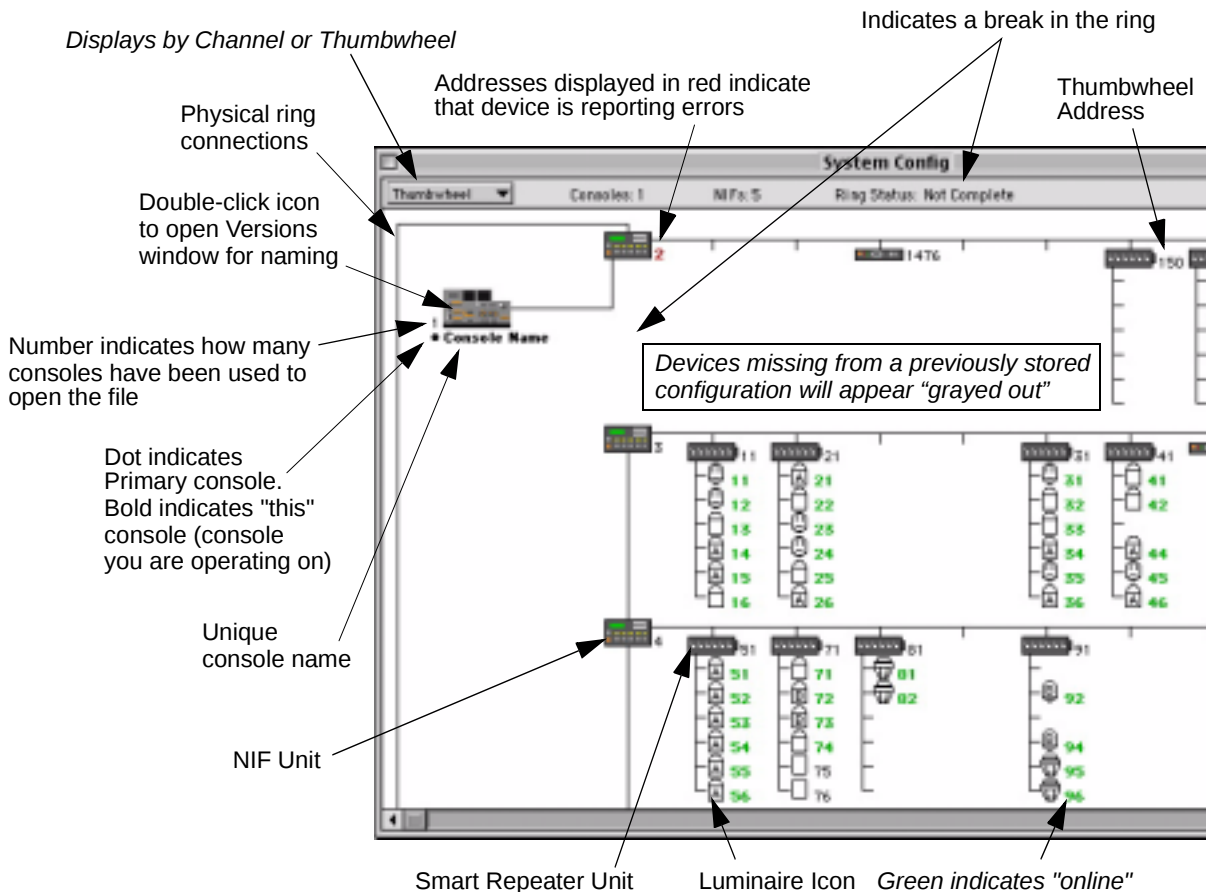

The window displays and keeps track of the following information:

- Device Icon.** An icon which represents the specific device type is displayed in relation to its position in the system. In stored configurations, the icon may appear "grayed out" if the device is not online to indicate a problem. Double-click the device to bring up the Device Info window which shows messages for that device (also see ["Error Log" on page 280](#)).
- Channel/Thumbwheel Address.** Channel assignment or thumbwheel address (depending on setting) is displayed for each device. This number will change from black to green as the device comes online. If the device is reporting any errors, the number will be displayed in red.

- **Console hardware ID number.** A unique ID number will be generated for each console that opens a single show file. When a new show file is created, the console ID number will always be (1) one.
- **Physical Ring.** The System Configuration window represents your system's physical "ring" of devices. The consoles and devices are displayed and connected by cabling lines in their actual order in the system. If a device is off-line or not communicating, this will be reflected by a break in the ring.
- **NIF Icon.** The NIF icon is displayed in color with an indication to show if the DMX board is not online. If the box in the right-hand corner is red, the board is not online (or not installed).

## Console Naming

The console naming feature is useful when two consoles are connected to a single system - also refer to [“Setting Up a Backup Console” on page 249](#) - to identify each console. For example, you could name the consoles "Main" and "Backup." For each console, the name is displayed in its Versions window and underneath its System Configuration icon.

---

**Note:** A console displays its own name in bold print underneath the icon. All others will appear in regular print.


---

### Name a console:

- Step 1. At System Configuration window, double-click icon of console to be named or at Virtuoso icon menu, select Versions... Versions window will open.
- Step 2. At name field, type console name.
- Step 3. Close window. (Name can be changed at anytime by re-opening window and typing in new name.)



Type name for console

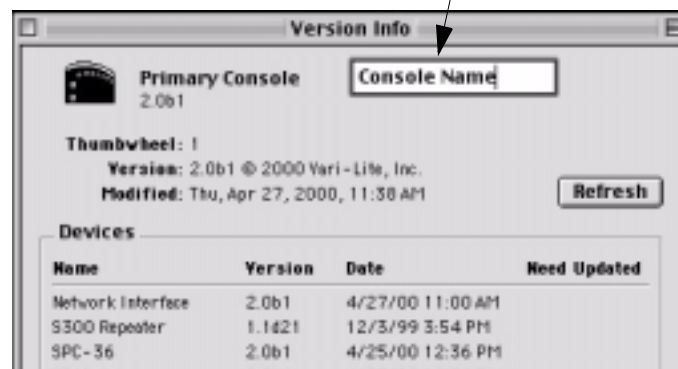

## Store Configuration

Your system setup displayed in the System Configuration window can be stored for future reference. Once stored, in the event a device is not online when the system is powered up, the missing device's icon would appear "grayed out" in the window. This aids in detecting online problems by showing where an item should be if it is not reporting back.

### Store a system configuration:

- At Special menu, select Store Configuration.

### Clear a stored configuration:

- At Special menu, select Clear Stored Configuration.

## Update Configuration

In the event a new device(s) is added to your system while the console is powered up, the system can be repolled so that the new device(s) will appear in the System Configuration window. (This is not related to the "Stored Configuration" function.)

### Update a configuration:

- At Special menu, select Update Configuration.



# Patch

## Overview

Patching is the simplest way to manage the luminaires connected to the console. Patch associates a single control channel with a single luminaire so that you can select one channel at the console and have control of all the luminaire's parameters (intensity, color, beam, etc.). The patch operates by creating a look-up table that the console uses to translate a luminaire's associated thumbwheel address(es) into a single control channel.

### DMX Fixtures

DMX fixtures must be patched to the Virtuoso DX console using a *profile* in order to be controlled. Patching connects the fixture to a DMX universe and allows its thumbwheel address to be associated to a control channel. A DMX profile includes the number of DMX channels required to operate a fixture and parameter mapping for console control. Patching any fixture to the Virtuoso DX console requires a thumbwheel address. The address is not a setting made at the fixture, but must be included and must not be used by any other device in the system. This enables fixtures to be accessed in PATCH OFF mode.

### VARI\***LITE** Luminaires

VARI\***LITE** luminaires are patched directly by their thumbwheel address. This address is determined by the port connection at the Smart Repeater™ unit. The patch logically associates the "soft" thumbwheel address to the control channel. Luminaire lamp power may be controlled by the SPC-36 interface. In this case, the patch combines the thumbwheel from the Smart Repeater unit and the corresponding thumbwheel from the SPC-36 interface to enable *start*, *douse* and *standby* lamp functions, as well as, all parameter controls when the luminaire's control channel is selected.

### Patch ON

Patch ON is the default setting when opening a new show file. Patch must be turned on for channel selection to operate by channel number instead of thumbwheel address. The Patch ON setting is available at the Patch menu.

If patch is turned off, select "Turn Patch On" to enable patch again.



The patch indicator lets you know whether patch is currently on or off.



Patch Indicator


**Note:** PATCH OFF will not allow control of DMX luminaires that have not been patched into the show file.

## Setting Up Plan View Window

Devices are patched using the Plan View window. The Plan View appearance can be set up as required.

### To setup plan view window:

- Step 1. At Operation menu, select Plan View. Plan View window will open and 2D Display menu will become available on menu bar.
- Step 2. At Patch menu, select Enable Editing. Icon bar and grid will appear in Plan View window and Patch menu selection will change to "Disable Editing". "Save Editing" option will also be activated.

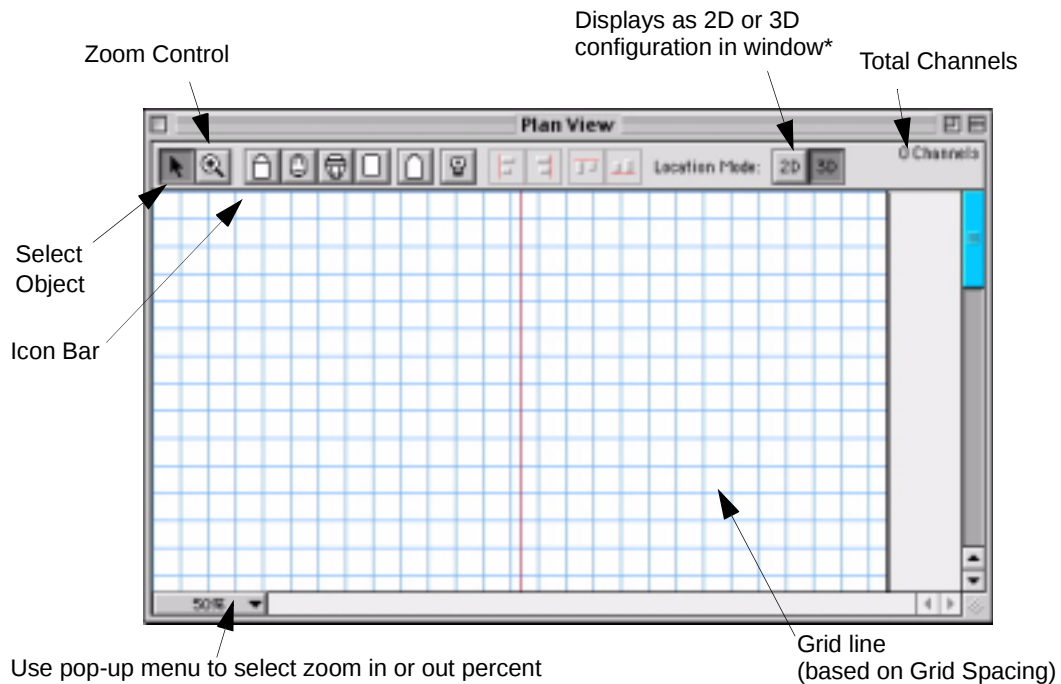

\* Refer to "2D/3D Mode Guidelines" on page 37 for more information.

**Tip** ➡ You can periodically save editing changes to the Plan View without disabling editing, by selecting Save Editing at the Patch menu.

Step 3. If required, define plan view drawing size:

- At 2D Display menu, select Drawing Size... Drawing Size window will open.
- Enter size, scale, and point of origin (X/Y coordinate) for drawing (refer to [“Match 3D” on page 258](#) for instructions on using this feature). (The default unit of measure is English. To configure console for Metric units, refer to [“Settings Window” on page 245](#).)
- Click Ok.



Step 4. If required, define grid size (spacing between grids):

- At 2D Display menu, select Grid Size... Grid Spacing window will open.
- Enter grid spacing and select inches or feet at pop-up menu. (The default unit of measure is English. To configure console for Metric units, refer to [“Settings Window” on page 245](#).)
- Click Ok.
- At 2D Display menu, enable or disable Snap To Grid option (enabled when checked).



Step 5. Display luminaire icons in a two-dimensional or three-dimensional location mode by clicking on either 2D or 3D. Refer to [“2D/3D Mode Guidelines” on page 37](#) for important information regarding this feature.

## Plan View Background Picture

A 2D background picture can be imported for use in the Plan View window. The console will accept the following 1:1 format files:

- \*.dxf
- \*.dwg

### To import Plan View background picture:

- At File menu, select Import 2D Background...



## Patching DMX/Conventional Fixtures

The console provides for a maximum of 26 universes (labeled A thru Z), which are assigned to DMX buses or "hosts" (hardware outputs within the system). This means that the actual amount of buses available will depend on your system setup. The Virtuoso DX console contains two DMX cards, each supporting four universes. Other VARI\*LITE interfaces which include DMX buses are the UDM unit (one bus) and the NIF unit (two buses). These buses and their starting thumbwheel addresses can be configured using the DMX Setup window.

### To define DMX universes:

- Step 1. If necessary, at Patch menu, select Enable Editing. (Must be enabled to edit window.)
- Step 2. At Patch menu, select DMX Setup. DMX Setup window will open.
- Step 3. For each required universe, do the following:
  - a. Using cursor, select universe by letter (A-Z).
  - b. Select DMX Host. (If NIF is selected, also select Bus A or B.)
  - c. For NIF or UDM units, enter thumbwheel address.
  - d. Click Set.



DMX Universe (A-Z) -  
Must be assigned to a device  
(UDM, NIF, etc.) by thumbwheel address


DMX channel assignments  
for selected universe

For use with DMX  
diagnostics feature \*

Thumbwheel assignment

NIF bus assignment (Only  
available when NIF is selected  
since NIF has two buses)


not yet implemented

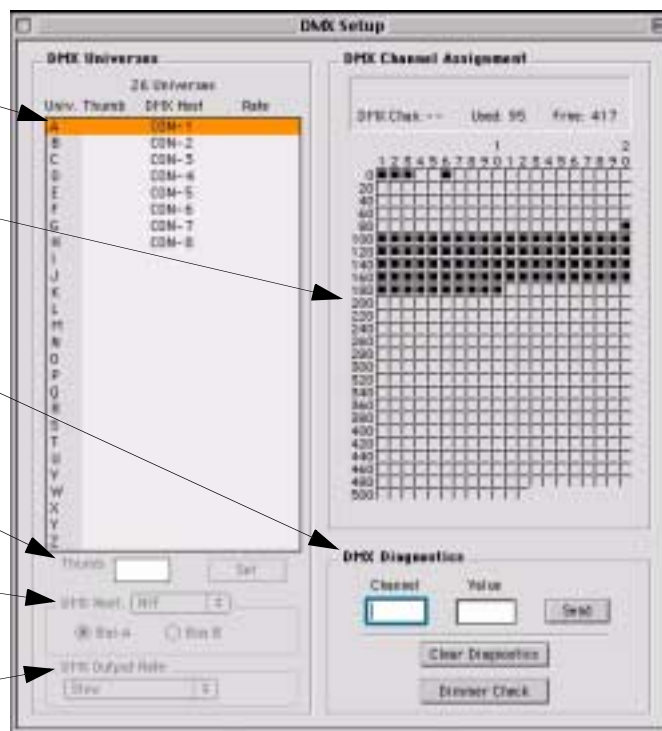

\* For instructions on using DMX diagnostics, refer to "DMX Channel Tests" on page 279.

### To patch a DMX or conventional fixture:

Depending on whether you are patching a generic DMX fixture or a conventional fixture, a slightly different patch window will open when you drop the respective icon into the Plan View window.

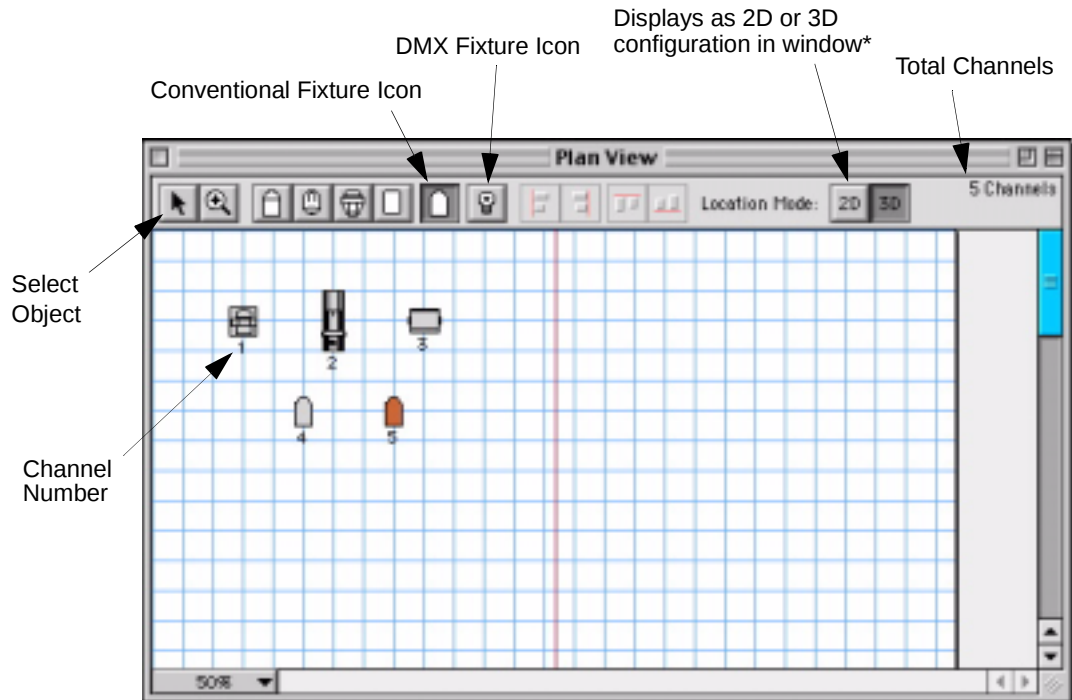

\* Refer to “2D/3D Mode Guidelines” on page 37 for more information.


- Step 1. At Plan View window icon bar, select either DMX or conventional fixture icon as required.
- Step 2. At desired location on plan view, click to place icon. Appropriate DMX or Conventional Patch window will open.
- Step 3. At DMX or Conventional Patch window, do the following:
  - a. At Device pop-up menu, specify fixture profile type.
  - b. At Address column, enter appropriate channel and thumbwheel information.
  - c. At Lamp Control column, specify lamp source and preheat level as required. (Preheat values of 0 to 9 percent may be assigned for incandescent luminaires.)
  - d. At Focus column, define any special focus instructions as required to sync mirror fixtures for pan and tilt actions.

e. Do one of the following as required:

- 1) *For automated luminaires:* use DMX Base Channel pop-up menu to assign a DMX universe. Enter luminaire DMX starting address in field beneath universe setting. (Ending address will be generated according to profile used.)
- 2) *For conventional luminaires:* in DMX Address column, assign DMX universe. Using range entry fields beneath display column; add, change or remove addresses. (Left field is for single channel entry.)

To add scrollers, click Add Scroller box beneath device popup menu. In Scroller column, assign a DMX universe. Using range entry fields beneath display column; add, change or remove addresses. (Left field is for single channel entry.)

(Refer to next page for snapshot of Conventional Patch window)

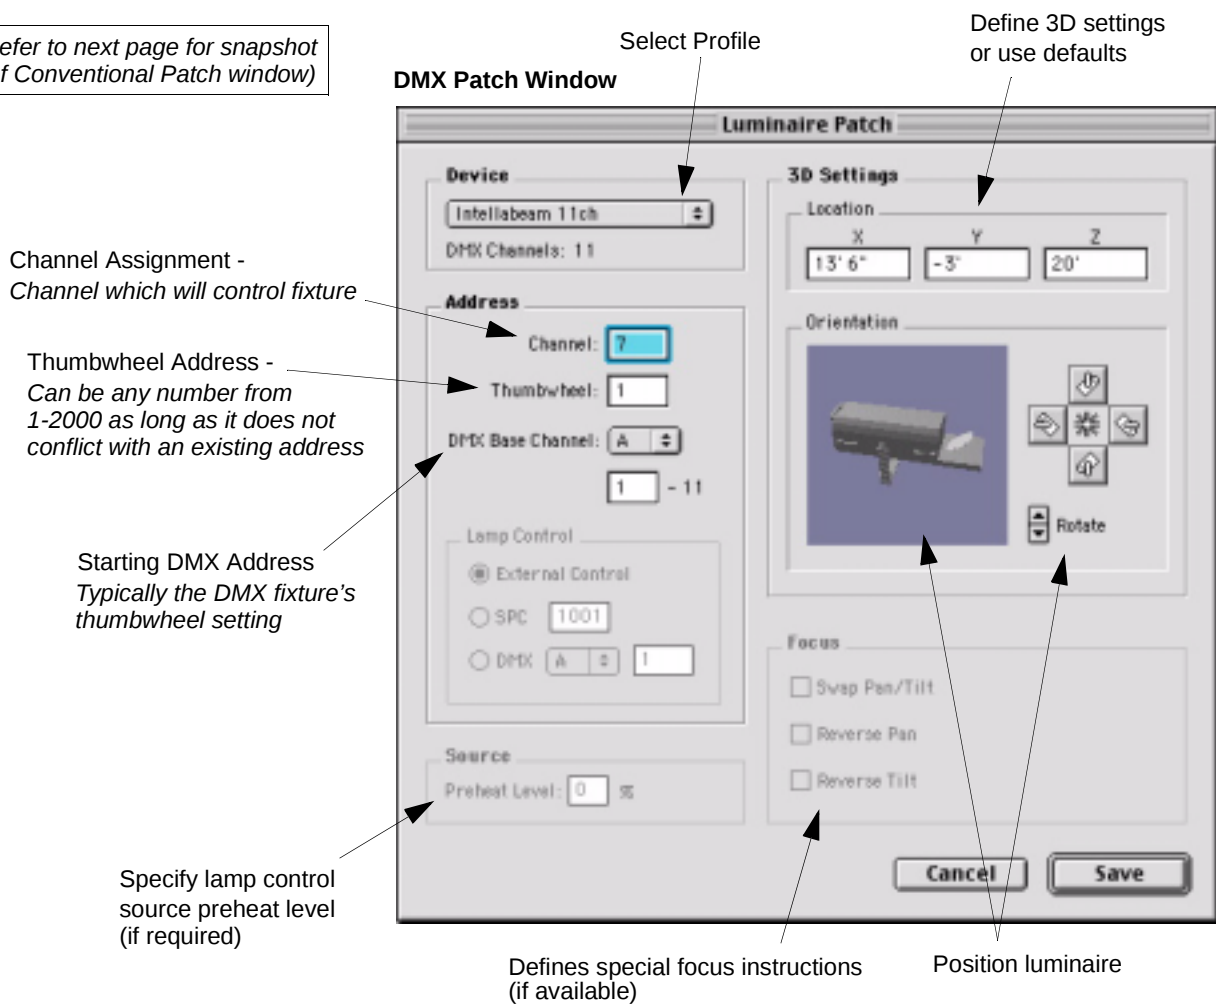


**Note:** The next three steps are only required if you intend to use the console's 3D graphic features. For more information regarding these coordinates, refer to [“Defining X, Y, Z Locations” on page 259.](#)

- f. Use default 3D X, Y, and Z coordinates or enter new ones.
- g. Use Position pop-up menu to specify luminaire orientation and location (i.e. hanging, floor mount, stage left, etc.).
- h. Use pointer or Rotate arrows to rotate luminaire to required position.
- i. When finished, click Save.

Step 4. Repeat Steps 1-3 for each DMX luminaire in your system.

Step 5. When all luminaires are defined in your patch, at Patch menu, select Disable Editing. (This prompts a dialog allowing you to save editing.)

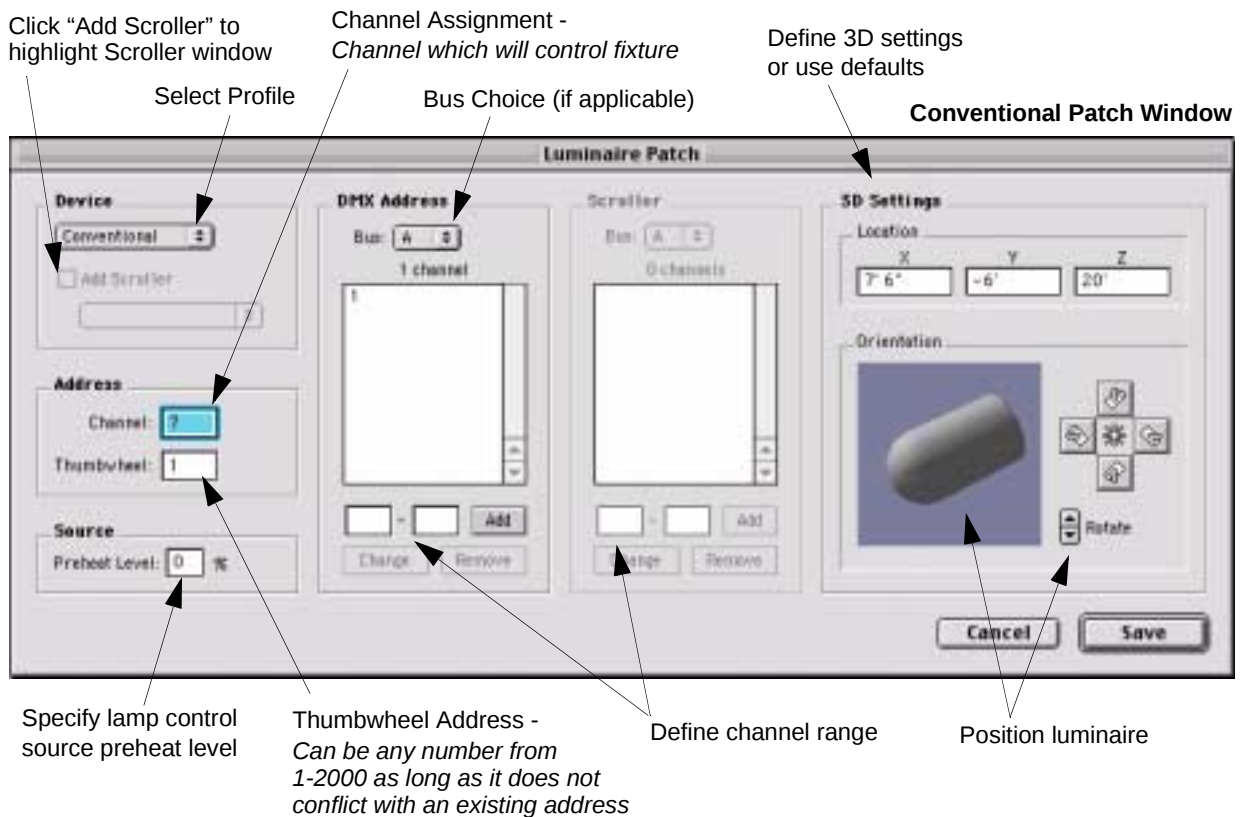


## Patching VARI\*LITE Luminaires

Use this procedure to patch VARI\*LITE interface devices, Series 300™ luminaires, and lamp power supplies.

**Note:** This patch procedure does not work for VL2 or VL4 luminaires. Series 200 luminaires must be patched using the DMX procedure. Refer to [“Patching DMX/Conventional Fixtures” on page 28](#).

- Step 1. At Plan View window icon bar, select a VARI\*LITE luminaire icon as required.
- Step 2. At desired location on plan view, click to place icon. Luminaire Patch window will open.

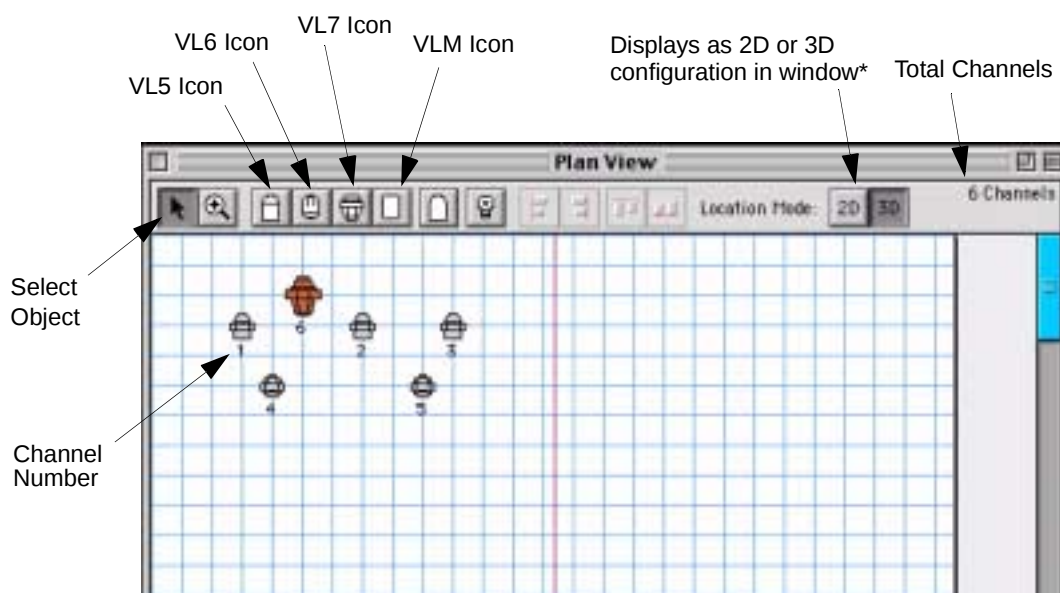

\* Refer to [“2D/3D Mode Guidelines” on page 37](#) for more information.


- Step 3. At luminaire Patch window, do the following:
  - a. At Device pop-up menu, specify luminaire profile type (VL5, VL5Arc, VL5B, VL6, VL7, etc.).
  - b. At Address column, enter appropriate channel, thumbwheel, and bulb thumbwheel information. (Thumbwheel addresses can be obtained from the System Configuration window if necessary.)
  - c. Specify lamp source and preheat level as required. (Preheat values of 0 to 9 percent may be assigned for incandescent luminaires).

**Note:** The following three steps are only required if you intend to use the console's 3D graphic features. For more information regarding these coordinates, refer to [“Defining X, Y, Z Locations” on page 259.](#)

- d. Use default 3D X, Y, and Z coordinates or enter new ones.
- e. Use Position pop-up menu to specify luminaire orientation and location (i.e. hanging, floor mount, stage left, etc.).
- f. Use pointer or Rotate arrows to rotate luminaire to required position.

**Tip** ➡ After the first luminaire's icon has been placed and its information defined in the Luminaire Patch window, you can place multiple icons without having the luminaire patch window open each time. To do this, hold down **Option** while dropping icons.

- g. When finished, click Save.

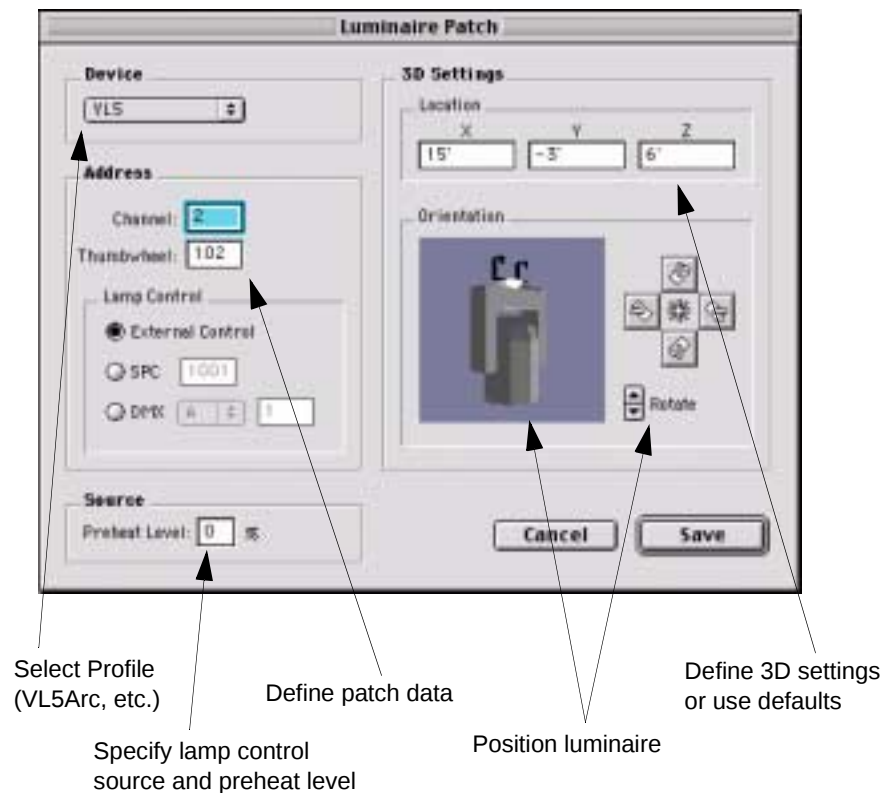

- Step 4. Repeat Steps 1-3 for each VARI\*LITE luminaire in your system.
- Step 5. When all luminaires are defined in your patch, at Patch menu, select Disable Editing. (This prompts a dialog allowing you to save editing.)


**Check online status:**

Verify that the patch is correct by checking the online status of your luminaires. Any channel that is up and running, communicating, and has all of its show data is considered online.



Step 1. At manual control panel, press [Online]. All online luminaires will light in Channel Select window or Channel Select panel (if installed).

Step 2. Press [Online] again to exit status mode.

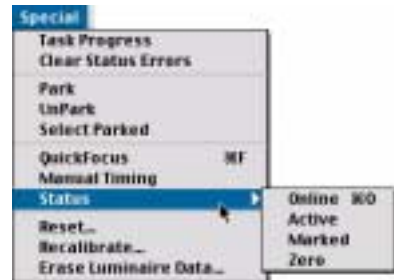

---

**Note:** This can also be done using the menu command.

---

# Patch Editing

## Editing Windows


Once entered, patch data can be edited at the Plan View window or Patch window. Save changes by selecting Save Editing or Disable Editing at the Patch menu.

### Plan View

Depending on whether Patch Editing is enabled, the Plan View window will be displayed differently.

#### With Patch Editing Enabled


- Move icons to new locations with the selection tool (while holding down the trackpad button).
- Select multiple icons by dragging a box around them or by holding down Shift button while selecting.
- Double-click any icon to bring up its associated patch data window.
- Change the 3D height location (Z coordinate) of selected luminaires. Refer to [“Changing 3D Height Location” on page 260](#).
- Delete icons using the alpha keyboard.

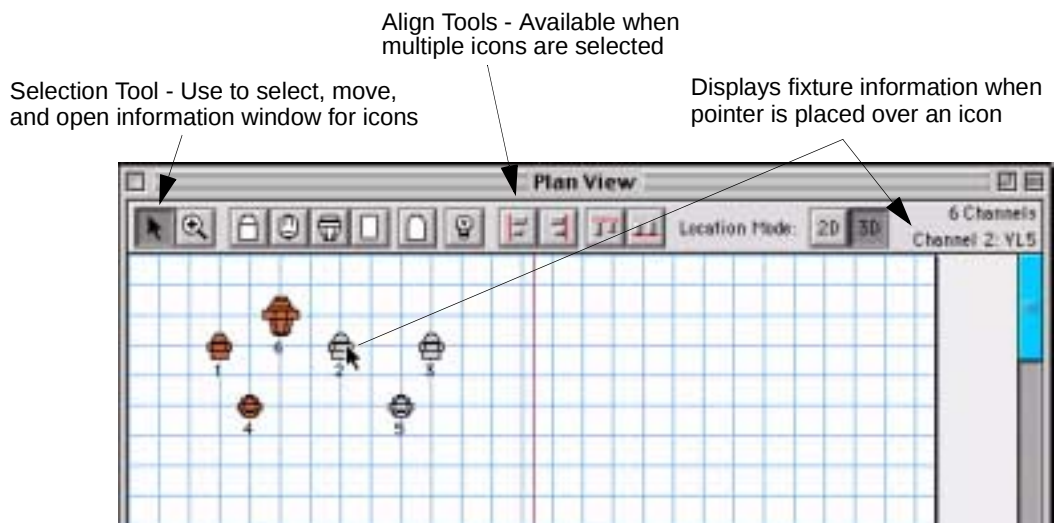

**Note:** Selections made in the Plan View window while editing is Enabled will not be reflected at Channel Select window or optional Channel Select panel.

## With Patch Editing Disabled

- Use View Select pop-up menu to view status data based on channel, thumbwheel, or any other parameter data as required. For example, selecting Pan would display the pan coordinate for each luminaire.
- Select icons by clicking on them. Select multiple icons by dragging a box around them or by holding down **Shift** button while selecting.
- Selected icons (channels) in the Plan View window (while editing is Disabled) will also be selected for manual control at the Channel Select panel. Refer to [“Selecting Channels” on page 41](#). Click in an open space to deselect all icons.

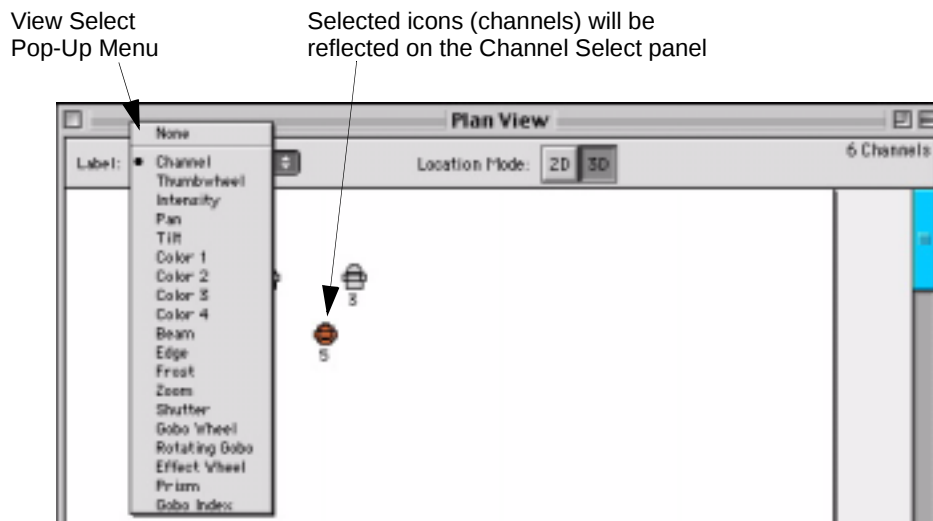

## Patch

The Patch window displays patch information in a spreadsheet format. Data can be viewed at any time and edited when patch editing is enabled.


- At Setup menu, select Patch. Window will open.
- View and/or edit information as required using cursor and alpha-numeric keyboard.
- Click on a column heading block to sort information by that type.



| Patch  |         |       |      |          |         |          |          |      |         |          |
|--------|---------|-------|------|----------|---------|----------|----------|------|---------|----------|
| Device | Channel | Thumb | Bulb | Bulb Hst | Preheat | DMX Ctrl | DMX Host | Swap | Rev Pan | Rev Tilt |
| VL6    | 11      | 150   | 1801 |          | 0       |          |          |      |         |          |
| VL6    | 12      | 152   | 1802 |          | 0       |          |          |      |         |          |
| VL6    | 13      | 153   | 1803 |          | 0       |          |          |      |         |          |
| VL6    | 14      | 155   | 1481 |          | 0       |          |          |      |         |          |
| VL6    | 15      | 126   | 1489 |          | 0       |          |          |      |         |          |
| VL6    | 16      | 127   | 1490 |          | 0       |          |          |      |         |          |
| VL6    | 17      | 128   | 1491 |          | 0       |          |          |      |         |          |
| VL6    | 18      | 357   | 1508 |          | 0       |          |          |      |         |          |
| VL6    | 19      | 11    | 1001 |          | 0       |          |          |      |         |          |
| VL6    | 20      | 12    | 1002 |          | 0       |          |          |      |         |          |

## 2D/3D Mode Guidelines

The relationship between the 2D and 3D modes are important to understand when placing icons and editing in the Plan View window.

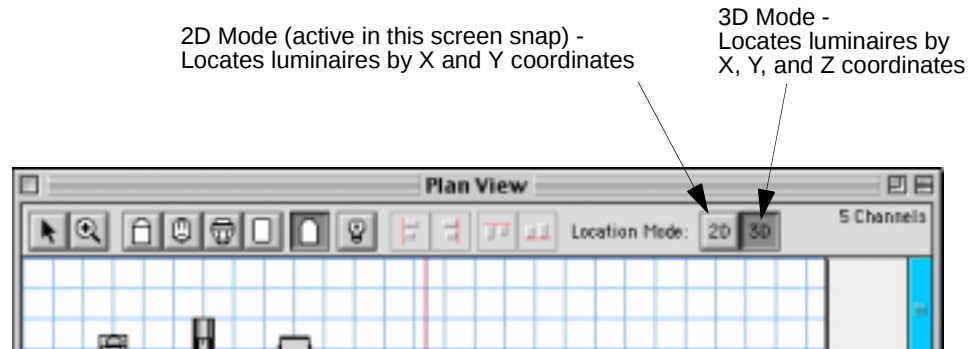

The 2D mode provides an X and Y coordinate for each luminaire (icon) to locate it in relation to a 2D scheme. The 3D mode provides an additional coordinate, Z, in addition to X and Y to locate a luminaire in relation to a 3D scheme (refer to [“Defining X, Y, Z Locations” on page 259](#) for more information on the console’s 3D Graphic features). The relationship between these modes is as follows:

- When an icon is initially placed while in 2D mode, its default X and Y coordinates are provided to its 3D location as well. In other words, X and Y for 2D and 3D are the same when an icon is first dropped. (They are considered “linked” at this point.) A default Z (height) value of 20 feet is also included in the 3D location data for the luminaire.
- If an icon is moved in the Plan View while in 2D mode, the X and Y coordinates would be updated in its 2D patch information, but not in the 3D patch. The 3D X and Y coordinates would still be the default values (given that the icon has not previously been moved while in 3D mode). (The “link” is considered broken at this point.)
- If an icon is moved in the Plan View while in 3D mode, the X and Y coordinates would be updated in its 2D and 3D patch information. (They are still considered “linked” at this point, provided that they have not already been moved in the 2D mode.)

**General Rule.** Modifying icon positions in the 2D mode *will not* be reflected in the 3D patch. Modifying icon positions in the 3D mode *will* be reflected in the 2D patch.

**Note:** The Match 3D feature available in the Drawing Size window allows importing of the size and window positioning coordinates from the 3D graphic into the Plan View. (This requires that a 3D graphic has been previously imported.) Refer to [“Match 3D” on page 258](#).

*(This page intentionally blank.)*

# CHAPTER 3.

---

## Manual Control

This chapter provides instructions for controlling luminaires in order to build cues.

- **Channel Select**
- **Lamp Control**
- **Encoder Control**
- **Keypad Control**
- **Luminaire Status**

---

**Note:** The Select Displays feature is also used for manual control of luminaires, however, due to the versatility of this feature it is covered in a separate chapter.

---

*(This page intentionally blank.)*

# Channel Select

Refer to  
Fold-Out C

---

## Overview

When the patch was defined in Chapter 2, each luminaire was assigned to a control channel. Selecting the channel will give you control of the luminaire's parameters in order to build cues or to store as groups of channels.

If the patch is disabled, luminaires must be selected for manual control using their thumbwheel address. The procedure for selecting a thumbwheel address is the same as channel selection. (For example, the procedure for selecting channel 301 would be the same as the procedure for selecting thumbwheel 301.)

---

**Note:** We recommend using Patch Disabled mode only when VARI\**LITE* luminaires are present. This is not a recommended state for storing cues, presets, groups, etc.

---

In addition to the methods of channel selection covered in this section, channels can also be selected in the Plan View and 3D Graphic windows. However, these methods are covered along with the respective topics elsewhere in this manual:

- For selecting channels via the Plan View window, refer to [“Plan View” on page 35](#).
- For selecting channels via the 3D Graphic window, refer to [“Using 3D Graphic Window” on page 261](#).


---

## Selecting Channels

Channel numbers (patch enabled) or thumbwheel numbers (patch disabled) can be selected or deselected from the Channel Select window, command-line keypad, and/or optional Channel Select panel. When selecting channels, the channels will light in the window on the Channel Select panel and their respective icons will be highlighted in the Plan View window.

## From Channel Select Window

Open window by selecting Channel Select at the Windows menu.

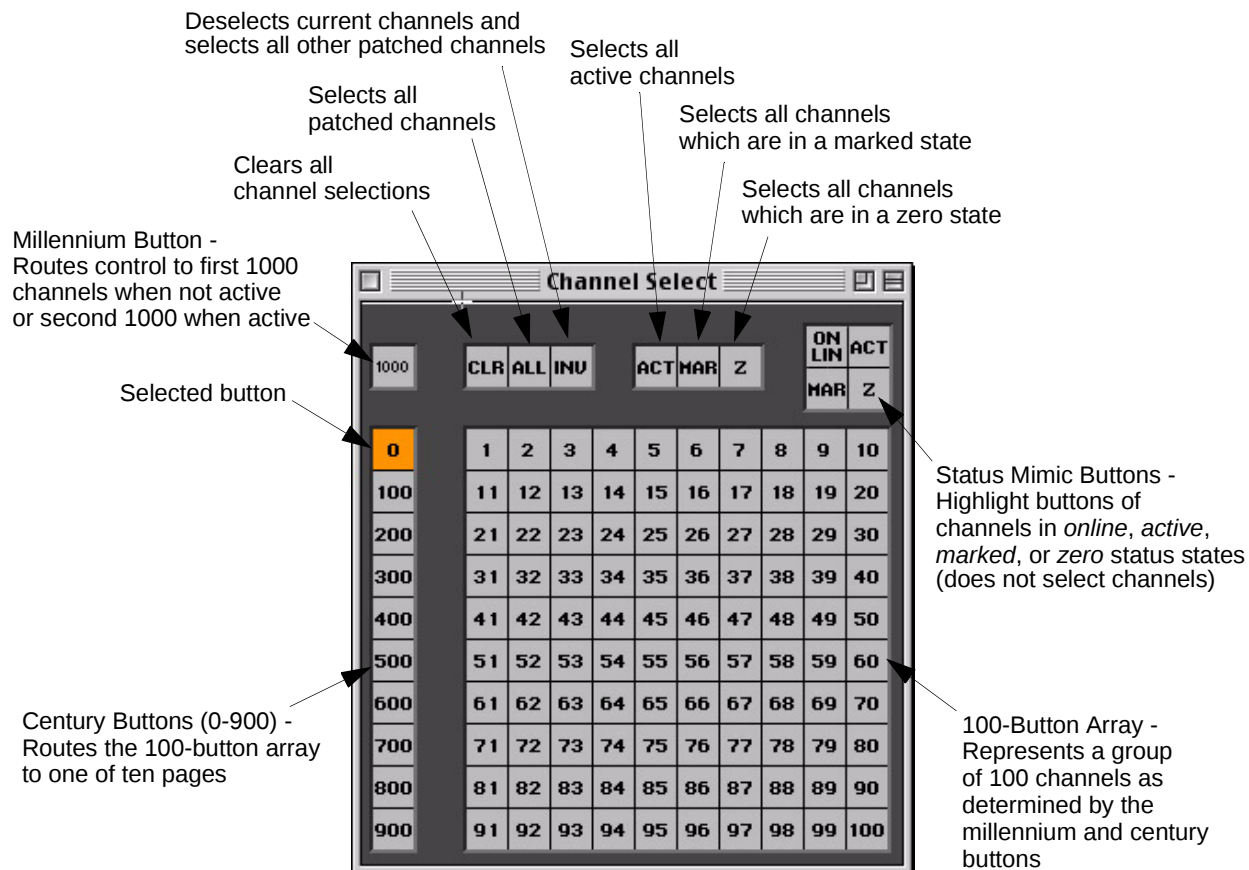

### Select a single channel (or multiple single channels):

- Step 1. Using cursor, click [1000] as required.
  - Step 2. Click [0] through [900] as required. Button will light.
  - Step 3. Click button of channel number to be selected. Button will light.
  - Step 4. To select multiple single channels, continue clicking on buttons of channel numbers you wish to add (selections "pile on").
- Example:* To select channel 521, ensure that [1000] button is not active, click the page [500] button and then click [21] on the 100-button array.

### Select a range of channels:

- Step 1. Using cursor, click [1000] as required.
- Step 2. Click [0] through [900] as required. Button will light.
- Step 3. Click button of first channel number to be selected. Then, while holding mouse button, drag across range of channels.

**Select channels on multiple pages:**

 
- Step 1. Using cursor, click [1000] as required.
- Step 2. Click [0] through [900] as required. Button will light.
- Step 3. Select required channels.
- Step 4. Click on next required page ([0] through [900]). First page button will be dimly highlighted to show that channels are selected on that page.
- Step 5. Select required channels on new page.
- Step 6. Repeat Steps 4 and 5 as required.

**Deselect channels:**

- Press any selected channel button(s) to deselect.

**Special Buttons**

Six buttons are available in the Channel Select window for simplifying channel selection.



- [CLR] - clears all channel selections.
- [ALL] - selects all patched channels.
- [INV] - (Invert) deselects currently selected channels and selects all other patched channels.
- [ACT] - selects all channels with *active*\* luminaires.
- [MAR] - selects all *marked*\* channels.
- [Z] - selects all channels in a *zero*\* state.

\* Active - luminaires with intensity greater than zero (1-100%).

\* Marked - luminaires with an intensity state of "marked."

\* Zero - luminaires with an intensity state of zero ("hard zero", 0% level).

(For a more in-depth explanation, refer to ["Intensity States" on page 110](#)).

## Status Mimic

These four buttons located at the top right portion of the Channel Select window are referred to as “status mimic” buttons. Here channel select buttons illuminate in purple as an indicator rather than as a selection tool.

|           |     |
|-----------|-----|
| ON<br>LIN | ACT |
| MAR       | Z   |

[On Lin] - Indicates all online luminaires.

[Act] - Indicates all luminaires that are *active*\*.

[Mar] - Indicates all luminaires that are *marked*\*.

[Z] - Indicates all luminaires that are in a *zero*\* state.

\* Active - luminaires with intensity greater than zero (1-100%).

\* Marked - luminaires with an intensity state of “marked.”

\* Zero - luminaires with an intensity state of zero (“hard zero”, 0% level).

(For a more in-depth explanation, refer to [“Intensity States” on page 110](#)).

## From Keypad

Channel selection guidelines:

- Any combinations of [ + ], [ - ], and [Thru] are allowed.
- Thru lists (channel ranges) must be entered in ascending order only.
- [Enter] terminates the selection process and sets the keypad so that the next entry is automatically accepted (pressing [Clear] to reset the command-line keypad is not required.)
- Because the keypad always defaults to channel entry mode, use of the [Chan] (channel) button is optional.

ready (channel)

|   |   |   |
|---|---|---|
| I | F | E |
| C | B | G |



### Select a single channel:

- <Chan> [ n ] [Enter].

### Select multiple channels:

- <Chan> [m] [+] [n] [Enter].

### Select a range of channels:

- <Chan> [ m ] [ Thru ] [ q ] [Enter].

### Other examples:

- <Chan> [ m ] [ + ] [ s ] [ Thru ] [ w ] [Enter].

- <Chan> [ m ] [ + ] [ s ] [ Thru ] [ w ] [ - ] [ t ] [Enter].

### [Clear]



[Clear] functions as a backspace key when used during command-line construction. For example, <Chan> [n] [Thru] [t] [Clear] [s] [Enter] results in the selection of channels n thru s. When [Clear] is used after an [Enter] (fully terminated command line), the command line is cleared.


The only thing that clears a syntax error on the command line is [Clear]. Any other keypad entry is ignored until the error condition is cleared.



**Shortcut** Holding down [Clear] will clear an entire unterminated command line.

### From Channel Select Panel (Optional Accessory)

Selecting channels from the optional Channel Select panel is basically the same as selecting channels in the Channel Select window although the special buttons associated with channel select are located on the console desk.

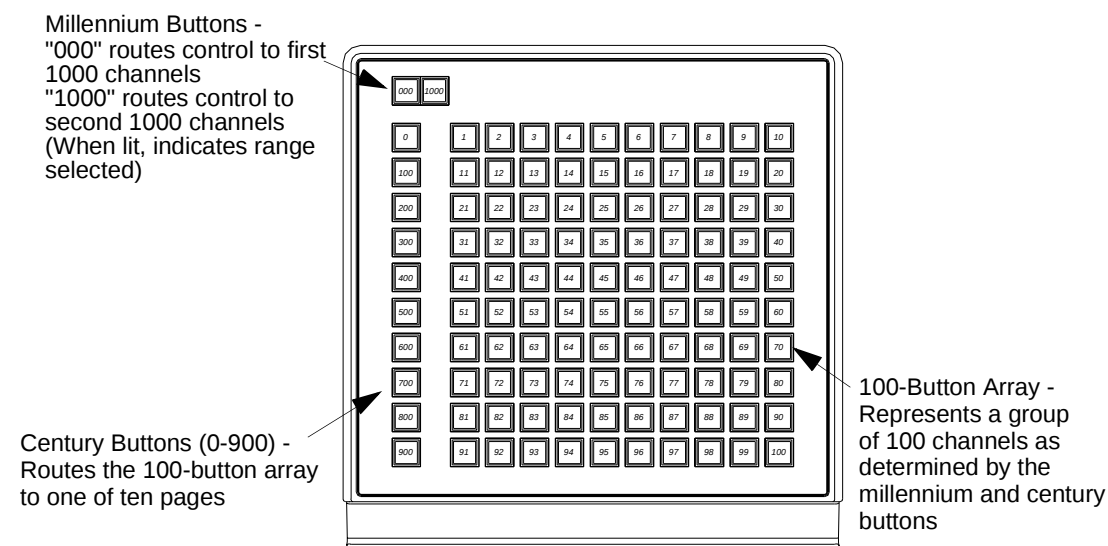

### Select a single channel (or multiple single channels):

- Step 1. Press [000] or [1000] as required.
- Step 2. Press [0] through [900] as required. Button will light.
- Step 3. Press button of channel number to be selected. Button will light.
- Step 4. To select multiple single channels, continue selecting channels (channel selections "pile on").

#### Example:

To select channel 521, ensure that [000] button is not active, press the page [500] button and then press [21] on the 100-button array.

**Select a range of channels:**

- Step 1. Press [000] or [1000] as required.
- Step 2. Press [0] through [900] as required. Button will light.
- Step 3. Press button of first channel number to be selected. Then, while holding down first button, press button of last number in range. First and last buttons will light, as will all those in-between.

**Select channels on multiple pages:**

- Step 1. Press [000] or [1000] as required.
- Step 2. Press [0] through [900] as required. Button will light.
- Step 3. Press button of first channel number to be selected. Then, while holding down first button, press button of last number in range. First and last buttons will light, as will all those in-between.
- Step 4. Press next required page ([0] through [900]). First page number button will flash to show that channels are selected on that page.
- Step 5. Press buttons for channels to be selected.
- Step 6. Repeat Steps 3 through 5 as required.

**Deselect a single channel (or multiple single channels):**

- Press any selected channel button(s) to deselect.


**Deselect a range of channels:**

- Press button of first selected channel button to be deselected. Then, while holding down first button, press button of last number in range. The range will be deselected.

**Shortcut**  To select a single channel and deselect all others, double-click on any channel button.

## Console Channel Select Buttons

Six special buttons are available on the console for simplifying channel selection.

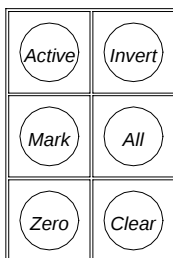

- [Invert] - deselects currently selected channels and selects all other patched channels.
- [Clear] - clears all channel selections.
- [All] - selects all patched channels.
- [Active] - selects all channels with *active*\* luminaires.
- [Mark] - selects all *marked*\* channels.
- [Zero] - selects all channels in a *zero*\* state.

\* For a more in-depth explanation, refer to [“Intensity States” on page 110](#).

## [Next] and [Last]

The [Next] and [Last] buttons, located on the Manual Control panel, will step through all on-line channels.



[Next] - increments the channel selection by one.

If a single channel were selected (either with the keypad or the 100 button array), pressing [Next] will increment the channel selection by one. If a range of channels is selected, the first press of [Next] will select the first channel in that range. Subsequent presses will increment the channel selection by one, but will not select a channel outside the range.



[Last] - decrements channel selection by one.

If a single channel were selected (either with the keypad or the 100 button array), pressing [Last] will decrement the channel selection by one. If a range of channels is selected, the first press of [Last] will select the last channel in that range. Subsequent presses will decrement the channel selection by one, but will not select a channel outside the range.



**Shortcut** [Next] / [Last] - pressing these buttons together will reselect the original channel range.

# Lamp Control

Refer to  
Fold-Out **C**

## Start



Start will function for all arc luminaires with remote start capability.

### Start lamps using [Start] button:

- Step 1. Select luminaire(s) for manual control.
- Step 2. Set luminaire(s) in recommended starting position according to manufacturer's specifications.
- Step 3. Press [Start].

### Start lamps from menu bar:

- Step 1. Select luminaire(s) for manual control.
- Step 2. Set luminaire(s) in recommended starting position according to manufacturer's specifications.
- Step 3. At Special menu, select Start.



|        |             |          |        |          |
|--------|-------------|----------|--------|----------|
| Lamp   | Reset       | Start    | Arm    | Douse    |
| Status | Online      | Active   | Mark   | Zero     |
|        | Quick Focus | Man Undo | Select | Man Time |

## Douse



Douse will function for all arc luminaires with remote douse capability.

### Douse lamps using [Douse] button:

- Step 1. Select luminaire(s) for manual control.
- Step 2. Press [Arm] / [Douse].

### Douse lamps from menu bar:

- Step 1. Select luminaire(s) for manual control.
- Step 2. At Special menu, select Douse.



## Reset/Recalibration/Erase Luminaire Data

Two different types of luminaire resets are available.

- **Recalibrate** - returns luminaire to default home position based on profile and re-downloads data.
- **Reset** - activates reset command if supported by luminaire and profile and re-downloads data.

**Erase Luminaire Data** clears all data from a luminaire's on-board RAM and disk.



**CAUTION:** Erase Luminaire Data command removes all show data from the show file for selected channels. There is NO undo available.

### Recalibrate luminaires using [Reset] button:

- Step 1. Select luminaires for manual control.
- Step 2. Press [Arm] / [Reset].



### Reset luminaires using [Reset] button:

- Step 1. Select luminaires for manual control.
- Step 2. Press [Arm] / [Reset] [Reset] (press Reset button twice while holding down Arm button).

### Reset/Recalibrate/Erase Luminaire Data from menu bar:

- Step 1. Select required channels.
- Step 2. At Special menu, select Reset, Recalibrate, or Erase Luminaire Data.



### Reset VARI\*LITE luminaires from System Configuration window:

- Step 1. At System Configuration window, double-click icon of luminaire to be reset or recalibrated. Device Info window will open.
- Step 2. Click Reset or Recalibrate as required.



# Encoder Control

Refer to  
Fold-Out D


## Overview

The manual control encoders (or “knobs”) provide incremental control of luminaire parameters.

Pan, tilt, and intensity are provided with permanently assigned encoders, while the remaining parameters are mapped to “soft encoders.” The soft encoders control a variety of luminaire parameters depending on which function is currently selected. A display associated with each soft encoder indicates its selected function.

### Soft encoder functions:

- Color - controls color functions such as CMY, RGB, wheels, flags, or color plates.
- Beam - controls edge, beam, zoom, frost, strobe, and prism.
- Image - controls static gobo, rotating gobo, spin, and effects.
- 3d - routes X, Y and Z coordinates for pan and tilt.
- Dynamics - modifies rate, size, and orientation of dynamic states.
- Frame - controls framing shutters.

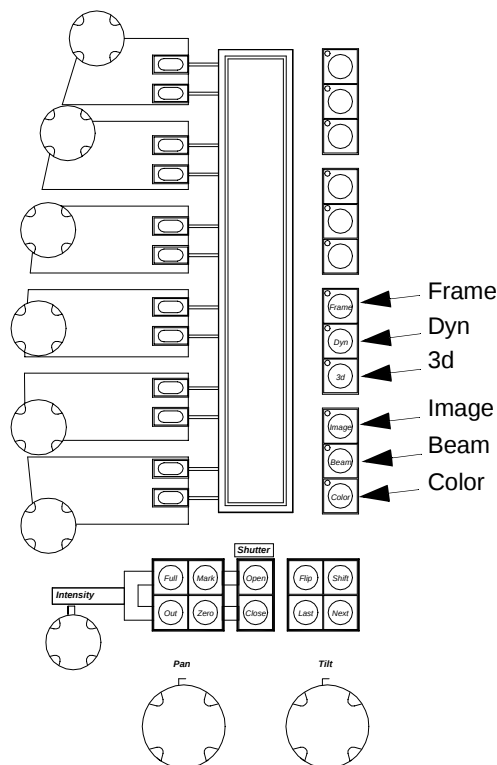

By selecting a function, the soft encoders change to control the parameters of that function. In addition to the encoder, minimum and maximum control buttons are provided to apply a default setting to selected luminaires. Like the soft encoders, the functionality of these buttons depends on the currently selected function. The min/max buttons are initially programmed with a default console setting, but can be reprogrammed with your own settings as required. Instructions for programming new settings can be found in [“Storing New Default Min/Max Settings” on page 55.](#)

## Console Encoders


When a luminaire is selected for manual control, the encoders and buttons available on the console's front panel can be used to change its parameters.

**Note:** Additional functions can be accessed by pressing the encoder [Shift] button (located above Tilt encoder).

### Pan and Tilt

Pan and tilt are controlled by the two encoders marked Pan and Tilt respectively. These knobs can be used to change the position of a luminaire's beam.


Three buttons above the Tilt encoder are also associated with pan and tilt functions:

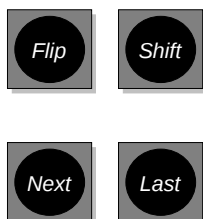

- [Flip] causes selected luminaires to pan and tilt until the head is pointing in the same direction as before. The head assembly pans 180 degrees and tilts as required so that the head points in the same direction. (DMX moving mirror luminaires will not respond to this command.)
- The [Next] and [Last] buttons will step through all on-line channels.

### Intensity

Intensity output can be controlled by the encoder marked Intensity. This knob can be used to adjust the brightness of the luminaire's beam. Six buttons to the right of the Intensity encoder are also associated with the intensity function. (Intensity also affects how a cue is stored, however, this topic will be discussed in more detail in [“Intensity States” on page 110.](#))

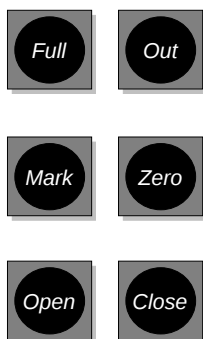

- [Full] sets selected luminaires to full intensity (100%).
- [Out] sets selected luminaires to an *out\** or *inactive* state (no parameter data, 0% level).
- [Mark] sets selected luminaires to a *marked\** state (0% level).
- [Zero] sets selected luminaires to *zero\** intensity (“hard zero”, 0%).
- Shutter [Open] is used with luminaire strobe or douser mechanisms.
- Shutter [Close] is used with luminaire strobe or douser mechanisms.

\* For a more in-depth explanation, refer to [“Intensity States” on page 110.](#)

---

**Note:** See Appendix A for mapping of the included DMX profiles.

---

## Color

Color can be controlled by the soft encoders when [Color] is selected. These knobs can be used to adjust or change the hue and saturation of the beam's color.

The soft encoders will be mapped as follows:

Encoder 1 - BLUE (open/close)

Encoder 2 - AMBER (open/close)

Encoder 3 - MAGENTA (open/close)

Encoder 4 - WHEEL (open/close)

w/ [Shift] button pressed - WHEEL SPIN (max/stop)

## Beam

Beam can be controlled by the soft encoders when [Beam] is selected. These knobs can be used to set all the parameters associated with a luminaire's beam.

The soft encoders will be mapped as follows:

Encoder 1 - BEAM (open/close)

Encoder 2 - EDGE (hard/soft)

Encoder 3 - ZOOM (large/small)

Encoder 4 - STROBE (max/stop)

Encoder 5 - PRISM (in/out)

Encoder 6 - FROST (in/out)

## Image (Gobo)

Images can be controlled by the soft encoders when [Image] is selected. These knobs can be used to access the gobo, effects, and prism features of a luminaire.

The soft encoders will be mapped as follows:

Encoder 1 - GOBO (open/other)

w/ [Shift] button pressed - WHEEL SPIN (max/stop)

Encoder 2 - ROTATING GOBO (open/other)

w/ [Shift] button pressed - ROTATING SPIN (max/stop)

Encoder 3 - INDEX (open/other)

w/ [Shift] button pressed - ROTATE (max/stop)

Encoder 4 - EFFECTS WHEEL (open/other)

w/ [Shift] button pressed - EFFECTS SPIN (max/stop)

Encoder 5 - EFFECTS INDEX (open/other)  
w/ [Shift] button pressed - EFFECTS ROTATE (max/stop)

Encoder 6 - EDGE (hard/soft)  
w/ [Shift] button pressed - ZOOM (large/small)

## 3D

3D parameters can be controlled by the soft encoders when [3d] is selected. These knobs can be used to adjust X, Y, and Z coordinates of the luminaire.

The soft encoders will be mapped as follows:

Encoder 1 - X (min/max)

Encoder 2 - Y (min/max)

Encoder 3 - Z (min/max)

## Dynamic States

Dynamic states can be controlled by the soft encoders when [Dyn] is selected. These knobs can then be used to adjust the parameters of dynamic states as defined by the Dynamic State feature available on the touch screen display.

---

**Note:** This is an advanced feature and will be discussed in [“Dynamic State Mode” on page 150](#).

---

The soft encoders will be mapped as follows:

Encoder 1- ORIENT (min/max)

Encoder 2 - SIZE (min/max)

Encoder 3 - RATE (min/max)

## Frame (VL7B Luminaire Only)

Framing (beam shaping) can be controlled by the soft encoders when [Frame] is selected. These knobs can be used to access the framing parameters of the luminaire's beam.

---

**Note:** Buttons A and B can be selected individually or together. (When selected, the letter will illuminate in the display.)

---

The soft encoders will be mapped as follows:

### Encoder 1 - SHUTTER 1

Button [a] selects Encoder 1 for control of first motor.

Button [b] selects Encoder 1 for control of second motor.

### Encoder 2 - SHUTTER 2

Button [a] selects Encoder 2 for control of first motor.

Button [b] selects Encoder 2 for control of second motor.

### Encoder 3 - SHUTTER 3

Button [a] selects Encoder 3 for control of first motor.

Button [b] selects Encoder 3 for control of second motor.

### Encoder 4 - SHUTTER 4

Button [a] selects Encoder 4 for control of first motor.

Button [b] selects Encoder 4 for control of second motor.

### Encoder 5 - ALL

[flip H] - flips framed image to a horizontal position.

[flip V] - flips framed image to a vertical position.

### Encoder 6 - ROTATE


[mid] - sends framing mechanism back to its mid-point.

[rot 90] - rotates framing mechanism 90 degrees from its current position.

## Storing New Default Min/Max Settings

The min/max buttons associated with each function can be programmed with your own default settings as required. These settings are referred to as hard/soft, in/out, etc. depending on the mechanism being controlled. The initial console default settings (which correspond to the luminaire's actual min/max values) can be re-stored with your own min/max settings.

The min/max settings are based on channel selection. This means that a different minimum and maximum setting can be defined for every channel or for groups of channels as required. For example, if Channel 1 is patched as a VL5 luminaire you could select its channel and then store appropriate min/max settings. You could then deselect Channel 1 and select Channel 2 (which for example is patched as a VL6 luminaire) and store different min/max settings. Depending on whether Channel 1 or Channel 2 is selected, the min/max settings would be different.

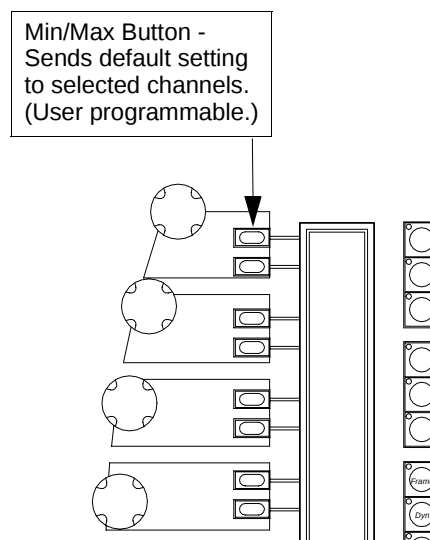

### Store new min/max settings:

- Step 1. Press button for required set of soft encoder functions. It will be mapped to soft encoders.
- Step 2. Select luminaires to be included in min/max setting. (For example, select some VL6 luminaires.)
- Step 3. Using encoders, adjust parameter for new setting.
- Step 4. Press [Store] / [Encoder Min/Max Button]. Setting is now stored for those channels.

### Add new channels to a setting:


- Step 1. Select luminaires to be added to setting. (For example, select additional VL6 luminaires.)
- Step 2. Press [Store] / [Encoder Min/Max Button]. Setting is now stored for new luminaires as well as previously stored luminaires.

## Encoders Window

The Encoders window functions just as the panel encoders to provide incremental control of luminaire parameters. In addition, it provides a visible display of currently selected cue or effect and allows specification of a submaster for cue tracking. Refer to the function explanations in the section [“Console Encoders” on page 51](#) for more in-depth information on each encoder function and the associated min/max settings.

### To operate the window controls:

- At Panels menu, choose Encoders to open window.
- At popup menu, select encoder function: Focus, Color, Beam, Image, Dynamic, or Frame.
- Rotate encoder by clicking and holding mouse button and then moving left or right. Release mouse button when desired encoder setting is reached.
- Currently selected cue/effect and increment setting are indicated at bottom portion of window.

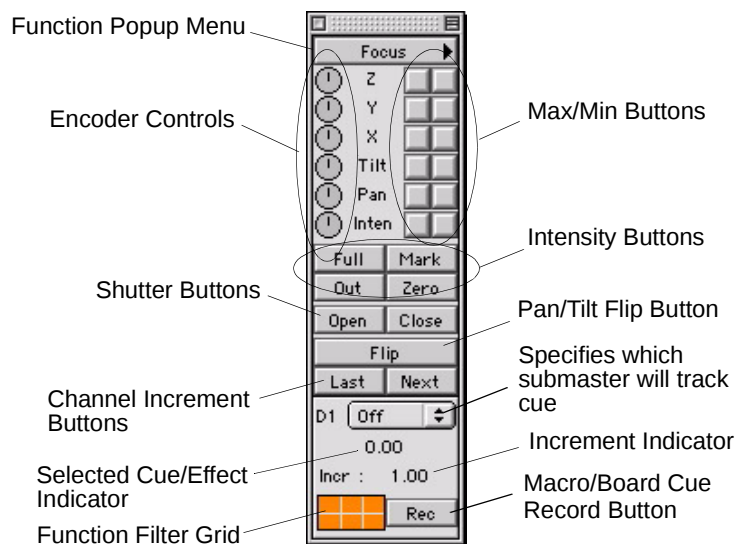

# Keypad Control

Refer to  
Fold-Out F

## Overview

The control (or command-line) keypad also provides control of luminaires. Luminaire parameters can be programmed from the keypad just as they can from the manual control encoders, although in most cases the touch screen Sneak function is also required. This section will cover all manual controls that can be executed using the command-line keypad alone. Advanced manual control using the keypad will be discussed along with the Sneak function in [“Timing/Filter Displays” chapter on page 137](#).

Entries made with the keypad are referred to as “command-line entries” and will be displayed in the command-line display as they are entered.

### Command-line entry guidelines:

- When entering command lines, it is not necessary to specify channel information if the required channels are already selected. If new channels are selected for modification on the keypad, this is reflected at the Channel Select panel.
- [Clear] functions as a backspace key when used during command-line construction. [Clear] is the only thing that clears a syntax error. (Any other keypad entry is ignored until the error condition is cleared.)
- When working from the command-line keypad, parameters will assume their new values at full speed unless Manual Timing is currently enabled, in which case they will use their current timing values. Only when used with the Sneak function can the keypad selections be assigned discrete timing values.
- Since manual control requires channel selection, this can also be done using the command-line keypad. Refer to Channel Select [“From Keypad” on page 44](#).

select

Chan 1 \*

|   |   |   |
|---|---|---|
| I | F | E |
| C | B | G |

Shortcut ➡ Holding down [Clear] will clear an entire unterminated command line.

## Setting Parameters From Keypad

### Intensity

The keypad can be used to adjust the brightness of the luminaire's beam. Intensity responds to a percentage value of 0-100.



The [At] button is used to enter intensity values:

- <Chan> [n] [At] [m] [Enter] - changes the intensity level of the selected channel to m.
- <Chan> [n] [Thru] [q] [At] [m] [Enter] - changes the intensity level for the selected range of channels to m.



The [Full] button is used to quickly set intensity to 100%.

- <Chan> [n] [Full] [Enter] - changes the intensity level of the selected channel to 100%.

The [+] and [-] buttons can be used in combination with the [At] button to increment or decrement a current intensity value by a specific amount. For example, if the current intensity value is 50%:

- <Chan> [n] [At] [+] [0] [5] [Enter] - increases the intensity level of the selected channel to 55%.
- <Chan> [n] [At] [-] [0] [5] [Enter] - decreases the intensity level of the selected channel to 45%.

#### Shortcut ➡

To quickly enter an intensity below full, but divisible by 10, use only the first digit of the desired level (for example, [At] [5] = 50%).

### Presets

The keypad can be used to assign presets to selected luminaires. The preset entered on the keypad corresponds to the preset saved in that particular preset select (refer to [“Presets” on page 84](#)).



Examples:

- <Chan> [n] [Preset] [m] [Enter] - applies preset m to the selected channel n (where m is the discrete preset number).
- <Chan> [n] [Thru] [q] [Preset] [m] [Enter] - applies preset m to the selected range of channels (where m is the discrete preset number).

## Colors

The keypad can be used to assign colors to selected luminaires. The color entered on the keypad corresponds to the color saved in that particular color select (refer to [“Colors” on page 80](#)).

Examples:



- <Chan> [n] [Color] [m] [Enter] - applies color m to the selected channel n (where m is the discrete color number).
- <Chan> [n] [Thru] [q] [Color] [m] [Enter] - applies color m to the selected range of channels (where m is the discrete color number).

---

**Note:** Colors from the VARI\*Lite Color System can also be applied using the keypad's [VL Color] button. Refer to [“Applying VARI\\*Lite Colors” on page 96](#) for instructions.

---

## Beams

The keypad can be used to assign beams to selected luminaires. The beam entered on the keypad corresponds to the beam state saved in that particular beam select (refer to [“Beams” on page 74](#)).

Examples:



- <Chan> [n] [Beam] [m] [Enter] - applies beam state m to the selected channel n (where m is the discrete beam number).
- <Chan> [n] [Thru] [q] [Beam] [m] [Enter] - applies beam state m to the selected range of channels (where m is the discrete beam number).

---

**Note:** If a profile does not provide default color and beam data, then there will be no change for selected channels until custom color and beam selects are stored.


---

# Luminaire Status

Refer to  
Fold-Out C

## Luminaire Status Window

The Luminaire Status window can be used to view current luminaire data as a numeric value or preset reference. (The window is merely a way to display and review data and does not provide editing functions.)

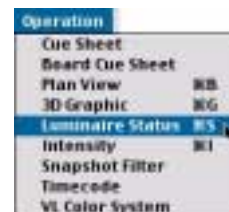

### Open window:

- At Operation menu, select Luminaire Status. Data will be displayed for all luminaires.

**Note:** Commands can be used to open multiple Luminaire Status windows.

Use the following buttons to display different types of data:

**Value (V)** button - displays the numeric value currently being received by the luminaire for each parameter.

**Parameter (P)** button - displays the Preset, Color or Beam which the parameter is currently referencing (default setting).

**Timing (⌚)** button - displays any associated timing information and continuous action such as wheel spins. Example: For Studio Color lens control, parameters appear in Effect dynamic.

**Dynamic (D)** - displays any associated dynamic state information.

Data Columns

(configured in Parameter Columns window)

Parameter Data

Value Data

| Chan | Device | Inten         | Focus  | Pan    | Tilt | Color | Blue   | Amber | Magent | Edge | Go  |
|------|--------|---------------|--------|--------|------|-------|--------|-------|--------|------|-----|
| 1    | VL5    | 100<br>1 Home | 1 Home | 1 Home | 512  | 512   | 1 Home | 335   | 335    | 335  | 335 |
| 2    | VL5    | 20<br>20      | ---    | ---    | 512  | 512   | ---    | 161   | 176    | 191  | 335 |
| 3    | VL5    |               | ---    | ---    | 512  | 512   | ---    | 335   | 335    | 335  | 335 |
| 4    | VL6    |               | ---    | ---    | 512  | 512   | ---    | 335   | 335    | 335  | 335 |
| 5    | VL6    |               | ---    | ---    | 512  | 512   | ---    |       |        | 80   | 80  |

Dynamic -  
Displays dynamic state/continuous  
action information when selected

Opens Parameter Columns window  
which is used to choose which  
columns appear in window

Timing - Displays timing information when selected

Parameter - Displays Preset that luminaire is reporting when selected


Value - Displays value that luminaire is reporting for the parameters when selected

## Parameter Columns Window

The Parameter Columns window is used to define which types of information will be displayed in the data window (columns). Using the cursor, select or deselect the boxes as required.

For Focus and Color, two display options are available. Focus can be displayed as a single column and/or two columns, pan and tilt. Color can likewise be displayed as a single column and/or up to four individual color columns, which would provide data for each filter/wheel/plate mechanism in the luminaire. When the single Focus/Color box is checked, the column will display the Preset/Color source, as long as the data is being taken from a single Preset/Color. If not from a single Preset/Color, then the column would display “---”. If Pan/Tilt, etc. are checked then those columns also display the source, or if set by encoders, the numerical values. To see both source and # values, select [P] and [V] (at Luminaire Status window).

The Quick-Set buttons will automatically check the boxes which are applicable to a certain type of luminaire and deselect the others, so that no excess columns will be displayed in the window.

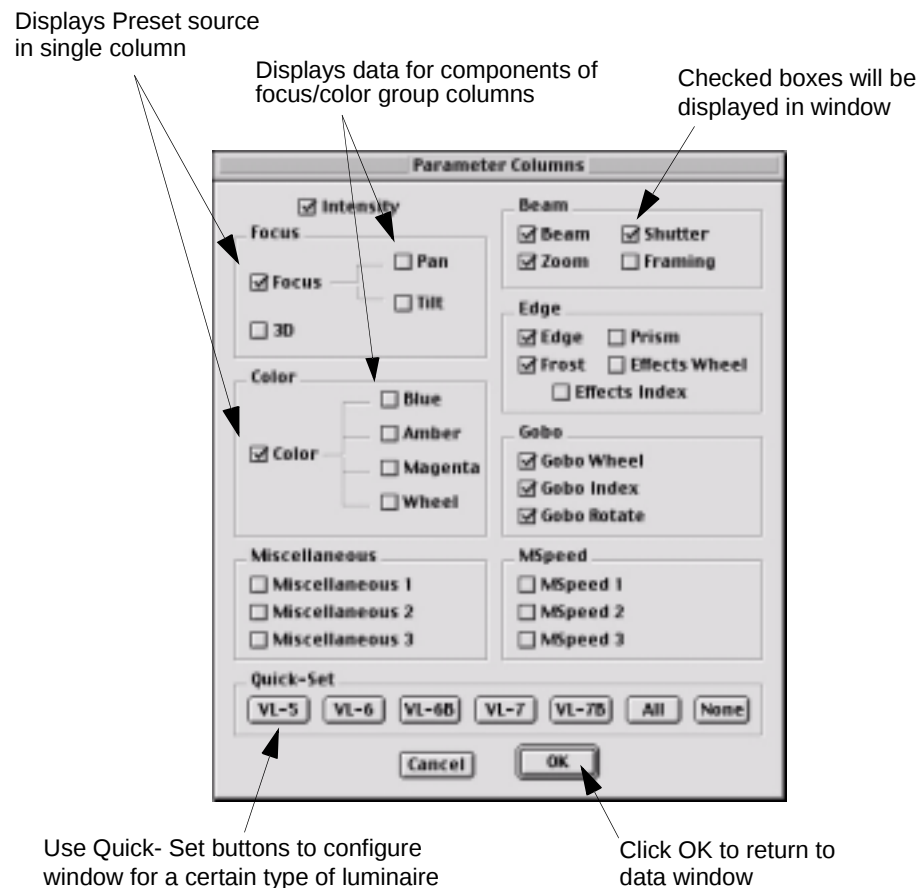

## Intensity Window

The Intensity window can be used to view intensity values for all patched channels. Selections made at the Channel Select window or panel and/or command-line keypad are highlighted in the window and subsequent changes to intensity values are reflected in the display.



- At Operation menu, select Intensity. Using manual controls, change intensity values as required. Changes will be reflected in display.

**Note:** Command-I opens multiple copies of the Intensity window.

 A screenshot of the 'Intensity' window. It displays a grid of channel numbers and their corresponding intensity values. The grid is organized into two main sections: channels 1-16 on the left and channels 21-46 on the right. Channels 1-16 are arranged in a 4x4 grid, and channels 21-46 are arranged in a 4x4 grid. The intensity values are displayed in a grid that matches the channel numbers. Some cells are highlighted in yellow, indicating manual control. The window has a title bar 'Intensity' and standard window controls.
 

| 1   | 2   | 3   | 4   | 5   | 6   | 11  | 12  | 13  | 14  | 21  | 22  |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 23  | 24  | 31  | 32  | 33  | 34  | 41  | 42  | 43  | 44  | 81  | 82  |
| 83  | 84  | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108 | 109 | 110 |
| 111 | 112 | 113 | 114 | 115 | 116 | 121 | 122 | 123 | 124 | 125 | 126 |
| 131 | 132 | 133 | 134 | 135 | 136 | 141 | 142 | 143 | 144 | 145 | 146 |

### Color Coding

Color coding of the intensity values provides useful information regarding how the channels are changing from cue to cue, and if an intensity level comes from manual control or an effect. The coloring of channel numbers and intensity values provide the following indications:

- Selected channels are displayed in **orange**.
- While increasing intensity, the value changes to **blue**.
- While decreasing intensity, the value changes to **green**.
- Channels changed by manual control are displayed in **black on a yellow background**.
- Channels with the same cue intensity (tracking) are displayed in **pink**.
- Channels changed by an effect are displayed in **white on a black background**.

For example, if channels are brought up manually using an encoder, the channel numbers turn to gold to indicate the channel selection and the levels appear in reverse text, which highlights the fact that they are manually controlled. Next, if a cue is played back which overrides the intensity of these channels (HTP), the values would revert to normal text, but would be displayed in blue - refer to “[HTP \(Highest Takes Precedence\)](#)” on page 240. (If the cue does not override the intensity, they would remain in the manual control state color.) If another cue is played back in which the channels in blue fade down or out, they would change to green during the fade.

### **Configuring How Information is Displayed**

In the window's default state, all patched channels are listed horizontally with a vertical line inserted between non-consecutive channel numbers.

User defined columns: All channels shown with unpatched channels grayed out, width of window is set, scroll bar allows access to all channels.

*(This page intentionally blank.)*

# CHAPTER 4.

---

## Select Displays

This chapter provides instructions for using the Select Displays feature.

- **General Operation**
- **Beams**
- **Colors**
- **Presets**
- **Groups**
- **Macros, Snapshots, and Effects**

*(This page intentionally blank.)*

# General Operation

Refer to  
Fold-Out E

---

## Overview

### What are Selects?

A “select” is a pre-stored or user-defined set of parameters (presets, colors, beams), selections (groups, snapshots) or events (macros, effects). Selects can be used to simplify channel selection, manual control of luminaires, cue and effect creation, event recall, and to ensure consistency of cue parameters throughout the cue list.

Three select displays are provided on the console front panel and a Select Displays window is provided at the Panels menu for store and recall of Preset, Color, Beam, Group, Macro, Snapshot, and Effect selects.

### Accessing Selects From Keypad

Parameters stored into the select banks can also be accessed from the command-line keypad. (Instructions for using the keypad are included in the appropriate sections on storing, modifying and recalling Beams, Colors, Groups, etc.) All storable select items have a discrete number which is used to access the feature from the keypad. Selects maintain this number, even when given another label. For example, if a focus parameter is stored into Preset 1 and relabeled as “Home”, it would still be recalled at the keypad by pressing [Preset] [1] [Enter].

### Standard Beams and Colors

The console is configured with a pre-stored set of standard Beam and Color palettes. You can use these defaults with your system or replace them with custom settings.

#### Standard Beam Palette

As a default, the Beam select provides standard static and rotating gobo wheel positions. The data (in this case, wheel positions) stored into the select display is referred to as a “palette.”

#### Standard Color Palette

As a default, the Color select provides a standard palette of 80 colors, which can be used to apply color parameters to applicable luminaires.

The default color palette supports color mixes for VARI\*LITE luminaires only. These colors are not numbered according to the VARI\*LITE Color System. Colors can be applied using VARI\*LITE color numbers through the VL Color Data window. Refer to the “[VARI\\*LITE Color System](#)” chapter on page 93 for more information.

---

**Note:** Some DMX profiles have, as a default, the full frame wheel positions. Color mixing is not supported in the color palette as a default, but may be added to the palette as needed.

---

## Panel Select Displays

Three select displays are located on the console's front panel. These can be used to access Preset, Color, Beam, Group, Macro, Snapshot, and Effect select functions.

20 select buttons (labeled 1 through 20) are provided at each display. These are used to activate the data stored the selects. (The last selected item will remain highlighted.)


As a default, BEAMS will be selected at the top display, COLORS at the middle display, and PRESETS at the bottom display.

### Access a different page within a display:

Press desired page button (1 through 5) at top of select display.

### Access a different bank within a display:

Press and hold [Bank/Function] button while pressing the buttons labeled [11] through [20] to change banks in increments of 100. Each bank will provide 20 select buttons per page.

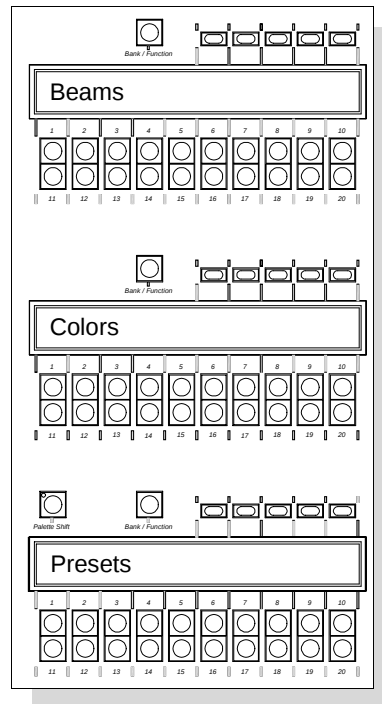



## Mapping Selects to Different Displays

The default function selections can be changed as required for any of the three displays.

- At select display, press and hold [Bank/Function] while pressing buttons 1-7 as required, which correspond to [Presets], [Colors], [Beams], [Groups], [Macros], [Snaps] (snapshots), or [Effects].

### [Palette Shift] Button

The [Palette Shift] button allows toggling between two different select display configurations. For example, the first one could be the default selections, BEAMS, COLORS, and PRESETS. Pressing [Palette Shift] (highlighting button) would bring up GROUPS, SNAPSHOTS, and MACROS. Pressing [Palette Shift] again (deselecting button) would bring back BEAMS, COLORS, and PRESETS and vice versa. These two configurations can be changed as desired by mapping the selects to different display locations (see previous page).

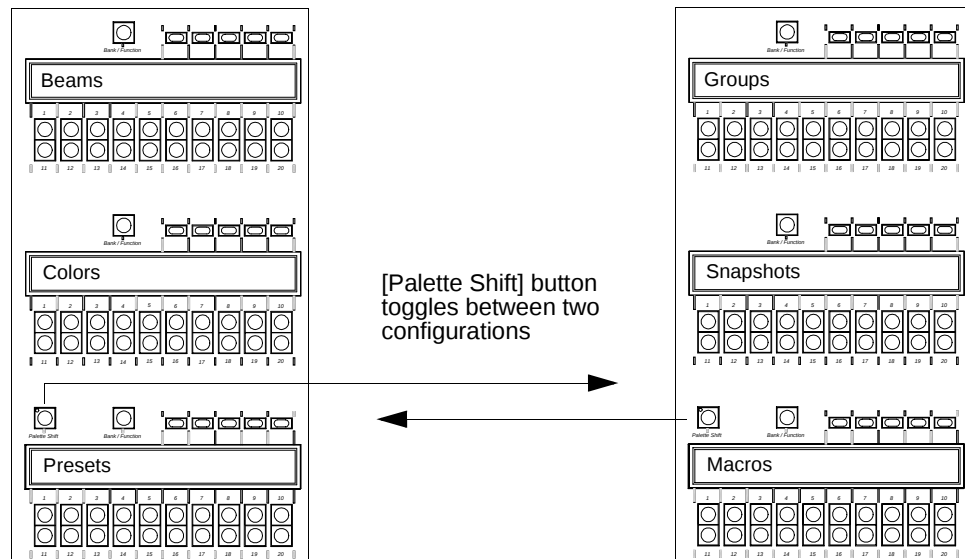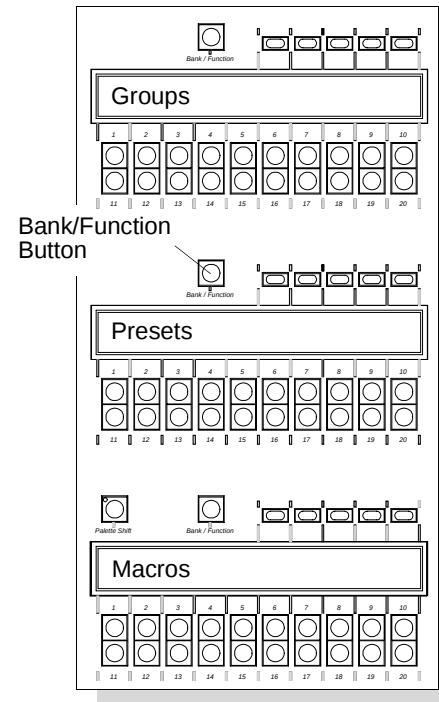

## Applying Selects

### **Apply a Beam:**

- Step 1. Select required luminaire(s) for manual control.
- Step 2. Access required page by pressing any one of five page buttons next to the [Bank/Function] button.
- Step 3. Press [Beam Select Button] for desired gobo. Selected luminaires will change.

### **Apply a Color:**


- Step 1. Select required luminaire(s) for manual control.
- Step 2. At Colors select display, access required bank by pressing [Function/Bank] plus desired bank (1 through 3).
- Step 3. Access required page by pressing any one of five page buttons next to the [Bank/Function] button.
- Step 4. Press [Color Select Button] of desired color. Selected luminaires will change.

## Select Displays Window

The Select Displays window can be used to access Preset, Color, Beam, Group, Macro, Snapshot, and Effect select functions.

Three separate “select displays” are visible in the window at any one time. Each display’s popup menu allows selection of Presets, Beams, Colors, Groups, Macros, Snapshots, and Effects which correspond to the select displays available on the console desk (refer to [“Panel Select Displays” on page 68](#)). Within each select display there are banks and pages which provide access to the total amount of selects available with any particular display.

- At Panels menu, choose Select Displays to open window.

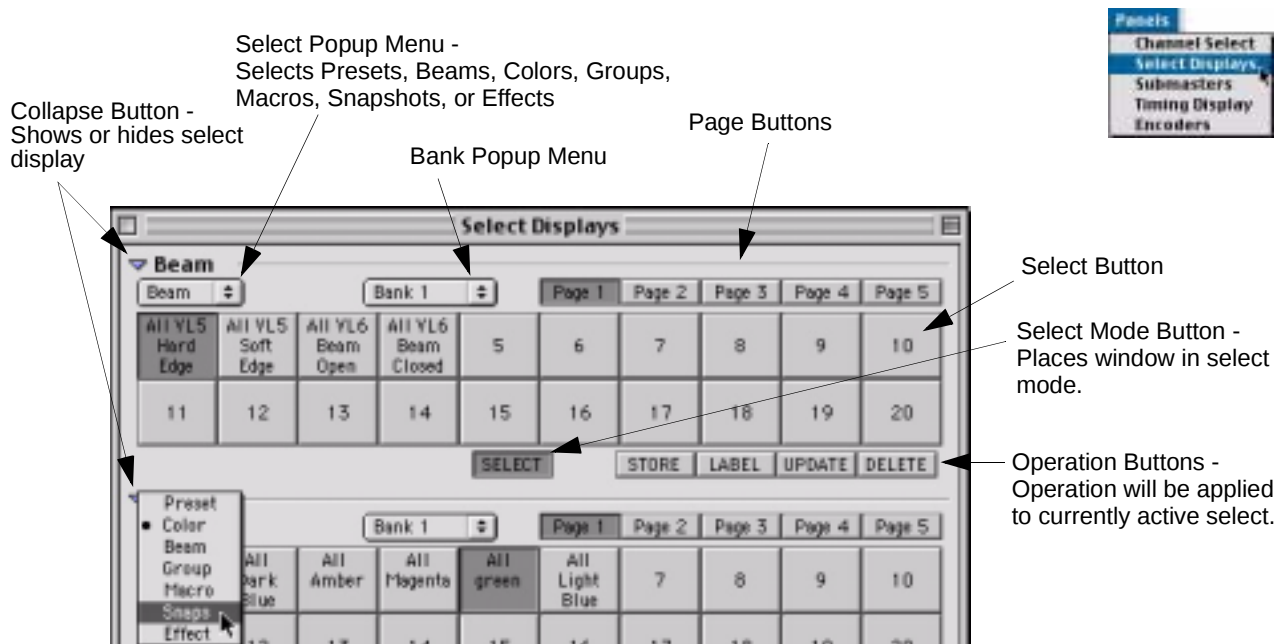

Parameters, channel selections, and events can be stored into the selects by using the controls provided in the window or the command-line keypad. Individual selects can be labeled, stored, modified, and recalled as required.

**SELECT      STORE   LABEL   UPDATE   DELETE**

The display can be placed in one of several modes. When a select is chosen, it will respond according to the currently selected mode:

- Select
- Store
- Label
- Update
- Delete

## Store

The Store function allows you to save your own parameter settings into a select for recall at any time in the future.

- Step 1. At popup menu, select function you wish to access (Group, Color, Beam, etc.).
- Step 2. At Bank popup menu, select required bank.
- Step 3. Click required Page button.
- Step 4. Click STORE.
- Step 5. Click [Select Button] where you wish to store data. For example, select 10.

10

## Label

The Label function allows you to label individual selects.

When labeling, the [xxxxxx] is entered on the alpha-numeric keyboard. The [return] button is also located on the keyboard.

- Step 1. Click LABEL.
- Step 2. Click [Select Button] where you wish to store data.
- Step 3. At computer keyboard, type label, use [Tab] to move among lines of text, and press [return].

10  
Label

## Update

The Update function allows you to update the data which was originally stored in the select. (The label will be retained so that you will not have to re-enter it after an update.)

- Step 1. At popup menu, select function you wish to access (Group, Color, Beam, etc.).
- Step 2. At Bank popup menu, select required bank.
- Step 3. Click required Page button.
- Step 4. Click UPDATE.
- Step 5. Click [Select Button] of select you wish to update. Data will be updated according to new settings.

23  
Wash

---

**Note:** Operation buttons only apply to the select display directly above the buttons.

---

## Delete

The Delete function allows you to remove all data from a select. Once deleted, the select will be “empty.”

- Step 1. At popup menu, select function you wish to access (Group, Color, Beam, etc.).
- Step 2. At Bank popup menu, select required bank.
- Step 3. Click required Page button.
- Step 4. Click DELETE.
- Step 5. Click [Select Button] of select you wish to delete. Select will now be empty.

5

---

**Note:** For deleting presets, all channels stored in the preset must be selected.

---

## Select

The Select feature allows you to apply data to channels.

---

**Note:** Pressing any select buttons on the console will automatically place the top select display in Select Mode.

---

- Step 1. Select channels to receive command (refer to [“Selecting Channels” on page 41](#)).
- Step 2. At popup menu, select function you wish to access (Group, Color, Beam, etc.).
- Step 3. At Bank popup menu, select required bank.
- Step 4. Click required Page button.
- Step 5. Click [Select Button] of select whose parameters you wish to apply.

# Beams

---

## Overview

The Beam select provides a means for storing and recalling a palette of up to 100 beam states. These can be used for building cues. As a default, Beams may contain standard, static and rotating gobo wheel positions, however it is possible to store your own Beams over the defaults and relabel as required. These programmable Beams can include parameters such as beam (zoom, shutter, framing), edge (frost, effect, prism), and gobo (static, rotating, index, effects, effects rotation) as determined by the beam edge and gobo filter settings (refer to [“Filter Mode” on page 146](#)).

Beams are stored by luminaire types. This means that for any one luminaire type, only one Beam setting can be stored in a single Beam select. For example, a select can store different settings for VL5 and VL6 luminaires, but multiple settings cannot be stored for multiple VL5 luminaires. During a store operation, the beam parameters stored will be drawn from either the lowest *active* luminaire or lowest *selected* luminaire as determined by the console’s default setting (refer to [“Settings Window” on page 245](#)).

**Beam Select Guidelines:**

- Beams are not linked to Presets or cues. This means that if a certain Beam was used when creating a Preset or cue and a new Beam is stored into that select, then this will not affect the Beam stored in the Preset or cue.
- Parameters stored into a Beam select are always determined by the filters.
- Timing values cannot be stored in Beams.

Indicates that Beams have been selected



| BEAMS |    | Bank 1 |    |    | Page 1 | Page 2 | Page 3 | Page 4 | Page 5 |
|-------|----|--------|----|----|--------|--------|--------|--------|--------|
| 1     | 2  | 3      | 4  | 5  | 6      | 7      | 8      | 9      | 10     |
| 11    | 12 | 13     | 14 | 15 | 16     | 17     | 18     | 19     | 20     |

## Beam Palette Data Window

Beam data can be viewed in the Beam Palette Data window.

The top portion of the window shows the beam list, along with all associated filters which have been stored into the Beam select. In addition, by selecting a single Beam and clicking on the Data drop-down window button, all of its parameter data can be viewed.



The Value (V) button will display the numeric value which has been stored into each parameter. The Dynamic (D) will display any associated dynamic state information. The “V” and “D” toggle buttons allow you to display one or both types of information in the window.

### Open Beam Palette Data window:

- At Data menu, select Beam Palette Data.

The screenshot shows the 'Beam Palette Data' window. The title bar reads 'Beam : All VL5 Hard Edge'. The window is divided into two main sections. The top section is a table with columns: '#', 'Beam', 'VL5', 'VL5Arc', 'VL6', 'VL7', 'VL5B', 'VL6B', 'VL7B', and 'Q'. The bottom section is titled 'Data' and contains a table with columns: 'Device', 'Inten', 'Focus', 'Color', and 'Edge'. Below the 'Data' table are two buttons, 'V' and 'D', and a 'Columns' button.

Annotations with arrows point to various parts of the window:

- Label**: Points to the 'Beam' column header.
- Beam Number**: Points to the '#' column header.
- Associated Filters**: Points to the 'VL5', 'VL5Arc', 'VL6', 'VL7', 'VL5B', 'VL6B', and 'VL7B' columns.
- Applicable Luminaire**: Points to the 'VL6B' column.
- Data Drop-Down Window - Displays data for selected Beam.**: Points to the 'Data' section header.
- Value - Displays value that luminaire is reporting for the parameters when selected.**: Points to the 'V' button.
- Dynamic - Displays dynamic state information when selected.**: Points to the 'D' button.
- Opens Parameter Columns window \* which is used to choose which columns appear in window.**: Points to the 'Columns' button.

| #  | Beam           | VL5 | VL5Arc | VL6 | VL7 | VL5B | VL6B | VL7B | Q |
|----|----------------|-----|--------|-----|-----|------|------|------|---|
| 1  | All VL5 Har... |     |        |     |     |      |      |      |   |
| 2  | All VL5 Soft   |     |        |     |     |      |      |      |   |
| 3  | All VL6 Bea... |     |        |     |     |      |      |      |   |
| 4  | All VL6 Bea... |     |        |     |     |      |      |      |   |
| 5  | 5              |     |        |     |     |      |      |      |   |
| 6  | 6              |     |        |     |     |      |      |      |   |
| 7  | 7              |     |        |     |     |      |      |      |   |
| 8  | 8              |     |        |     |     |      |      |      |   |
| 9  | 9              |     |        |     |     |      |      |      |   |
| 10 | 10             |     |        |     |     |      |      |      |   |
| 11 | 11             |     |        |     |     |      |      |      |   |

| Device | Inten | Focus | Color | Edge |
|--------|-------|-------|-------|------|
| VL5    |       | ---   | ---   | 0    |
| VL5Arc |       | ---   | ---   | 0    |
| VL6B   |       | ---   | ---   | 69   |

\* Refer to “Parameter Columns Window” on page 61.

---

## Storing, Modifying, and Recalling Beams

---

**Note:** Beams and colors are global settings by luminaire type. The console will draw data from either lowest active or lowest selected channel as determined by the console's default settings (refer to [“Settings Window” on page 245](#)). The "lowest active" setting draws data from the lowest channel number with intensity of that type, regardless of selection. The "lowest selected" setting draws data from the lowest selected channel number of that type, regardless of intensity state.

---

### From Panel Select Displays

**Hint** ➞ For all storable items, the default label (number) will move from the middle to the top line of the select display when something has been stored in that select.

#### **Store a new Beam using Beams select display:**

- Step 1. Select required channels.
- Step 2. Ensure Beams are selected on at least one select display.
- Step 3. Using manual controls, set all required parameters.
- Step 4. Filter attributes as required using touch screen display in Filter mode.
- Step 5. Press [Store] / [Beam Select Button] or [Store] [Label] / [Beam Select Button] [xxxxxx] [return].

---

**Note:** Parameters stored into a Beam select are always determined by the filters (refer to [“Filter Mode” on page 146](#)).

---



Beam

#### **Store a new Beam using command-line keypad:**

- Step 1. Select required channels.
- Step 2. Using manual controls, set all required parameters.
- Step 3. Filter attributes as required using touch screen display.
- Step 4. Press [Store] [Beam] [n] [Enter] or [Store] [Beam] [n] [Label] [Enter] [xxxxxx] [return] (where n is the discrete Beam number).

**Label an existing Beam, page, or bank:**


---

**Note:** When labeling, the [xxxxxx] is entered on the alpha-numeric keyboard. The [return] button is also located on the keyboard.

---

- Step 1. Ensure Beams are selected on at least one select display.
- Step 2. Press [Label] / [Beam Select Button] [xxxxxx] [return] *or*  
 [Label] / [Page Select Button] [xxxxxx] [return] *or*  
 [Label] / [Bank Select Button] [xxxxxx] [return] as required.

**Add a new luminaire type to a Beam:**

If you are modifying a Beam by storing a new type of luminaire(s), then the new data will be added to the existing data.

- Step 1. Select required channel(s). (The channel should contain at least one different luminaire type than currently stored in the Beam.)
- Step 2. Ensure Beams are selected on at least one select display.
- Step 3. Using manual controls, set all required parameters.
- Step 4. Filter attributes as required using touch screen display in Filter mode.
- Step 5. Press [Store] / [Beam Select Button] *or* [Store] [Label] / [Beam Select Button] [xxxxxx] [return].

**Modify Beam data for an existing luminaire type:**

If you are modifying a Beam with data from the same type of luminaire, then the data will be replaced.

- Step 1. Select required channel(s). (The channel should contain the same luminaire type as currently stored in the Beam.)
- Step 2. Ensure Beams are selected on at least one select display.
- Step 3. Using manual controls, set all required parameters.
- Step 4. Filter attributes as required using touch screen display in Filter mode.
- Step 5. Press [Store] / [Beam Select Button] *or* [Store] [Label] / [Beam Select Button] [xxxxxx] [return].

**Delete a Beam:**

- [Delete] [Beam] [n] [Enter] *or*  
 [Delete] / [Beam Select Button]. The display will now show this as an “empty” Beam select.

---

**Note:** This action will delete beam data for all types included in beam select.

---

---

**Note:** Since Beam selects store data according to luminaire types, if a Beam is recalled which has no data for that luminaire type, then the channel will remain in its previous state. When recalled, Beams are not routed through the filters.

---

**Recall a Beam using Beams select display:**

- Step 1. Select required channels (only selected channels of types that have data stored in that beam state will be affected).
- Step 2. Ensure Beams are selected on at least one select display.
- Step 3. Press required [Beam Select Button].

**Recall a Beam using command-line keypad:**

- Step 1. Select required channels (only selected channels of types that have data stored in that Beam will be affected).
- Step 2. Press [Beam] [n] [Enter] (where n is the discrete Beam number).

**From Select Displays Window**

When storing or modifying Beams from the Select Displays, first select channels of types to be stored in the Beam select (refer to [“Selecting Channels” on page 41](#)). Filter parameters as required and adjust with manual control functions.

To store, label, update, delete, and recall Beams, refer to the procedures given in [“Select Displays Window” on page 71](#).

**From Keypad**

**Store a new Beam:**

- Step 1. Select required channels.
- Step 2. Using manual controls, set all required parameters.
- Step 3. Filter attributes as required using Filter Display window.
- Step 4. Press [Store] [Beam] [n] [Enter] or [Store] [Beam] [n] [Label] [Enter] [xxxxxx] [return] (where n is the discrete Beam number).



**Add new types to a Beam:**

- Step 1. Select required channels.
- Step 2. Using manual controls, set all required parameters.
- Step 3. Filter attributes as required using Filter Display window.
- Step 4. Press [Store] [Beam] [n] [Enter] or [Store] [Beam] [n] [Label] [Enter] [xxxxxx] [return] (where n is the discrete Beam number).

**Delete a Beam:**

Step 1. [Delete] [Beam] [n] [Enter]. The display will now show this as an “empty” Beam.

**Recall a Beam:**

Step 1. Select required channels (only selected channels that have data stored in that Beam will be affected).



Step 2. Press [Beam] [n] [Enter] (where n is the discrete Beam number).

# Colors

---

## Overview

The Color select provides a means for storing and recalling a palette of up to 300 colors. These can be used for building cues. As a default, the Color select may contain a palette of 80 default colors, however it is possible to store your own Colors over the defaults and relabel as required.

Color (like Beams) are stored by luminaire types. This means that for any one luminaire type, only one Color setting can be stored in a single Color select. For example, a select can store different colors for VL5 and VL6 luminaires, but multiple colors cannot be stored for multiple VL5 luminaires. During a store operation, the color parameters stored will be drawn from either the lowest *active* luminaire or lowest *selected* luminaire as determined by the console's default setting (refer to [“Settings Window” on page 245](#)).

---


**Note:** The default color palette supports color mixes for VARI\*LITE luminaires only. These colors are not numbered according to the VARI\*LITE Color System. Colors can be applied using VARI\*LITE color numbers through the VL Color Data window. Refer to the [“VARI\\*LITE Color System” chapter on page 93](#) for more information.

---

### Color Select Guidelines:

- Colors are not linked to Presets or cues. This means that if a certain Color select was used when creating a cue and a new color is stored into that select, then this will not affect the color stored in the Preset or cue.
- Parameters stored into a Color select are filtered only when the console's default setting is configured to do so (refer to [“Settings Window” on page 245](#)).

Indicates that Colors have been selected

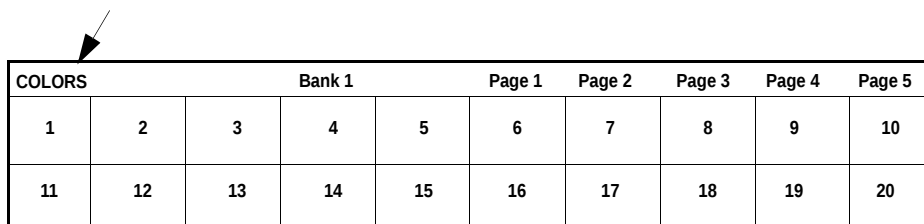

| COLORS | Bank 1 |    |    |    | Page 1 | Page 2 | Page 3 | Page 4 | Page 5 |
|--------|--------|----|----|----|--------|--------|--------|--------|--------|
| 1      | 2      | 3  | 4  | 5  | 6      | 7      | 8      | 9      | 10     |
| 11     | 12     | 13 | 14 | 15 | 16     | 17     | 18     | 19     | 20     |


## Color Palette Data Window

Color data can be viewed in the Color Palette Data window.

The top portion of the window shows the color list, along with all applicable luminaires. In addition, by selecting a single color and clicking on the Data drop-down window button, all of its numeric values can be viewed.

### Open Color Palette Data window:

- At Data menu, select Color Palette Data.

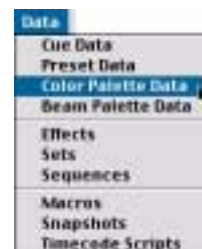

The screenshot shows the 'Color : 4' window. The top table lists colors 1 through 9 with their applicable luminaires (VLS, VLSArc, VL6, VL7, VLSB, VL6B, VL7B, Cyber). Color 4 is selected. Below this is a 'Data' section with a table showing numeric values for the selected color across different devices.

Annotations:

- Applicable Luminaires**: Points to the header row of the top table.
- Color Number**: Points to the 'Label' column of the top table.
- Data Drop-Down Window - Displays data for selected Color.**: Points to the 'Data' section header.

| # | Label | VLS | VLSArc | VL6 | VL7 | VLSB | VL6B | VL7B | Cyber |
|---|-------|-----|--------|-----|-----|------|------|------|-------|
| 1 | 1     | *   | *      | *   | *   | *    | *    | *    | *     |
| 2 | 2     | *   | *      | *   | *   | *    | *    | *    | *     |
| 3 | 3     | *   | *      | *   | *   | *    | *    | *    | *     |
| 4 | 4     | *   | *      | *   | *   | *    | *    | *    | *     |
| 5 | 5     | *   | *      | *   | *   | *    | *    | *    | *     |
| 6 | 6     | *   | *      | *   | *   | *    | *    | *    | *     |
| 7 | 7     | *   | *      | *   | *   | *    | *    | *    | *     |
| 8 | 8     | *   | *      | *   | *   | *    | *    | *    | *     |
| 9 | 9     | *   | *      | *   | *   | *    | *    | *    | *     |

| Device | Blue | Amber | Magent | C.Wheel |
|--------|------|-------|--------|---------|
| VLS    | 0    | 200   | 335    |         |
| VLSArc | 5    | 335   | 335    |         |
| VL6    |      |       |        | 40      |
| VL7    | 255  | 255   | 71     | 255     |
| VLSB   | 0    | 335   | 174    |         |
| VL6B   |      |       |        | 40      |
| VL7B   | 255  | 255   | 71     | 255     |
| Cyber  | 255  | 255   | 255    | 99      |
| Mac500 | 0    |       |        | 85      |
| Da IV  | 37   | 0     | 0      |         |
| StgZ   | 255  | 255   | 255    | 51      |

---

## Storing and Recalling Colors

---

**Note:** Beams and colors are global settings by luminaire type. The console will draw data from either lowest active or lowest selected channel as determined by the console's default settings (refer to [“Settings Window” on page 245](#)). The "lowest active" setting draws data from the lowest channel number with intensity of that type, regardless of selection. The "lowest selected" setting draws data from the lowest selected channel number of that type, regardless of intensity state.

---

### From Panel Select Displays

#### **Store a new color using Colors select display:**

- Step 1. Ensure color you wish to store is displayed in lowest *active* luminaire channel (for each luminaire type), if the default "lowest active channel" has not been changed (refer to [“Settings Window” on page 245](#)).
- Step 2. Ensure Colors are selected on at least one select display.
- Step 3. Select required bank and select page.
- Step 4. Press [Store] / [Color Select Button].

#### **Store a new color using command-line keypad:**

- Step 1. Ensure color you wish to store is displayed in lowest *active* luminaire channel (for each luminaire type), if the default "lowest active channel" has not been changed (refer to [“Settings Window” on page 245](#)).
- Step 2. Press [Store] [Color] [n] [Enter] (where n is the discrete Color number).

#### **Label an existing color, page, or bank:**

---

**Note:** When labeling, the [xxxxxx] is entered on the alpha-numeric keyboard. The [return] button is also located on the keyboard.

---

- Step 1. Ensure Colors are selected on at least one select display.
- Step 2. Press [Label] / [Color Select Button] [xxxxxx] [return] *or* [Label] / [Page Select Button] [xxxxxx] [return] *or* [Label] / [Bank Select Button] [xxxxxx] [return] as required.

#### **Recall a color using Colors select display:**

- Step 1. Select required channels.
- Step 2. Ensure Colors are selected on at least one select display.
- Step 3. Press required [Color Select Button].



### Recall a color using command-line keypad:

- Step 1. Select required channels.
- Step 2. Press [Color] [n] [Enter] (where n is the discrete Color number).

---

**Note:** Channels that are selected during a color recall that have no value for that color will remain in their current state.

---

### From Select Displays Window

When storing or modifying Colors from the Select Displays, first select channels to be stored in the Color select (refer to [“Selecting Channels” on page 41](#)).

To store, label, update, delete, and recall Colors, refer to the procedures given in [“Select Displays Window” on page 71](#).

### From Keypad

#### Store a new Color:

- Step 1. Select required channels.
- Step 2. Using manual controls, set all required parameters.
- Step 3. Press [Store] [Color] [n] [Enter] or [Store] [Color] [n] [Label] [Enter] [xxxxxx] [return] (where n is the discrete Color number).



#### Delete a Color:

- [Delete] [Color] [n] [Enter]. The display will now show this as an “empty” Color.




---

**Note:** This action will delete color information for all types stored.

---

#### Recall a Color:

- Step 1. Select required channels (only selected channels that have data stored in that Color will be affected).
- Step 2. Press [Color] [n] [Enter] (where n is the discrete Color number).



# Presets

---

## Overview

Preset selects are used to store specific luminaire parameters for the purpose of building cues. Typically, a Preset will contain focus (pan/tilt) information only, but with the Virtuoso console any desired parameter (including timing) can be stored in a Preset as determined by the filter settings. The touch screen display is used to control the filters (refer to [“Filter Mode” on page 146](#)).

Since focus is a large part of the Preset feature, no standard pre-programmed Presets are available. These will need to be stored in relation to the specific requirements of your show.

**Features:**

The most important feature of Presets is that they are referenced by cues. This feature provides a way of saving time during the initial programming of a show and for updating focuses or other parameters throughout all of your cues if something on stage changes. For example, a Preset may be stored as a focus reference cue in which only pan and tilt parameters are specified. These could be labeled Stage Center, Stage Right, Stage Left, etc. When you use a Preset to build a cue, the Preset information is linked directly to that cue. If a refocus is required, the appropriate Preset could be changed and all the cues built using it would automatically reflect the change.

Indicates that Presets have been selected

| PRESETS |    |    | Bank 1 |    | Page 1 | Page 2 | Page 3 | Page 4 | Page 5 |
|---------|----|----|--------|----|--------|--------|--------|--------|--------|
| 1       | 2  | 3  | 4      | 5  | 6      | 7      | 8      | 9      | 10     |
| 11      | 12 | 13 | 14     | 15 | 16     | 17     | 18     | 19     | 20     |

## Preset Data Window

Preset data can be viewed in the Preset Data window.

The top portion of the window shows the Preset list, along with all associated labels, channels, and filters which have been stored into the Presets. In addition, by selecting a single Preset and clicking on the Data drop-down window button, all its parameter data can be viewed.



The Value (V) button will display the numeric value which has been stored into each parameter. The Dynamic (D) will display any associated dynamic state information. The “V” and “D” toggle buttons allow you to display one or both types of information in the window.

### Open Preset Data window:

- At Data menu, select Preset Data.

Associated Filters

Associated Channels

Label

Preset Number

Data Drop-Down Window - Displays data for selected Preset.

Value - Displays value that luminaire is reporting for the parameters when selected.

Dynamic - Displays dynamic state information when selected.

Opens Parameter Columns window \* which is used to choose which columns appear in window.

| # | Preset | Filter                 | Channels |
|---|--------|------------------------|----------|
| 1 | 1 Home | 1-6<br>1-3<br>4<br>5-6 |          |
| 2 | 2 VLS  | 1-6<br>1-3<br>4<br>5-6 |          |
| 3 | 3      |                        |          |
| 4 | 4      |                        |          |
| 5 | 5 SL   | 1-6<br>1-3             |          |

| Chann | Inten | Pan | Tilt | Amber | Blue | Magent | Beam |
|-------|-------|-----|------|-------|------|--------|------|
| 1     | 100   | 383 | 266  | 0     | 0    | 0      |      |
| 2     | 100   | 359 | 764  | 0     | 0    | 0      |      |
| 3     | 100   | 701 | 794  | 0     | 0    | 0      |      |

\* Refer to “Parameter Columns Window” on page 61.

---

## Storing, Modifying, and Recalling Presets

### From Panel Select Displays

---

**Note:** When labeling, the [xxxxxx] is entered on the alpha-numeric keyboard. The [return] button is also located on the keyboard.

---

#### Store a new preset using Presets select display:

- Step 1. Select required channels.
- Step 2. Ensure Presets are selected on at least one select display.
- Step 3. Using manual controls, set all required parameters.
- Step 4. Filter attributes as required using touch screen display.
- Step 5. Press [Store] / [Preset Select Button] or [Store] [Label] / [Preset Select Button] [xxxxxx] [return].



#### Store a new preset using command-line keypad:

- Step 1. Select required channels.
- Step 2. Using manual controls, set all required parameters.
- Step 3. Filter attributes as required using touch screen display.
- Step 4. Press [Store] [Preset] [n] [Enter] or [Store] [Preset] [n] [Label] [xxxxxx] [return] (where n is the discrete Preset number).

#### Label an existing Preset select:

- Step 1. Ensure Presets are selected on at least one select display.
- Step 2. Press [Label] / [Preset Select Button] [xxxxxx] [return].

#### Add new channels to a Preset:

If a Preset is already stored, the [Store] command can add new channels to that Preset, provided those channels are selected. If the channel already has data for the Preset, that data will be overwritten with current data.

- Step 1. Select required channels.
- Step 2. Ensure Presets are selected on at least one select display.
- Step 3. Press [Store] / [Preset Select Button] or [Store] [Label] / [Preset Select Button] [xxxxxx] [return].



### Modify parameters using Selective Store:

The Selective Store command modifies parameter data for selected channels as determined by any filter settings. For more information, refer to [“Selective Store” on page 204](#).

Step 1. At touch screen display, modify filter settings as required.

Step 2. Select required channels.

Step 3. Press [Sel Store] / [Preset Select Button] or [Sel Store] [Preset] [n] [Enter] (where n is the discrete Preset number).



### Update a preset:

The [Update] command does not add channels, but modifies any stored data that has been changed by manual control for channels and parameters associated with that Preset. It does not route through the filter settings. For more information, refer to [“Update” on page 203](#).

Step 1. Make changes by manual control.

Step 2. Press [Update] / [Preset Select Button] or [Update] [Preset] [n] [Enter] (where n is the discrete Preset number).



### Delete an entire Preset:

Step 1. Select all channels in that Preset.

Step 2. [Delete] [Preset] [n] [Enter] (where n is the discrete preset number) or [Delete] / [Preset Select Button]. The display will now show this as an “empty” Preset.

---

**Note:** Unexpected behavior may occur for cues referencing a deleted preset. Cues will be played back with intensity at *zero* for channels that reference a deleted preset. This acts as a warning that cue data is incomplete. To verify this has happened, check the console log window available from the Setup menu.

---

### Delete a specific channel's Preset data:

Step 1. Select channels you wish to remove from a Preset.

Step 2. [Delete] [Preset] [n] [Enter] (where n is the discrete preset number) or [Delete] / [Preset Select Button].

### Recall a preset using Presets select display:

Step 1. Select required channels (only selected channels that have data stored in that preset will be affected).

Step 2. Ensure Presets are selected on at least one select display.

Step 3. Press required [Preset Select Button].

### Recall a preset using command-line keypad:

- Step 1. Select required channels (only selected channels that have data stored in that Preset will be affected).
- Step 2. Press [Preset] [n] [Enter] (where n is the discrete Preset number).

### Recall specific preset data:

---

**Note:** For more information, refer to [“Selective Recall” on page 205](#).

---

- Step 1. At touch screen display, select Filter mode. Using touch screen, select parameters to be recalled.
- Step 2. Select channel(s) as required.
- Step 3. Press [Recall] [Preset] [n] [Enter] or [Recall] [Preset Select Button]. All stored data will be recalled from the specified preset (n), as defined by the selections on the filters.



### From Select Displays Window

When storing or modifying Presets from the Select Displays, first select channels to be stored in the Preset select (refer to [“Selecting Channels” on page 41](#)). Filter parameters as required and adjust with manual control functions.

To store, label, update, delete, and recall Presets, refer to the procedures given in [“Select Displays Window” on page 71](#).

### From Keypad

---

**Note:** All Presets have a discrete number which is used when accessing Presets from the keypad. Presets maintain this number, even when given another label.

---

### Store a new Preset:

- Step 1. Select required channels.
- Step 2. Using manual controls, set all required parameters.
- Step 3. Filter attributes as required using Filter Display window.
- Step 4. Press [Store] [Preset] [n] [Enter] or [Store] [Preset] [n] [Label] [xxxxxx] [return] (where n is the discrete Preset number).



### Add new channels to a Preset:

- Step 1. Select required channels.
- Step 2. Press [Store] [Preset] [n] [Enter] or [Store] [Preset] [n] [Label] [xxxxxx] [return] (where n is the discrete Preset number).

**Delete a Preset:**

Step 1. Select all channels in that Preset select.

Step 2. [Delete] [Preset] [n] [Enter]. The display will now show this as an “empty” Preset.

**Recall a Preset:**

Step 1. Select required channels (only selected channels that have data stored in that Preset will be affected).

Step 2. Press [Preset] [n] [Enter] (where n is the discrete Preset number).

# Groups

---

## Overview

To automate channel selection, groups of channels may be stored into the Group selects available in the panel Select Displays or Select Displays window. Groups can also be created and recalled from the command-line keypad.

For example, you could store all VL5 luminaires as one group, all VL6 luminaires as another group, etc. These groups can be labeled in the group select bank as VL5 and VL6 or perhaps, Wash and Spot.

---

## Storing, Modifying, and Recalling Groups

---

**Note:** When an existing Group is updated or re-stored, the new information replaces the old information. It does not add to the existing group information.

---

### From Panel Select Displays

#### Store a group:

- Step 1. Select channels to be stored in group (refer to [“Selecting Channels” on page 41](#)).
- Step 2. Access required Bank and Page.
- Step 3. Press [Store] / [Group Select Button] *or* [Store] [Label] / [Group Select Button] [xxxxxx] [return]

#### Label a group:

When labeling, the [xxxxxx] is entered on the alpha-numeric keyboard. The [return] button is also located on the keyboard.

- [Label] / [Group Select Button] [xxxxxx] [return].

#### Recall a group:

- Step 1. Access required Bank and Page.
- Step 2. Press required [Group Select Button].

**Recall two or more groups:**

- Step 1. Access required Bank and Page of first group.
- Step 2. Press required [Group Select Button].
- Step 3. Access required Bank and Page of second group.
- Step 4. Press required [Group Select Button] of second group. Hold down [Page Button] to pile-on selections.
- Step 5. Repeat Steps 3 and 4 as required.

**Modify a group:**

Modifications to existing groups can be done in the same manner as storing the original group as given above.

**From Select Displays Window**

When storing or modifying Groups from the Select Displays, first select channels to be stored in the Group (refer to [“Selecting Channels” on page 41](#)).

To store, label, update, delete, and recall groups, refer to the procedures given in [“Select Displays Window” on page 71](#).

**From Keypad****Store a Group:**

- Step 1. Select channels to be stored in group (refer to [“Selecting Channels” on page 41](#)).
- Step 2. Press [Store] [Group] [n] [Enter].

**Modify a Group:**

Modifications to existing Groups can be done in the same manner as storing the original Group given above.

**Recall a Group:**

The following are samples of possible command-line entries to recall a group.




- [Group] [n] [Enter] - selects all channels in Group n.
- [Group] [n] [+] [m] [Enter] - selects all channels in Group n plus Channel m.
- [Group] [n] [+] [Group] [m] [Enter] - selects all channels in Group n and Group m.

# Macros, Snapshots, and Effects

## Overview

Macros, snapshots, and effects can also be accessed at the panel select displays or the Select Displays window once you have stored them. As with presets, colors, beams, and groups their labels will appear in the window and selecting the corresponding select button will recall the event. Instructions for storing and recalling these types of events are covered in this manual as follows:

- “Basic Effects” chapter on page 115.
- “Snapshots” on page 173.
- “Macros” on page 178.

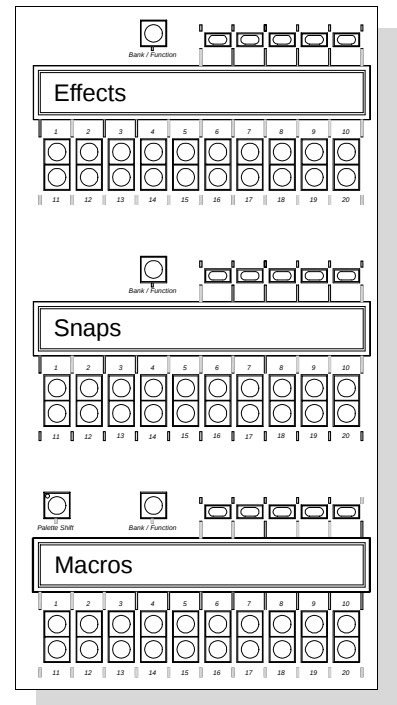

# CHAPTER 5.

---

## VARI\*LTE Color System

This chapter provides instructions for applying VARI\*LTE system colors to both VARI\*LTE and DMX-controllable luminaires.

- **Color Control**
- **Applying VARI\*LTE Colors**
- **VARI\*LTE Color System Charts**

*(This page intentionally blank.)*

# Color Control

---

## Overview

As mentioned in the previous chapter, color can be controlled by the encoders, Color Select Display, and the keypad. In addition, the Vari-Lite Color System window is available for applying colors from the VARI\***LITE** Color System to the luminaires. This window operates independently from the colors that may be available in the Color Selects, giving you another way to quickly apply colors.

---

## VARI\***LITE** Colors

The VARI\***LITE** Color System is a unique system of colors, each of which has a discrete number associated with it. When applied from the console, VARI\***LITE** luminaires capable of achieving that color would assume the color whether their color mechanism is a filter wheel, crossfadeable plates, or rotating filters. Some DMX luminaires have been added to the VARI\***LITE** color system. This system allows consistent color matching across all types of luminaires.

The VARI\***LITE** Color System window is a logical listing of color names and gel numbers that can be selected and displayed from selected luminaires. The listing contains the color name, VARI\***LITE** ID number, and gel number equivalent which is used throughout the lighting industry. Refer to “[VARI\\*\*\*LITE\*\* Color System Charts](#)” on page 98 for a complete listing of VARI\***LITE** colors and their equivalents.

# Applying VARI\*LITE Colors

## From VL Color System Window


Using the VARI\*LITE Color System window, you can select a specific color either by its VARI\*LITE color name or number, or by gel number and have all luminaires able to achieve that color go to that color. When colors are sent, luminaires able to achieve the color will do so. Luminaires unable to achieve the color will go to black, except for VL6 luminaires, which go to white. The window uses the following graphics to indicate luminaire compatibility with any given color:

- A black, filled circle indicates that the luminaire can match the color.
- A white, unfilled circle indicates that the luminaire can almost match the color.
- A blank cell indicates that the color is unattainable by the luminaire.

Colors achieved initially through the VL color system can also be stored in the Color select palette (refer to [“Storing and Recalling Colors” on page 82](#)).

### Open VARI\*LITE Color System window:

- At Operation menu, select VL Color System.

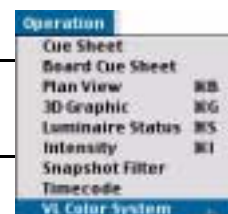

**Note:** Color matching for DMX fixtures is done by fixture type, e.g., CYB for Cyberlight fixtures in all modes, etc.

The screenshot shows the 'Vari-Lite Color System' window. It has a table with columns: Color, ID, Gel, VLSrc, VLSB, VL6, VL6B, VL7, VL7B, Cyber, and CF7HE. The table lists several colors like Dark Orange, Light Red, Orange, Medium Amber, Deep Golden, Canary, Light Amber, and Lee Orange. Annotations point to various parts of the window: 'Sorts list by VL ID number' points to the ID column; 'Sorts list by gel number' points to the Gel column; 'Sorts list by color name' points to the Color column; 'Luminaire compatibility' points to the columns VLSrc through CF7HE; 'Sends color selection to luminaires' points to the 'Send' button; 'Responds to keyboard Enter key presses' points to the 'Enter' key on the keyboard; and 'Currently selected list will respond to entries made at the Macintosh keyboard. For example, while sorted by Gel, typing in G840 at the keyboard will highlight this color in the window. Subsequently pressing the keyboard's Enter key will send the color to selected luminaires.' points to the table.

**Send colors using window only:**

- Step 1. Select required channels.
- Step 2. Using cursor, select color choice.
- Step 3. Click Send button (or just double-click on color choice). Luminaires able to achieve the color will do so. Luminaires unable to achieve color will go to black, except for VL6 luminaires, which go to white.

**Send colors using window and keyboard:**

- Step 1. Select required channels.
- Step 2. Using cursor, sort list by Color, ID, or Gel.
- Step 3. At keyboard type in first few letters of color, ID number, or Gel number. Selection will be highlighted in window.
- Step 4. Press keyboard [Enter] button to send.

---

## From Keypad

The command-line keypad can also be used to assign VARI\**LITE* colors to selected luminaires. The color number entered on the keypad corresponds to the colors listed in the VARI\**LITE* Color System Charts starting on the next page.

Examples:



- <Chan> [n] [Vari-Lite Color] [m] [Enter] - applies VARI\**LITE* color m to the selected channel n (where m is the discrete color number).
- <Chan> [n] [Thru] [q] [Vari-Lite Color] [m] [Enter] - applies VARI\**LITE* color m to the selected range of channels (where m is the discrete color number).

# VARI\**LITE* Color System Charts

## VL Color System for VARI\**LITE* Luminaires

**Note:** Numbers in the VL6/VL6B column correspond to VARI\**LITE* color wheel filters available by special order.

**Table 5-1: VARI\**LITE* Color System for VARI\**LITE* Luminaires**

| Color Name           | VL No. | Similar To        | VL2C  | VL4    | VL5    | VL5A   | VL5B   | VL6/<br>VL6B | VL7/<br>VL7B |
|----------------------|--------|-------------------|-------|--------|--------|--------|--------|--------------|--------------|
| Pink Tint            | 101    | Lux 55            |       | Match  |        | Match  | Almost | 350          | Match        |
| Bastard Amber        | 103    | Lux 02            |       | Match  | Match  | Match  | Match  |              | Match        |
| GAM Bastard Amber    | 104    | GAM 325           |       | Match  | Match  | Match  | Match  |              | Match        |
| Warm Bastard Amber   | 105    | Lee 162           |       | Match  | Match  | Match  | Match  | 360          | Match        |
| Pale Golden Amber    | 107    | Lux 09            |       | Almost | Match  | Match  | Match  |              | Match        |
| Light Amber          | 110    | Lux 16<br>Lee 204 |       | Match  | Match  | Almost | Match  |              | Match        |
| Light Flame          | 112    | Lux 17            |       | Match  | Match  | Almost | Almost |              | Match        |
| Medium Bastard Amber | 115    | Lux 04            |       | Almost | Match  | Match  | Match  |              | Match        |
| Dark Bastard Amber   | 116    | Lux 03            |       |        | Match  | Almost | Match  |              | Match        |
| Warm Amber           | 122    | Lee 176<br>Lux 01 |       | Match  | Match  | Match  | Match  |              | Match        |
| Peach                | 125    | GAM 320           |       | Almost | Match  | Almost | Match  |              | Match        |
| Flesh Pink           | 131    | Lux 34            |       | Match  | Match  | Match  | Match  |              | Match        |
| Dark Pink            | 134    | Lee 111           |       | Match  | Match  | Match  | Match  |              | Match        |
| Medium Salmon        | 136    | Lux 32            |       | Match  | Match  | Almost | Match  |              | Match        |
| Salmon               | 138    | Lux 41            |       | Match  | Match  | Match  | Match  |              | Match        |
| Brite Pink           | 141    | Lee 128           |       | Match  | Match  | Almost | Almost |              | Match        |
| Dark Peach           | 145    |                   |       | Match  | Match  | Match  |        |              | Match        |
| Lee Magenta          | 149    | Lee 113           |       | Match  | Almost | Match  |        |              | Almost       |
| Dark Salmon          | 151    |                   |       | Match  | Almost | Almost |        |              | Match        |
| Deep Salmon          | 155    |                   |       | Match  | Match  | Match  |        |              |              |
| Dark Red             | 161    |                   | Match |        |        |        |        |              |              |
| Medium Red           | 164    | Lux 27            | Match | Match  | Match  | Match  | Match  |              |              |
| Primary Red          | 168    | Lee 106           | Match | Almost | Match  | Match  | Match  |              |              |
| Dark Orange          | 173    | Lux 26            | Match | Match  | Match  | Almost | Match  |              |              |
| Light Red            | 177    | GAM 235           |       | Match  | Match  | Match  |        | Match        | Match        |
| Dark Orange          | 181    |                   | Match | Match  | Match  | Match  | Almost |              |              |

Table 5-1: VARI\**LITE* Color System for VARI\**LITE* Luminaires (Continued)

| Color Name             | VL No. | Similar To         | VL2C   | VL4    | VL5    | VL5A   | VL5B   | VL6/<br>VL6B | VL7/<br>VL7B |
|------------------------|--------|--------------------|--------|--------|--------|--------|--------|--------------|--------------|
| Orange                 | 183    | Lux 19<br>Lee 164  | Match  | Match  | Match  | Match  | Almost | Match        | Almost       |
| Medium Amber           | 187    | Lux 22             | Almost | Match  | Match  | Match  | Match  |              | Match        |
| Deep Golden Amber      | 201    | GAM 345            | Almost | Match  | Match  | Match  | Match  | 430          | Match        |
| Canary                 | 205    | Lux 21             | Almost | Match  | Match  | Almost | Almost |              | Match        |
| Light Amber            | 208    |                    | Match  | Match  | Match  | Match  | Almost |              | Match        |
| Lee Orange             | 212    | Lee 105            | Match  | Match  | Match  | Match  | Match  |              | Match        |
| Chrome Orange          | 214    | Lux 15<br>Lee 179  | Match  | Match  | Match  | Match  | Match  | 410          | Match        |
| Bright Yellow          | 219    |                    | Almost | Almost | Match  | Match  | Match  |              | Match        |
| Dark Straw             | 221    |                    | Match  | Match  | Match  | Match  | Match  |              | Match        |
| Deep Amber             | 223    | Lee 104            |        | Match  | Match  | Almost | Match  |              | Match        |
| Light Yellow           | 225    | Lee 101            | Almost |        | Match  | Match  | Match  | Match        | Match        |
| Straw                  | 237    | Lux 12             | Almost |        | Match  | Match  | Match  |              | Match        |
| Light Straw            | 239    |                    | Match  | Almost | Match  | Match  | Match  |              | Match        |
| No Color Green         | 245    | Lee 213<br>Lee 202 | Almost | Almost | Almost | Match  | Match  | 370          | Match        |
| Pale Yellow-Green      | 251    |                    | Match  |        |        |        | Match  |              | Match        |
| Fern Green             | 254    | Lee 122            | Almost | Match  |        |        | Match  |              | Match        |
| Yellow-Green           | 256    |                    | Match  | Match  |        |        | Match  |              | Match        |
| Lime Green             | 257    | Lee 139            | Match  | Almost | Almost | Match  | Match  | Match        | Match        |
| Primary Green          | 259    |                    | Match  |        | Match  | Match  | Match  |              | Match        |
| Light Green            | 261    |                    | Match  |        | Match  | Match  | Match  |              | Match        |
| Moss Green             | 263    |                    | Match  |        | Match  | Match  | Match  |              | Match        |
| Lt. Blue Green         | 267    |                    | Match  | Almost | Almost | Almost | Match  |              | Match        |
| Kelly Green            | 268    | Lux 94             | Almost | Match  |        |        | Match  |              | Match        |
| Dark Green             | 270    | Lee 124            | Match  | Almost |        |        | Match  |              | Match        |
| Fluorescent Green      | 273    |                    | Match  |        | Almost | Match  | Match  |              | Match        |
| Dark Fluorescent Green | 275    |                    | Almost |        | Match  | Match  | Match  |              | Match        |
| Blue-Grass Green       | 281    | GAM 690<br>GAM 440 | Almost |        | Match  | Match  | Match  | 680          | Match        |
| Medium Blue-Green      | 284    | Lee 116            | Almost | Almost | Match  | Match  | Match  |              | Match        |
| Dark Peacock Green     | 286    |                    | Almost |        | Match  | Match  | Match  |              | Match        |
| Peacock Green          | 287    | Lee 115            | Almost | Match  |        |        | Match  |              | Match        |
| Dark Turquoise         | 289    |                    | Match  | Match  |        |        | Match  |              | Match        |
| Light Aqua             | 291    |                    | Match  | Almost | Match  | Match  | Almost |              | Match        |
| Aqua                   | 295    |                    | Match  |        | Match  | Match  |        |              | Match        |
| Rosco Peacock Blue     | 298    | Lux 73             |        | Almost |        |        | Match  |              | Match        |

**Table 5-1: VARI\*LITE Color System for VARI\*LITE Luminaires (Continued)**

| Color Name               | VL No. | Similar To              | VL2C   | VL4    | VL5    | VL5A   | VL5B   | VL6/<br>VL6B | VL7/<br>VL7B |
|--------------------------|--------|-------------------------|--------|--------|--------|--------|--------|--------------|--------------|
| Lee Steel Blue           | 299    | Lee 117                 |        | Almost |        |        | Match  |              | Match        |
| 1/4 CTB                  | 301    | Lee 203                 |        | Match  |        | Match  | Match  |              | Almost       |
| 1/2 CTB                  | 303    | Lee 202<br>Lux 61       |        | Match  |        | Match  | Match  |              | Almost       |
| Full CTB                 | 307    | Lee 201                 | Match  | Almost |        | Almost | Almost | 810          | Match        |
| City Blue                | 310    | GAM 847<br>Polycolor 70 | Almost | Match  |        |        | Match  | 830          | Match        |
| N.C. Blue                | 313    | GAM 840<br>GAM 980      |        | Match  |        |        | Almost | 840          | Match        |
| Slate Blue               | 318    | Lee 161                 |        |        |        |        | Almost |              | Match        |
| Pale Blue                | 321    | Lux 69                  | Match  | Almost |        |        |        | Match        | Match        |
| Lee Light Blue           | 325    | Lee 118                 | Almost | Match  |        |        |        |              | Match        |
| Bright Blue              | 330    | Lee 141                 | Almost | Match  | Almost | Match  | Match  |              | Almost       |
| Medium Blue              | 342    | Lee 132                 | Match  | Almost | Match  | Almost | Match  |              | Match        |
| Sea Blue                 | 345    | Lux 68<br>GAM 810       | Match  | Match  | Almost | Almost | Almost | 805          | Match        |
| Icy Blue                 | 350    |                         | Match  | Match  | Match  | Match  | Match  |              | Match        |
| Just Blue                | 355    | Lee 79                  | Almost |        | Almost | Almost | Match  |              |              |
| Primary Blue             | 359    | Lux 83<br>GAM 850       | Match  |        | Almost | Match  | Almost | 865          | Match        |
| Dark Steel Blue          | 365    |                         | Match  |        | Almost |        |        |              | Match        |
| Deep Blue                | 371    |                         | Match  | Almost | Almost | Match  |        |              | Match        |
| Dark Blue                | 374    | Lee 120                 | Match  | Match  | Almost | Match  |        | Match        | Match        |
| Royal Blue               | 380    | GAM 905                 | Almost | Match  | Match  | Match  |        | 880          | Match        |
| Dark UV                  | 401    |                         | Match  |        | Almost | Almost |        |              | Match        |
| Indigo                   | 403    | Lux 59                  | Match  | Match  | Match  | Almost |        |              | Match        |
| Congo Blue               | 406    | Lee 181                 | Match  | Match  | Match  | Match  |        | Match        | Match        |
| Darkest<br>Lavender      | 409    |                         | Match  | Match  | Match  | Match  |        |              | Match        |
| Dark Rose<br>Purple      | 411    |                         | Match  | Match  | Match  | Match  |        |              | Match        |
| Deep Lavender            | 415    |                         | Match  | Match  | Almost | Match  |        |              | Match        |
| Lilac                    | 418    |                         | Match  | Almost | Match  | Match  |        |              | Almost       |
| Special Dark<br>Lavender | 421    |                         | Match  | Match  | Match  | Match  |        |              | Match        |
| Cool Lavender            | 422    | GAM 845                 | Match  | Almost | Match  | Almost |        | 845          | Match        |
| Pale Lavender            | 425    |                         | Match  |        |        |        | Match  |              | Match        |
| Mercury Vapor            | 429    |                         | Match  | Match  |        | Match  |        |              | Match        |
| Medium Violet            | 433    | Lux 359                 | Match  | Almost | Match  |        | Almost | 970          | Match        |
| Dark Lavender            | 443    | Lee 180                 | Match  | Almost | Match  | Almost | Match  | 980          | Match        |
| Lee Special<br>Lavender  | 447    | Lee 137                 |        | Match  | Almost | Match  | Match  |              | Match        |
| Twilight                 | 451    | GAM 915                 |        | Match  |        |        | Almost | 930          | Match        |
| Deep Lavender            | 455    | GAM 948                 | Match  | Match  | Match  | Match  | Match  | Match        | Match        |
| Pale Lilac               | 461    |                         | Match  | Almost | Match  | Match  | Match  |              | Match        |

**Table 5-1: VARI\**LITE* Color System for VARI\**LITE* Luminaires (Continued)**

| Color Name         | VL No. | Similar To         | VL2C   | VL4   | VL5    | VL5A   | VL5B   | VL6/<br>VL6B | VL7/<br>VL7B |
|--------------------|--------|--------------------|--------|-------|--------|--------|--------|--------------|--------------|
| Periwinkle         | 463    | GAM 960<br>GAM 970 | Match  | Match | Match  | Match  | Match  | Match        | Match        |
| Dusty Lavender     | 466    |                    | Match  | Match | Almost | Match  | Almost |              | Match        |
| No Color Lilac     | 468    | Lux 52             | Match  | Match |        | Match  | Match  |              | Match        |
| Special Lavender   | 469    | Lux 54             |        | Match |        | Match  | Match  |              | Match        |
| Dark Rose          | 471    |                    | Match  | Match | Almost | Match  |        |              | Match        |
| Dark Fushia        | 474    | Lux 358            | Almost | Match | Match  | Almost |        | 985          | Match        |
| Dark Follies Pink  | 476    |                    | Almost | Match | Match  | Almost |        |              | Match        |
| Magenta            | 478    | Lee 126            | Almost | Match | Match  |        |        | Match        | Match        |
| Hot Pink           | 480    |                    | Almost | Match | Match  |        |        |              | Match        |
| Mauve              | 483    |                    | Almost | Match | Match  |        |        |              | Match        |
| Follies Pink       | 489    |                    | Almost | Match | Match  |        |        |              | Almost       |
| Flesh Pink         | 491    |                    |        | Match | Match  | Match  | Match  |              | Match        |
| Rose Purple        | 492    | Lux 48             |        | Match |        | Match  | Match  | 080          | Match        |
| Carnation          | 494    |                    |        | Match |        | Almost | Almost |              | Match        |
| No Color Pink      | 495    |                    |        | Match | Match  | Almost | Match  |              | Match        |
| Cool Bastard Amber | 496    | Lux 52<br>Lux 33   | Almost | Match | Almost | Almost | Match  | Match        |              |
| Dusty Rose         | 497    |                    | Almost | Match |        | Almost | Match  |              | Match        |
| Rouge              | 498    |                    | Almost | Match | Match  | Match  | Match  |              | Match        |

## VL Color System for DMX-Controllable Fixtures

**Table 5-2: VARI\**LITE* Color System for DMX Fixtures**

| Color Name           | VL No. | Similar To        | CYB    | SSZ    | PAL    |
|----------------------|--------|-------------------|--------|--------|--------|
| Pink Tint            | 101    | Lux 55            | Match  | Match  | Match  |
| Bastard Amber        | 103    | Lux 02            | Match  | Match  | Match  |
| GAM Bastard Amber    | 104    | GAM 325           |        |        | Match  |
| Warm Bastard Amber   | 105    | Lee 162           | Match  | Match  | Match  |
| Pale Golden Amber    | 107    | Lux 09            | Match  | Match  | Match  |
| Light Amber          | 110    | Lux 16<br>Lee 204 | Match  | Match  | Almost |
| Light Flame          | 112    | Lux 17            | Match  | Match  | Match  |
| Medium Bastard Amber | 115    | Lux 04            | Match  | Match  | Match  |
| Dark Bastard Amber   | 116    | Lux 03            | Match  | Match  | Match  |
| Warm Amber           | 122    | Lee 176<br>Lux 01 | Match  | Match  | Match  |
| Peach                | 125    | GAM 320           | Match  | Match  | Match  |
| Flesh Pink           | 131    | Lux 34            | Almost | Almost | Match  |
| Dark Pink            | 134    | Lee 111           | Match  | Match  | Match  |
| Medium Salmon        | 136    | Lux 32            | Match  | Match  | Match  |
| Salmon               | 138    | Lux 41            | Match  | Match  | Match  |
| Brite Pink           | 141    | Lee 128           | Match  | Match  | Match  |
| Dark Peach           | 145    |                   | Match  | Match  | Match  |
| Lee Magenta          | 149    | Lee 113           | Match  |        | Match  |
| Dark Salmon          | 151    |                   | Match  |        | Match  |
| Deep Salmon          | 155    |                   |        |        | Almost |
| Dark Red             | 161    |                   |        |        |        |
| Medium Red           | 164    | Lux 27            |        |        |        |
| Primary Red          | 168    | Lee 106           |        |        |        |
| Dark Orange          | 173    | Lux 26            |        |        |        |
| Light Red            | 177    | GAM 235           | Almost |        |        |
| Dark Orange          | 181    |                   |        |        | Match  |
| Orange               | 183    | Lux 19<br>Lee 164 | Match  |        | Match  |
| Medium Amber         | 187    | Lux 22            | Match  | Almost | Match  |
| Deep Golden Amber    | 201    | GAM 345           | Almost | Match  | Match  |
| Canary               | 205    | Lux 21            | Match  | Match  | Match  |
| Light Amber          | 208    |                   | Match  | Match  | Match  |
| Lee Orange           | 212    | Lee 105           | Match  | Almost | Match  |

Table 5-2: VARI\**LITE* Color System for DMX Fixtures (Continued)

| Color Name         | VL No. | Similar To              | CYB    | SSZ    | PAL    |
|--------------------|--------|-------------------------|--------|--------|--------|
| Chrome Orange      | 214    | Lux 15<br>Lee 179       | Almost | Match  | Match  |
| Bright Yellow      | 219    |                         | Match  | Match  | Match  |
| Dark Straw         | 221    |                         |        | Almost | Match  |
| Deep Amber         | 223    | Lee 104                 | Almost | Almost | Match  |
| Light Yellow       | 225    | Lee 101                 | Match  | Match  | Match  |
| Straw              | 237    | Lux 12                  | Match  | Almost | Match  |
| Light Straw        | 239    |                         |        | Almost | Match  |
| No Color Green     | 245    | Lee 213<br>Lee 202      |        | Almost | Match  |
| Pale Yellow-Green  | 251    |                         |        | Match  | Match  |
| Fern Green         | 254    | Lee 122                 | Match  | Match  | Match  |
| Yellow-Green       | 256    |                         |        | Match  | Match  |
| Lime Green         | 257    | Lee 139                 | Match  |        |        |
| Primary Green      | 259    |                         | Match  |        | Match  |
| Light Green        | 261    |                         | Match  |        | Almost |
| Moss Green         | 263    |                         | Match  |        | Almost |
| Lt. Blue Green     | 267    |                         | Match  | Almost | Match  |
| Kelly Green        | 268    | Lux 94                  | Match  | Almost | Match  |
| Dark Green         | 270    | Lee 124                 | Match  | Match  | Match  |
| Fluorescent Green  | 273    |                         | Match  | Almost |        |
| Dark Fluor. Green  | 275    |                         | Match  | Almost |        |
| Blue-Grass Green   | 281    | GAM 690<br>GAM 440      | Match  |        |        |
| Medium Blue-Green  | 284    | Lee 116                 | Match  | Match  |        |
| Dark Peacock Green | 286    |                         | Match  | Match  |        |
| Peacock Green      | 287    | Lee 115                 | Match  |        | Match  |
| Dark Turquoise     | 289    |                         | Match  | Almost | Match  |
| Light Aqua         | 291    |                         | Match  | Almost | Match  |
| Aqua               | 295    |                         |        |        |        |
| Rosco Peacock Blue | 298    | Lux 73                  | Almost |        | Match  |
| Lee Steel Blue     | 299    | Lee 117                 | Match  |        | Match  |
| 1/4 CTB            | 301    | Lee 203                 |        | Match  | Match  |
| 1/2 CTB            | 303    | Lee 202<br>Lux 61       |        | Match  | Match  |
| Full CTB           | 307    | Lee 201                 | Almost | Almost | Match  |
| City Blue          | 310    | GAM 847<br>Polycolor 70 | Almost | Almost |        |
| N.C. Blue          | 313    | GAM 840<br>GAM 980      | Almost | Match  |        |
| Slate Blue         | 318    | Lee 161                 | Almost | Match  | Match  |
| Pale Blue          | 321    | Lux 69                  | Match  |        | Match  |

**Table 5-2: VARI\**LITE* Color System for DMX Fixtures (Continued)**

| <b>Color Name</b>     | <b>VL No.</b> | <b>Similar To</b>  | <b>CYB</b> | <b>SSZ</b> | <b>PAL</b> |
|-----------------------|---------------|--------------------|------------|------------|------------|
| Lee Light Blue        | 325           | Lee 118            | Match      | Match      | Match      |
| Bright Blue           | 330           | Lee 141            | Match      |            | Match      |
| Medium Blue           | 342           | Lee 132            | Match      | Almost     | Match      |
| Sea Blue              | 345           | Lux 68<br>GAM 810  | Match      | Almost     | Almost     |
| Icy Blue              | 350           |                    | Match      | Match      | Match      |
| Just Blue             | 355           | Lee 79             | Match      | Match      |            |
| Primary Blue          | 359           | Lux 83<br>GAM 850  | Match      | Match      | Almost     |
| Dark Steel Blue       | 365           |                    |            |            |            |
| Deep Blue             | 371           |                    |            |            |            |
| Dark Blue             | 374           | Lee 120            |            |            |            |
| Royal Blue            | 380           | GAM 905            |            |            |            |
| Dark UV               | 401           |                    |            |            |            |
| Indigo                | 403           | Lux 59             |            |            | Match      |
| Congo Blue            | 406           | Lee 181            |            |            |            |
| Darkest Lavender      | 409           |                    |            |            | Match      |
| Dark Rose Purple      | 411           |                    | Match      | Match      | Match      |
| Deep Lavender         | 415           |                    | Almost     | Match      | Match      |
| Cool Lavender         | 422           | GAM 845            | Almost     | Match      | Match      |
| Lilac                 | 418           |                    | Almost     | Match      | Match      |
| Special Dark Lavender | 421           |                    | Match      | Match      | Match      |
| Pale Lavender         | 425           |                    | Almost     | Match      | Match      |
| Mercury Vapor         | 429           |                    | Almost     | Almost     | Match      |
| Medium Violet         | 433           | Lux 359            | Match      | Match      | Match      |
| Dark Lavender         | 443           | Lee 180            | Match      | Match      | Almost     |
| Lee Special Lavender  | 447           | Lee 137            | Match      | Match      | Almost     |
| Twilight              | 451           | GAM 915            | Almost     | Match      | Match      |
| Deep Lavender         | 455           | GAM 948            | Match      | Match      | Match      |
| Pale Lilac            | 461           |                    | Almost     | Match      | Match      |
| Periwinkle            | 463           | GAM 960<br>GAM 970 | Match      | Match      | Match      |
| Dusty Lavender        | 466           |                    | Almost     | Match      | Match      |
| No Color Lilac        | 468           | Lux 52             | Match      | Match      |            |
| Special Lavender      | 469           | Lux 54             | Almost     | Match      |            |
| Dark Rose             | 471           |                    |            | Almost     | Match      |
| Dark Fushia           | 474           | Lux 358            | Match      | Match      | Match      |
| Dark Follies Pink     | 476           |                    | Match      | Match      | Match      |
| Magenta               | 478           | Lee 126            | Match      | Match      | Almost     |
| Hot Pink              | 480           |                    | Match      |            | Match      |
| Mauve                 | 483           |                    | Match      |            | Match      |

Table 5-2: VARI\**LITE* Color System for DMX Fixtures (Continued)

| Color Name         | VL No. | Similar To       | CYB    | SSZ    | PAL    |
|--------------------|--------|------------------|--------|--------|--------|
| Follies Pink       | 489    |                  | Match  |        | Match  |
| Flesh Pink         | 491    |                  | Almost | Almost | Almost |
| Rose Purple        | 492    | Lux 48           | Match  | Match  | Match  |
| Carnation          | 494    |                  | Almost | Almost | Match  |
| No Color Pink      | 495    |                  | Almost | Almost | Match  |
| Cool Bastard Amber | 496    | Lux 52<br>Lux 33 | Almost | Almost | Match  |
| Dusty Rose         | 497    |                  | Almost | Almost | Match  |
| Rouge              | 498    |                  |        | Almost | Match  |

*(This page intentionally blank.)*

# CHAPTER 6.

---

## Basic Cues

This chapter provides an overview of cue concepts and instructions for storing a basic cue and playing it back. Once you are familiar with these basic operations, the [“Advanced Cue Features” chapter on page 191](#) will allow you to fully utilize all of the Virtuoso console’s cue capabilities.

- [Cue Concepts](#)
- [Creating Cues](#)
- [Playback](#)

*(This page intentionally blank.)*

# Cue Concepts

---

## What Is a Cue?

A cue stores a predefined combination of luminaire parameters such as focus, color, beam, timing, etc. which will be recalled when the cue is played back in a submaster. By playing back a series of cues, a show can be created.

Cues are stored with numbers which enable random access for modification or playback at any time. The Virtuoso console can store up to 10,000 cues, numbered from .01 to 9999.99. Cues can also be given alpha-numeric labels for identification.

The cue store process is basically a “what you see is what you get” operation based on the intensity state of the luminaire. In other words, the parameter values corresponding to the “stage look” are the values stored in the cue when a store operation takes place. Which parameters are stored is determined by the current intensity state of each luminaire and the filter settings.

# Creating Cues

---

## Intensity States

One of the most important factors to consider during both cue storing and playback is the intensity state and intensity level of selected channels at the time of the store operation. During store operations, the intensity state will determine which parameters will store data, and for the intensity parameter itself, what value will be stored. During playback, the intensity level will affect the overall intensity output. Intensity states/levels can be controlled using several methods, which include the Intensity encoder, associated intensity state buttons, command-line entry, submasters fader positions, Grand Master fader position, and the Black Out feature.

Because of the complexity of this subject, intensity state/level discussions are provided in stages throughout this manual as follows:

| Subject                            | Explanation                                                |
|------------------------------------|------------------------------------------------------------|
| Intensity states for storing cues. | <a href="#">“Intensity States” on page 110.</a>            |
| How faders affect cue storing.     | <a href="#">“How Faders Affect Intensity” on page 198.</a> |
| How faders affect playback.        | <a href="#">“Playback Intensity Level” on page 237.</a>    |

## The Four Intensity States


There are four intensity states that determine which parameters are stored, and in some cases, at what level. These are set by the intensity encoder and/or the intensity state buttons.

- **Active** - intensity value greater than zero (1-100%). When a luminaire is *active*, it will store data for all parameters (including intensity).
- **Marked** - intensity state of “marked” (0% level). When a luminaire is *marked*, it will store data for all parameters with intensity stored as “marked” (0% level). When a cue is recalled, a *marked* luminaire will move to the stored position and, if previously *active*, fade out with the luminaire’s intensity down time.
- **Zero** - intensity state of zero (“hard zero”, 0% level). A luminaire that is *zero* will only store intensity data, which is stored as a “hard zero” (0% level) along with the luminaire’s intensity down time. When a cue is recalled, a *zero* luminaire will fade out with the luminaire’s intensity down time. It will not change any other parameter positions because there is no data stored for them.
- **Out** (*inactive*) - no parameter data (0% level). When a luminaire is *out*, it will not store any parameter data. When a cue is recalled, an *out* (or *inactive*) luminaire will not change parameter positions, but if previously *active*, it will fade out in the cue’s out time.

## Setting Intensity States

**Note:** Although VLM moving mirrors do not have lamps, they must still have an intensity value (*active*, *marked*, or *zero*) in order to store information in a cue.

The intensity state can be set by the Intensity encoder or the Intensity State buttons located at the manual control panel.

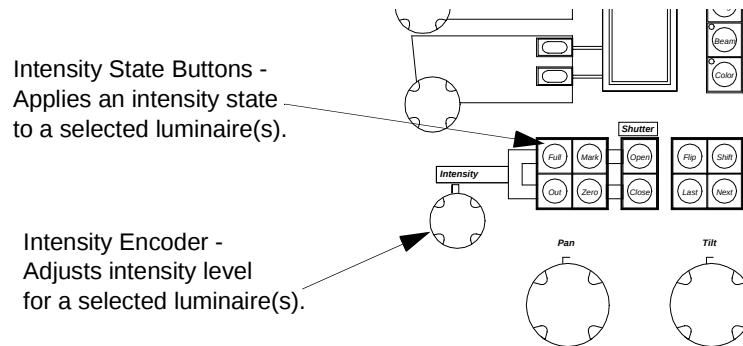

The keypad [At] and [Full] commands can also be used to set intensity using a percentage value of 0-100.

The [At] button is used to enter intensity values:




- <Chan> [n] [At] [m] [Enter] - changes the intensity level of the selected channel to m.
- <Chan> [n] [Thru] [q] [At] [m] [Enter] - changes the intensity level for the selected range of channels to m.

The [Full] button is used to quickly set intensity to 100%.



- <Chan> [n] [Full] [Enter] - changes the intensity level of the selected channel to 100%.

## Fader Levels

 

Since the intensity level plays a large part in storing cues, it is important to note that intensity levels stored in a cue are calculated after the contribution of the Grand Master fader/[Black Out] button and any selected submasters faders, not before. To simplify the storing of basic cues, ensure that all faders are set at full (100%) and the [Black Out] button is not engaged.

---

# Storing

---

**Note:** When [Store] is pressed, the keypad defaults to Cue mode. Therefore, the <Cue> button press is noted as optional.

---

**Store a basic cue:**

- 
- Step 1. Using manual controls, set luminaires in desired “stage look.”
- Step 2. Ensure that luminaires are in required intensity state (refer to “[Intensity States](#)” on page 110).
- Step 3. Press [Store] <Cue> [n] [Enter] - current stage look will be stored as specified cue number (n).

**Store a basic cue with a label:**

When labeling, the [xxxxxx] is entered on the alpha-numeric keyboard. The [return] button is also located on the keyboard.

- Step 1. Using manual controls, set luminaires in desired “stage look.”
- Step 2. Ensure that luminaires are in required intensity state (refer to “[Intensity States](#)” on page 110).
- Step 3. Press [Store] <Cue> [n] [Label] [Enter] [xxxxxx] [return].

|                      |                          |
|----------------------|--------------------------|
| store cue 52         | I F E 52<br>C B G Blwash |
| Store Cue 52 Label * |                          |

**Change a cue’s label:**

- <Cue> [n] [Label] [Enter] [xxxxxx] [return].

The dialog box is titled "Set Label". It contains the text "Set label Cue 5.0" followed by "with" and a text input field. Below the input field are two buttons: "Cancel" and "Set".

---

# Modifying

Unlike storing Presets, Beams, and Colors, storing cue data into a cue number that already exists is a replacement action, not an additive action. Therefore, any cue store operation will store the current “stage look” (as defined by the intensity state). To modify a cue, recall the cue, change the parameters as required and then re-store it.

---

## Deleting

The delete function can be used to erase a stored cue. Since this function does not route through the channel selects, current channel selections are not affected.

When deleted, the cue will also be removed from the cue list.

---

**Note:** When [Delete] is pressed, the keypad defaults to Cue mode. Therefore, the <Cue> button press is noted as optional.

---

### Delete a cue:



- [Delete] <Cue> [n] [Enter] - deletes the entire specified cue (n).

### Delete a channel from a cue:

Step 1. Recall cue.

Step 2. Select required channel.

Step 3. Press [Out].

Step 4. Re-store cue by pressing [Store] <Cue> [n] [Enter] (where n is the discrete cue number).

---

## Undo

The last store, update, or delete action taken on the console can be reversed with the undo command.

### Undo the last store/update/delete command:



- [Undo] [Enter].

# Playback


Refer to  
Fold-Out **G**

## Basic Playback

After storing a cue, it can be played back using a submaster.

### Play a cue:

- Step 1. At keypad, press [Cue] [n] [Enter] or scroll through cue list to recall a cue. Its number and label will be displayed in the command-line display.

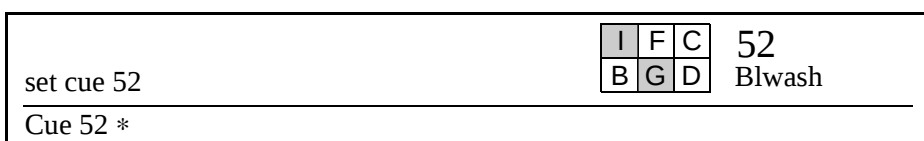

- Step 2. At desired submaster, press [Select] to select submaster for playback function.
- Step 3. Press [Load] to place cue in submaster's pending file.
- Step 4. Ensure Grand Master fader is set at full.
- Step 5. Ensure submaster fader is set at full.
- Step 6. Press [Go] to play cue.
- Step 7. Press [Run] to replay cue once it is active.

### Play next cue:

The submaster always sequences, placing the next available cue in the pending file.


- Press [Go] to play back pending cue.

### Play previous cue:

The submaster can play back previously played cues in decrementing order.

- Press [Back] to play previous cue.

**Shortcut** ➡ If submaster is empty: at keypad press [cue number], then at submaster press [Go]. (Must be valid cue number.)

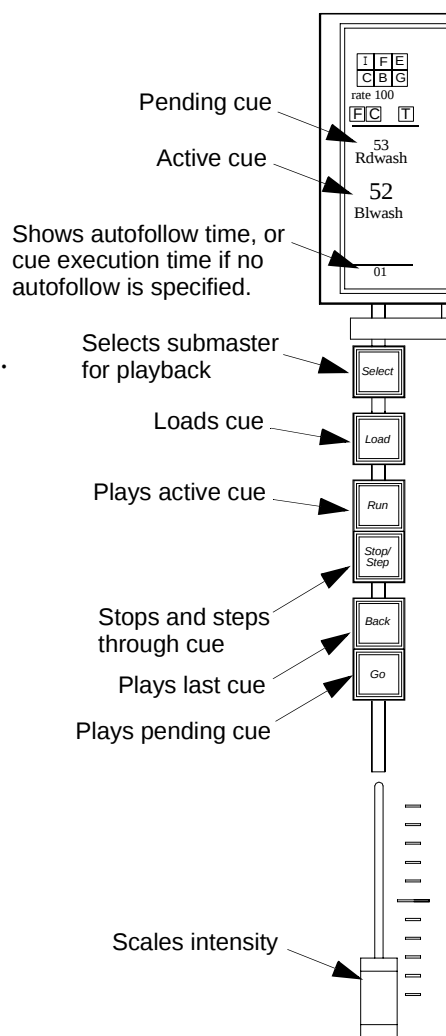

# CHAPTER 7.

---

## Basic Effects

This chapter provides an overview of effects concepts and instructions for storing an effect and playing it back. Once you are familiar with these basic operations, the [“Advanced Effects Features” chapter on page 215](#) will allow you to utilize all of the Virtuoso console’s effects capabilities.

- [Effects Concepts](#)
- [Creating Effects](#)
- [Playback](#)

*(This page intentionally blank.)*


# Effects Concepts

## What is an Effect?

An effect is a looping, wave, or ripple type operation which can be applied to multiple channels. Once created, an effect can be stored as a cue or played back directly on any submaster.

**Effects** are comprised of two components. The first component is a **Set**. A set is comprised of **parts**, which define which channels (luminaires) are to be included in the effect playback, and in which order they will be addressed. Discrete channel numbers or channel ranges may be used to compose set parts with the limitation that a channel may only appear once within the set.

The second component is a **Sequence**. A sequence includes a number of **steps**, each of which define an action that an individual set part is to take. Discrete instructions, colors, beams, presets, and cues can be used to create a step.

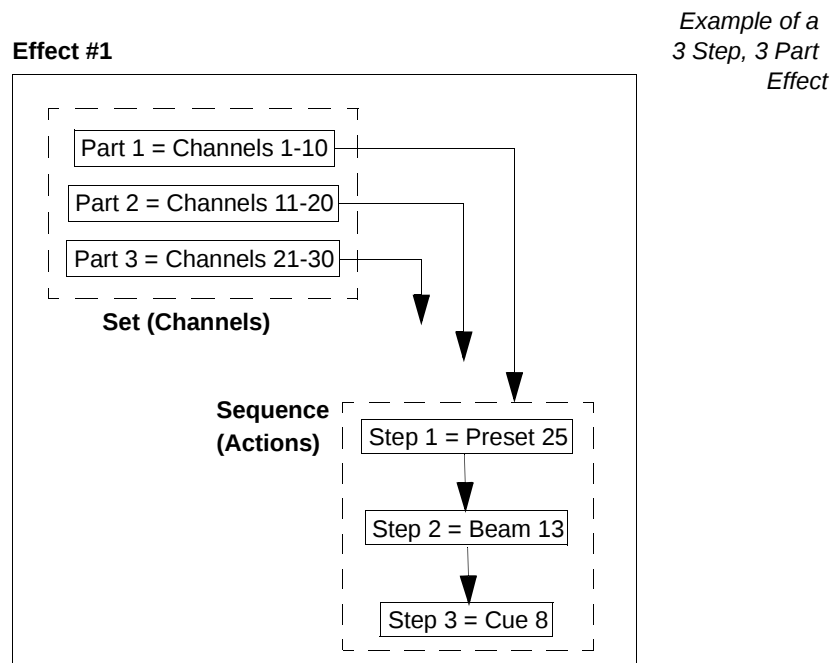


**Note:** Timing values can be defined for effects on an overall effect and/or sequence level. Timing, however, will be discussed in the [“Advanced Effects Features” chapter on page 215](#).

## Effects Control Panel and Windows

All effects and effect components (sets, sequences, parts, steps) can be created using either the Effects Control panel in combination with the select displays, the effects windows, and for some components, the command-line keypad.

### Effects Control Panel

The Effects Control panel is located on the console desk and works together with the three select displays (for more information on select display operation, refer to [“General Operation” on page 67](#)). When the [Effect] button is pressed at the control panel, the three selects will display Effects, Sets, and Sequences.

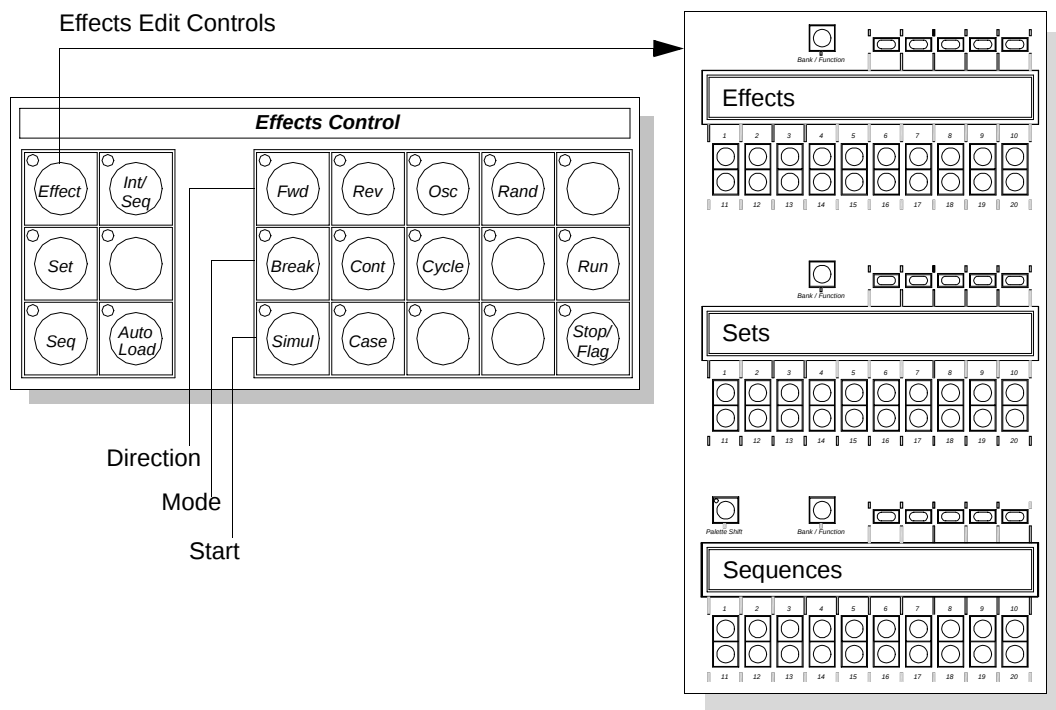


### Effects Windows

Three effects windows are also available. These can be used alone or in combination with the Effects Control panel to create and edit effects.

Effects windows:

- Effects
- Sets
- Sequences

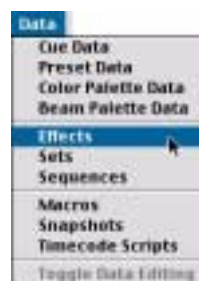

## Direction, Mode, and Start


Direction, Mode, and Start attributes determine how the sequence steps are to be applied to the set parts. These are used in combination to provide different executions of set parts.

### Direction


Direction determines which direction the sequence steps run.




**Forward [Fwd]** - The sequence steps will run forward (Step 1, Step 2, Step 3, etc.) and then start over when the last step is reached.

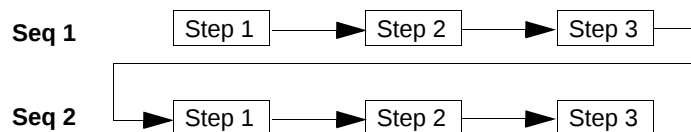


**Reverse [Rev]** - The sequence steps will run backward (Step 3, Step 2, Step 1) and then start over when the first step is reached.

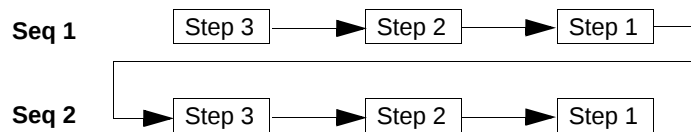

**Oscillate [Osc]** - The sequence steps will run forward, then in a reverse direction, forward, then reverse, etc.

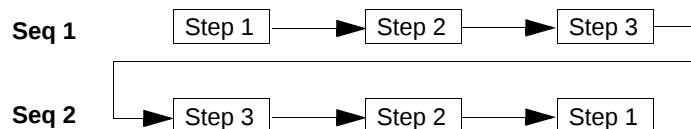

**Random [Rand]** - The console chooses which sequence steps to run, in what order, and the timing used.

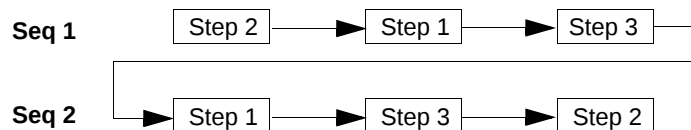


## Mode

Mode determines how the sequence steps run in relationship to each other.



- **Break** - Each part makes one pass through each step on any individual cycle and then goes to its background state when not in a step.

Breaking/Cascade Effect:

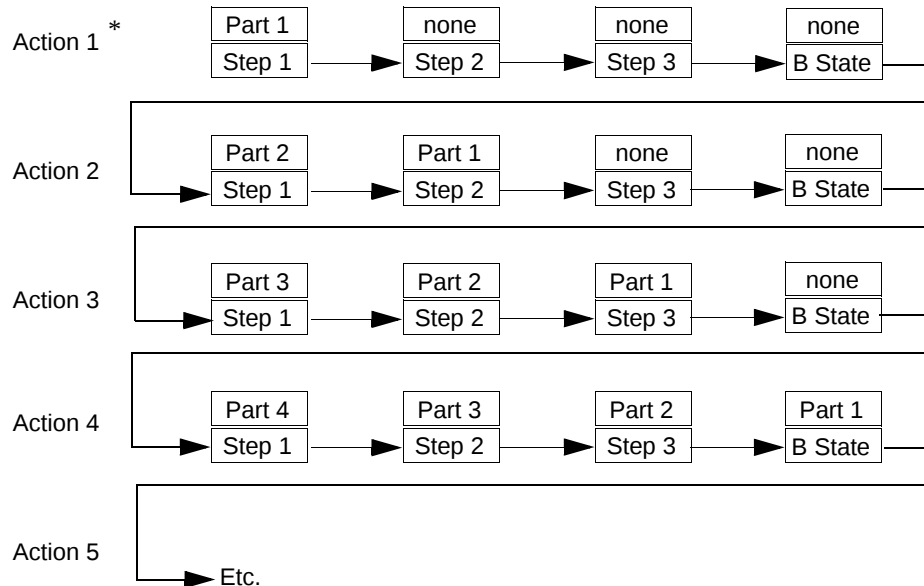

\* For example purposes, actions are not necessarily complete sequences. An action merely represents what happens at each stage of the effect whether it is a complete sequence or a portion of a sequence.



- **Continuous [Cont]** - Once started, all parts are in some step at all times during the effect. Once a part reaches the last step, it automatically goes back to the first step and repeats sequence. (Refer to example on next page.)



- **Cycle** - The effect runs all set parts through the first sequence step, then each set part through the second sequence step, etc.


## Start

Start determines how the sequence steps enter the effect.



- **Simultaneous [Simul]** - All set parts assume some effect state upon effect recall (either a discrete instruction or the background state).
- **Cascade [Casc]** - The set parts will start the sequence in a staggered entry. Part 1 will complete Step 1, then go to Step 2 while Part 2 begins Step 1, etc.

Continuous/Simultaneous Effect:

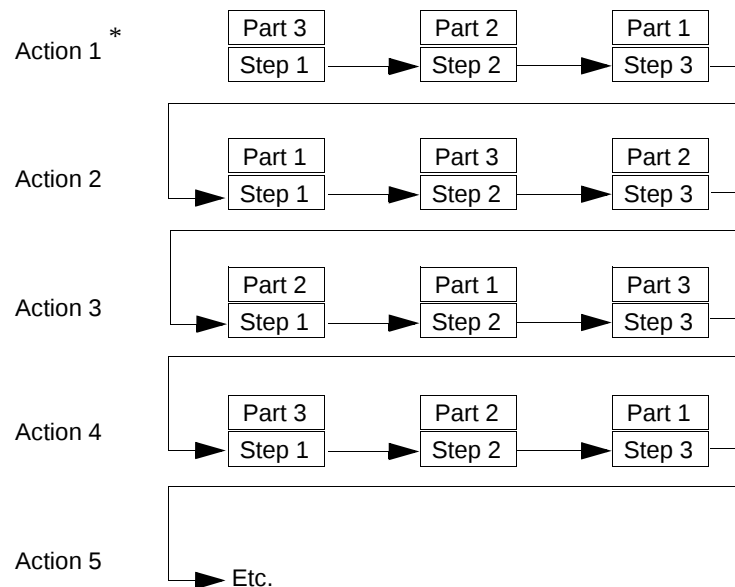

\* For example purposes, actions are not necessarily complete sequences. An action merely represents what happens at each stage of the effect whether it is a complete sequence or a portion of a sequence.

## Default Settings

The default settings for these attributes can be used to create basic effects. Unless changed, these settings will be stored into the effect during an effect store operation:


- Forward
- Continuous
- Cascade

# Creating Effects

## Creating Sets


Sets can be created using the Effects Control panel or Sets window. Once you have created some sets, these can be used in combination with sequences to create effects.

A **set** consists of one or more **parts**. Parts are made up of specified channels (luminaire groups) with the limitation that a channel may only appear once within the set.

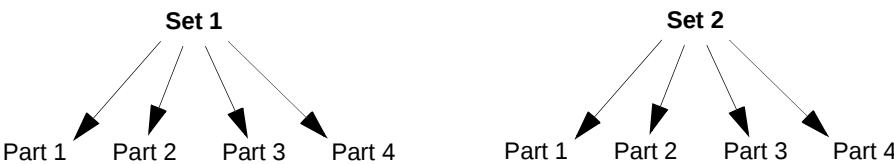

### Set 0

One pre-programmed set is available, which contains all patched channels as a single part. This is the default set assumed by all effects unless changed. It can be used to quickly create an effect which would be assumed by all the luminaires in your system.

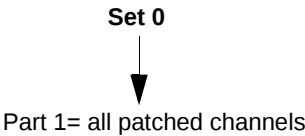

## Interlace, Sequential, and Random



When loading channels across two or more parts, the channels may be loaded “interlaced”, “sequentially”, or “randomly.” For example, when loading channels 1-6 across two parts using the interlace or sequential methods, they would produce the following results:

|                            |             |             |     |     |     |
|----------------------------|-------------|-------------|-----|-----|-----|
| Channels loaded interlaced | PARTS       |             |     |     |     |
|                            | Bank 1      |             |     |     |     |
|                            | p1          | p 2         | p 3 | p 4 | p 5 |
|                            | 1<br>3<br>5 | 2<br>4<br>6 |     |     |     |

|                              |        |     |     |     |     |
|------------------------------|--------|-----|-----|-----|-----|
| Channels loaded sequentially | PARTS  |     |     |     |     |
|                              | Bank 1 |     |     |     |     |
|                              | p1     | p 2 | p 3 | p 4 | p 5 |
|                              | 1-3    | 4-6 |     |     |     |

From Effects Control Panel

Create a set:



Step 1. At Effects Control, press [Set]. Selects will display Sets, Parts, and Groups.




Step 2. At Sets select display, select a set to create.

Step 3. Select a group or select desired channels to be stored as a *part* or *parts*.



Step 4. At Effects Control panel press [Int/Seq] to load sequentially or leave unselected to load interlaced (refer to “Interlace, Sequential, and Random” on page 122).

Step 5. Press [Store] / [Part 1 Select Button], then while continuing to hold [Store], press [Part 2 Select Button] etc. to specify a range of parts which will contain the channels. Channels will load across parts according to the method chosen (Interlaced or Sequential) when [Store] is released.

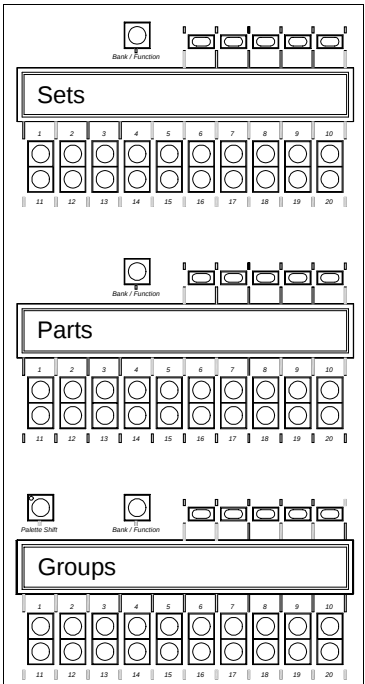

Step 6. Label your set by pressing [Label] / [Set Select Button] [xxxxxx] [return].

Set 1 now contains parts and a label

| SETS         | Bank 1 |   |   |   | Page 1 | Page 2 | Page 3 | Page 4 | Page 5 |
|--------------|--------|---|---|---|--------|--------|--------|--------|--------|
| 1<br>VL6 Set | 2      | 3 | 4 | 5 | 6      | 7      | 8      | 9      | 10     |

Delete a part:

Step 1. Deselect all channels.

Step 2. Press [Store] / [Part Select Button] (of part you wish to delete). Part will be deleted.



- or -

Press [Delete] / [Part Select Button] (of part you wish to delete). Part will be deleted.

## From Sets Window

### Create a set:

- Step 1. At Data menu, select Sets. Sets window will open.
- Step 2. Using cursor, select a Set. (Window will also respond to Set selections made at Effects panel.)
- Step 3. Load channels into individual parts:
  - a. Using cursor, select a part.
  - b. At channel fields, type in a range of channels.
  - c. Click + to assign channels to selected part. (Click - to remove channels from selected part.)
  - d. Repeat Steps a through c as required to store additional parts into set. (Channels can only be used once in a set.)

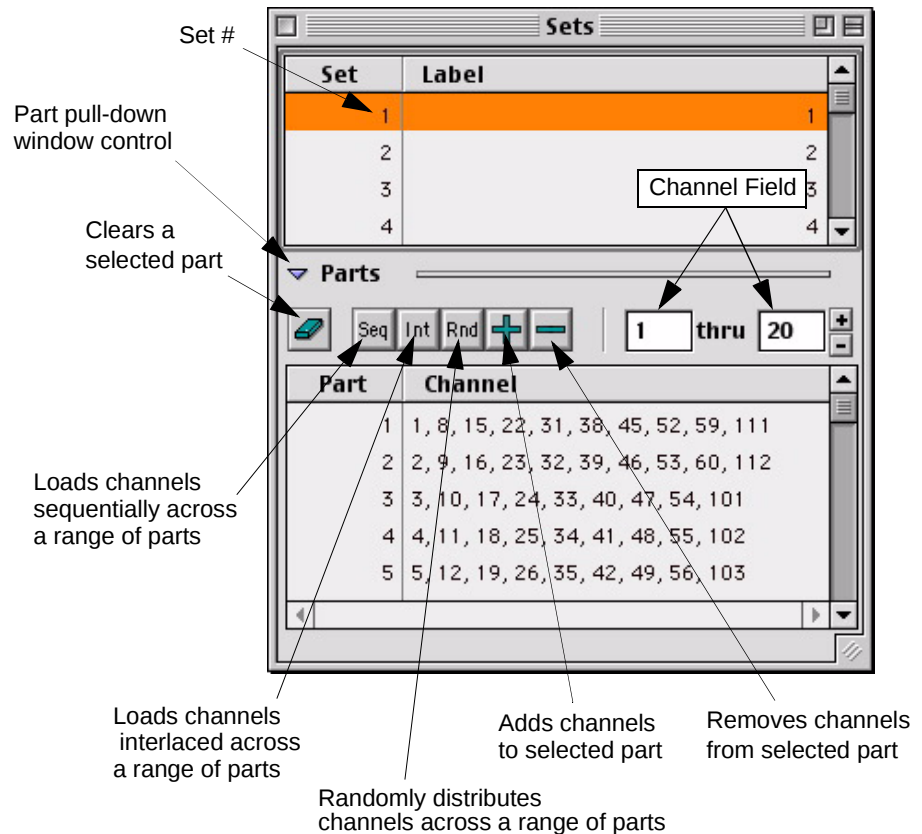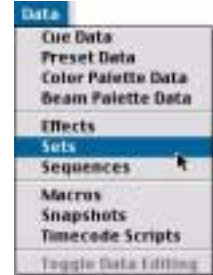

Load channels into a range of parts:

- a. Using cursor and keyboard , select multiple parts.
- b. At channel fields, type in a range of channels.
- c. Click Seq to load sequentially, click Int to load interlaced, or click Rnd to load randomly. (refer to [“Interlace, Sequential, and Random” on page 122](#)).

Step 4. Using keyboard, label set as required.

**Delete a part:**

Step 1. Select Part you wish to delete.


Step 2. Click Clear button.

---

## Creating Sequences

Sequences can be created using the Effects Control panel or Sequences window. Once you have some sequences, these can be used in combination with sets to create effects.

A **sequence** consists of one or more **steps**.

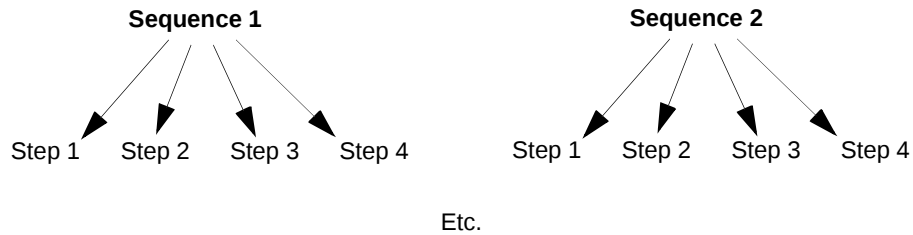

Steps may contain either a single cue or up to three parameters in any combination of the following:

- |                 |                 |
|-----------------|-----------------|
| • Preset        | • Edge          |
| • Color Palette | • Frost         |
| • Beam Palette  | • Zoom          |
| • Intensity     | • Strobe        |
| • Pan           | • Gobo Wheel    |
| • Tilt          | • Gobo Index    |
| • Blue          | • Rotating Gobo |
| • Amber         | • Effects Wheel |
| • Magenta       | • Effects Index |
| • Color Wheel   | • Prism         |
| • Beam          | • Stop Flag     |

---

**Note:** If overlapping parameters are specified, only the last action will be used.

---

# From Effects Control Panel

## Create a sequence:



Step 1. At Effects Control, press [Seq]. Selects will display Sequences, Steps, and Presets.


Step 2. At Sequences select display, select a sequence to create.

Step 3. Add a preset to a step:

- At Steps display, press and hold a [Step Select Button] (use 11-20).
- At Presets select, press [Preset Select Button] of preset you wish to add and release [Step Select Button].

Step 4. Add color or beam to a step:

- Change Presets select to Colors or Beams.
- At Steps display, press and hold a [Step Select Button] (use 11-20).
- At select, press [Select Button] of color or beam you wish to add and release [Step Select Button].

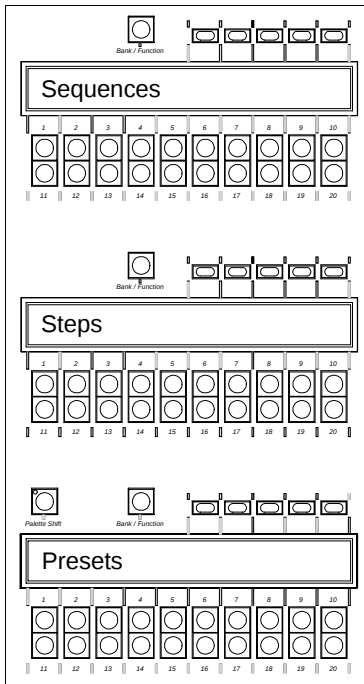

Step 5. To add intensity:

- At Steps display, press a [Step Select Button] (11-20).
  - At keypad, press [Step] [At] [50]\* (or [Step] [#] [At] [50]\*).
- \* Any intensity value 1-100 can be substituted for 50.

Step 6. To add a cue:

- At keypad, press [Step] [1] [Cue\*] [n] [Enter].
- \* Preset, Color, Beam, etc. can be used instead of Cue.
- At keypad, press [Step] [1] [Cue] [n] [Thru] [x] [Enter].

Step 7. Repeat Step 5 to store steps 2, 3, 4 ...

Step 8. Label by pressing [Label] / [Sequence Select Button] [xxxxxx] [return].

| SEQUENCES |   | Bank 1 |   |   | Page 1 | Page 2 | Page 3 | Page 4 | Page 5 |
|-----------|---|--------|---|---|--------|--------|--------|--------|--------|
| 1         | 2 | 3      | 4 | 5 | 6      | 7      | 8      | 9      | 10     |
| Colors    |   |        |   |   |        |        |        |        |        |


### Delete a step:

- Press [Delete] / [Step Select Button] (of step you wish to delete). Step will be deleted.

### From Sequences Window

#### Create a sequence:

- At Data menu, select Sequences. Sequences window will open.
- Using cursor, select a Sequence. (Window will also respond to Sequence selections made at Effects panel.)
- At Step portion of window, use pop-up menu and text fields to enter actions. Cue ranges may also be specified. (Each step may contain up to three actions.)
- Repeat as necessary to store additional steps into sequences.
- Using keyboard, label sequences as required.

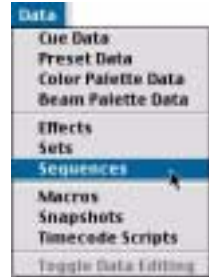

The screenshot shows the 'Sequences' window. At the top, there is a checkbox 'Assign To Submaster' and a dropdown menu set to '5'. Below this is a table with columns 'Seq' and 'Label'. The first row is highlighted in orange and labeled 'Chase 1'. Below this is a 'Steps' section with a 'Clear Step' button and a 'Background State' dropdown set to 'Preset' with a value of '23'. The main part of the window is a table with columns: #, Action 1 Type, Action 1 Value, Action 2 Type, Action 2 Value, Action 3 Type, Action 3 Value, S, Step, Att, Sus, and Dec. The first three rows are highlighted in orange. A note box points to the 'Action 1' and 'Action 2' columns, stating: 'Note: When a range of cues is specified, the start cue will appear in Action 1 column and end cue will appear in Action 2 column'. Arrows point from text labels to various parts of the window: 'Assigns sequence to run on a specific submaster' points to the 'Assign To Submaster' checkbox; 'Step list for selected sequence' points to the 'Steps' section; 'Clears selected step' points to the 'Clear Step' button; 'Use pop-up menu to select an action type' points to the 'Action 1 Type' column; 'Specifies a stop flag' points to the 'S' column; and 'Use pop-up menu to select a background state' points to the 'Background State' dropdown.

**Note:** When a range of cues is specified, the start cue will appear in Action 1 column and end cue will appear in Action 2 column

Assigns sequence to run on a specific submaster

Step list for selected sequence

Clears selected step

Use pop-up menu to select an action type

Specifies a stop flag

Use pop-up menu to select a background state

### Delete a step:

- Select Step you wish to delete.
- Click Clear Step button.

## Background State

Each sequence can contain one background state. The background state tells the luminaires where to go when not executing a step. The background state is an optional entry. If a background state is not provided, and the behavior of the effect determines that it does not have an action at certain points during the effect, the luminaires will return to their state prior to being pulled into the effect. If a background state has been defined, however, parts will run through each active step as determined by the distribution patterns for the effect and assume their background state until a subsequent instruction is provided.

### From Effects Select Displays

#### Define a background state:



- Step 1. At Effects Control, press [Seq]. Selects will display Sequences, Steps, and Presets.
- Step 2. At Steps select display, press [Bank / Function] / [Bckgrnd Step]. Window will change to Background screen.

|             |              |
|-------------|--------------|
| Change Bank | No A/L       |
| Bank 1      | BckGrnd Step |

|         |                           |        |        |        |        |        |
|---------|---------------------------|--------|--------|--------|--------|--------|
| STEPS   | Bank 1                    | Page 1 | Page 2 | Page 3 | Page 4 | Page 5 |
| BckGrnd | select<br>page to<br>exit |        |        |        |        |        |

- Step 3. Define background state as follows:
- Press and hold Step select button 11 (below background state).
  - At bottom select display, choose a color, preset, beam, etc. and release Step select button.

## From Sequences Window

### Define a background state:

- Step 1. Select a sequence.
- Step 2. At Background State pop-up menu, select an action.

Use pop-up menu to define a background state.  
For example, Preset. Then enter  
Preset's number in the field.

**Sequences**

☒ Assign To Submaster 5

| Seq | Label   |
|-----|---------|
| 1   | Chase 1 |
| 2   | Chase 2 |
| 3   | Colors  |
| 4   |         |
| 5   |         |
| 6   |         |

**Steps**

Clear Step Background State : Preset 23

| # | Action 1 |       | Action 2 |       | Action 3 |       | S | Step | Time |      |      |
|---|----------|-------|----------|-------|----------|-------|---|------|------|------|------|
|   | Type     | Value | Type     | Value | Type     | Value |   |      | Att  | Sus  | Dec  |
| 1 | Cues     | 102   | Cue      | 103   |          |       |   | 1.00 | 1.00 | 1.00 | 1.00 |
| 2 | Inten    | 50    | Color 2  | 0     | <none>   | 0     | * | 1.00 | 0.50 | 1.00 | 1.00 |
| 3 | <none>   | 0     | <none>   | 0     | <none>   | 0     |   |      |      |      |      |
| 4 | <none>   | 0     | <none>   | 0     | <none>   | 0     |   |      |      |      |      |
| 5 | <none>   | 0     | <none>   | 0     | <none>   | 0     |   |      |      |      |      |

# Creating Effects

Effects can be created using the command-line keypad, Effects Control panel, or Effects window.

When creating effects, the current settings for the Direction, Mode, and Start buttons will be stored upon a store operation. (For creating basic effects, you can use the default direction, mode, and start selections.)

The default timing settings can also be used. In this case, without a specific duration time, the effect will run until it is stopped or another event replaces it in the submaster. Duration and cycles will be covered in the Advanced Effects chapter.

When changes have been made to an effect, \*MOD\* will be displayed in the Effects select display to indicate that a store operation is necessary in order to save changes. If a new effect is selected before storing, changes will be lost.

Indicates that a store operation is necessary

| EFFECTS                     | *MOD* | Bank 1 |   |   | Page 1 | Page 2 | Page 3 | Page 4 | Page 5 |
|-----------------------------|-------|--------|---|---|--------|--------|--------|--------|--------|
| 1<br>VL7<br>Color2<br>cc>cn | 2     | 3      | 4 | 5 | 6      | 7      | 8      | 9      | 10     |

## From Keypad

### Use sets and sequences to create an effect:

**Note:** The default set is Set 0, which contains all patched channels as a single part. If you plan to use Set 0, programming a set will not be necessary.




- Step 1. Press [Effect] [n] [Set] [n] [Seq] [n] [Enter] to define a set and sequence for Effect n. (Changes will be reflected in Effects Control display with “Effect” highlighted.)
- Step 2. Press [Store] [Effect] [n] to store changes.

## From Effects Select Displays

### Use sets and sequences to create an effect:



- Step 1. At Effects Control, press [Effects]. Selects will display Effects, Sets, Sequences.
- Step 2. At Effects select display, select an effect to create.
- Step 3. At Sets display, select a set.
- Step 4. At Sequences display, select a sequence.
- Step 5. Press [Store] / [Effect Select Button] to store selected set and sequence into effect.
- Step 6. Label your effect by pressing [Label] / [Effect Select Button] [xxxxxxx] [return].

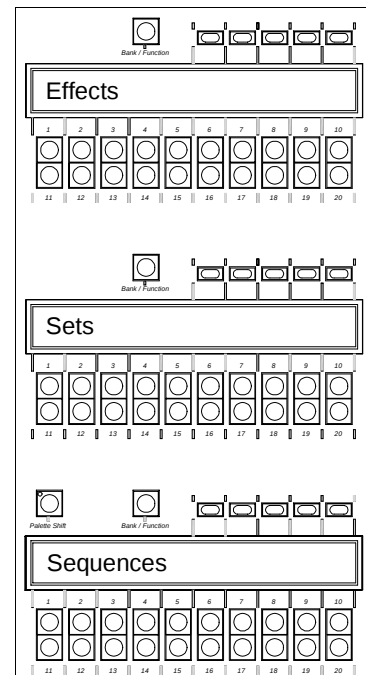

## From Effects Window

### Use sets and sequences to create an effect:

Step 1. At Data menu, select Effects. Effects window will open.

Step 2. Using cursor, enter sequence and set information for each effect.



**Note:** One pre-programmed set is available, which contains all patched channels as a single part. To use Set 0, enter 0 as the set number.

Step 3. Using keyboard, label as required.

Assigns effect to autoload into a specific submaster

Sets Random time (covered in Advanced Effects chapter)

Defines Set

Defines Sequence

Direction, Mode, Cycle, and Start attributes

Timing Information (covered in Advanced Effects chapter)

| #  | Label        | Set | Seq | Dir     | Mode | Cycle | Start | Wave | In   | Out  | Time | Cycles |
|----|--------------|-----|-----|---------|------|-------|-------|------|------|------|------|--------|
| 1  | Belly        | 41  | 21  | Forward | Run  | Break | Simul |      | 1.05 | 1.01 | 1.01 |        |
| 2  | Bluepop      | 41  | 22  | Forward | Run  | Break | Simul |      | 0.44 | 0.83 | 0.44 |        |
| 3  |              |     |     |         |      |       |       |      |      |      |      |        |
| 4  | Ripple       | 21  | 15  | Forward | Run  | Break | Simul |      |      |      |      |        |
| 5  | randomspokes | 22  | 15  | Random  | Run  | Break | Simul |      |      |      |      |        |
| 6  | raysweep     | 27  | 11  | Forward | Run  | Break | Simul |      |      |      |      |        |
| 7  | Horizsweep   | 26  | 12  | Reverse | Run  | Break | Simul |      |      |      |      |        |
| 8  | Linear       | 25  | 13  | Forward | Run  | Break | Simul |      |      |      |      |        |
| 9  | Spiral       | 24  | 14  | Forward | Run  | Break | Simul |      |      |      |      |        |
| 10 | Spokes       | 22  | 7   | Forward | Run  | Break | Simul |      |      |      |      |        |

---

## Storing Effects as Cues

Effects can also be stored as cues using the Link feature. This will allow you to embed an effect into the cue list. The effect will be linked to a standard cue number and will be treated as a cue by the submasters during playback. Any advanced cue attributes can be applied to the effect cue just as any standard cue. Refer to cue storing instructions throughout this manual.

### **Store an effect as a cue:**



- [Store] <Cue> [n] [Link] [Effect] [x] [Enter] - stores effect (x) into the specified cue number (n). (Current stage look is not included.)

### **Store an effect as a cue and label:**

When labeling, the [xxxxxx] is entered on the alpha-numeric keyboard. The [return] button is also located on the keyboard.

- [Store] <Cue> [n] [Link] [Effect] [x] [Label] [xxxxxx] [return].

# Playback


Refer to  
Fold-Out **G**

## Basic Playback

After creating an effect, it can be played back using a submaster. (Unless a duration or cycle count is specified, the effect will run until stopped.)

### Play an effect:

- Step 1. At keypad, press [Effect] [n] [Enter] or select an effect at Effect Select display. It will be displayed by number and label in keypad display.

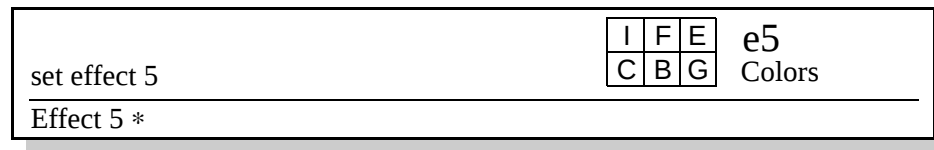

- Step 2. At desired submaster, press [Select] to select submaster for playback function.

- Step 3. Press [Load] to place effect in submaster's pending file.

- Step 4. Ensure Grand Master fader is set at full.

- Step 5. Ensure submaster fader is 100%.

- Step 6. Press [Go] to play effect. Display will indicate set, sequence, and step numbers as they run.

- Step 7. Press [Run] to replay effect once it is active.

### Play next effect:


The submaster always sequences, placing the next available effect in the pending file.

- Press [Go] to play back pending effect.

### Play previous effect:

The submaster can play back previously played effects in decrementing order.

- Press [Back] to play previous effect.

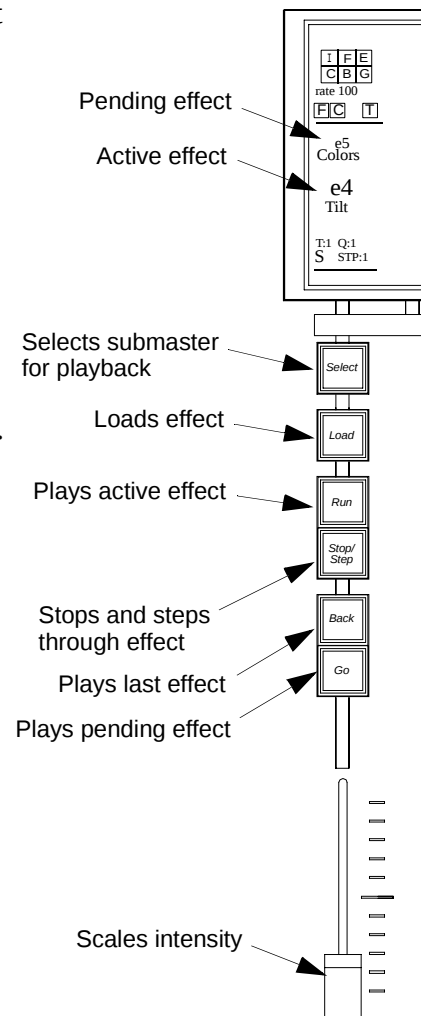

### Stop/Step:



A running effect can be stopped and then stepped through one step at a time.


Step 1. Press [Stop/Step] to stop a running effect.

Step 2. Press [Stop/Step] repeatedly to step through effect.

Step 3. Press [Run] to resume playback.

### Submaster Display

The submaster display indicates the effects attributes as they play back.

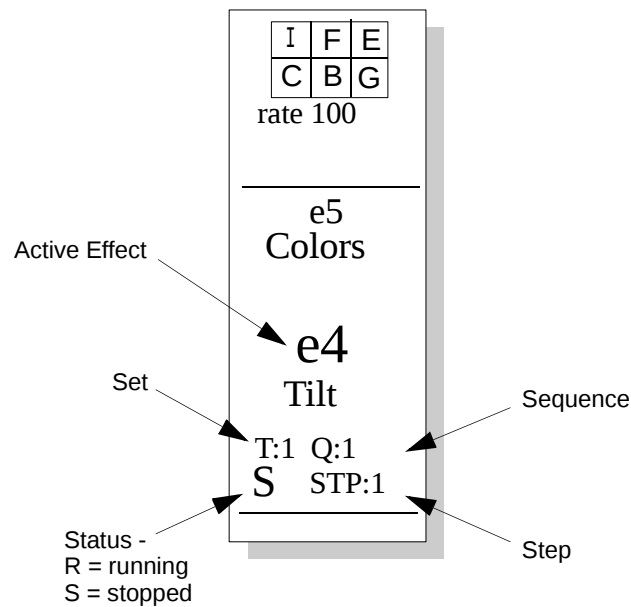

# CHAPTER 8.

---

## Timing/Filter Displays

This chapter provides instructions for using the timing and filter displays, which will give you expanded control over the console's store and playback functions.

- **Overview**
- **Timing Mode**
- **Filter Mode**
- **Dynamic State Mode**
- **Sneak Mode**
- **Templates**

*(This page intentionally blank.)*

# Overview

Refer to  
Fold-Out H

---

## Timing/Filter Features

Another way to expand your control of console operations is by using the timing/filter features. These features, which also include dynamic state and sneak controls, can be used alone or in conjunction with the command-line keypad to apply parameter timing values and filters during store and playback operations, and to manually control luminaires.

The timing/filter feature has four modes:

- **Timing Mode** - used to apply timing, delay, and speed values to any and all combinations of parameters.
- **Filter Mode** - used to withhold (or mask) information from a preset or a cue, and to control what is recalled in a submaster or select display.
- **Dynamic State Mode** - used to apply pre-packaged effects (states of motion) to channels or groups of channels to be stored as cues.
- **Sneak Mode** - used to graphically display command-line entries and to create manual control moves “on-the-fly.”

All four modes can be accessed at the console touch screen and/or Timing window.

---

## General Touch Screen/Window Operations

Operation of the timing/filter feature from the touch screen (available at the console front panel) or the Timing window (available from the Panels menu) operate nearly identically.

### Selecting Modes

The mode (or function) is selected by pressing one of four buttons at the left of the touch screen or by clicking the appropriate tab at the top of the Timing window. Only one mode is visible at a time, although in the case of the filter mode, it does not have to be visible for selected filters to affect console operation.


### Setting Parameters

Once a mode has been selected, you can select parameters by touching the appropriate location on the screen itself or by clicking their boxes in the window and when necessary, enter values using the command-line keypad.


Depending on the mode, **Enter** or **To Cue** must be pressed before settings will be applied to store or playback operations.

# Templates

The template section of the window provides 20 programmable templates, which can be used with the Timing, Filter, and Sneak modes to store your most-used settings. When in Timing Mode, the templates are for time settings; when in Filter Mode, the templates are for filter settings; etc.

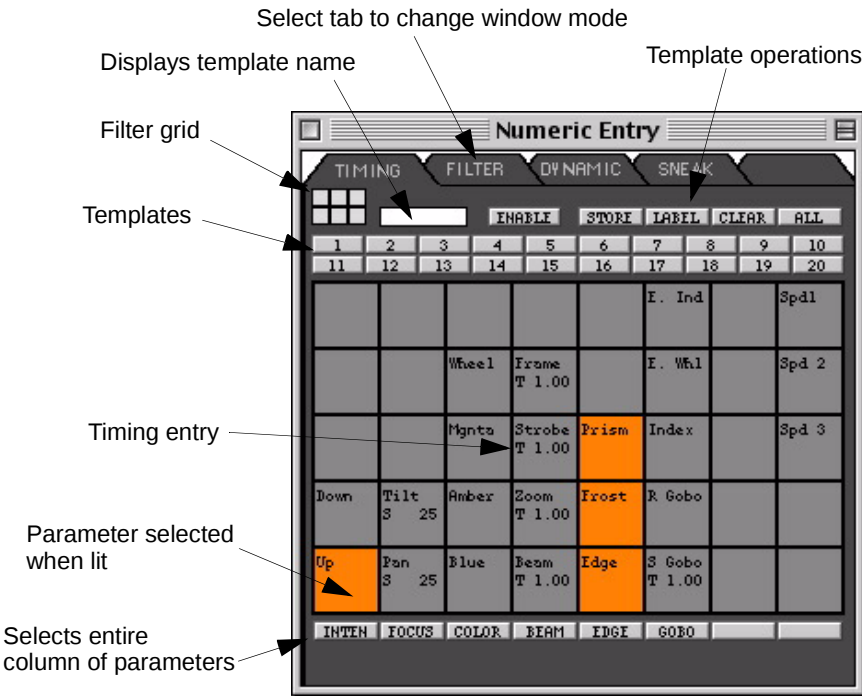

In addition to the template access buttons in the window, the first six templates associated with each mode can be accessed using the six buttons to the right of the touch screen on the console.

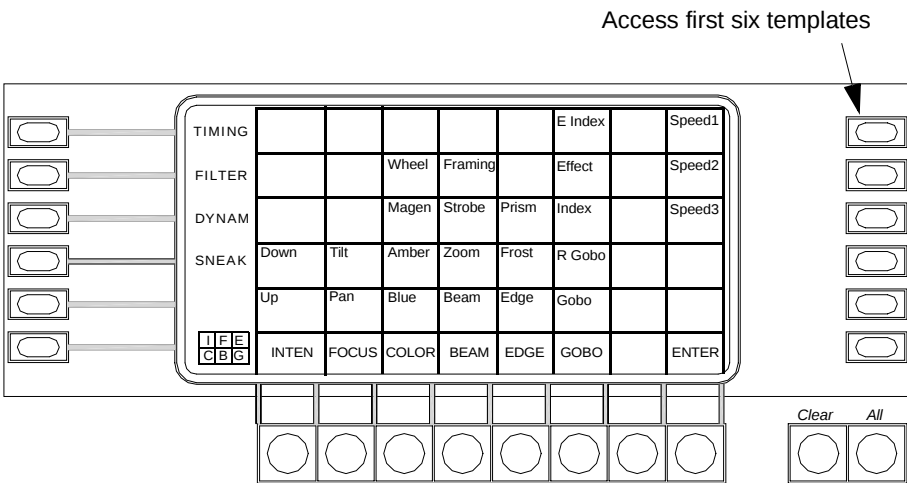

**Note:** Refer to [“Templates” on page 156](#) for complete instructions on templates.

# Timing Mode

## Overview

Timing is used to control the duration, delay, and speed of parameter transitions. For example, the timing features can be used to define how fast a luminaire will pan from one position to another and how long it will take for its intensity to fade from 0 to 100 percent.

Timing (total transition time), delay, and speed values can be applied to any and all combinations of parameters within a cue. Timing *or* speed can be entered along with a delay, but not both. These values can be different for each parameter of each luminaire as required. For example:


Cue 1 contains Luminaire 1 and Luminaire 2.

A different timing value can be applied to each of Luminaire 1's parameters. For instance, Focus = 2:00, Edge = 00.30, Zoom = 1:30, and Color 1 = 00:15.

Different timing values can be applied to Luminaire 2's parameters. For instance, Focus = 4:00, Edge = 03.30, Zoom = 2:45, and Color 1 = 01:15.

Timing Mode Button -  
Push to display timing  
values in touch screen

Speed 1, 2, and 3 -  
Used with DMX fixtures which have  
speed mapped into their profiles

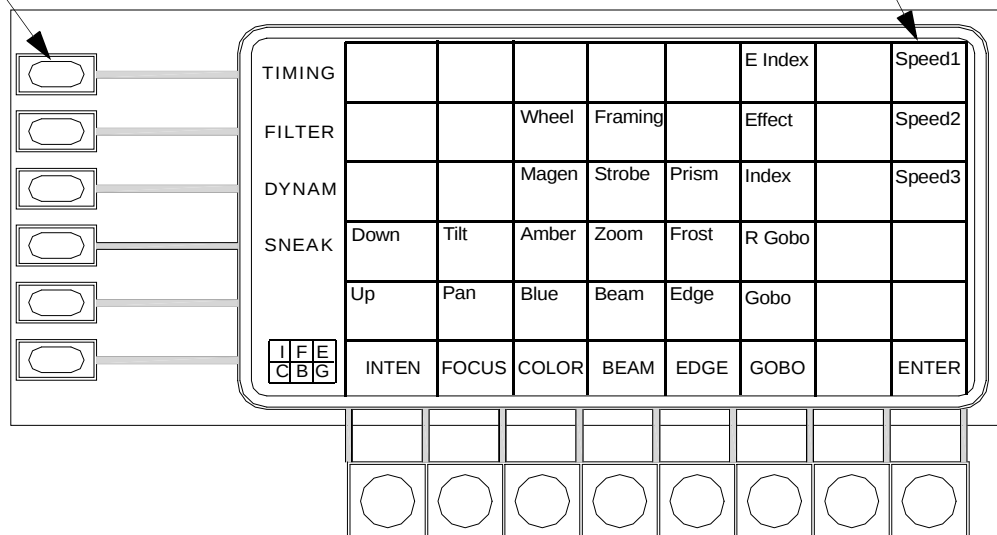

## Time/Speed Formats

### Time

Time controls the duration of change for any parameter.

Guidelines:

- Each parameter can have an individual time.
- Intensity can have both an up and down fade time. The direction of the intensity transition at the time of playback determines which of those two values is used.
- Cue timing includes the movement of longest duration (combination of delay and time) and the longest intensity transition (combination of delay and up/down fade time).
- Filtered values contribute to these times.
- Masked values do not contribute to these times.
- A parameter cannot have both a time and a speed although it can have a time and delay, or speed and delay.

Time is entered at the keypad in minutes and seconds, seconds, or seconds and tenths of seconds. (Maximum time entry is 59:59.)

**Entering whole numbers will be interpreted as total seconds:**

- [2] [5] = 25.00 (25 seconds)
- [9] [0] = 90.00 (90 seconds)

**A colon (:) is entered by pressing [.] [.]**

- [2] [.] [.] [5] = 2:05 (2 minutes, 5 seconds)

**Fractions of seconds are entered by pressing [.]**

- [1] [ . ] [3] = 1.3 (1.3 seconds)
- [.] [5] = .5 (1/2 second)
- [3] [5] [.] [5] = 35.5 (35 and 1/2 seconds)

### Delay

Delay time begins counting from cue execution and delays the playback of any parameter.

## Speed

Speed is the rate of change for any parameter.

Speed attributes:

- A speed of zero is a full stop for all luminaires.
- All luminaires operate up to a speed between 200 and 400.
- Any luminaire set for a value above its maximum speed, will operate at full speed.

| Luminaire Type | Rate<br>(Degrees Per Second) | Maximum Speed |
|----------------|------------------------------|---------------|
| VL2B/VL2C      | 120                          | 200           |
| VL4            | 240                          | 400           |
| VL5            | 220                          | 400           |
| VL6/VLM        | 280                          | 400           |
| VL7            | 150                          | 400           |

---

## Timing Mode Operation

The Timing screen is used to define an entire timing scheme, which can then be sent to selected luminaires using the Timing **Enter** button. The screen/window is also used to specify the target of timing entries made at the command-line keypad. When the Timing mode is selected, current timing, delay, and speed information is displayed within the cell of its associated parameter.

### Guidelines:

- Pressing the Timing **Enter** button sends all parameter timing values to selected luminaires whether the parameter is selected (highlighted) or not.
- Entries made at the keypad will be sent directly to any parameters selected (highlighted) in the Timing screen/window. For example, if Color 1 is selected at the Timing screen/window and a command-line entry such as [Time] [5] [Enter] is made, then the time value will be sent directly to the Color 1 mechanism of any selected luminaires. De-selected parameters in the Timing screen/window would not receive this value.

Use the examples below to send all values in the Timing screen or individual values to luminaires as required.

**Set an entire timing scheme:**

- Step 1. At screen/window, select a parameter(s).
- Step 2. At keypad, press [Time], [Delay], or [Speed] as required, followed by time value. Time value will appear in cells of selected parameters.
- Step 3. Repeat steps 1 and 2, selecting different parameters and entering new values.
- Step 4. Select channels as required.
- Step 5. Press Timing  button to send all values.

**Send a timing value directly to a selected parameter:**

- Step 1. Select channels as required.
- Step 2. At screen/window, select a parameter.
- Step 3. At keypad, press [Time], [Delay], or [Speed] as required, followed by time value and then [Enter]. Time value will appear in cell of selected parameter at screen/window and be sent directly to selected channels.

**Clear Timing screen of all values:**

If timing values are cleared (as opposed to zero), existing timing information for that parameter in the luminaire will be left intact upon pressing .

- Press Timing [Clear] (located below touch screen).

**Clear the value of any individual parameter:**

- Step 1. Select channels as required.
- Step 2. At screen/window, select a parameter.
- Step 3. At keypad, press [Time] [Enter].

**An example of setting edge and focus timing:**

- Step 1. Select channels as required.
- Step 2.   [Time] [.] [5] [Enter] - sets timing value for edge (edge, frost, effect, prism), and focus (pan, tilt) to one-half second.

**An example of setting focus delay time:**

- Step 1. Select channels as required.
- Step 2.  [Time] [1] [.] [0] [Delay] [.] [5] [Enter] - sets the timing values for focus (pan, tilt) to 1 second with a one-half second delay.

**Set color delay time:**

- Step 1. Select channels as required.
- Step 2. **Color** [Time] [n] [Delay] [m] [Enter] - sets all color timing to n seconds, with an m second delay.

**Set intensity delay time:**

Intensity timing can have two values: one which controls the intensity transition if the intensity is fading to a higher level (up time) and one which controls the transition if the intensity is fading to a lower level (down time).

- Step 1. Select channels as required.
- Step 2. **Intensity** [Time] [1] [.] [0] [Delay] [.] [5] [Enter] - sets the up and down times to 1 second, with a one-half second delay.

**Set intensity up or down time:**

- Step 1. Select channels as required.
- Step 2. Select **Up** or **Down** to select one individually, then press [Time] [1] [.] [2] [Enter] - sets the up or down fade time to 1.2 seconds.

**Set intensity up and down time while storing a cue:**

For this shortcut, the first Time entered is always Up and the second is Down.

- Step 1. Select channels as required.
- Step 2. Ensure all parameters at Timing screen are deselected.
- Step 3. Press [Store] [Cue] [x] [Time] [m] [Time] [n] [Enter] - stores Cue x with an up time of m and a down time of n.

**Set timing back to zero:**

- Step 1. Select channels as required.
- Step 2. At screen/window, select a parameter.
- Step 3. Press [Time] [0] [Enter].



Time and delay values stay in a luminaire until changed or set back to zero. Use the Luminaire Status window with time (⊕) selected to view current timing and delays. To clear delay timing, select channel and appropriate parameters in the Timing window and set delay to 0.


# Filter Mode

## Overview

Filters are used to withhold (or mask) certain parameters or parameter attributes from a preset or a cue, and to control what is recalled in a submaster.

### Important ➡

It is important to note the exact meaning of the term “filter” as used in Virtuoso console operation. When a parameter is *not filtered* (i.e. selected/highlighted at the Filter screen), its data would be transferred during any subsequent store or recall operations. When a parameter is *filtered* (i.e. *not* selected/highlighted), its data would be withheld from a data transfer. This is represented graphically in the following illustration:

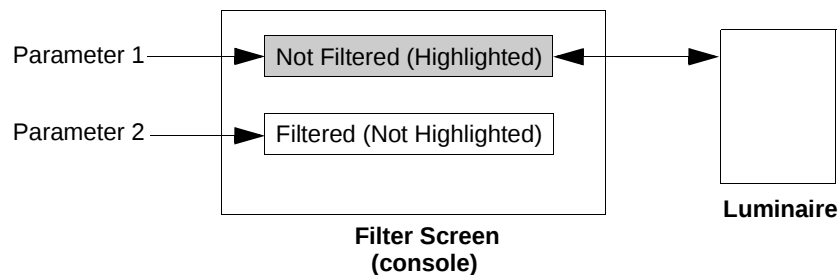


### Guidelines:

- The timing filter is globally applied, not individually for each parameter. When a parameter is filtered, its time is also filtered. This is always true except if a Selective Store is performed with only time selected. In this case you will get all the times for all parameters.
- Filters affect selective store and selective recall commands (refer to [“Selective Store” on page 204](#) and [“Selective Recall” on page 205](#)).
- Filters have no affect on the recall of presets or update commands (refer to [“Update” on page 203](#)).
- Filters have no affect on the playback of cues, unless those filters have been applied to a submaster (refer to [“Function Filter” on page 232](#)).
- The Filter screen does not have to be visible for selected filters to affect console operation. For this reason, the touch screen provides an indication that filters are selected by highlighting them in the parameter grids located at the bottom left of the touch screen, in the command-line display, and in the submaster displays.

Masking

When a filter is applied during a cue store operation, values for all parameters are stored, although some have been excluded from playback (filtered). This method of filtering, utilized by the Virtuoso console, is called “masking.” It is important to keep this concept in mind when storing cues with filters because during some playback situations, the values which were “masked” can intentionally or unintentionally be recalled. This situation can occur when a filter or “mask” has been applied to a cue and a second filter is applied to the submaster which is playing back that particular cue. Refer to “Function Filter” on page 232 for information on playing back cues which have stored masks.

Filter Mode Button -  
Push to display filters  
in touch screen

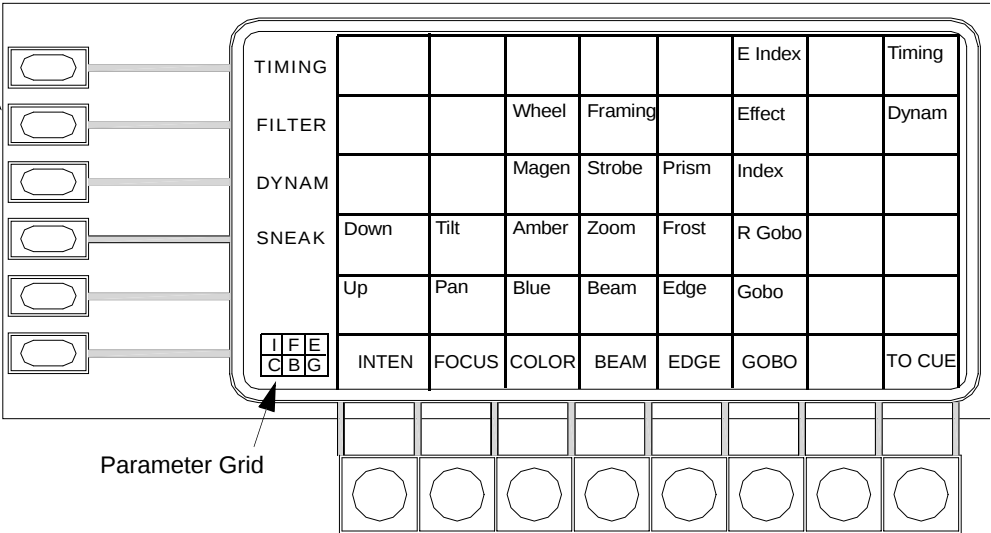


## Filter Mode Operation

When the Filter mode is accessed, by default, all parameters are selected (not filtered). Change filtering for parameters as follows:

- To prohibit the store or recall of all attributes of a parameter, use the button located just below the screen to deselect all.
- To prohibit the store or recall of one attribute of a parameter (zoom, for example), select the appropriate cell on the screen to deselect.

The parameter grids at the screen, command-line display, and submaster displays indicate the filtered (or non-filtered) state of each parameter. The Filter To Cue button must be pressed before the command-line or submasters grids will reflect the filter settings.

- When none of a parameter's (I, F, E, C, B, G) attributes are filtered, its box is highlighted.
- When some of a parameter's attributes are filtered, the box is gray.
- When all of a parameter's attributes are filtered, its box is clear.
- After adjusting the filter settings, the filters can be applied to preset or cue store and playback functions.

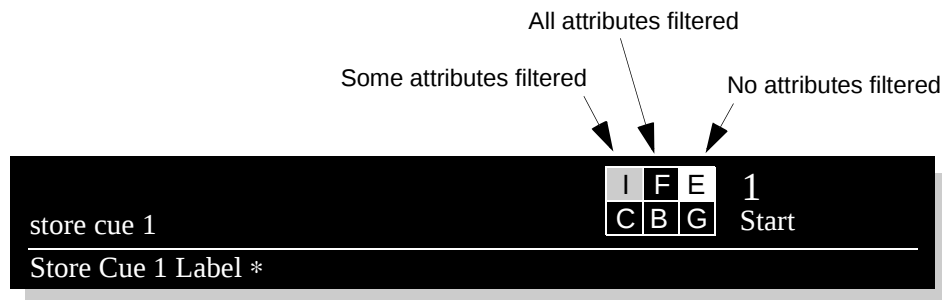

### Applying Filters To Cues

The Filter To Cue button is used to apply filters to a cue store operation.

#### Using filters while storing cues:

- Step 1. Set filters as required.
- Step 2. Press filter To Cue. The filter state will be applied to all cues stored from this point on, until changed.
- Step 3. Store cue as usual (refer to [“Storing” on page 112](#)).

### Applying Filters To Beam Select

Filters can be applied to Beam select store operations. Beam selects will store information based on the filters set in the Beam, Gobo, and Edge columns of the Filter window.

### Applying Filters To Color Select

Filters can be applied to Color select store operations if the system default setting is changed accordingly. Refer to [“Settings Window” on page 245](#) for instructions on setting this default. Store colors as usual, using filters as required.

### Applying Filters To a Submaster

When a filter is applied to a submaster, the associated parameter data will be withheld from playback in the case of an effect or unmasked cue. Applying a filter to a submaster may force the playback of masked parameters of a cue.

---

**Note:** For more detailed instructions on using the submaster Function Filter feature, refer to [“Function Filter” on page 232](#).

---

#### Apply filters to a submaster:

- Step 1. Set filters as required.
- Step 2. At submasters panel, press [Func Filter] / [Choose] of required submaster.

#### Clear filters from submaster:

- Step 1. Clear all filter selections.
- Step 2. Press [Func Filter] / [Choose] at submaster to clear.




# Dynamic State Mode

## Overview

Dynamic states are pre-packaged actions (states of motion) which can be applied to channels or groups of channels and then stored in cues. They provide a quick way of creating cues with luminaire actions such as Figure 8's, Ballyhoos, and Circles.

**Note:** A channel may have multiple dynamic states, provided they are not conflicting.

Dynamic Mode Button -  
Push to display  
dynamic states  
in touch screen.

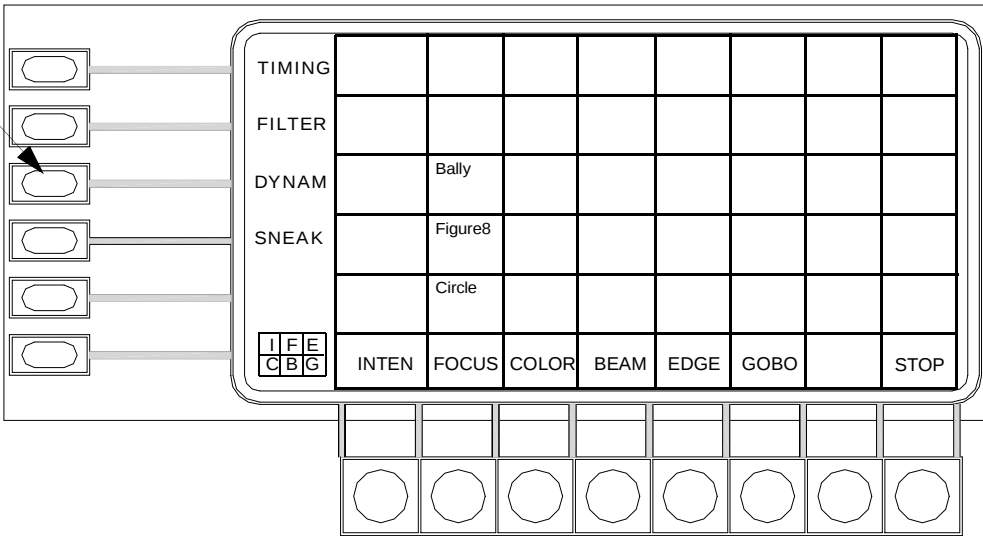

## Dynamic State Attributes

Each dynamic state has three adjustable parameters: orientation, size, and speed.

### Orientation

Not implemented in this software version.

### Size

Size determines the size of the luminaire's path during a dynamic state. This can be adjusted using the Dynamics soft encoder set.

For example, increasing the size of a Figure 8 would result in a larger "8" by enlarging the path of travel for the luminaires.

## Rate

Rate determines the speed the luminaires will move once they are in the dynamic state. The parameter timing dictates the amount of time the luminaire is to move from its current position into its dynamic state. This can be adjusted using the Dynamics soft encoder set.

For example, assume that channels 1 through 10 are placed in a dynamic circle state, with a size of n and a rate of x. When the dynamic state is stored into a cue, the pan and tilt parameters for channels 1 through 10 have a delay of 2 seconds and time of 10 seconds. When that cue is played back, the pan and tilt action will hold for 2 seconds. They will then take 10 seconds to transition from their previous states to the full position required by the beginning of the dynamic state. When those 10 second have elapsed, they will begin the standard dynamic state transitions, following the rate associated with the dynamic state.

## Adjusting Parameters

When the Dynamic mode is selected, the screen/window changes to allow selection of dynamic states. Select states by pressing or clicking the appropriate button. Once a state has been selected, its orientation, size, and speed can be adjusted using the manual control soft encoders.

With dynamic state running, at soft encoder display, select [Dyn]. The soft encoders will be mapped as follows:

- Encoder 1- ORIENT (min/max)
- Encoder 2 - SIZE (min/max)
- Encoder 3 - RATE (min/max)

Using encoder knobs and min/max buttons, adjust parameters as required.

---

## Storing Dynamic States as Cues/Presets

Dynamic states can be applied to luminaires or groups of luminaires and stored as a cue or preset.

Storing guidelines:

- When stored into a cue/preset, the state information, as well as the established size, speed and axis (controlled from the encoders) are stored.
- When stored into a cue/preset, the parameters affected by the dynamic state will follow the timing information for those parameters before assuming any dynamic state speed information.
- A dynamic state must be running in order to be stored as a cue/preset.

---

**Note:** Luminaires incapable of an action will ignore the command. For example, a luminaire without a color wheel would not respond to a “Spin Color Wheels” state.

---

### **Store a dynamic state:**

- Step 1. Select required channel(s).
- Step 2. At screen/window, select desired state. Luminaires will assume dynamic action.
- Step 3. At soft encoder display, select [Dyn]. Adjust applicable encoders and min/max buttons to set axis, size, and speed.
- Step 4. Store cue or preset as usual.

### **Switch to a different state while one is already running:**

- At screen/window, select new state. Luminaires will assume new dynamic action.

### **Stop a dynamic state:**


When a dynamic state is stopped, the luminaires will return to their last static position prior to executing the dynamic state.

- Press Stop to halt the dynamic action of selected luminaires.

# Sneak Mode

## Overview

The Sneak Mode works in conjunction with the command-line keypad to provide manual control of luminaires. The Sneak Mode has a dual purpose. First, it provides a graphic display of command-line entries that would not normally be visible. When programming cues using command-line manual control, it will display the luminaire settings as they are sent to the luminaires. Second, it provides a means of creating manual control moves “on-the-fly.” By using the Sneak Mode, values can be assigned to parameters and then recalled using a specified time, luminaire time, or by manually pressing Enter. This would allow you to “sneak” in a move that was not originally programmed during playback of a show. In addition, by using the command-line keypad [Sneak] button, it is also possible to “sneak” to a preset.

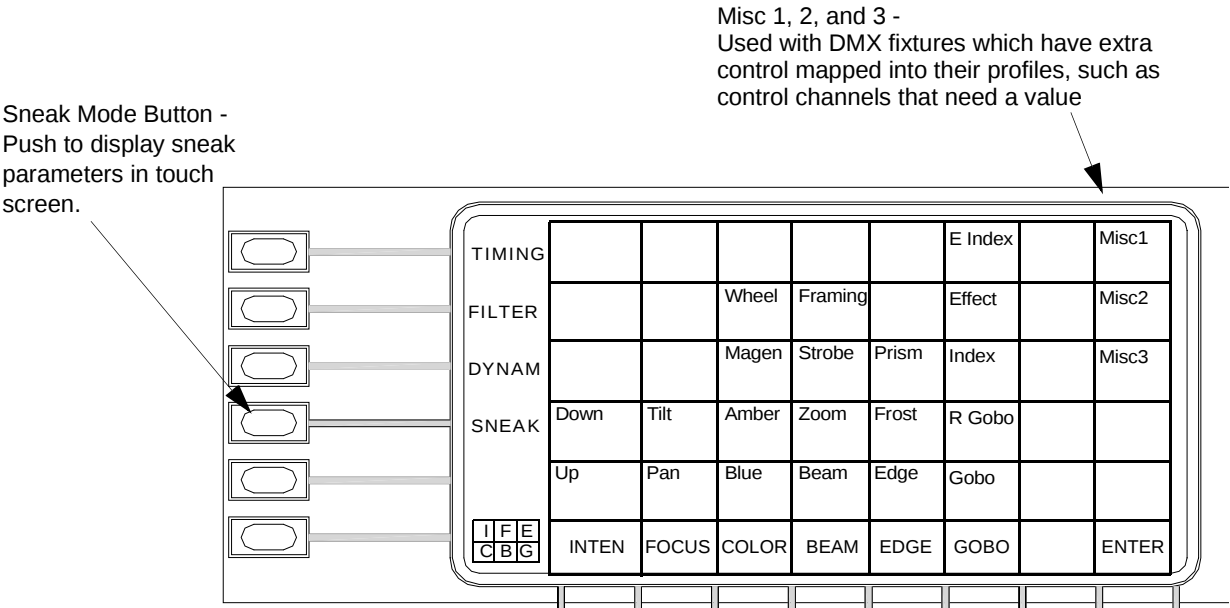



## Sneak Mode Values

Sneak parameter data is entered using the touch screen window and [Sneak] button. After the sneak operation has been defined, pressing the **Enter** button will cause all selected luminaires to move into the new parameter values defined in the screen/window. Values are entered numerically at the keypad.

### DMX-Controllable Luminaires

Time is entered in minutes and seconds, or seconds and tenths of seconds. (Maximum time entry is 59:59.) Refer to [“Time/Speed Formats” on page 142](#).

Use discrete numbers from the following ranges for parameter values:

| Function        | DMX-Controllable Luminaires |
|-----------------|-----------------------------|
| Pan/Tilt*       | 0-1023, home = 512          |
| Other Functions | 0-255                       |

### VARI\**LITE* Luminaires

Time is entered in minutes and seconds, or seconds and tenths of seconds. (Maximum time entry is 59:59.) Refer to [“Time/Speed Formats” on page 142](#).

Use discrete numbers from the following ranges for parameter values:

| Function      | VL5/VI5Arc/VL5B | VL6/VL6B                                                                                              | VL7/VL7B                                                                                              |
|---------------|-----------------|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| Pan/Tilt*     | 0-1023          | 0-1023                                                                                                | 0-1023                                                                                                |
| Color         | 0-335           | n/a                                                                                                   | 0-255                                                                                                 |
| Color Wheel   | n/a             | 0-192                                                                                                 | n/a                                                                                                   |
| Beam          | n/a             | 0-127                                                                                                 | 0-127                                                                                                 |
| Edge          | 0-335           | 0-127                                                                                                 | 0-512                                                                                                 |
| Zoom          | n/a             | 0-255                                                                                                 | 0-100                                                                                                 |
| Strobe        | n/a             | 0 = open<br>1-9 = closed<br>10 = slow random<br>11 = med. random<br>12 = fast random<br>13-127 strobe | 0 = open<br>1-9 = closed<br>10 = slow random<br>11 = med. random<br>12 = fast random<br>13-100 strobe |
| Frame         | n/a             | n/a                                                                                                   | 0-255**                                                                                               |
| Gobo Wheel    | n/a             | 0-192                                                                                                 | 0-192                                                                                                 |
| Rotating Gobo | n/a             | 0-5***                                                                                                | 0-360                                                                                                 |
| Gobo Index    | n/a             | 0-360                                                                                                 | 0-360                                                                                                 |

\* Home = 512 for pan and 512 for tilt.

\*\* VL7B only. \*\*\* VL6B only.

---

## Sneak Mode Operation

When the Sneak mode is selected, the screen/window changes to allow modification of parameter values. Values are entered on the keypad.

### **Perform a sneak action using current timing information:**

- Step 1. Select channels as required.
- Step 2. At touch screen or window, select Sneak mode. Select parameter(s) to be involved in transition. For example, Pan.
- Step 3. At keypad, press [Sneak] and enter required value. For example, [Sneak] [4] [5]. Press [Enter].
- Step 4. At touch screen or window, select next parameter and enter its value using keypad.
- Step 5. When complete, press Sneak Enter. Selected luminaires will move to their new instructions using their current timing values if Manual Timing is enabled.

### **Perform a sneak action using new timing information:**

- Step 1. Select channels as required.
- Step 2. At touch screen or window, select Sneak mode. Select parameter(s) to be involved in transition. For example, Pan.
- Step 3. At keypad, press [Sneak] and enter required value. For example, [Sneak] [4] [5]. Press [Enter].
- Step 4. Using [Time] button, enter new timing information. For example, [Sneak] [Time] [2] [0].
- Step 5. At touch screen or window, select next parameter and enter its value and timing information using keypad.
- Step 6. When complete, press Sneak Enter. Selected luminaires will move to their new instructions using their new timing values.

### **Sneak to a preset:**

- Step 1. Select channels as required.
- Step 2. At touch screen or window, select Sneak mode. Select parameter(s) to be involved in transition. For example, Pan.
- Step 3. At keypad, press [Sneak] [Preset] [x] [Enter] (where x is the discrete preset number) or press [Sneak] / [Preset Select Button].
- Step 4. Press Sneak Enter. Selected luminaires will move as dictated by preset data.

# Templates

---

## Creating Templates

There are 20 programmable templates associated with each mode of the Timing/Filter window. These can be used to recall frequently used filter, timing, sneak, and dynamic state settings. When the window is in Timing Mode, these are time templates. When the window is in Filter mode, these are filter templates, etc.

All 20 templates are accessible from the Timing window, however only the first six are accessible from the touch screen.

### From Timing Window

#### **Store a new template:**


- Step 1. Setup window as desired.
- Step 2. Click STORE. Button will be highlighted.
- Step 3. Click button (1-20) where you want to store template. Settings will be stored and STORE button will no longer be highlighted.
- Step 4. Click LABEL.
- Step 5. Click button of template to label.
- Step 6. At keyboard, enter label and press [return].

#### **Recall a template:**

- Click button (1-20) of required template. Settings will be applied to window.

## From Touch Screen

The first six programmable templates can be accessed using the six buttons to the right of the Touch Screen. Once stored, the template can be accessed at any time by pressing the required button.

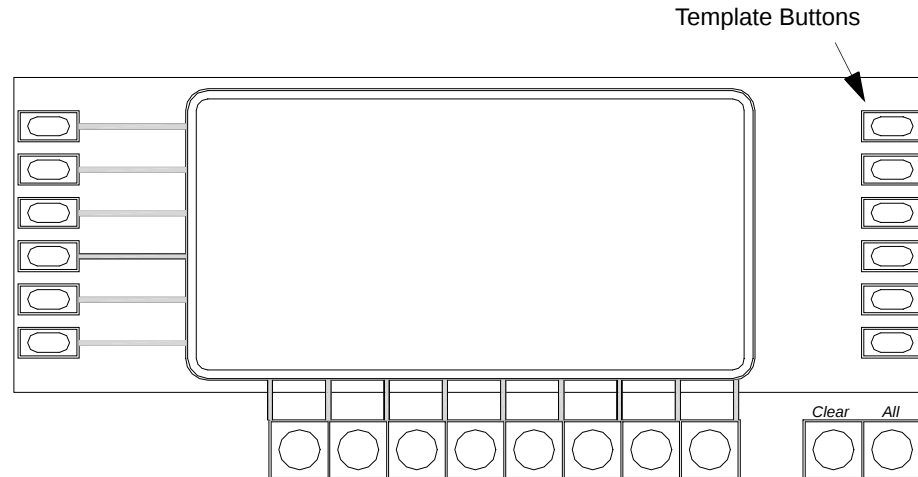

### Store a new template:

- Step 1. At touch screen select **Timing**.
- Step 2. Setup screen as desired.
- Step 3. Press [Store] / [Timing Template Button] (any one of the six buttons where you wish to store the template).

### Recall a template:

- Step 1. Press required [Timing Template Button].

---

**Note:** Once a template is recalled, it may be necessary to press **Enter** to send values to luminaires.

---

*(This page intentionally blank.)*

# CHAPTER 9.

---

## Special Features

This chapter contains instructions for controlling luminaires with the console's advanced features and for copying and moving programmed data.

- **Ad Hoc Groups**
- **Advanced Control**
- **Data Copy and Move**
- **Function Keys**

*(This page intentionally blank.)*

# Ad Hoc Groups

---

## Overview

“[Storing, Modifying, and Recalling Groups](#)” on page 90 provided instructions for storing groups of luminaires for the purpose of simplifying channel selection. These groups are generally based on luminaire types, truss positions, or other distinctions unique to your particular show. Ad Hoc groups, however, are a way of selecting channels “on-the-fly” which are not already pre-stored as a group. The Ad Hoc feature accomplishes this task by allowing you to select channels based on information such as “all channels in a specific preset” or “all channels in a specific color.”

---

## Creating Ad Hoc Groups

Ad Hoc groups can be created using the command-line keypad, select displays, specialty buttons, or the submasters.

### From Keypad



- [Group] [Preset] [n] [Enter] - selects all active channels in Preset n (where n is the discrete preset number).
- [Group] [Color] [n] [Enter] - selects all active channels in Color n (where n is the discrete color number).
- [Group] [Cue] [n] [Enter] - selects all active channels in Cue n. (This does not affect the current position of those channels.)
- [Group] [At] [n] - selects all *active* channels with intensity value of n.

### From Select Displays

- [Group] / [Preset Select Button] - selects all active channels in Preset n (where n is the discrete preset number).
- [Group] / [Beam Select Button] - selects all active channels in Beam Select n (where n is the discrete beam number).

### From Submasters

- [Group] / [Choose] - selects all channels in the submaster’s active cue.

# Advanced Control

## Manual Timing



The Manual Timing feature is used to apply parameter times manually. While Manual Timing is active, any manual changes via the selects or the encoder buttons will follow the timing currently active in the luminaire.

### Activate Manual Timing:

Manual Timing is an alternate control state. It will be active until [Man Time] is de-selected.

- At Manual Control panel, press [Man Time] or at Special menu, select Manual Timing.

## QuickFocus



The QuickFocus feature allows you to step sequentially through each stored channel in a selected preset to adjust its parameters. The new parameter data can then be stored into the preset. This allows you to easily isolate data so that it can be updated without affecting the remaining data in your preset.

QuickFocus is an alternate control state. It will be active until it is de-selected.

### Update a preset with QuickFocus:

During QuickFocus, the entire preset is brought up live and all other outputs are disabled (as long as the console is still in QuickFocus mode).

- Step 1. Press [Quick Focus]. Console will assume QuickFocus mode. (Or select QuickFocus from Special menu.)
  - Step 2. Select required preset by using preset select or keypad. All luminaires that have data from that preset will be selected and will bring up the preset live.
  - Step 3. Press [Next]\*. First channel will stay active, while all other channels go to inactive state.
  - Step 4. Modify focus or other parameters as required.
  - Step 5. Press [Next]\* to go to next channel. When the last channel with stored information has been brought up and adjusted, pressing the [Next]\* button activates the entire modified preset.
  - Step 6. Re-store preset to save changes. Press [QuickFocus] to exit mode.
- \* Or [Last] as required.



# Park

The Park feature allows you to place a luminaire into a state in which it will not respond to any manual or playback commands, nor will it store into any cues. This feature is useful for setting up work lights or other special lights that won't be part of the show.

**Park a luminaire(s):**

- Step 1. Select required channel(s).
- Step 2. At Special menu, select Park. Selected channels will now be parked.



**Release a parked luminaire(s):**

- Step 1. At Special menu, choose Select Parked. All Parked luminaires will be selected.
- Step 2. At Special menu, select UnPark. Luminaires will now respond to commands as usual.



## Data Copy and Move

---

### Copy Channel

The Copy Channel feature is used to copy current parameter settings from one luminaire to another (or to a group of luminaires). All parameter settings, including any timing values, can be copied - as permitted by any filter settings at the touch screen. Cue data, however, will not be copied.

The luminaire from which data is being copied is referred to as the “source” luminaire. The luminaires receiving the data are referred to as “target” luminaires. The target luminaires will immediately conform to the selected parameter data (including spin properties) of the source luminaire. If the source luminaire does not have data stored for a particular parameter or the parameter has been filtered from the operation, then the target luminaires will not change their current settings for those parameters. Once the target luminaires have conformed to the new parameter data, you may store a new cue or continue to manipulate the luminaires via manual control and then store a cue.

### How Data is Derived from Presets

If the source luminaire contains data provided by a Preset, then the system uses a hierarchy to determine how to translate this data to the target luminaire. The system will first look for a matching Preset number. For example, if the source contains data from Preset 2, then the new luminaire will look for Preset 2. If no matching Preset is found, then it will look for a matching Select. If no Select is found, then the new luminaire will conform to the parameter(s) by utilizing absolute data.

**Copy a channel:**

- Step 1. Select target channel(s).
- Step 2. At touch screen, set filters.
- Step 3. At keypad, press [Recall] [Chan] [n] - where n is the number of the channel you wish to copy.

---

## Copy/Move



The Copy/Move feature allows manipulation of preset, cue, sets, and sequences data. For example, the data content of Cue 1 could be copied to Cue 2 using this feature. In this case, Cue 1 and Cue 2 are now identical. When data is moved, for example from Cue 1 to Cue 2, the content of Cue 1 is moved to Cue 2 and there will no longer be a Cue 1 in the cue list.

Pressing the [Copy/Move] button once activates the *copy* feature, while double-clicking the button activates the *move* feature.

**Copy a cue to a new number:**

- At keypad, press [Copy/Move] [Cue] [1] [At] [201] [Enter] - copies Cue 1 data to Cue 201.

**Copy a range of cues to a new number range:**

- At keypad, press [Copy/Move] [Cue] [1] [Thru] [5] [At] [201] [Enter] - copies Cues 1-5 to Cues 201-205.

**Move a cue to a new number:**

- At keypad, press [Copy/Move] [Copy/Move] [Cue] [1] [At] [201] [Enter] - moves Cue 1 data to Cue 201 (Cue 1 is now blank).

**Move a range of cues to a new number range:**

- At keypad, press [Copy/Move] [Copy/Move] [Cue] [1] [Thru] [5] [At] [201] [Enter] - moves Cues 1-5 to Cues 201-205 (Cues 1-5 are now blank).

---

**Note:** Preset, Set, or Seq can be substituted for Cue in the above examples.

---

# Function Keys

## Setting Function Key Option

Selected keys from the Virtuoso command-line keypad are mapped to the computer keyboard's function keys [F1]-[F12]. Pressing these will open a window which takes the place of command-line functions such as Store, Selective Store, Delete, At, etc.

**Note:** Computer keyboard "quick keys" are available for use in these windows. Refer to ["Quick Keys" on page 169](#) for instructions.

## Using Function Keys

### Store - F1

Step 1. Using windows, set parameters for cue, preset, beam, color, group, snapshot, macro, or board cue.

Step 2. Press [F1]. (Store window will open.)

Step 3. Select item to store.

Step 4. Enter number for future recall.

Step 5. Click OK.

- Plus is used with cue store operations. Selecting Plus and clicking OK will store cue to next cue number according to increment shown in Encoder window. Refer to ["Encoders Window" on page 56](#).



### Selective Store - F2


Step 1. Using windows, set parameters you wish to modify or add in a cue or preset.

Step 2. Press [F2]. (Selective Store window will open.)

Step 3. Select Cue or Preset.

Step 4. Enter range of cues or presets.

Step 5. Click OK.

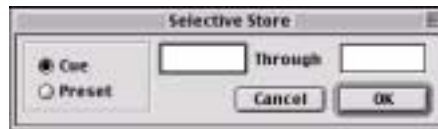


### Update - F3

- Step 1. Using windows, modify required channels.
- Step 2. Press [F3]. (Update window will open.)
- Step 3. Select item for update.
- Step 4. Enter number of item where you wish to store modified channels.



### Selective Recall - F4

- Step 1. At Panels menu, select Timing Display. (Timing window will open.)
- Step 2. Select Filter tab.
- Step 3. Select parameters to be recalled.
- Step 4. Press [F4]. (Selective Recall window will open.)
- Step 5. Select item from which data will be recalled.
- Step 6. Enter number of cue, preset, or channel.
- Step 7. Click OK.

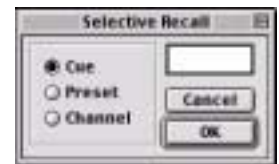

### Delete - F5

- Step 1. Press [F5].
- Step 2. Select item to delete.
- Step 3. Enter number of item.
- Step 4. Click OK.




### Autoload - F6

- Step 1. Press [F6].
- Step 2. Enter number of submaster for autoloading.
- Step 3. Select Cue or Effect.
- Step 4. Click OK.




## At - F7

- Step 1. Select desired channel(s).
- Step 2. Press [F7].
- Step 3. Select Full or Value. Enter value (1-100%).
- Step 4. Click OK.

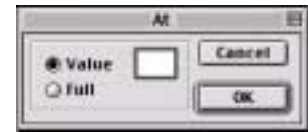

## Copy/Move - F8

- Step 1. Press [F8].
- Step 2. Press [F8] again to toggle between Copy and Move windows.
- Step 3. At desired window, enter cue numbers for copy/move operation.
- Step 4. Click OK.

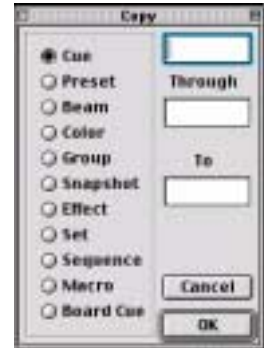


## Sneak - F9

- Step 1. Press [F9].
- Step 2. Select parameter for sneak operation.
- Step 3. Enter parameter value.
- Step 4. Click OK.



## Select - F10

- Step 1. Press [F10].
- Step 2. Select item.
- Step 3. Enter item number.
- Step 4. Click OK.

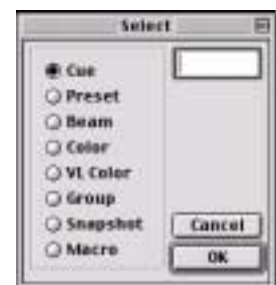

## Time - F11


- Step 1. Select a parameter(s).
- Step 2. Press [F11].
- Step 3. Select Time, Speed, or Delay.
- Step 4. Enter value.
- Step 5. Click OK.



## Undo - F12

Step 1. Press [F12].

Step 2. Click OK to undo last action.

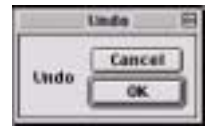

## Quick Keys

The following computer keyboard "quick keys" can be used as shortcuts to select options in the function windows (F1-F12). For example, while in the Time window, pressing [T] would select Time, [S] would select Speed, and [D] would select Delay.



B = Beam

M = Macro

C = Cue

O = Board Cue

D = Delay

P = Preset

E = Effect

Q = Sequence

F = Full

S = Snapshot or Speed

G = Group

T = Time or Set

H = Channel

U = Cue with Preset

K = Color

V = Value or VL Color



and



= Plus

The following "quick keys" can be used with the 3D Graphic window to adjust the camera angle:

4, 6 = left, right direction (also arrow keys)

8, 2 = up, down (also arrow keys)

7, 9 = zoom in, zoom out (also  , )

The following "quick keys" can be used with the Select Displays window:

 enables the Store function.

(Hold  and click in cell to store a select.)

 enables the Label function.

(Hold  and click in cell to label a select.)

# CHAPTER 10.

---

## Snapshots, Macros, and Board Cues

This chapter provides instructions for storing your own console setups and frequently used programming actions, and for orchestrating submaster playback functions with board cues.

- **Snapshots**
- **Macros**
- **Board Cues**

*(This page intentionally blank.)*

# Snapshots

---

## Overview

A snapshot is a captured state on the console which can be recalled at any time in the future. States such as Channel Select panel selections, touch screen status, submaster setups, and windows layouts can be captured as a snapshot. Snapshots can be recalled via manual selection of the associated snapshot number or by automated activation through the cue sheet via link instructions. Snapshots may also be included in macros.

The Snapshot Filter window allows you to select those areas of the console you wish to include in a snapshot store operation. Once this window is setup, it only needs to be changed if you are going to store a snapshot which requires a different setup.

The Snapshot window displays a Virtuoso console, however, the sections of the console and associated snapshot work for either the Virtuoso, Virtuoso Tech or Virtuoso DX consoles. Since the "panels" of the Virtuoso DX and Virtuoso Tech console are part of one panel, they are not as clearly defined.

Control areas that may be included in a snapshot are (as seen in the console graphic):


- Channel Select panel - stores the page and current selected channels. When the snapshot is recalled, it is displayed at the Channel Select window and Channel Select panel if applicable.
- Manual Control panel - stores the current encoder status and Select Display configuration including bank and page selection, as well as, active states such as QuickFocus and Manual Timing.
- Playback panel - stores the keyboard display setup, and mode status and selections with the Touch Screen.
- Submaster states - stores the current state of any or all submasters. This includes active submaster banks (1-10, 11-20, 21-30) made at the Submasters drop-down section. The submaster control, settings, function filters, rates, operating modes, the active and pending cues, etc. are all saved as part of the snapshot.
- Effects panel - stores the state of the effects control buttons and the state of the Select Displays in effect mode.
- Monitor 1 - stores the windows layout on monitor 1.
- Monitor 2 - stores the windows layout on optional monitor 2.
- Monitor 3 - stores the windows layout on optional monitor 3.
- Monitor 4 - stores the windows layout on optional monitor 4.

## Storing Snapshots

Snapshots are stored in the Snapshots select banks and can be accessed on any of the select displays just as Presets, Colors, Beams, Groups, Macros, and Effects or from the keypad. For instructions on using the select displays, refer to the [“Select Displays” chapter on page 65](#).

### Store a snapshot using window and keypad:


- Step 1. Configure console as required.
- Step 2. At Operation menu, select Snapshot Filter. Snapshot Filter window will open.
- Step 3. At window, select area to be snapshot and/or click on arrow to drop down submasters window and select any required submasters to be snapshot.
- Step 4. Press [Store] [Snap Shot] [n] [Enter]. The portions of the console indicated in the snapshot window will be stored in the target snapshot.

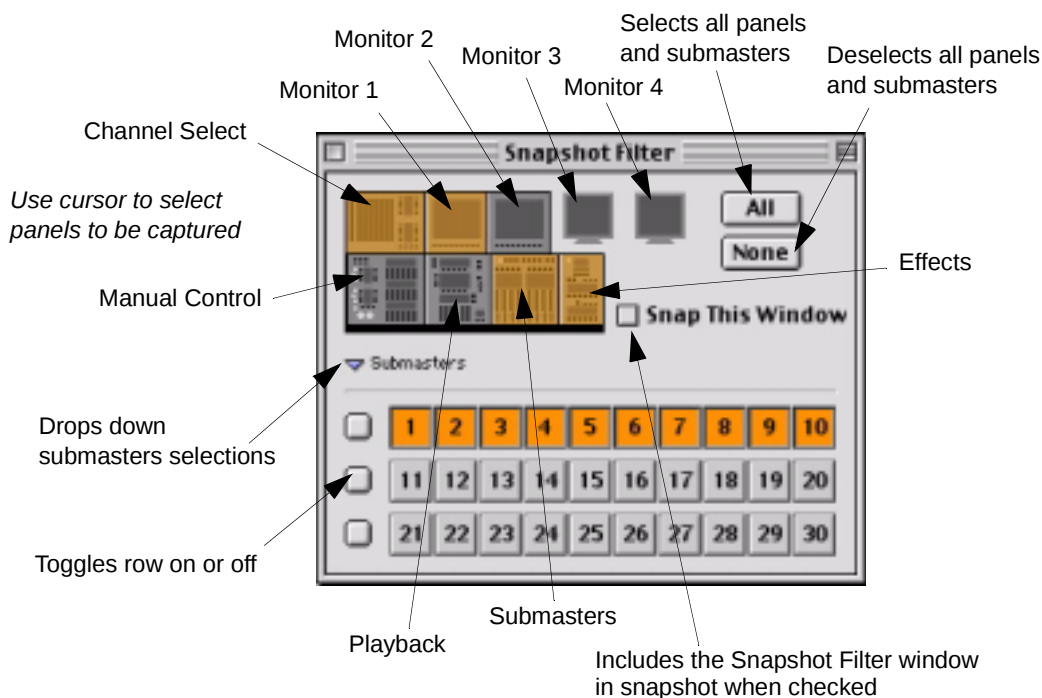

### Store a snapshot using select display:

- Step 1. Configure console as required.
- Step 2. At Operation menu, select Snapshot Filter. Snapshot Filter window will open.
- Step 3. At window, select area to be snapshot and/or click on arrow to drop down submasters window and select any required submasters to be snapshot.
- Step 4. At a manual control select display, press [Bank/Function] / [Snaps].
- Step 5. Press [Store] [Snapshot Select Button].

Indicates that Snapshots have been selected

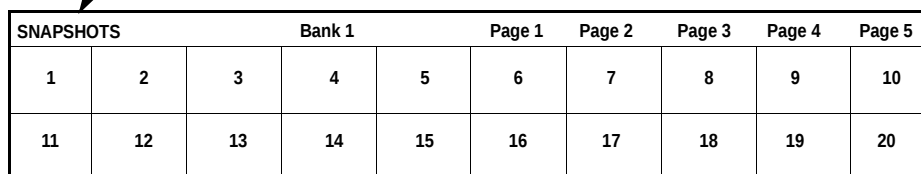

| SNAPSHOTS |    |    | Bank 1 |    | Page 1 | Page 2 | Page 3 | Page 4 | Page 5 |
|-----------|----|----|--------|----|--------|--------|--------|--------|--------|
| 1         | 2  | 3  | 4      | 5  | 6      | 7      | 8      | 9      | 10     |
| 11        | 12 | 13 | 14     | 15 | 16     | 17     | 18     | 19     | 20     |

### Label a snapshot:

When labeling, the [xxxxxx] is entered on the alpha-numeric keyboard. The [return] button is also located on the keyboard.

- [Label] [Snap Shot] [n] [xxxxxx] [return], or
- [Label] [Snapshot Select Button] [xxxxxx] [return].

### Link snapshot to a cue using shortcut method:

A shortcut for linking a snapshot to a cue is available. In this case, the current desk settings are stored into the snapshot according to the filters currently enabled in the Snapshot Filter window and automatically linked to the cue. The snapshot stored using this method is given a snapshot number of 200 above. The number is chosen by the console and cannot be accessed in the Snapshot Data window.

- Step 1. At Snapshot Filter widow, ensure required areas of the console to be snapshot are enabled.
- Step 2. Configure console as required.
- Step 3. Press [Cue] [n] [Link] [Snap Shot] [Snap Shot]. Snapshot will be stored as a number above 200 and linked to the cue.

---

**Note:** Each snapshot created this way will be unique to that cue. Commonly used snapshots should first be created and then linked to a cue using the Link command.

---

---

## Deleting Snapshots

A snapshot can be deleted using the keypad Delete function.

### **Delete snapshot(s):**

- [Delete] [Snapshot] [n] [Enter], *or*
- [Delete] / [Snapshot Select Button].

---

## Recalling Snapshots

When a snapshot is recalled, any cues that were in active playback will be recalled in their stored times. Any cues that were in pending will be placed in the appropriate pending files.

### **Recall snapshot using select display:**

Step 1. At a manual control select display, press [Bank/Function] / [Snaps].

Step 2. Press [Snapshot Select Button].

### **Recall snapshot using command-line keypad:**

- Press [Snapshot] [n] [Enter] (where n is the discrete snapshot number).

### **Recall snapshot via link:**

- <Cue> [n] [Link] [Snap Shot] [x] [Enter] - links Snapshot x to Cue n.
- [Board Cue] [n] [Link] [Snap Shot] [x] [Enter] - links Snapshot x to Board Cue n.

### **Recall a snapshot via a macro:**

- While recording a macro, recall a snapshot. When the macro is played back, the snapshot will be recalled. (Refer to [“Macros” on page 178.](#))

## Snapshot Data

Snapshot data can be viewed in the Snapshot Data window.

### Open Snapshot Data window:

- At Data menu, select Snapshots.
- Dots indicate which panels are stored in each snapshot.



The 'Snapshot Data' window is shown with a table of snapshot data. Labels with arrows point to specific columns and rows:

- Monitor 1 points to the M1 column.
- Monitor 2 points to the M2 column.
- Monitor 3 points to the M3 column.
- Monitor 4 points to the M4 column.
- Channel Select points to the CS column.
- Manual Control points to the MC column.
- Playback points to the PB column.
- Effects points to the Eff column.
- Windows points to the Win column.
- Submasters points to the Subs column.

| #  | Label | M1 | M2 | M3 | M4 | CS | MC | PB | Eff | Win | Subs |
|----|-------|----|----|----|----|----|----|----|-----|-----|------|
| 1  | 1     | *  | *  | *  | *  | *  | *  | *  | *   |     |      |
| 2  | 2     | *  | *  | *  | *  |    |    |    |     |     |      |
| 3  | 3     | *  | *  | *  | *  |    |    |    |     |     |      |
| 4  | 4     | *  | *  | *  | *  |    |    |    |     |     |      |
| 5  | 5     | *  | *  | *  | *  |    |    |    |     |     |      |
| 6  | 6     | *  | *  | *  | *  |    |    |    |     |     |      |
| 7  | 7     | *  | *  | *  | *  |    |    |    |     |     |      |
| 8  | 8     | *  | *  | *  | *  |    |    |    |     |     |      |
| 9  |       |    |    |    |    |    |    |    |     |     |      |
| 10 |       |    |    |    |    |    |    |    |     |     |      |
| 11 | 11    |    | *  |    | *  | *  | *  | *  | *   |     |      |
| 12 | 12    |    | *  |    | *  | *  | *  | *  | *   |     |      |
| 13 | 13    |    |    |    |    | *  | *  | *  | *   |     |      |

# Macros

---

## Overview

A macro is a series of console operations (button presses or display selections) that has been recorded and stored by number. The sequence entered during a macro record operation will automatically be played back when the macro is recalled. Playback can be initiated by manual selection of the associated macro number or automated via cue sheet link instructions. Macros can speed up programming by providing a way to easily execute repetitive or complicated commands, or be used to automate playback sequences.

The Macro record function allows logical actions or events to be recorded. Playback will affect the visible console state, but will not simulate button presses or command-line entries.

Macros are always recorded with timing information, which can be recalled during playback if desired. The time spaces between events are recorded in real time and will play back identically as the macro replays the events. The macro timing feature can be specified during the recording or “added on” later. Since macros always record in real time, the timing information can be recalled as needed.

Macros are stored in the Macro select banks and can be accessed on any of the select displays just as Presets, Colors, Beams, Groups, Snapshots, and Effects. For instructions on using the select displays, refer to the [“Select Displays” chapter on page 65](#).



## From Keypad

The macro record function can be initiated from the keypad. Timing can be specified using command-line entry.

When [Enter] is pressed, the [Macro Rec] button will flash indicating that the recording function is enabled. Pressing [Macro Rec] after this will disable the record function in the event you need to abort the action.

### **Record a macro:**

When labeling, the [xxxxxxx] is entered on the alpha-numeric keyboard. The [return] button is also located on the keyboard.

- Step 1. Press [Store] [Macro] [Enter].
- Step 2. Enter sequence of button presses, display selections, or command-line entries.
- Step 3. Press [Store] [Macro] [n] [Enter] or [Store] [Macro] [n] [Label] [Enter] [xxxxxxx] [return] - where n is the number of the macro select where you wish to store the recorded sequence.

### **Record a macro for timed playback:**


- Step 1. Press [Store] [Macro] [Enter].
- Step 2. Enter sequence of button presses, display selections, or command-line entries.
- Step 3. Press [Store] [Macro] [n] [Time] [Enter] - where n is the number of the macro select where you wish to store the recorded sequence.

### **Specify timing for a previously recorded macro:**

- [Macro] [n] [Time] [Enter] - where n is the discrete macro number.

## From Encoders Window

Macro (or board cue) recording can also be initiated from the Encoders window. Use [Rec] button to begin a macro record operation as follows:

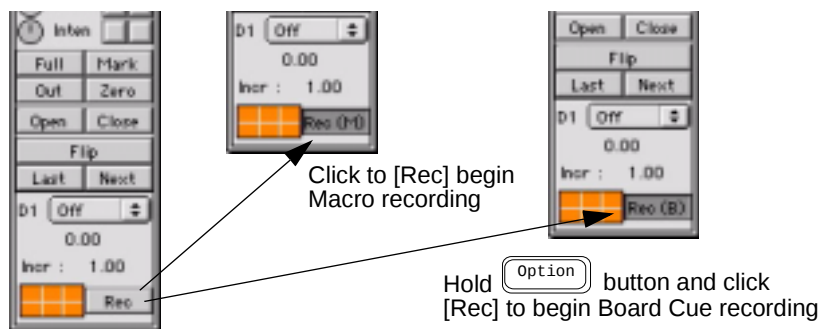



## Macros Data Window

The Macros window can be used to view macro information and to edit macro timing.

The macro Delete, Replace, Punch In, and Insert features allow macro editing so that an entire macro does not have to be re-recorded in order to make a change.

### Access Macros window:

- Step 1. At Data menu, select Macros. Macros window will open.
- Step 2. If timing is required, click in "T" column. A dot will appear in column indicating that timing will be used when playing back macro. (Timing can be turned off at a later time by clicking in the "T" column again.)
- Step 3. If required, click arrow at left of Steps to open Steps drop-down window. Edit times as required.

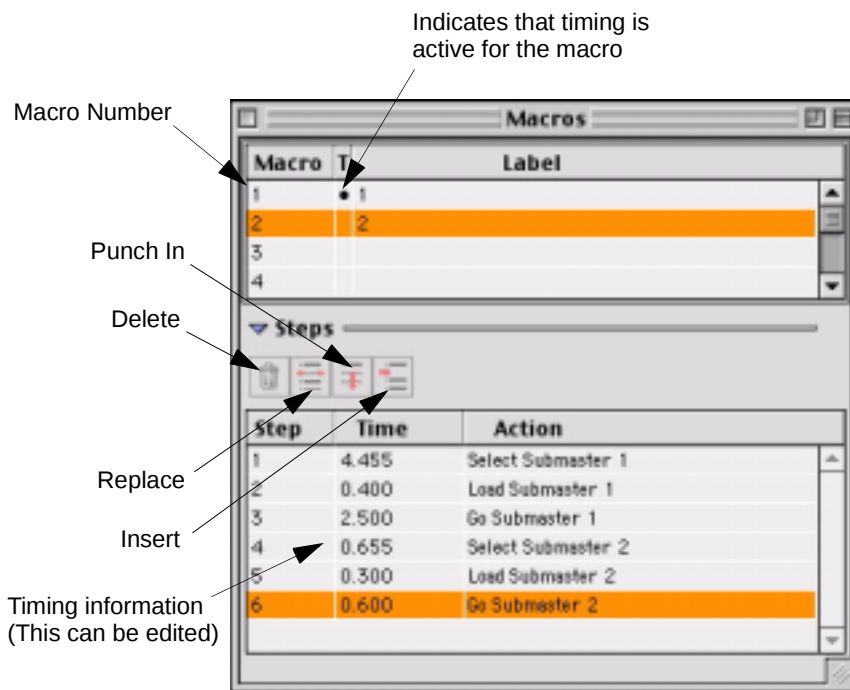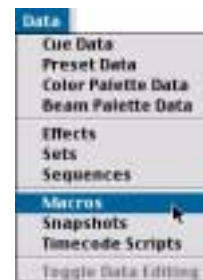

### Delete a step:

- Step 1. Using trackpad, select step(s) to be deleted.
- Step 2. Click on "trash can" icon. Step(s) will be removed.

**Replace a step:**

- Step 1. Using trackpad, select step to be replaced.
- Step 2. Click "replace" icon. (Console [Macro Rec] button will begin flashing.)
- Step 3. At desk, perform replacement action. (The first action taken will replace the selected step and editing will end.)

**Replace all steps from Step X on (through remainder of macro):**

- Step 1. Using trackpad, select last "good" step. (Steps after this selection will be replaced.)
- Step 2. Click "punch in" icon. (Console [Macro Rec] button will begin flashing.)
- Step 3. At desk, perform new series of actions.

---

**Note:** Macro can be updated or re-stored as a new number.

---

- Step 4. To store back into original number:  
Press [Update] [Macro] [Enter].

To store into new number:

Press [Store] [Macro] [n] [Enter] *or* [Store] [Macro Rec] [n] [Label] [Enter] [xxxxxxx] [return].

**Insert new step(s):**

- Step 1. Using trackpad, select step prior to where you wish to insert new step.
- Step 2. Click "insert" icon. (Console [Macro] button will begin flashing.)
- Step 3. At desk, perform new action(s).
- Step 4. To store back into original number:  
Press [Update] [Macro] [Enter].

To store into new number:

Press [Store] [Macro] [n] [Enter] *or* [Store] [Macro] [n] [Label] [Enter] [xxxxxxx] [return].

---

## Recalling Macros

Macros can be recalled at any select display, at the Macro window, or by playing back the linked cue.

### **Recall macro using select display:**

Step 1. At a manual control select display, press [Bank/Function] / [Macro].

Step 2. Press [Macro Select Button].

### **Recall macro using command-line keypad:**

- Press [Macro] [n] [Enter] (where n is the discrete macro number).
- Press [Macro] [Time] [n] [Enter] (where n is the discrete macro number) - recalls macro using time.

### **Recall macro via link:**

- <Cue> [n] [Link] [Macro] [x] [Enter] - links Macro x to Cue n.
- [Board Cue] [n] [Link] [Macro] [x] [Enter] - links Macro x to Board Cue n.

# Board Cues

---

## Overview

The board cue feature provides a method to record events on the console and play them back on command. Board cues are similar to macros, but are used primarily for recording playback operations in order to simplify complex cueing sequences for both spontaneous and “scripted” shows. The board cue feature allows recording of all types of playback operations, including submaster loading, executing Go commands, invoking filter states, pressing stop buttons, etc. It also allows simultaneous playback on multiple submasters for the purpose of automating or scripting a complete show. However, board cues will not record any previously established submaster modes that may be in effect when the board cue is recorded.

Board cues, like standard cues, are stored as numbers which can be randomly accessed for modification or playback at any time. The console can store up to 1,000 board cues, numbered from .01 to 999.99. Board cues can also be given alpha-numeric labels for identification.

During playback, when you recall a board cue, all of the keystrokes are sent immediately to the console. You can attached *wait times* to insert controlled delays in the playback sequence. You can also loop board cues to play back the event over and over, either for a specified number of times or until it is manually stopped.

Several methods can be used to control board cue playback, including MIDI timecode, MIDI notes, and manual control.

---

## Recording Board Cues

### Using Record Button



The quickest method for recording board cues, utilizes the [Bd Cue Rec] button and command-line keypad [Store] button.

When [Bd Cue Rec] is pressed, the button will flash indicating that the recording function is enabled. Pressing a second time will disable the record function in the event you need to abort the action.

#### **Record a board cue using record button:**

- Step 1. Press [Bd Cue Rec]. Button will flash.
- Step 2. Enter sequence of playback actions as required.
- Step 3. Press [Store] [Board Cue] [n] [Enter] or [Store] [Board Cue] [n] [Label] [Enter] [xxxxxx] [return] - where n is a discrete board cue number. (Board Cue [Go] button will light.)
- Step 4. [Bd Cue Rec] button will stop flashing.

### From Keypad

The board cue record function can be initiated from the command-line keypad. Board cue timing can also be specified at the keypad.

When [Enter] is pressed, the [Bd Cue Rec] button will flash indicating that the record function is enabled. Pressing [Bd Cue Rec] after this will disable the record function in the event you need to abort the action.

---

**Note:** Command-line shortcuts can be used when storing board cues just as with standard cues. Refer to [“Command-Line Shortcuts” on page 200](#).

---

#### **Record a board cue:**

When labeling, the [xxxxxx] is entered on the alpha-numeric keyboard. The [return] button is also located on the keyboard.

- Step 1. Press [Store] [Board Cue] [Enter].
- Step 2. Enter sequence of playback actions as required.
- Step 3. Press [Store] [Board Cue] [n] [Enter] or [Store] [Board Cue] [n] [Label] [Enter] [xxxxxx] [return] - where n is a discrete board cue number. (Board Cue [Go] button will light.)

### **Record a board cue with a linked attribute:**

Board cues can be linked to other board cues, macros, or snapshots.

Step 1. Press [Store] [Board Cue] [Enter].

Step 2. Enter sequence of playback actions as required.

Step 3. Press [Store] [Board Cue] [m] [Link] [Board Cue]\* [n] [Enter] - where m and n are discrete board cue numbers.

\* Substitute [Macro] or [Snap Shot] in place of [Board Cue] as required.

### **Record a board cue with a wait time:**


Step 1. Press [Store] [Board Cue] [Enter].

Step 2. Enter sequence of playback actions as required.

Step 3. Press [Store] [Board Cue] [n] [Wait] [x] [Enter] - where n is a discrete board cue number. (Board Cue [Go] button will light.)

### **From Encoders Window**

Board cue (or macro) recording can also be initiated from the Encoders window. Use [Rec] button to begin a board cue record operation as follows:

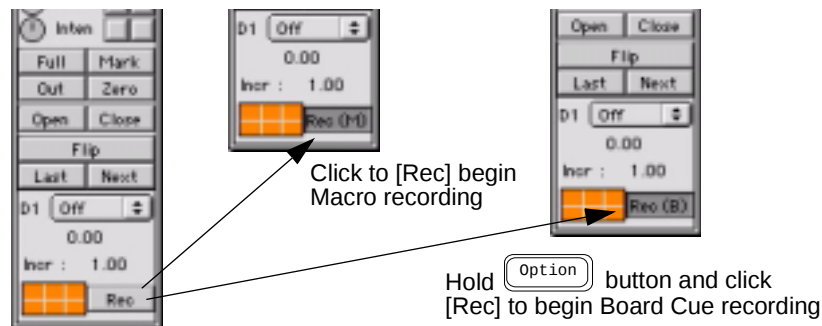


---

## **Deleting Board Cues**

### **Delete a board cue or a range of board cues:**


- [Delete] [Board Cue] [n] [Enter] - deletes the entire board cue.
- [Delete] [Board Cue] [n] [Thru] [q] [Enter] - deletes a range of board cues.

## Recalling Board Cues


Board cues can be recalled and played back using the command-line keypad and Board Control [Go]. When a board cue is recalled, the [Go] button at the submasters panel will start flashing. Pressing [Go] will play back the board cue and any linked events. Pressing [Stop/Back] will pause the board cue autofollow time (not execution) until [Go] is pressed again wherein it will resume autofollow from the point at which it was stopped.

### Play back a board cue:

- Step 1. At keypad, press [Board Cue] [n] - where n is the discrete board cue number. (Board cue [Go] button will light.)

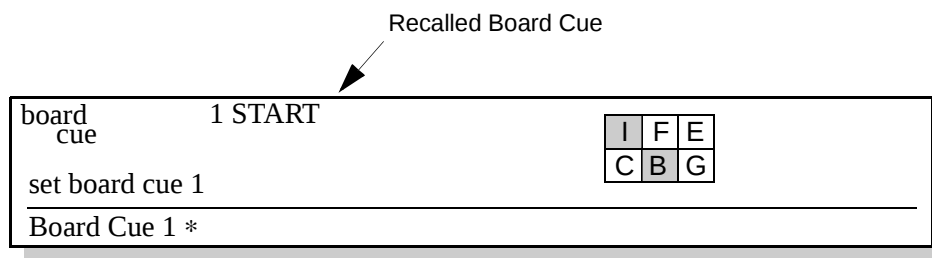

- Step 2. At submasters panel, press [Go] to initiate playback. ([Go] button will begin flashing.)

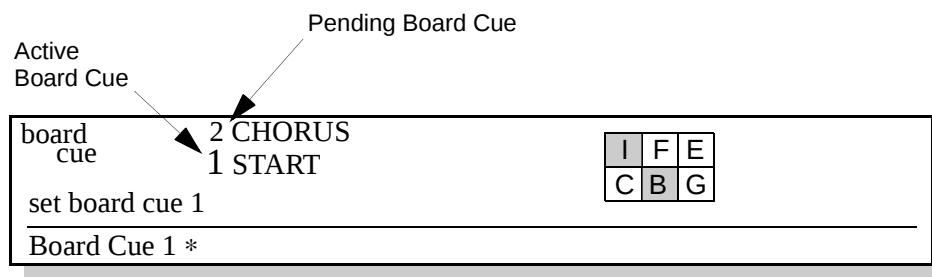

### Clear Board Cue indicators from display:

- Recall a non-existent board cue. For example, [Board Cue] [0] [Enter] will clear display of any board cue information as long as Board Cue 0 is not a valid board cue.

## Board Cues Window

The content of board cues can be viewed in the Board Cues window. This window displays all recorded board cues in numerical sequence and provides data regarding linked events which would run during playback. Link attributes such as loops and autofollow types (wait and trail) are visible as well as the associated times (refer to [“Special Cue Attributes” on page 193](#)). Unless links are provided, which will run cues out of sequence, any playback sequences will observe the numerical order found in the sheet.

The Delete, Replace, Punch In, and Insert features allow editing so that an entire board cue does not have to be re-recorded in order to make a change. The Time column may also be edited.

### Access Board Cue Sheet:

Step 1. At Operation menu, select Board Cue Sheet. Board Cue Sheet window will open.



Step 2. Edit Time column as required.

The screenshot shows the 'Board Cues' window. It contains a table of cues and a 'Steps' section below it. Annotations point to various features:

- Board Cue Number:** Points to the 'Num' column in the cues table.
- Auto Follow type (wait, trail, or none):** Points to the 'AF' column header.
- Cue link:** Points to the 'Link To' column header.
- Auto Follow time:** Points to the 'AF' column values.
- Snapshot link:** Points to the 'Snap' column header.
- Number of loop cycles:** Points to the 'Loop' column header.
- Replace:** Points to the 'Replace' button in the 'Steps' section.
- Punch In:** Points to the 'Punch In' button in the 'Steps' section.
- Insert:** Points to the 'Insert' button in the 'Steps' section.
- Delete:** Points to the 'Delete' button in the 'Steps' section.
- Steps which are part of the selected Board Cue:** Points to the 'Steps' table.
- Timing information (This can be edited):** Points to the 'Time' column in the 'Steps' table.

| Num | T | Label     | Snap | Macro | Link To | AF    | Loop |
|-----|---|-----------|------|-------|---------|-------|------|
| 1   |   |           |      |       |         | 0.000 |      |
| 2   |   | Board Cue |      |       |         | 0.000 |      |

| Step | Time  | Action             |
|------|-------|--------------------|
| 1    | 2.355 | Select Submaster 1 |
| 2    | 0.700 | Load Submaster 1   |
| 3    | 0.500 | Load Submaster 1   |
| 4    | 0.000 | Go Submaster 1     |
| 5    | 0.400 | Select Submaster 2 |
| 6    | 0.350 | Load Submaster 2   |
| 7    | 0.400 | Load Submaster 2   |

**Delete a step:**

- Step 1. Using trackpad, select step(s) to be deleted.
- Step 2. Click on "trash can" icon. Step(s) will be removed.

**Replace a step:**

- Step 1. Using trackpad, select step to be replaced.
- Step 2. Click "replace" icon. [Board Cue] button will begin flashing.
- Step 3. At desk, perform replacement action. (The first action taken will replace the selected step and editing will end.)

**Replace all steps from Step X on (through remainder of Board Cue):**

- Step 1. Using trackpad, select last "good" step. (Steps after this selection will be replaced.)
- Step 2. Click "punch in" icon. [Board Cue] button will begin flashing.
- Step 3. At desk, perform new series of actions.

---

**Note:** Board Cue can be updated or re-stored as a new number.

---

- Step 4. To store back into original number:  
Press [Update] [Board Cue] [Enter].

To store into new number:  
Press [Store] [Board Cue] [n] [Enter] or [Store] [Board Cue] [n] [Label]  
[Enter] [xxxxxxx] [return].

**Insert new step(s):**

- Step 1. Using trackpad, select step prior to where you wish to insert new step.
- Step 2. Click "insert" icon. [Board Cue] button will begin flashing (at a slower rate than when flashing during a Macro record operation).
- Step 3. At desk, perform new action(s).
- Step 4. To store back into original number:  
Press [Update] [Board Cue] [Enter].

To store into new number:  
Press [Store] [Board Cue] [n] [Enter] or [Store] [Board Cue] [n] [Label]  
[Enter] [xxxxxxx] [return].

*(This page intentionally blank.)*

# CHAPTER 11.

---

## Advanced Cue Features

This chapter contains instructions for storing and modifying cues utilizing advanced console features. These instructions build on the basic store and playback instructions provided in the [“Basic Cues” chapter on page 107](#).

- **Special Cue Attributes**
- **Advanced Cue Storing and Modifying**
- **Cue Windows**

*(This page intentionally blank.)*

# Special Cue Attributes

---

## Overview

In addition to parameter data, cues can contain the following special attributes:

- **Link**
- **Loop**
- **Auto Follow (AF) Type (Wait or Trail)**
- **Auto Follow (AF) Time**
- **Out Time**

---

**Note:** These special attributes can also be applied to board cues as required.

---

Guidelines:

- When a cue is stored, these cue attributes may be entered in any order.
- If a cue is defined as an effect cue, then crossfade instructions may *not* be included in the cue contents.
- The cue does not need to be active to change its data.
- These special attributes can also be applied to cue ranges.
- In all cases, these attributes may be defined using the command-line keypad or Cue/Board Cue Sheet window.

---

**Note:** With these commands, the command-line keypad defaults to the cue mode, making use of the <Cue> button optional.

---

## Link



Link instructions can be stored with a cue. Link instructions allow cues to be run out of sequence by causing a different cue number to be loaded into the submaster's pending file when the cue that carries the link instruction is activated. In addition, link instructions may also be provided to snapshots, macros, and effects. (In the case of a linked effect, special conditions apply. See 'To Effects' below.)

If a wait or trail time is included with the cue data, automatic activation of the linked cue, snapshot, macro, or effect will occur when the wait or trail time has elapsed.

### Store a cue with a link to another cue:

- [Store] <Cue> [n] [Link] <Cue> [x] [Enter] - upon playback of Cue n, the "linked" cue (x) would be loaded into the same submaster for manual activation.

### Link an existing cue to another cue:

- <Cue> [n] [Link] [x] [Enter] - links Cue n to Cue x.

### Remove a link from a cue:

- <Cue> [n] [Link] [Enter] - removes the link instruction from Cue n.

### Link a cue to a snapshot:

- <Cue> [n] [Link] [Snap Shot] [x] [Enter] - links Snapshot x to Cue n.

### Link a cue to a macro:

- <Cue> [n] [Link] [Macro] [x] [Enter] - links Macro x to Cue n.

### Shortcuts

To link another cue to the currently selected cue, press [Link] [n] [Enter] - where n is the linked cue.

To link a snapshot, macro, or effect to the currently selected cue, press [Link] [Macro\*] [n] [Enter] - where n is the number of the macro you wish to link.

\* [Snap Shot] or [Effect] can be used instead of [Macro].

## To Effects

A cue can either have data or recall an effect, but not both. When an effect is linked to a cue, the effect will be recalled when that cue number is played.

### Link an effect to a cue:

- <Cue> [n] [Link] [Effect] [x] [Enter] - links Effect x to Cue n.

---

## Loop

Loop

Loop instructions are used in combination with link instructions to replay a sequence multiple times.

When a cue with a link and loop instruction is played back, the linked cue will automatically be played back on the same submaster and then the original cue would be reloaded and the sequence would repeat as defined by the loop number. After the defined number of loops, the submaster will automatically load the next sequential cue into the submaster's pending file, activating the next cue based on autofollow for loop or sequential cue.

**Tip** ➞ Loops should be defined on the last cue of a sequence.

### **Store a cue with link and loop instructions:**

- [Store] <Cue> [n] [Link] [m] [Loop] [x] [Enter] - links Cue n and Cue m with a loop of x times.

### **Add a loop to an existing linked cue:**

- <Cue> [n] [Loop] [x] [Enter] - Cue n and its linked cue will loop x times.

### **Remove a loop instruction from a linked cue:**

- <Cue> [n] [Loop] [Enter].

**Shortcut** ➞ To add a Loop instruction to the currently selected cue, press [Loop] [n] [Enter] - where n is the number of desired loops.

---

## Wait/Trail Time



Wait or Trail time instructions may be stored into a cue to control the start of subsequent or linked events (refer to [“Link” on page 194](#)).

Wait is a timing attribute which causes the next event to be automatically executed after the wait time has elapsed. The wait time begins counting from the moment the cue is executed.



Trail is a timing attribute which causes the next event to be automatically executed after the trail time has elapsed. The trail time begins counting from the moment the cue has completed.

Guidelines:

- A cue can have either a Wait or a Trail instruction, but not both.
- If no linked event is specified (via a Link instruction), then the subsequent cue in the cue list will execute after the wait/trail time has elapsed.
- If a linked event is specified, the linked event will execute after the wait/trail time has elapsed.

---

**Note:** In the following examples, Trail could be used instead of Wait.

---

### Store a cue with a wait/trail time:

- [Store] <Cue> [n] [Wait] [m] [Enter] - stores Cue n with a wait time of m.

### Store a cue with a link and a wait/trail time:

- [Store] <Cue> [n] [Link] [x] [Wait] [m] [Enter] - stores Cue n and provides an out of sequence link to Cue x with a wait time of m.

### Add a wait/trail time to an existing cue:

- <Cue> [n] [Wait] [x] [Enter] - adds a wait time of x for Cue n.

### Add a wait/trail time to a range of cues:

- <Cue> [m] [Thru] [t] [Wait] [x] [Enter] - adds the specified wait time (x) to all of the cues in the specified cue range (m thru t).

### Remove a wait/trail time from a cue:

- <Cue> [n] [Wait] [Enter] - removes the wait time from the specified Cue n.

### Remove a wait/trail time and link from a cue:

- <Cue> [n] [Link] [Wait] [Enter] - removes both the wait and link instruction for the specified Cue n.

**Remove a wait/trail time from a range of cues:**

- <Cue> [n] [thru] [t] [Wait] [Enter] - removes the wait or trail time from the specified cue range (n thru t).



**Shortcut** To add a wait/trail time to the currently selected cue, press [Wait] [n] [Enter] - where n is the desired time.  
\* or [Trail].

## Out Time



Out Time instructions may be stored into a cue. An Out Time will provide a “fade to no intensity level” instruction to any luminaires that are “going *inactive*” in a cue. Out Time also provides the time value that luminaires are to fade to *inactive* in the event the submaster is deselected.

The console has a setting for a default Out Time, which is stored into all new cues where a different time is not specified. The default setting is 3 seconds, but can be changed universally in the Settings window. Refer to [“Settings Window” on page 245](#) to change the default Out Time.

**Store a cue with an out time:**

- [Store] <Cue> [n] [Out Time] [x] [Enter] - stores Cue n with an out time of x.

**Add an out time to a range of cues:**

- <Cue> [m] [Thru] [n] [Out Time] [x] [Enter] - adds an out time of x to the range of cues m through n.

**Reset a cue’s out time back to zero:**

- <Cue> [n] [Out Time] [Enter].



**Shortcut** To add an out time to the currently selected cue, press [Out Time] [n] [Enter] - where n is the desired out time.

# Advanced Cue Storing and Modifying

---

## How Faders Affect Intensity

Previously, intensity states were discussed in relation to cue store operations (refer to [“Intensity States” on page 110](#)). In addition to these four intensity states, the Grand Master fader, Black Out feature, and submasters faders can affect store and playback intensity levels. When used in combination with the manual control intensity encoder, the Grand Master fader and any selected submaster faders all play a part in the final intensity output level by a proportional calculation.

### Grand Master/Black Out

A small square icon with a black border and the text "Black Out" in white, representing the Black Out button on the console.

The console provides two methods for mastering overall intensity output: the Grand Master fader and its associated [Black Out] button. The Grand Master fader can be used to proportionally master the intensity output. The [Black Out] button, when engaged, sets all intensities to zero.

If a cue/preset is stored with the Grand Master fader at zero, or the [Black Out] button engaged, the luminaires would be considered *zero*. If a cue/preset is stored with the Grand Master fader set between 0 and 100 percent, then the intensity value stored with the cue/preset would be proportionally affected as noted in the following examples.

Cue Store Scenario 1 (with all submasters deselected):

- Selected channels have an intensity value of 100%.
- Grand Master fader is set at 50%.
- Channels are stored into the cue with intensity values of 50%.

Cue Store Scenario 2 (with all submasters deselected):

- Selected channels have an intensity value of 50%.
- Grand Master fader is set at 50%.
- Channels are stored into the cue with intensity values of 25%.

---

**Note:** These two simplified examples are intended to help show the relationship of intensity controls. Many more combinations are possible.

---

## Submaster Faders

Submaster faders can affect the intensity output of selected luminaires prior to the Grand Master contribution, provided the submaster is currently selected. Calculation of the final intensity output when including submaster faders becomes more complex.

A way to visualize the impact of encoder/fader settings on intensity is to open the Luminaire Status window and view the resulting level changes as you move each fader. (As with the two examples given on the previous page, these instructions are intended to help show the relationship of intensity controls since it would be impossible to provide examples for all possible combinations.)

Step 1. At Operation menu, select Luminaire Status.

Step 2. Select luminaires.

Step 3. Using Intensity encoder or [Full] button, bring intensity levels to 100%.

Step 4. Select a submaster by pressing its [Select] button.

Step 5. Move Intensity encoder, submaster fader, and Grand Master fader in various combinations and view the intensity level changes in Luminaire Status window's Intensity column.



This will give you an idea of how these faders and encoders work together to calculate a final intensity level for the selected luminaires. This is important because cues/presets can be stored with intensity values.

## Command-Line Shortcuts

The command-line feature has several built-in shortcut and convenience capabilities which can be used to speed up and simplify operations.

Shortcut 

Some shortcuts have been indicated so far throughout the manual with the graphic shown to the left of this text. These shortcuts, along with additional ones, are collected here.

### Using [+] with [Store]




The [+] button can be used to increment the store target by a predetermined increment value (default = +1).

#### Using [+] with a +1 increment value:

- Pressing [Store] [1] [Enter] will store Cue 1. Pressing [Store] [+] [Enter] will store Cue 2. Pressing [Store] [+] [Enter] will store Cue 3, etc.

#### Using [+] with a +0.1 increment value:

- Pressing [Store] [1] [Enter] will store Cue 1. Pressing [Store] [+] [.1] [Enter] will store Cue 1.1. Pressing [Store] [+] [Enter] will store Cue 2.2, etc.

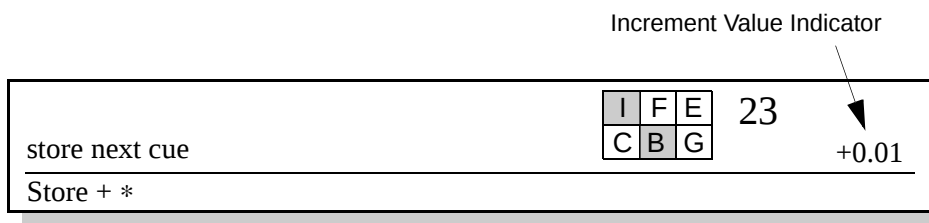

**Note:** The increment value is also displayed in the Encoders window. Refer to [“Encoders Window” on page 56](#).

### [Store] [Store]

This command-line entry can be substituted for the standard cue store entry.

- Press [n] [Store] [Store] to store Cue n.

### Submaster Load


A cue specified at the keypad can be immediately loaded and played back in an empty submaster.

Step 1. At keypad press [cue number]. (Must be valid cue number.)

Step 2. At empty submaster press [Load] and then [Go].

## Cue Store Target

Pressing [Store] [Enter] always defaults the store command to the last selected cue. (This cue is displayed in the command-line display.)

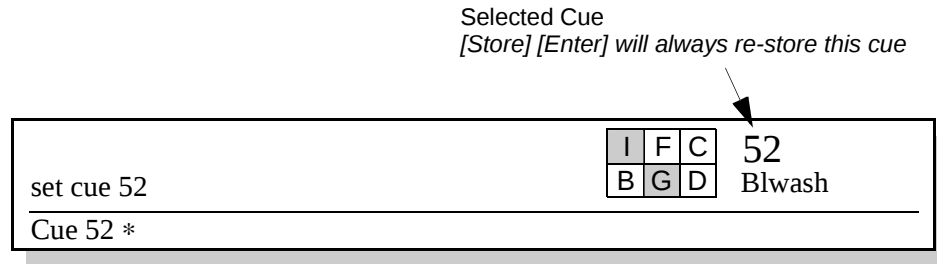

Additionally, when working with decimal cues, it is not necessary to re-enter the leading cue number.

For example:

- [Store] <Cue> [5] [Enter] = store Cue 5
- [Store] <Cue> [5] [.] [3] [Enter] = store Cue 5.3
- [Store] <Cue> [.] [7] [Enter] = store Cue 5.7

## Cue Attribute Target

For the currently selected cue (see illustration above), attribute instructions can be applied without re-specifying the cue target. For example:

- To link another cue to the currently selected cue, press [Link] [n] [Enter] - where n is the linked cue.
- To link a snapshot, macro, or effect to the currently selected cue, press [Link] [Macro\*] [n] [Enter] - where n is the number of the macro you wish to link.  
\* [Snap Shot] or [Effect] can be used instead of [Macro].
- To add a wait/trail time, out time, or loop to the currently selected cue, press [Wait] [n] [Enter] - where n is desired time or number of loops.  
\* also [Trail], [Out Time], or [Loop].

## Miscellaneous Shortcuts

- Holding down [Clear] will clear an entire unterminated command line.
- Pressing [Next] / [Last] together will reselect the original channel range or group.

## Creating Cue Numbers without Storing Data

It is possible to create and label cues without storing data. To do this is, store a cue while all luminaires are *inactive* or off-line.

## Locating Stored Cues

In order to verify if a certain cue number exists or to locate nearest stored cue numbers, a shortcut can be used.

### **Locate cue number:**

At keypad, press [Cue] [n] [Enter] for cue number you wish to verify. One of two things will happen:

- If the cue exists, its number and label will be displayed in the command-line display.
- If a cue by that number does not exist, "no cue" will be displayed. At command-line display, press [ $\nabla$ ] to move forward or press [ $\triangle$ ] to move backward. The next higher or lower cue numbers (nearest the cue number you entered) will appear in the display.

|            |       |        |
|------------|-------|--------|
| set cue 52 | I F C | no cue |
| Cue 52 *   | B G D |        |

---

## Update



The Update feature is used to store modified channels back into their source cues. When Update is used, any channels that had another cue as their source, and were modified, would not be added to the target cue.



**Tip** Update is most useful when you know the exact range of cues to be modified.

Guidelines:

- Any rate modifications will affect the stored time values accordingly.
- Unexpected behavior can occur with updates involving intensity if the submaster and Grand Master faders are not at full. Refer to [“Store, Update, and Selective Store with Submasters” on page 207](#).
- Update is intended for active cues only. To add sections of the live stage output to inactive cues, use the Selective Store command (refer to [“Selective Store” on page 204](#)).
- Any channel transferred to an independent submaster or parked in patch will not be updated. All other cue data remains as originally set.

---

**Note:** Unlike Selective Store, Update commands are not routed through the Channel Select panel and the filter settings.

---

### Update a cue:

- [Update] <Cue> [n] [Enter] - updates Cue n with only those channels that were receiving their instructions from that cue.

### Update multiple cues:

- [Update] [Enter] - updates all modified channels in their source cues. Any channels that had no source cue would not be stored.

### Update a preset:

- [Update] [Preset] [Enter] - updates all modified channels in their source cues and preset(s). Any channels that had no source cue would not be stored.

### Update a preset in a specific cue:

- [Update] [Cue] [n] [Preset] [Enter] - updates Cue n and its preset(s) with only those channels that were receiving their instructions from that cue.

### Undo (reverse) an Update command:

- [Undo] [Enter] - reverses the last store/update/delete command.

---

## Selective Store



The Selective Store feature is used to modify or add parameter data to a cue, preset, or beam state for specified channels (*active* or *inactive*). For example, with this function you could modify a cue's color parameters, while leaving all other parameter data intact for a particular cue or a range of cues.



**Tip** Selective Store is most useful when you know the exact range of cues to be modified.

---

**Note:** Unlike Update, Selective Store commands are routed through the Channel Select panel and the filter settings.

---

### Selective Store new data for a particular parameter in a cue:

- Step 1. Select required channels.
- Step 2. At touch screen, modify a parameter(s) as required. For example, color.
- Step 3. Press [Sel Store] <Cue> [n] [Enter]. The new color parameters will be stored in place of the old color parameters, but all other parameter data will remain the same.

### Selective Store new data for a particular parameter in a range of cues:

- Step 1. Select required channels.
- Step 2. At touch screen, modify a parameter(s) as required. For example, color.
- Step 3. Press [Sel Store] <Cue> [n] [Thru] [m] [Enter]. The new color parameters will be stored in place of the old color parameters, but all other parameter data will remain the same.

---

**Note:** As a caution when altering parameters for more than ten cues, a confirmation window will open.

---

### Selective Store all selected channels into a cue:

- Step 1. Select required channels.
- Step 2. Using manual control, set parameters as required.
- Step 3. At touch screen, set filters as required.
- Step 4. Press [Sel Store] <Cue> [n] [Enter]. All selected channels are re-stored into the specified cue at current stage levels. Only those parameters allowed by the filter settings are affected.

### Modify a preset using Selective Store:

- Step 1. At touch screen display, modify filter settings as required.
- Step 2. Select required channels.
- Step 3. Press [Sel Store] / [Preset Select Button] or [Sel Store] [Preset] [n] [Enter]  
(where n is the discrete Preset number).

### Undo (reverse) a Selective Store command:

- [Undo] [Enter] - reverses the last store/update/delete command.

---

## Selective Recall



The Selective Recall feature is used to recall specific parameter data from specified channels (*active* or *inactive*) in a cue, preset, or beam state.

Guidelines:

- Selective Recall routes through the filter settings.
- If Timing is selected at the touch screen filter, then the parameter *and* its timing information will be recalled (making that the current state).
- If Timing is *not* selected at the touch screen filter, then only the parameter will be recalled.
- If Manual Timing is enabled (refer to “[Manual Timing](#)” on page 162), then the current time information in the luminaires will be recalled. (For example, if focus has a time of 10 seconds and color has a time of 5 seconds, then the luminaire will recall the parameters using those individual times.)

---

**Note:** The system assumes that data to be recalled is from a cue. As such, use of the <Cue> button is optional.

---

### Recall stored cue data:

- Step 1. At touch screen display, select Filter mode. Select parameters to be recalled.
- Step 2. If timing is desired, press [Man Time].
- Step 3. Select channel(s) as required.
- Step 4. Press [Recall] <Cue> [m] [Enter]. All stored data will be recalled from the specified cue (m) for the selected luminaires, as dictated by the selections on the filters.

### Recall stored preset data:

- Step 1. At touch screen display, select Filter mode. Using touch screen, select parameters to be recalled.
- Step 2. If timing is desired, press [Man Time].
- Step 3. Select channel(s) as required.
- Step 4. Press [Recall] [Preset] [x] [Enter] or [Recall] [Preset Select Button]. All stored data will be recalled from the specified preset (x), as defined by the selections on the filters.

---

## Undo a Delete Command



In addition to reversing Store and Update commands, the Undo feature can be used to reverse a Delete command.

### Undo (reverse) a Delete command:

- [Undo] [Enter] - reverses the last store/update/delete command.

|                    |                                                                                                                                                                                                                                                                                                                                           |   |   |   |   |   |   |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|---|---|---|---|---|
| latest str/upd/del | <table border="1" style="display: inline-table; border-collapse: collapse;"> <tr> <td style="padding: 2px 5px;">I</td> <td style="padding: 2px 5px;">F</td> <td style="padding: 2px 5px;">E</td> </tr> <tr> <td style="padding: 2px 5px;">C</td> <td style="padding: 2px 5px;">B</td> <td style="padding: 2px 5px;">G</td> </tr> </table> | I | F | E | C | B | G |
| I                  | F                                                                                                                                                                                                                                                                                                                                         | E |   |   |   |   |   |
| C                  | B                                                                                                                                                                                                                                                                                                                                         | G |   |   |   |   |   |
| Undo *             |                                                                                                                                                                                                                                                                                                                                           |   |   |   |   |   |   |

---

## Modifying Cues in a Submaster

Cues can also be modified and re-stored while active in a submaster. The Store, Selective Store, and Update commands can be performed by using them in combination with the submaster's [Choose] button.

### Guidelines:

- When modifying a cue in a submaster, the modified cue data is automatically loaded into the associated submaster. (Because the loaded cue is subject to altering by the fader setting, unexpected behavior can occur when that fader setting is less than full. See [“Unexpected Behavior”](#) below.)
- Only channels receiving instructions from the cue being modified will be changed.

## Store, Update, and Selective Store with Submasters

After a cue has been loaded and played back in submaster, its channels can be modified and re-stored using standard cue store commands.

For more information, refer to [“Update” on page 203](#) and [“Selective Store” on page 204](#).

### Modify a cue in a submaster:

- Step 1. Run cue in submaster.
- Step 2. Using manual control, modify parameters as required.
- Step 3. Press [Update]\* / [Choose].
  - \* [Store] or [Sel Store] can be used instead of [Update].


## Unexpected Behavior



When a cue is re-stored while active in a submaster, unexpected behavior can occur if any selected submaster's fader is set below full. This happens as a result of two factors. First, when the intensity is stored at a lower level as a result of a fader, then the updated cue is automatically loaded back into the submaster, it will immediately be affected (for the second time) by the fader setting causing a further reduction in intensity output. Second, if more than one submaster is selected, the Highest Takes Precedence (HTP) protocol must be considered. If a cue, active in the first submaster, is updated to an intensity level below that of the second submaster, then after the cue is automatically reloaded to the submaster, it will be overridden by the higher value of the second submaster (which now controls the intensity output as a result).

## Submaster Direct Mode

To assist in updating or re-storing cues, it is possible to have the command-line display track the sequence of cues being executed in a submaster.

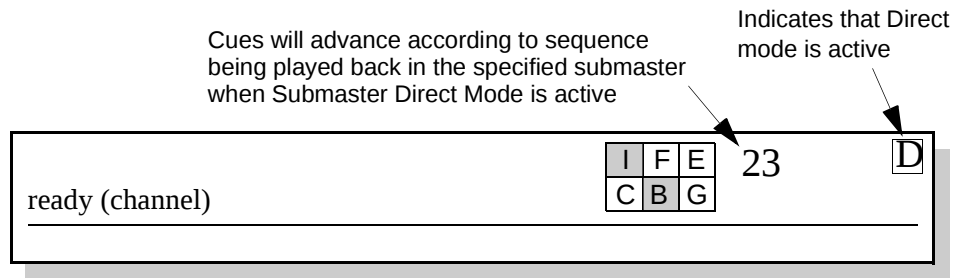

There are two methods of initiating this mode:

- At keypad, press [Cue] along with [Choose] button at required submaster.
- Press [Cue] [Sub] [n] - where n is the desired submaster number.



Once the mode has been activated, a “D” indicator will appear in the command-line display and any advances in the cue sequence at the submaster will automatically advance the current cue. If you wish to make changes to any cue, then that cue number is already in the display when you go to store the cue again (after making changes).

To exit the mode:

- Press the forward or backward advance buttons at the command-line display.


# Cue Windows

## Cue Sheet

Cue sheet data can be viewed and edited in the Cue Sheet window. The cue sheet displays all recorded cues in numerical sequence and provides data regarding linked events which would run during playback. Link attributes such as loops, auto follow types (wait and trail), and out times are visible. Unless links are provided, which will run cues out of sequence, any playback sequences will observe the numerical order found in the cue sheet.

### Access Cue Sheet:

- Step 1. At Operation menu, select Cue Sheet. Cue Sheet window will open.
- Step 2. Enter or edit data as required.

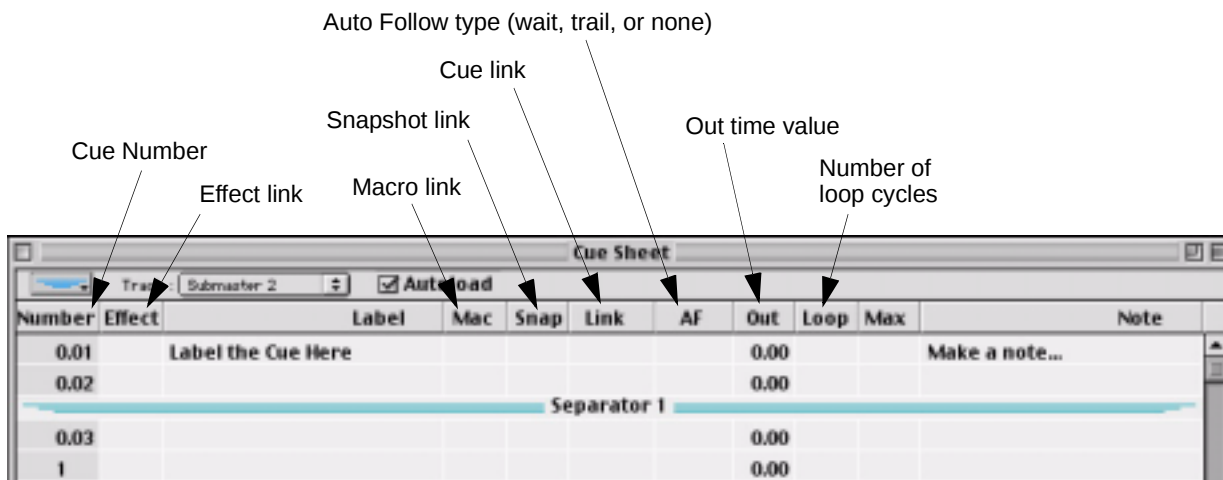


## Forward/Backward Buttons

It is possible to move forward or backward through the cue list in the command-line display by pressing the advance buttons.

- At command-line display, press [ $\nabla$ ] to move forward. Press [ $\triangle$ ] to move backward. Cue numbers shown in command-line display will respond accordingly.

## Separators

Separators can be inserted into the Cue Sheet list in order to organize certain groups of cues as necessary. The separators can then be used as markers to quickly access the first cue of each group.

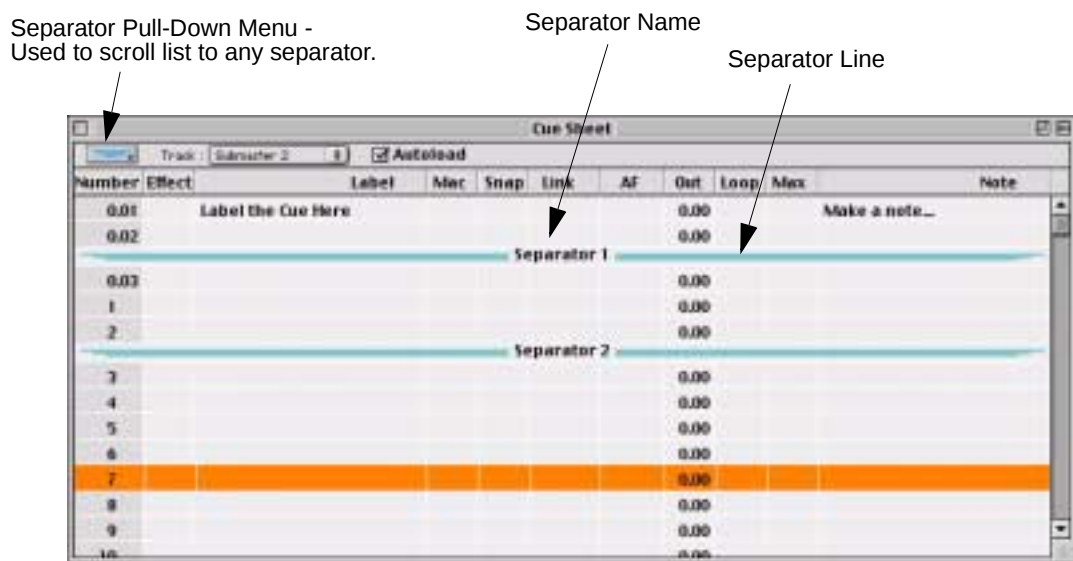


### Insert a separator:

- Step 1. At Cue Sheet, use cursor to select cue above where you wish to insert separator.
- Step 2. At Cue Sheet menu (available when Cue Sheet window is open), select New Separator. A separator will be inserted.
- Step 3. Using pull-out keyboard, type name of separator.
- Step 4. Press [Enter].



### Go to specified separator:

- At Cue Sheet window, select separator by name from pull-down menu. Cue Sheet will scroll to beginning of separator line.
- or -
- At Cue Sheet menu, select separator by name. Cue sheet will scroll to beginning of separator line.

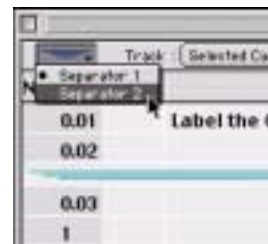

## Renumbering Cues

The cue number field is editable.

---

**Note:** The Move function also effectively renumbers cues. (Refer to [“Copy/Move” on page 165](#)).

---

## Submasters Track Mode


The submaster Track mode, specifies which submaster the cue sheet will follow. The window selection will reflect the active cue in the submaster selected at the Track pull-down menu. When cues are loaded or advanced in that submaster, the Cue Sheet window will reflect the changes.

## Submasters Autoload

When the Autoload box is checked in the Cue Sheet window, any selected cue will automatically load and play in the submaster specified in the Track pull-down menu.

Track Pull-Down Menu - Specifies a submaster for window tracking.

Autoload Checkbox - Selected cues will automatically load and play when box is checked.

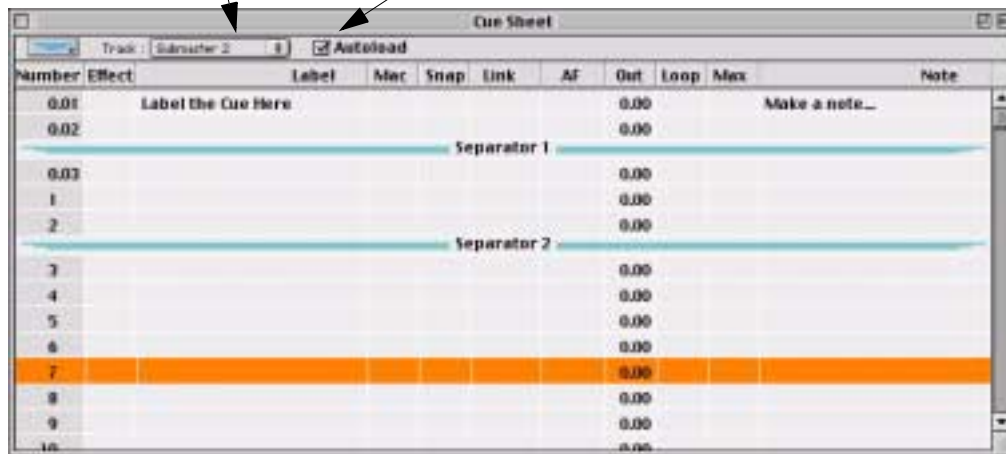

## Submaster Stop/Step

A running cue can be stopped using the [Stop/Step] button.

Step 1. Press [Stop/Step] to stop a running autofollow.

Step 2. Press [Run] to resume playback with autofollows.

## Cue Data

Cue parameter data can be viewed and edited in the Cue Data window. This window displays each stored cue one at a time with its parameter values in a user definable format.



**Note:** Cue data can only be edited if Patch editing is disabled.

### View/Edit Cue Data:

- Step 1. At Data menu, select Cue Data. Cue Data window will open.
- Step 2. Once window is open, Enable Cue Editing menu option will be available (as long as patch editing is disabled). If you wish to edit data, select this option. (Menu will now read 'Disable Cue Editing'.)
- Step 3. Edit data according to guidelines in [“Cue Editing” on page 213](#).
- Step 4. Click Save Cue to save changes or click Revert to abort.
- Step 5. To protect window from editing, select Disable Cue Editing.



Timing - Displays parameter timing information

Value - Displays value that luminaire is reporting for the parameters

Parameter Source - Palette reference reported by luminaire (last one recalled for that parameter)

Saves editing changes (only available when editing is Enabled)

Dynamic - Displays dynamic state data

Saves editing changes (only available when editing is Enabled)

Reverts to last saved values (only available when editing is Enabled)

Opens Parameter Columns window\* which is used to choose which columns appear in Cue window.

Cue for which data is being displayed

Specifies that window will reflect cue selections made at keypad when checked

Scrolls through cue list (only available when editing is Enabled)

| Chan | Inten | Focus  | Pan | Tilt | Beam | Edge |
|------|-------|--------|-----|------|------|------|
| 1    | 100   | ---    | 512 | 200  | 127  | 43   |
| 2    | 100   | ---    | 512 | 200  | 127  | 42   |
| 3    | 100   | ---    | 512 | 200  | 127  | 43   |
| 4    | 100   | move 2 | --- | ---  | 127  | 0    |
| 31   | 100   | ---    | 512 | 354  | 127  | 193  |
| 32   | 100   | ---    | 512 | 354  | 127  | 193  |
| 33   | 100   | ---    | 512 | 354  | 127  | 187  |
| 34   | 100   | ---    | 512 | 354  | 127  | 193  |

\* Refer to [“Parameter Columns Window” on page 61](#).

## Cue Editing

Cue data can be edited in the Cue Data window when editing is Enabled. Remember to click **Save Cue** to save changes (or click **Revert** to abort changes and reload last saved version of cue).

### Editing specific lines:

- When editing a specific line of a cell, standard Macintosh text copy and paste rules will apply.

### Selection:

- To select a cell, click on it.
- To extend or shrink the current cell selection(s) in a rectangular fashion, hold down  and click on another cell.
- To add or remove a specific cell, hold down  and click on that cell.

### Copying:

- Any selection may be copied to the clipboard. All lines of every selected cell are placed on the clipboard. (Value, Parameter Source, Timing, Dynamic). This includes lines that you may have hidden by using the Parameter Columns window.

### Pasting (General):

- When data is pasted into a cell, all contents of the destination cell are completely replaced with the contents of the cell on the clipboard. The exception would be if data for a line is out of range, in which case it is ignored. However, only those particular lines that are out of range are ignored. The rest of the cell pastes normally.
- Any parameter may be pasted over any other parameter. Range checking will be performed to prevent data corruption.
- In general, it is not possible to edit, copy, or paste any parameter column that is not in the table. The exception is the Focus and Color columns. Pasting into one of these columns is equivalent to pasting the same cell into ALL of its component columns. This will occur whether or not the component columns have been selected in the Parameter Columns window.

### Pasting (One-To-Many)

- If only one cell is resident on the clipboard, the contents of that one cell will be pasted into all selected cells.

**Pasting (Many-To-Many)**

- If more than one cell is resident on the clipboard, the following method is used.:

Data is pasted in Row by Row. There is a 1:1 mapping of rows in the clipboard to rows in the selection. If there are more rows in the selection than there are in the clipboard, nothing will be pasted into these rows. If there are fewer rows in the selection than on the clipboard, the remaining rows in the clipboard will be ignored.

---

**Note:** This same logic is applied to extra cells in the clipboard or selection for each row.

---

# CHAPTER 12.

---

## Advanced Effects Features

This chapter contains instructions for storing and modifying effects utilizing advanced console features. These instructions build on the basic store and playback instructions provided in the [“Basic Effects” chapter on page 115](#).

- **Advanced Attributes**
- **Effect Timing**
- **Advanced Playback**

*(This page intentionally blank.)*

## Advanced Attributes

### Changing Direction, Mode, or Start Settings

Direction, Mode, and Start attributes can be defined using the Effects controls and/or associated effects windows. These attributes are always stored into an effect during a store operation and unless changed by the user, the default settings will be stored initially. (Refer to [“Basic Effects” chapter on page 115](#) for descriptions of these attributes.)


When an effect is selected, the corresponding attribute buttons will light. These can be defined at the time of effects creation or changed at a later time.

#### Using Effects panel:

- Step 1. At Effects Control, press [Effects].
- Step 2. At Effects select display, press [Effect Select Button] of effect you wish to modify.
- Step 3. Press buttons for new Direction, Mode, and Start settings.
- Step 4. Press [Store] / [Effect Select Button] to store changes.

#### Using Effects window:

- Step 1. At Data menu, select Effects. Effects window will open.
- Step 2. Use pop-up menus to define new Direction, Mode, and Start settings for each effect.

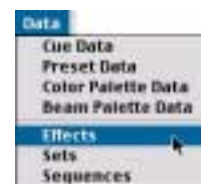

| Effects                                                   |             |     |     |           |      |            |         |      |      |      |      |        |
|-----------------------------------------------------------|-------------|-----|-----|-----------|------|------------|---------|------|------|------|------|--------|
| <input checked="" type="checkbox"/> Assign To Submaster 7 |             |     |     |           |      |            |         |      |      |      |      |        |
| #                                                         | Label       | Set | Seq | Dir       | Mode | Cycle      | Start   | Rand | In   | Out  | Time | Cycles |
| 1                                                         | Color Chase | 0   | 1   | Forward   | Run  | Continuous | Cascade |      |      |      |      |        |
| 2                                                         | Figure 8    | 1   | 3   | Forward   | Run  | Continuous | Simul   |      | 1.00 |      |      | 2      |
| 3                                                         | VL6 Move    | 5   | 6   | Oscillate | Run  | Break      | Cascade | 4.00 |      | 0.25 |      |        |
| 4                                                         |             | 0   |     | Forward   | Run  | Continuous | Cascade |      |      |      |      |        |
| 5                                                         |             |     |     |           |      |            |         |      |      |      |      |        |
| 6                                                         |             |     |     |           |      |            |         |      |      |      |      |        |
| 7                                                         |             |     |     |           |      |            |         |      |      |      |      |        |
| 8                                                         |             |     |     |           |      |            |         |      |      |      |      |        |
| 9                                                         |             |     |     |           |      |            |         |      |      |      |      |        |
| 10                                                        |             |     |     |           |      |            |         |      |      |      |      |        |

Defines Set

Defines Sequence

Direction, Mode, Cycle, and Start attributes

Effects level timing attributes  
(refer to next section)


# Effect Timing

## Overview

Timing values can be applied to the overall effect or to a single step of an effect to create such actions as fade in, fade out, attack, sustain, and decay.

Timing values are displayed in the encoder window and can be adjusted using the encoders. Timing can also be assigned and modified using the command-line keypad and associated windows.


**Note:** When creating a new step, it will default to the same timing values as the previous step.

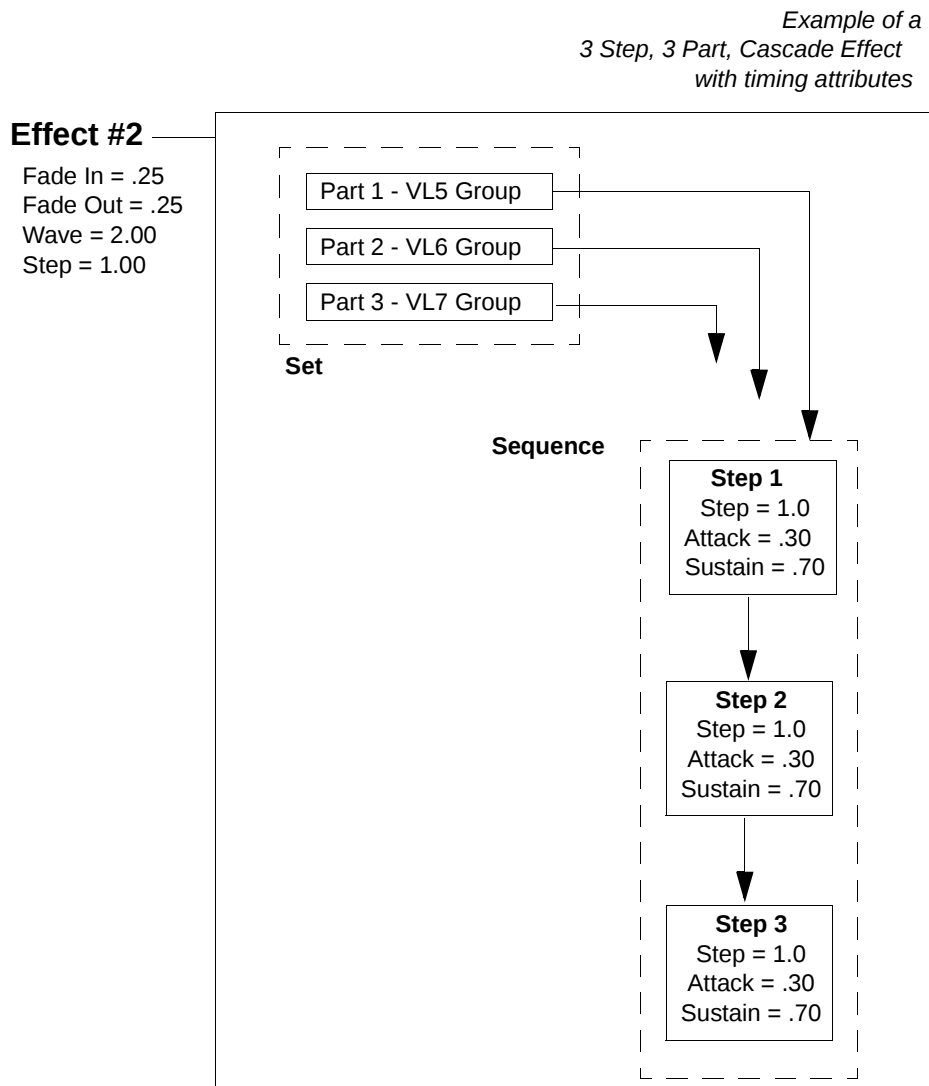

## Effect Level Timing


Timing attributes are available on an effect level to control the overall step times, fade in, fade out, and wave time for each effect.

- **Step Time** - the time between activation of a sequence step and the next sequential step. On an effects level, Step Time can be used in two ways: either to set all sequence steps to the same timing value or to scale the timing values of sequence steps (when sequence steps have different timing values already stored). Step times can also be set individually from the Sequence Editing mode (refer to [“Sequence Level Timing” on page 221](#)).

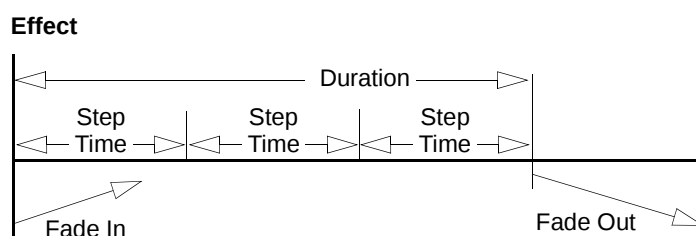

- **Fade In Time** (0 - 59.59) - allows channels to begin the effect sequence while fading to the full intensity value required by the effect steps. (If there is no fade in time, the effect bumps in.)
- **Fade Out Time** (0 - 59.59) - allows channels to fade out after exiting the effect. This timing value is only assumed by channels that are going inactive in the incoming cue, or when the cycle or duration time has expired. Any channels involved in the incoming cue would immediately cease activation in the effect and fade to their new cue levels in the time provided by the incoming cue. If there is no Fade Out Time, all channels will immediately stop the effect pattern and fade to their new instructions in the time dictated by the incoming cue. If they are not involved in the incoming cue, they will fade to inactive in the out time of the incoming cue.
- **Wave Time** - the time it will take an effect to loop back to the beginning. (A wave time can be specified using the Effects window. Only applies to Break or Cycle modes.)

**Note:** A wave time can only be greater than the total sequence time (i.e., the wave time will never cut a sequence short, only add a gap before the sequence starts again).

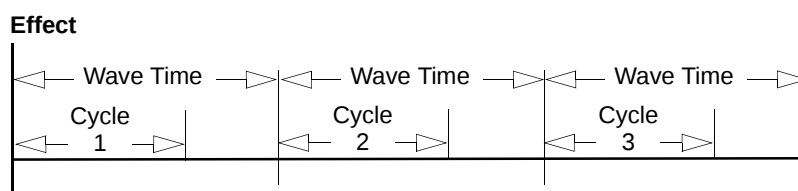

## Assigning Effects Level Timing


Timing can be assigned and modified using the encoders, command-line keypad or the Effects window.

### From Select Displays

#### Assign timing:



- Step 1. At Effects Control, press [Effects].
- Step 2. At Effects select display, press [Effect Select Button] of effect you wish to modify.
- Step 3. Using encoders, set times as required. (To set all step times to same value, turn encoder to 0.00 and then up to required value.)
- Step 4. Press [Store] / [Effect Select Button] to store changes.

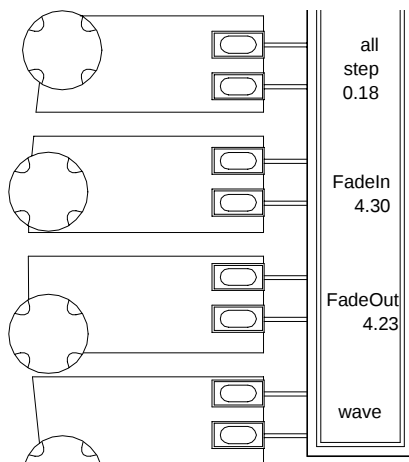

### From Effects Window:

#### Assign a Fade In, Fade Out, Duration, or Step time:

- Step 1. At Data menu, select Effects. Effects window will open.
- Step 2. Using keyboard, enter timing information in Time and Duration columns as required.



Random -  
Affects the step triggering order just as direction does (forward, reverse, oscillate), except it chooses steps at random instead of by specific order and also affects their timing.

How long it will take the effect to loop back to the beginning.

Fade In Time

Fade Out Time

Overall Effect Duration Time

How many times the set set will run through the sequence before stopping

| Effects                                          |              |     |     |         |      |       |       |      |      |      |      |        |
|--------------------------------------------------|--------------|-----|-----|---------|------|-------|-------|------|------|------|------|--------|
| <input type="checkbox"/> Autoload to Submaster # |              |     |     |         |      |       |       |      |      |      |      |        |
| #                                                | Label        | Set | Seq | Dir     | Mode | Cycle | Start | Wave | In   | Out  | Time | Cycles |
| 1                                                | Belly        | 41  | 21  | Forward | Run  | Break | Simul |      | 1.05 | 1.01 | 1.01 |        |
| 2                                                | Bluepop      | 41  | 22  | Forward | Run  | Break | Simul |      | 0.44 | 0.83 | 0.44 |        |
| 3                                                |              |     |     |         |      |       |       |      |      |      |      |        |
| 4                                                | Ripple       | 21  | 16  | Forward | Run  | Break | Simul |      |      |      |      |        |
| 5                                                | randomspokes | 22  | 15  | Random  | Run  | Break | Simul |      |      |      |      |        |
| 6                                                | raysweep     | 27  | 11  | Forward | Run  | Break | Simul |      |      |      |      |        |

## Cycle Count

In lieu of a duration time, a total cycle count can be provided in the Cycles column of the window. This number will specify how many times the set runs through the sequence. After running the specified number of times, the effect will stop and await manual restarting or go to the next event.

---

## Sequence Level Timing


Timing attributes are available on a sequence level to control the step, attack, sustain, and decay for each step in the sequence.

---

**Note:** When cues are included in sequences, the cue times will override step attack times, unless timing is disabled by the filters.

---

- **Step Time** - the time between activation of a step and the next sequential step. This can also be controlled on a universal level in the effects timing attributes (refer to [“Effect Level Timing”](#) on page 219).
- **Attack Time** - transition time between current luminaire state and state dictated by the step action.
- **Sustain Time** - how long the channels will execute the action.
- **Decay Time** - transition time out of a step into a background state. This is used only in a situation where the effect is in Break Mode and the attack and sustain times are longer than the total step time.

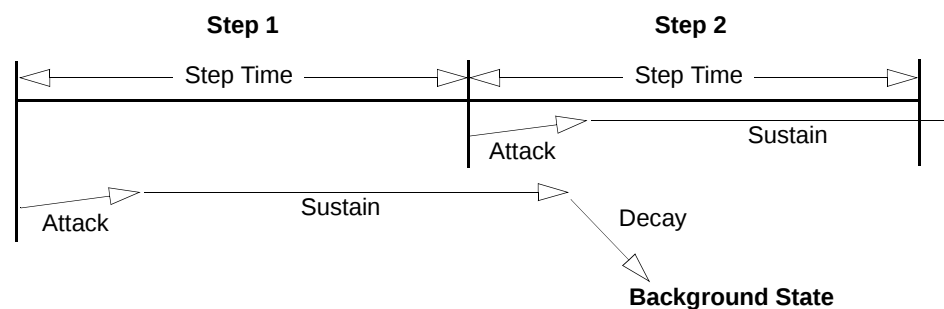

---

## Assigning Sequence Level Timing

### From Select Displays

#### Assign sequence level times:



- Step 1. At Effects panel, press [Effects].
- Step 2. At Effects select display, press [Effect Select Button] of effect you wish to modify.
- Step 3. At Sequence select display, press [Sequence Select Button] of sequence you wish to modify.
- Step 4. Using encoders, set timing values. To scale timing values for all steps in sequence, press [Shift] while adjusting encoder. To set all steps to same value, turn encoder to 0.00 and then up to desired value.

---

**Note:** Holding down the timing button and turning the encoder knob at the same time will change the time for all steps in the sequence.

---

### From Effects Window:

#### Assign Step, Attack, Sustain, and Decay times:

- Step 1. At Data menu, select Sequences. Sequences window will open.
- Step 2. Using cursor and keyboard, enter timing information as required.



## Advanced Playback

---

### Stop Flags

Steps can contain “stop flags” which will cause the effect to pause when that step is reached during playback. Once paused, the submaster will switch from the run mode to the stop/step mode. The effect will resume playback when [Run] is pressed again.

#### **Add stop flag to a step:**

- Step 1. At Effect Control, press [Seq].
  - Step 2. Press [Sequence Select Button] of sequence number you wish to modify.
  - Step 3. For step you wish to contain a stop flag, press and hold [Step Select Button] and then press [Stop/Flag]. (Stop will appear in display.)
- 

### Auto Load

The Effects select display can be placed in Auto Load mode for automatic submaster loading. Once in Auto Load mode, when an effect, set, or sequence is selected at the Effects select display, it will automatically load into the specified submaster.

#### **Turn on Auto Load:**

- Step 1. At Effects select display, press [Assign] along with submaster [Choose] to specify submaster for autoloading.
- Step 2. When you press an [Effect Select Button], effect will autoloading into submaster.

#### **Turn off Auto Load:**

- At Effects select display, press [Bank/Function] / [No A/L].

## Run/Stop Control

The Run and Stop modes are used to start, stop, and step through an effect when in AutoLoad mode (see above). These will override any submaster actions when an effect is assigned to a submaster. Pressing either button at the Effects panel will operate the effect by stopping, stepping, or running.

**Stop/Flag** - Stops or steps through an effect. When in a stopped state, pressing [Stop/Flag] will advance through the steps of an effect, one with each button press, in time. When an effect is active in a submaster and [Stop/Flag] is selected, the effect will not execute when the submaster [Go] button is pressed.

**Run** - Starts an effect. When an effect is active in a submaster and Run is selected, the effect will execute when the submaster [Go] button is pressed.

# CHAPTER 13.

---

## Submasters

This chapter contains instructions for operating the playback submasters.

- **Submaster Overview**
- **Submaster Modes**
- **Playback Intensity Level**
- **Playback**

*(This page intentionally blank.)*


# Submaster Overview

Refer to  
Fold-Out **G**

## Panel Submasters

The 30 available submasters are used for playback of events. These standard submasters are used for typical execution of cues (effect or crossfade types) or effects. One way to operate the submasters is by using the "hard" faders and displays at the console front panel. Submasters can be mapped ten at a time by selecting one of three banks: [1-10], [11-20], or [21-30] as required


The display associated with each panel submaster provides status information which includes pending and active cues, rate value, filter settings, a timing counter, and mode indicators.

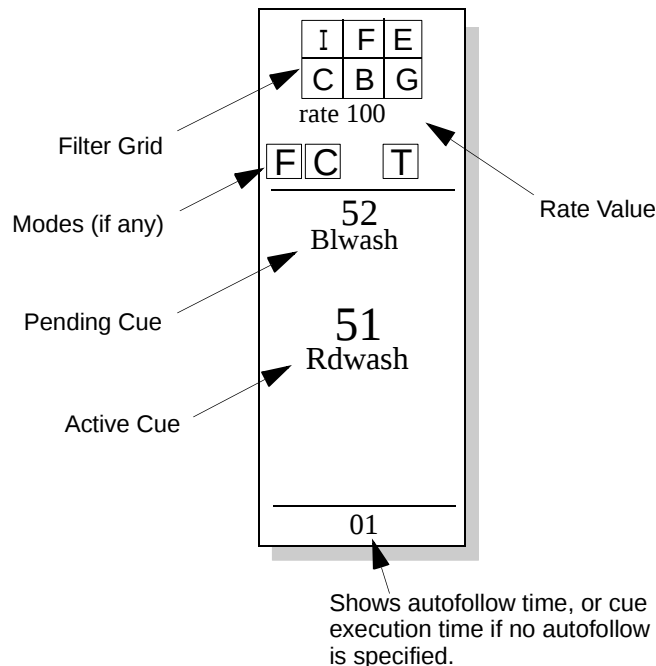


## Submasters Window

The Submasters window can be used to control playback of events just as the panel submasters. Bank buttons provide access to all 30 “soft” submasters in groups of five.

- At Panels menu, select Submasters to access window.

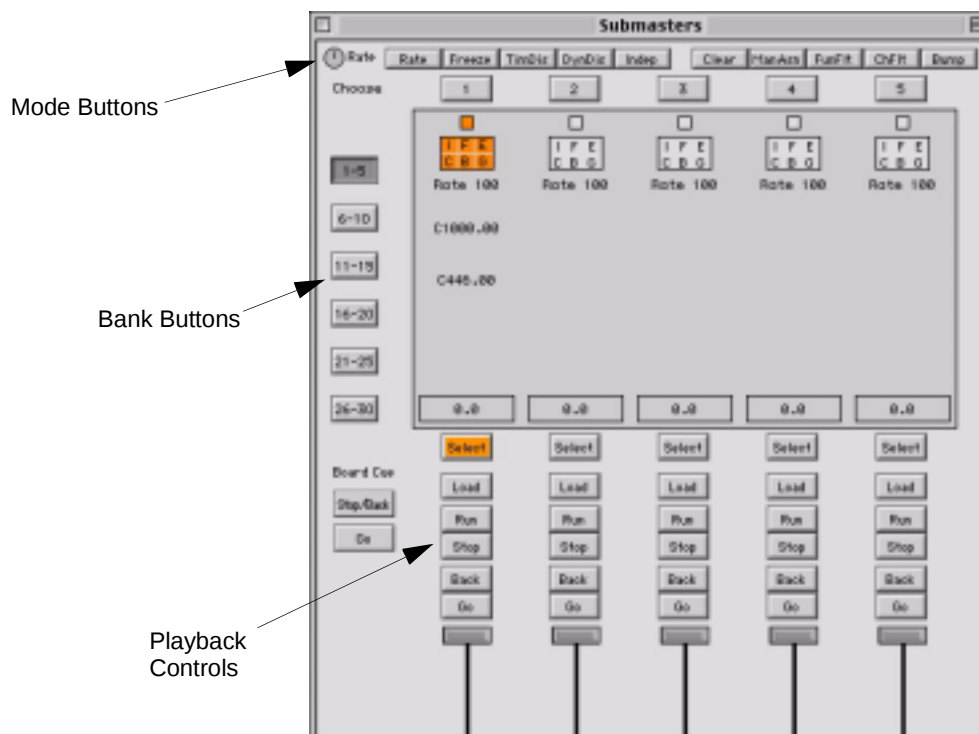

The display associated with each submaster provides status information which includes pending and active cues, rate value, filter settings, a timing counter, and mode indicators.

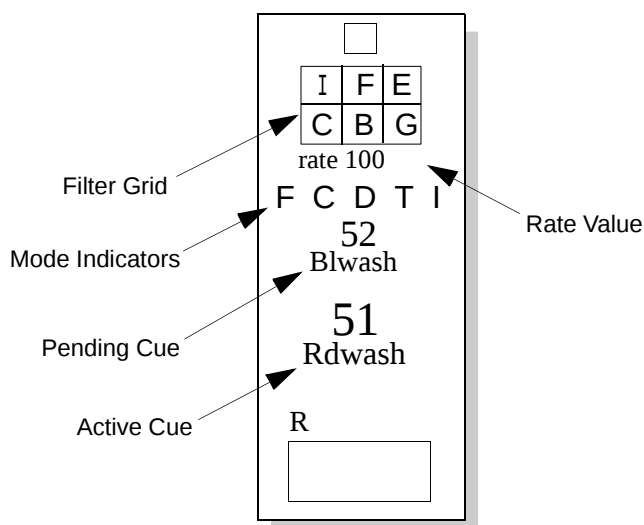

## Submaster Modes

### Using [Choose] and [Clear]


#### Choose



The [Choose] button, when pressed along with any of the submaster control buttons, allows the submaster to be placed in a variety of different modes.

These modes: Rate, Freeze, Function Filter, Channel Filter, Dynamic Disable, Time Disable, Independent, and Manual Assign can be used for advanced control of events during playback or to assign control of specific channels to a submaster.

When Function Filter, Channel Filter, Dynamic Disable, Time Disable, and Independent modes are assigned, the mode indicator in the submaster display will light accordingly.

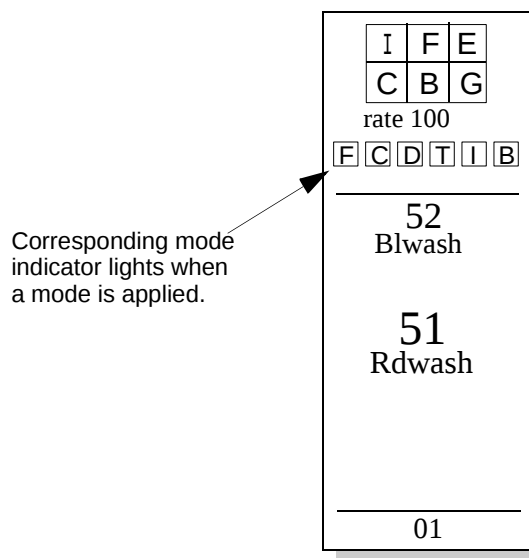


To release a submaster from a specific mode, press function button (for example, [Dyn Dsbl]) along with the [Choose] button for the required submaster. (The functions are toggled on and off using this method.)

**Note:** It is possible to set up all submaster modes without having the submaster selected except Manual Assign.

## Clear



The [Clear] button releases a submaster from any applied modes and clears any active or pending cues (returning the submaster to its default state). The clear feature is a 2-step process, so that mode setting and cue information can be cleared separately.

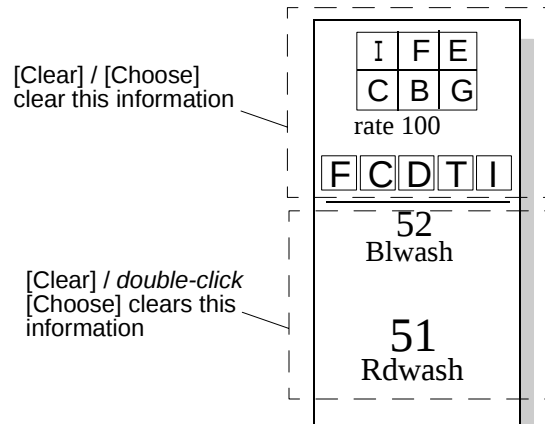

### Clear modes, filter, and rate settings from a submaster:

- Press [Clear] along with the [Choose] button for the required submaster.

### Clear active and pending cues from a submaster:

- Press [Clear] along with double-clicking the [Choose] button for the required submaster.

---

## Rate

Rate

The Rate feature speeds up or slows down the playback of events (cues or effects).

The Rate encoder allows a percentage adjustment from 0-999 with 999% being the fastest rate and 0% causing the event to stop.

- The default is 100%, which is real time (5 seconds = 5 seconds).
- Decrease the percentage to slow down the event (50% rate applied to 5 seconds = 10 seconds).
- Increase the rate percentage to speed up the event (200% rate applied to 5 seconds = 2.5 seconds).

Guidelines:

- All timing values associated with an event (luminaire delay and times, cue out time, waits and trails) are affected by the rate modification proportionally.
- If a cue is complete, the rate adjustment will affect the pending cue. When the pending cue is activated, the adjusted rate is used to determine timing.

### Set rate for a submaster:

Step 1. Press [Rate] along with [Choose] button for required submaster.

Step 2. Use Rate Control encoder to adjust rate to required value.

### Release submaster from Rate mode:

- Press [Rate] / [Choose] at submaster to clear.

---

## Freeze

Freeze

The Freeze feature halts an event in mid-transition.

**Note:** If a cue is stored while a submaster is frozen, the end goal of the event will be the data stored.

---

### Freeze a cue:

- Step 1. Press [Freeze] along with [Choose] button for required submaster. This will instantaneously halt the cue or effect.
- Step 2. Press the [Run] button to resume cue, or press [Back] button to fade to previous cue on that submaster in associated time values, (unless timing is filtered).

---

## Function Filter



The Function Filter applies filters to a submaster for modification of a cue or effect during playback. The Function Filter works in conjunction with the touch screen display's Filter Mode.

Guidelines:

- The function filter does not become active until the next event is recalled.
- If a cue has a mask associated with it, the submaster filter state will override the mask. (All parameters will be played back, whether or not they were originally intended for playback when the cue was stored.) Refer to [“Masking” on page 147](#).

### Apply filters to a submaster:

Step 1. At touch screen, select Filter Mode and set filter parameters.

Step 2. Press [Func Filter] / [Choose] on required submaster.

### Modifying filter settings:

If filters are modified at the touch screen after initially assigning to a submaster, you must press [Func Filter] / [Choose] again to update the filter changes in the submaster.

### Using Filters with Effects

Filters can be used with effects to withhold information from cues, beams, and presets when they are part of an effect sequence. When cues are included in sequences, the cue times are used instead of attack times, unless timing is disabled in the filter selection.

### Clear filters from submaster:

Step 1. At touch screen, clear all filter selections.

Step 2. Press [Func Filter] / [Choose] at submaster to clear.

---

## Channel Filter



The Channel Filter feature is used to specify certain channels for playback on a submaster. Those “filtered” channels then become the only channels used by the submaster whenever it plays back a cue or effect.

### **Filter a channel(s):**

Step 1. Select required channels.

Step 2. Press [Chan Filter] along with [Choose] button for required submaster.

### **Release a Channel Filter:**

Step 1. Deselect all channels.

Step 2. Press [Chan Filter] / [Choose] at submaster to clear.

---

## Dynamic Disable



The Dynamic Disable feature disables the playback of any macros and/or snapshots linked to a cue. For example, if you wish to view data in a particular cue, you could disable any linked event(s) so that it will not occur upon completion of the cue.

### **Apply Dynamic Disable to a submaster:**

- Press [Dyn Dsbl] along with [Choose] button for required submaster.

### **Release a submaster from Dynamic Disable mode:**

- Press [Dyn Dsbl] / [Choose] at submaster to clear.

---

## Timing Disable



The Time Disable feature causes timing data to be ignored for any cues that are activated on that submaster while it is in timing disable mode.

### **Apply Timing Disable to a submaster:**

- Press [Time Dsbl] along with [Choose] button for required submaster.

### **Release Timing Disable mode:**

- Press [Clear] along with [Choose] button of associated submaster to clear submaster of all modes.

---

## Independent

Ind

The Independent feature prohibits a specific submaster from having its content modified by any other submaster (although it can still be modified manually or by the Grand Master/Blackout fader).

### Example:

If a channel is controlled by Submaster 1 and intensity control is subsequently assumed by Submaster 2, and Submaster 2 is independent, that intensity value is now independent and cannot be affected by any changes to Submaster 1's fader setting.

### Make a submaster independent:

- Press [Ind] along with [Choose] button for required submaster.

### Release independent mode:

This action will not modify the output of the submaster, only enable those channels/parameters to be available for control by other playbacks.

- Press [Clear] along with [Choose] of associated submaster to clear submaster of all modes.

---

## Manual Assign

Man  
Assign

The Manual Assign feature loads any selected channels and their current parameter settings into the submaster for control. The submaster fader can then be used to scale the intensity output for those channels. For example, this function could be used to adjust the intensities of specific luminaires in order to brighten or dim certain areas of a stage.

When channels are manually assigned to a submaster, the current cue or stage look associated with those channels is now controlled by the submaster fader until such time as the manual assignments are cleared from the submaster, a new cue is played, or a manual control action is made at the Manual Control panel.

### Guidelines:

- Channels/parameters can be taken away from the submaster when a new command is issued by a playback, unless the submaster is in independent mode (refer to ["Independent" above](#)).
- Manual assignments will be cleared when a new cue is played back on that submaster; the channels will fade out in the out fade time of the incoming cue or effect.
- If filters are being used with the submaster, they will modify the manually assigned channels accordingly (refer to ["Function Filter" on page 232](#)).

- Unlike other submaster functions, the submaster must first be selected before assigning manual control.
- Channels may be added by manual assignment to a submaster that has channel filters. However, this does not add those channels to the list of filtered channels (refer to “[Channel Filter](#)” on page 233).

#### **Manually assign a channel, range of channels, or group:**

Step 1. Select required channels.

Step 2. At required submaster, press [Select].

Step 3. Press [Man Assign] along with [Choose] button for required submaster.

#### **Assign new channels to a previous manual assignment:**

The Manual Assign function is an additive process which will allow you to add channels to an existing manual assignment.

Step 1. Select new channels.

Step 2. At required submaster, press [Select].

Step 3. Press [Man Assign] along with [Choose] button for required submaster.

#### **Release a manual assignment using [Choose] or [Clear]:**

When releasing a submaster from a manual assignment using these methods, no parameter data will be changed; the channel is just no longer associated with that submaster.

- Press [Man Assign] / [Choose] / [Choose] at associated submaster, *or*
- Press [Clear] along with [Choose] button of associated submaster to clear submaster of all modes.

### **Intensity Level with Manual Assign**

When channels are assigned to a submaster using the Manual Assign function, the current intensity value for the selected channels at the time of being assigned becomes the full intensity range which can be adjusted by the submaster fader.

#### **Example 1:**

If a channel is assigned while its intensity value is at 100%, the submaster fader will have control of all 100% of the luminaire’s potential intensity output. Subsequently reducing the submaster fader from 100% to 50% would result in a luminaire intensity value of 50%.

#### **Example 2:**

If a channel is assigned while its intensity value is at 50%, the submaster fader will have control of only half of the luminaire’s potential intensity output (scaled appropriately to the fader’s full range). Subsequently reducing the submaster fader from 100% to 50% would result in a luminaire intensity value of 25%.

---

## Bump

A square button with a black border and the word "Bump" in white text.

When in Bump mode, pressing the submaster's [Select] button will instantly "bump" to the full intensity provided by the cue as modified by the fader position.

### **Bump intensity of active cue to 100%:**

Step 1. Press [Bump] along with [Choose] button for required submaster. Submaster is now in Bump mode and [Select] will begin flashing.

Step 2. Press [Select] to bump intensity.

### **Release submaster from Bump mode:**

- Press [Bump] / [Choose] at submaster to clear.

---

## Board Command Disable

A square button with a black border and the text "BdCmd Dsbl" in white text.

The Board Command Disable feature causes any linked snapshots, macros or autofollows to be ignored during playback of any cue. This feature can be useful for recalling the core data for any cue.

### **Apply Board Command Disable to a submaster:**

- Press [BdCmd Disable] along with [Choose] button for required submaster.

### **Release Board Command Disable mode:**

- Press [Clear] along with [Choose] button of associated submaster to clear submaster of all modes.

# Playback Intensity Level

Refer to  
Fold-Out **G**


## How Playback Intensity is Determined

Earlier in this manual, intensity was discussed in relation to cue store operations (refer to [“Intensity States” on page 110](#) and [“How Faders Affect Intensity” on page 198](#)). This stored intensity state or level, along with the current setting of submaster and Grand Master faders, are used in determining the *final* playback intensity level for any given event.

As previously mentioned, the Grand Master fader is used to master the overall intensity output for the console, while the individual submaster faders control the intensity level of events being played back. Final intensity is determined by the following combination:

- Intensity value stored in the cue or effect being played back.
- Fader setting of the submaster being used to playback the event. (If more than one submaster is selected and their levels are different, then the HTP principle will also be involved. Refer to [“HTP \(Highest Takes Precedence\)” on page 240](#).)
- Setting of the Grand Master fader or associated [Black Out] button.

Intensity values are routed through the faders as follows:

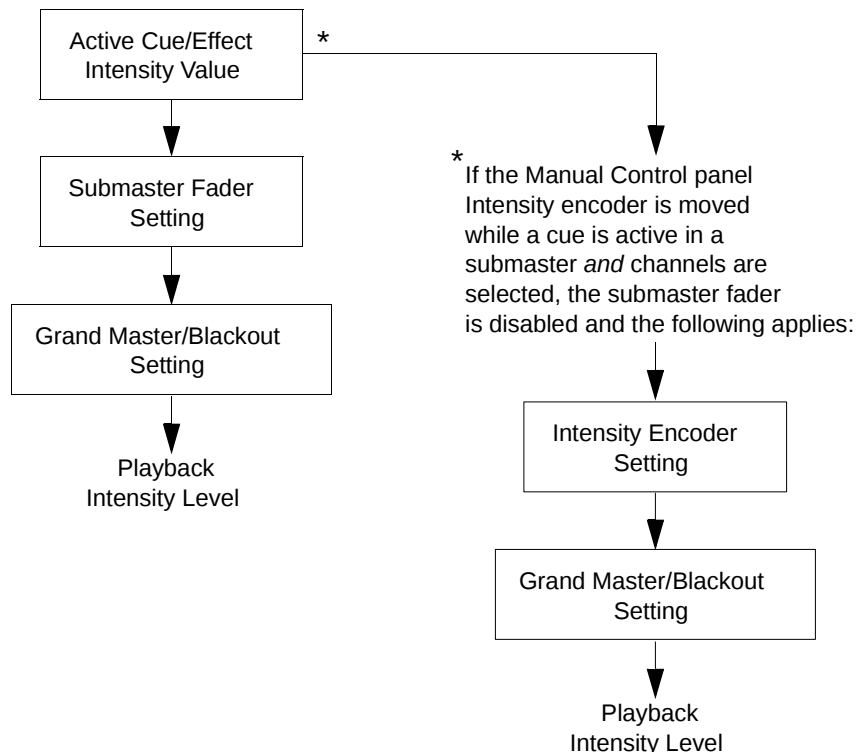

---

## Example Scenarios

The following examples will give you an idea how stored intensity values and fader settings work together to determine an intensity level for playback.

The final playback intensity level is a percentage of what was stored in the original cue and not a percentage of the luminaire's full potential intensity output.

---

**Note:** These simplified examples are intended to help show the relationship of intensity controls. Many more combinations are possible.

---

### Playback Scenario 1:

- Cue 52 has a stored intensity value of 100%.
- Submaster fader playing Cue 52 is set at 50%.
- Grand Master fader is set at 100%.
- Cue 52 will play back at an intensity level of 50%.

### Playback Scenario 2:

- Cue 54 has a stored intensity value of 100%.
- Submaster fader playing Cue 54 is set at 50%.
- Grand Master fader is set at 50%.
- Cue 54 will play back at an intensity level of 25%.

### Playback Scenario 3:

- Cue 56 has a stored intensity value of 50%.
- Submaster fader playing Cue 56 is set at 100%.
- Grand Master fader is set at 100%.
- Cue 56 will play back at an intensity level of 50%.

### Playback Scenario 4:


- Cue 58 has a stored intensity value of 50%.
- Submaster fader playing Cue 56 is set at 50%.
- Grand Master fader is set at 50%.
- Cue 56 will play back at an intensity level of 12.5%.

---


## Intensity Transitions

When playing back cues with intensity transitions (timed fades), the submaster fader can be used to scale the intensity output.

- If the fader is set *before* the transition occurs, the entire transition will be scaled accordingly. For example, if a timed fade of 10 seconds is defined between Cue 1 (which has a stored intensity value of 0%) and Cue 2 (which has a stored intensity value of 100%), then setting the submaster fader at 50% before the transition occurs would result in a 10 second fade from 0% intensity to 50% intensity.

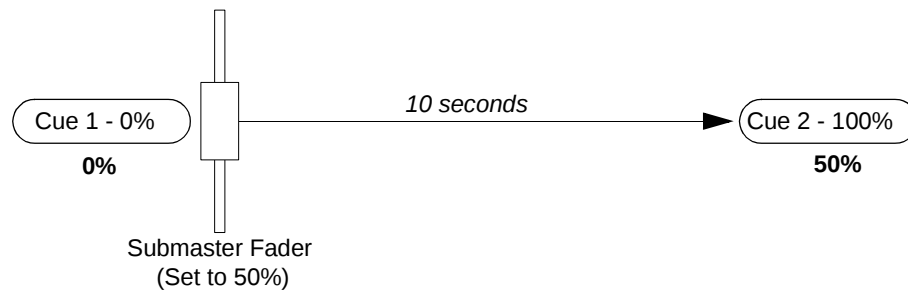

- If the fader is moved *during* the transition, the remaining portion of the transition will be scaled accordingly. For example, if a timed fade of 10 seconds is defined between Cue 1 (which has an intensity value of 0%) and Cue 2 (which has an intensity value of 100%), and the fader is dropped to 50% halfway through the transition, then the result would be a 5 second fade from 0% intensity to 50% intensity followed by a 5 second fade from 50% intensity to 75% intensity.

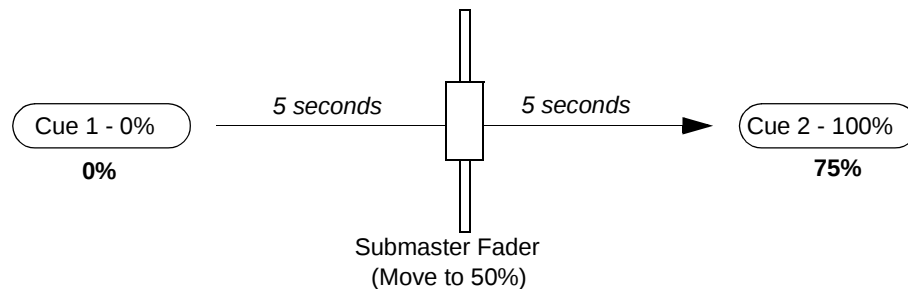

---

## HTP (Highest Takes Precedence)

The principle of Highest Takes Precedence is also important to understand when storing or playing back a cue. In a case of intensity conflict (e.g. two selected submasters are set at different levels), the HTP principle decides which intensity value will be ultimately applied to the luminaire. (When storing a cue, the stored value is also the result of this determination.)

Each luminaire continuously evaluates the intensity level provided by each submaster including time fades and fader position. The submaster providing the highest intensity level will determine the luminaire's actual intensity level.

# Playback

## Advanced Playback of Cues

A cue loaded into a submaster becomes the pending cue. When [Go] is pressed, the pending cue will play.

### Play a cue:

- Step 1. At keypad, press [Cue] [n] [Enter] or scroll through cue list to select cue. It will be displayed in the keypad window.

|               |                |              |
|---------------|----------------|--------------|
| recall cue 52 | I F C<br>B G D | 52<br>Blwash |
| Cue 52 *      |                |              |



- Step 2. At required submaster, press [Select] to select submaster for playback function.



- Step 3. Press [Load] to place cue in pending file (as shown in submaster display).

- Step 4. Set Grand Master fader at required level.

- Step 5. Set submaster fader at required level.

- Step 6. Press [Go] to play cue.



### Play next cue:

The submaster always sequences, placing the next sequential cue from the cue sheet or any linked cue in its pending file. Linked cues without wait times will await manual execution.

- Press [Go] again to play next cue.

### Play previous cue:




- Press [Back] to play previous cue (previously active on that submaster). Subsequent presses of [Back] will step backwards through cue sheet.

### Play a cue again:



- Press [Run] to play active cue again.

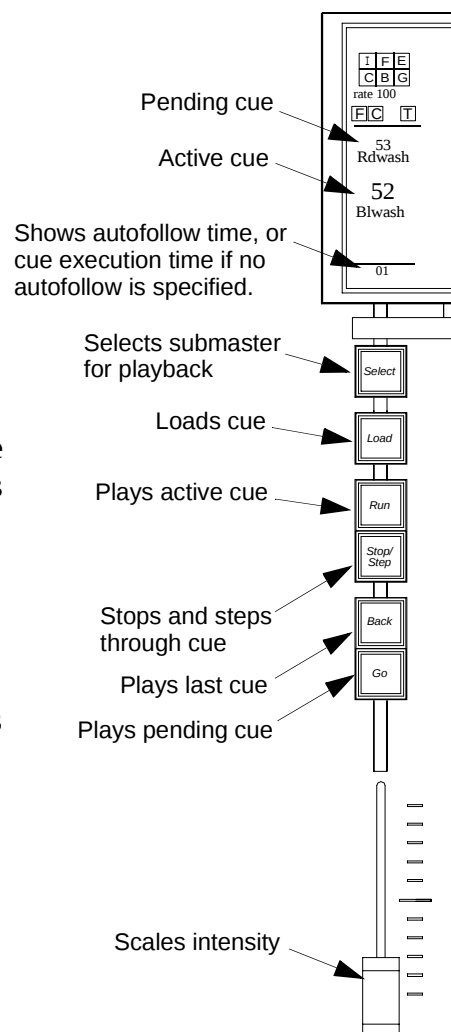

---

## Controlling Linked Playback

The submaster always sequences, placing the linked cue in that submaster's pending file or the specified submaster's pending file. Linked cues with an associated wait time will automatically execute after the wait time has elapsed. If no wait time has been defined, the linked cue will await manual execution. A linked macro will automatically execute.

Stop/  
Step

The [Stop/Step] button can be used to halt the automatic playback of linked cues which have an associated wait or trail time.

### Stop countdown of wait times:

Step 1. Press [Stop/Step] to stop countdown.

Run

Step 2. Press [Run] to continue the countdown or press [Go] to advance to the next cue.

---

## Fade Times for *Marked/Zero/Out* Cues

During playback, cues stored with intensity states other than *active* will assume different fade out times depending on the state.

- Cues with *marked* and *zero* instructions will use the intensity down time associated with the channel.
- Cues with an *out* (*inactive* state) instruction will follow the out time associated with the cue.

# CHAPTER 14.

---

## System Setups

This chapter provides instructions for setting the console's default options, display settings, and multi-console system options.

- **Default Options**
- **Display Filters**
- **Multi-Console Features**
- **Off-Line Programming**

*(This page intentionally blank.)*

# Default Options

## Settings Window

The options available in the Settings window are advanced setups that are not required when first powering up and patching your system. These can be changed at any time.

### To change settings:

- At Setup menu, select Settings. Settings window will open.



The Settings window is shown with the following sections and annotations:

- Emergency Action:**
  - ☒ Do Nothing
  - ☐ Fade Out Time [ ]
  - ☐ Go To Cue [ ]
- Startup Action:**
  - Macro: [ 52 ]
  - Snapshot: [ ]
- Time:**
  - 2:21:53 PM 6/26/00
  - 2:20:25 PM 6/26/00 [Set]
- Units:**
  - ☒ English
  - ☐ Metric
- Cue Creation:**
  - Default Out Time: [ 0.00 ]
- Timecode:**
  - ☐ Auto Switch
- Buttons/Keys:**
  - ☐ Reverse Cue Keypad Arrows
- Palette Store Options:**
  - ☒ Lowest Active Device
  - ☐ Lowest Selected Device
  - ☐ Use Func. Filter on Color Store

Annotations with arrows pointing to specific fields:

- Tells the luminaires what to do in the event communication is lost between the console and luminaire/interface devices for more than 15 seconds (points to Emergency Action section).
- Tells the console what to do upon startup (points to Startup Action section).
- Sets unit of measure for 3D location distances (points to Units section).
- Sets the internal date/time stamp (points to Time section).
- Change fields as required and click "Set" (points to the Set button in the Time section).
- Configures internal clock to take over in the event of a loss of external when checked (points to the Auto Switch checkbox).
- Click to reverse keypad arrow direction (reversed when box is checked) (points to the Reverse Cue Keypad Arrows checkbox).
- Sets the default Out Time to be used in cues unless a different time is specified (points to the Default Out Time field).
- Chooses which value is stored during a Beam or Color Select store command (points to the Palette Store Options section).
- Activates filters for Color select store operations when checked (points to the Use Func. Filter on Color Store checkbox).

## Default Explanations

### Emergency Action

**Default:** Do nothing (remain in current state)

This setting determines what event is to occur if communication is lost between the console and the luminaire/interface devices for longer than 15 seconds. This information is sent upon console start-up in case of an emergency. You may determine one of the following:

- Do nothing. Luminaires will do nothing.
- Fade out in n seconds. System will fade out in the specified number of seconds.
- Go to Cue n. Luminaires will assume the specified cue action.

### Startup Action

**Default:** No startup action

This setting determines what event is to occur upon power up of the console. You may specify one of the following:

- Macro. Console will execute the specified macro.
- Snapshot. Console will execute the specified snapshot.

### Date/Time Stamp

Sets the computer's internal date and time values for the console.

### Units

**Default:** English

This sets the unit of measure, used with the 2D/3D location configuration.

### Palette Store Options

**Default:** Lowest Active

This setting tells the console whether to draw data from lowest active or lowest selected channel during a Beam or Color store operation.

The "lowest active" setting draws data from the lowest channel number with intensity of that type, regardless of selection. The "lowest selected" setting draws data from the lowest selected channel number of that type, regardless of intensity state.

## Use of Filters with Color Store

**Default:** Filters not used

This setting defines whether or not function filters impact Color select store operations.

## Buttons/Keys

This setting defines which direction the keypad [] and [] arrows will function.

## Timecode Autoswitch

**Default:** Off

This setting defines whether the internal timecode clock will takeover or not when an external signal is lost. (Enabled when box is checked.)

# Display Filters

## Loading Filters

Console status windows can be configured to include data from specified channels only. Once a display filter has been loaded, only data from the specified channels would be shown in the status windows and only these luminaires would appear in the 3D Graphic window.

### Load a display filter:

- Step 1. Select only channels you wish to be displayed in status or 3D Graphic windows.
- Step 2. At Special menu, select Load Display Filter.
- Step 3. To load a new display filter, repeat steps 1 and 2 for different groups of channels.

### Clear a filter:

- Step 1. Clear all channel selections.
- Step 2. At Special menu, select Load Display Filter.



# Multi-Console Features

---

## Setting Up a Backup Console

Virtuoso will allow a second console to be connected to a single lighting system. This feature can be used to ready a backup console for quick takeover of system operations in the event the main console goes down. To configure the system for multiple console connection, it is necessary to setup one console as a primary and one as a secondary.

---

**Note:** Full multi-user programming capability is not yet implemented. Therefore, it is recommended that no more than one console be used to program a show at one time.

---

## Primary and Secondary Setups

In a multi-console setup, there are two possible console configurations. The configuration for each console depends on the purpose and system limitations for that particular multiple console setup.

- **Primary Console.** This console serves as the main system console. It stores the show file and retains overall submaster control.

*Notes:* Each system must have a primary console.

Only one primary console per system is allowed.

- **Secondary Console.** This console is an additional console hosted by the primary console. It receives show data from the primary and mirrors all submaster operations.

*Notes:* As many secondary consoles as required are allowed.

Must be used in conjunction with a primary console.

## Online Backup

The online backup feature is active when a main console and a backup console are connected in a system. The online backup allows the backup (secondary) console to track all show file changes made at the main console so that if the backup console is required to takeover, the transition is seamless (without a console reset or data download to the system).

## Power Up

When powered up, a console will assume its previous configuration. The configuration information is stored along with the show file. If a system detects multiple primary consoles, a dialog will pop up requiring you to choose a single primary console. When the primary console is configured in this case, the conflicting console(s) will automatically respond to the new configuration setup.


**Tip** ➞ It is good practice to power up the primary console first in a multi-console setup.

## Configuring Multiple Consoles

By default, in a single console setup, the console will automatically be configured as the primary console. In a multi-console setup, secondary consoles can be configured at the File menu.


### Configure a secondary console:

- Step 1. At console to be configured, at Virtuoso icon menu, select Config as Secondary Console...
- Step 2. At confirmation window, click OK to proceed or Cancel to abort.

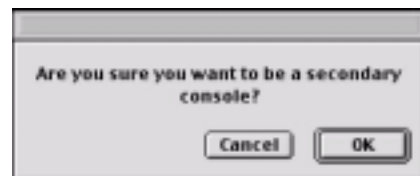

### Takeover as primary console:

- Step 1. At console to become primary, at File menu, select Takeover as Primary Console...
- Step 2. At confirmation window, click OK to proceed or Cancel to abort.

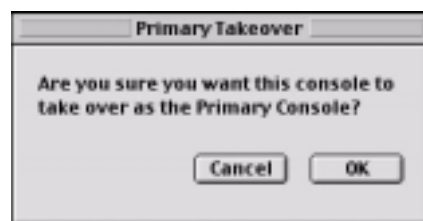

### Naming consoles:

- Step 1. At System Configuration window, double-click icon of console to be named or at Virtuoso icon menu, select Versions... Versions window will open.
- Step 2. At name field, type console name.
- Step 3. Close window.

---

## Disable Console

The disable feature is used to disable the console's front panel and graphic interface ability. A disabled console will still provide status feedback, sync submasters, and appear in the System Config window, but all user control is temporarily disabled.

---

**Note:** Any primary or secondary console can be disabled as required.


---

### Disable a console:

- At console to be disabled, at Virtuoso Icon menu, select Disable Console...

### Re-enable a console:

- At console to be re-enabled, at Virtuoso Icon menu, select Enable Console...

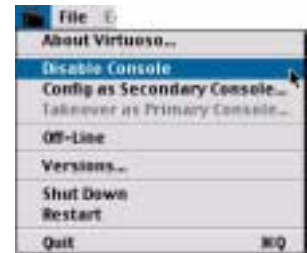

# Off-Line Programming


## Performing Off-Line Programming

The off-line programming feature allows preprogramming without having to connect to a system. When in the off-line mode, all menus and windows are accessible just as if the system were online. The only apparent difference is found in the System Configuration window which will not display any device icons except for the console while in the Off-Line mode.

**Note:** The off-line feature does not eliminate the need for a console. The Visionary 3D application is available for programming off-line without a console.

### Set console to Off-line Mode:

- At Virtuoso icon menu, select Off-Line. When in off-line mode, system configuration window will not display any connected system devices and "offline" will appear next to the console icon.

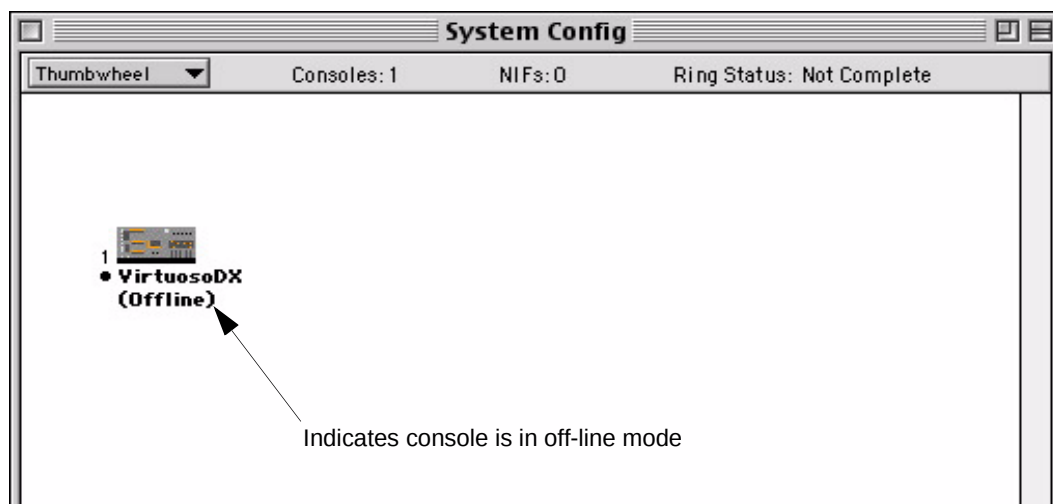

# CHAPTER 15.

---

## 3D Graphic Display

This chapter provides instructions for using the Virtuoso 3D Display features.

- **3D Features**
- **3D Display Window**
- **Live/Preview Mode**

*(This page intentionally blank.)*

## 3D Features

---

### Overview

The Virtuoso three-dimensional features provide graphic feedback for live, preview, and off-line editing purposes. Once patched with a 3D location, the 3D Graphic window will allow you to view your current luminaire configuration in either a wireframe or a rendered three-dimensional representation. Luminaire status and cue positions appear in the 3D Graphic window as they would appear live and any events played back while the window is open are reproduced.

The 3D capability will allow you to define a venue size or import a model of your particular stage production so that show files can be programmed and edited according to the demands of your particular production. The 3D area displayed in the 3D Graphic window is referred to as a “venue.”

The window provides numerous user-definable settings such as camera angles, ambient lighting, and rendered detail level. The window also contains built-in control interface features which allow luminaire parameter modification within the 3D graphic environment.

The 3D graphic display is based on a “point of origin,” which is defined in the default venue or a venue that has been imported. When importing a venue, the point of origin used to create that 3D model would be the same point of origin used to base your luminaire 3D location in the patch setup. For each luminaire, an X, Y, and Z coordinate is defined, which locates the luminaire horizontally, vertically, and at a certain depth from the point of origin.

---

### Defining a New Venue

Dimensions can be defined for a three-dimensional “venue” which is a representation of your venue or stage production as defined by 3D modeling parameters. This will be the venue size used in the 3D graphic window.

#### To define a new venue size:

- Step 1. At File menu, select New Venue... Dimensions window will open.
- Step 2. Enter height, width, and depth measurements.
- Step 3. Click OK.



## Importing a Venue

A 3D graphic file can be imported for use in the 3D Graphic window. The file, referred to as a “venue,” is a representation of your venue or stage production as defined by 3D modeling parameters. It can be created in any 3D modeling software package and then saved in the proper format for importing via the console's Zip® drive. The venue graphic is stored with the show file. If a new venue is imported, it will overwrite the previous venue in the show file.


The console can import the following file formats:

- \*.3dmf
- \*.3df
- \*.dxf
- \*.dwg

**Note:** When importing files, it is helpful to know the point of origin on which the 3D model is based, although it can be determined in the event that this information is unavailable.

### Import a venue:

- Step 1. Insert Zip® disk containing your 3D venue model into console Zip® drive.
- Step 2. At File menu, select Import Venue.
- Step 3. At Open window, select your 3D model file and click Choose.

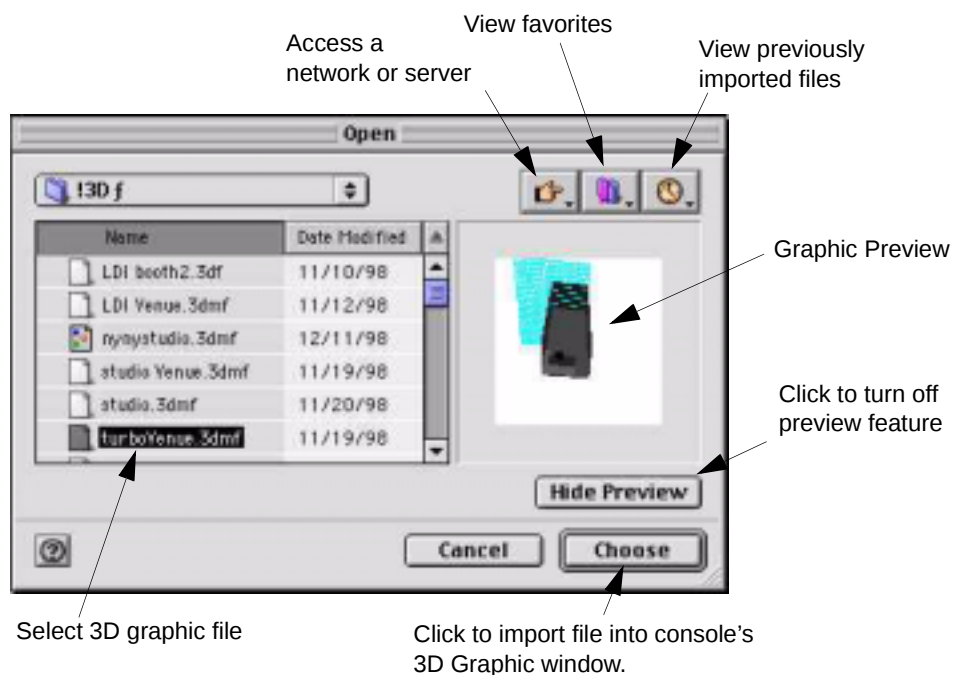

### 3D Layer Control

The clipping process used by the Virtuoso software to manage beam intersections when they meet objects in the 3D graphic can be processor intensive and slow down performance of the 3D graphic feature. As an option to speed up performance, Virtuoso offers a method for specifying individual layers of the imported \*.dwg or \*.dxf graphic not to be clipped.

---

**Note:** In VectorWorks, a layer is referred to as a "class."

---

#### To specify layer(s) for non-clipping:

- In drawing package, rename layer starting with "-".  
For example, "-truss". When importing, Virtuoso will recognize this indicator and not clip beams when they meet objects in this layer.
- 

### Exporting a Scene

A scene from the 3D Graphic window can be exported in \*.3dmf format for use with 3D modeling applications. The exported file will retain all of its 3D modeling parameters so that it may be altered or re-rendered as required. The export function will capture the current scene displayed in the 3D Graphic window at the time Export is selected.


---

**Note:** The Export... option will only be available if the 3D Graphic window is open.

---

#### Export a venue:

- Step 1. If required, insert Zip® disk for saving your 3D venue model into console Zip® drive.
- Step 2. Ensure that 3D Graphic window is open and setup as desired.
- Step 3. At File menu, select Export...
- Step 4. At Save window, name file and select location for storing.
- Step 5. Click Save to save.

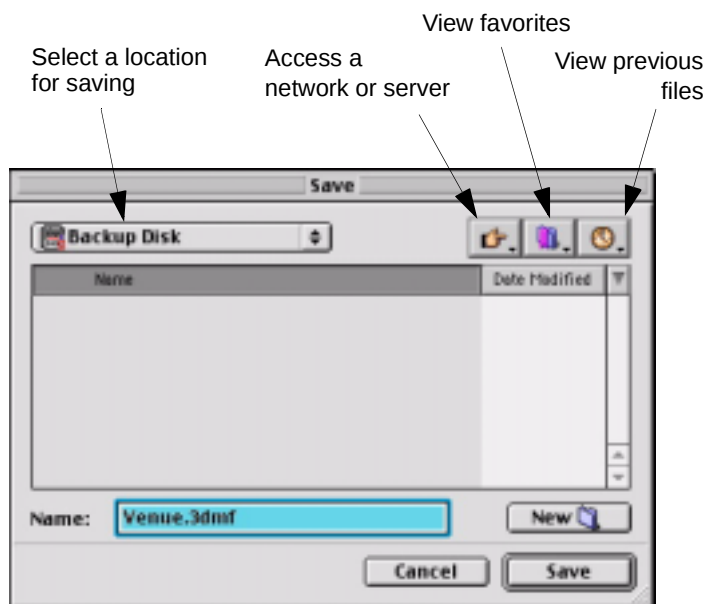

## Match 3D

The Match 3D feature available in the Drawing Size window allows importing of the size and window positioning coordinates from the 3D graphic into the Plan View. (This requires that a 3D graphic has been previously imported.)

### Import 3D specifications into Plan View:

- Step 1. At Operation menu, select 3D Graphic to open 3D Graphic window.
- Step 2. At Operation menu, select Plan View. Plan View window will open and 2D Display menu will become available on menu bar.
- Step 3. At 2D Display menu, select Drawing Size. Drawing Size window will open.
- Step 4. Click Match 3D to import specifications.

Import specifications from Size and Window Top-Left boxes.

Click to import 3D specifications into Plan View

The screenshot shows the 'Drawing Size' dialog box. It has four main sections: 'Size' with 'Width' (38') and 'Depth' (80') fields; 'Scale' with a field '1" = 3''; 'Window Top-Left' with 'X' (-19') and 'Y' (31' 6") fields; and a 'Match 3D' button. Below the button is a note: 'Match 3D requires the 3D Graphic window to be open.' At the bottom are 'Cancel' and 'OK' buttons. Two arrows point from external text to the dialog: one from 'Import specifications from Size and Window Top-Left boxes.' to the 'Size' and 'Window Top-Left' sections, and another from 'Click to import 3D specifications into Plan View' to the 'Match 3D' button.

## 3D Display Window

### Defining X, Y, Z Locations

An X, Y, and Z location for each luminaire is defined in its patch information. These coordinates can be entered at the time the luminaire is initially patched or any time later.


The coordinates are based on a point of origin (X=0, Y=0, Z=0) from which every object in your 3D graphic has been located. By defining all three locations, you can achieve an accurate representation of your production in the Graphic Display window.

- X - left/right from origin.
- Y - forward/backward from origin.
- Z - height from origin.


#### Define 3D settings:

Step 1. Open Luminaire Patch window by dropping a new luminaire icon into Plan View window or by double-clicking an existing icon. (Refer to [“Patching VARI\\*LITE Luminaires”](#) on page 32.)

Step 2. Enter an X, Y, and Z value.

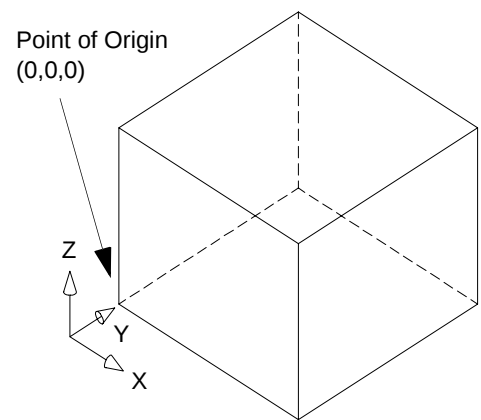

**Note:** The Z coordinate (height) sets the top position for the luminaire’s hook in the 3D graphic. For example, to place a luminaire on a pipe at a height of 20’-0” to the bottom of the pipe, the luminaire should be placed at 20’-2” for accurate placement.

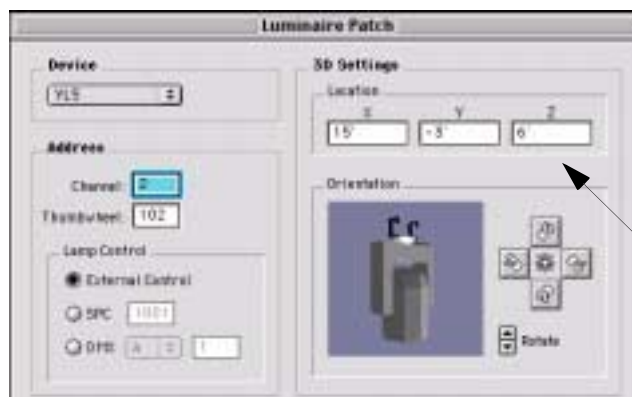

## Changing 3D Height Location

An easy method of changing the height (Z coordinate) of an object in the 3D environment is accomplished at the Plan View window.

Height can be adjusted in two ways:

- By an absolute setting. For example, all luminaires are raised to an absolute height of 10 feet.
- On a relative basis. For example, all luminaires are raised two feet from their current height (regardless whether their height is the same or different).

### To change height:

Step 1. At Operation menu, select Plan View. Plan View window will open and 2D Display menu will become available on menu bar.

Step 2. At Patch menu, select Enable Editing.

Step 3. Select required luminaire icons using pointer.


Step 4. At 2D Display menu, select Change Height. Set Height window will open.



Step 5. Do one of the following:

To change height(s) to an absolute setting, select Z. Enter value which will become new height of all selected luminaires. Click OK.

To change height(s) on a relative basis, select  $\Delta Z$ . Enter value which will be added or subtracted from current height location. Click OK.

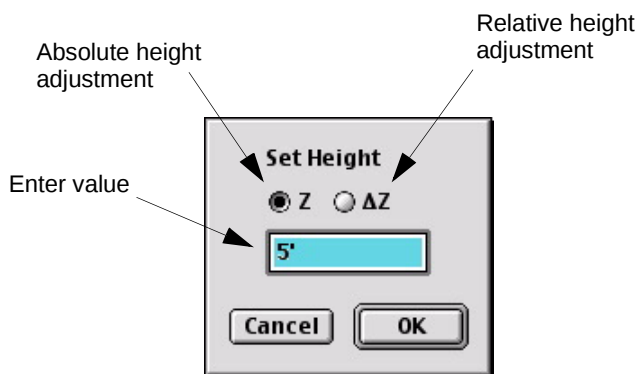


## Using 3D Graphic Window

The 3D Graphic window displays your current luminaire configuration in either a wireframe or a rendered three-dimensional representation.

**Note:** If you open the 3D Graphic window without having defined a new venue or imported a venue, you will be asked to define the venue size. Refer to [“Defining a New Venue” on page 255](#).

- Luminaires are focused along a focus line, which reflects the actual focus and color of the luminaire’s beam. Luminaire beams can be refocused as required by indicating targets via the crosshairs.
- Changing the focus position automatically adjusts the corresponding parameter data for all luminaires that use that focus point for positional information.

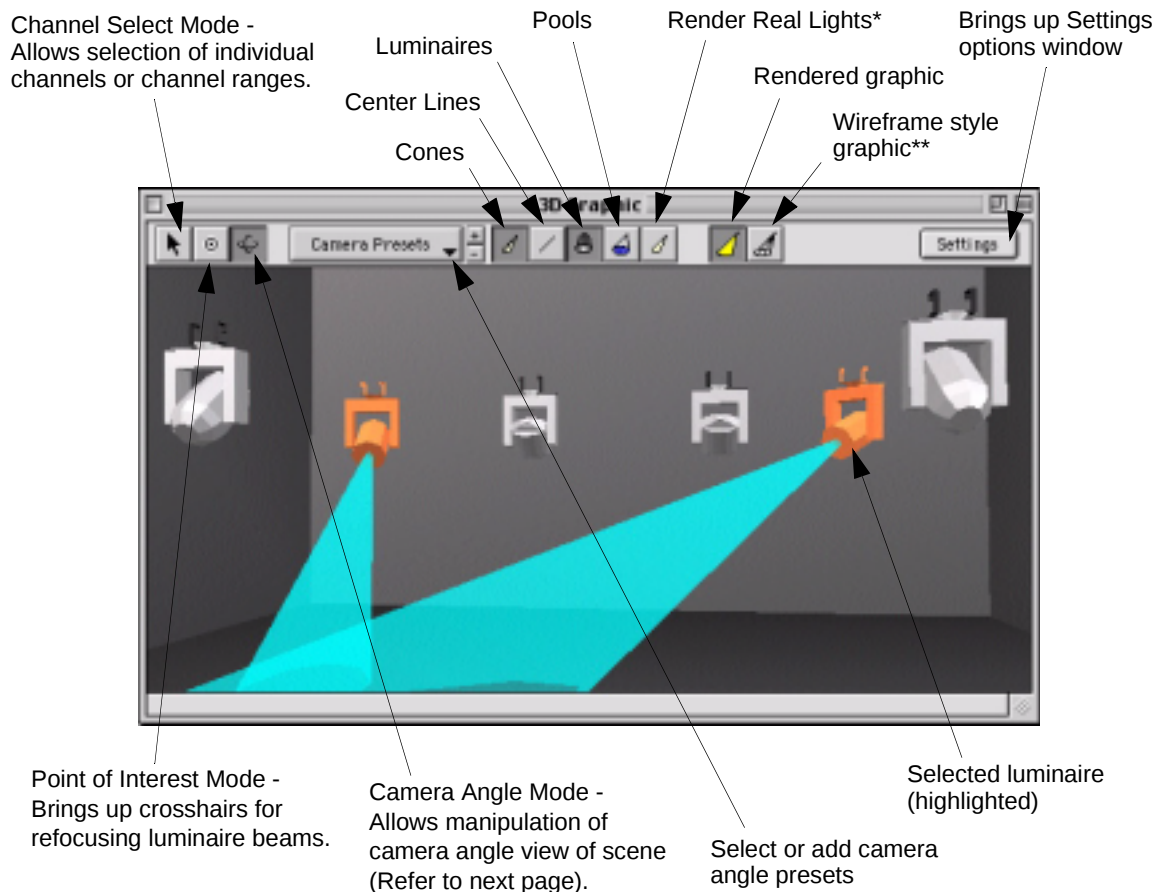

\* This option will greatly reduce the system’s operating speed.

\*\* This option is only a representative wireframe graphic style and will not actually speed up performance. To configure 3D window for true wireframe functionality, go to Settings options (refer to [“3D Graphic Settings” on page 263](#)).

While in **Channel Select Mode**, the following options are available:

- Click on individual luminaires to select for manual control.
- Hold down left trackpad button and drag cursor across a range of luminaires to select for manual control.

While in **Camera Angle Mode**, the following options are available:

- Hold down left trackpad button while using trackpad to move camera angle up/down or right/left. (Whichever direction you move first will lock the graphic into either the up/down or right/left mode. Release button and press again to move graphic in a different direction.)
- Hold down left trackpad button and  button while using trackpad to zoom in or out.
- Hold down left trackpad button and  button while using trackpad to rotate venue.
- Hold down left trackpad button and  button to bring up camera focus crosshairs. Clicking somewhere within the graphic with these crosshairs will refocus the camera angle to that center point.

---

**Note:** One method of speeding up 3D graphic performance is to limit the number of channels (and therefore their associated luminaires) which are displayed in the 3D Graphic window at any one time. Refer to [“Display Filters” on page 248](#).

---

The following "quick keys" can be used with the 3D Graphic window to adjust the camera angle:


- 4, 6 = left, right direction (also arrow keys)
- 8, 2 = up, down (also arrow keys)
- 7, 9 = zoom in, zoom out (also +, -)

## 3D Graphic Settings

Appearance aspects of the 3D graphic can be adjusted using the Settings window.

### Using 3D Settings window:

- At 3D graphic window, click on Settings button. Using cursor, drag sliders to adjust settings as desired.

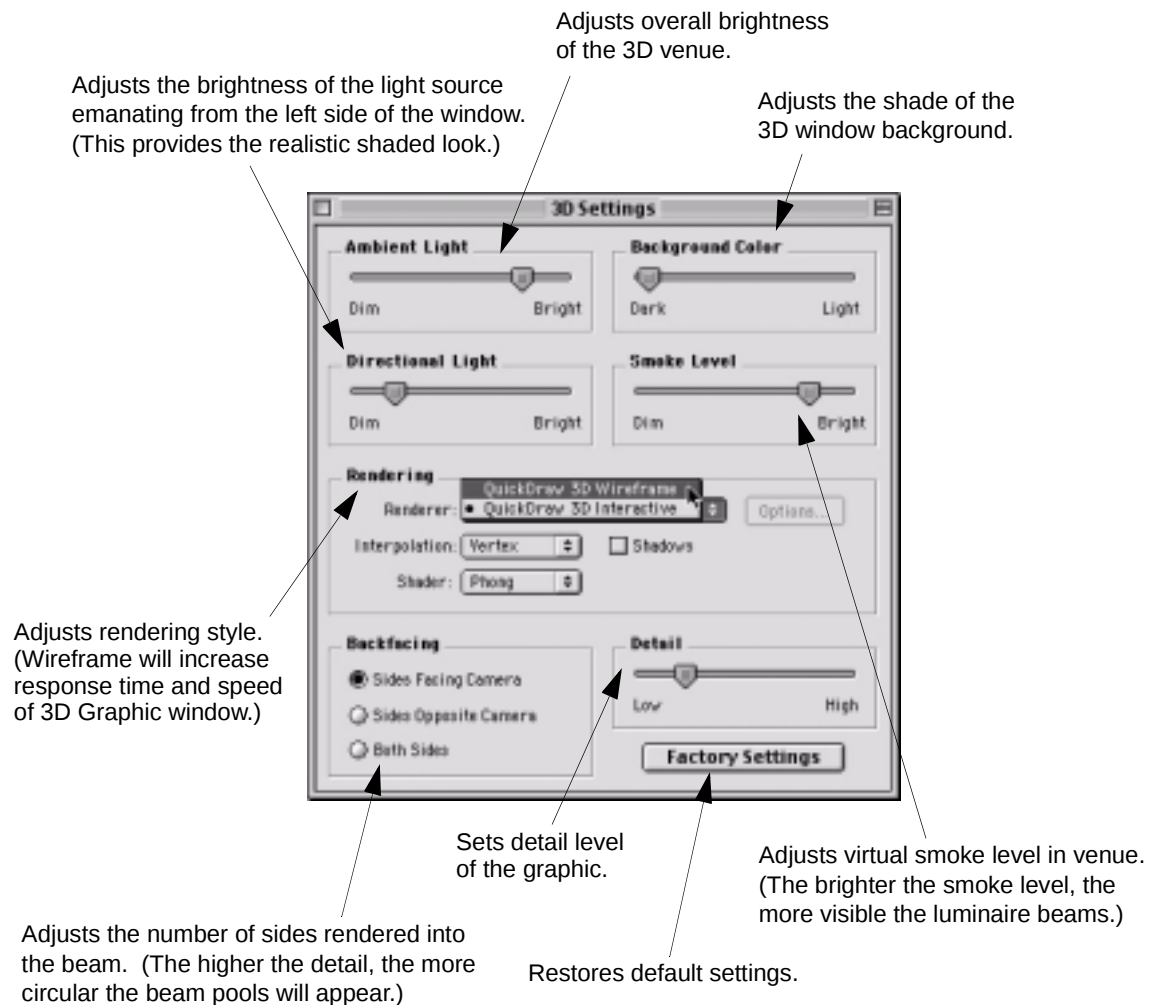

**Note:** Rendered graphics require more memory and may slow down response time depending on how many rendering options are currently active.

# Live/Preview Mode

---

## Overview



The 3D Graphic display, when used in combination with the console's Preview Mode, is a powerful tool for previewing cues and manual control moves without actually executing them on stage.

As mentioned in Chapter 1 of this manual, the console has two special modes: Live and Preview.

The Live Mode is used for live editing. While the [Live] button is selected, any manual control actions or event recalls (cues, effects, dynamic states, etc.) will be executed, in real time, on stage.



The Preview Mode is used for preview editing. While the [Preview] button is selected, any manual control actions or event recalls are stored to the appropriate luminaires, but are not executed on stage. They are, however, visible in the 3D Graphic and Luminaire Status windows.

An indication of the current mode is displayed just above the button bar at the bottom of the online display screen.

Live/Preview Mode Indicator

|   |              |               |          |           |                   |             |
|---|--------------|---------------|----------|-----------|-------------------|-------------|
| P | Your Show    | Patch On      |          | Live      | Console 1 On Line |             |
|   | <u>Setup</u> | System Config | Settings | Plan View | Patch             | 3D Location |

### Guidelines:

- The submasters are not affected by the Live or Preview Mode selection.
- Any active events on a submaster will still execute normally when Preview is selected.

---

## Using Preview Mode

This feature will allow you to continue to play back a show, while setting up a new look which can then be saved as a cue. The Preview Mode would also allow you to step through the Cue Sheet in order to preview cues in the 3D Graphic or Luminaire Status windows.

### To use Preview Mode:



- Step 1. Press [Preview]. (Any events currently active in a submaster will continue to execute.)
- Step 2. Open 3D Graphic window and/or Luminaire Status windows as required.
- Step 3. Select channels.
- Step 4. Make manual control changes or step through the Cue Sheet. Actions will be reflected in 3D Graphic and Luminaire Status windows.
- Step 5. If required, store changes as a cue.
- Step 6. Press [Live] to return to Live Mode.

*(This page intentionally blank.)*

# CHAPTER 16.

---

## Show Maintenance

This chapter provides instructions for managing show files, importing/exporting patch data, updating the operating system, using online diagnostics, and for entering the console's off-line diagnostic mode.

- **Data Management**
- **Updating Profiles**
- **On-Line Diagnostics**
- **Off-Line Diagnostics**

*(This page intentionally blank.)*

# Data Management


## Show File Manager

Show files can be opened, duplicated, renamed, deleted, and backed up to a Zip® disk using the Show File Manager window. Only new show files or files resident on the console's hard drive can be opened directly. In order to open a show file from either a Zip® disk or CD, it must first be copied to the console's hard drive. Once on the hard drive, any show file may be opened, modified, and then copied back to the Zip® drive for back up and storage purposes.

When the system is powered up, the Virtuoso operating system will automatically open the last show file used on the console, unless one is unavailable, in which case a new show file is automatically opened.

### Open New Show File

- Step 1. At File menu, select Show File Manager. Window will open.
- Step 2. Click New icon button to launch a new show file.

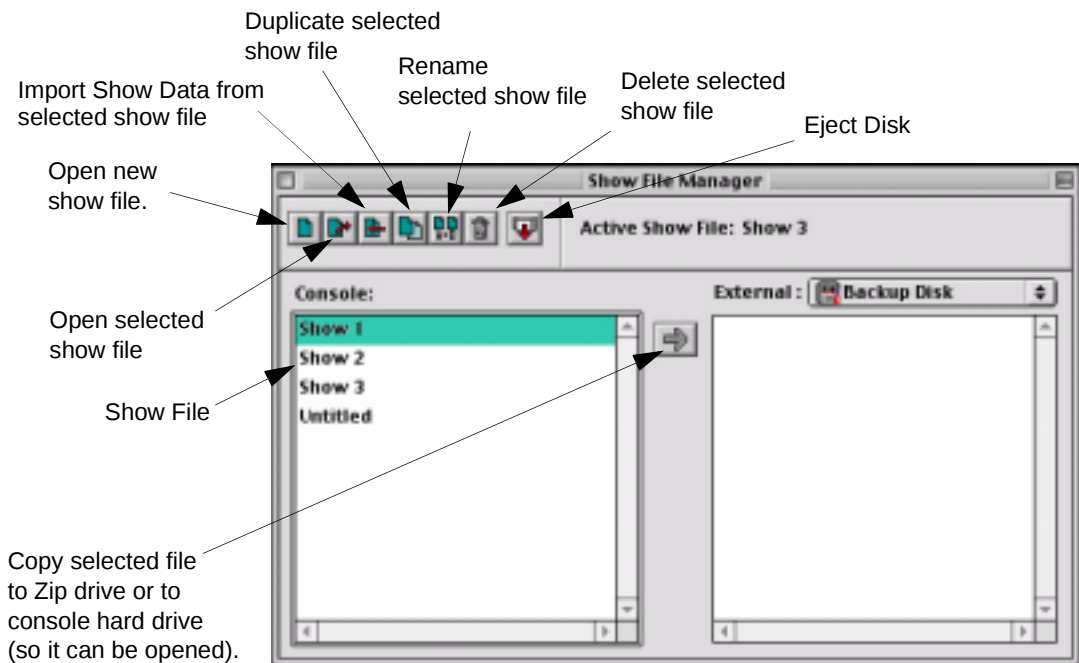

## Open Existing Show File

**Note:** To open a show file from a portable disk, you must first copy it to the console's hard drive.

Step 1. At File menu, select Show File Manager. Window will open.

Step 2. Open show file:

- For show files resident on console's hard drive (files listed in left column), select required show file and click Open icon button to launch.
- For show files stored on a portable disk (available in right column), select file and click left arrow button to copy to console's hard drive. It will now be listed in left column. Select show file and click Open icon button to launch.



## Rename, Duplicate, or Delete Show File

Only show files resident on the console's hard drive can be renamed, duplicated, or deleted.

Step 1. At File menu, select Show File Manager.

Step 2. Select required show file.

Step 3. Click Rename, Duplicate, or Delete icon button as required. (Delete will require a confirmation.)



## Backup Show File to Disk

Any show file resident on the console's hard drive can be copied to a Zip® disk for back up or storage.

Step 1. At File menu, select Show File Manager.

Step 2. At left column, select show file to be copied.


Step 3. At right column, select required disk and folder. Click right arrow button to copy file.

## Import Show Data

Data can be imported from one show file to another.

### To import show data:

- Step 1. Open a show file (to import data *into*).
- Step 2. At File menu, select Show File Manager.
- Step 3. Select required show file to import *from*.
- Step 4. Click Import icon. Import Show Data window will open.
- Step 5. Select data you wish to import by clicking boxes. Click OK.

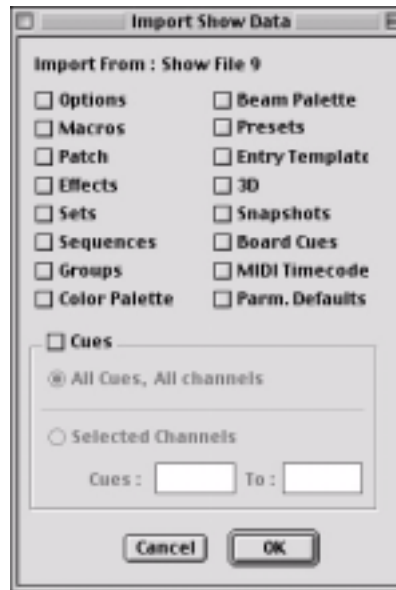


## Save A Copy

A copy of your show file can be saved to the hard drive.

### To save a copy:

- Step 1. At File menu, select Save A Copy... Save As window will open.
- Step 2. Name your file or use default name.
- Step 3. Click Save.

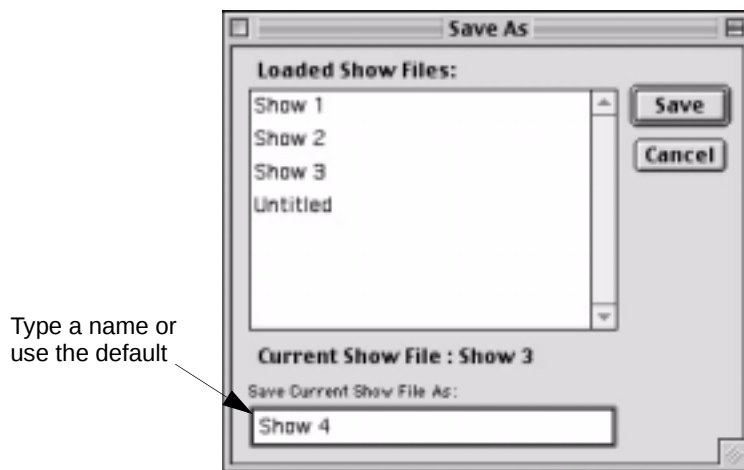

## Export Patch

Patch data can be exported as text information from a show file for import into other show files or programs.

### To export patch data:

- Step 1. At Patch menu, select Export Patch... File management window will open.
- Step 2. Select a location and name your patch file.
- Step 3. Click Save.



---

## Import Patch

Patch data exported from a show file may be imported into a different show file. The patch data file can be resident on the hard drive or portable disk.

---

**Note:** The Import Patch option will only be available when patch Enable Editing is selected.

---

### To import patch data:

- Step 1. At Patch menu, select Enable Editing.
- Step 2. At Patch menu, select Import Patch... File management window will open.
- Step 3. Locate and select required file.
- Step 4. Click Choose.




---

**Note:** For instructions on importing a 3D venue, refer to [“Importing a Venue” on page 256](#).

---

## Console Log

A console log containing information such as calibration failure detections, programming data, cue repair summaries, and save reports is available for each console. Messages posted in the console's Log Message box are the same messages collected in this log.

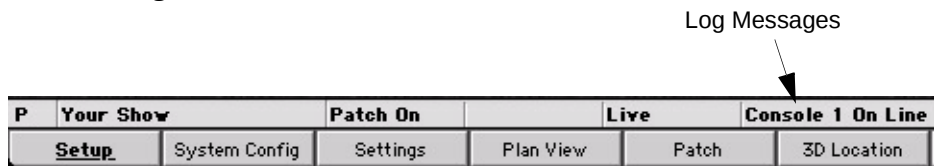


**Note:** The log has a limit of 1Mb. After it is full, messages will no longer be logged, although they will still appear in the information bar as they occur. Press Clear to empty log so that new messages will be displayed.

### Using Log window:

- At Setup menu, select Log.
- Click check boxes to display desired information.
- Press Clear to clear all messages.



Specifies which types of information will be displayed.

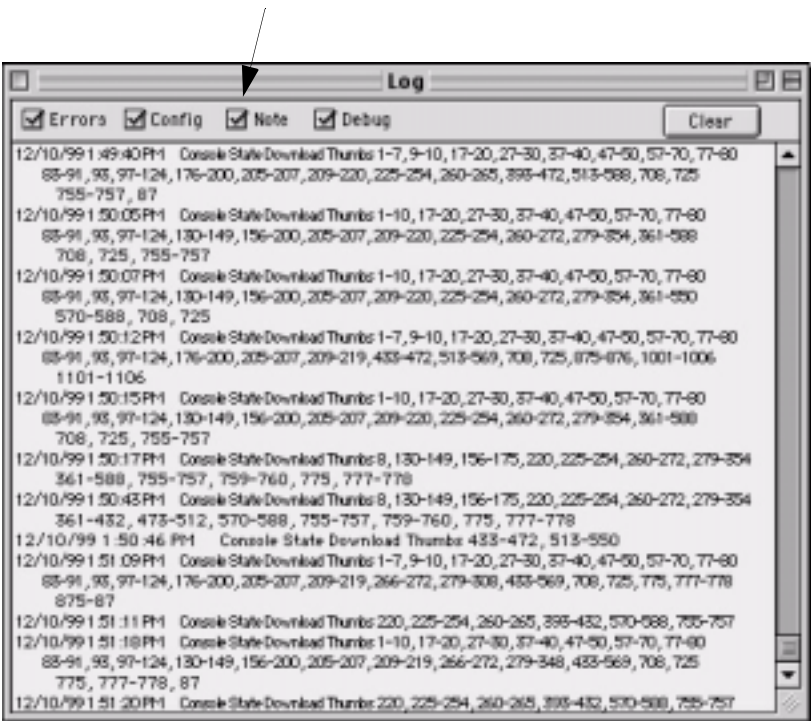

## Printing

The console software comes with a print driver to accommodate an Epson® Stylus Color InkJet printer. However, any Macintosh-compatible printer can be connected and used to print data from these windows:

- Cue Sheet
- Cue Data
- Color Palette Data\*
- Patch
- Macros\*
- Console Log
- Board Cue Sheet\*
- Preset Data\*
- Beam Palette Data\*
- Plan View
- Snapshots
- 3D Location

\* Allows extra print setup options. See below.

### Important Notes

- In order to compact the information, the software will reduce all text font sizes to 7 point.
- The Plan View will be reduced so that it always prints on a single page.

### Print Setup

The Print window dialogue is a standard Macintosh interface which allows you to configure the printing options. In the case of the special windows noted above which have two sections, the Virtuoso software adds four extra options. (Depending on the printer, these options may be displayed in a slightly different manner in the Print window but they will always be available.) These options are: Summary, Current Data, All Data, and Data “From...To.” (Refer to Print window graphic on next page.)

#### For Example:

##### Summary -

Would print a list of all Macros in order, but no Step data would be included.

##### All Data -


Would print the Macro number and all Step data for every Macro (one per page).

##### Data “From...To” -

Would print all data for the specified range.


##### Current Data -

Would print the Step data for the currently selected Macro.

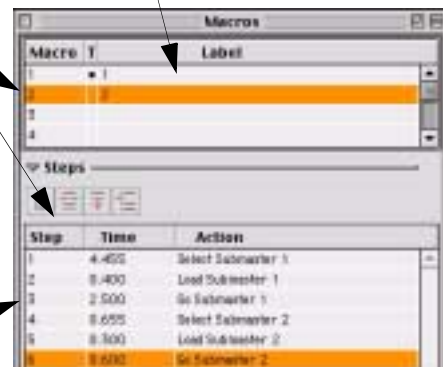

**To print:**

- Step 1. Ensure that window you wish to print data from is open and currently active.
- Step 2. At File menu, select Print...
- Step 3. At Print window, configure options. If printing from a special Virtuoso window (see previous page), select which data you wish to print.
- Step 4. Click Print.

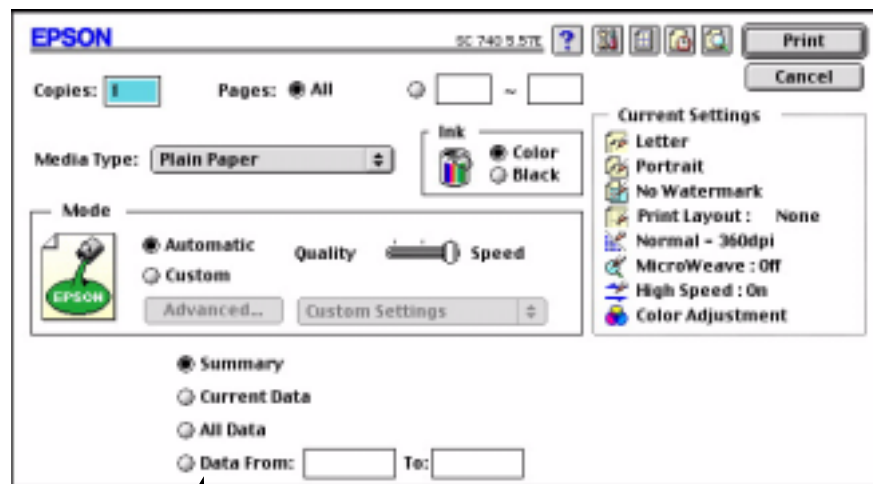

Special Virtuoso window options. These are available for specific windows (refer to previous page).

# Updating Profiles

## Overview

As mentioned in the patch instructions covered in Chapter 2, the Virtuoso console utilizes a resource called a Profile to properly map control of luminaires. The Profiles are accessed in the Luminaire Patch windows. (Refer to [“Patch” on page 25.](#))

Profiles



The Profiles are stored in a Virtuoso system folder which is accessed each time a new show file is opened. It is possible to import new Profiles and to update older show files with them if desired. When a new show file is opened, it will automatically contain all Profiles currently resident in the Profiles folder.

**Note:** For instructions on obtaining additional profiles, refer to [“Obtaining Additional DMX Profiles” on page 2.](#)

## Importing Profiles

Before Profiles will be available to show files, they must be loaded into the console Profile folder.

### Import Profiles:

- Step 1. Insert Zip® disk containing new Profile(s) into console Zip® drive.
- Step 2. At File menu, select Import Profiles... Load Profiles window will open.



- Step 3. Locate Profiles on your Zip® disk, select, and click Open. The Profile(s) will be copied to the console Profile folder.



## Updating Show File Profiles

In order to protect existing show files, the console does not automatically update them with any newly imported Profiles. If you desire to update an existing show file with a new profile(s), this can be done using the Update Profiles function.

**Note:** To ensure that new profiles are properly installed, reset NIF and/or UDM units after profiles are updated.

### Update Profiles:

- Step 1. At File menu, select Show File Manager.
- Step 2. Select show file to open and click on Open icon.
- Step 3. At File menu, select Update Profiles. Profiles will be compared. If any are significantly different, a warning window will appear. Click Update to replace old version of Profile (this will destroy show data in some cases). If you choose not to update, click Don't Update.
- Step 4. Restart NIF and/or UDM units as required.




# On-Line Diagnostics

## DMX Channel Tests

The DMX Diagnostics available in the DMX Setup window can be used to troubleshoot DMX patch problems. The diagnostic function allows you to send values directly to a specific DMX channel, bypassing all other console controls.

### Perform DMX Diagnostics:

- Step 1. At Patch or Setup menu, select DMX Setup. DMX Setup window will open.
- Step 2. To see channel assignment for a DMX universe, use cursor to select universe (A thru Z). Channel assignments associated with that universe will appear in DMX Channel Assignment grid.
- Step 3. To test a specific channel, at DMX Diagnostics section of window, enter channel number in Channel field and a value (for example, 100) in Value field. Click Send to send value directly to channel. Watch for appropriate response in fixture.
- Step 4. To step through channels, enter starting channel in Channel field and a value. Click Dimmer Check and verify response in fixture. Click Dimmer Check again to check next channel (channel number in Channel field will increment by one each time).
- Step 5. Click Clear Diagnostics to set all channels back to 0 value.

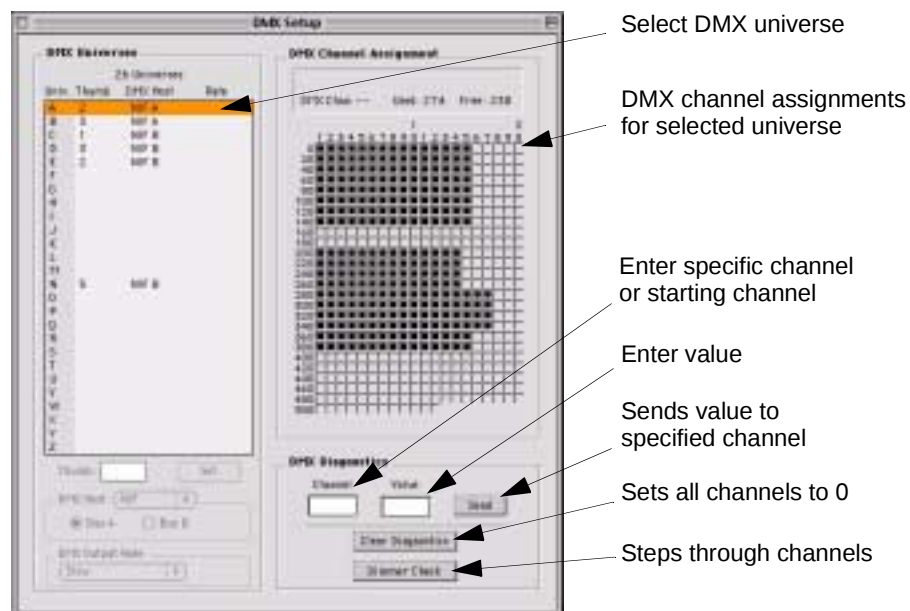

## Error Log

An error log for each device is displayed in its Device Info window.

### To access Device Info window:


- At System Configuration window, double-click on a device's icon. (Refer to [“System Configuration Window”](#) on page 22.)

### To clear error indicators for selected device:

- At Device Info window for specified device, click Clear Error.

### To clear all error indicators:

- At Special menu, select Clear Status Errors.

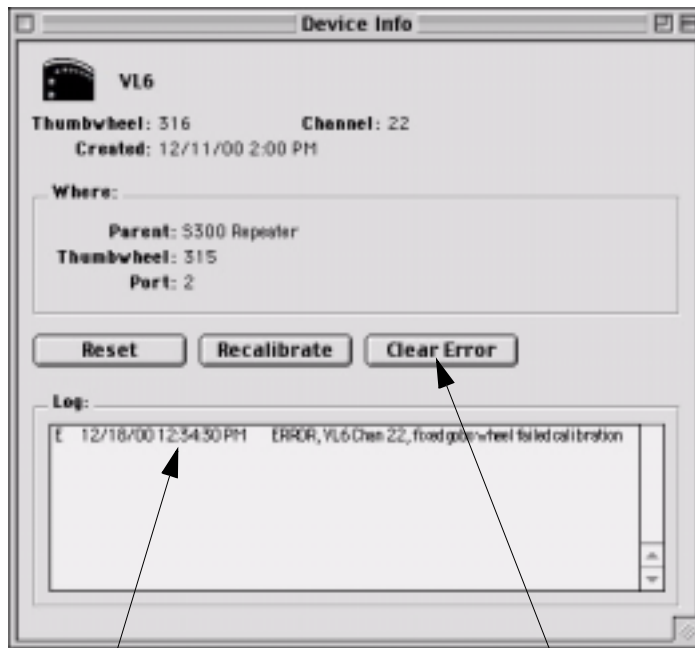

Error Log

Clears error indicators  
for selected device only



# Off-Line Diagnostics

---

## Overview

Virtuoso off-line diagnostics allow you to test the console hardware in order to identify faulty components. These tests will not affect any of the data in your luminaires.



---

**CAUTION:** These diagnostics are not intended to be used during performance conditions as they will interrupt system operation.

---

Once the console is in diagnostic mode, the top select display will list all test options and the submasters display window will provide a graphic of the console front panel in order to register button presses for the purpose of testing. The diagnostic mode provides the following tests and functions:

- **Display Test** - illuminates all front panel displays and touch screen to an equal intensity, and allows stepping through four levels for testing. The four level are as follows:
  1. Bright
  2. Dimmed
  3. Mid
  4. Out
- **SRAM Test** - checks console RAM and reports any problems.
- **LEDs On** - turns on all front panel button LEDs.
- **Switch Latch** - toggles LED testing function so that pressing buttons either turns LEDs on or off. (Either way, any button presses will be highlighted in the console graphic in the Submasters display.)
- **FireWire Test** - tests FireWire connection and reports any problems.
- **Erase Flash** - erases console flash.
- **Reset** - returns console to normal state of operation.

---


## Diagnostic Mode Operation

Use the following procedures and guideline to test console functions.

### To power up console in diagnostic mode:



- Step 1. At rear of console, turn off power switch.
- Step 2. Press and hold [Reset] (top left corner of console), while turning on power switch. Console will power up in diagnostic mode.

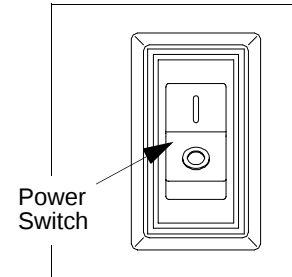

### To use diagnostics:

- To execute a test or function, press [Bank/Function] along with corresponding bank button of test (select buttons 1-7).
- For Display Test, press any key five times to cycle through intensity levels and return to starting state.
- While in diagnostic mode, turning encoders and moving faders will register values in Submasters display window.

# CHAPTER 17.

---

## Show Control by External Devices

This chapter provides instructions for controlling shows by use of an external MIDI/SMPTE or switch closure trigger device.

- **Concepts**
- **MIDI Notes**
- **MIDI/SMPTE Timecode**

*(This page intentionally blank.)*

# Concepts

---

## About MIDI/SMPTE

The console is able to accept two forms of external control:

- MIDI Notes
- Timecode (includes both MIDI and SMPTE)

MIDI (Musical Instrument Digital Interface) is a communication protocol that allows electronic musical instruments to interact with each other. Much in the same way that two computers communicate via modems, two electronic instruments can communicate via MIDI. At its most basic structure, MIDI information tells a synthesizer when to start and stop playing a specific note. Since the basis for MIDI communication is the byte, MIDI can also be used as an interface between musical instruments and computers, or in this case a computer-based lighting console. In the same way that MIDI can command a note to start or stop, Virtuoso console functions such as board cue execution can be initiated by a connected MIDI-compatible device. MIDI Notes are mapped console macros while MIDI timecode is recorded as a script.


SMPTE timecode is a communication protocol standard set forth by the Society of Motion Picture and Television Engineers for handling of audio which is associated with motion images. This is essentially the same as MIDI timecode except that it is analog while MIDI timecode is digital. However, once either of these signals enters the console they are stored as digital timecode scripts.

---

**Note:** Only one form of timecode - either MIDI or SMPTE - can be input at one time.

---

## Input Options

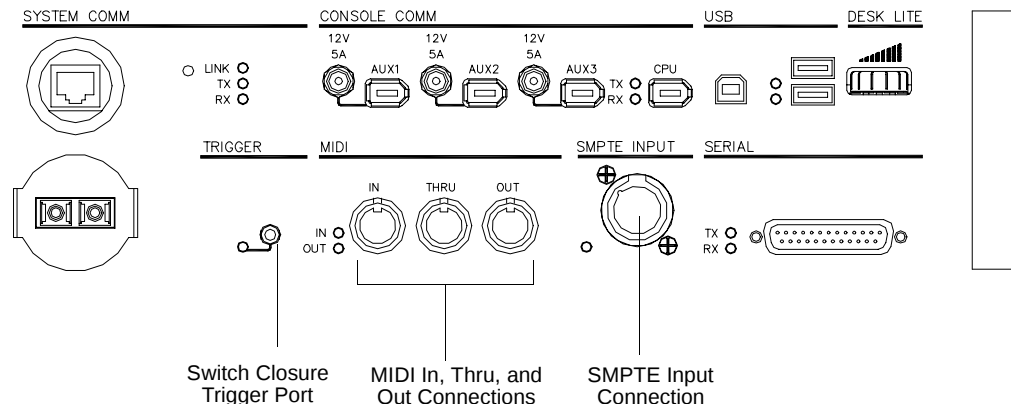

### MIDI Input

MIDI In, Thru, and Out connections are available on the console's rear panel which support any standard MIDI device connections. The associated MIDI data LEDs will light when MIDI data are traveling through the MIDI port, however, the LED merely indicates the presence of MIDI traffic, not that the traffic is necessarily valid MIDI traffic.

 
### SMPTE Input

An external trigger port is also available on the console rear panel which supports the input of SMPTE time code.

### Switch Closure Trigger Input

The switch closure trigger port is wired to the Board Control [Go] button. Closing the switch by any compatible device is the equivalent of pressing this button.

The switch closure trigger port will accept a 1/8" mini mono phone plug which can be purchased from Vari-Lite or other electronics outlets (refer to ["Accessories List" on page 7](#) for part numbers).



# MIDI Notes

## Note Mapping

The console accepts MIDI note messages. Each MIDI note is mapped to a single macro for the first 127 macros. When the console receives the note, it will execute the corresponding macro.

**Table 14-1: MIDI Note Mapping**

| MIDI Note | Macro No. | MIDI Note | Macro No. |
|-----------|-----------|-----------|-----------|
| C#-2      | 1         | F0        | 29        |
| D-2       | 2         | F#0       | 30        |
| Eb-2      | 3         | G0        | 31        |
| E-2       | 4         | G#0       | 32        |
| F-2       | 5         | A0        | 33        |
| F#-2      | 6         | Bb0       | 34        |
| G-2       | 7         | B0        | 35        |
| G#-2      | 8         | C1        | 36        |
| A-2       | 9         | C#1       | 37        |
| Bb-2      | 10        | D1        | 38        |
| B-2       | 11        | Eb1       | 39        |
| C-1       | 12        | E1        | 40        |
| C#-1      | 13        | F1        | 41        |
| D-1       | 14        | F#1       | 42        |
| Eb-1      | 15        | G1        | 43        |
| E-1       | 16        | G#1       | 44        |
| F-1       | 17        | A1        | 45        |
| F#-1      | 18        | Bb1       | 46        |
| G-1       | 19        | B1        | 47        |
| G#-1      | 20        | C2        | 48        |
| A-1       | 21        | C#2       | 49        |
| Bb-1      | 22        | D2        | 50        |
| B-1       | 23        | Eb2       | 51        |
| C0        | 24        | E2        | 52        |
| C#0       | 25        | F2        | 53        |
| D0        | 26        | F#2       | 54        |
| Eb0       | 27        | G2        | 55        |
| E0        | 28        | G#2       | 56        |

**Table 14-1: MIDI Note Mapping (Continued)**

| <b>MIDI Note</b> | <b>Macro No.</b> | <b>MIDI Note</b> | <b>Macro No.</b> |
|------------------|------------------|------------------|------------------|
| A2               | 57               | A5               | 93               |
| Bb2              | 58               | Bb5              | 94               |
| B2               | 59               | B5               | 95               |
| C3               | 60               | C6               | 96               |
| C#3              | 61               | C#6              | 97               |
| D3               | 62               | D6               | 98               |
| Eb3              | 63               | Eb6              | 99               |
| E3               | 64               | E6               | 100              |
| F3               | 65               | F6               | 101              |
| F#3              | 66               | F#6              | 102              |
| G3               | 67               | G6               | 103              |
| G#3              | 68               | G#6              | 104              |
| A3               | 69               | A7               | 105              |
| Bb3              | 70               | Bb7              | 106              |
| B3               | 71               | B7               | 107              |
| C4               | 72               | C7               | 108              |
| C#4              | 73               | C#7              | 109              |
| D4               | 74               | D7               | 110              |
| Eb4              | 75               | Eb7              | 111              |
| E4               | 76               | E7               | 112              |
| F4               | 77               | F7               | 113              |
| F#4              | 78               | F#7              | 114              |
| G4               | 79               | G7               | 115              |
| G#4              | 80               | G#7              | 116              |
| A4               | 81               | A8               | 117              |
| Bb4              | 82               | Bb8              | 118              |
| B4               | 83               | B8               | 119              |
| C5               | 84               | C8               | 120              |
| C#5              | 85               | C#8              | 121              |
| D5               | 86               | D8               | 122              |
| Eb5              | 87               | Eb8              | 123              |
| E5               | 88               | E8               | 124              |
| F5               | 89               | F8               | 125              |
| F#5              | 90               | F#8              | 126              |
| G5               | 91               | G8               | 127              |
| G#5              | 92               |                  |                  |

# MIDI/SMPTE Timecode

## Overview


The console will also accept MIDI/SMPTE timecode messages, which can be generated internally or from an external source. The messages generated by the internal timecode generator can be run independently or in sync with an external timecode. If the external timecode source drops out, the internally synchronized timecode allows the MIDI operation to continue. When the internal clock is selected, any external timecode will be ignored.

**Note:** Only one form of timecode - either MIDI or SMPTE - can be input at one time.

Timecode is programmed and played back using the Timecode window. During a record operation, the console will map all appropriate front panel actions to the registered timecode as those events take place. Unless specified otherwise, the internal clock will begin counting at 00:00:00:00.

Timecode has four fields, 00:00:00:00 (or AA:BB:CC:DD):

- AA - hours (00-24)
- BB = minutes (00 through 59)
- CC = seconds (00 through 59)
- DD - frames (00 through 29)

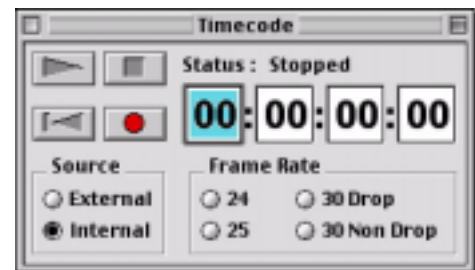

## Synchronizing Protocol

To prevent unexpected interruptions in the MIDI execution of events, a synchronizing protocol is built into the system. This feature can be turned off and on using the Timecode Autoswitch checkbox at the Settings window (refer to [“Settings Window” on page 245](#)). During normal operations, the system will wait for each timecode frame before performing the required calculations for each time period. If the incoming timecode arrives approximately on time, and the frame number agrees with the expected time from the system internal clock, the system remains synchronized with the external timecode. If the system begins receiving frames which are outside of the above timing tolerance, the following occurs:

- If the Timecode Autoswitch is enabled and the system is synchronized awaiting the next frame, and the expected frame is not received within 2 frames, the board will begin running on its internal time clock.


- If the Timecode Autoswitch is enabled, the system will continue executing events in the normal sequence using its internal time clock, until the system can resync. At that point, the external time clock will take over again and the internal clock will sync to those values.
- If the Timecode Autoswitch is disabled, the system will stop executing events until timecode is resynced. After resyncing, execution of events will resume.

## Recording

Timecode is recorded using the Timecode window. The timecode and corresponding event steps are stored in a Timecode Script which can be viewed and edited using the Timecode Scripts window (refer to next page). Unless a different script number is selected in the window, the script will be stored as Number 1 by default. To record timecode into a script other than 1, select its number at the Timecode Scripts window.

### Record Timecode:

- Step 1. At Operation menu, select Time Code. Timecode window will open.
- Step 2. Select External or Internal.
- Step 3. Select a frame rate.
- Step 4. Press record button to begin timed recording. Clock will start counting.
- Step 5. Execute cues.
- Step 6. Press stop button.

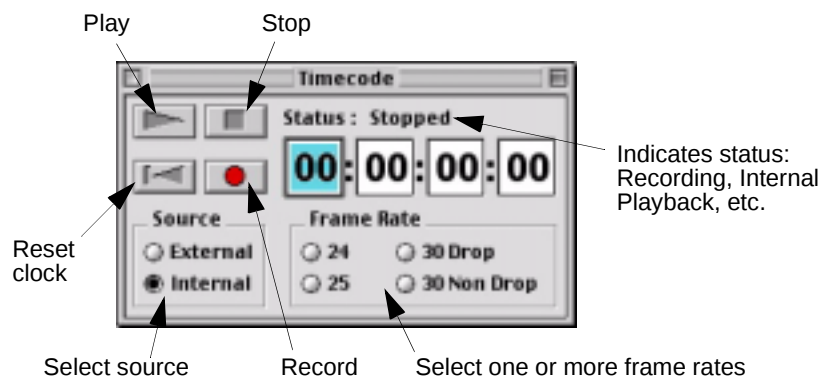


## Timecode Scripts Window

The content of timecode scripts can be viewed in the Timecode Scripts window. The Delete, Replace, Punch In, and Insert features allow editing so that an entire script does not have to be re-recorded in order to make a change. The Time column may also be edited. To allow creation of multiple scripts, only the selected script will be run.

**Note:** The Punch In feature bases the new steps/events on the previous timecode and does not record based on external timecode. Therefore, it may be necessary to edit the times manually once the new section is added.

- To open, at Data menu, select Timecode Scripts.
- Click on Steps drop-down arrow to view content of steps.
- Edit as necessary.

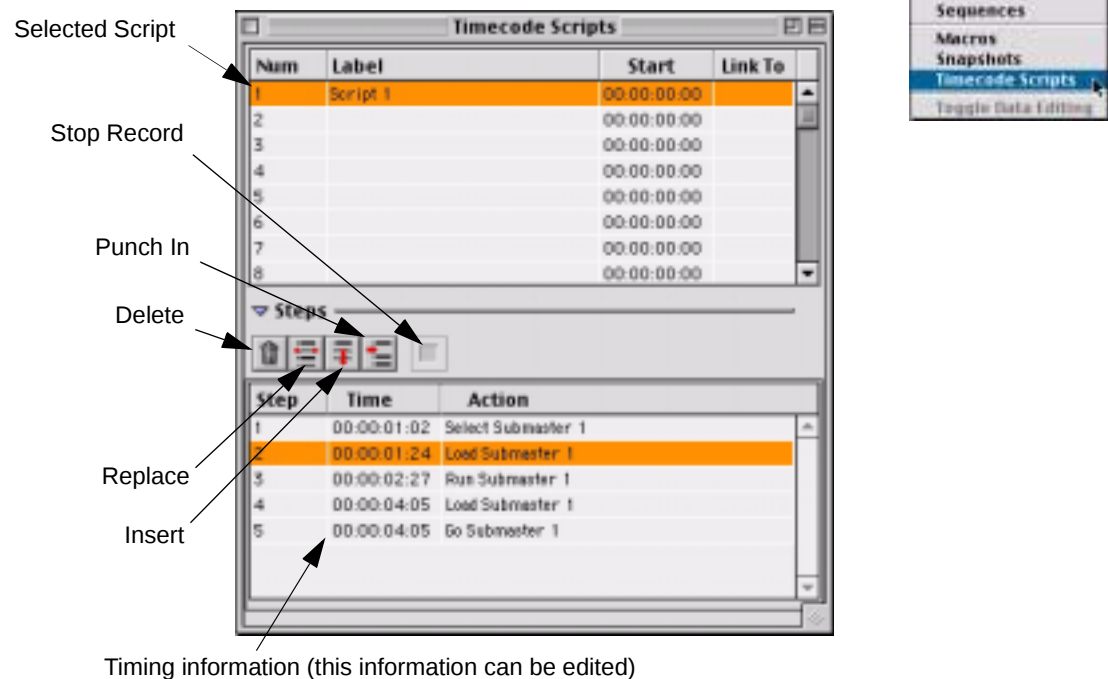

### Delete a step:

- Step 1. Using trackpad, select step(s) to be deleted.
- Step 2. Click on "trash can" icon. Step(s) will be removed.

### Replace a step:

- Step 1. Using trackpad, select step to be replaced.
- Step 2. Click "replace" icon.
- Step 3. At desk, perform replacement action. (The first action taken will replace the selected step and editing will end.)

**Replace all steps from Step X on (through remainder of script):**

- Step 1. Using trackpad, select last "good" step. (Steps after this selection will be replaced.)
- Step 2. Click "punch in" icon.
- Step 3. At desk, perform new series of actions.
- Step 4. Click "Stop Record" icon.

**Insert new step(s):**

- Step 1. Using trackpad, select step prior to where you wish to insert new step.
- Step 2. Click "insert" icon.
- Step 3. At desk, perform new action(s).
- Step 4. Click "Stop Record" icon.

# APPENDIX A.

---

## Tutorial

---

### Overview

The following tutorial is designed to illustrate the basic steps required to create a new show file, patch some luminaires, create a venue, store cues/effects and play them back.

---

**Note:** There are often multiple methods for performing many of the actions covered in this tutorial. However, only one example is provided in order to streamline the procedures. In addition, most stored items can be labeled, however labeling is not covered in this tutorial for the same reason.

---

The following sample files have been included in the console software for use with this tutorial.

- Show file identical to the one created in this tutorial (for comparison).
- 2D and 3D drawing files for importing into the show file created in this tutorial.
- Patch file as an example.


---

## Basic Tutorial


### Create a new show file:

*Refer to Ch. 17 for more detailed instructions.*

1. At File menu, select Show File Manager.
2. Open new show file by clicking New File icon.

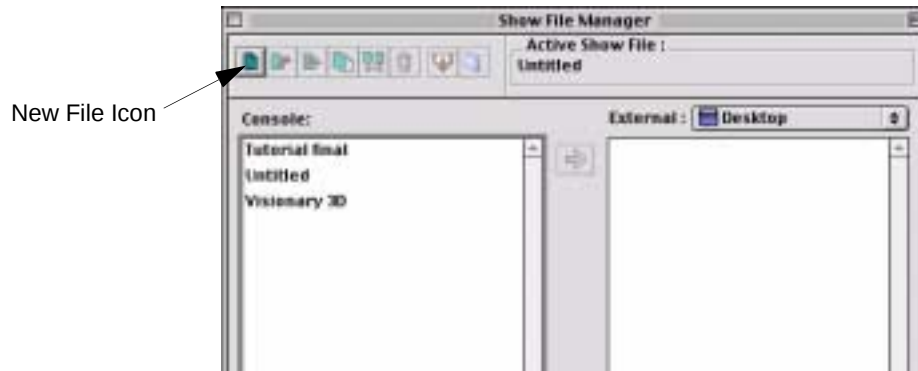

3. Enter Name window will open. Enter a name for your show file and click OK.
4. Program will initialize and return to the Show File Manager window. Your show file will now appear in the Active Show File box.

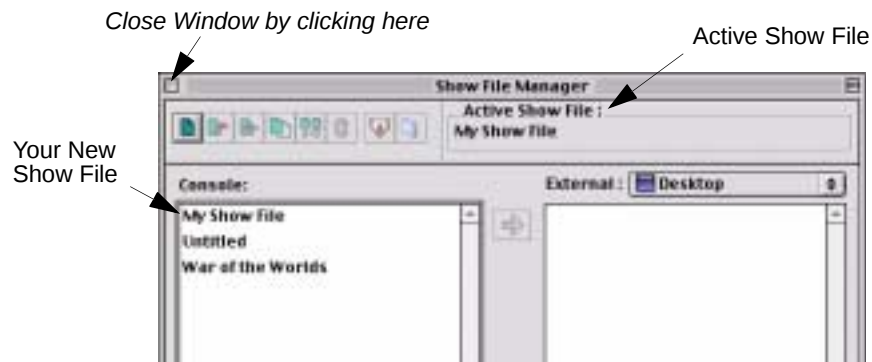


5. Close window by clicking box in upper left corner.

**Create a Patch:**

*Refer to Ch. 2 for more detailed instructions.*

1. At Operation menu, select Plan View. (Plan View window will open and 2D Display menu will become available on menu bar.)

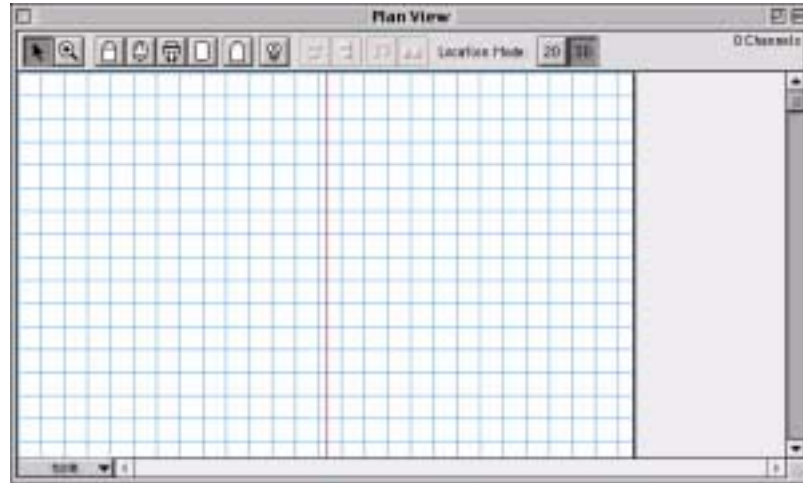


2. At Patch menu, select Enable Editing. Icon bar and grid will appear in Plan View window and Patch menu selection will change to "Disable Editing." "Save Editing" option will also be activated.
3. Import a 2D background picture as follows:
  - a. At File menu, select Import 2D Background...
  - b. At Open window, locate Drawing Files folder.



- c. Select *studio\_2d.dwg* and click Choose.

- d. Import Options window will open. Select inches or cm and click OK.  
(Truss graphic will appear in Plan View window.)

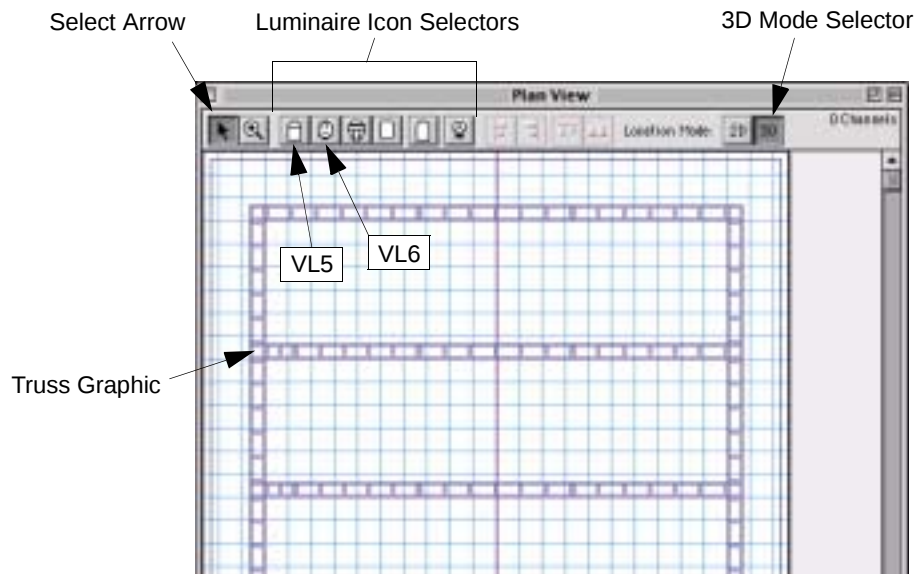

---

**Note:** In order for the patched luminaires to appear correctly in the 3D graphic window, luminaire icons should be placed while Plan View is in 3D mode (default).

---


4. At Plan View window, click on VL5 luminaire icon selector. Point cursor at desired location on plan view truss and click to place icon.

---


**Note:** Depending on the type of fixture being patched, a slightly different style patch window will be opened: VARI\*LITE, DMX, or Conventional. In this example, only the VARI\*LITE Luminaire Patch window is used.

---

5. Luminaire Patch window will open with default settings. For this tutorial we will use the default settings. Click **Save** to accept.

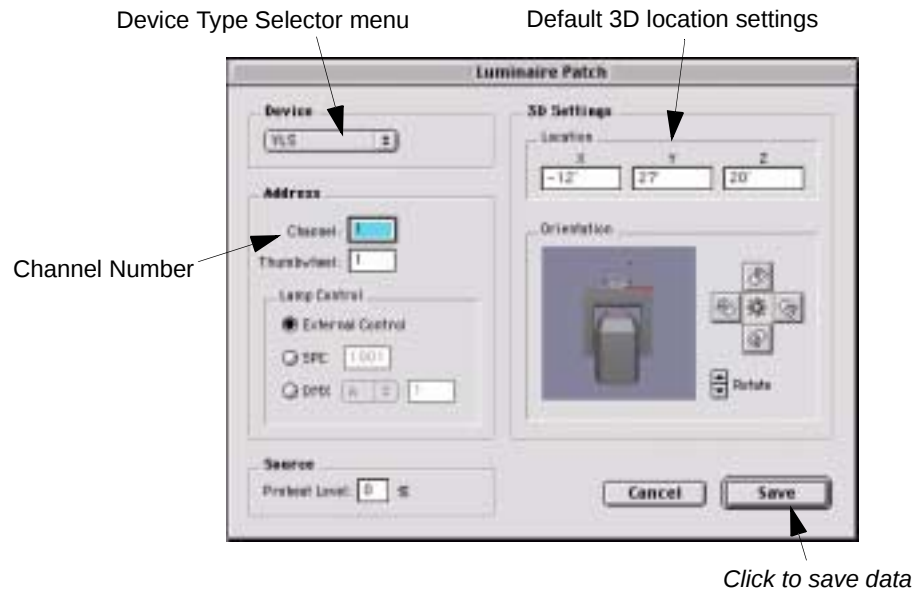

6. Repeat Steps 4 and 5, patching three VL5 luminaires and two VL6 luminaires (see screen capture below). Use default channel numbering so that these will correspond to channels 1-5.

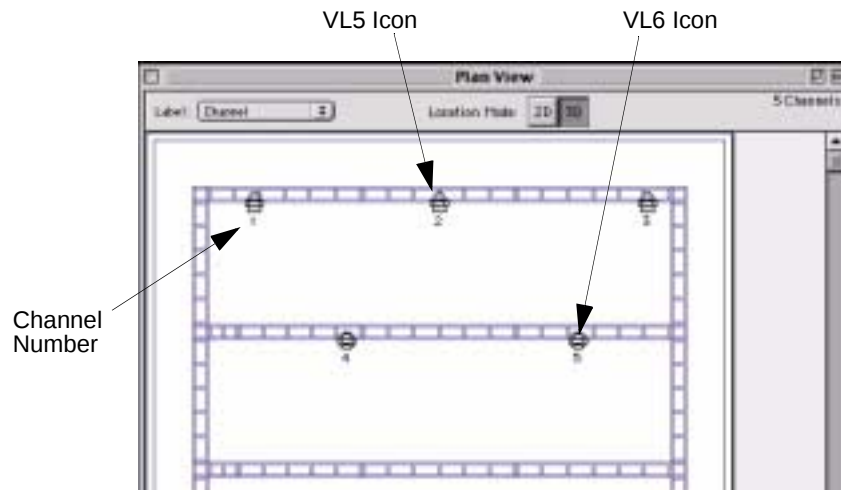

7. At Patch menu, select **Disable Editing**.
8. Save Patch Changes window will open. Click **Save**.


**Set up 3D Graphic window:**

*Refer to Ch. 16 for more detailed instructions.*

1. Import a venue as follows:
  - a. At File menu, select Import Venue.
  - b. At Open window, locate Drawing Files folder.
  - c. Select *studio\_3d.dwg* and click Choose.



- d. Import Options window will open. Select inches or cm and click OK.
2. At Operation menu, select 3D Graphic. 3D Graphic window will open. Venue graphic will be visible and your patched luminaires will appear on truss.

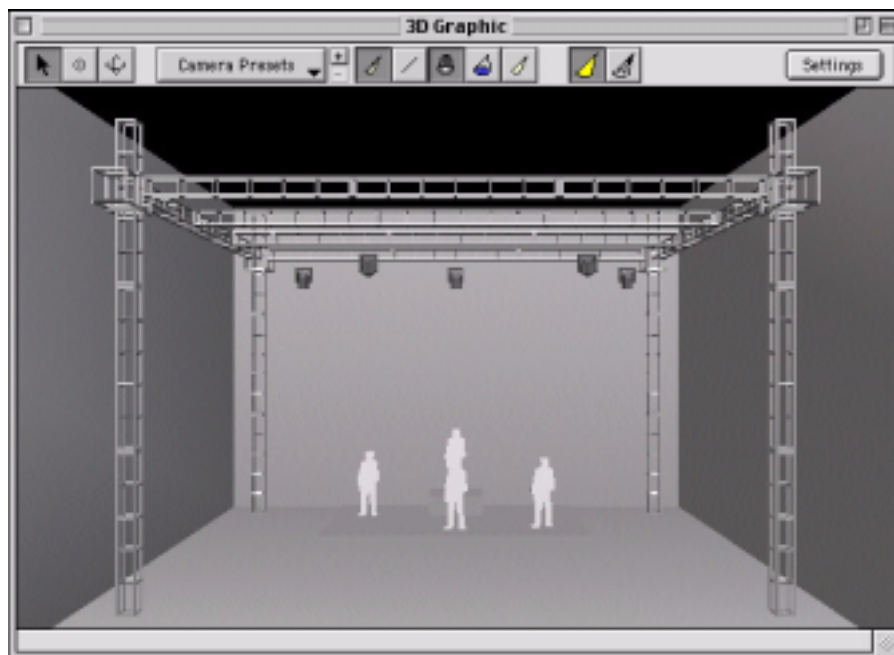


### Select channels and store as a group:

Refer to Ch. 3 and Ch. 4 for more detailed instructions.

1. At Panels menu, select Channel Select.



2. At Channel Select window, using cursor, select channels 1-5 by clicking inside appropriate boxes. Channel selections will also appear highlighted in 3D Graphic window.

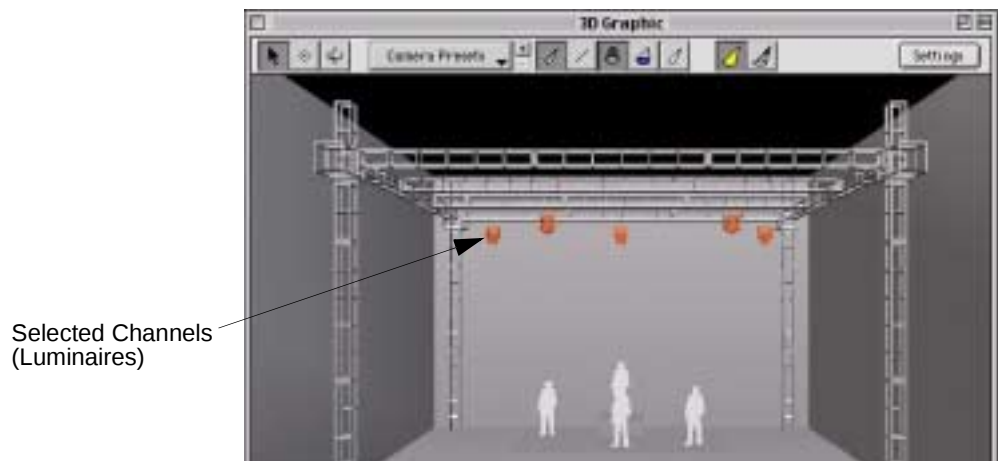


3. Store channels 1-5 as a group:
  - a. Press [F1]. (Store window will open.)
  - b. Using cursor, select Group. (Or press [G] at key-board.)
  - c. Enter "1" for the group number.
  - d. Click OK. Channels 1-5 are now stored as a Group 1 for future recall.





**Select group and apply intensity and color:**

1. To deselect group (for purposes of this tutorial), click somewhere inside 3D Graphic window. (Luminaires will now be deselected, turning from orange back to gray.)
2. At Panels menu, choose Select Displays. (Select Displays window will open.)
3. At Group section of window, click inside Group 1 box. Luminaires will now be highlighted again in 3D Graphic window.

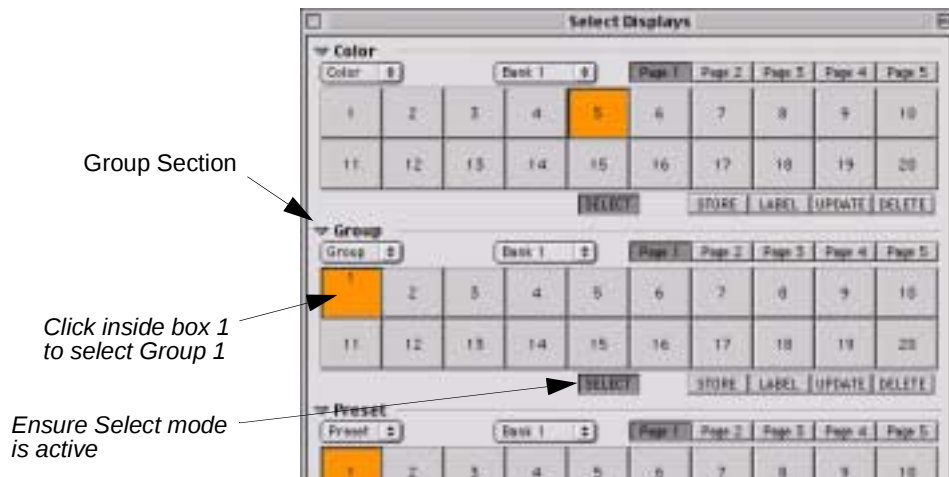


4. At Panels menu, select Encoders.
5. Encoders window will open. Using cursor, click Full to bring intensity to full (100%). Beams will now appear in 3D Graphic window.
6. At Select Displays window, at Color section, click inside Color 4 box. Beams will now have color in 3D Graphic window.

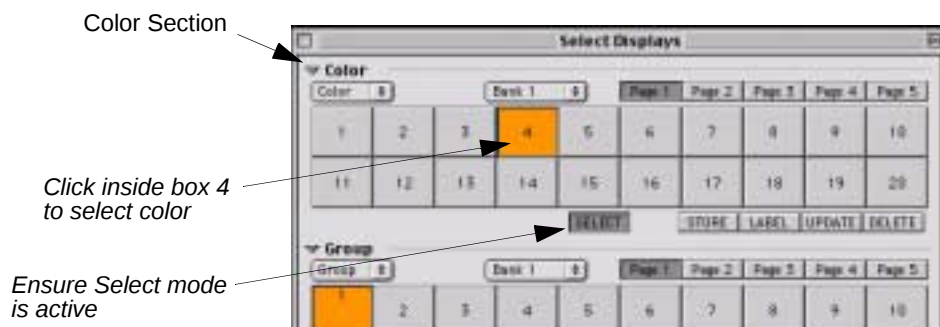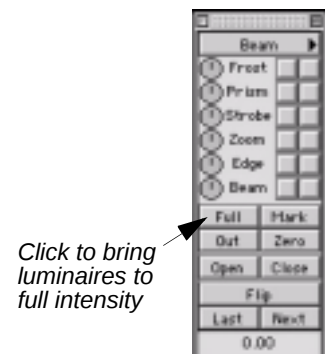

## Store two presets:


### 1. Store Preset 1 as follows:

- At Encoder window (with FOCUS selected), use Pan and Tilt encoders to move luminaires to new position.
- Press [F1]. (Store window will open.)
- Using cursor, select Preset. (Or press [P] at keyboard.)
- Enter "1" for the preset number.
- Click OK. Current 3D graphic look is now stored as Preset 1 for future recall.

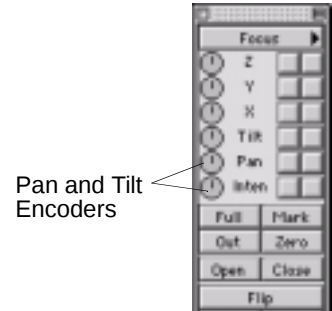


### 2. Store Preset 2 as follows:

- At encoder window, use Pan and Tilt encoders to move luminaires to new position.
- At Select Displays window, at Color section, click inside Color 8 box. Beams will now change color in 3D Graphic window.

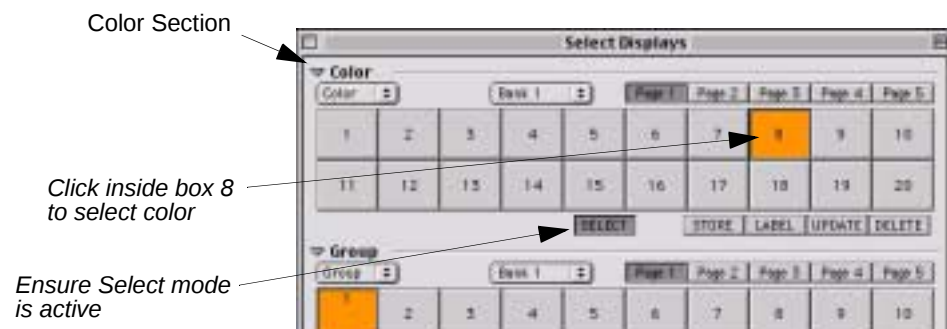

- Press [F1], select Preset, enter "2" for the new preset number and click OK. New 3D graphic look is now stored as Preset 2.


3. At Select Displays window, at Preset section, alternately click inside Preset 1 and Preset 2 boxes. Note the changes in 3D graphic window.

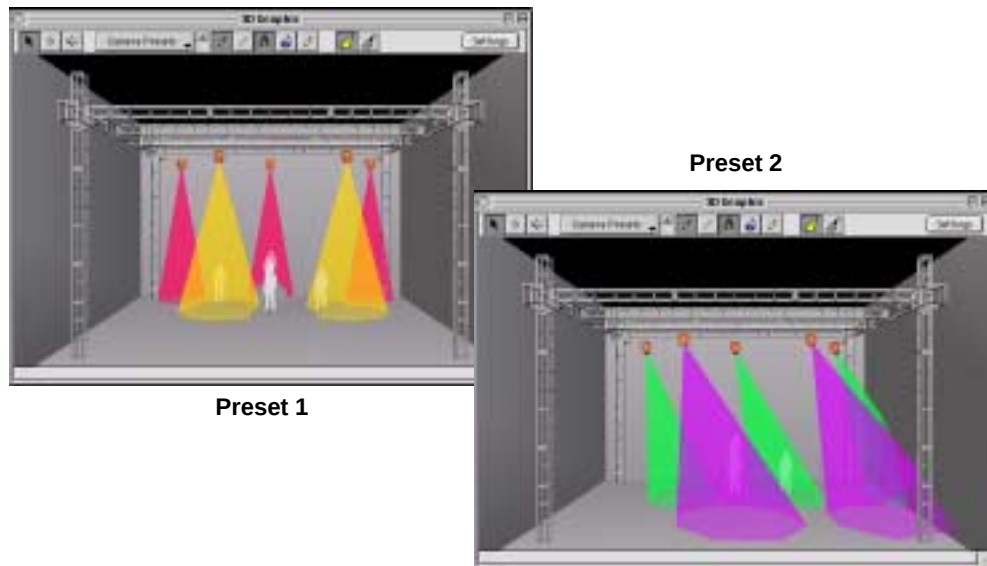

### Store two cues and play back:

*Refer to Ch. 6 for more detailed instructions.*


1. Store Cue 1 as follows:
  - a. At 3D Graphic window, click somewhere inside window to deselect luminaires.
  - b. While holding down keyboard [Shift] key, click on both VL6 luminaires to select.
  - c. At Encoders window, click Out. (Beams will go to zero - no intensity). Refer to screen captures on next page.
  - d. Press [F1].
  - e. Enter "1" as cue number.
  - f. Click OK to store cue.

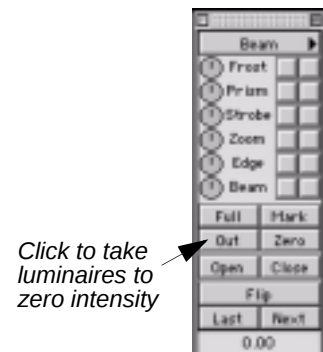


2. Store Cue 2 as follows:

- At Encoders window, click **Full** to return intensity to VL6 luminaires.
- At Select Displays window, click inside Color 2 box to change beams to red.
- Press [F1], enter "2" as cue number, and click OK to store.


*Click to bring luminaires to full intensity*

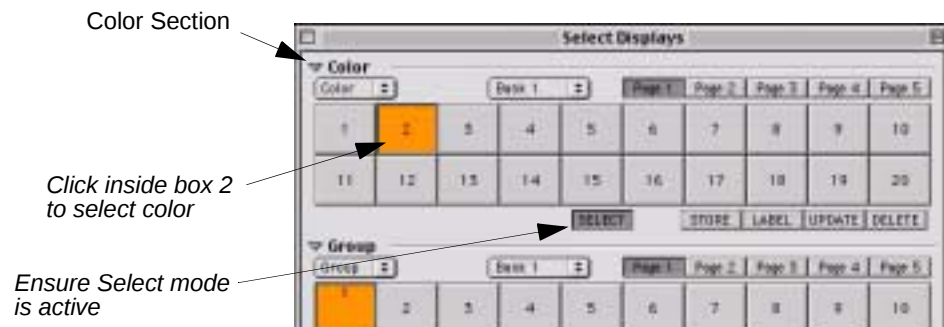

**Cue 1**

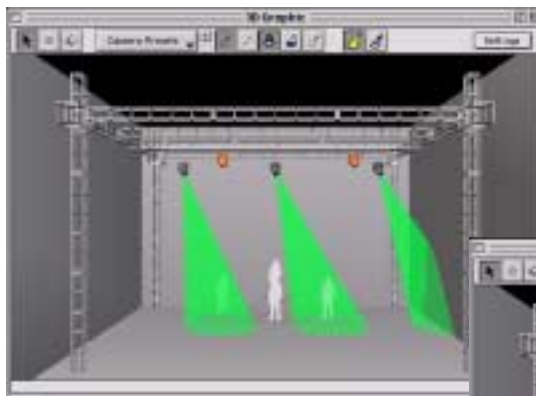


**Cue 2**

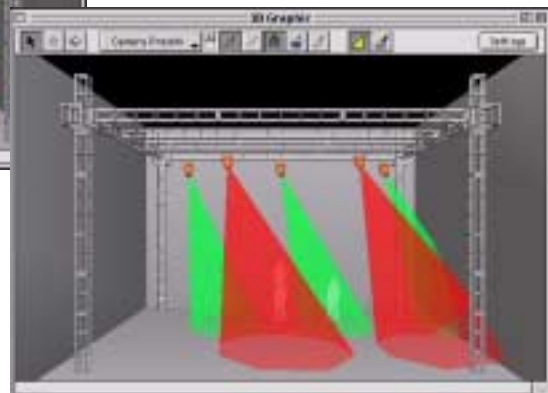

3. Select Cue 1 as follows:
  - a. At Operation menu, select Cue Sheet.
  - b. At Cue Sheet window, select Cue 1.



4. Load Submaster and playback cues as follows:
  - a. At Panels menu, select Submasters.
  - b. Click Load (of selected submaster) to load cue. C1.00 will appear in submaster's window.
  - c. At Submasters window, click Select button to select submaster for playback.
  - d. Click GO (of selected submaster) to playback Cue 1.
  - e. Click GO a second time to playback Cue 2.
  - f. Press Back to play Cue 1 again. Note changes in 3D Graphic window as cues are played.

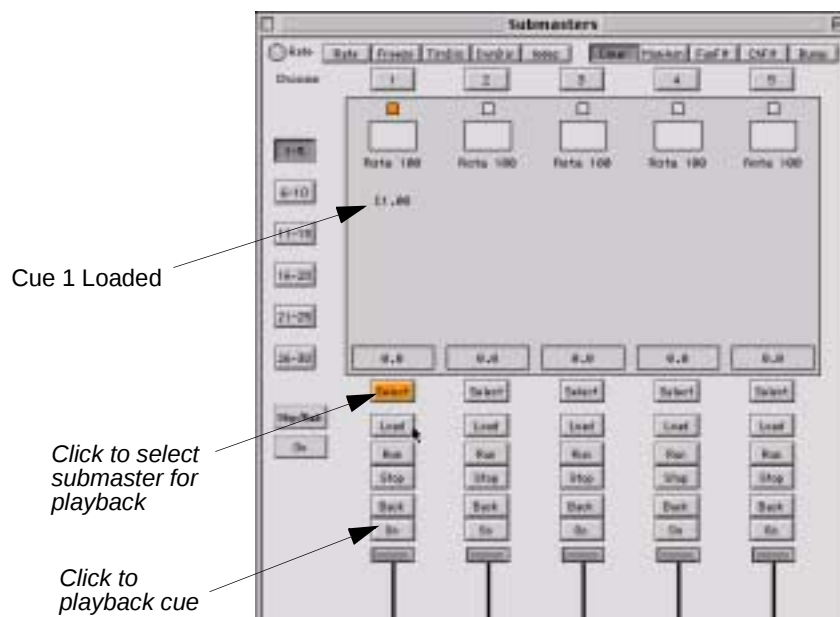

## Add timing and filters to presets and cues:


Refer to Ch. 8 for more detailed instructions.

1. Recall Preset 2 as follows:
  - a. At Panels menu, choose Select Displays.
  - b. At Select Displays window, at Group section, click inside Group 1 box. Channels (luminaires) 1-5 are now selected.
  - c. At Preset section, click inside Preset 2 box. Luminaires in 3D Graphic window will move to Preset 2.




**Note:** When a parameter is *not filtered* (i.e. highlighted in Filter screen), its data would be transferred during any subsequent store or recall operations.

2. Filter all parameters *except* pan and tilt (focus) as follows:
  - a. At Panels menu, select Timing Display.
  - b. At Timing Display window, click Filter tab.
  - c. Click Clear button to deselect all parameters.
  - d. Click in Pan and Tilt boxes to select for data transfer (only pan/tilt data will be stored in the preset).

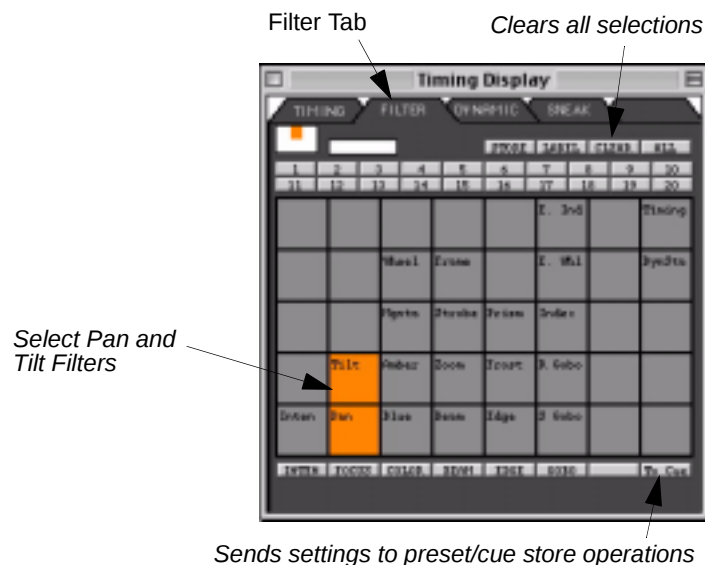


3. Apply a Vari-Lite color as follows:
  - a. At Operation menu, select VL Color System.
  - b. At VL Color System window, scroll down and select Dark Blue (ID 374). Refer to Ch. 4 of Virtuoso Operators Manual for more detailed instructions.
  - c. Click Send button to send color data to luminaires.

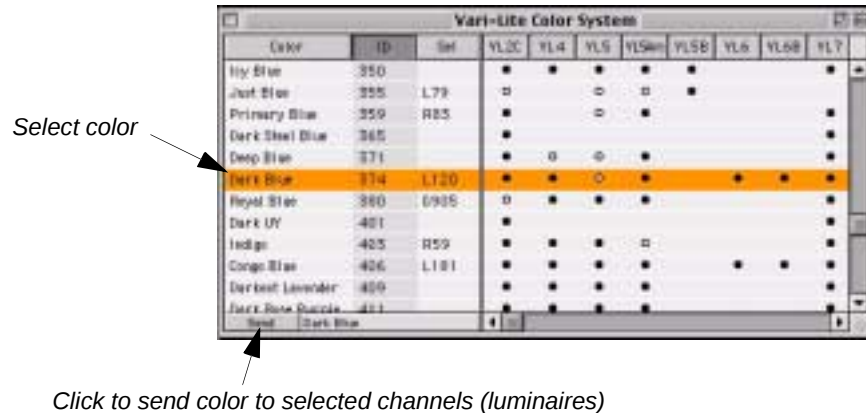

4. Refocus luminaires using 3D Point of Interest mode as follows:
  - a. At 3D Graphic window, select Point of Interest mode by clicking target icon.
  - b. Point target at figure standing center stage. Click to refocus beams towards target.

Point of Interest Mode Selector -  
Brings up target for refocusing luminaires


Target for refocus

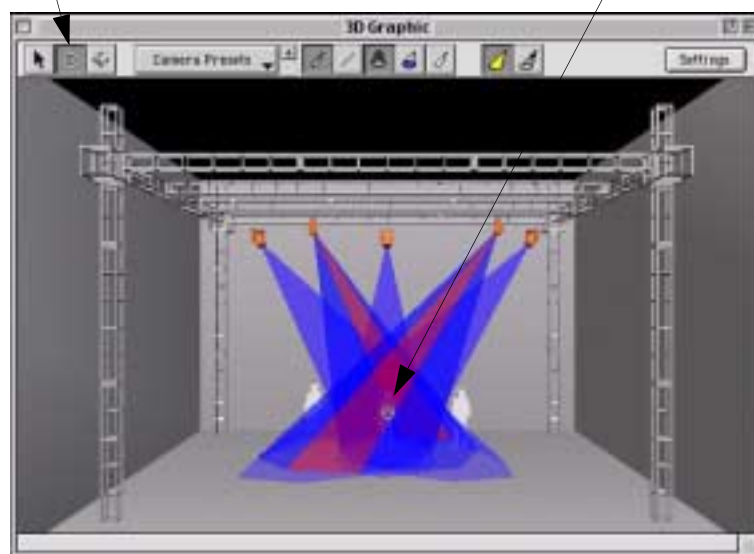

5. Store focus information as Preset 3 as follows:
  - a. Press [F1]. (Store window will open.)
  - b. Using cursor, select Preset. (Or press [P] at keyboard.)
  - c. Enter "3" for the preset number.
  - d. Click OK.
  - e. At Select Displays window, at Preset section, click inside Preset 3 box to send luminaires to Preset 3.



6. Add timing information as follows:
  - a. At Timing Display window, click Timing tab to display Timing screen.
  - b. Click in Pan and Tilt boxes to select for timing information.
  - c. Press [F11]. (Timing window will open.)
  - d. Enter "5".
  - e. Click OK to send value to Timing screen. "T 5.00" will appear in Pan and Tilt boxes.
  - f. At Timing screen, click Enter button to send timing information to cue store operations.

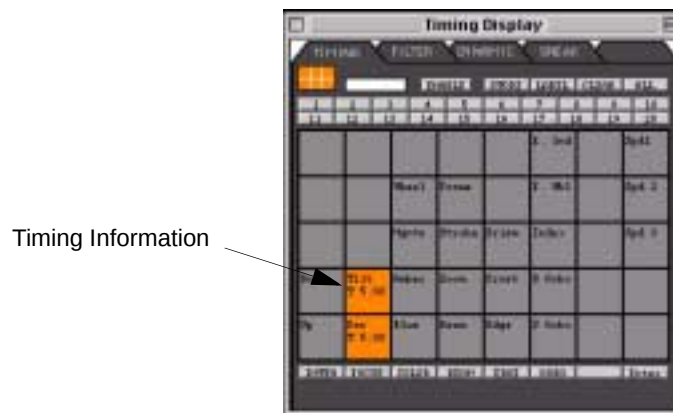

7. Store Cue 3 as follows:
  - a. Press [F1].
  - b. Enter "3" as cue number, and click OK to store. Cue 3 is now stored with timing information and a reference to Preset 3's focus information.
8. Playback all three cues. Refer to instructions on page 304.




## Create and playback an effect:

*Refer to Ch. 7 for more detailed instructions.*

1. Create a set as follows:
  - a. At Panels menu, choose Select Displays. (Select Displays window will open.)
  - b. At Group section of window, click inside Group 1 box. Channels 1-5 (your group of luminaires) will now be selected.




- c. At Data menu, select Sets. (Sets window will open.)
  - d. Using cursor, select Set 1 at upper half of window.
  - e. At lower half of window, while holding [Shift], select Parts 1-3.
  - f. Click Int (Interlaced) button. Your group of five luminaires will be distributed across the three parts.

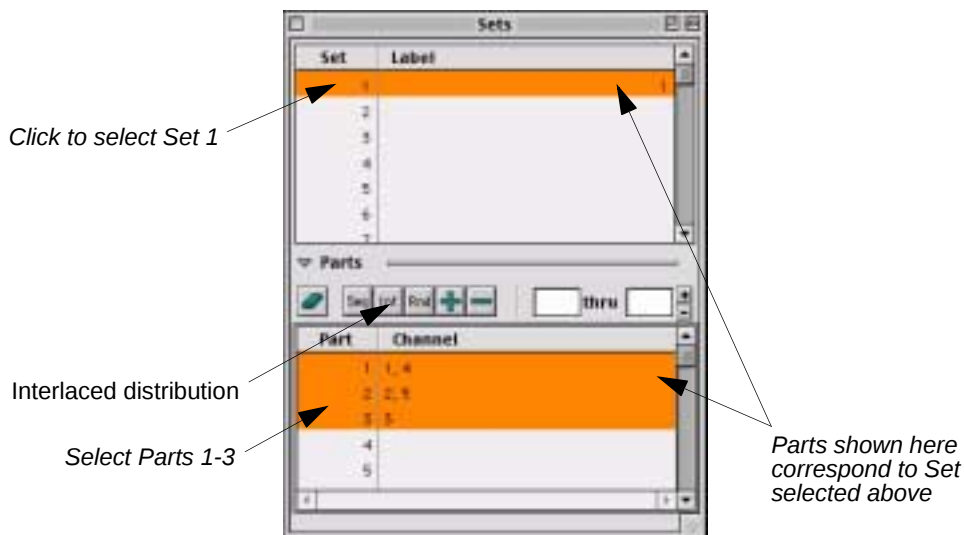

2. Create a sequence as follows:


- At Data menu, select Sequences. (Sequences window will open.)
- Using cursor, select Sequence 1 at upper half of window.
- At lower half of window, at Step 1, Action 1, use popup menu to select Preset (PSet).
- At Action 1 value, enter "1". (This specifies that the luminaires will move to Preset 1 in the first step of the sequence.)
- At Step 2, Action 1, use popup menu to select Preset (PSet).
- At Action 1 value, enter "2". (This specifies that the luminaires will move to Preset 2 in the second step of the sequence.)
- At Time section of window, enter 2.00 for both Step times, and 0.00 for all other times.

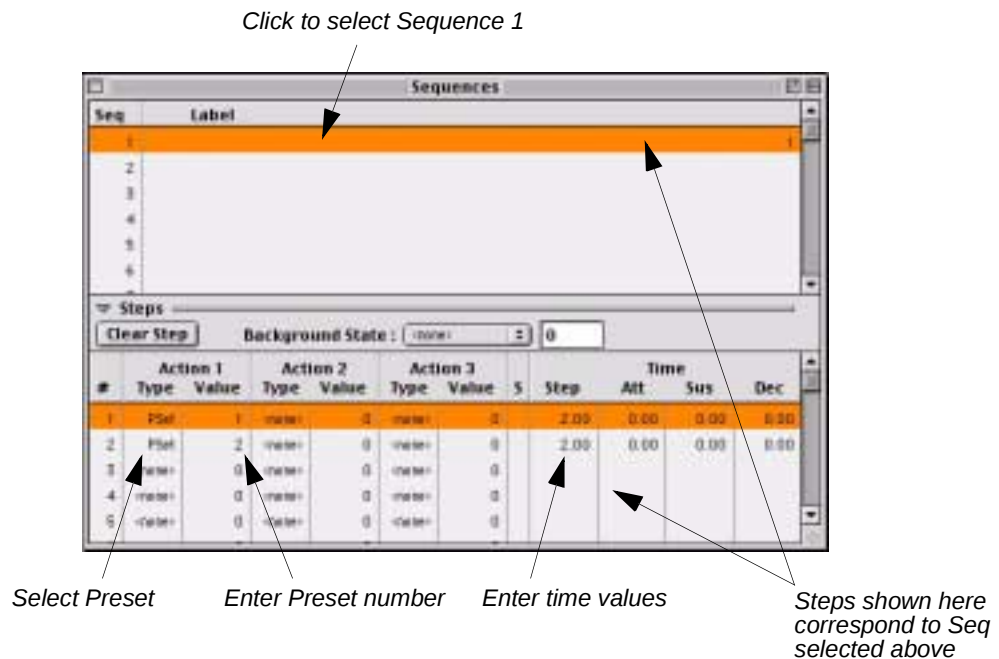

3. Define effect as follows:

- At Data menu, select Effects. (Effects window will open.)
- Using cursor, select Effect 1.
- At Set column, enter "1".

- d. At Seq column, enter "1". (An effect using Set 1 and Sequence 1 is now created.)

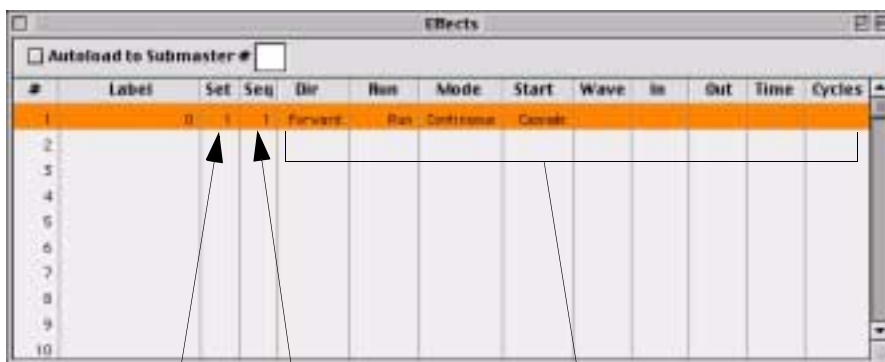

Enter 1 as the Set


Enter 1 as the Sequence

Advanced Features

4. Load Submaster and playback effect as follows:
  - a. At Effects window, ensure Effect 1 is selected. (Selected effect is displayed in Encoder window.)
  - b. At Panels menu, select Submasters.
  - c. Click Load (of selected submaster) to load effect. E1.00 will appear in submaster's window.
  - d. At Submasters window, click Select button to select submaster for playback.
  - e. Click GO (of selected submaster) to playback Effect 1.



Selected Effect

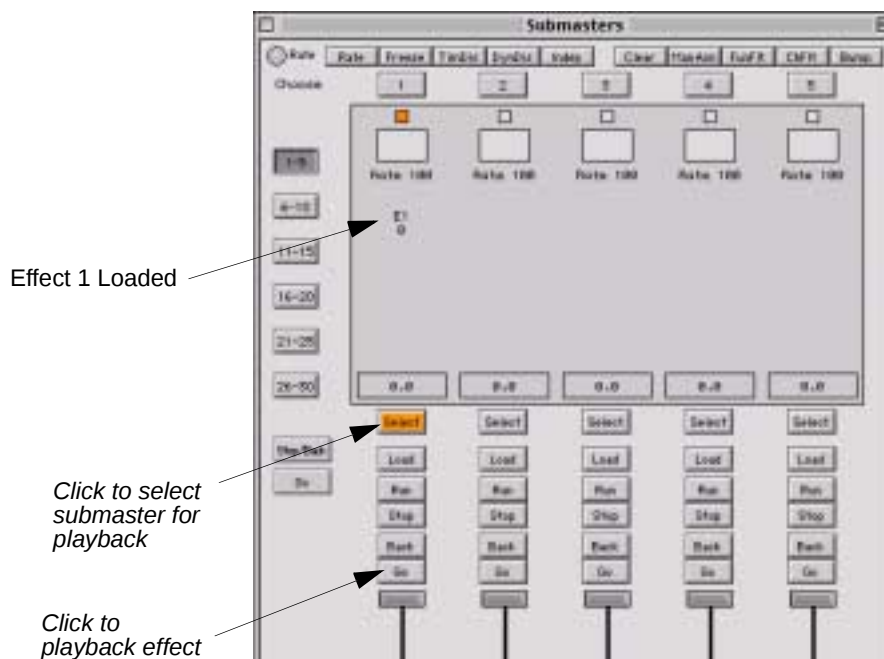

Effect 1 Loaded

Click to select  
submaster for  
playback

Click to  
playback effect

# APPENDIX B.

---

## Glossary

|                     |                                                                                                                                                                                                                                                                    |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Active</b>       | An intensity value greater than zero (1-100%). When a luminaire is <i>active</i> , it will store data for all parameters (including intensity). Also, a selected submaster and its associated cue are considered active.                                           |
| <b>Ad Hoc Group</b> | A group of channels selected “on-the-fly” which has not already been pre-stored (as a group). Ad Hoc channel selection is based on information such as “all channels in a specific preset.”                                                                        |
| <b>Beam</b>         | The size, shape, and sharpness of the light image being output by a luminaire. Also, a function of the luminaire related to the above characteristics. In a wash luminaire, beam defines lamp centering position. In a spot luminaire, beam defines the iris size. |
| <b>Beam Select</b>  | Programmed beam attributes which can be applied to selected channels using the Beam select display or command-line keypad.                                                                                                                                         |
| <b>Blackout</b>     | When the console’s overall intensity output level is set to zero (0%).                                                                                                                                                                                             |
| <b>Board Cue</b>    | A method for orchestrating the playback of recorded events on submasters. By using a board cue, a number of cues and effects can be loaded and activated in faders simultaneously or with timing delays on a cue basis.                                            |
| <b>Broadcast</b>    | Digital data signals transmitted from the control console to the luminaires and interface devices. The signal is received by all luminaires simultaneously and interpreted by each individually.                                                                   |
| <b>Bump</b>         | A submaster mode in which pressing the submaster’s [Select] button will instantly “bump” full intensity as provided by the cue and fader position for all channels in the active cue.                                                                              |
| <b>Channel</b>      | A control reference which collects a device’s associated thumbwheel address(es) (device, lamp power, etc.) and maps them to a single selectable number. Channels are assigned via the patch setup. (Also referred to as a “Control Channel.”)                      |

|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Channel Filter</b>  | A submaster mode which allows only the channels selected at the point the channel filter button is deployed to be enabled on that submaster. Taking the submaster out of channel filter mode enables all channels again. The channels to be filtered must be selected each time the channel filter is engaged for a submaster.                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Color</b>           | <p>The subjective interpretation by the human eye and nervous system of electro-magnetic radiation in the 380 to 760 nm band (visible light). Also, a function of the luminaire specified by color and saturation data, or by filter position data.</p> <p>Hue is the subjective appreciation of the dominant wavelength of a light source; the attribute of color perception by which different parts of the spectrum are distinguished (red, orange, yellow, green, blue, violet, purple).</p> <p>Saturation is the subjective appreciation of purity, a relation of the intensity of the dominant wavelength to all other wavelengths (defined by terms such as deep, pale, light, dark).</p> |
| <b>Color Select</b>    | Programmed colors which can be applied to selected channels using the Color select display or command-line keypad. A VARI* <i>LITE</i> color palette is available by default, however, colors can be reprogrammed as required.                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Command-Line</b>    | A series of keypad entries for the purpose of manual control of luminaires or for programming cues, effects, presets, etc.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Control Channel</b> | See "Channel."                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| <b>Copy/Move</b>       | Feature which allows manipulation of preset, cue, sets, and sequences data.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Crossfade</b>       | A cue type (as opposed to an effect cue type) that contains end state target data and timing transition data. Crossfades will replace the data provided by the previous cue in the same fader, or will provide last instructions to all parameter data when played back in another fader, with the exception of intensity data, which is handled in a HTP manner (unless LTP is selected as the intensity default).                                                                                                                                                                                                                                                                              |
| <b>Cue</b>             | A programmed event that can be played back on any submaster. A cue can be a crossfade or effect. 10,000 cues can be recorded, numbered from .01 to 9999.99.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Cue Attribute</b>   | Data which is programmed in association with a given cue number. Cue attributes include labels, out time for luminaires assuming an inactive state in the associated cue, links to other cues, macros, board cues or snapshots, with or without wait/trail times and alternate fader assignments. Rate, link, and loop instructions may also be associated with cues.                                                                                                                                                                                                                                                                                                                            |
| <b>Cue Sheet</b>       | Provides a sequential listing of cues and board cues along with all assigned attributes. Also, indicates cue status (active or inactive) and is reflective of live mode operations in that it will display the last activated cue.                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>Delay Time</b>      | A countdown time applied to any luminaire parameter time which begins from the moment the associated cue is executed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Douse</b>           | To de-energize a luminaire lamp. (Douse is unrelated to intensity states.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Down Fade Time</b>  | Timing value associated with channel intensity settings. Down Fade time affects the intensity transition in the event the transition is in a downward direction. The Down Fade time has an associated delay time.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Dynamic Disable</b> | A submaster mode which prohibits the replay of dynamic states on that submaster.                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Dynamic State</b>   | Pre-packaged actions (states of motion) which can be applied to channels or groups of channels and then stored as a cue or preset. When stored into a preset, the state information, as well as the established orientation, size and rate are stored. When stored into a cue, the attributes affected by the dynamic state will follow the timing information for those parameters before assuming the dynamic state, with its rate information.                                             |
| <b>Edge</b>            | In a wash luminaire, edge defines the spot or flood range of the diffusion mechanism(s). In a spot luminaire, edge defines the hardness or softness of the beam edge.                                                                                                                                                                                                                                                                                                                         |
| <b>Effect</b>          | A programmed chase sequence that can be played back on any submaster. An effect consists of programmable sets and sequences. When assigned to a cue number, the effect data is the only data stored with the cue. 500 effects may be programmed, numbered from .01 to 999.99.                                                                                                                                                                                                                 |
| <b>Effects Index</b>   | Changes orientation of rotating effect.                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Effects Wheel</b>   | A beam altering mechanism available in some luminaires. Sometimes called a “prism” wheel.                                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Effect Timing</b>   | Timing values applied to an overall effect or its associated steps. Each step in a sequence can be provided with a discrete attack time (fade in), sustain time (hold), decay (fade out) and step time. Each effect can be provided with an overall fade-in time, fade-out time, duration, and decay time.                                                                                                                                                                                    |
| <b>Emergency Cue</b>   | The state a luminaire will assume if communication between the luminaire and the console is disrupted for more than 15 seconds. It is possible to have no emergency cue specified (in which case the luminaire will fade to inactive) or to have a “Remain in State” instruction, in which case the luminaire will take no action. Any cue can be specified as the emergency cue by using the Settings window.                                                                                |
| <b>Frame</b>           | A luminaire mechanism which allows framing of the light beam. Control for frame is provided by the soft encoders.                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Filter</b>          | Used to withhold data from a preset or a cue, or to control what is recalled in a submaster or select. Assignment of filters is a manual attribute. If a cue is recorded with a filter in place, the filter becomes a mask and is a recorded element in that cue. Filters active during preset records will withhold that data from the target preset. Filters are ignored during preset recall and cue/preset update commands. Applied submaster filters take effect on the next cue recall. |
| <b>Filter Mode</b>     | A touch screen display mode, which provides access to filter states.                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Flip</b>            | A function which moves pan 180 degrees about the zero axis and "reflects" tilt about the zero axis. Inverts gobo, if present.                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Focus</b>           | The point to which the light beam is directed. Also, a function of the luminaire related to the direction of the beam as specified by pan and/or tilt data.                                                                                                                                                                                                                                                                                                                                   |
| <b>Freeze</b>          | A submaster mode which halts cue movement on that submaster.                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Frost</b>           | A beam attribute available in some DMX-controlled luminaires. Control for frost is provided by the soft encoders.                                                                                                                                                                                                                                                                                                                                                                             |

|                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Function</b>        | One of the variable operational parameters of luminaires (intensity, focus, color, beam, gobo, timing and dynamic states).                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Function Filter</b> | A submaster mode which transfers the current filter settings to the selected submaster.                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Gobo</b>            | A luminaire mechanism which allows projection of a design or custom image in the light beam.                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Grand Master</b>    | Fader which masters the overall intensity output of the console. Its contribution is calculated after input of stored cue values and submaster fader settings.                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Group</b>           | A collection of luminaire control channels. Groups may be selected from the Group Select portion of the Channel Select panel or from the command-line keypad.                                                                                                                                                                                                                                                                                                                                                                                     |
| <b>Group Select</b>    | A function of the Select Displays which allows channels to be stored and recalled as groups.                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Hard Reset</b>      | Restarts luminaires and reloads operating system and cue data.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Hue</b>             | The subjective appreciation of the dominant wavelength of a light source; the attribute of color perception by which different parts of the spectrum are distinguished (red, orange, yellow, green, blue, violet, purple).                                                                                                                                                                                                                                                                                                                        |
| <b>HTP</b>             | Highest Takes Precedence. During intensity conflicts, this setting causes luminaires to assume the intensity value of the selected channel having the highest value.                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Inactive</b>        | A luminaire state (programmed via the [Out] button) in which no recorded data is provided for that luminaire in a selected cue. When a luminaire is <i>inactive</i> (or <i>out</i> ), it will not store data for any parameter.                                                                                                                                                                                                                                                                                                                   |
| <b>Independent</b>     | A submaster mode which prohibits the associated submaster's contents from being altered by any other active submaster. Releasing the submaster from its independent state makes the associated channels/parameters available to other control. Those channels will respond to the next available instruction for which it has stored data. The intensity levels for channels on independent submasters are affected by the setting of the Grand Master fader. <i>Example:</i> Press and hold [Ind] while pressing [Choose] of required submaster. |
| <b>Indexing</b>        | Changes orientation of rotating gobo.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>Intensity</b>       | The amount of light emitted by a source, per second in a given direction within a cone of unit solid angle. Also, the function of a luminaire related to the brightness of the beam as projected on a surface, specified by intensity data.                                                                                                                                                                                                                                                                                                       |
| <b>Label</b>           | An alpha-numeric identifier which can be stored with elements such as cues, effects, groups, macros, templates, and selects.                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Link</b>            | A cue attribute which alters the next sequential cue in the Cue Sheet. The automatic activation of the linked cue is dependent on the presence of a wait or trail time. Links can be made to cues, effects, snapshots and macros.                                                                                                                                                                                                                                                                                                                 |
| <b>Live Editing</b>    | A console mode wherein all actions taken are actually executed by the luminaires, in real time, on stage. <i>Also see</i> Preview Editing.                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Load</b>            | When a cue or effect is moved to a submaster's pending file.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

|                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Loop</b>                    | An attribute that can be added to a cue, indicating the number of times a linked sequence of cues is to execute.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| <b>Luminaire State</b>         | A luminaire can be in one of four different states in a cue. When the luminaire is <i>active</i> , it has recorded data for intensity and all other parameters. When <i>marked</i> , it has no intensity data, but does have other parameter data. When the luminaire is <i>zero</i> , it has intensity data at 0% but does not have other parameter data (opposite of <i>marked</i> ). An <i>inactive</i> luminaire (out) has no recorded data for any parameter.                                                                                                                                                                        |
| <b>Macro</b>                   | A series of command strings (button presses or display selections) that can be recorded for automated playback, either through manual selection of the associated macro number, or from automated activation through the Cue Sheet.                                                                                                                                                                                                                                                                                                                                                                                                       |
| <b>Manual Assign</b>           | A submaster mode which allows a submaster to control the parameters of manually assigned channels, as well as stored events.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <b>Manual Control Override</b> | Manual Control Override allows a manual intensity level to be established for an inactive channel. That level will remain in effect until a channel receives a command from an active, marked or out channel. A channel on manual control override may be placed on a submaster for intensity control. It will remain under the control of that submaster until it receives a new instruction or until a new event is played back on that submaster. If the submaster is independent, the channel will remain under the control of that submaster until the submaster is released from independent or until a forced update is completed. |
| <b>Manual Timing Mode</b>      | A console mode which allows attributes recalled by a select to follow the timing values that are currently active in the luminaires.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Manual Undo</b>             | Returns an affected channel/parameter to its previous state after a select is deployed or an action is taken on the keypad or with an encoder. Channel selection opens a buffer which snapshots the current setting, making it possible to restore (by subsequent presses of the [Man Undo] button) all actions taken between one channel selection and the next.                                                                                                                                                                                                                                                                         |
| <b>Marked</b>                  | An intensity state of “marked” (0% level). When a luminaire is <i>marked</i> , it will store data for all parameters with intensity stored as “marked” (0% level). When a cue is recalled, a <i>marked</i> luminaire will move to the stored positions and, if previously active, fade out with the luminaire’s intensity down time.                                                                                                                                                                                                                                                                                                      |
| <b>Mask</b>                    | Prohibits move instructions from affecting those parameters on all luminaires in the cue during cue store actions. Assignment of masks is a stored parameter attribute, which may be applied during live recording, via a Store, Selective Store operation and in preview operations. Masked values are displayed in preview mode and may be lifted via preview editing.                                                                                                                                                                                                                                                                  |
| <b>Multi-Console Mode</b>      | Used to establish control boundaries when more than one console is being used to control a lighting system. A console can either share channel control with another console or it can have exclusive control. Definition of control interaction is determined by the profiles assigned at the primary console.                                                                                                                                                                                                                                                                                                                            |
| <b>Off-Line Programming</b>    | A feature which allows preprogramming without having to connect to a system. When in the off-line mode, all menus and windows are accessible just as if the system were online. (The off-line feature does not eliminate the need for a console.)                                                                                                                                                                                                                                                                                                                                                                                         |

|                        |                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Out</b>             | A luminaire state in which no recorded data is provided for that luminaire in a selected cue. When a luminaire is <i>out</i> , it will not store any parameter data. When a cue is recalled, an <i>out</i> (or <i>inactive</i> ) luminaire will not change parameter positions, but if previously active, it will fade out with either the cue time or the console's default time.                                          |
| <b>Out Time</b>        | A cue attribute that defines the intensity fade out time of any luminaires which are <i>active</i> at the point of cue playback, but which are <i>inactive</i> in the cue being played back and are not included in any other active cue. Out Time will also define the intensity fade out time in the event the submaster is de-selected.                                                                                  |
| <b>Page</b>            | A number of selects available in each bank of group, beam, color, preset, macro, template, and effect selects.                                                                                                                                                                                                                                                                                                              |
| <b>Park</b>            | A luminaire state in which it will not respond to any manual or playback commands, nor will it store into any cues.                                                                                                                                                                                                                                                                                                         |
| <b>Part</b>            | A component of an effect set. Parts are made up of specified channels (luminaire groups) with the limitation that a channel may only appear once within the set.                                                                                                                                                                                                                                                            |
| <b>Patch</b>           | The mechanism by which thumbwheel addresses (luminaire and interfaces) are assigned to channel numbers. Any number of conventional thumbwheels may be patched to a single control channel. <i>Also see</i> Channel.                                                                                                                                                                                                         |
| <b>Preset</b>          | A set of programmed parameters which can be applied to selected channels using the Preset select display or command-line keypad. All luminaire parameter attributes, including timing values, may be stored into a preset. Changes to presets track automatically into any cues in which they were used.                                                                                                                    |
| <b>Preview Editing</b> | A console mode wherein all actions taken are stored to the appropriate luminaires, but are not executed on stage. <i>Also see</i> Live Editing.                                                                                                                                                                                                                                                                             |
| <b>Primary Console</b> | This console serves as the main system console. It stores the show file and retains overall submaster control.                                                                                                                                                                                                                                                                                                              |
| <b>Prism</b>           | A beam altering mechanism available in some luminaires. Sometimes called an "effects" wheel.                                                                                                                                                                                                                                                                                                                                |
| <b>QuickFocus</b>      | QuickFocus allows stepping through a selected preset, one channel at a time, to verify its parameter data. At the conclusion of a QuickFocus operation, all luminaires are brought to the proper position, allowing the preset to be modified if required.                                                                                                                                                                  |
| <b>Range Editing</b>   | Allows data to be modified across a range of presets and cues. Range editing is provided for modifying parameter attributes, timing information, and cue data. Range editing allows targets to be selected for modification by particular attributes, i.e, channels in a particular state could be selected and told to assume some other state (not necessarily via the same parameter).                                   |
| <b>Rate</b>            | Allows the recorded time/speed attributes for luminaires to be manually adjusted. Rate adjustments (from 0 to 999) may be provided to a board cue, a cue, or effect. Rate adjustments can be added to the cue attributes for later recall. The default setting of 100 is defined as real time. Rates higher than 100 will cause faster playback of events, while rates lower than 100 will cause slower playback of events. |

|                          |                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Recall</b>            | Allows specified parameter data for selected channels to be recalled live from stored preset or cue, as modified by any filter settings.                                                                                                                                                                                                                                                                                                             |
| <b>Reset</b>             | <i>See Hard Reset or Soft Reset.</i>                                                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Run</b>               | To resume the operation of a stopped effect, or resume the wait/trail countdown of a stopped cue.                                                                                                                                                                                                                                                                                                                                                    |
| <b>Select</b>            | To obtain manual control of a luminaire from the console. Also, a programmed set of attributes for Beam, Color, Preset, or stored groups, macros, and templates.                                                                                                                                                                                                                                                                                     |
| <b>Selected</b>          | A channel or group of channels which will respond to manual control.                                                                                                                                                                                                                                                                                                                                                                                 |
| <b>Saturation</b>        | The subjective appreciation of purity, a relation of the intensity of the dominant wavelength to all other wavelengths (defined by terms such as deep, pale, light, dark).                                                                                                                                                                                                                                                                           |
| <b>Secondary Console</b> | This console is an additional console hosted by the primary console. It receives show data from the primary and mirrors all submaster operations.                                                                                                                                                                                                                                                                                                    |
| <b>Select Display</b>    | One of three panel displays or Select Displays window components and associated buttons which provide mapping of presets, colors, beams, macros, groups, and templates for store and recall applications.                                                                                                                                                                                                                                            |
| <b>Selective Store</b>   | A special command which is used to modify or add parameter data to a cue, preset, or beam state for specified channels (active or inactive).                                                                                                                                                                                                                                                                                                         |
| <b>Selective Recall</b>  | A special command which is used to recall specific parameter data from specified channels (active or inactive) in a cue, preset, or beam state.                                                                                                                                                                                                                                                                                                      |
| <b>Sequence</b>          | A component of an effect which is made up of a number of steps. The steps specify what action the applied set (groups of lights) are to take in an effect. <i>Also see Set.</i>                                                                                                                                                                                                                                                                      |
| <b>Set</b>               | A component of an effect which is made up of a number of parts. The parts specify which channels are to be included in an effect.                                                                                                                                                                                                                                                                                                                    |
| <b>Show File</b>         | A file containing all programmed cue data. Show files reside on the console's hard drive and can be backed up to a removable medium such as a Zip® disk.                                                                                                                                                                                                                                                                                             |
| <b>Shutter</b>           | A mechanism which controls the douser or strobe action of luminaires capable of this function.                                                                                                                                                                                                                                                                                                                                                       |
| <b>Snapshot</b>          | A stored configuration for a console panel. Snapshots can be recalled either manually or through cues in order to reset any one or all of the front panel controls or displays to the stored configuration.                                                                                                                                                                                                                                          |
| <b>Sneak</b>             | A dual-purpose function which allows manual control values to be staged and then recalled in a specified time. Sneak provides a graphic display of command-line entries that would not normally be visible and also provides a means of creating manual control moves "on-the-fly." For this purpose, values can be assigned to parameters and then recalled at a specified time, luminaire time, or by manually pressing Enter at the touch screen. |
| <b>Soft Encoder</b>      | One of six soft encoders provided for mapping parameters other than pan, tilt and intensity (which are mapped to hard encoders).                                                                                                                                                                                                                                                                                                                     |
| <b>Soft Reset</b>        | Sends luminaires back to their home position and reloads cue data.                                                                                                                                                                                                                                                                                                                                                                                   |

|                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Speed</b>                | The rate of change of a luminaire's variable parameters. As opposed to time (e.g. 5 seconds), speed is how fast the parameters will move.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>Start</b>                | To energize a luminaire arc lamp (applies to arc-lamp luminaires only).                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <b>Step</b>                 | To advance a halted (stopped) effect to its next step.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Step (Effect)</b>        | A component of an effect sequence. Steps specify what action the applied set (groups of lights) are to take in an effect. <i>Also see</i> Sequence.                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <b>Store</b>                | To save any intensity value, parameter attribute, group selection, or timing information into a specified target (e.g., cue, select display, preset, etc.).                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Submaster</b>            | A playback device that can be used to execute cues, board cues, and effects. Cues include luminaire target states (crossfades) and effects.                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Synchronized</b>         | In handling MIDI timecode from an external source, synchronized is when incoming timecode arrives approximately on time, and the frame number agrees with the expected time from the system's internal clock.                                                                                                                                                                                                                                                                                                                                                                  |
| <b>Template</b>             | Stored settings for touch screen filter, timing, and sneak modes. Settings are recalled from the Macro/Template select display.                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>Timing</b>               | Control of the duration of change for a luminaire parameter. Time is defined in minutes and seconds.                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Timing Disable</b>       | A submaster mode which inhibits timing values on the associated submaster, allowing playback at full speed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>Timing Mode</b>          | A touch screen display mode, which provides a means of defining timing, delay, and speed values for any or all combination of parameters.                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| <b>3D Location</b>          | A device's X, Y, and Z coordinates. These three coordinates are based on a point of origin (X=0, Y=0, Z=0) from which every object in the 3D graphic has been located.                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Touch Screen Display</b> | The touch sensitive screen which allows access to Timing, Filter, Dynamic State, and Sneak settings.                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| <b>Track/Fill</b>           | To force a new parameter setting for selected channels through the cue sheet until a channel block command is encountered or the luminaire parameters affected are set to a different value. A different value may come from absolute values that are different, a preset value that is different or the same value provided by a different preset. Tracking instructions will also be stopped by blocked channels. Track may be used in conjunction with Store, Update and Selective Store. Fill causes the instructions to track backward and forward through the cue sheet. |
| <b>Trail Time</b>           | A timing attribute which can be applied to a cue, causing the next event to be automatically executed after the trail time has elapsed. The trail time begins counting from the moment the cue has completed. (The next event being either the next sequence cue, a linked cue, or a linked macro.)                                                                                                                                                                                                                                                                            |
| <b>Undo</b>                 | To reverse the last store or delete action on the console.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |

|                                   |                                                                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Update</b>                     | An advanced store/modify function which is used to store modified channels back into their source cues or to add new channels to cues. Update is not routed through channel or filter selections.                                                                                                                                                                                                    |
| <b>Upfade Time</b>                | A timing value associated with channel intensity settings. The up fade time affects the intensity transition in the event the transition is in an upward direction.                                                                                                                                                                                                                                  |
| <b>VARI*LITE<br/>Color System</b> | A default color palette, available via the Vari-Lite Color System window or command-line keypad, which is based on the numbering system for VARI*LITE colors.                                                                                                                                                                                                                                        |
| <b>Venue</b>                      | A representation of your venue or stage production as defined by 3D modeling parameters.                                                                                                                                                                                                                                                                                                             |
| <b>Wait Time</b>                  | A timing attribute that can be applied to a cue, causing the next event to be automatically executed after the wait time has elapsed. The wait time begins counting from the moment the cue is executed. (The next event being either the next sequence cue, a linked cue, or a linked macro.)                                                                                                       |
| <b>Wave Time</b>                  | The time it will take an effect to loop back to the beginning. A wave time can only be greater than the total sequence time (i.e., the wave time will never cut a sequence short, only add a gap before the sequence starts again).                                                                                                                                                                  |
| <b>Zero</b>                       | An intensity state of zero ("hard zero", 0% level). A luminaire that is zero will only store intensity data, which is stored as a "hard zero" (0% level) along with the luminaire's intensity down time. When a cue is recalled, a zero luminaire will fade out with the luminaire's intensity down time. It will not change any other parameter positions because there is no data stored for them. |

*(This page intentionally blank.)*

# APPENDIX C.

---

## Technical Specifications

---

### Weight/Dimensions

#### **Weight**

Includes console, Macintosh G4 computer and 15" monitor:

106.5 lbs (48.3 kg)

#### **Dimensions**

44 x 24 x 8 in (112 x 61 x 21 cm)

---

### Power Requirements

Console:

2.0 A at 120 V 50/60 Hz

1.0 A at 240 V 50/60 Hz

Macintosh G4 computer and 15" monitor:

8.0 A at 120 V 50/60 Hz

4.5 A at 240 V 50/60 Hz

---

## System Capacity

Control of 2,000 multiple parameter luminaires  
2,000-10,000 cues per fixture (luminaire dependent)  
1,000 presets  
1,000 effects  
100 beam selects  
300 color selects  
1000 group selects  
1,000 board cues  
1,000 macros  
1,200 snapshots  
30 submasters (in 3 pages)  
26 DMX universes

---

## Interface Support

8 DMX universes  
Copper and fiber-optic Ethernet connections for Virtuoso protocol  
SMPTE Time Code input  
MIDI Time Code input  
MIDI Notes input  
External Trigger (switch closure) for Board Cue Go

---

## Optional Equipment Support

Up to three additional monitors  
Channel Select Panel  
USB printer

# Index

## Numerics

- 2D Display
  - background picture 27
  - drawing size 27
  - grid spacing 27
  - Plan View 2D mode 27, 37
  - snap to grid 27
- 3D encoder 50, 53
- 3D graphic
  - display filter 262
  - exporting 257
  - importing venue 256
  - new venue 255
  - overview 255
  - Plan View 3D mode 27, 35, 37
  - Settings window 263
  - venue size 255
  - window 261
  - x, y, z locations 259

## A

- Ad hoc groups
  - creating 161
  - overview 161
- At
  - function key 168
- Autoload
  - effect 223
  - function key 167

## B

- Background state 129
- Beam
  - data window 75
  - encoder 50, 52
  - overview 74
  - setting from keypad 59
  - standard selects 67
  - storing and recalling 76, 77, 78
  - using filters with 149
- Black out 198
- Board cue
  - deleting 186
  - overview 184
  - recalling 187
  - recording 185

sheet window 188

- Bump
  - submaster 236

## C

- Channel
  - copy 164
  - DMX test 279
  - ranges 44
  - selecting 41
- Channel filter
  - submaster 233
- Channel select
  - active 43
  - all 43
  - clear 43
  - desk buttons 47
  - from keypad 44
  - from panel 45
  - invert 43
  - mark 43
  - next/last 47, 51
  - overview 41
  - panel 7
  - selecting range 43, 46
  - status mimic 44
  - using Next/Last 47
  - window 42
  - zero 43
- Color
  - data window 81
  - encoder 50, 52
  - overview 80
  - setting from keypad 59
  - standard selects 67
  - storing and recalling 82, 83
  - using filters with 149
  - Vari-Lite colors 95, 96, 97, 98
- Colors, Vari-Lite
  - applying 96, 97
  - data window 96
  - for DMX fixtures 102
  - for Vari-Lite luminaires 98
  - overview 95
- Command-Line
  - see Keypad 200
- Configuration, system
  - console ID 20, 23
  - console name 23, 250
  - overview 20, 22
  - physical ring 23

- storing 24
- updating 24
- Console
  - default settings 245
  - desk 6
  - installation 8, 10, 11
  - log 14, 274
  - Mac computer 6
  - overview 5
  - power down 19, 21
  - power up 19, 21, 282
- Console ID number 20, 23
- Conventional fixture
  - patching 28
- Copy channel 164
- Copy/Move
  - function key 168
  - using 165
- Cue
  - affect of faders on 198, 207
  - as an effect 134
  - data window 212
  - definition 109
  - deleting 113
  - Enable editing option 212
  - filters 148
  - linking 194, 242
  - looping 195
  - out time 197
  - setting intensity state 111
  - sheet 209
  - storing 110, 112
  - wait time 196
- Cycle 221

## **D**

- Delay 144, 145
- Delete
  - function key 167
- Device Info window
  - using 49
- Diagnostics
  - DMX channel 279
  - Error log 280
  - off-line 281, 282
- Direction, effect 119
- Display filter
  - 3D 262
  - channel 248
- DMX fixture
  - channel test 279

- patching 28
- Setup window 279
- VL color system for... 102
- Drawing Size window 27
- Dynamic state
  - as cue/preset 152
  - attributes 150
  - encoder 50, 53
  - overview 150

## **E**

- Effect
  - attack time 221
  - attributes 119
  - autoload 223
  - background state 129
  - break 120
  - cascade 121
  - changing modes 217
  - continuous 120
  - creating from keypad 131
  - creating from panel 132
  - cycle 120, 221
  - decay time 221
  - definition 117, 118
  - direction 119
  - fade in time 219
  - fade out time 219
  - forward 119
  - mode 120
  - oscillate 119
  - overview 92, 117, 118
  - random 119
  - reverse 119
  - Run/Stop modes 224
  - sequence 126, 127, 128, 130, 131
  - sequence timing 221, 222
  - set 122, 123, 124, 125, 131
  - Set 0 122
  - simultaneous 121
  - start 121
  - step time 219, 221
  - stop/flag 223, 224
  - storing as a cue 134
  - sustain time 221
  - timing 218, 219, 220
  - wave time 219
  - window 133
- Encoder
  - 3D 53
  - beam 52

- color 52
- dynamic states 53
- frame 54
- image 52
- intensity 51, 111
- min/max settings 55
- overview 50
- pan/tilt 51
- window 56

Error log 22, 280

Export

- patch 272
- venue, 3D 257

## F

Fader

- affect on intensity 198
- grand master 198
- intensity 111
- submaster 199

Filters

- beam 149
- color 149
- overview 146
- submaster 149, 232
- templates 156
- with cues 148

Frame

- encoder 50, 54

Freeze

- submaster 231

Function filter

- submaster 232

Function keys

- quick keys 169
- setting option 166
- using 166

## G

Gobo 50, 52

Grand master 198

Grid Spacing window 27

Groups

- from Select Display window 91
- storing and recalling 90, 91

## H

Highest Takes Precedence

- concept of... 240

## I

Image

- encoder 50, 52

Import

- patch 273
- venue, 3D 256

Independent

- submaster 234

Installation

- additional components 10
- console 8
- desk lamp 11

Intensity

- encoder 50, 51, 111
- faders 111
- HTP 240
- in playback 237
- setting from keypad 58
- states 110, 111
- transitions 239
- window 62, 63
- with manual assign 235

## K

Keypad

- overview 57
- setting parameters from 58
- shortcuts 200

## L

Lamp control

- douse 48
- reset/recalibration 49
- start 48

Link

- controlling during playback 242
- storing 194

Live mode 14, 264

Log, console 14, 274

Loop

- using 195

Luminaire Status window 60

## M

Macintosh computer, console

- description 6

Macro

- overview 92, 178
- recalling 183

- recording 179
- window 181, 291
- Manual assign
  - submaster 234
- Manual control
  - 3D 50, 53
  - ad hoc groups 161
  - beam 50, 52
  - color 50, 52
  - copy channel 164
  - dynamic state 50, 53
  - frame 50, 54
  - image 50, 52
  - intensity 50, 51
  - pan/tilt 50, 51
  - soft encoders 50
  - timing 162
- Manual timing
  - using 162
- Masking 147
- MIDI
  - notes 287
  - overview 285
  - synchronizing 289
  - timecode overview 289
  - timecode recording 290
  - with board cues 184
- Min/Max settings
  - soft encoder 55
- Mode
  - effect 120
  - indicator 14, 264
  - live 14, 264
  - preview 14, 264
- Multi-console
  - backup console 249
  - configuring 250
  - primary 249
  - primary disable 251
  - secondary 249
- N**
- Naming, console 23, 250
- Next/Last
  - with channel selection 47
- O**
- Off-Line programming 252
- Online
  - checking status 34
- Orientation

- dynamic state 150
- Out time
  - using 197
- P**
- Palette shift
  - using 69
- Pan 50, 51
- Parameter Columns
  - window 61
- Park
  - using 163
- Parts 117, 118
- Patch
  - DMX/Conventional fixtures 28
  - editing 35
  - enabling 25
  - exporting 272
  - importing 273
  - on/off indicator 14, 25
  - overview 25
  - procedure 32
  - window 36
- Plan View window
  - 2D mode 27, 37
  - 3D mode 27, 35, 37
  - background picture 27
  - editing in 35
  - grid spacing 27
  - patching in 32
  - set up 26
  - size 27
  - snap to grid 27
- Playback
  - basic cue 114
  - intensity affect 237
  - of cues 241
  - of effects 135
  - of macros 241
- Point of origin 259
- Power down
  - console 19, 21
- Power up
  - console 19, 21, 282
- Preset
  - data window 85
  - overview 84
  - storing and recalling 86, 87, 88
- Preview mode 14, 264
- Primary console 249
- Primary disable 251

Printing 275, 276

Profiles

importing 277

updating 278

Programming

off-line 252

## Q

QuickFocus

operation 162

## R

RAM erase

luminaire 49

Rate

dynamic state 151

submaster 231

Recalibration

luminaire 49

Reset

luminaire 49

Ring, physical system 23

Run/Stop, effect 224

## S

Secondary console 249

Select display

Beams 76, 77, 78

Colors 82, 83

Groups 90, 91

overview 67

palette shift button 69

Presets 86, 87, 88

standard beams 67

standard colors 67

window 71, 72, 73

working with 68, 70, 71, 72, 73

Selective recall

function key 167

using 205

Selective store

function key 166

using 204

with submasters 207

Sequence

creating from panel 127

creating from window 128

definition 117, 118, 126

timing 221

Set

creating from panel 123

creating from window 124

default set 122

definition 117, 118, 122

Settings

console default 245

window 245, 246

Show file

backup 270

creating new 269

indicator 14

opening 270

printing 275, 276

profiles 277

Save A Copy 272

Show File Manager

overview 269

Size

dynamic state 150

Snap To Grid 27

Snapshot

Data window 177

deleting 176

Filter window 174

overview 92, 173

recalling 176

storing 174, 177

Sneak

function key 168

overview 153

templates 156

Speed

attributes 143

formats 143

Start, effect 121

Status Columns window 75, 85

Status indicator

description 13, 14

Status mimic 44

Step

background... 129

creating 127, 128

definition 117, 118, 126

deleting 128

Stop/flag, effect 223, 224

Store

function key 166

Submaster

banks 227, 228

board cue Go 187

bump 236

channel filter 233

- choose 229
- clear 230
- faders 199, 207
- filters 149
- freeze 231
- function filter 232
- independent 234
- manual assign 234
- modifying cues in... 206
- panel 227
- playback of cues 114, 241
- playback of effects 135, 223
- rate 231
- timing disable 233
- window 228

- System
  - patching 25

## T

- Target, last stored 201

- Template
  - creating 156
  - recalling 156, 157
  - timing window 156
  - touch screen 157

- Tilt 50, 51

- Timing
  - delay 144, 145
  - disable 233
  - effect 218, 219, 220
  - format 142
  - function key 168
  - guidelines 142
  - manual timing 162
  - operation 143
  - overview 141
  - sequence 221, 222
  - templates 156

- Timing disable
  - submaster 233

- Timing Display window

- templates 156

- Touch screen
  - dynamic state mode 150
  - features 139
  - filter mode 146, 148
  - general operation 139
  - selecting modes 139
  - setting parameters 139
  - sneak mode 153, 154, 155
  - templates 140
  - timing mode 141

## U

- Undo 113, 206
  - function key 169

- Update
  - function key 167
  - presets 87
  - using 203
  - with submasters 207

## V

- VARI\*LITE luminaires
  - patching 32

- Venue, 3D
  - exporting 257
  - importing 256
  - new 255
  - point of origin 259
  - size 255




## W

- Wait time
  - using 196

- Windows
  - closing 13
  - entering/editing data 12
  - interaction 12



Virtuoso™ DX Console Overview

A

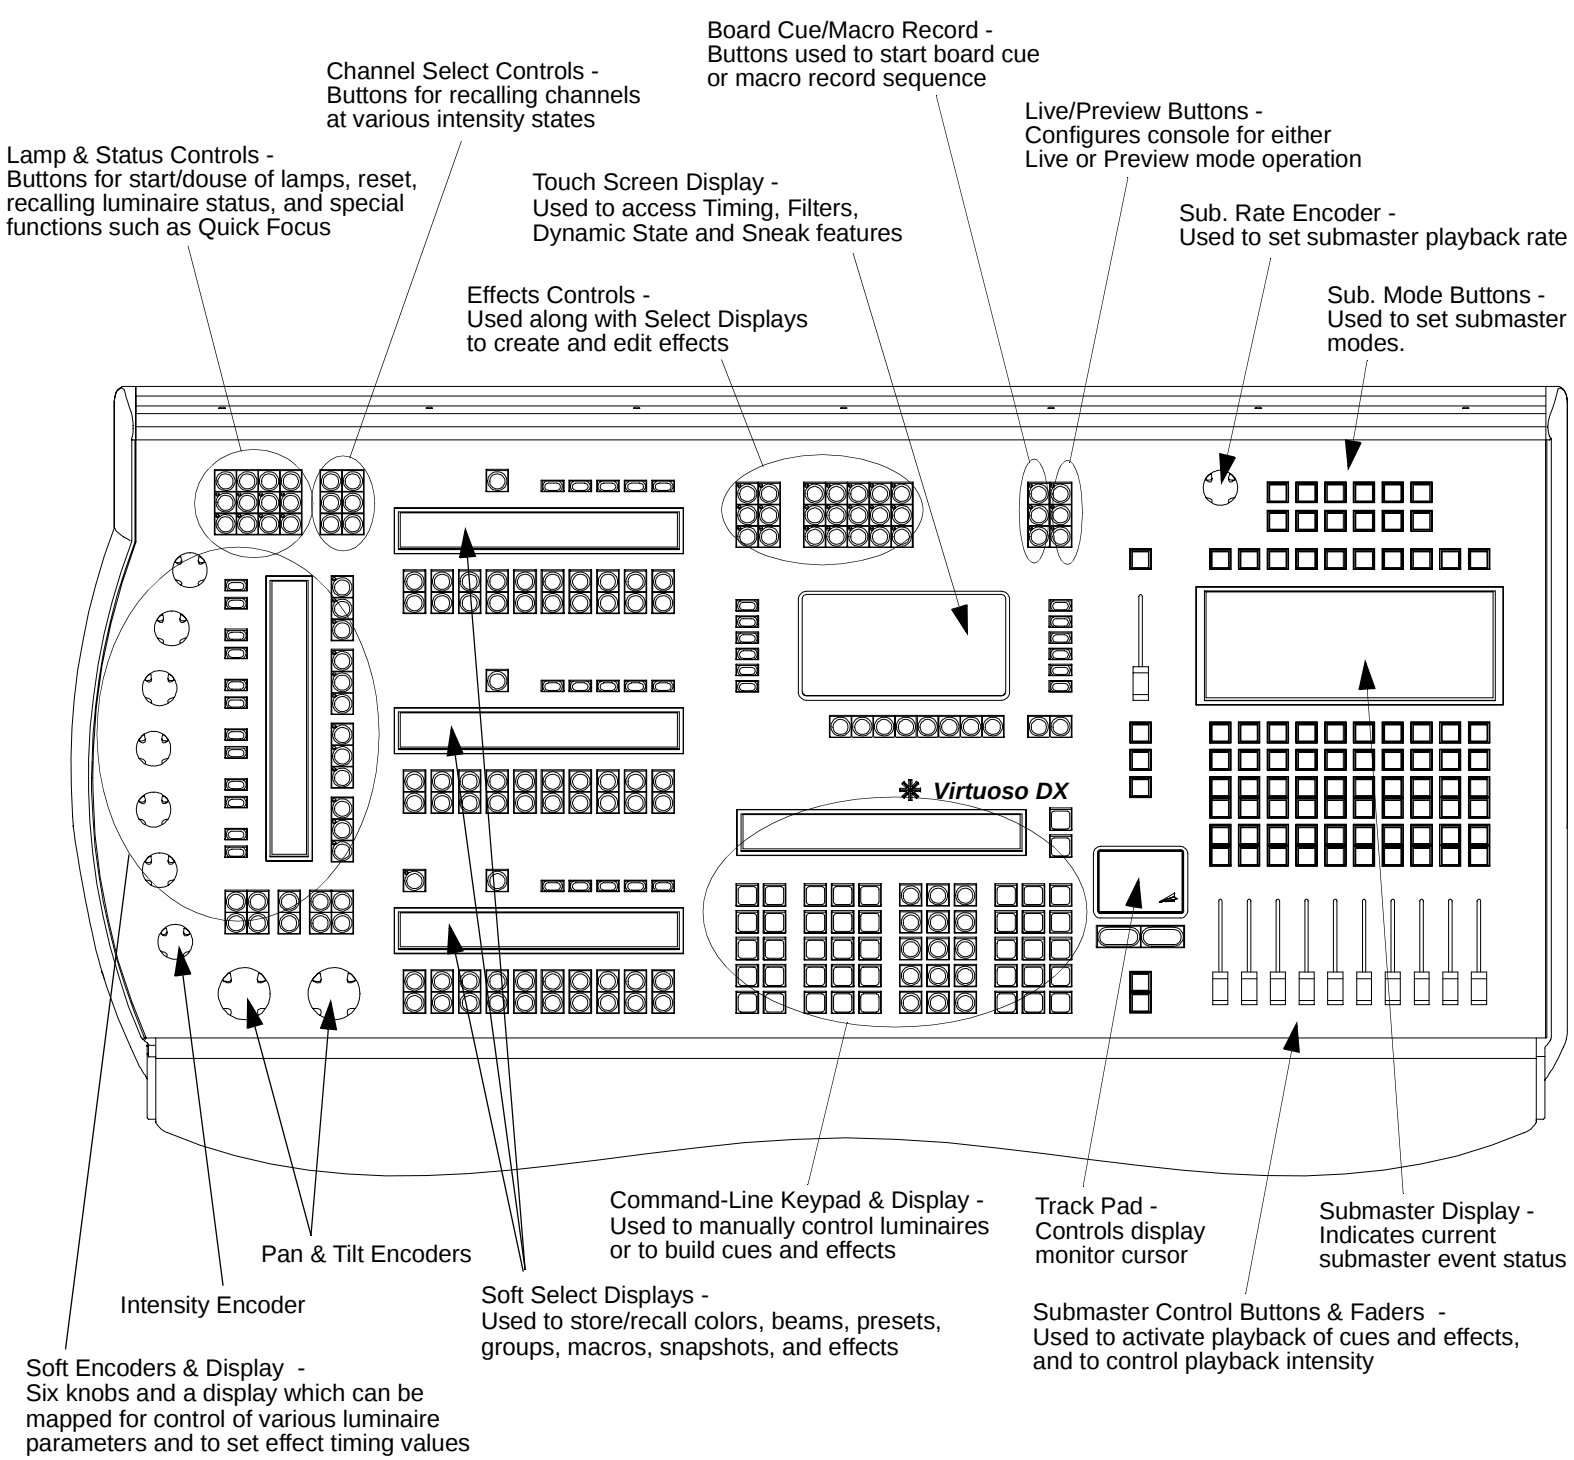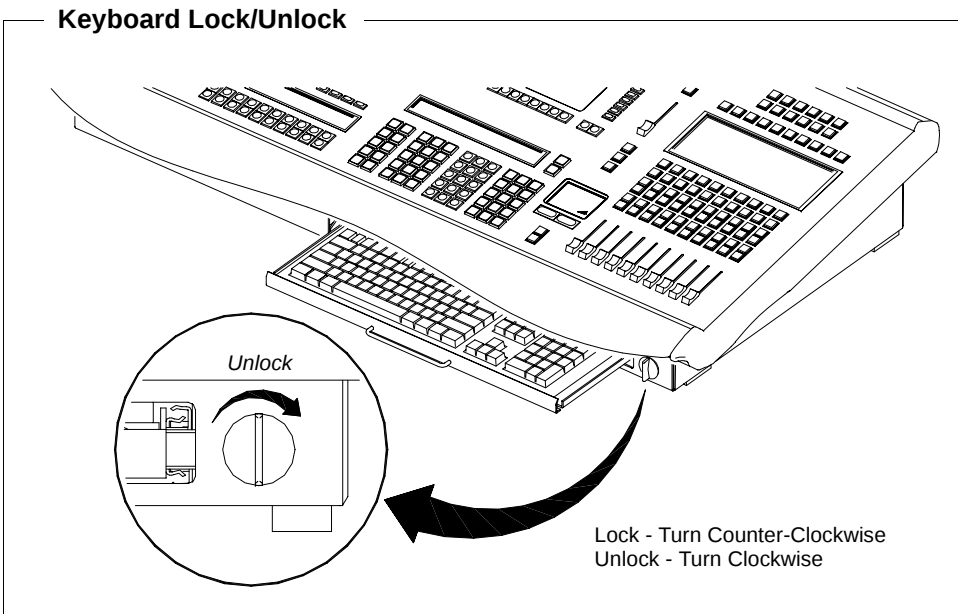
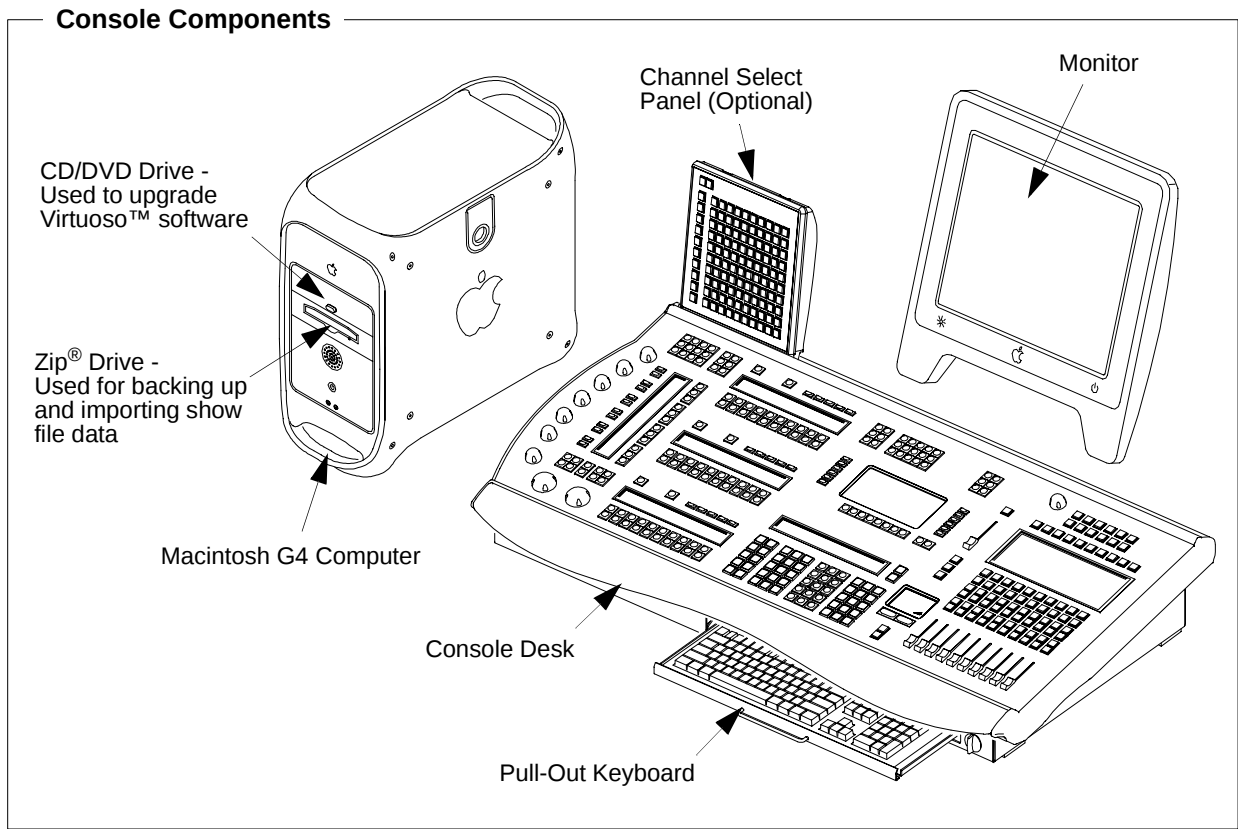


Virtuoso™ DX Console Connections




B

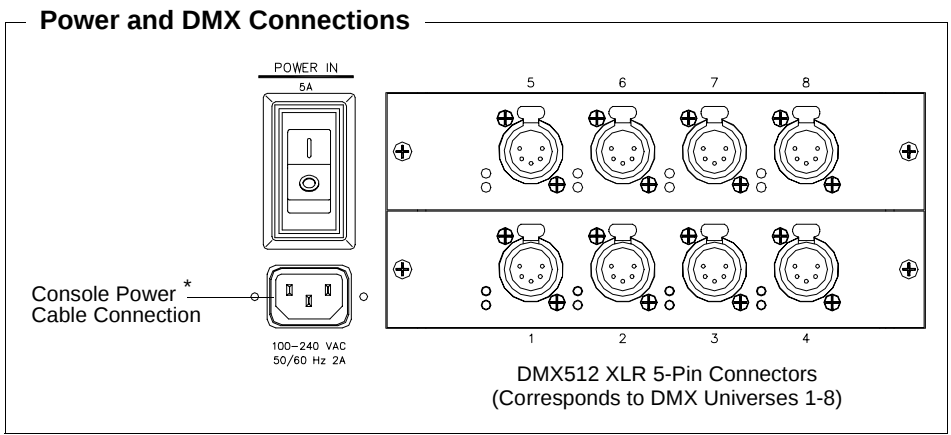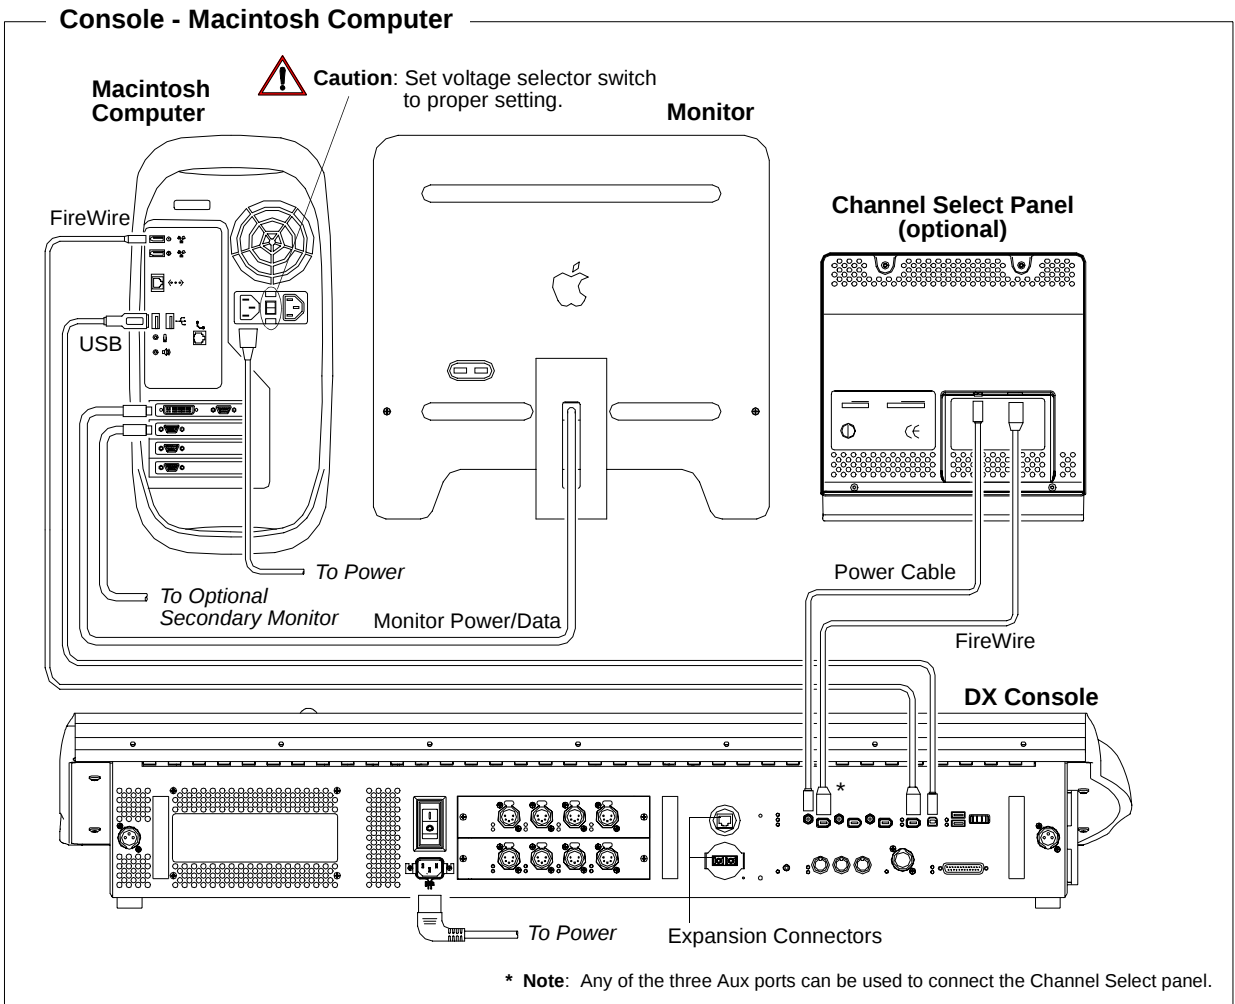

\* 2.0 A @ 120 volts 50/60 Hz / 1.0 A @ 240 volts 50/60 Hz

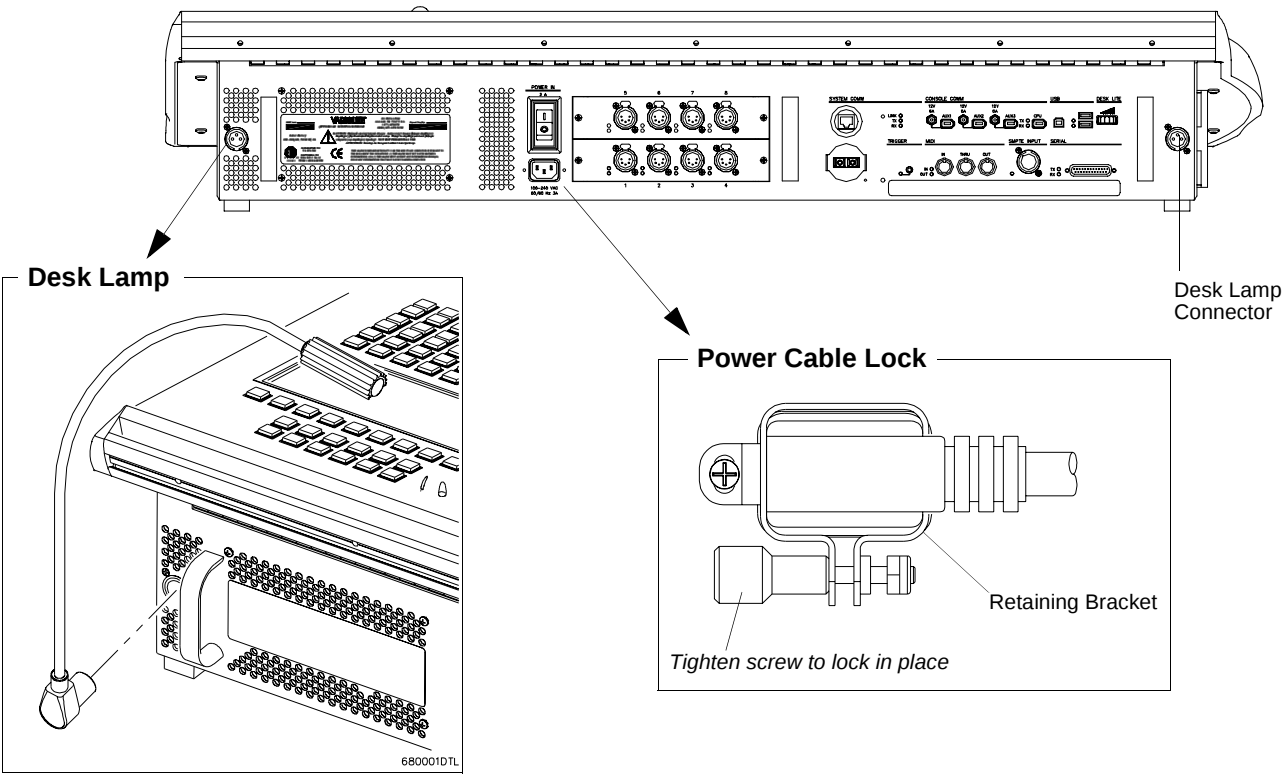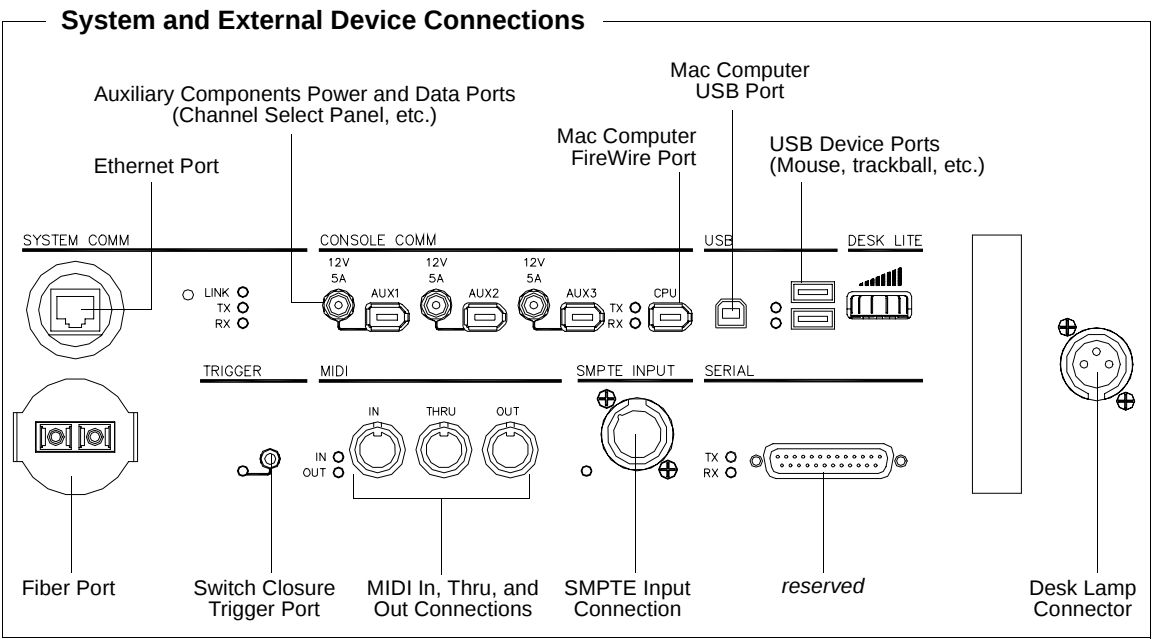

Channel Select/Lamp Status

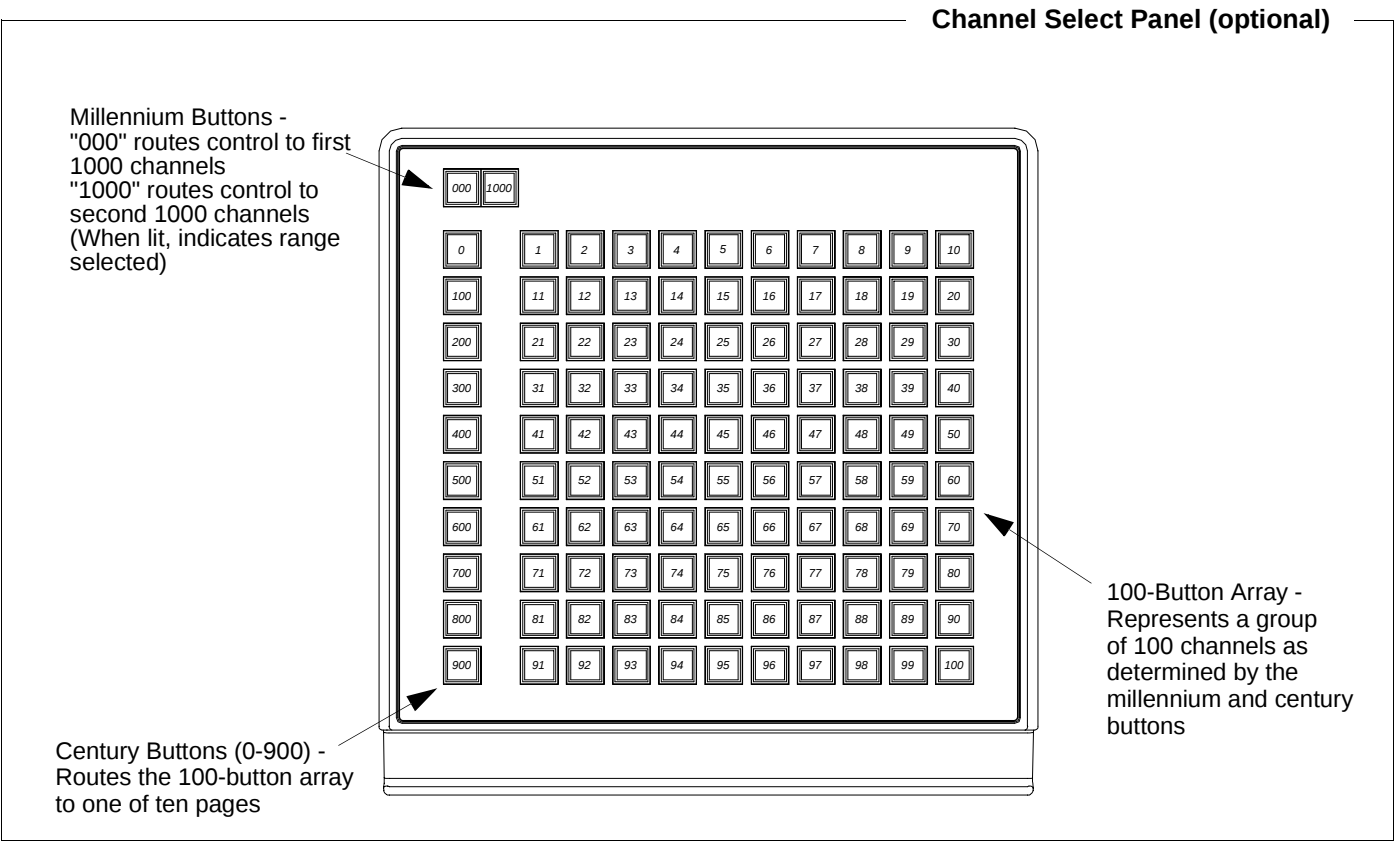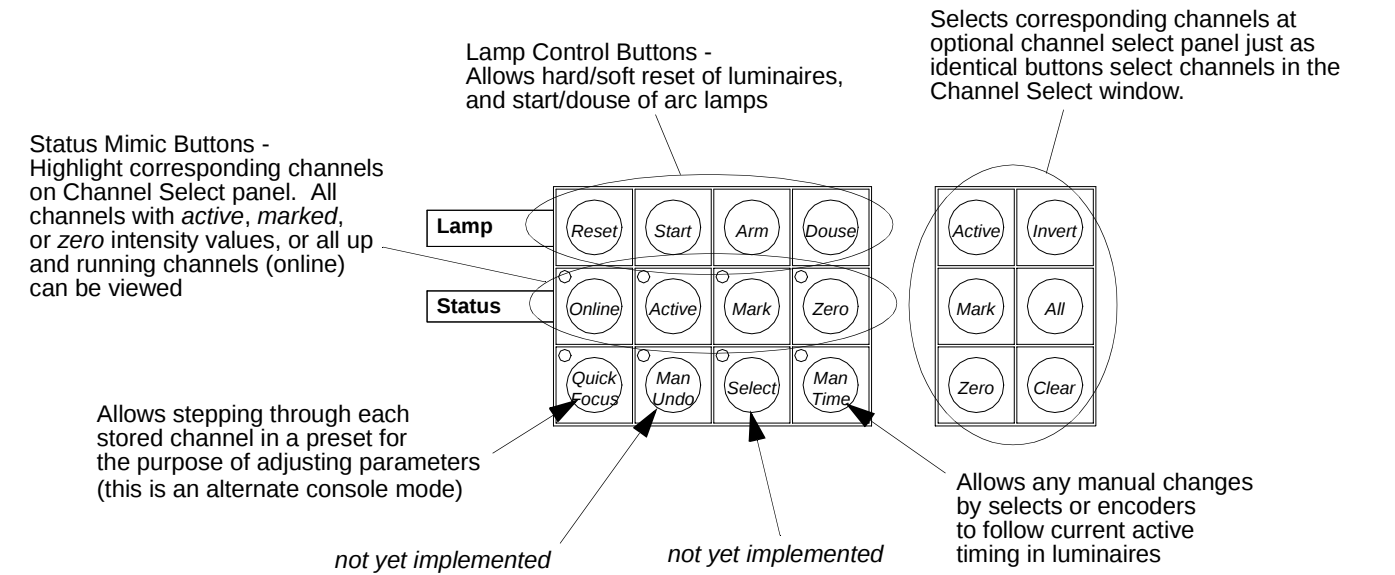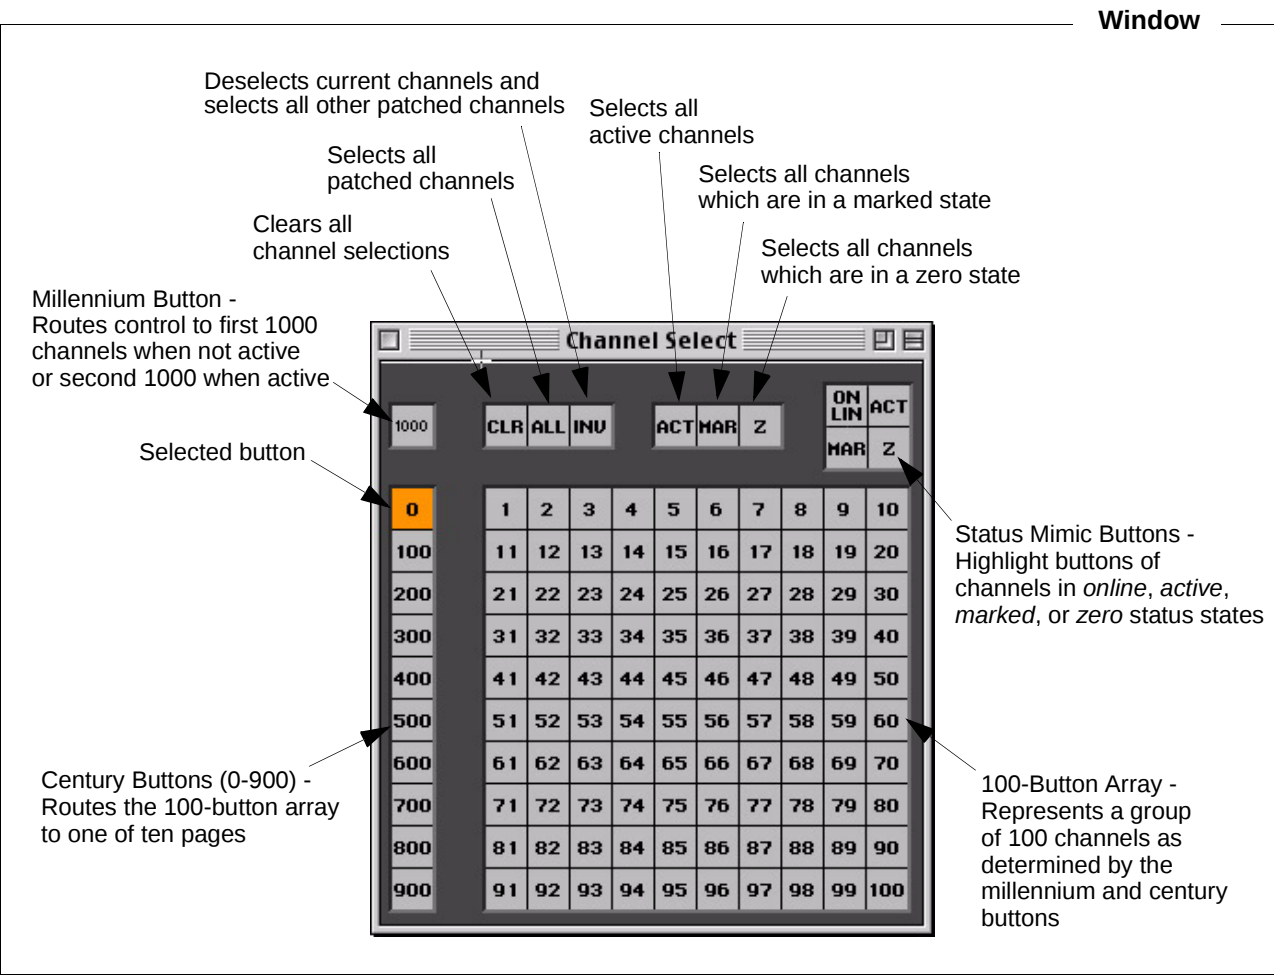

# Manual Control



## Quick Reference

Common operations and guidelines for using manual controls:

### Intensity State Buttons:

- [Full] sets selected luminaires to *full\** intensity (100%).
- [Out] sets selected luminaires to an *out\** or *inactive* state (no parameter data, 0% level).
- [Mark] sets selected luminaires to a *marked\** state (0% level).
- [Zero] sets selected luminaires to *zero\** intensity (“hard zero”, 0%).
- Shutter [Open] and [Closed] is used with luminaire strobe or douser mechanisms.

\* For a more in-depth explanation, refer to [“Intensity States” on page 110](#).

### Pan and Tilt:


- [Flip] causes selected luminaires to pan and tilt until the head is pointing in the same direction as before. The head assembly pans 180 degrees and tilts as required so that the head points in the same direction. (DMX moving mirror luminaires will not respond to this command.)
- [Next] and [Last] increment or decrement channel selection (based on the default setting).

### Special encoder functions accessed w/ [Shift] button:

- **COLOR**  
Encoder 4 - WHEEL SPIN
- **IMAGE**  
Encoder 1 - WHEEL SPIN, Encoder 2 - ROTATING SPIN, Encoder 3 - ROTATE, Encoder 4 - EFFECTS SPIN, Encoder 5 - EFFECTS ROTATE, Encoder 6 - ZOOM

### Store a new min/max setting:

- Step 1. Press button for required set of soft encoder functions. It will be mapped to soft encoders.
- Step 2. Select luminaires to be included in min/max setting. (For example, select some VL6 luminaires.)
- Step 3. Using encoders, adjust parameter for new setting.
- Step 4. Press [Store] / [Encoder Min/Max Button]. Setting is now stored for those channels.

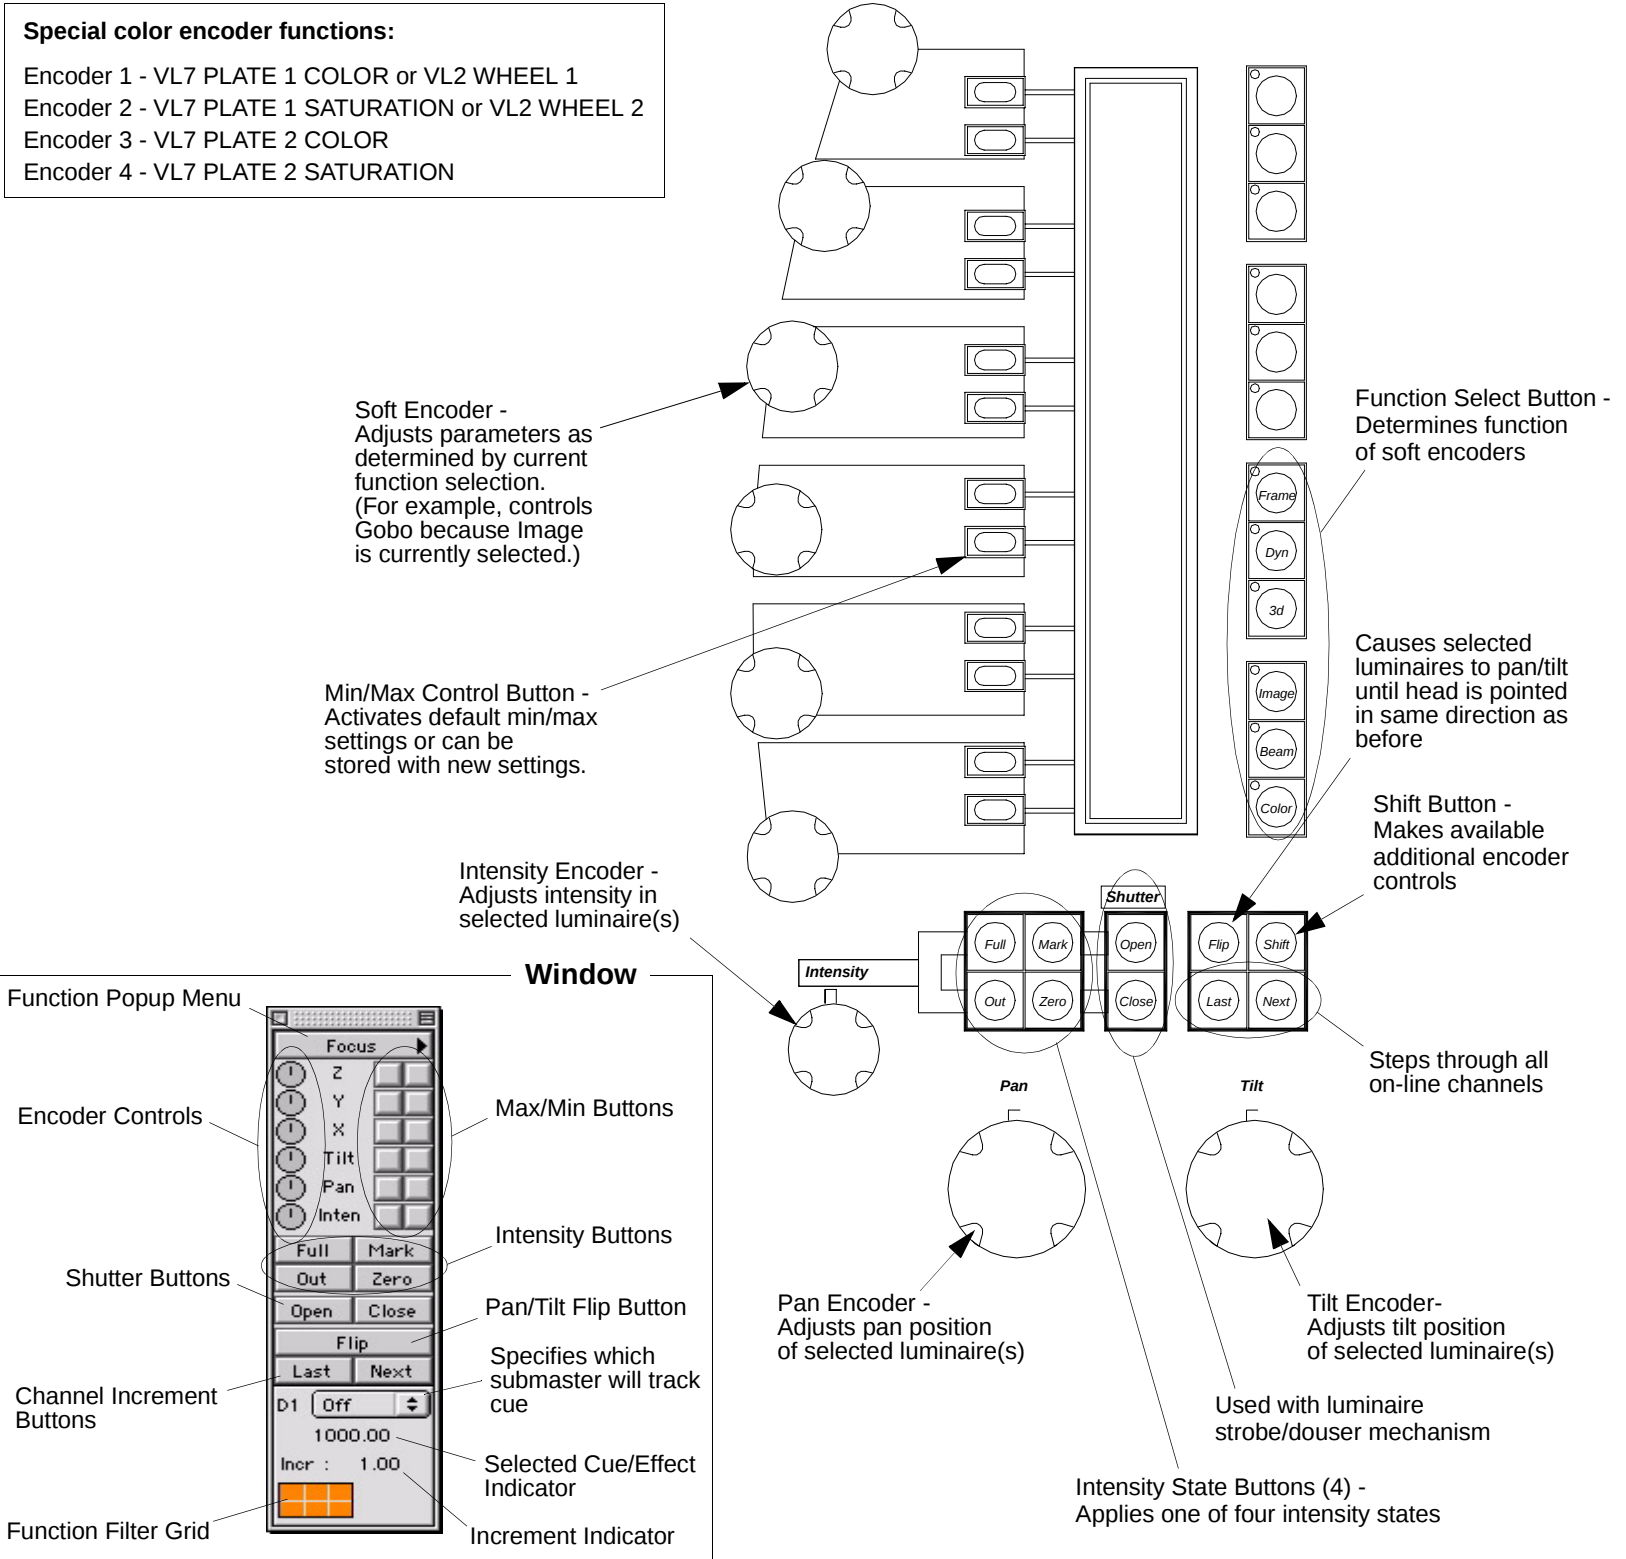

## Select Displays



## Quick Reference

Select displays are provided for storing Preset, Color, Beam, Group, Macro, Snapshot, and Effect parameters. The parameter data can be recalled with a single press of the appropriate select button for the purpose of building consistent cues.

Common operations and guidelines for using the select displays:

**Access a different bank within a select display:**

- Press and hold [Bank/Function] button while pressing the buttons labeled [11] through [20] to change banks in increments of 100. Each bank will provide 20 select buttons per page.

### Access a different page within a select display:

- Press desired page button (1 through 5) at top of select display.

**Access a different select in any display window:**

- At select display, press and hold [Bank/Function] while pressing [Beams], [Colors], [Presets], [Groups], [Macros], [Snaps], or [Effects] as required.

### Store a new select:


- Step 1. Select required channels.
- Step 2. Using manual controls, set all required parameters.
- Step 3. Filter attributes as required using touch screen display.
- Step 4. Press [Store] / [Select Button] - where Select Button is color, beam, preset, group, macro, snapshot, or effect as required.

**Label a select:**

- Press [Label] / [Select Button] [xxxxxx] [return].

### Recall a stored select:

- Step 1. Select required channels (only selected channels that have data stored in that select will be affected).
- Step 2. Press required [Select Button] - where Select Button is color, beam, preset, group, macro, snapshot, or effect as required.

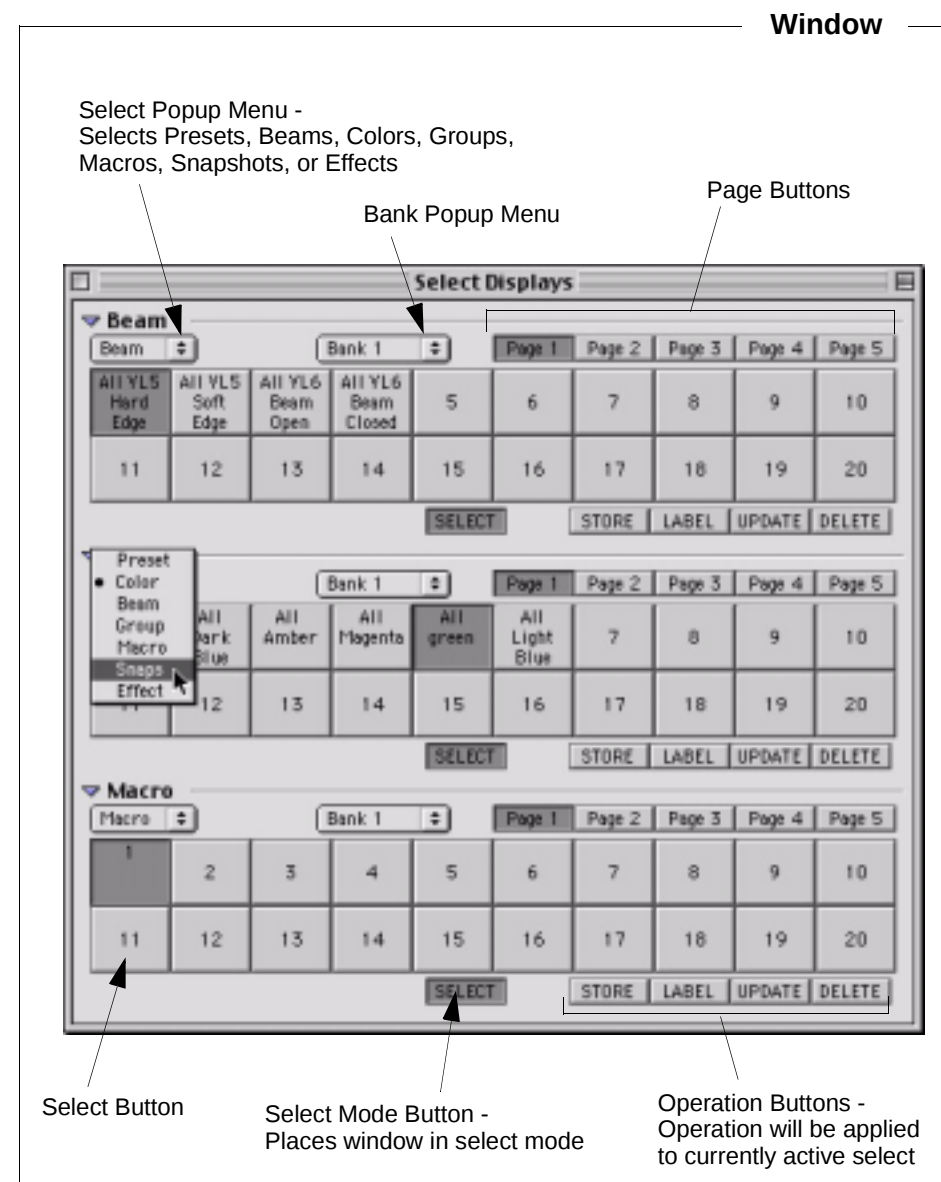

The diagram illustrates the layout of a MIDI controller with various buttons and their functions:


- [Bank/Function]** - Allows bank and mode selections when pressed. This button is located above the main display area.
- Soft Select Display** - Displays mode, bank, page, and individual select information. This is the large rectangular display area.
- Page Select Buttons (5)** - Selects one of five pages. These are five buttons located to the right of the main display area.
- Select Buttons (20)** - Applies data to selected channels. These are 20 buttons arranged in two rows of 10, numbered 1 to 20.
- Bank / Function** - A button located below the main display area, used for bank and function selection.
- Palette Shift** - A button located to the left of the main display area, used to toggle between two configurations.
- Bank Buttons (11-20)** - With [Bank/Function] pressed, these buttons access different banks. These are the buttons numbered 11 to 20 in the bottom row of the Select Buttons.

# Command-Line Keypad



## Quick Reference

- [At] . . . . . Enters an intensity value. *Example:* <Chan> [5] [At] [7] [5] [Enter].
- [Beam] . . . . Stores or recalls a beam state. *Example:* <Chan> [5] [Beam] [2] [0] [Enter].
- [Block] . . . . *Feature not yet implemented.*
- [Board Cue] Stores or recalls a board cue. *Example:* [Board Cue] [5] [Enter].
- [Chan]. . . . . Selects a channel or a range of channels. *Example:* [Chan] [ 5 ] [Enter].
- [Clear] . . . . Clears command-line entries. Holding down will clear an entire unterminated command line.
- [Color] . . . . Stores or recalls a color. *Example:* <Chan> [5] [Color] [3] [0] [Enter].
- [Copy/Move] Allows manipulation of preset, cue, sets, and sequences data. *Example:* [Copy/Move] [Cue] [1] [At] [2] [Enter].
- [Cue]. . . . . Stores or recalls a cue. *Example:* [Store] [Cue] [5] [Enter].
- [Delay] . . . . Adds a countdown time to a luminaire parameter (used with touch screen). *Example:* [Delay] [1] [Enter].
- [Delete]. . . . Deletes a soft select, cue, effect, group, etc. *Example:* [Delete] [Group] [5] [Enter].
- [Effect] . . . . Recalls an effect. *Example:* [Effect] [5] [Enter].
- [Full]. . . . . Sets intensity value to 100%. *Example:* <Chan> [5] [Full] [Enter].
- [Group]. . . . Stores or recalls a group. *Example:* <Chan> [1] [Thru] [9] [Store] [Group] [5] [Enter].
- [Label] . . . . Used to label cues, groups, macros, effects, etc. *Example:* [Store] [Beam] [5] [Label] [Enter] [xxxxxx] [return].
- [Link] . . . . . Links together cues, effects, snapshots, and macros for auto playback. *Example:* <Cue> [2] [Link] [Macro] [3] [Enter].
- [Loop]. . . . . Defines the number of times a linked sequence of cues is to execute. *Example:* <Cue> [5] [Loop] [9] [Enter].
- [Macro]. . . . Stores or recalls a Macro (requires additional button presses during store). *Example:* [Store] [Macro] [Enter].
- [Out Time] . Defines an intensity fade out time. *Example:* [Store] <Cue> [5] [Out Time] [7] [Enter].
- [Preset] . . . . Stores or recalls a preset. *Example:* <Chan> [5] [Preset] [7] [Enter].
- [Rate] . . . . . Alters recorded time/speed attributes for cues, board cues, or effects. *Example:* [Store] <Cue> [5] [Rate] [5] [0] [Enter].
- [Recall]. . . . Recalls specific data from a cue, preset, or beam state (used with filters). *Example:* [Recall] <Cue> [m] [Enter].
- [Sel Store] . Modifies/adds parameter data to a cue, preset, or beam for specified channels. *Example:* [Sel Store] <Cue> [5] [Enter].
- [Seq]. . . . . Can be used when programming an effect. *Example:* [Effect] [3] [Seq] [4] [Enter].
- [Set] . . . . . Can be used when programming an effect. *Example:* [Effect] [3] [Set] [4] [Enter].
- [Snap Shot]. Stores or recalls a snapshot (used with Snapshot Filter window). *Example:* [Store] [Snap Shot] [5] [Enter].
- [Sneak] . . . . Works with Sneak Mode to provide manual control of luminaires. *Example:* [Sneak] [5] [5].
- [Speed] . . . . Sets rate of change for a luminaire parameter (used with touch screen). *Example:* [Speed] [1] [Enter].
- [Step] . . . . . Stores an action into a step (component of an effect sequence). *Example:* [Step] [1] [Cue] [n] [Enter].
- [Store]. . . . . Initiates store actions. *Example:* [Store] [Cue] [2] [3] [Enter].
- [Sub]. . . . . Specifies a submaster for direct load. *Example:* [Cue] [Sub] [4] [Enter].
- [Thru] . . . . . Defines a range selection. *Example:* <Chan> [1] [Thru] [5] [Enter].
- [Time]. . . . . Enters a parameter time value (used with touch screen). *Example:* [Time] [1] [.] [.] [3][Enter].
- [Track/Fill]. *Feature not yet implemented.*
- [Trail] . . . . . Adds a trail time to a cue. *Example:* [Store] <Cue> [5] [Trail] [1] [Enter].
- [Undo] . . . . . Reverses the last store, update, or delete action. *Example:* [Undo] [Enter].
- [Update] . . . Stores modified channels back into their source cues. *Example:* [Update] <Cue> [5] [Enter].
- [Vari-Lite Color] Stores/recalls a color based on VARI\**LITE* color palette. *Example:* <Chan> [6] [Vari-Lite Color] [1] [0] [1] [Enter].
- [Wait] . . . . . Adds a wait time to a cue. *Example:* [Store] <Cue> [5] [Wait] [1] [Enter].

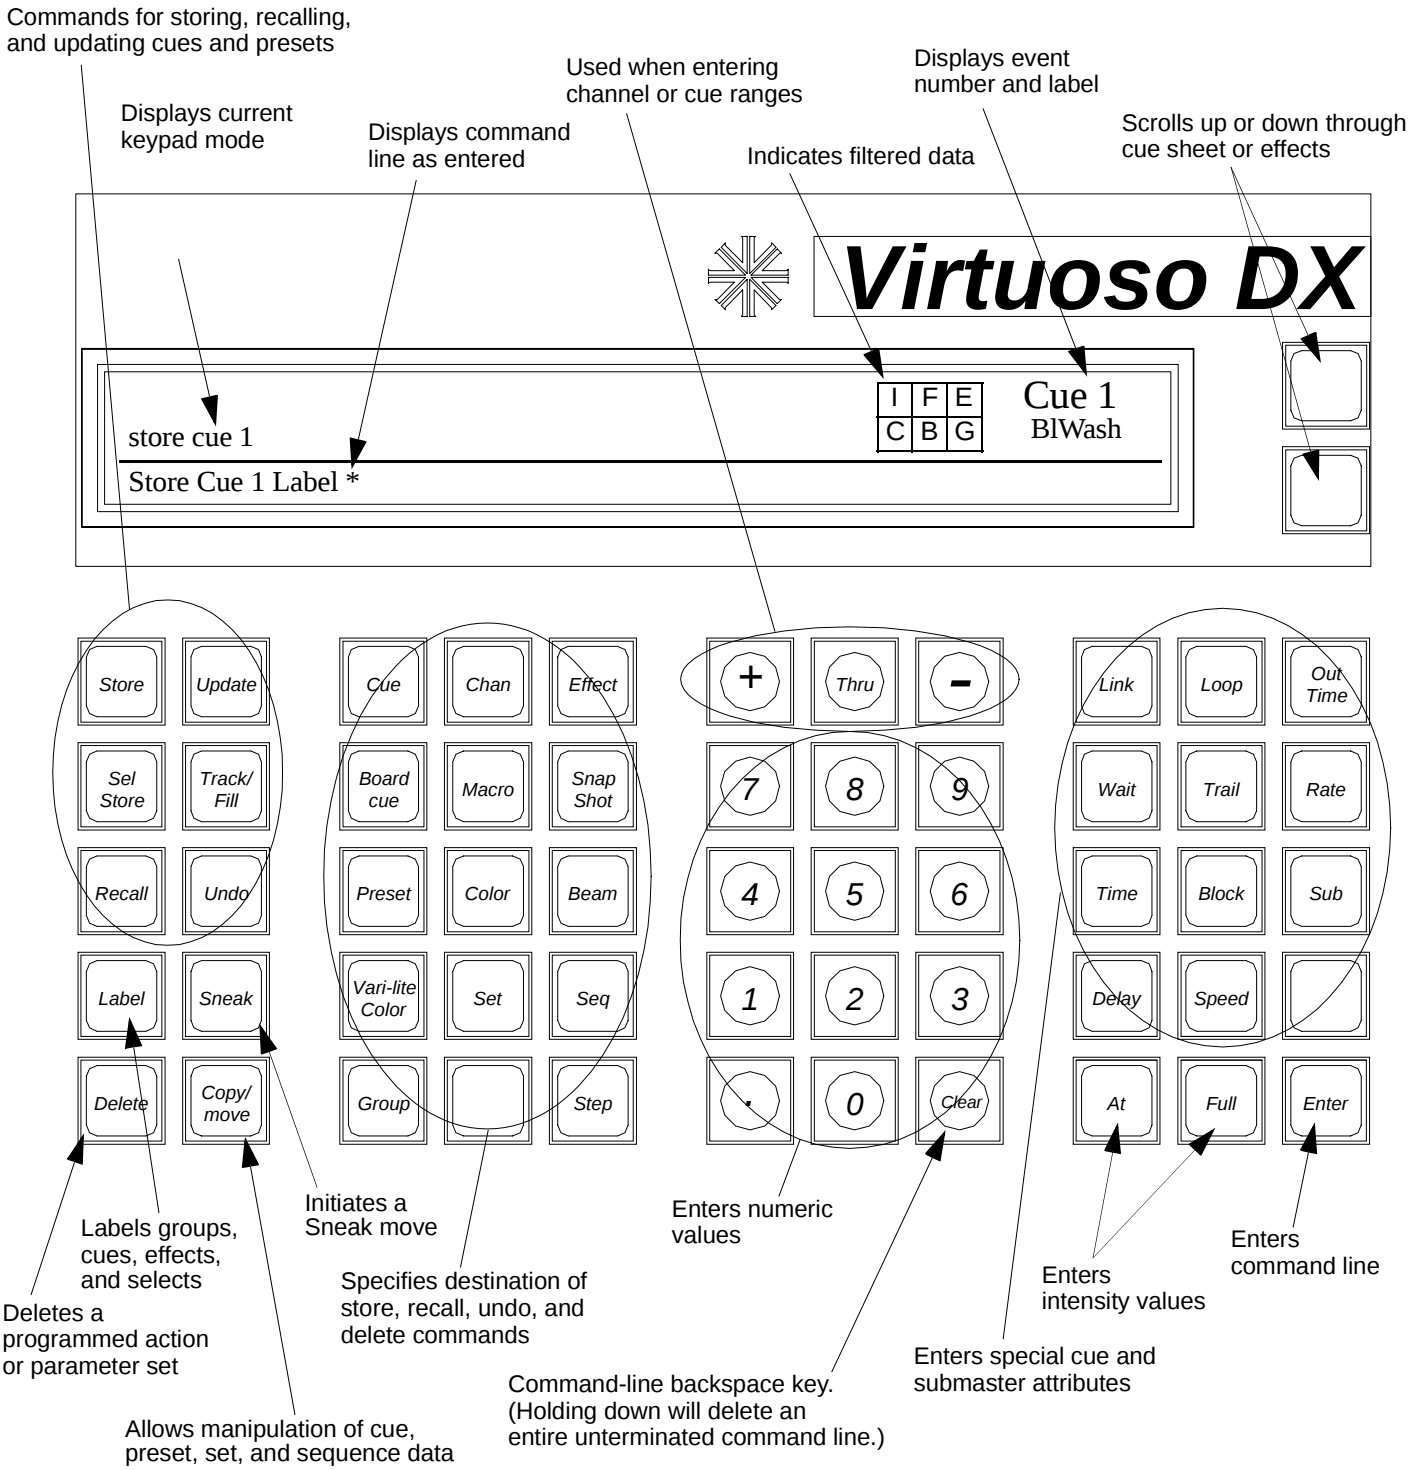

# Submasters



## Quick Reference

Common operations and guidelines for using submasters:

### Play a cue or effect:

- Step 1. At keypad, press [Cue] [n] [Enter] or scroll through cue list to recall a cue, or press [Effect] [n] [Enter] or select effect at an Effect select display.
- Step 2. At desired submaster, press [Select] to select submaster for playback function.
- Step 3. Press [Load] to place cue/effect in submaster's pending file.
- Step 4. Ensure Grand Master and submaster faders are set at full.
- Step 5. Press [Go] to play.

### Play next cue or effect:

- Press [Go] to play back pending event.

### Play previous cue or effect:

- Press [Back] to play previous event.

### Stop/Step:

- Step 1. Press [Stop/Step] to stop a running autofollow.
- Step 2. Press [Stop/Step] repeatedly to step through cues without autofollows.
- Step 3. Press [Run] to resume playback with autofollows.


### [Choose] and [Clear] buttons:

- [Choose], when pressed with any of the submaster mode buttons, allows the submaster to be placed into one of the following modes: Rate, Freeze, Function Filter, Channel Filter, Dynamic Disable, Time Disable, Independent, and Manual Assign.
- [Clear] releases a submaster from an applied mode, returning it to its default state. To release a submaster from a mode, press [Clear] along with the [Choose] button for the required submaster.

### Intensity:

Final playback intensity is determined by following combination (in order):

1. Intensity value stored in the cue or effect being played back.
2. Fader setting of the submaster being used to playback the event.
3. Setting of the Grand Master fader or associated [Black Out] button.

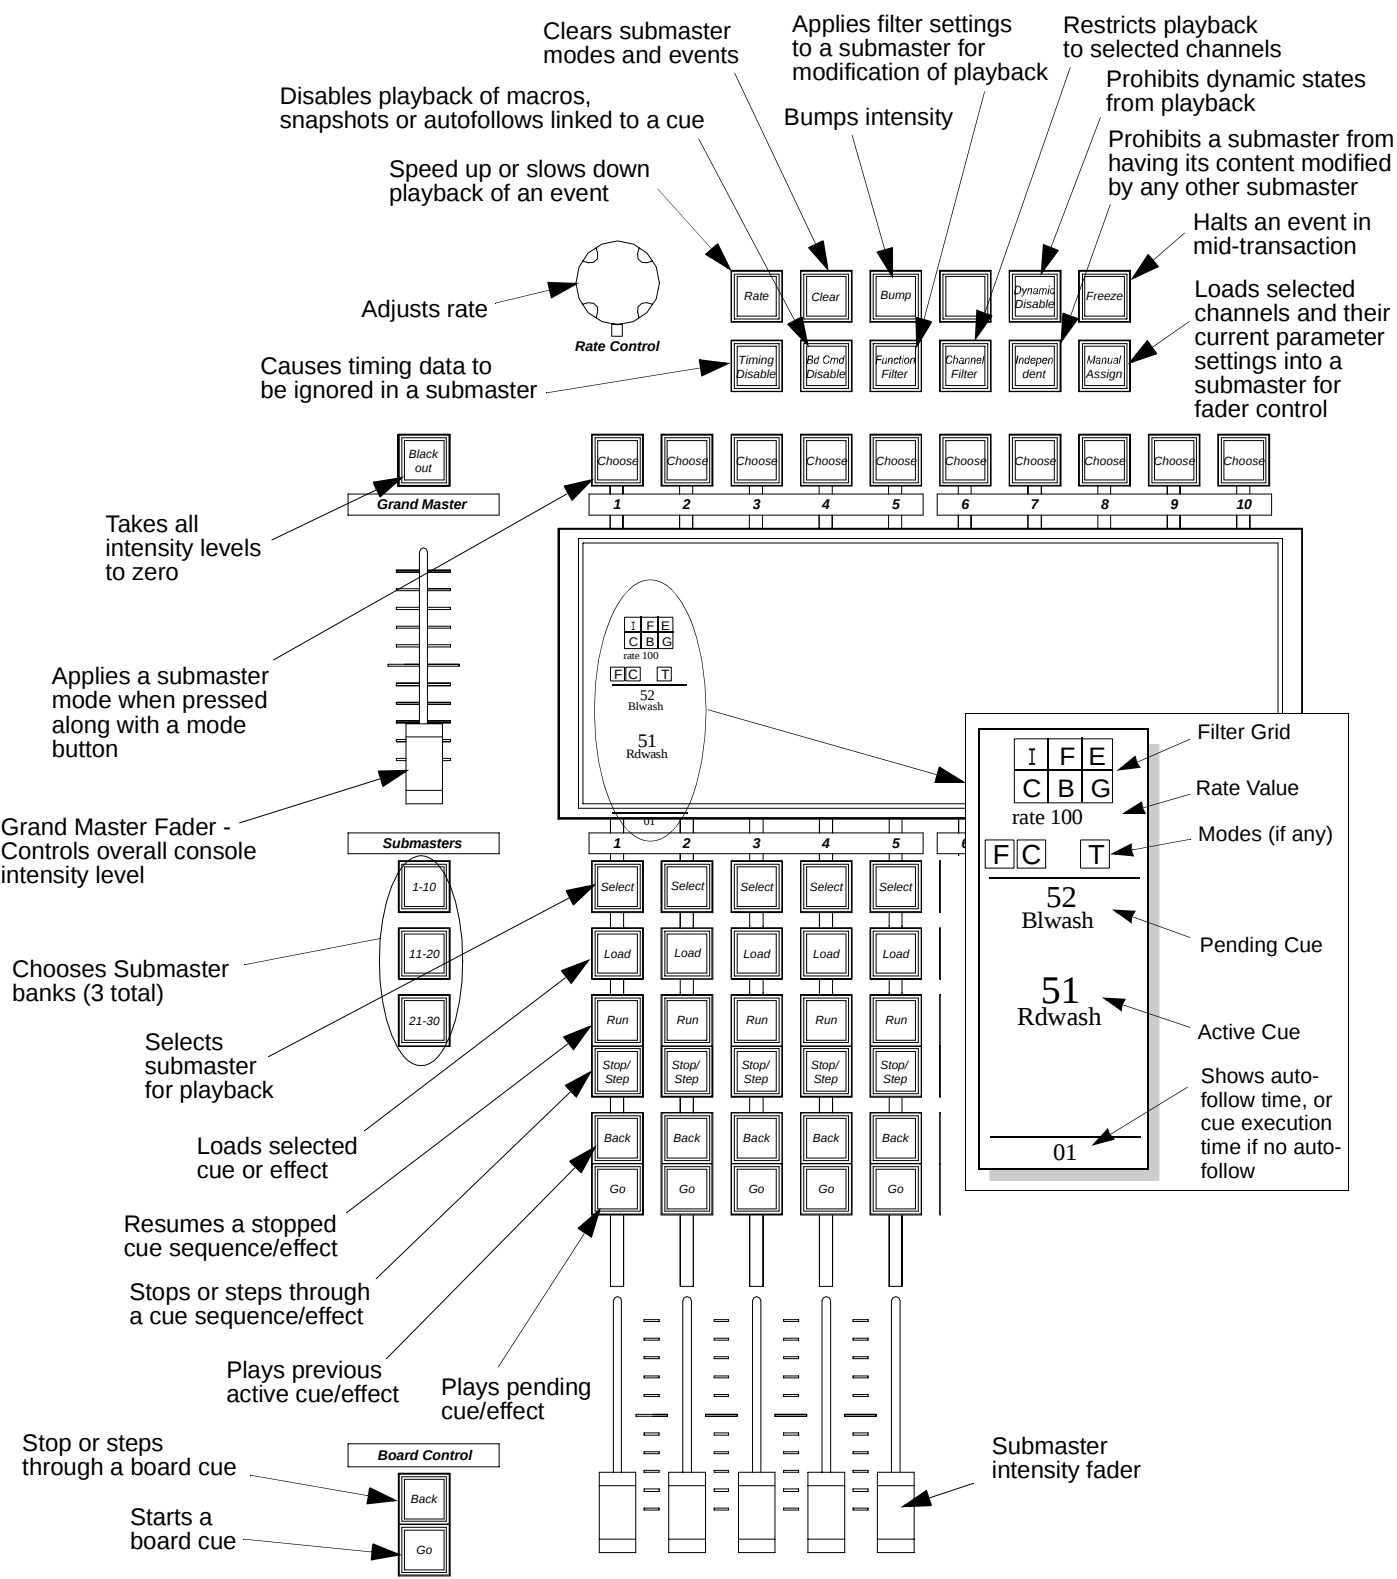

# Timing/Filter Display



## Quick Reference

Common operations and guidelines for using Timing and Filter functions.

## TIMING

### Set an entire timing scheme:

- Step 1. At touch screen, select a parameter(s) with hard or soft buttons.
- Step 2. At keypad, press [Time], [Delay], or [Speed] as required, followed by time value. Time value will appear in cells of selected parameters at touch screen.
- Step 3. Repeat steps 1 and 2, selecting different parameters and entering new values.
- Step 4. Select channels as required.
- Step 5. Press Timing **Enter** button to send all values in screen.

### Send a timing value directly to a selected parameter:

- Step 1. Select channels as required.
- Step 2. At touch screen, select a parameter with hard or soft buttons.
- Step 3. At keypad, press [Time], [Delay], or [Speed] as required, followed by time value and then [Enter]. Time value will appear in cell of selected parameter at touch screen and be sent directly to selected channels.

## FILTERS

### Using filters while storing cues:

- Step 1. Set filters as required. (When filters are selected (highlighted), the associated parameters will be the only parameters stored during any subsequent cue store operations. When filters are deselected (not highlighted), the associated parameters will *not* be stored during any subsequent cue store operations.)
- Step 2. Press filter **To Cue**. The filter state will be applied to all cues stored from this point on, until changed.
- Step 3. Store cue as usual.

**Time Format**  
Time is entered at the keypad in minutes and seconds, seconds, or seconds and tenths of seconds. (Max time 59:59)  
  
Examples :  
[2] [5] = 25.0 (25 sec)  
[2] [.] [5] = 2:05 (2 min, 5 sec)  
[1] [.] [3] = 1.3 (1.3 sec)  
[.] [5] = .5 (1/2 sec)

**Speed Format**  
Speed is entered at the keypad in degrees per second.

| Luminaire | Rate | Max Speed |
|-----------|------|-----------|
| VL2       | 120  | 200       |
| VL4       | 240  | 400       |
| VL5       | 220  | 400       |
| VL6/VLM   | 280  | 400       |
| VL7       | 150  | 400       |

