

USER MANUAL



digit™

voice controlled talking alarm clock

VOICE RECOGNITION
POWERED BY:



NATURAL LANGUAGE PROCESSOR™

Table of contents

Page

Caution	1
Danger	1
Warning	2
FCC Information	3
Battery precautions	4
Location of controls	5
Preliminary setup	6
Activating ivee	7
When is ivee listening for my command	8
Voice control tips	9
Initial setup	9
Time and date	9 - 11
Alarm	11 - 14
Snooze	14
Checking the temperature	14 - 15
Timer	15 - 16
Sleep sound	17
Changing the way ivee speaks	17 - 18
Alarm greeting & greeting music	18 - 19
Nightlight	19
Daylight savings time	19
Factory system reset	19 - 20
Help	20
Specifications	21
Frequently asked questions	21 - 22
One (1) year limited warranty	23
List of commands	25 - 26

CAUTION

IMPORTANT SAFETY INSTRUCTIONS

All the safety and operating instructions should be read, adhered to and followed before the unit is operated.

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER. THERE ARE NO SERVICEABLE PARTS INSIDE. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



The lightning flash with arrow-head symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

SAVE THESE INSTRUCTIONS

DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Do not use while bathing or in a shower.
2. Do not place or store unit where it can fall or be pulled into a tub or sink.
3. Do not place in, drop, or submerge in water or other liquid.
4. Do not reach for unit that has fallen into water.
5. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

WARNING

1. Close supervision is necessary when this appliance / product is used by or near children or mentally disabled individuals.
2. Use this unit only for its intended use as described in this manual.
3. Remove batteries when unused for long periods of time.
4. Never drop or insert an object into any opening.
5. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.
6. Do not allow cord to touch hot surfaces. Wrap cord loosely around the unit when storing.
7. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
8. Do not operate in the presence of explosive and/or flammable fumes.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the distance between the equipment and receiver. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:


1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

Modifications not authorized by the manufacturer may void the user's authority to operate this device.


BATTERY PRECAUTIONS

- Dispose of old batteries properly. Do not discard old batteries in a fire.
- Do not leave the batteries where a child or pet can play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

LOCATION OF CONTROLS

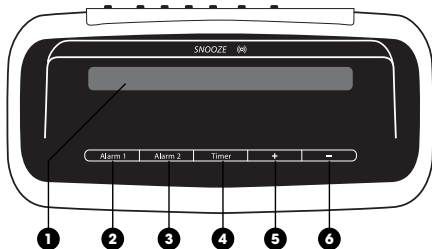



1. **LCD Screen**
2. **Alarm 1**
3. **Alarm 2**
4. **Timer**
5. **Adjust Up**
6. **Adjust Down**

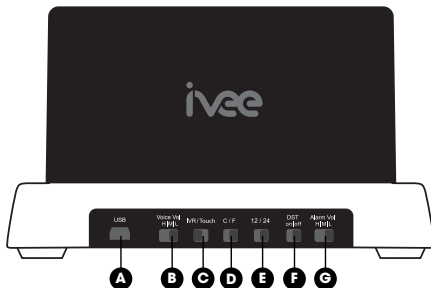

- A. **USB**
- B. **Voice Volume H/M/L
(High/Medium/Low)**
- C. **IVR / Touch**
- D. **C / F
(Celsius / Fahrenheit)**
- E. **12 / 24**
- F. **DST On/Off**
- G. **Alarm Volume H/M/L
(High/Medium/Low)**

PRELIMINARY SETUP

1. Remove the plastic screen guard on **ivee**'s LCD screen.
2. Remove the battery compartment cover by pushing the latch and lifting the cover off.
3. Insert 3 AAA batteries into the bottom battery compartment matching the polarity as shown below.
4. Replace the battery compartment cover.
5. Use the correct side of the USB cable (1) to plug into **ivee**. Use the opposite side of USB AC/DC adapter to plug into a wall outlet and **ivee** will power up.
6. To activate **ivee**, say "**Hello ivee**" (pronounced "ivy") or press down firmly on the top of the LCD screen.
7. **ivee** will begin the initial setup.

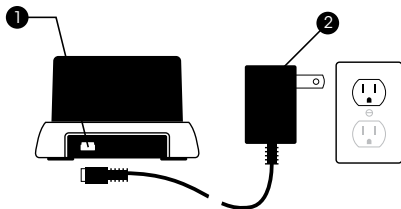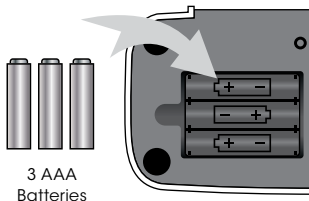


ACTIVATING IVEE

To operate **ivee**, you must first activate her either by touch or by voice.

ACTIVATION BY VOICE

To activate **ivee** by voice, first make sure the **IVR / Touch** switch on the back of the unit is set to **IVR**. When set to **IVR**, **ivee** will constantly listen for the trigger words "**Hello ivee**" (pronounced "ivy"). When **ivee** hears the trigger words, she will ask you for a command.


You can disable the hands free trigger operation by setting the **IVR / Touch** switch to **Touch**. **ivee** will no longer listen for the trigger words "**Hello ivee.**" Instead, you will need to activate **ivee** by touch.

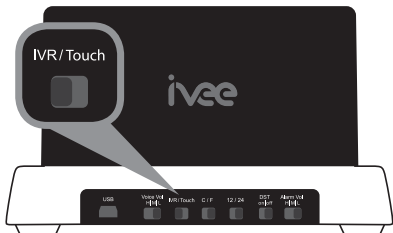

ACTIVATION BY TOUCH

To activate **ivee** by touch, press down firmly on the top of the LCD screen (where **SNOOZE** (Ⓞ) is printed). **ivee** will then ask you for a command.

WHEN IS IVEE LISTENING FOR MY COMMAND?

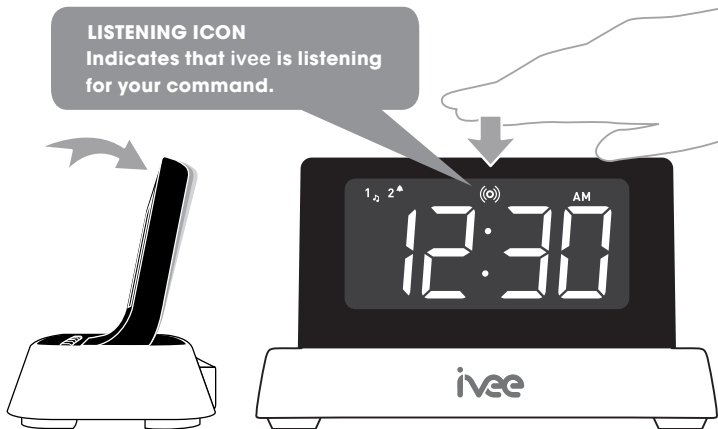

The listening icon indicates that **ivee** is listening for a voice command.

Only give a command when the listening icon is lit.

You can interrupt **ivee** at any time by pressing down firmly on the top of the LCD screen (where **SNOOZE** (⓪) is printed).

DO NOT SPEAK WHEN IVEE IS SPEAKING. SHE WILL NOT HEAR YOU.

VOICE CONTROL TIPS

Speak naturally. Like you are talking to a person.

- Wait for **ivee** to stop speaking before giving her a command.
- Avoid speaking directly into **ivee**'s microphone.
- To speak to **ivee**, stay within a 10 foot radius of her.
- Use **ivee** in a quiet environment.
- Use a normal, relaxed tone of voice when speaking to **ivee**.

INITIAL SETUP

The first time you operate **ivee**, **ivee** will prompt you to set the current time.

1. To begin the initial setup, say "**Hello ivee**" (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. **ivee** will ask you for the current time.
2. Say the current time naturally like you are speaking to a person.
For example, you can say "**Seven Thirty AM.**"
3. **ivee** will then repeat the time back to you to confirm the correct time.
Say "**Yes**" to confirm the time or "**No**" to change it.

TIME AND DATE



CHANGING THE TIME

BY VOICE

1. Say "**Hello ivee**" (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say "**Settings.**"





2. **ivee** will ask you if you would like to set time, date, voice, alarm greeting, or greeting music. Say "**Time**" or "**Set Time.**"
3. **ivee** will ask you for the current time. Say the current time.
For example, you can say "**Seven Thirty AM.**"

BY TOUCH

1. Press down firmly on the top of the LCD screen to cycle between Time, Date, and Temperature. Select Time.
2. Press and hold down the top of the LCD screen until **ivee** asks you for the current time.
3. You may say the current time or press the  /  buttons to enter the correct hour and minutes.
4. Press down firmly on the top of the LCD screen again to set the time.

CHANGING THE DATE

BY VOICE

1. Say "**Hello ivee**" (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say "**Settings.**"
2. **ivee** will ask if you would like to set time, date, voice, alarm greeting, or greeting music. Say "**Set Date.**" The month and day will begin to flash.
3. Use  /  to set the correct month and day.
4. Press down firmly on the top of the LCD screen again to set the year.
5. Use  /  to set the correct year.
6. Press down firmly on the top of the LCD screen when finished.

BY TOUCH

1. Press down firmly on the top of the LCD screen to cycle between Time, Date, and Temperature. Select Date.

2. Press and hold down the top of the LCD screen until the month and date begin to flash.
3. Use **+** / **-** to set the correct month and day.
4. Press down firmly on the top of the LCD screen again to set the year.
5. Use **+** / **-** to set the correct year.
6. Press down firmly on the top of the LCD screen when finished.

CHECKING THE TIME

Say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Time."** **ivee** will tell you the current time.

CHECKING THE DATE

Say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Today's Date."** **ivee** will tell you the current date.

ALARM

ivee is equipped with 2 separate alarms that can be customized independently. You can choose 1 of 3 alarm sounds.

SETTING THE ALARM TIME

BY VOICE

1. Say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Set Alarm [1 or 2]."** **ivee** will ask you for the alarm time.*

* If you just say **"Set Alarm,"** **ivee** will first ask you which alarm you want to set.

2. Say the alarm time you want. For example, you can say **"Seven Thirty AM."** **ivee** will then repeat the alarm time back to you.

BY TOUCH

1. Press and hold **Alarm 1** / **Alarm 2** corresponding to the alarm you want to change. **ivee** will ask you for the alarm time.
2. You can say the alarm time or press the **+** / **-** to enter the correct hour and minutes.
3. Press **Alarm 1** / **Alarm 2** to set the alarm time.

CHANGING THE ALARM SOUND

1. Say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Alarm [1 or 2] Sound."**
2. **ivee** will prompt you choose 1 of 3 alarm sounds.
3. Say the number of the alarm sound you want or say **"Help"** to replay the alarm sounds. You can also say **"Cancel"** to exit.

CHANGING THE ALARM VOLUME

You can modify the volume of **ivee**'s alarm by setting the **ALARM VOL** switch on the back of the unit to either high, medium, or low (H, M, L).

CHECKING THE ALARM TIME

BY VOICE

1. Say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Alarm [1 or 2]."***

2. If you have already set the alarm time, **ivee** will say the time the alarm is set for.**

BY TOUCH

Press **Alarm 1** or **Alarm 2** to check the alarm time. If you previously set an alarm, you may need to press the alarm button again to ensure it remains set. Check that the alarm icon is visible on the LCD screen.

TURNING OFF THE ALARM

BY VOICE

Say "**Hello ivee**" (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say "**Turn Off Alarm [1 or 2].**" **ivee** will turn the alarm off.

BY TOUCH

Press **Alarm 1** or **Alarm 2** to turn the alarm on or off.

Note: *If you turn off the alarm, the alarm will not sound.*

* If you have not set the alarm time yet, **ivee** will ask you if you want to set it now.

** You can check both alarms simultaneously by saying "**Alarms.**"

TURNING OFF THE ALARM WHEN IT SOUNDS

BY VOICE

To turn the alarm off when it sounds, say "**Turn Off Alarm [1 or 2].**"

Note: Remember to speak during the pauses in the alarm sound. *ivee* will not hear you when the alarm is sounding.

BY TOUCH

When the alarm sounds, you can turn it off by pressing any button except for **SNOOZE** (ⓘ) (on the top of the LCD screen). The alarm will reset and sound again the following day.

SNOOZE

BY VOICE

During the pauses in the alarm sound say "**Snooze.**"

Note: You can only say "Snooze" during the pauses in the alarm sound. *ivee* will not hear you when the alarm is sounding.

BY TOUCH

Press down firmly on **SNOOZE** (ⓘ) (the top of the LCD screen) while the alarm sounds to snooze. The alarm will sound again in 9 minutes. When the alarm is snoozing you can reset the alarm and turn snooze off by pressing **Alarm 1** or **Alarm 2**.

CHECKING THE TEMPERATURE

BY VOICE

Say "**Hello ivee**" (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say "**Temperature.**" *ivee* will tell you the current indoor temperature.

BY TOUCH

Press down firmly on the top of the LCD screen multiple times until you see the current indoor temperature.

Note: You can switch between Celsius and Fahrenheit by toggling the **C / F** switch located on the back of the unit.

TIMER

SETTING THE TIMER

BY VOICE

1. Say "**Hello ivee**" (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say "**Set Timer.**"
2. **ivee** will ask you how long you want to set the Timer for. Say how long you want to set the Timer for. For example, you can say "**One Hour and Twenty Minutes.**" If you have not selected a Timer sound yet, **ivee** will ask you to set the Timer sound now.

BY TOUCH

1. Press and hold **Timer**
2. **ivee** will ask you how long you would like to set the timer for. Press **+** or **-** buttons to increase or decrease the Timer's duration.
3. Press **Timer** to set the Timer and to begin the countdown.

Note: You can only say minutes, minutes and hours, and hours. The maximum amount of time you can set the Timer for is 10 hours.

CHANGING THE TIMER SOUND

1. Say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Set Timer Sound."**
2. **ivee** will prompt you choose a Timer sound. You can choose 1 of 3 alarm sounds.
3. **ivee** will playback the alarm sounds and then ask you to select one.
4. Say the number of the alarm sound you want or say **"Help"** to replay the alarm sounds. You can also say **"Cancel"** to exit.

STARTING THE TIMER

BY VOICE

Say **"Hello ivee"** (pronounced "ivy") or press down firmly on top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Start Timer."** If you have previously set the Timer, the Timer will begin counting down now. If you have not previously set the Timer, **ivee** will ask you to set it now.

BY TOUCH

Press **Timer** to start the Timer.

STOPPING THE TIMER

BY VOICE

Say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Stop Timer."** The Timer is now off.

BY TOUCH

Press **Timer** to stop the Timer.

SLEEP SOUND

SETTING THE SLEEP SOUND

1. Say "**Hello ivee**" (pronounced "ivy") or press down firmly on top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say "**Set Sleep Sound.**"
2. **ivee** will prompt you to choose 1 of 3 sleep sounds. If you know the number of the sleep sound you want to listen to, you can say it now. Otherwise, say "**Help**" to replay all sleep sounds. You can also say "**Cancel**" to exit.
3. **ivee** will then ask you how long you want the sleep sound to play. Say the amount of time you would like the sleep sound to play.
For example, you can say "**Twenty Five Minutes.**"

PLAYING THE SLEEP SOUND

Say "**Hello ivee**" (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say "**Play Sleep Sound.**" The sleep sound will begin to play. If you have not selected the sleep sound and duration yet, **ivee** will ask you to select the sleep sound and duration now.

STOPPING THE SLEEP SOUND

Press down firmly on the top of the LCD screen to stop playing the sleep sound.

CHANGING THE WAY IVEE SPEAKS

CHANGING THE VOLUME OF IVEE'S VOICE

You can modify the volume of **ivee**'s voice by setting the **VOICE VOL** switch on the back of the unit to either high, medium, or low (H, M, L).

SOUND MODE

ivee can operate in either Voice Mode or Sound Mode. In Voice Mode, **ivee** will speak to you in full sentences. In Sound Mode, **ivee**'s speech will be replaced with short sounds and short sentences. You can still speak to **ivee** in Sound Mode, but you will not hear **ivee** talk back to you all the time.

1. To switch from Voice Mode to Sound Mode, say "**Hello ivee**" (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say "**Settings.**"
2. **ivee** will ask you if you would like to set time, date, voice, alarm greeting, or greeting music. Say "**Voice**" **ivee** will toggle between Voice Mode and Sound Mode.
3. To switch back to Voice Mode, repeat steps 1 and 2.

ALARM GREETING & GREETING MUSIC

ALARM GREETING

When you turn off the alarm, you have the option of playing an alarm greeting. The alarm greeting tells you the time, date, and temperature.

1. To turn the alarm greeting off, say "**Hello ivee**" (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say "**Settings.**"
2. **ivee** will ask you if you would like to set time, date, voice, alarm greeting, or greeting music. Say "**Alarm Greeting.**" **ivee** will turn the alarm greeting off.
3. To turn alarm greeting back on, repeat steps 1 and 2.

GREETING MUSIC

The greeting music is the music that plays when **ivee** is first plugged in using the USB AC/DC adapter.

1. To turn the greeting music off, say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Settings."**
2. **ivee** will ask you if you would like to set time, date, voice, alarm greeting, or greeting music. Say **"Greeting Music."** **ivee** will turn the greeting music off.
3. To turn greeting music back on, repeat steps 1 and 2.

NIGHTLIGHT

ivee's LCD screen can act as a nightlight. To turn the nightlight on, say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Night Light."**

To turn the nightlight off, say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Night Light."** To adjust the LCD's back light, use the



buttons.

DAYLIGHT SAVINGS TIME

You can easily switch between standard time and daylight savings time by toggling the **DST** switch located on the back of the unit.

FACTORY SYSTEM RESET

If you wish to restore **ivee** to the factory default settings, please follow these steps:

WARNING: All of your personal settings will be erased.

1. Say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Settings."**
2. Say **"Goodbye ivee."**
3. You will hear a beep sound and **ivee's** LCD will begin to blink.
4. Press down on the top of the LCD screen and hold for 5 seconds. The LCD will remain solid while you are pressing.
5. You will hear a 2nd beep sound and **ivee** will then restart as if you were first using her.

Note: You will hear the greeting music, indicating that your factory reset is complete.

HELP

ivee is equipped to handle a large number of commands. You can access the entire catalogue of **ivee's** commands through the Help menu.

1. To access the Help manual, say **"Hello ivee"** (pronounced "ivy") or press down firmly on the top of the LCD screen to activate **ivee**. After **ivee** prompts you to say a command, say **"Help."**
2. **ivee** will list the categories of commands for you to choose from. You can say Alarms, Timer, Sleep Sounds, or General Information.
3. Say the category you want. For example, say **"Sleep Sounds."**
4. **ivee** will then recite a sub-list of commands for you to choose from.
5. Say the name of the command you want. For example, say **"Set Sleep Sound."**
6. You can always return to the previous menu by saying **"Help."**

SPECIFICATIONS

Back-up Battery Power	3 AAA batteries (not included)
Unit Size (W x L x H)	4.72" x 8.66" x 4.72"
Weight (unit, packaging, and accessories)	1.47 lbs

FREQUENTLY ASKED QUESTIONS

1. **ivee does not hear my commands.**

It's important to remember that you can NOT give a command while **ivee** is speaking. Speak clearly within a 5 to 10 foot range for best results.

2. **When I say "Hello ivee" (pronounced "ivy"), ivee doesn't respond.**

Make sure the **IVR / Touch** switch on the back of the unit is set to **IVR** and try again, speaking clearly.

3. **How do I know if ivee is telling AM or PM time?**

When **ivee** is in AM time, an "AM" icon will appear on the LCD screen. When **ivee** is in PM time, a "PM" icon will appear on the LCD screen. In addition, when setting the time, if you do not specify AM or PM, **ivee** will default to AM.

4. **ivee confuses numbers when setting the time or alarm.**

Some words like "nine" and "five" sound similar. Try again, speaking loud and clear. Talk to **ivee** like you are talking to a person.

5. **I cannot activate the alarm.**

After saying "**Hello ivee**" (pronounced "ivy") say "**Set Alarm**" to set and turn the alarm on. To turn off or cancel the alarm, say "**Turn Off Alarm.**" Manually, you can turn the alarm on by pressing **Alarm 1** or **Alarm 2**. A number (1 or 2) and an icon (🔔) will appear indicating which alarm is on.

6. How do I make the alarm stop ringing once it sounds, but still make sure it rings again tomorrow?

You can touch any button to make the alarm stop ringing except for **SNOOZE** (the LCD screen). Pressing **SNOOZE** (🔊) (the LCD screen) will activate the snooze feature. You can also say "**Turn Off Alarm [1 or 2]**" in between the pauses during the alarm sound.

7. What happens if the power goes out?

ivee is equipped with a back-up battery that will ensure that the alarms sound. When the power is out the LCD backlight will not light up and a buzzer will sound as the alarm sound.

8. How do I disable the alarm completely so it doesn't ring at all?

 
By voice, you can say "**Turn Off Alarm [1 or 2]**." Manually, you can also press **Alarm 1** or **Alarm 2**. Pressing these buttons will switch between Alarm On and Alarm Off. Press the button until you get to the Alarm Off option. When the alarm is off, the alarm number (1 or 2) and icon (🔊) will no longer appear on the LCD screen.

9. How do I interrupt ivee from speaking?

Touching any button.

10. How do I reset ivee?

Press the reset button located on **ivee**'s bottom. Insert a pin into the reset pin hole located on the bottom of **ivee**.

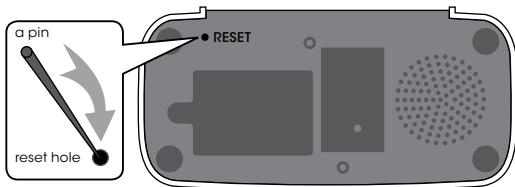

YOU SAY...

Hello ivee

Time

Today's Date

Temperature

Alarms

Alarm 1/2

Set Alarm

Set Alarm 1/2

Alarm Sound

Alarm 1/2 Sound

Alarm 1/2 On

Turn Off the Alarms

Turn Off Alarm 1/2

AND ivee...

Listens

Tells you the time

Tells you today's date

Tells you the indoor temperature

Tells you the alarm status

Tells you the alarm status

Allows you to set alarm 1/2

Allows you to set alarm 1/2

Allows you to choose 1 of 3 alarm sounds

Allows you to choose 1 of 3 alarm sounds

Turns on alarm 1/2

Turns off alarm 1/2

Turns off alarm 1/2

YOU SAY...

Hello ivee

Play Sleep Sound

Set Sleep Sound

Start Timer

Stop Timer

Set Timer

Set Timer Sound

Night Light

Settings

Help

Cancel

AND ivee...

Listens

Will play your sleep sound of choice

Allows you to choose 1 of 3 sleep sounds

Turns on the timer

Turns off the timer

Allows you to set the timer

Allows you to set the timer sound

Turns the night light on/off

Allows you to change her system settings

Offers a help menu

Cancels